

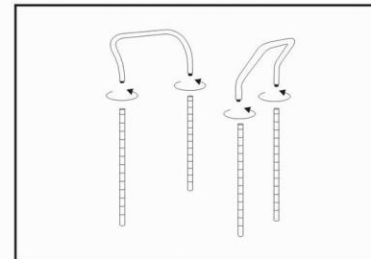


3 TIERS UTILITY TROLLEY ASSEMBLY INSTRUCTION


MW5361838

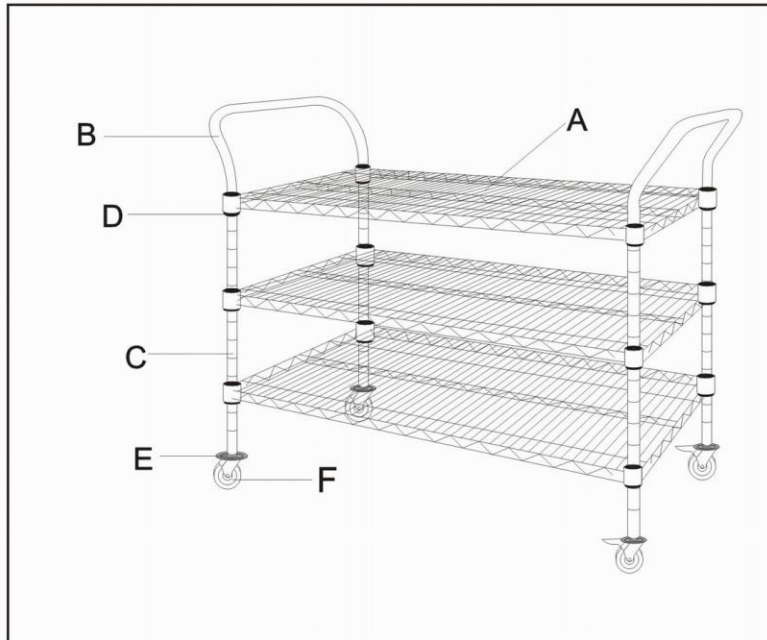


1: Screw the lower post into the upper handle by the screw connectors as above photo.

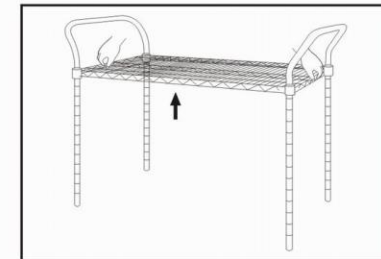



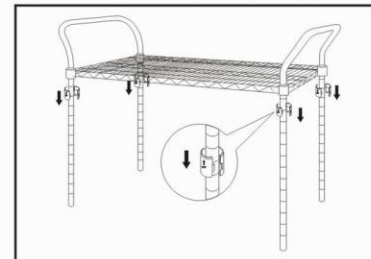



2: Put a piece of shelf the correct way up, then make the post with upper handle insert into the shelf corner from the top to the bottom as the photo.

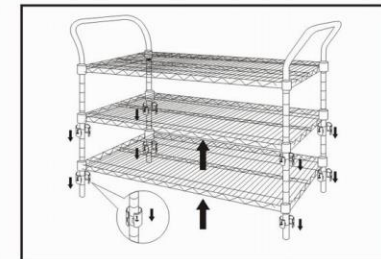

3: Hold the shelf to the top and fix pipe nips on the proper post grooves under the shelf at the same height. Then slide down the shelf onto the pipe nips and to make it fastened.

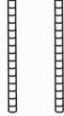

4: Following the step 2 & step 3 to assemble the rest two shelves.

A	B	C	D	E	F
WIRE SHELF	UPPER HANDLE	LOWER POST	PIPE NIPS	DONUT BUMPER	RUBBER WHEELS
					
3	2	4	24	4	4



5: Put the hole of donut bumper passed through the bottom of each post and screw the rubber wheels as the photo.



6: Pushing firmly down on every shelf at corners by rubber mallet to secure the shelf in a place over the pipe nips.