

ASSEMBLY INSTRUCTIONS



Kitchen Cart



NOTE TO CUSTOMERS:



- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)

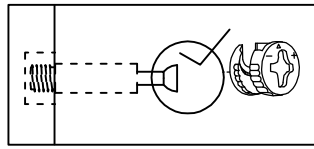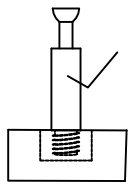



1. Insert cam screw into hole as shown in diagram A .

Diagram B

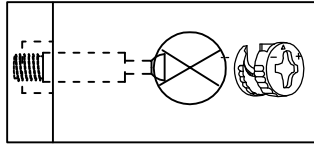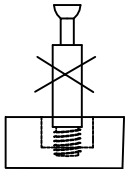


**Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.**


Diagram C

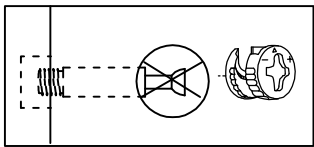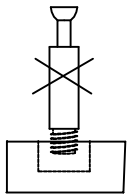

**Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.**

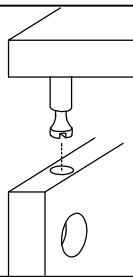


2. Connect the panels together.

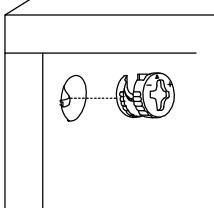

ARROW SIGN



**3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.**

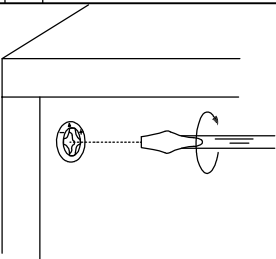







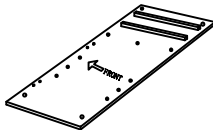
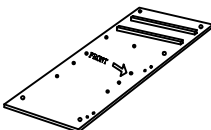
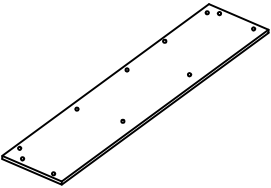







**4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.**

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**




Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

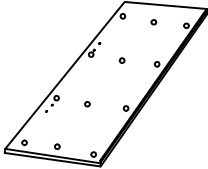
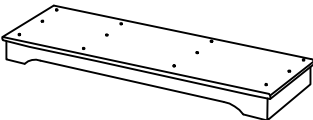







Part List
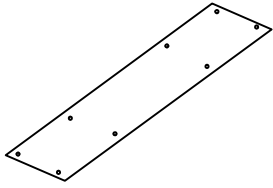
<p>A1. Quantity of 1</p>  <p>Top Panel</p>	<p>A2. Quantity of 1</p>  <p>Side Panel (Left)</p>	<p>A3. Quantity of 1</p>  <p>Side Panel (Right)</p>	<p>A4. Quantity of 1</p>  <p>Bottom Panel</p>
<p>A5. Quantity of 1</p>  <p>Large Door (left)</p>	<p>A6. Quantity of 1</p>  <p>Large Door (right)</p>	<p>A7. Quantity of 1</p>  <p>Divider (Left)</p>	<p>A8. Quantity of 1</p>  <p>Divider (right)</p>
<p>A9. Quantity of 2</p>  <p>Back Panel</p>	<p>A10. Quantity of 1</p>  <p>Small Door (left)</p>	<p>A11. Quantity of 1</p>  <p>Small Door (right)</p>	<p>A12. Quantity of 1</p>  <p>Middle Shelf</p>
<p>A13. Quantity of 4</p>  <p>Drawer Side Panel</p>	<p>A14. Quantity of 2</p>  <p>Drawer Front Panel</p>	<p>A15. Quantity of 2</p>  <p>Drawer Bottom Panel</p>	<p>A16. Quantity of 2</p>  <p>Drawer Back Panel</p>


Part List
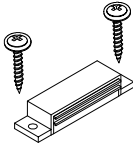
<p>A17. Quantity of 1</p>  <p>Back Panel</p>	<p>A18. Quantity of 1</p>  <p>Adjustable Shelf</p>	<p>A19. Quantity of 4</p>  <p>Glass Shelf</p>	
---	---	---	--

Hardware List


<p>B1 Quantity of 20</p>  <p>Cam-bolt & Cam-lock</p>	<p>B2 Quantity of 3</p>  <p>Magnet with Screw</p>	<p>B3 Quantity of 6</p>  <p>Handle with Bolt</p>	<p>B4 Quantity of 16</p>  <p>Screw</p>
<p>B5 Quantity of 20</p>  <p>Shelf Support</p>	<p>B6 Quantity of 16</p>  <p>Screw</p>	<p>B7 Quantity of 30</p>  <p>Screw</p>	<p>B8 Quantity of 10</p>  <p>Wood Dowel</p>
<p>B9 Quantity of 2</p>  <p>Stopper with Screw</p>			

STEP 1

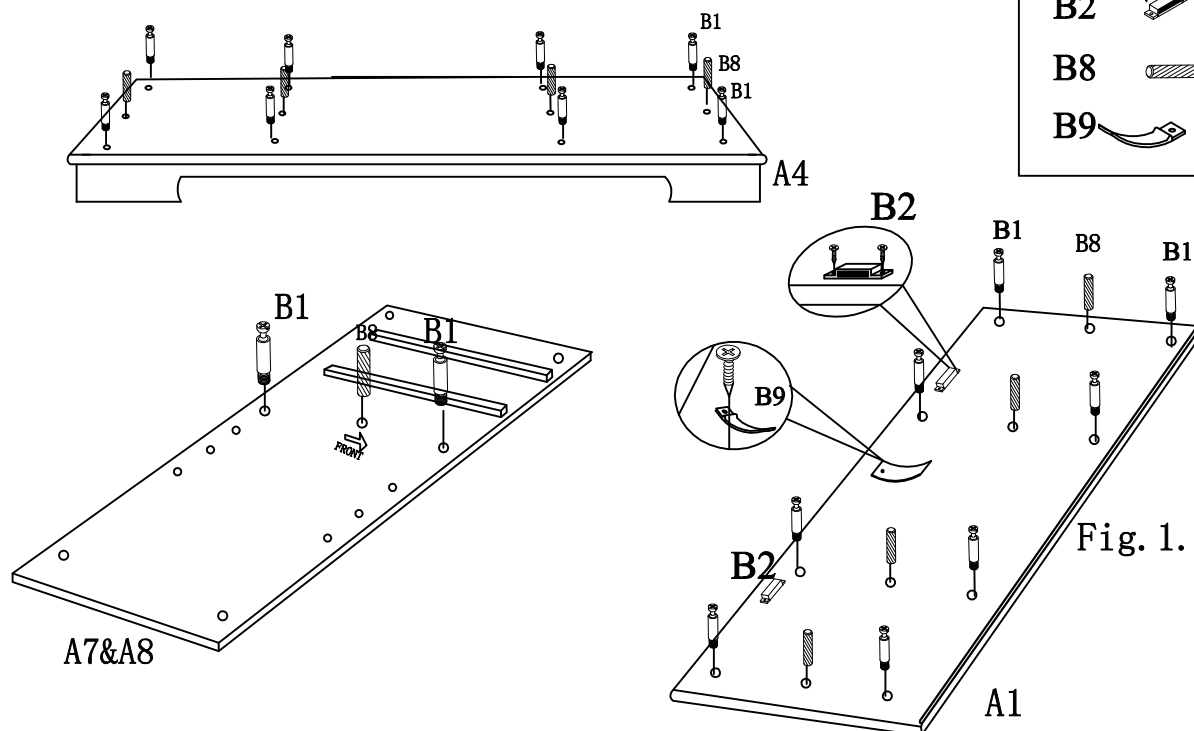


- 1). Attach Magnets B2 and Stopper B9 to the bottom of Top Panel A1 using included Screws .
- 2). Insert Cam-bolts B1 and Wood Dowels B8 into the holes on Top Panel A1, Bottom Panel A4 and Dividers A7/A8, then tighten Cam-bolts B1.

STEP 2

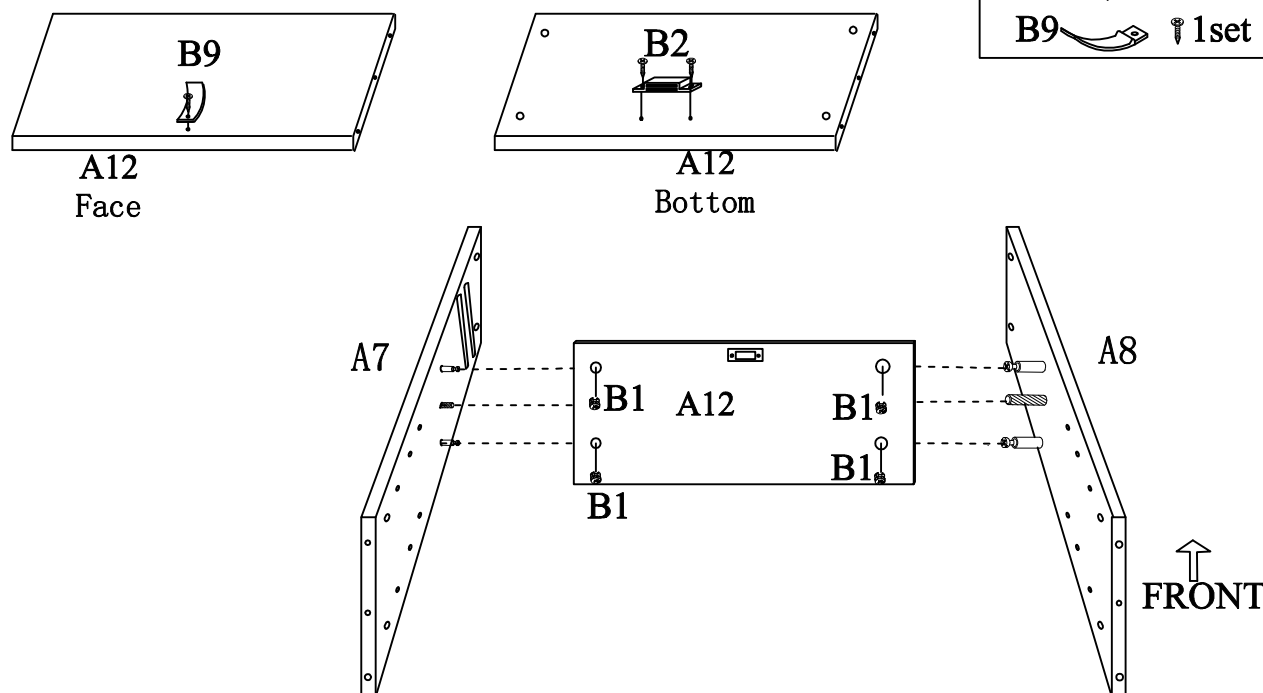

- 1). Attach Stopper B9 to the face of Middle Shelf A12 with included screw, then attach Magnet B2 to the bottom of Middle Shelf A12 with included screws.
- 2). Attach Side Panels A7/A8 to Middle Shelf A12 , then insert Cam-locks B1 and attach to Cam-bolts B1.


STEP 3

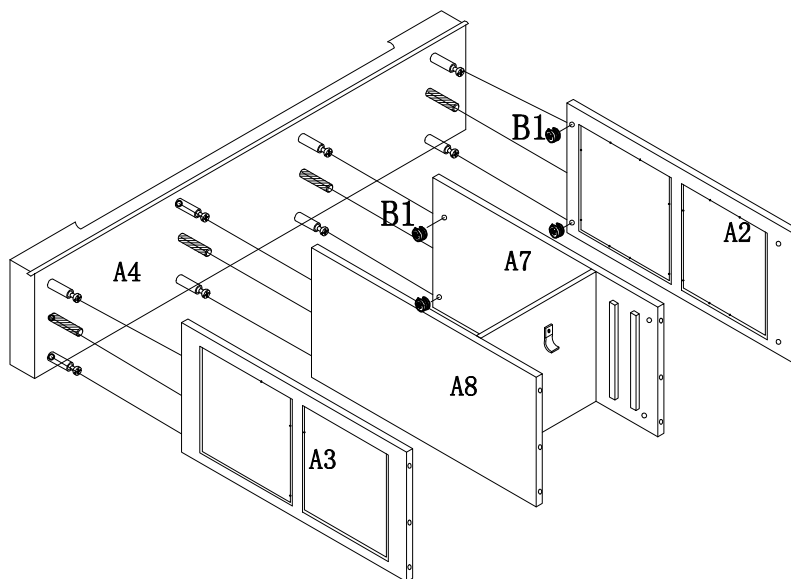

B1  8pcs

Attach Side Panels A2/A3 and Dividers A7/A8 to Bottom Panel A4, then insert Cam-locks B1 and attach to Cam-bolts B1.

STEP 4

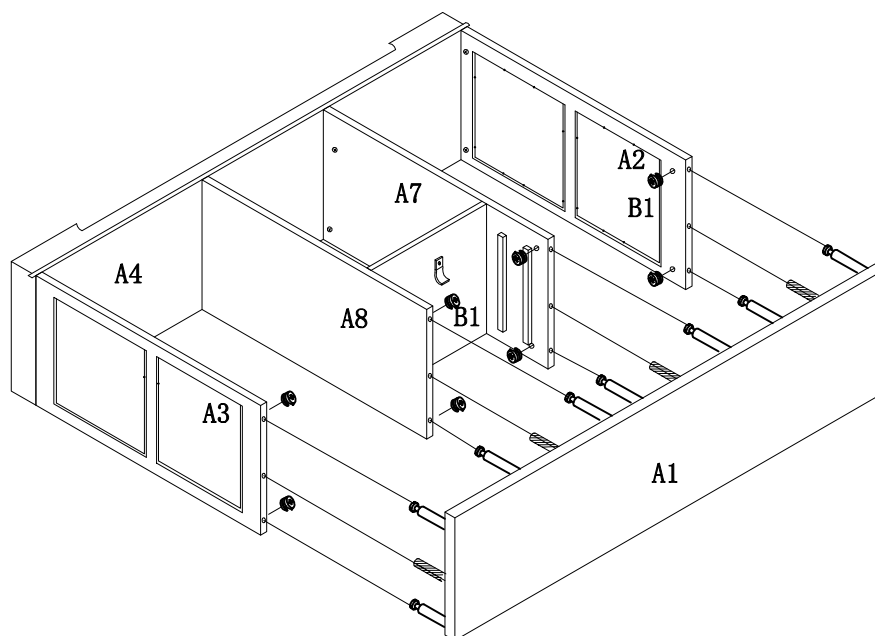


B1  8pcs

Attach Top Panel A1 to Side Panels A2/A3 and Dividers A7/A8, then insert Cam-locks B1 and attach to Cam-bolts B1.

STEP 5


B7  30pcs

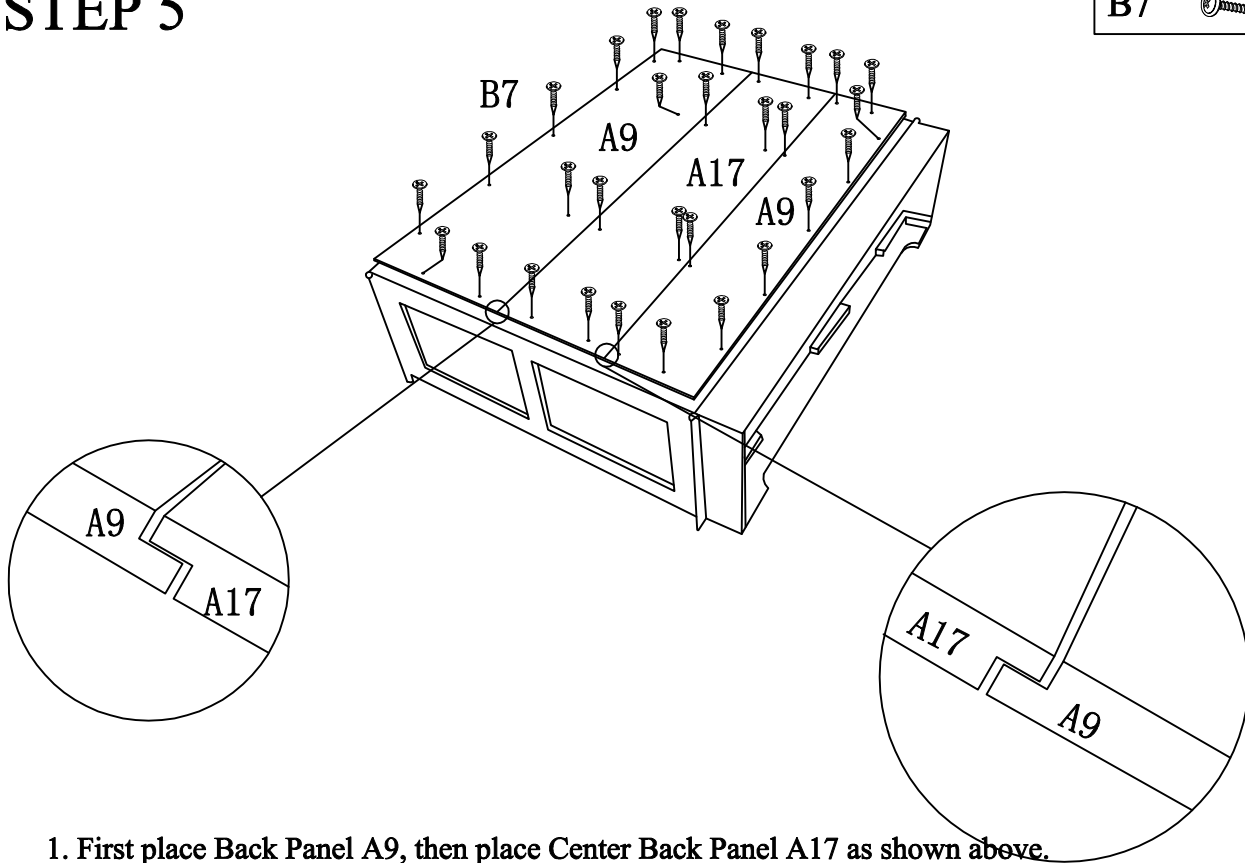


1. First place Back Panel A9, then place Center Back Panel A17 as shown above.
2. Tighten Back Panels A9/A17 using Screws B7.

STEP 6

B4  16pcs


B3  2sets

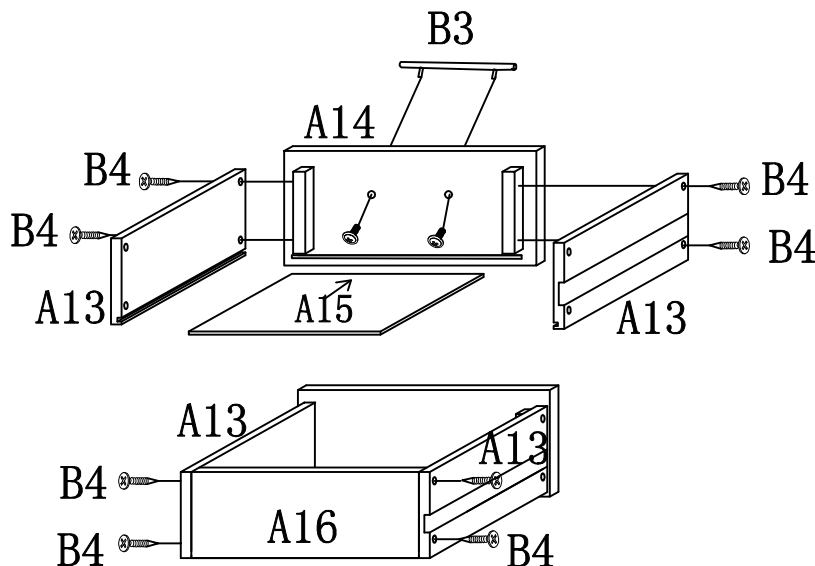

x2


- 1). Attach Handle B3 to Drawer Front Panel A14 using included Bolts B3.
- 2). Insert Drawer Bottom Panel A15 into the groove on Drawer Front Panel A14.
- 3). Attach Drawer Side Panels A13 to Drawer Front Panel A14 using Screws B4, please ensure the grooves on Drawer Side Panels A13 face inside of drawer.
- 4). Attach Drawer Back Panel A16 to Drawer Side Panels A13 using Screws B4.

STEP 7

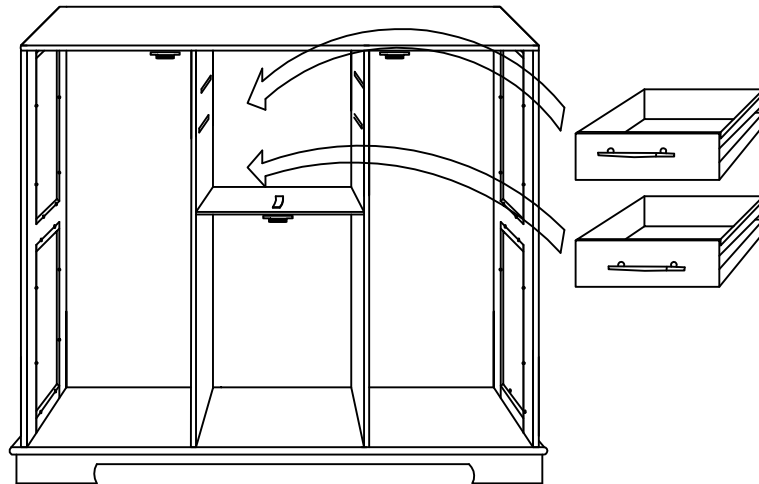

Insert the drawers as shown above.


STEP 8

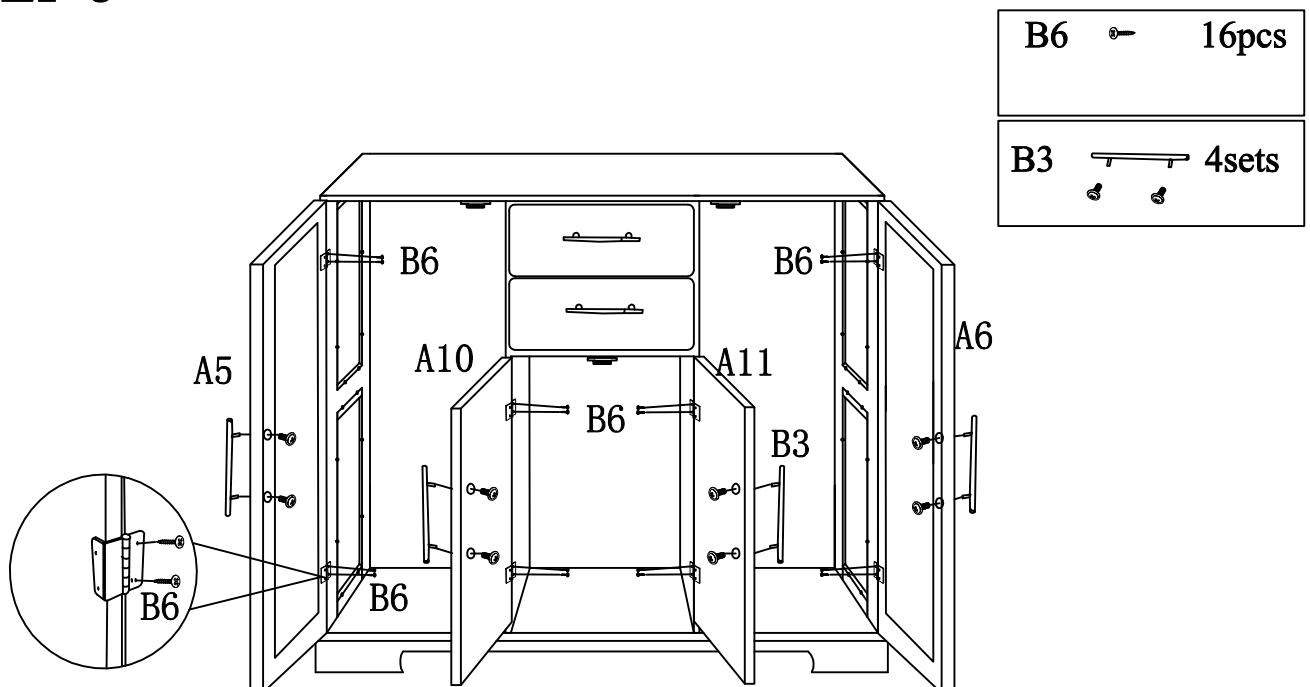

- 1). Assemble Small Doors A10/A11 to Dividers A7/A8 using Screws B6.
- 2). Assemble Large Doors A5/A6 to Side Panels A2/A3 using Screws B6.
- 3). Attach Handles B3 to Doors A5/A6/A10/A11 using included Bolts B3.


STEP 9

B5  20pcs

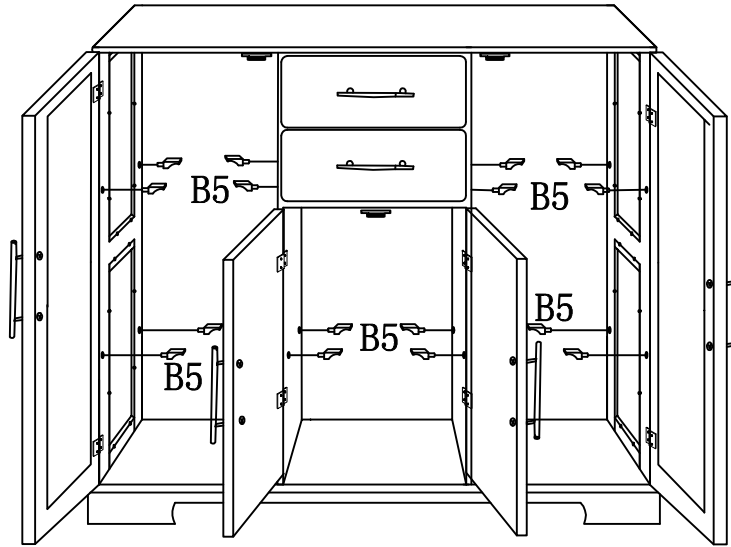








Insert Shelf Supports B5 into the holes on Side Panels A2/A3 and Dividers A7/A8.

STEP 10

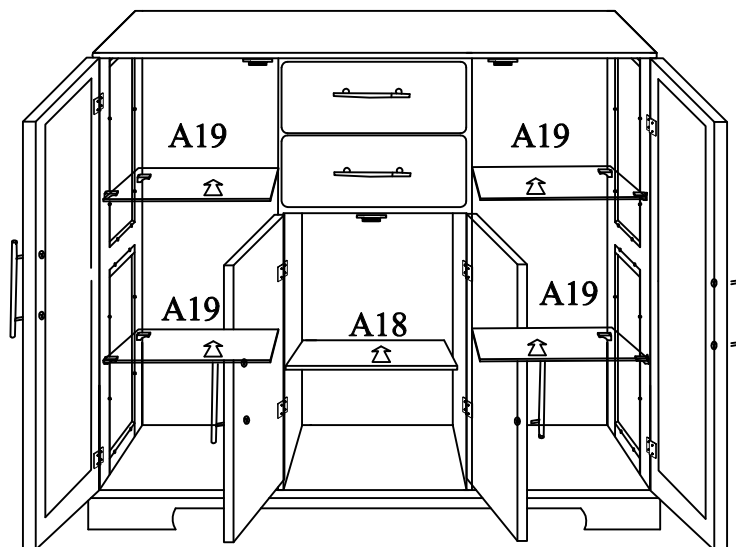

Place Adjustable Shelf A18 and Glass Shelves A19 on the top of Shelf Supports B5 as shown above.

APPENDIX: Dimension of Hardwares in this AI.
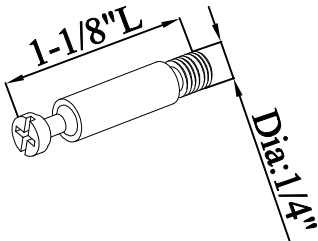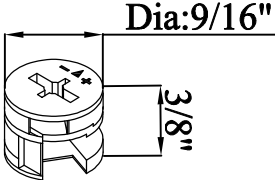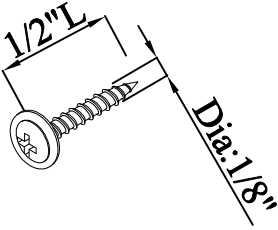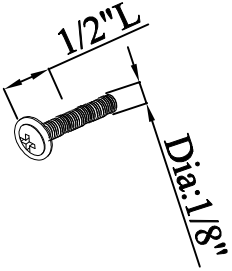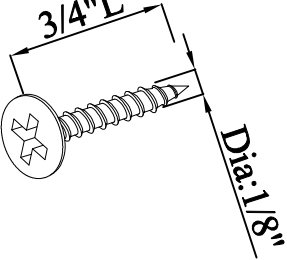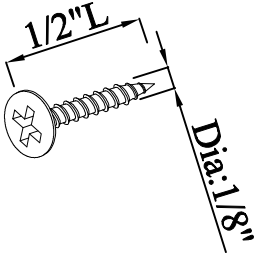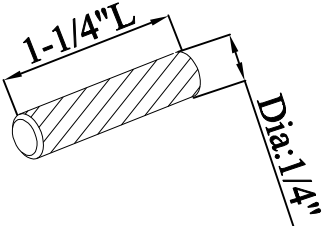
<p>B1</p>  <p>Cam-bolt</p>	<p>B1</p>  <p>Cam-lock</p>	<p>B2&B7</p>  <p>Screw</p>
<p>B3</p>  <p>Bolt</p>	<p>B4</p>  <p>Screw</p>	<p>B6&B9</p>  <p>Screw</p>
<p>B8</p>  <p>Wood Dowel</p>		