
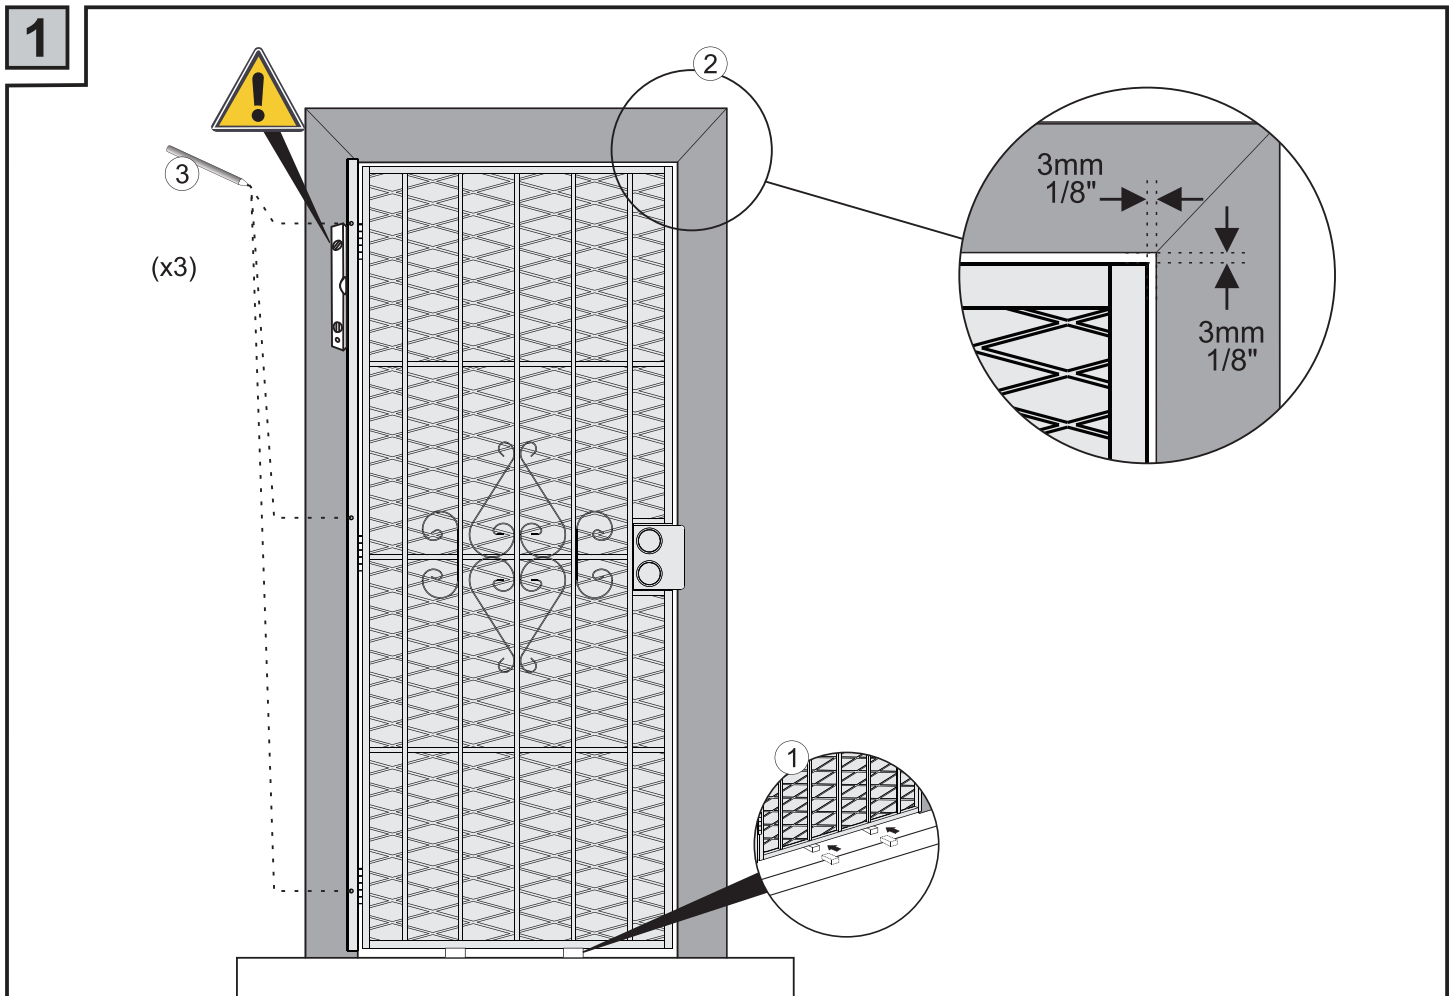
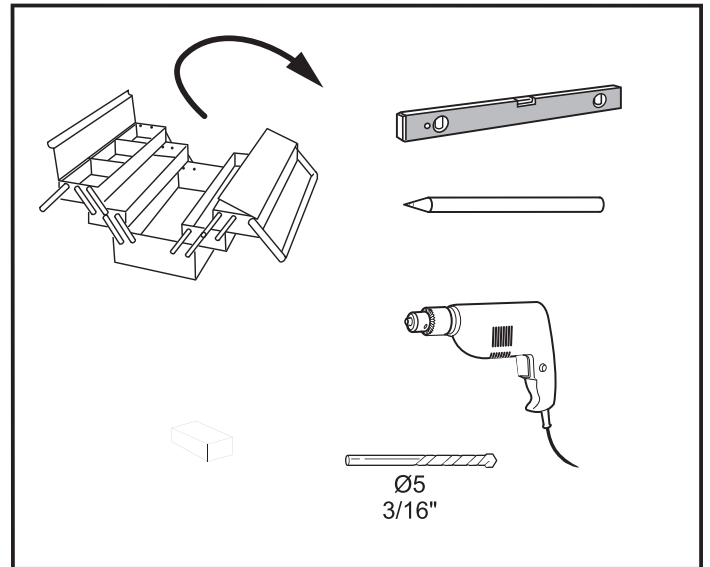


# Installation Manual

Any question please contact us:  
[support@jubest.com](mailto:support@jubest.com)

HWTKM02

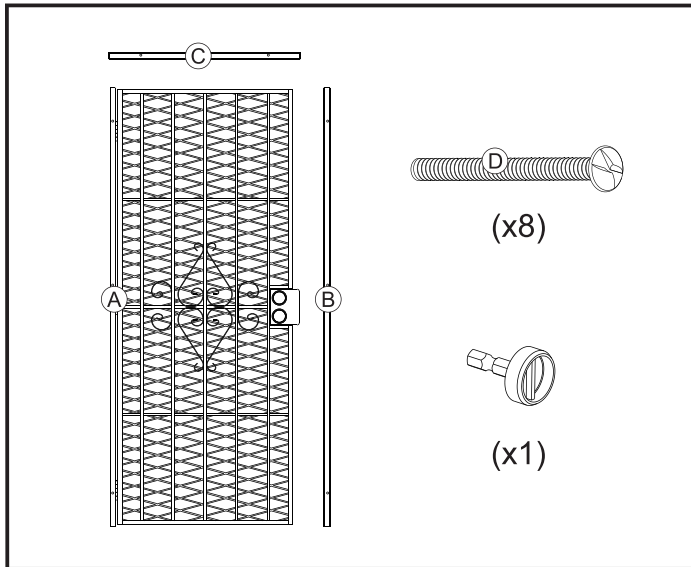

1. Wood blocks and shims placed underneath door will help to hold position.


2. Position door/hinge-side jamb assembly (A) in front of opening. Allow for a 1/8" gap between the lock-side edge of door and inside edge of your mounting surface, as well as a 1/8" gap between the top edge of door frame, and bottom edge of your mounting surface. Make certain the assembly is plumb.

**important: All jambs must be positioned on the facing surface of the frame around the opening and secured to a stud in the wall.**

3. Mark the location of the mounting holes.


2

Set door aside and pre-drill 3/16" holes where marked.

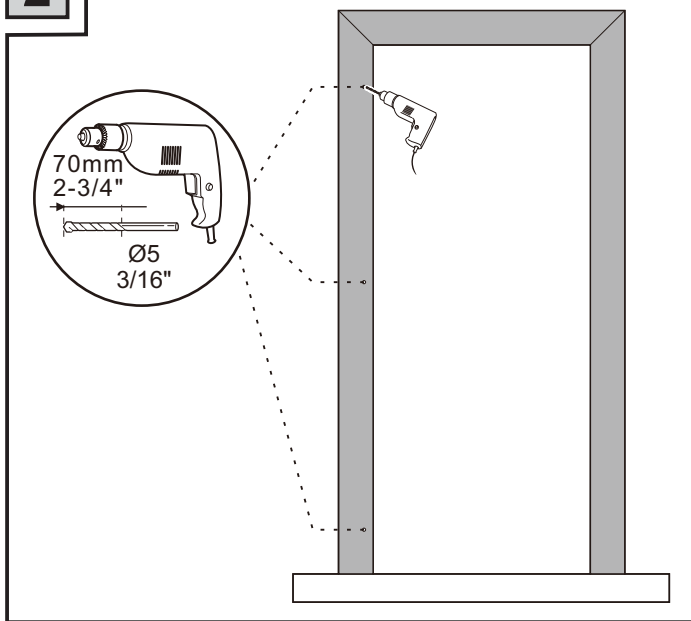


3

Fasten the door/jamb assembly to the house using the one-way screws (D) provided.

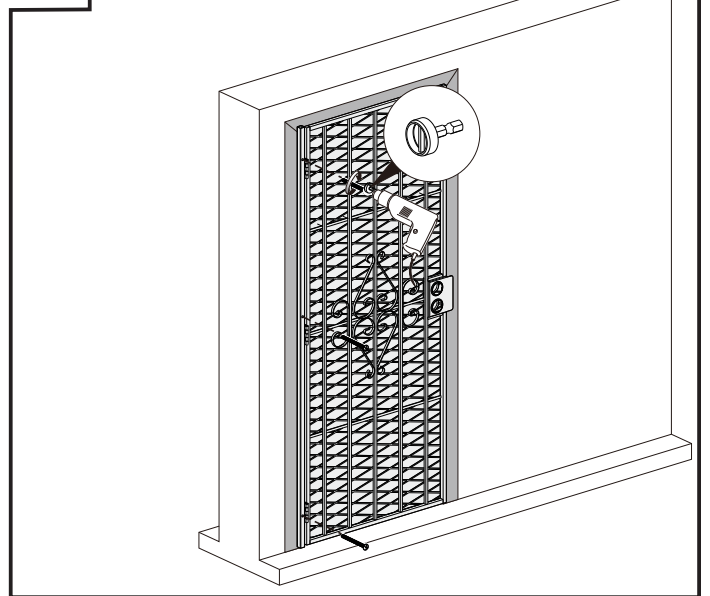


4


Install your choice of locksets with 2-3/8" backset (not provided). Fully extend the lock bolts into the "locked" position.

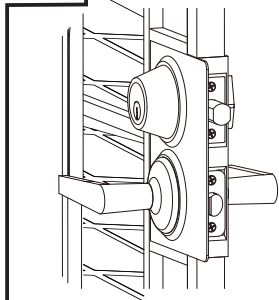

With the lock bolts extended, align the lock bolts with the holes in the lock-side jamb (B). Allow approximately 3/16" space between the door and the jamb.

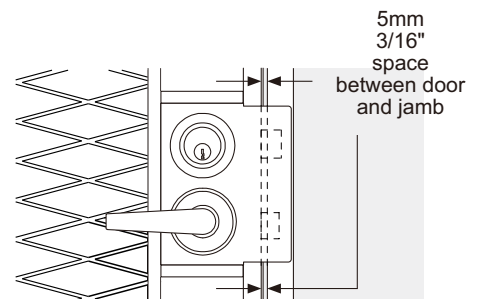


5

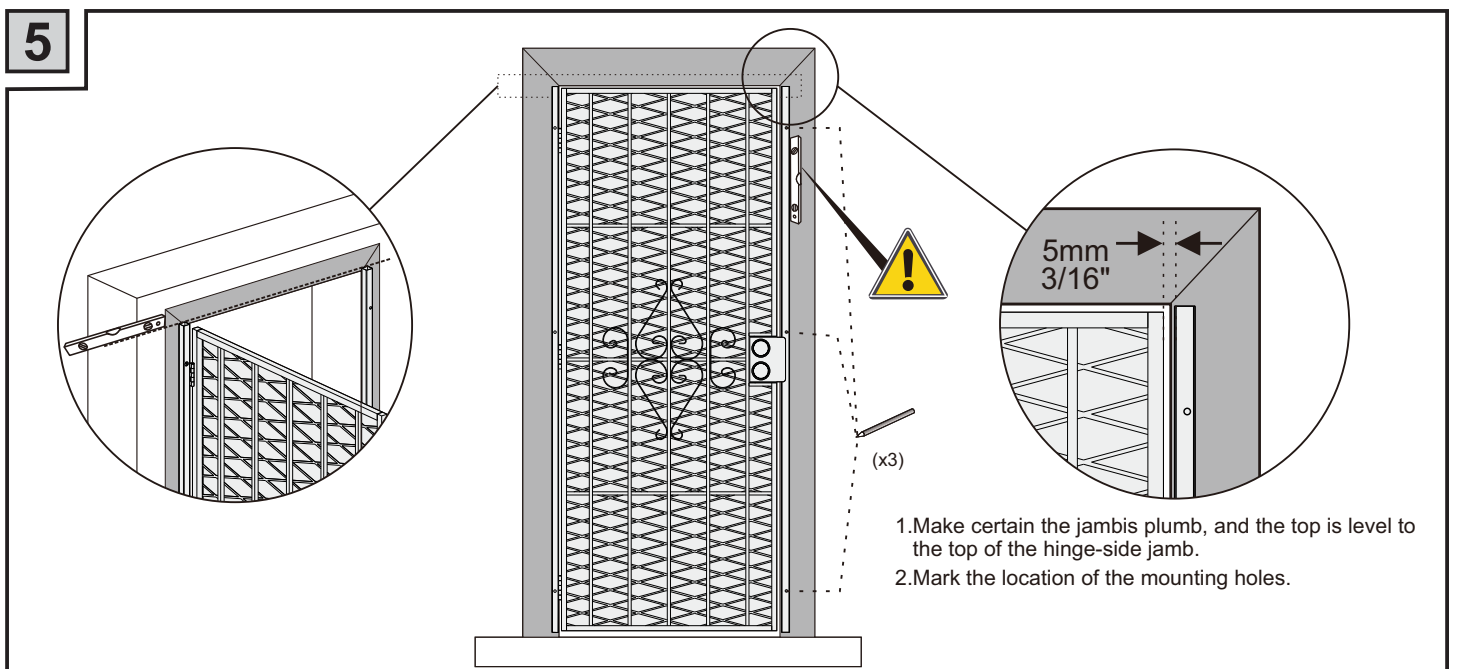

1. Make certain the jamb is plumb, and the top is level to the top of the hinge-side jamb.
2. Mark the location of the mounting holes.


6

Set the jamb aside and pre-drill 3/16" holes where marked.

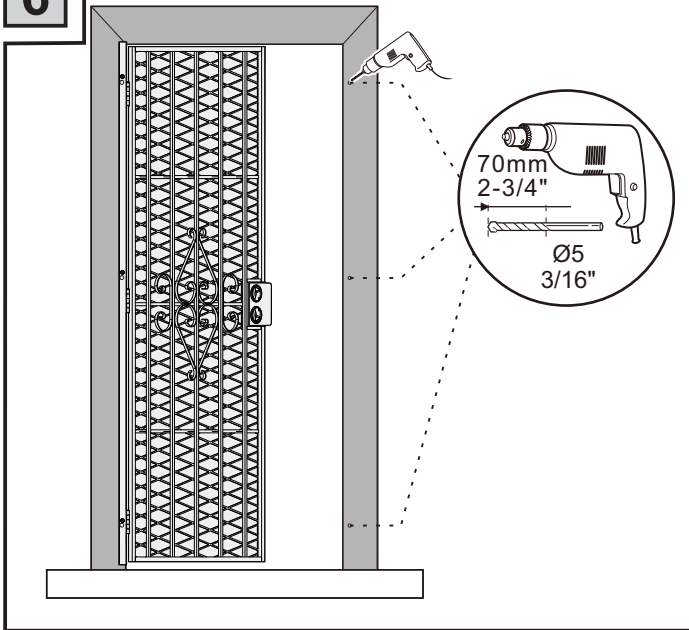


7

Fasten the jamb assembly to the house using the one-way screws (D) provided.

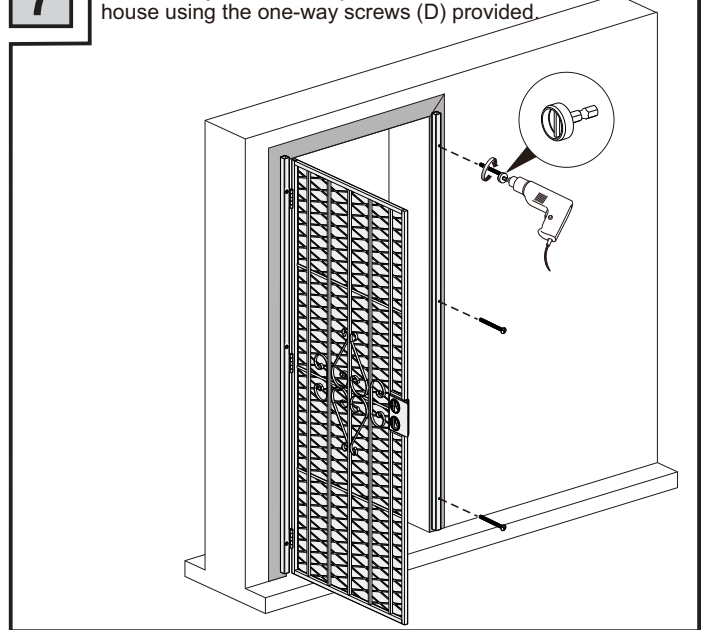


8

Position the top header jamb (C) across the top of the two side jambs. Make certain there is a minimum 1/8" space between the header and the top of the door framer and that the header is level. Mark the location of the mounting holes

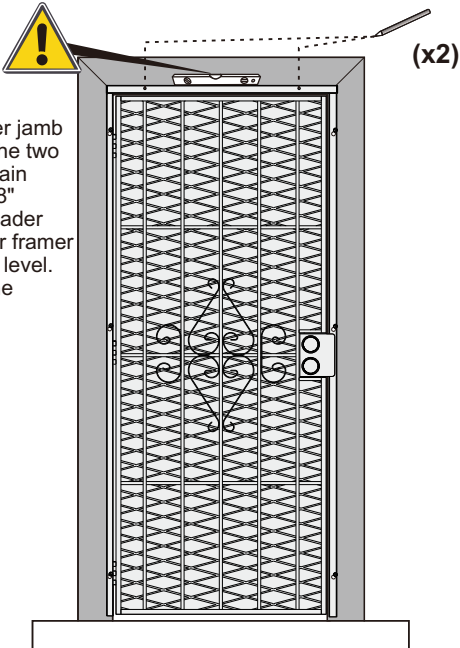

9

Set the jamb aside and pre-drill 3/16" holes where marked.

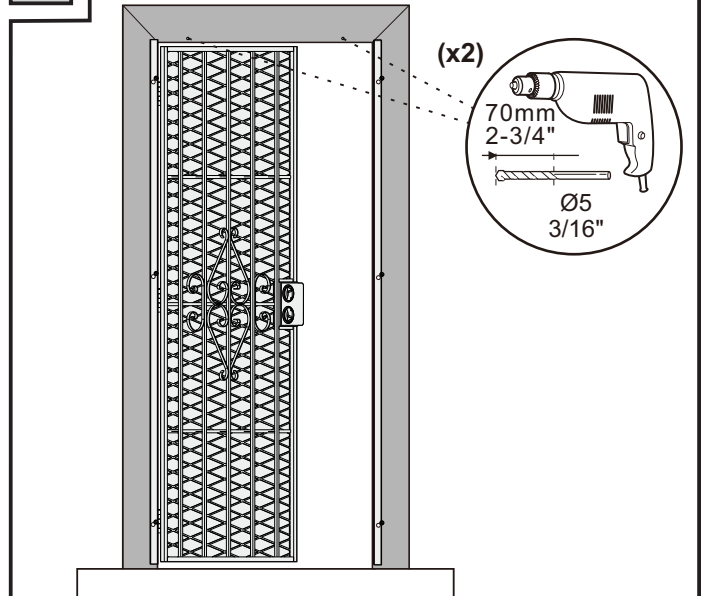

10

Fasten the jamb to the house using the provided one-way screws (D).

