

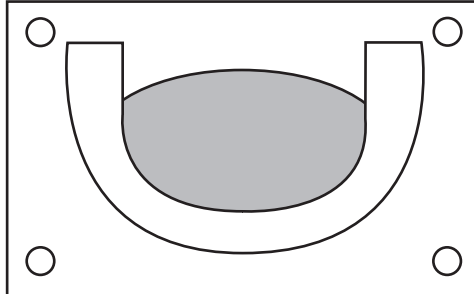


## HBP4010 RECESSED BIN PULL INSTALLATION

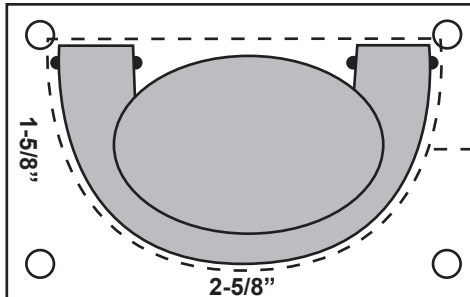

**Front**

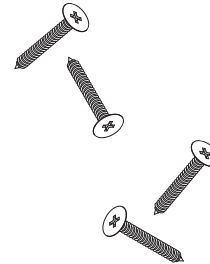

**Back**

**1**


With a pencil, mark on your drawer where the outside edges of the recessed area is, approximately 2-5/8" x 1-5/8".

**2**

Router/chisel out the area to 7/16" deep and slightly larger than the back surface of the recessed area.

**3**

Your pull is now ready to be attached using the four included screws.

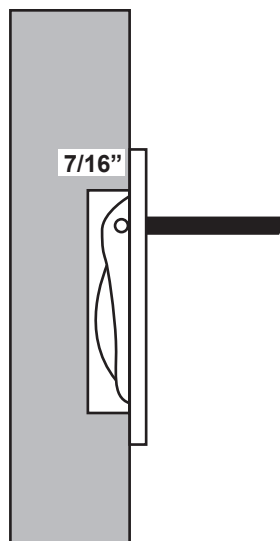

**Side**