




Product Installation Instructions

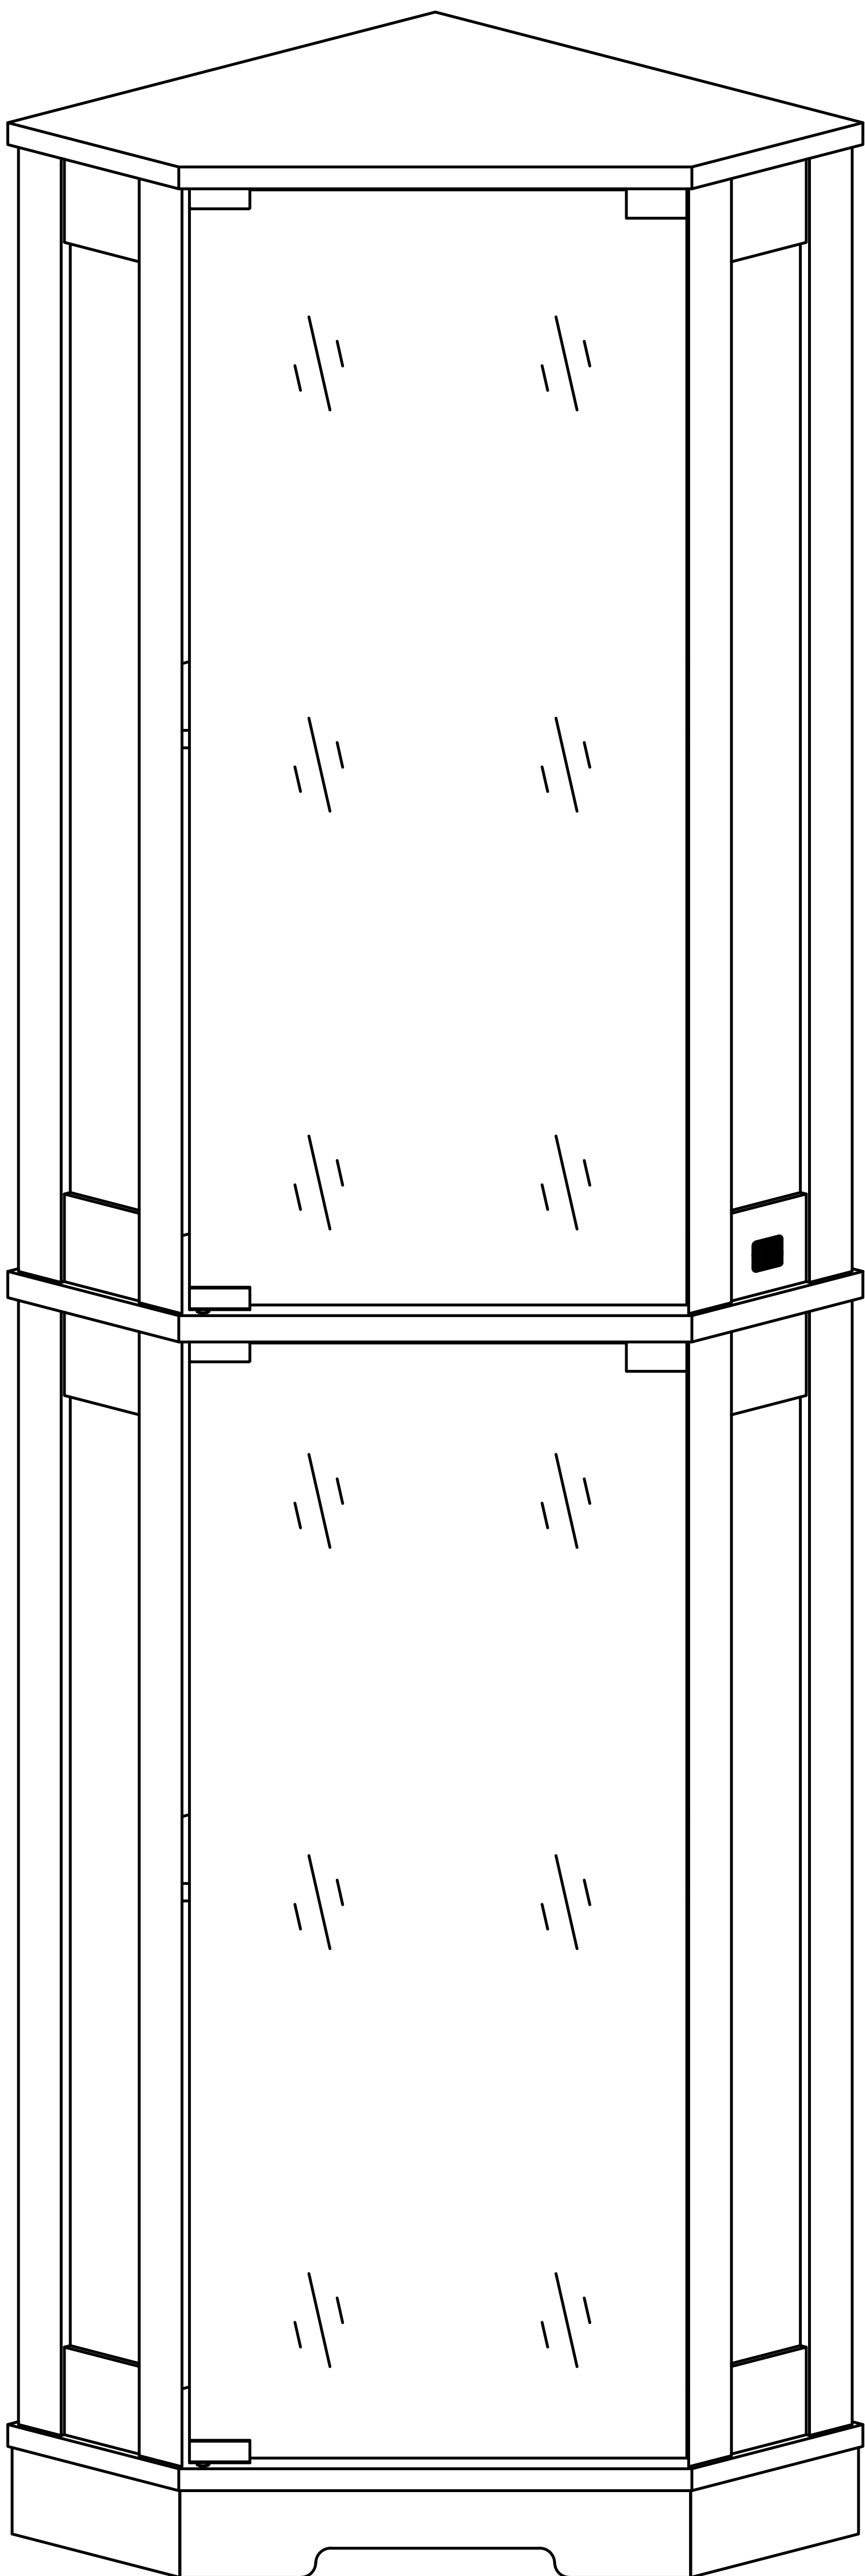


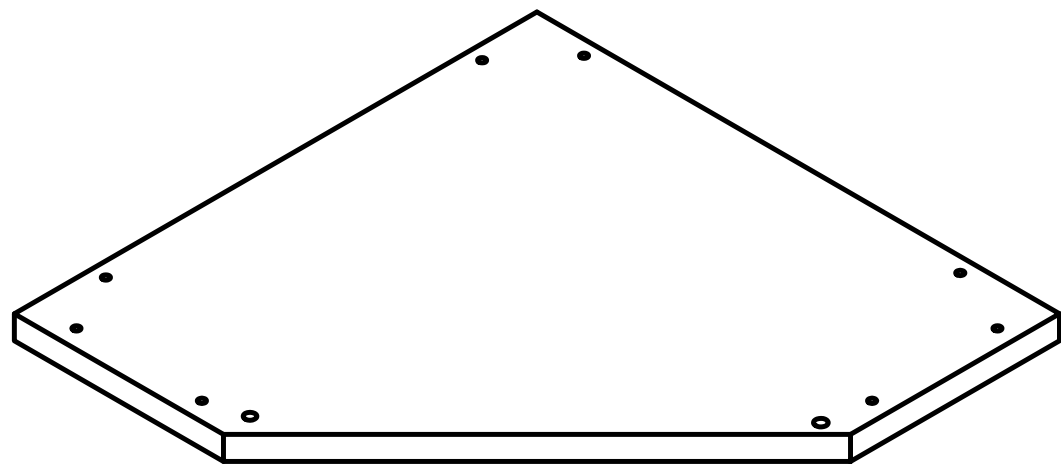


Ax1

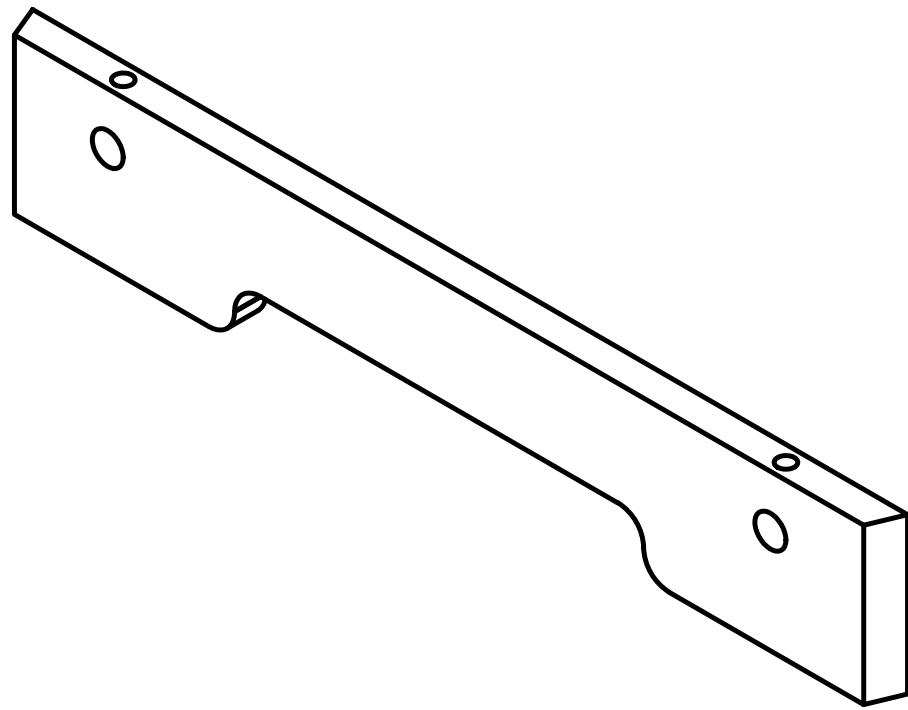


Bx1

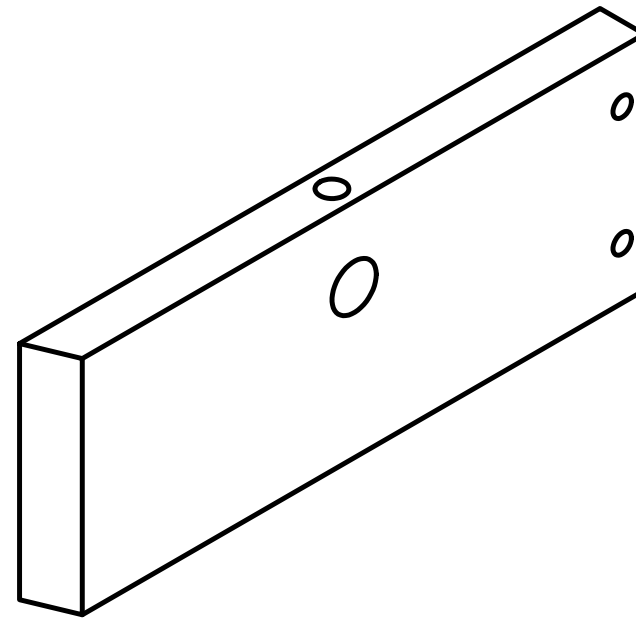


Cx1

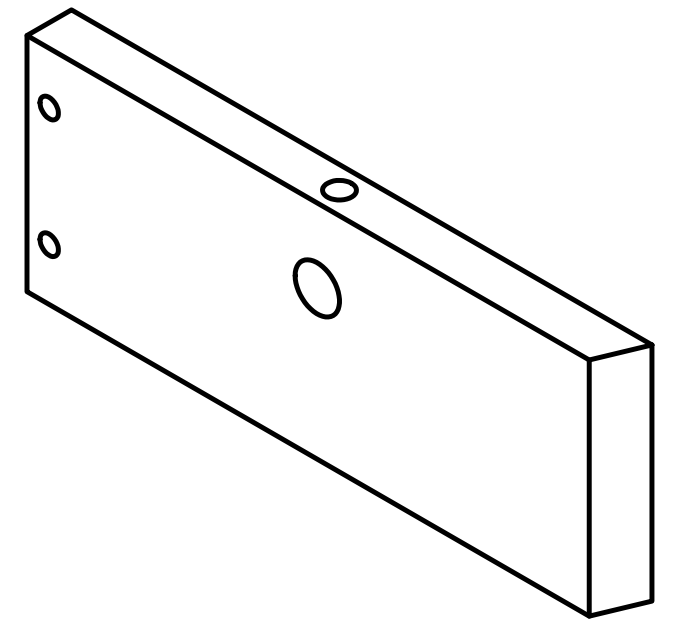


Dx1

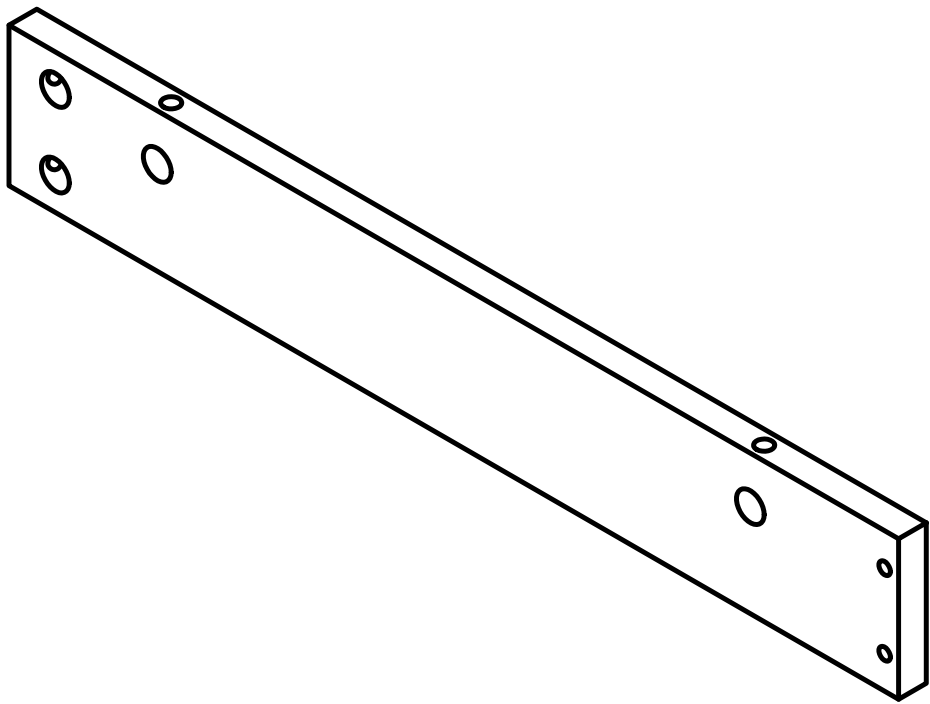


Ex1

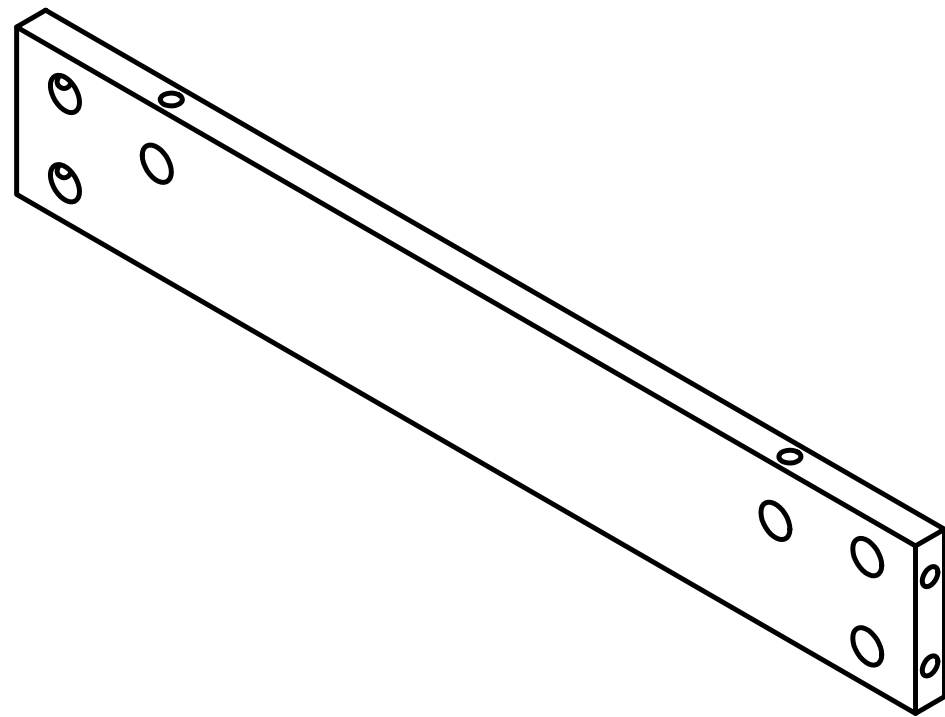


Fx1

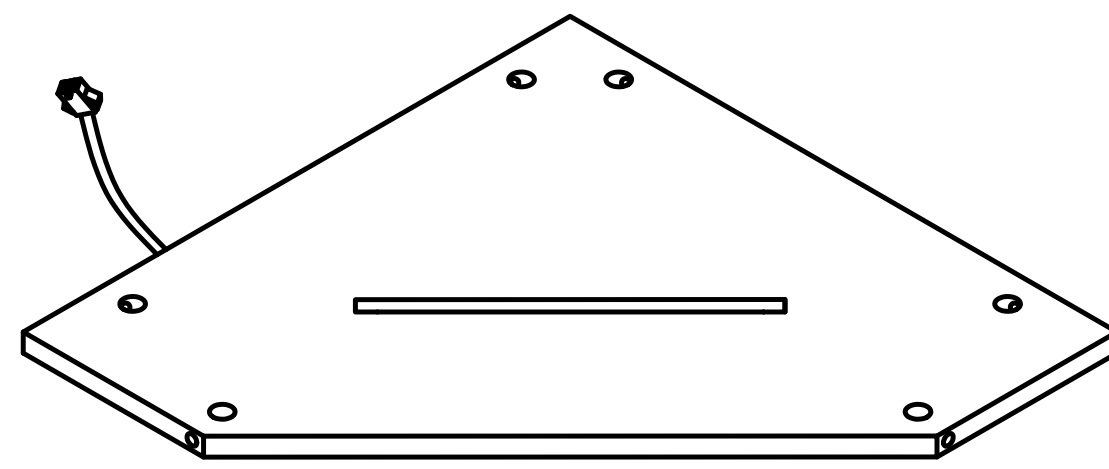


Gx2

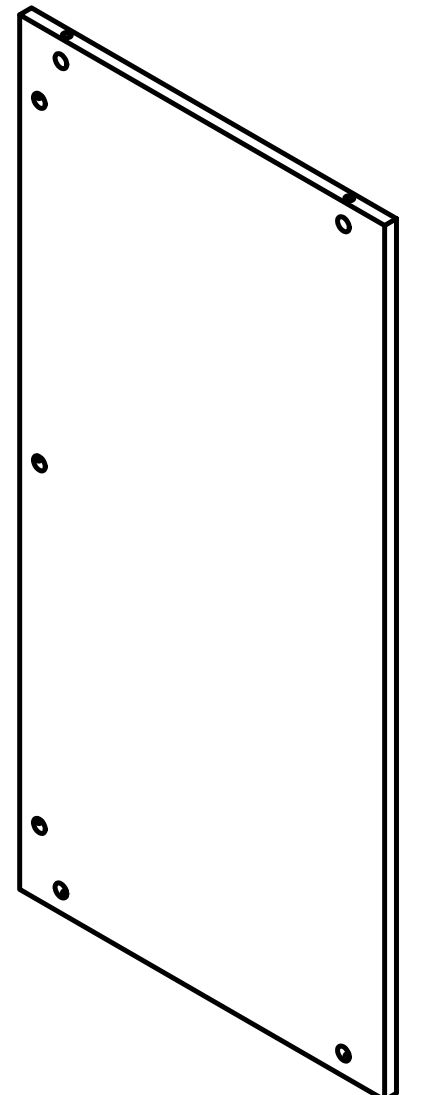


Hx2

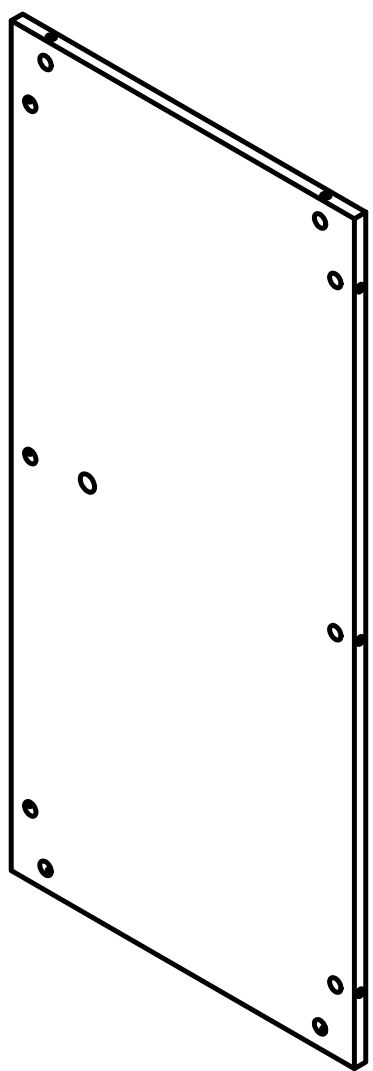


Ix2

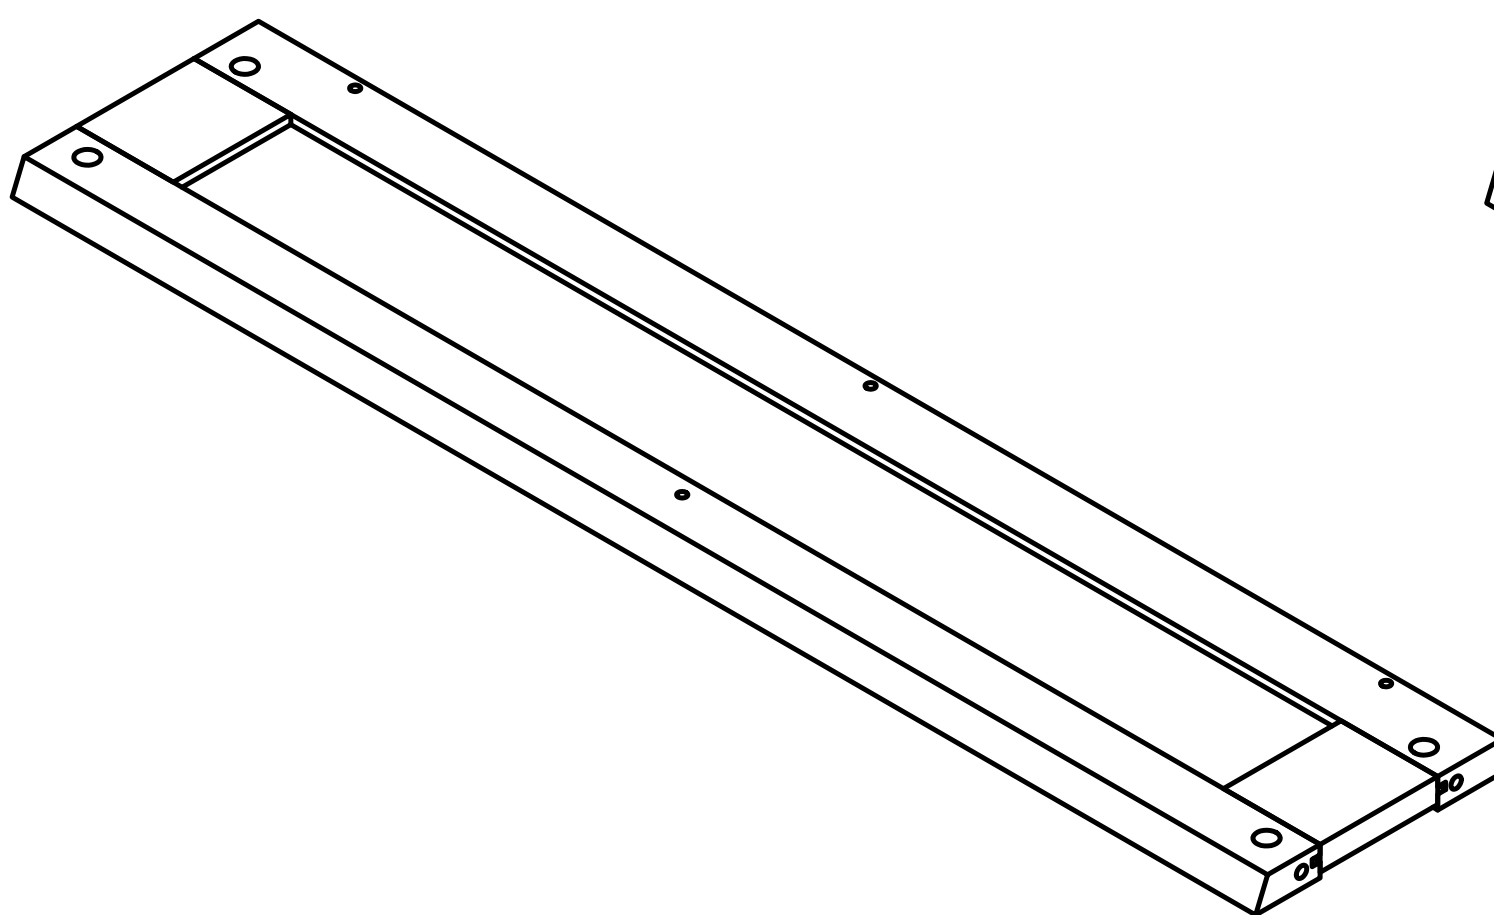


Jx3

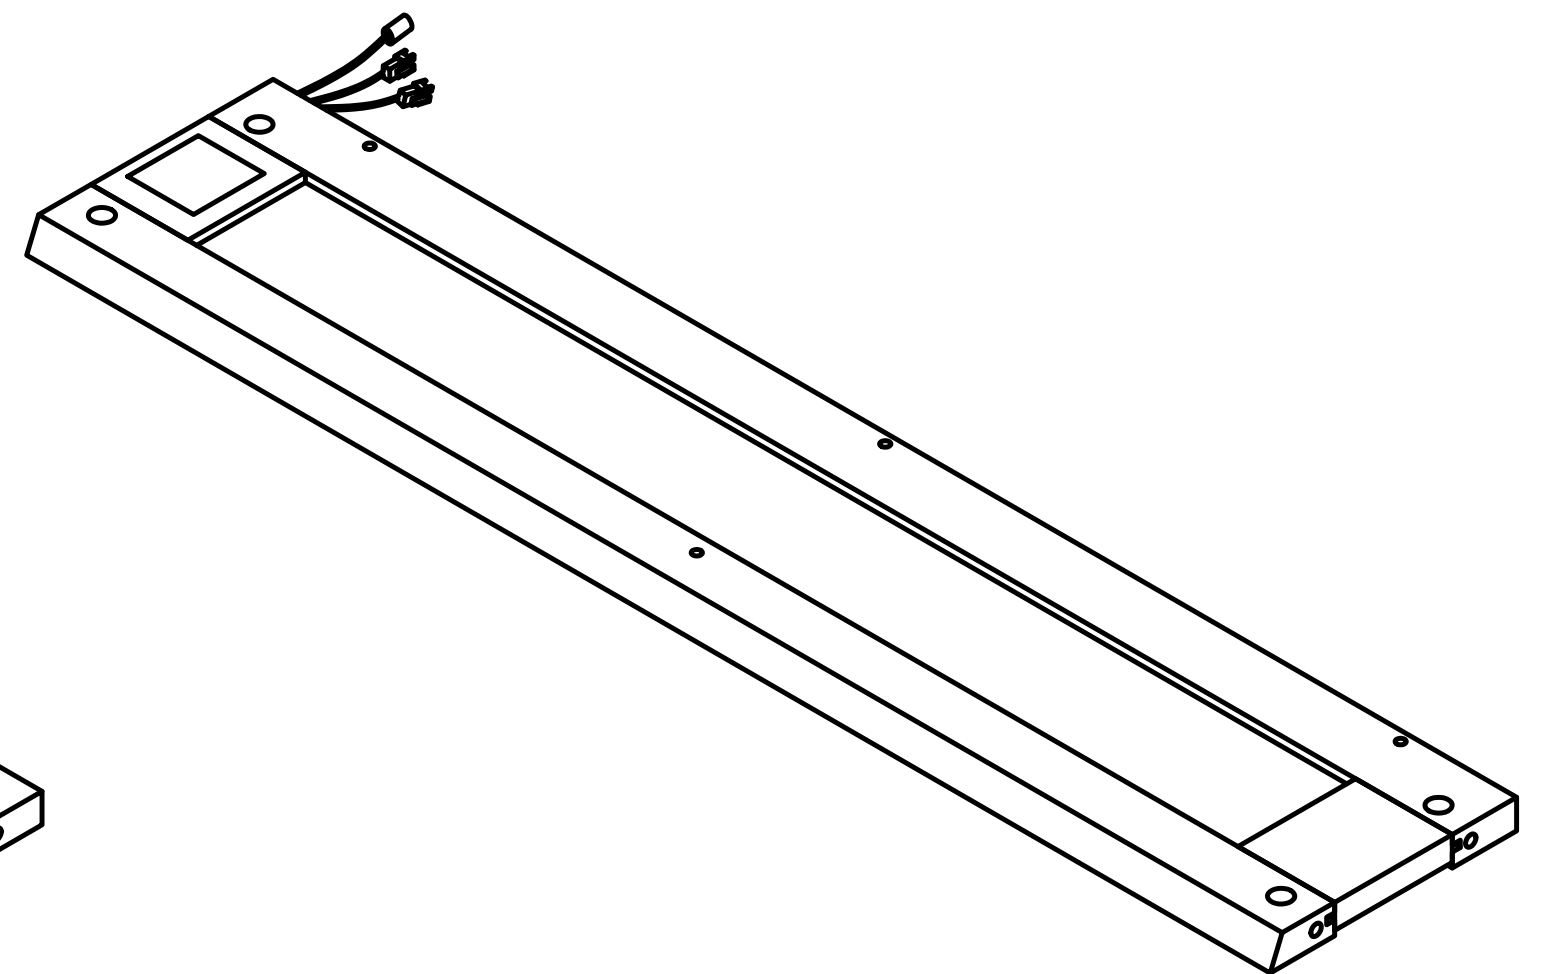


Kx1

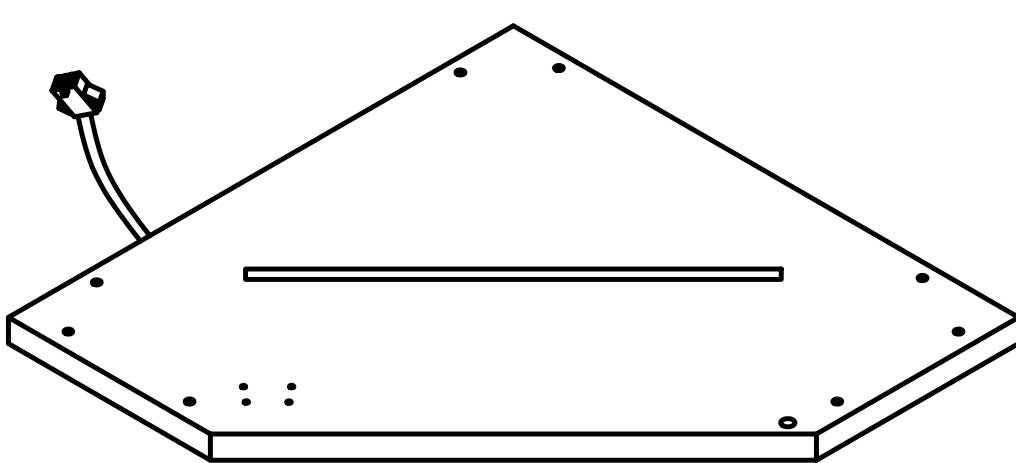

Lx1

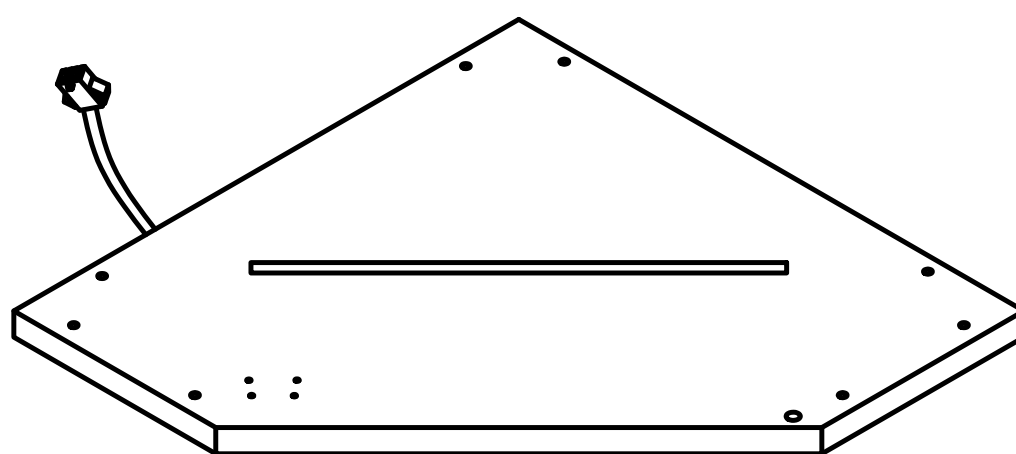

Mx1












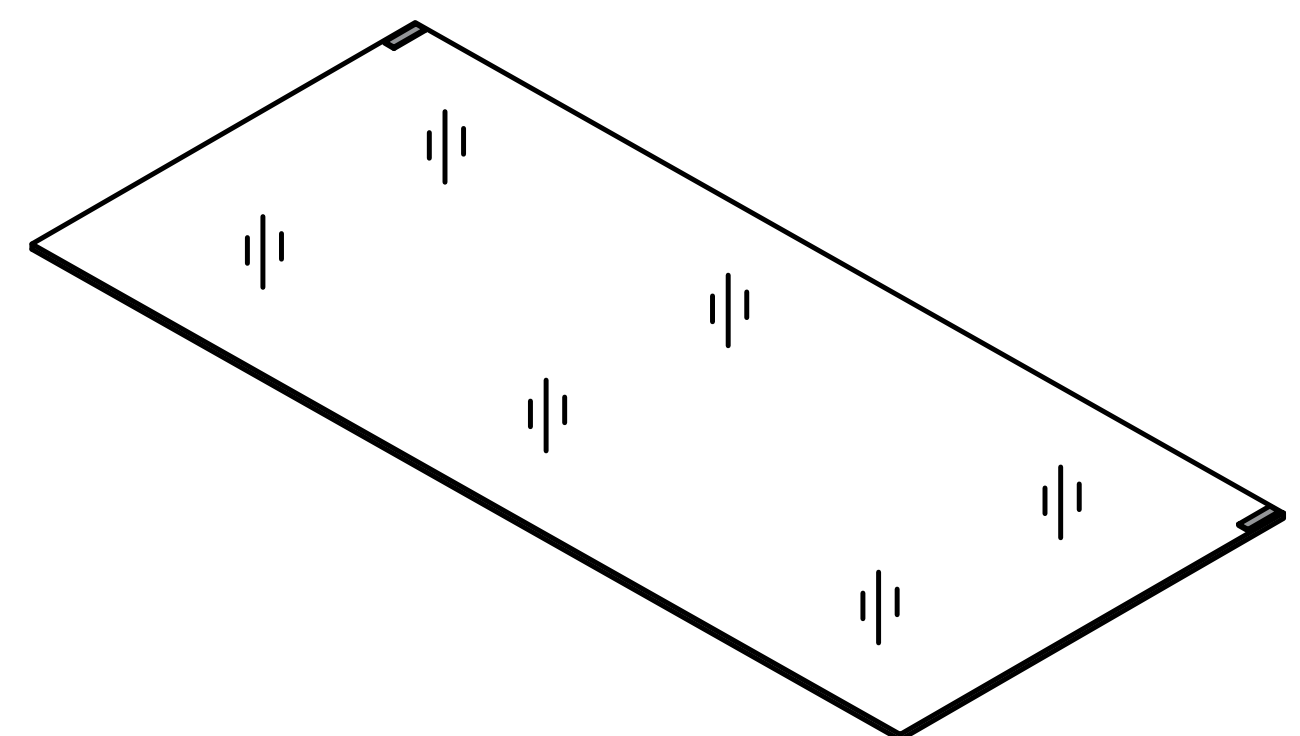


Nx2




1


Accessories list

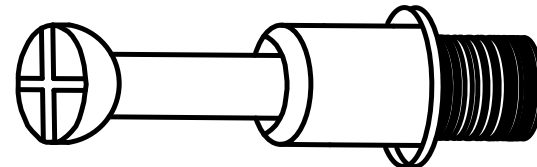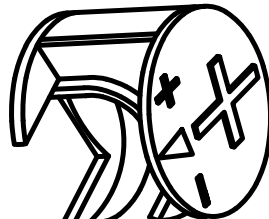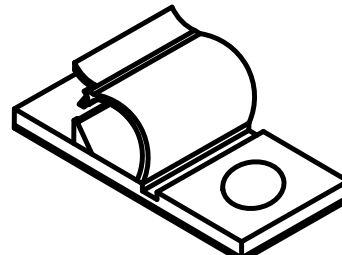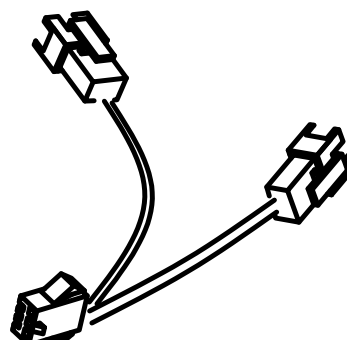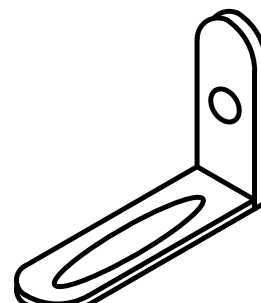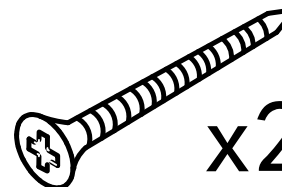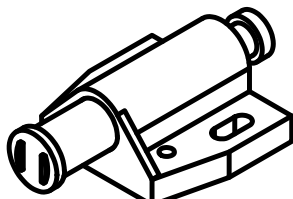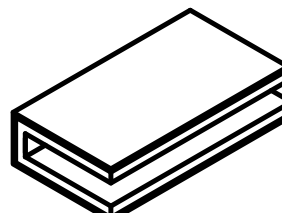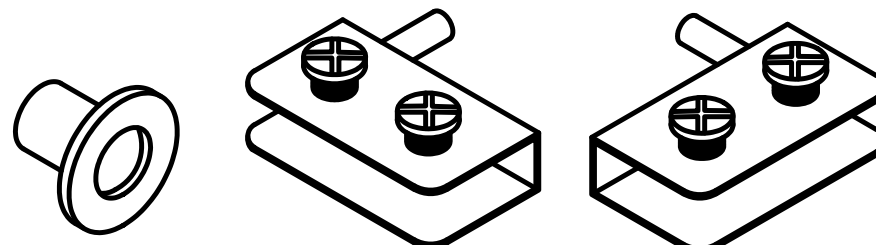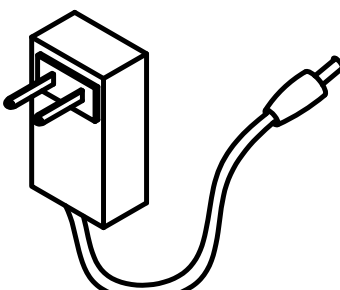①		Two in one screw (6x28mm)				76pcs +3pcs
②		Two in one nut (10x12mm)				76pcs +3pcs
③		Non-slip pads				6pcs
④		Wire clamp				4pcs +1pcs
⑤		Double end connecting line				2pcs
⑥	Anti Fall Hardware	 x2	(3. 5x14mm)  x2	 x2	 x2 (4x45mm)	 x4
⑦	 	Rebound device & Screw (3x16mm)				8pcs +1pcs 2pcs
		Iron sheet				2pcs
		Hinge				4pcs
	AC/DC Adapter (12V==2. 0A)				1pcs	

Double-head screwdriver, use as required

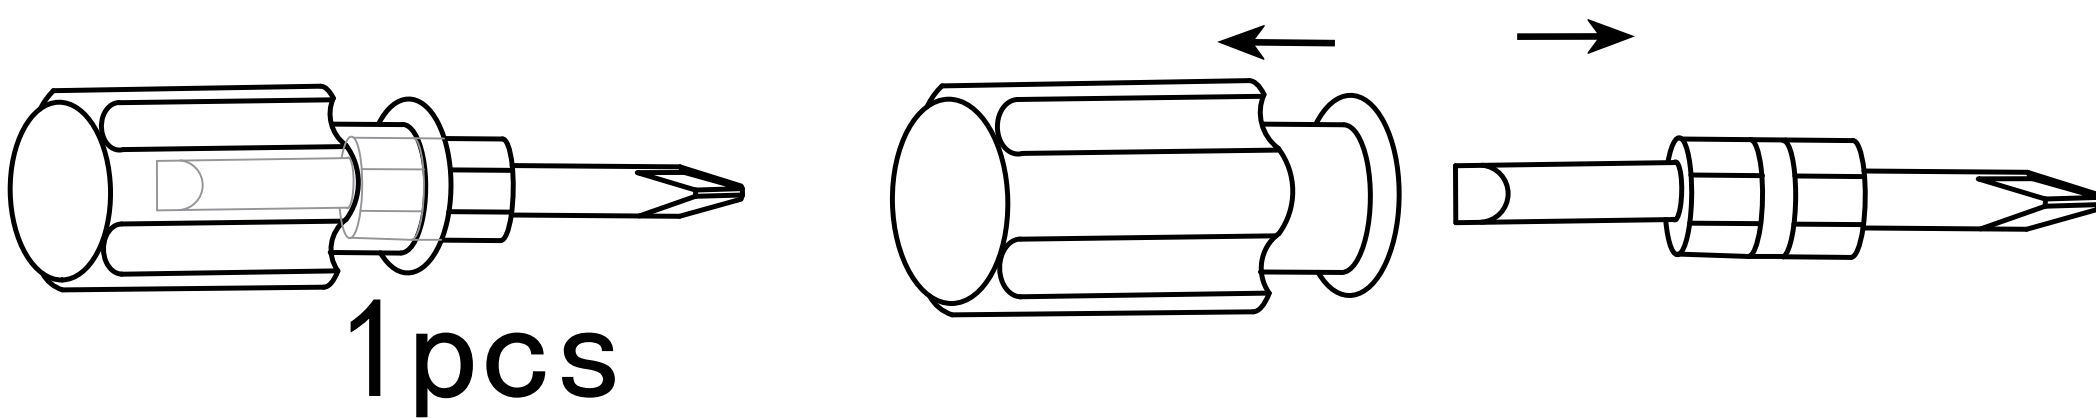


Product structure decomposition

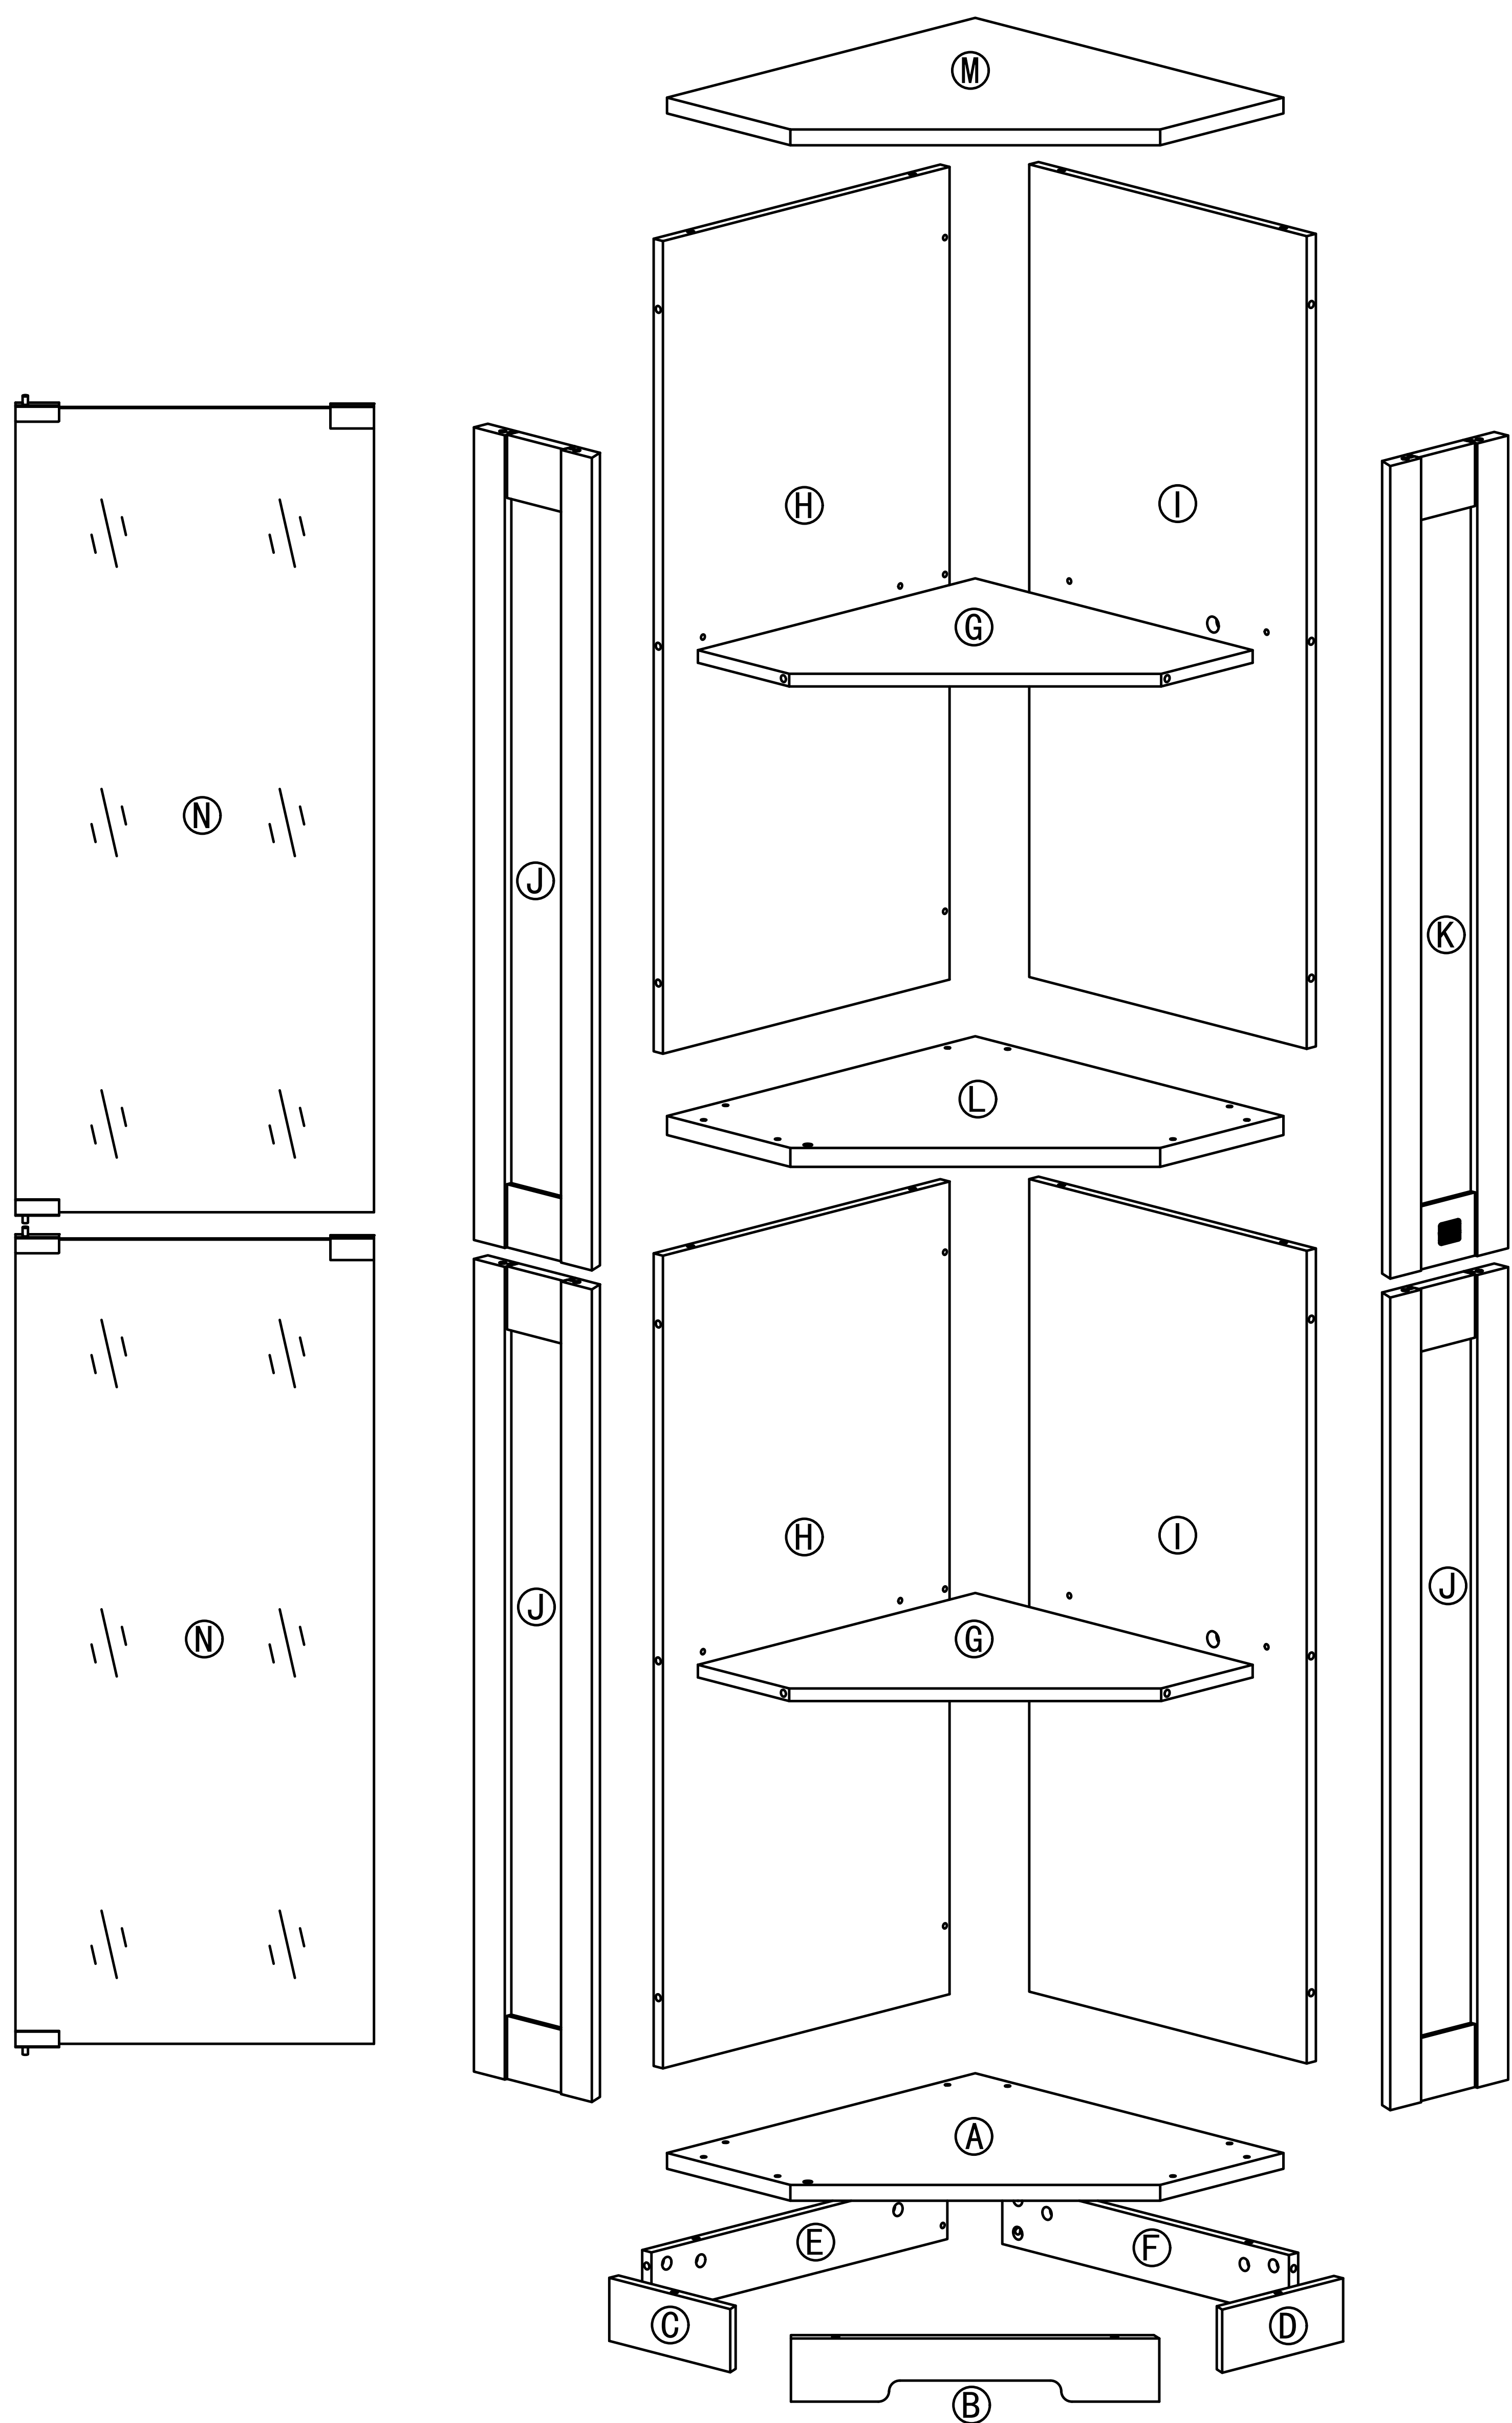


Use parts ① and ②




Step1

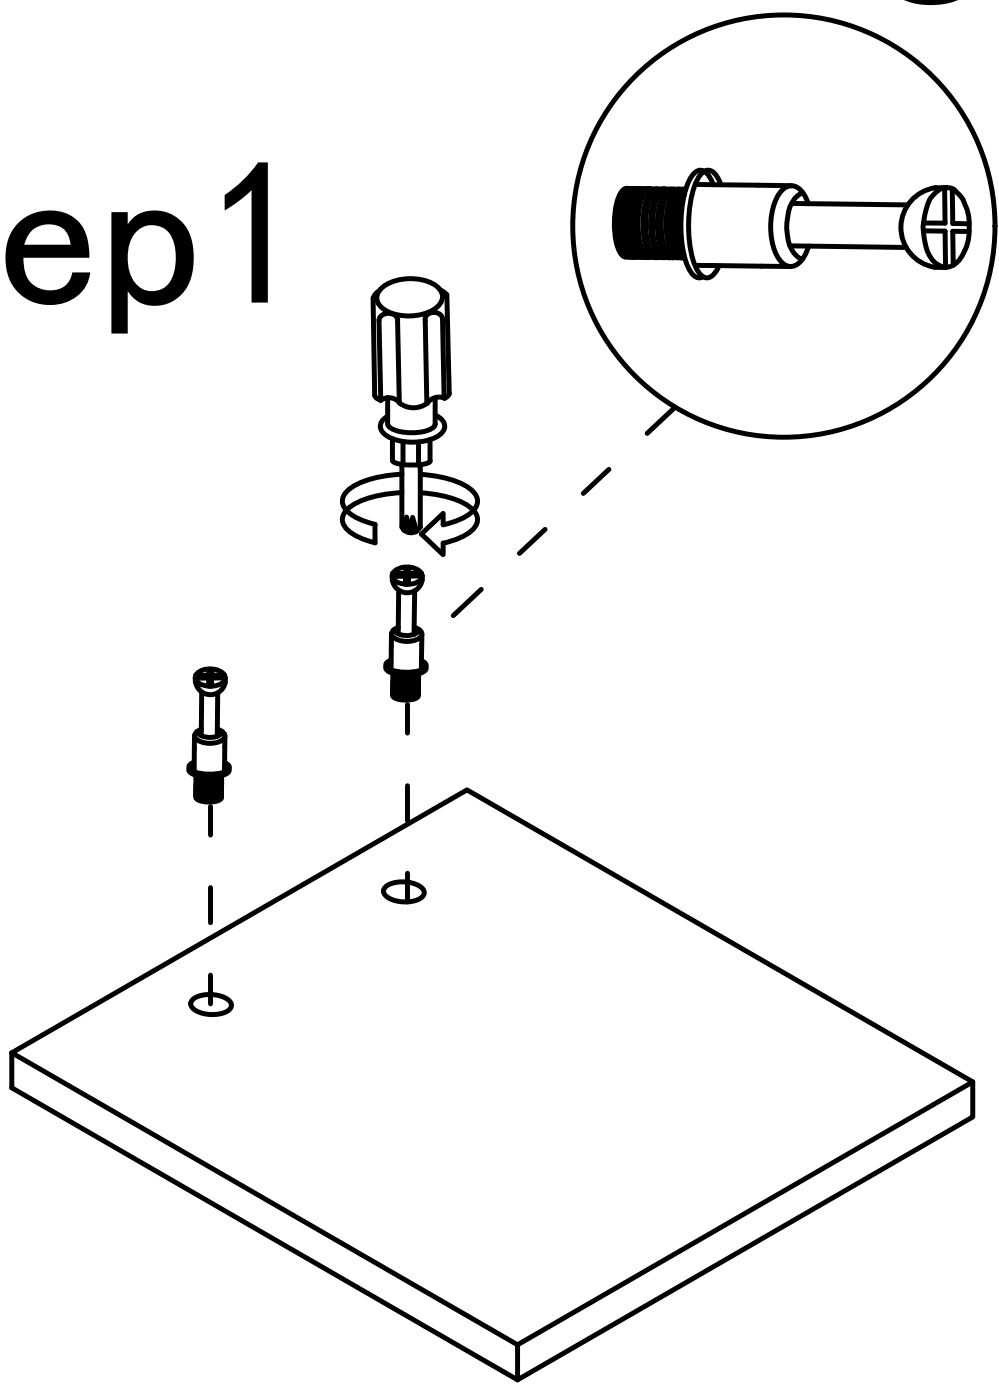

Step2

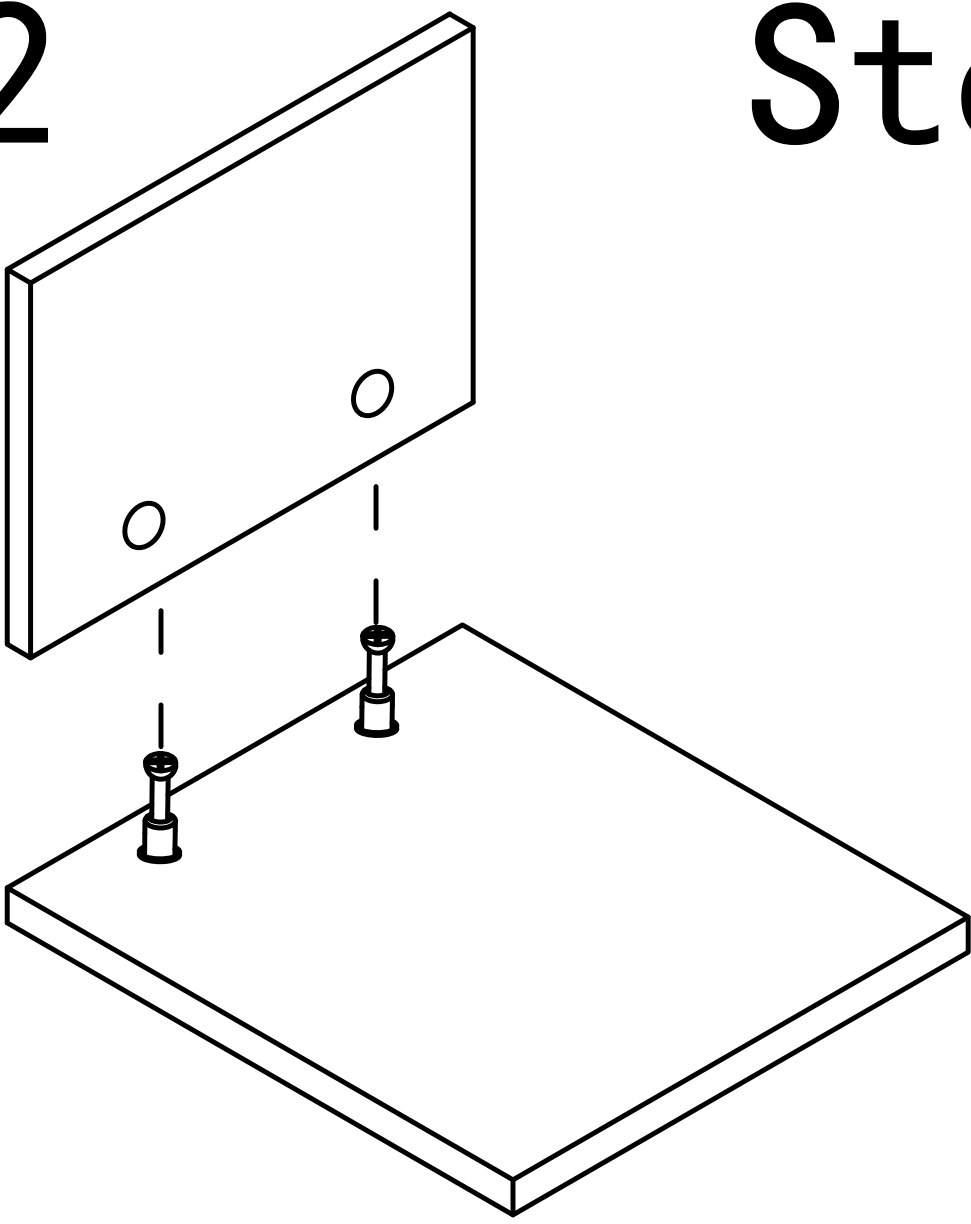




Step3

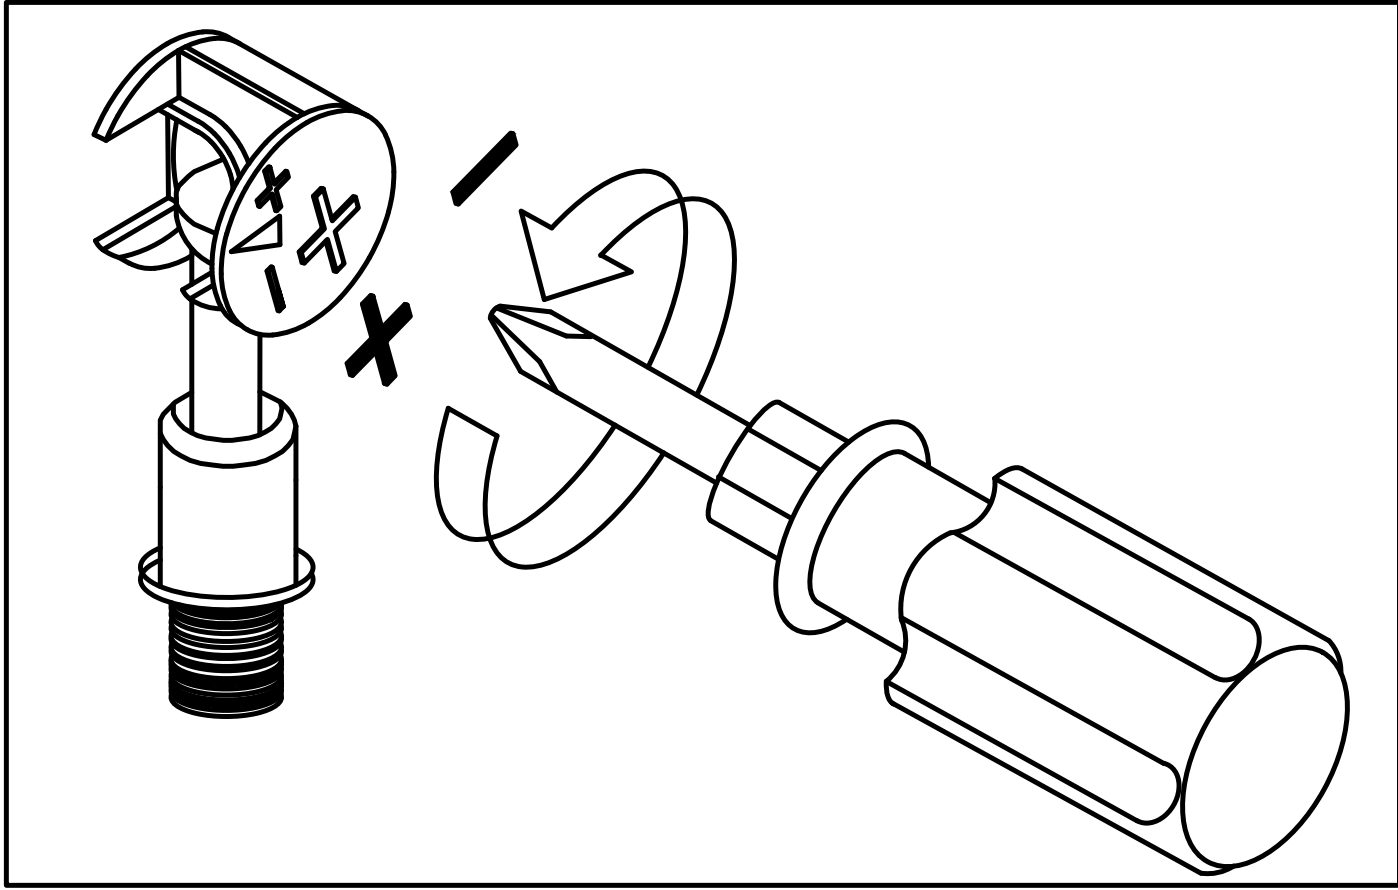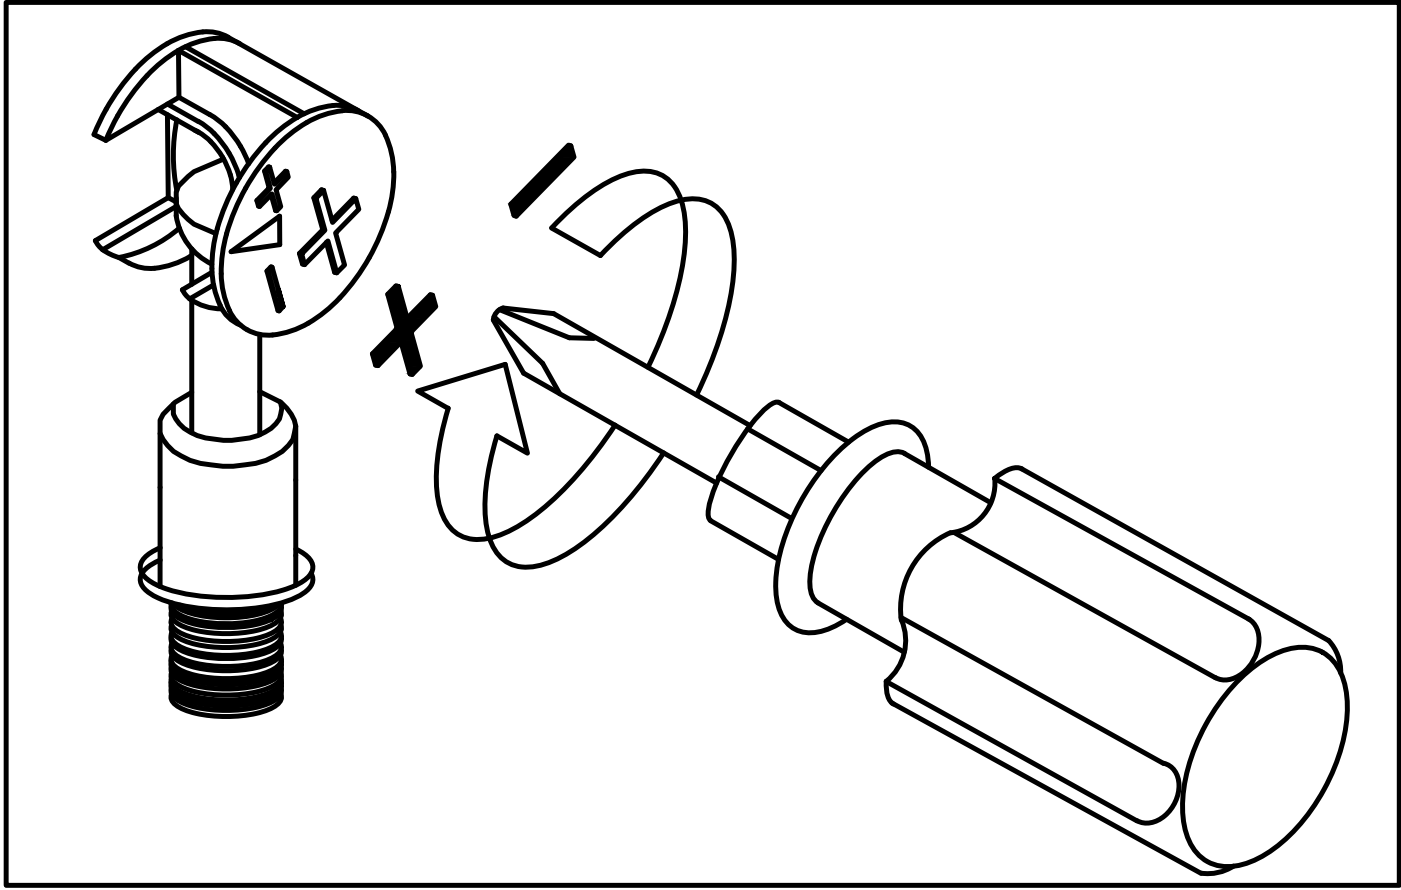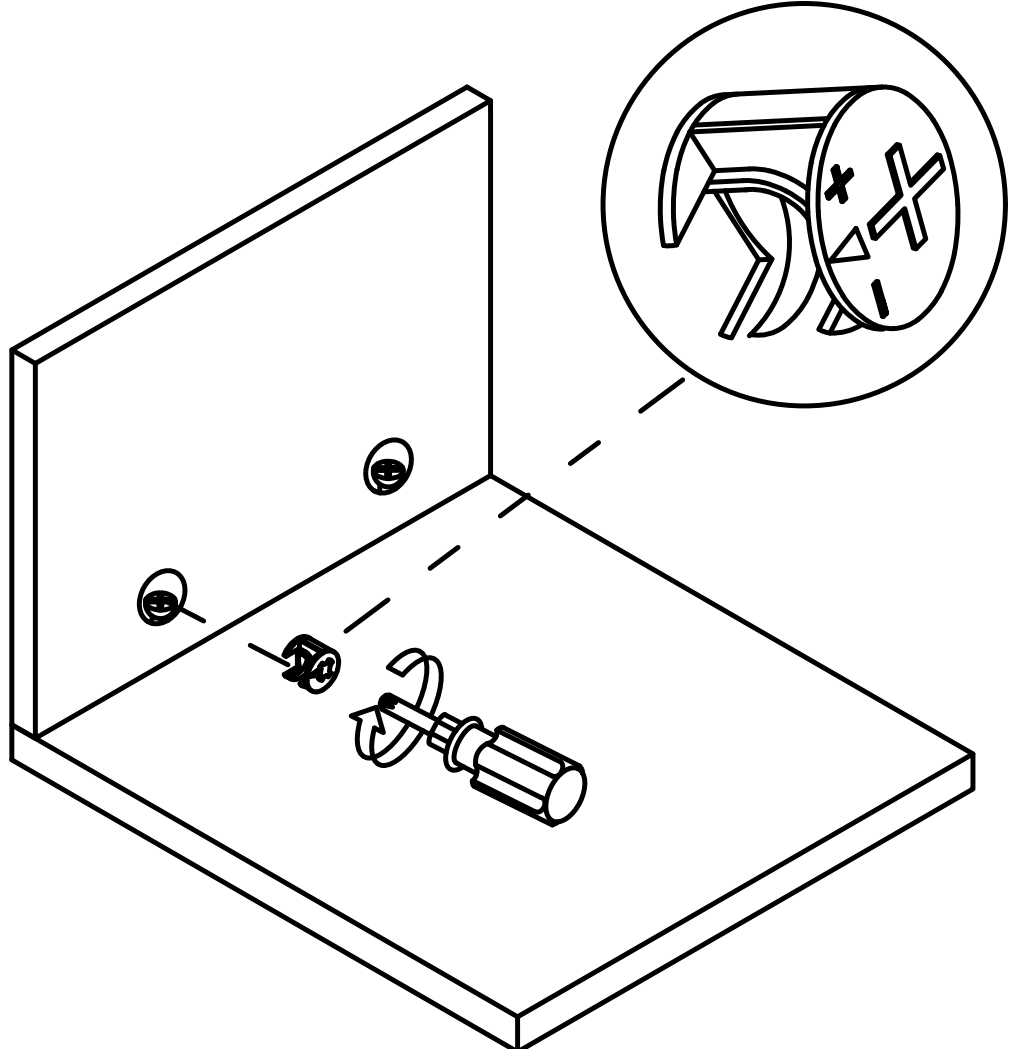



Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign



Step 1

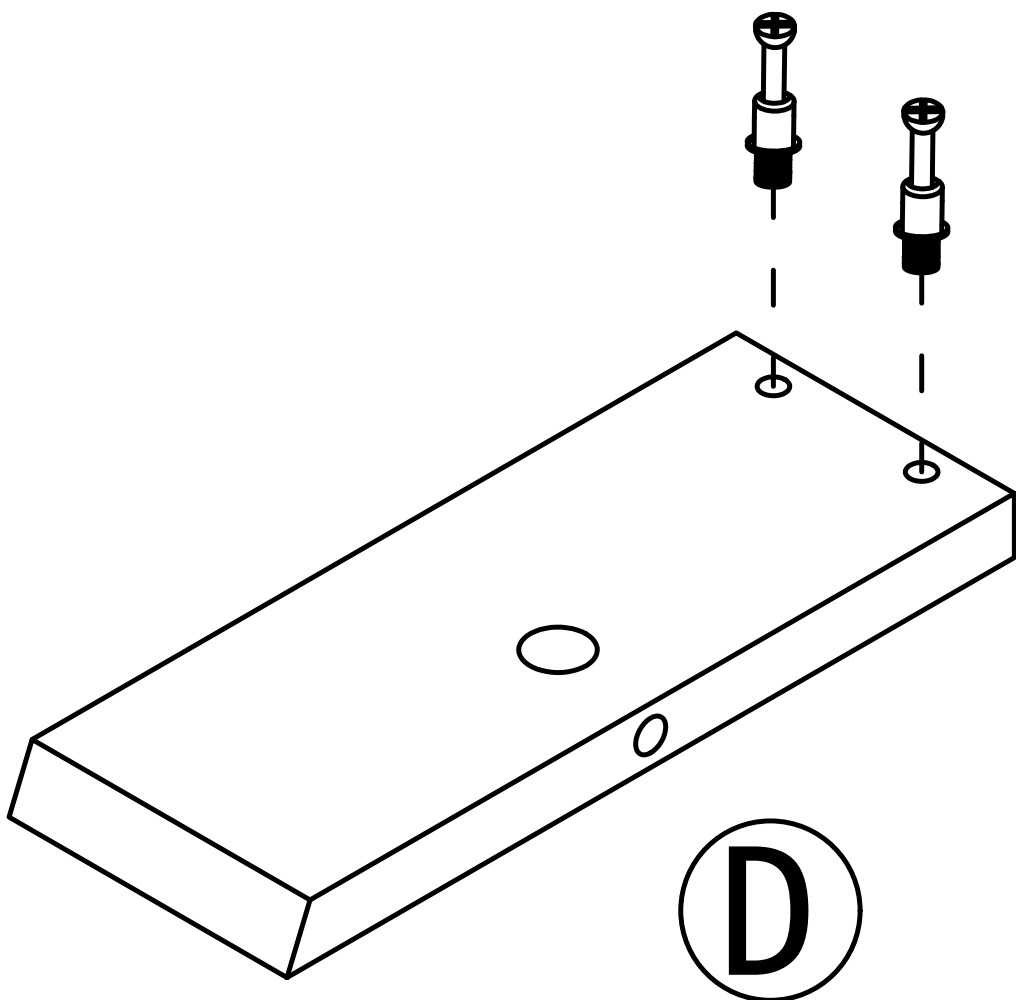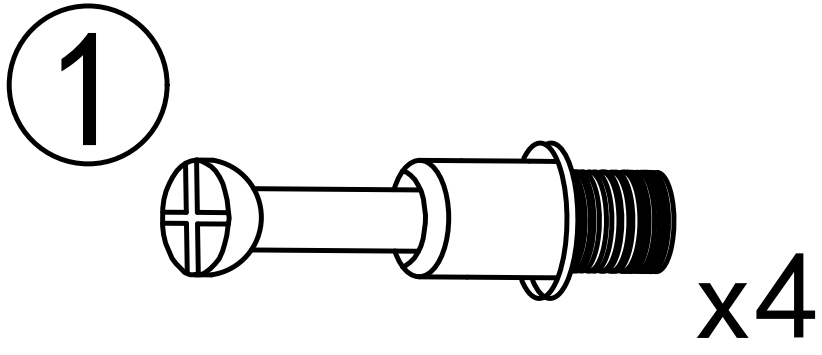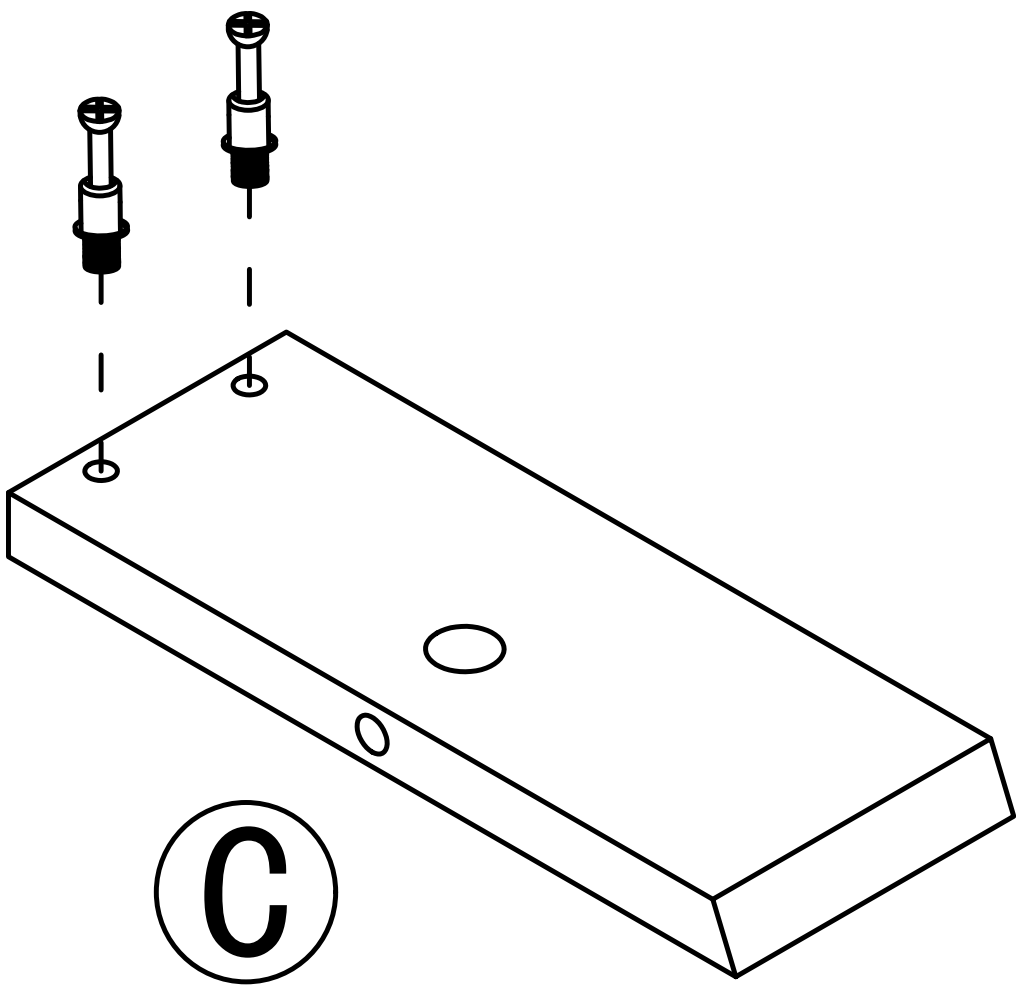

Step 2

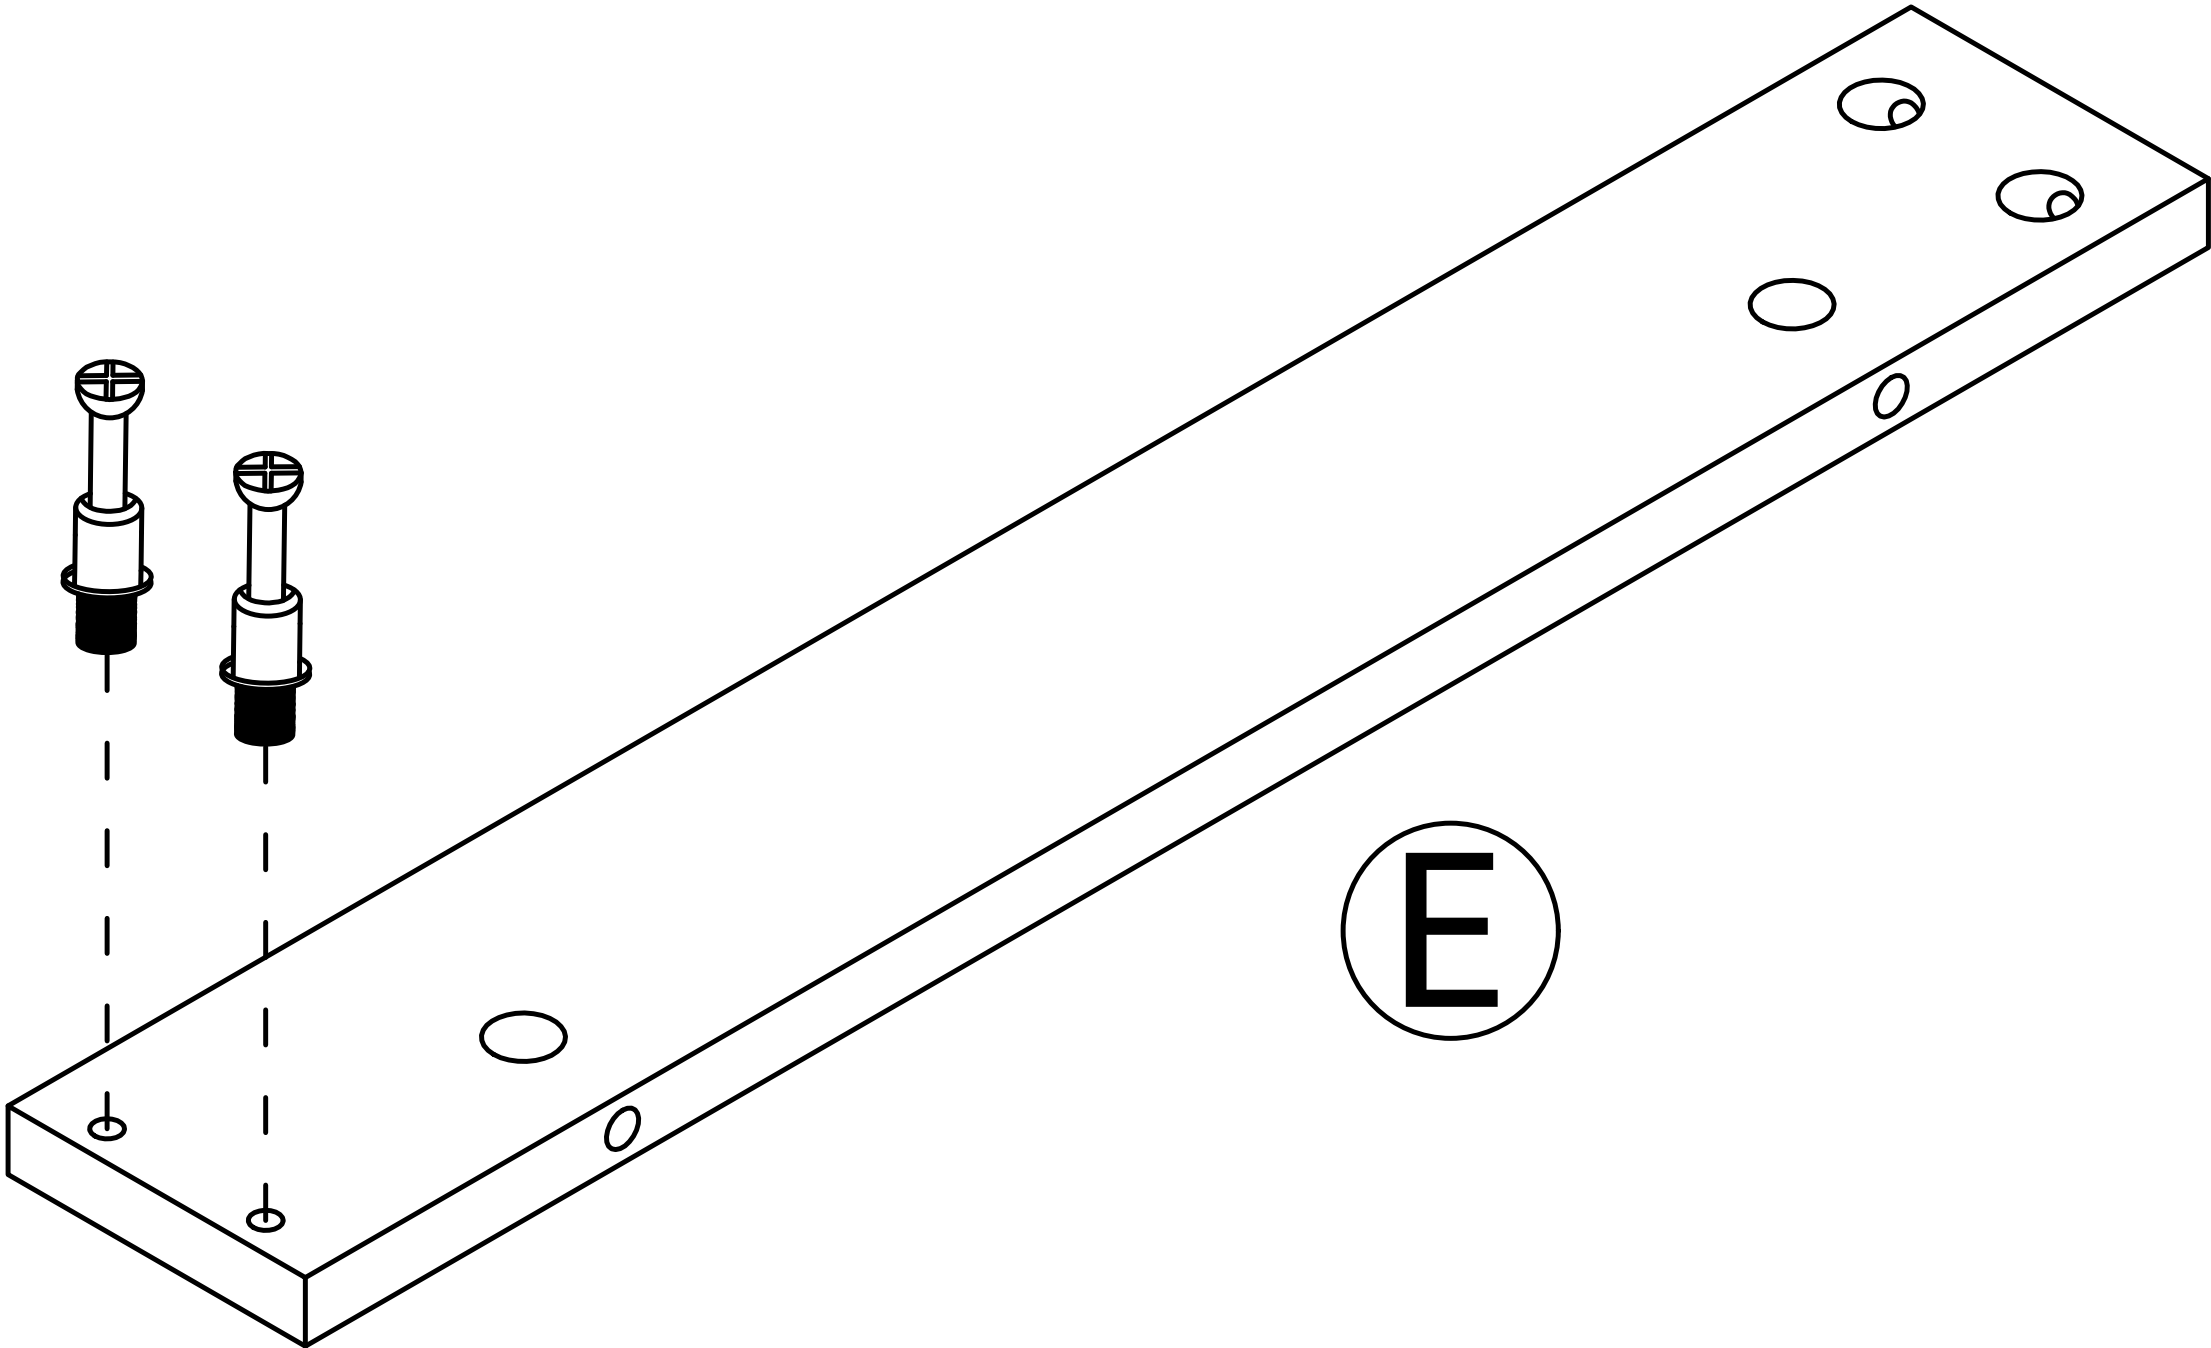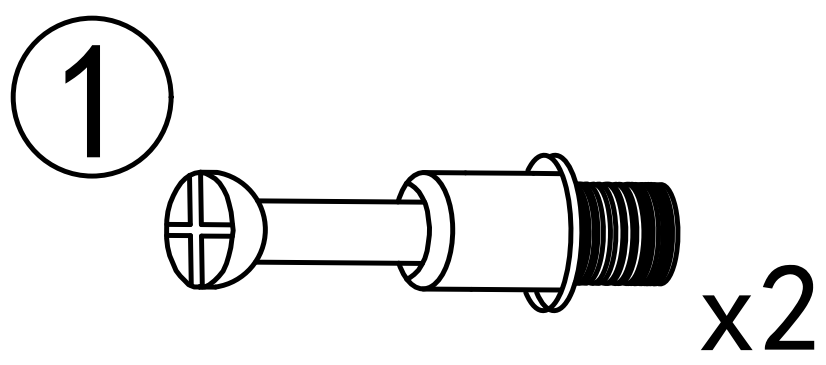


Step 3

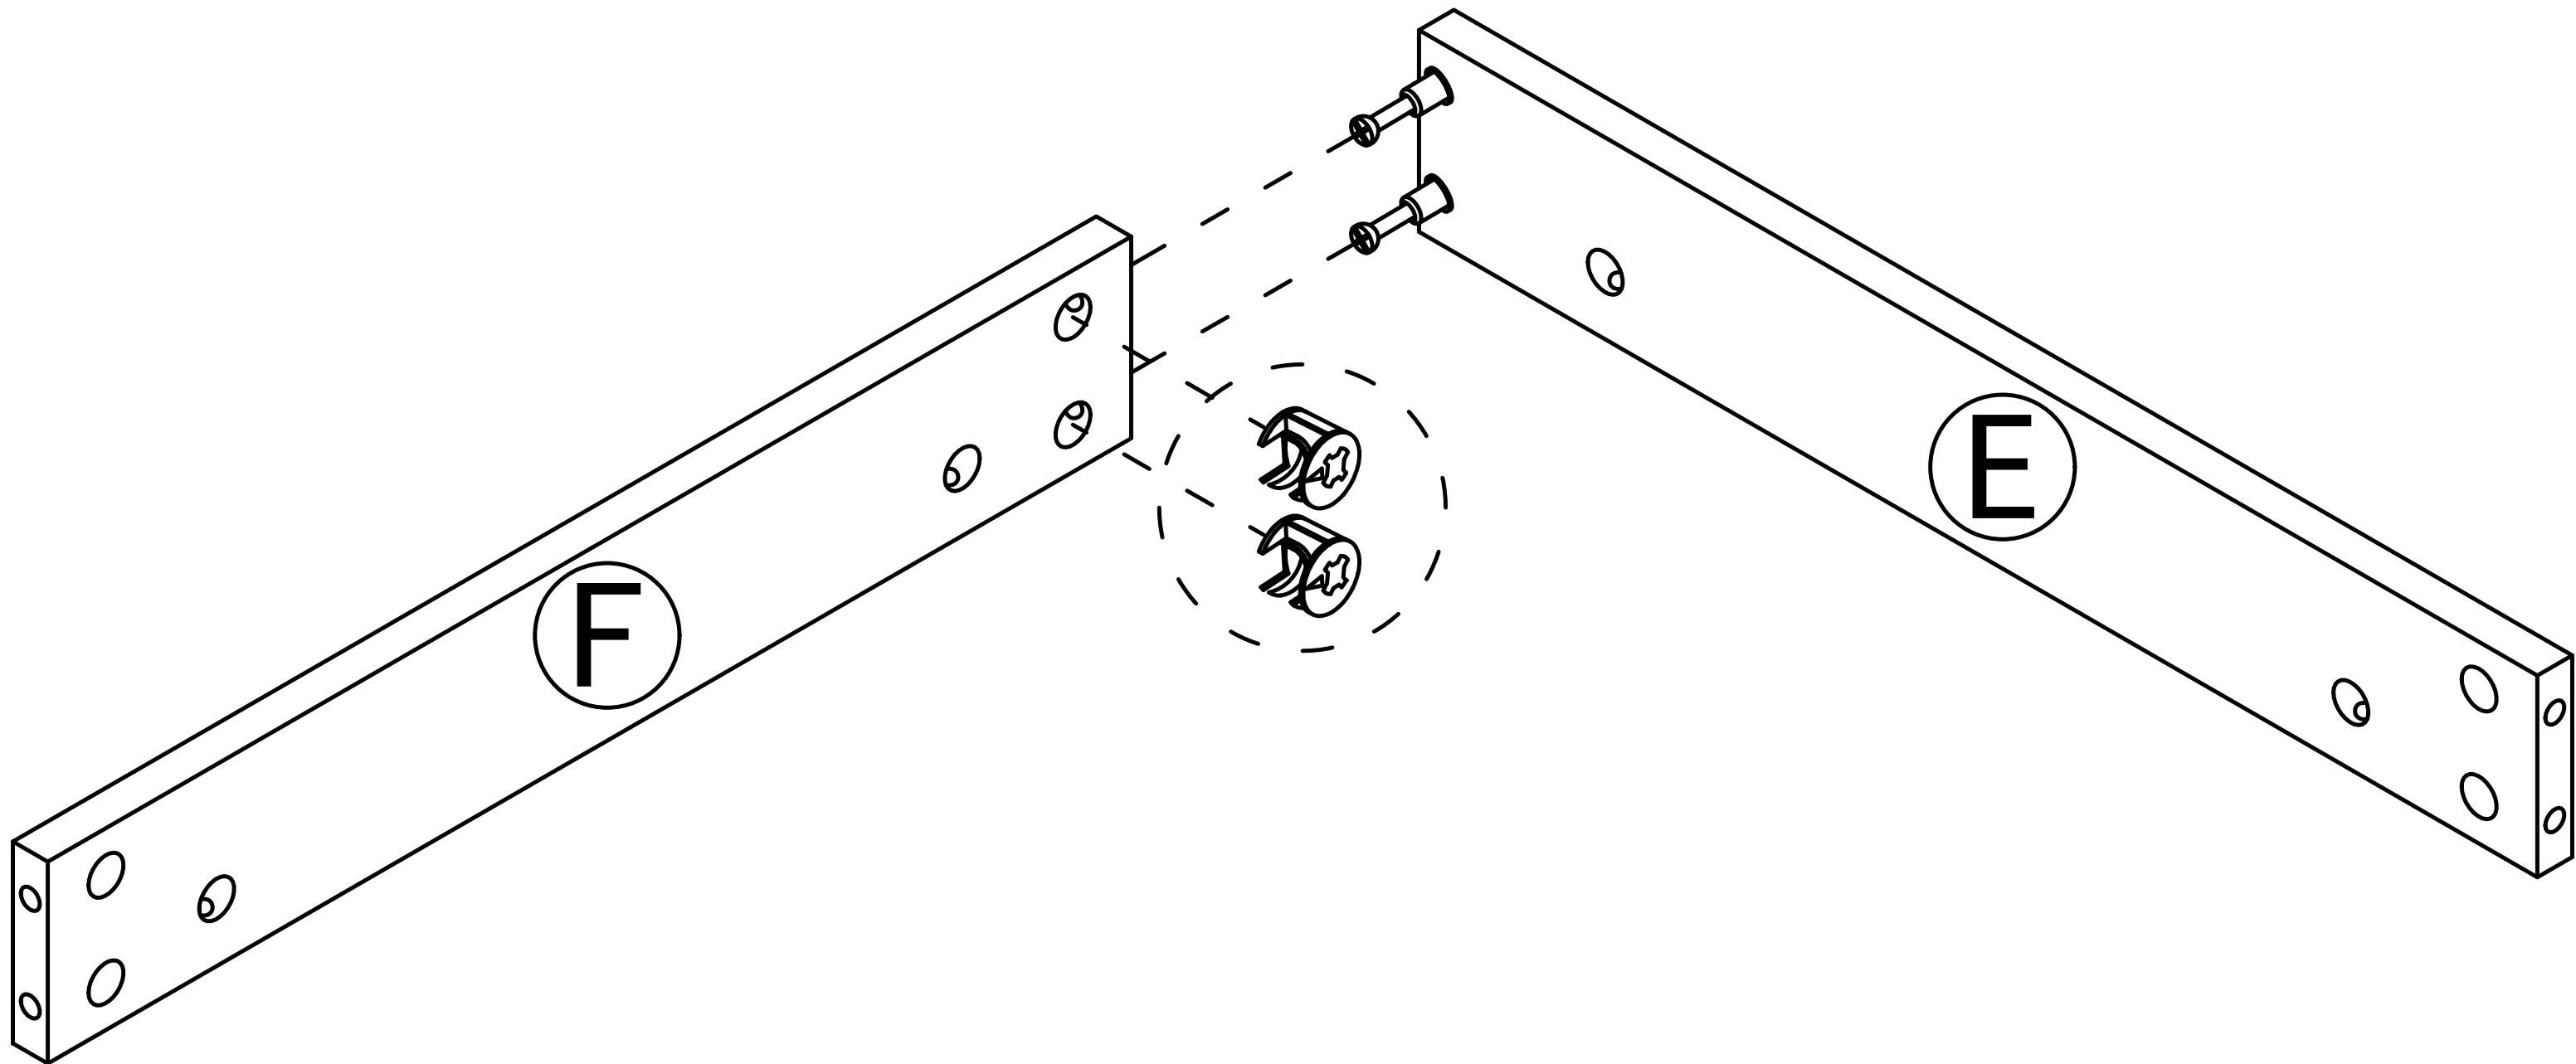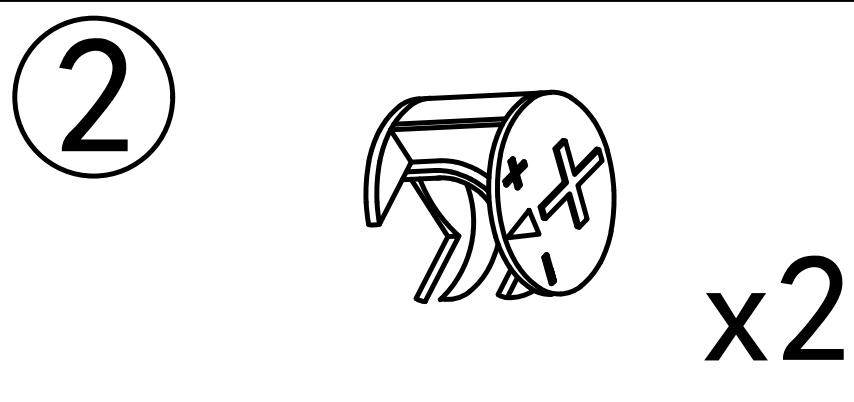


Step 4

2

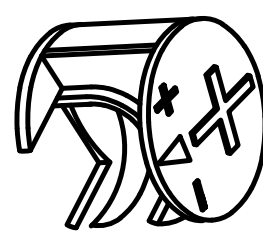


x4

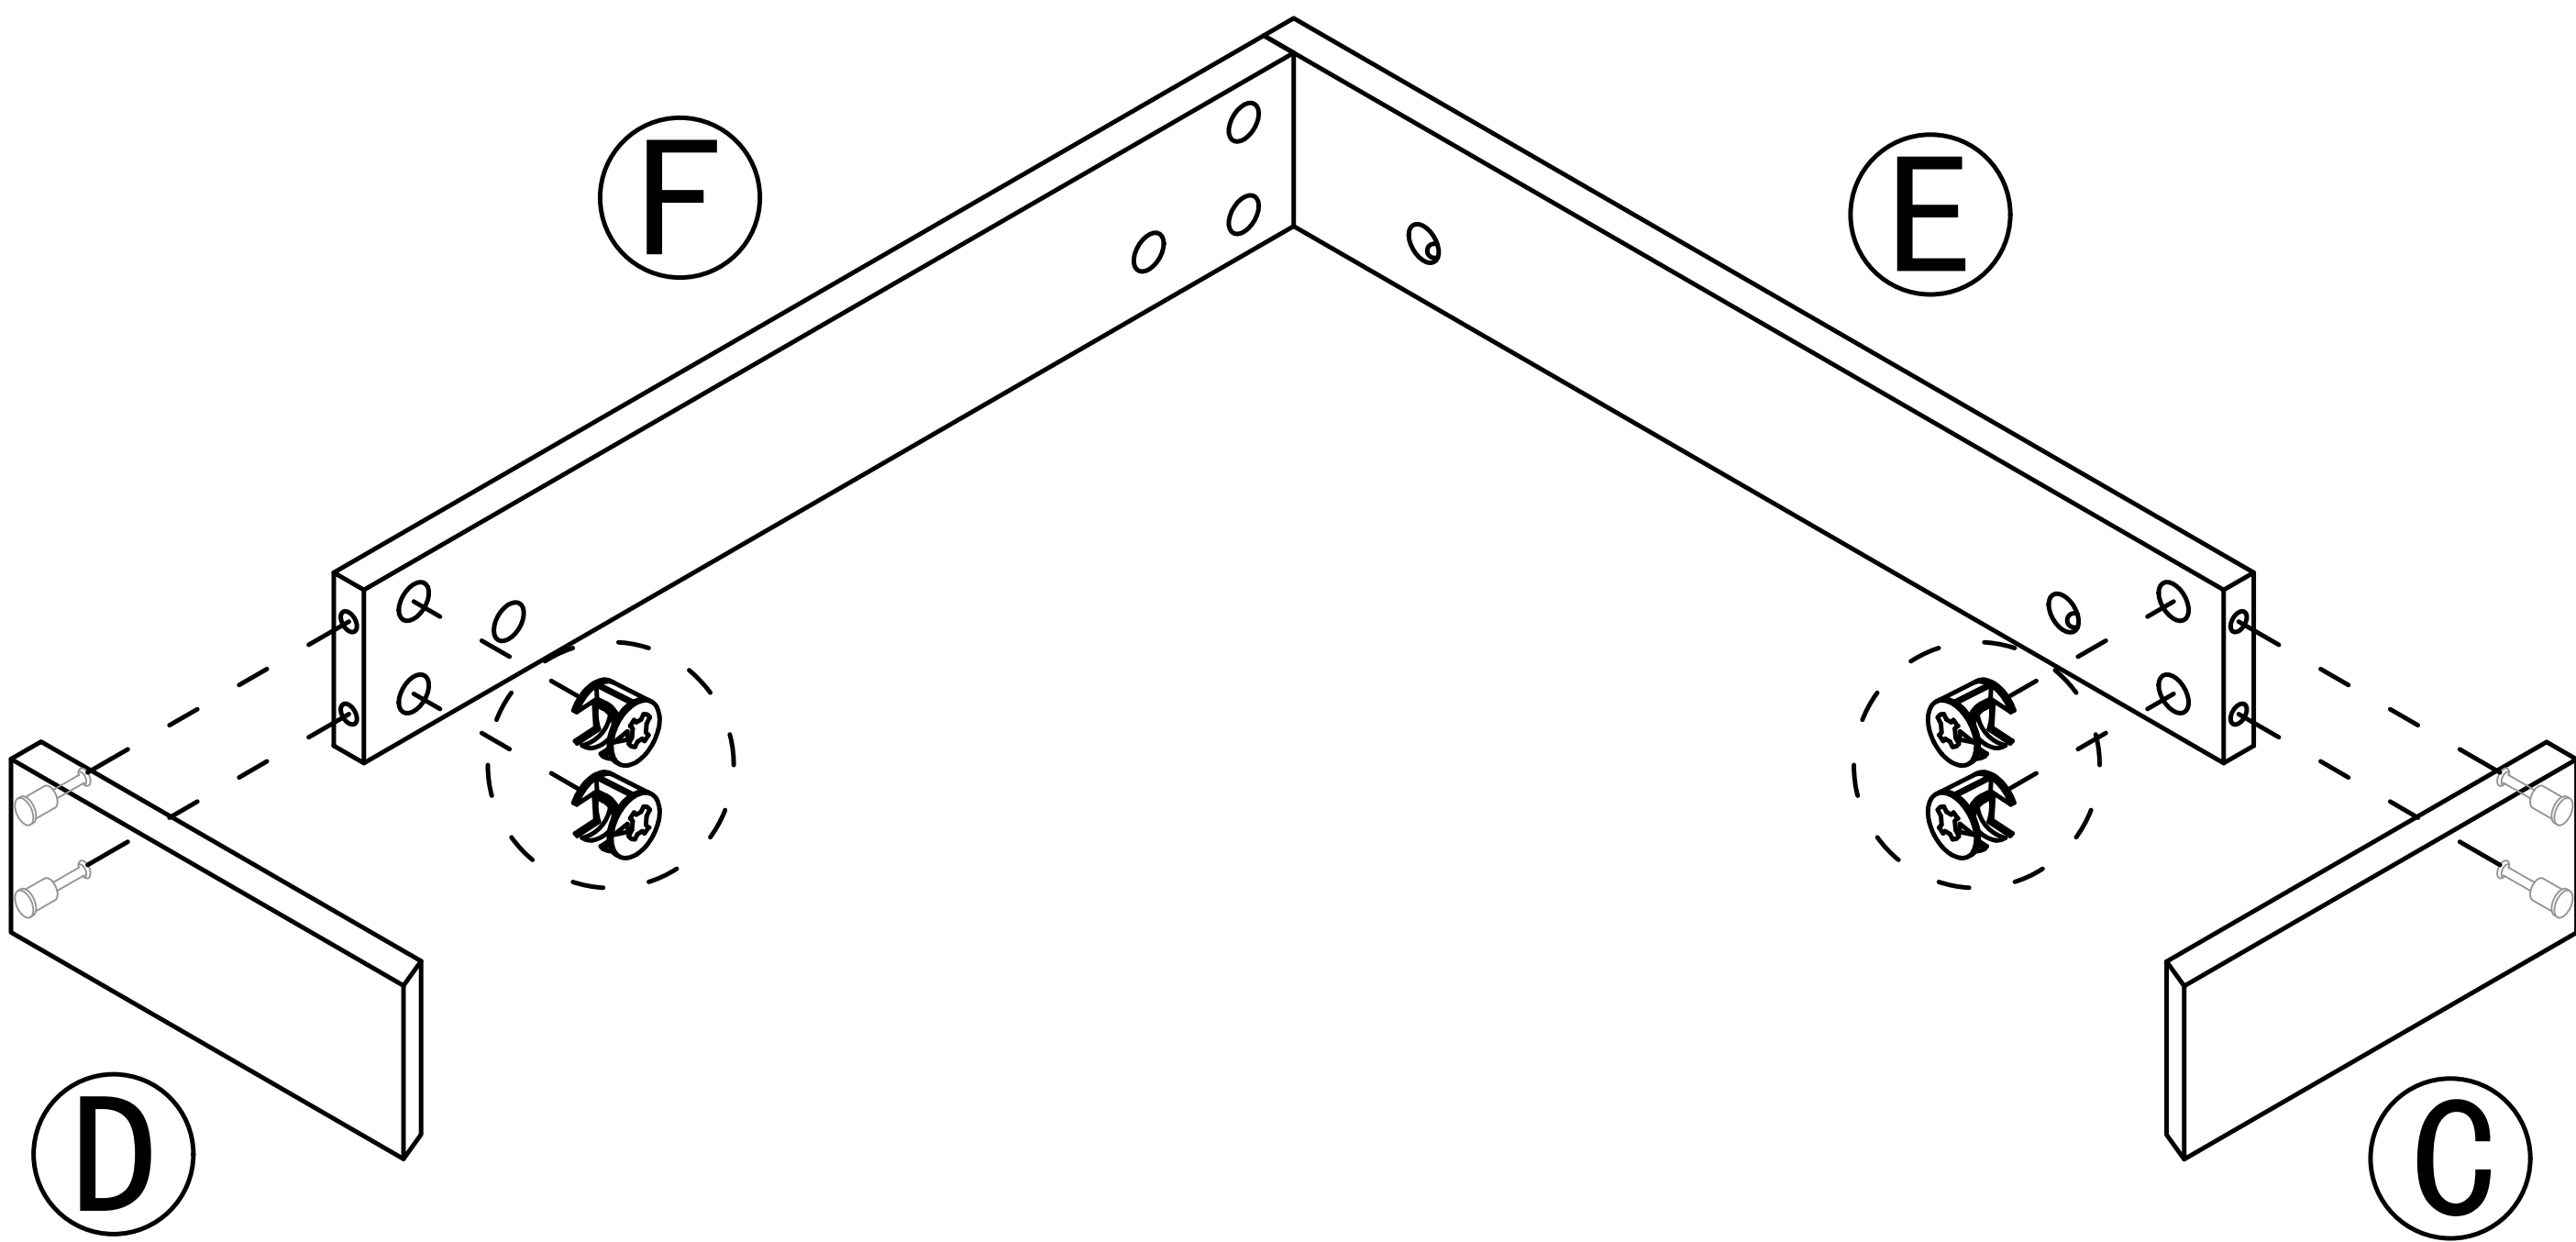


Step 5

1

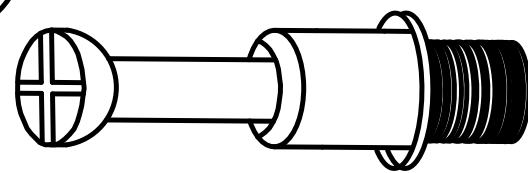


x8

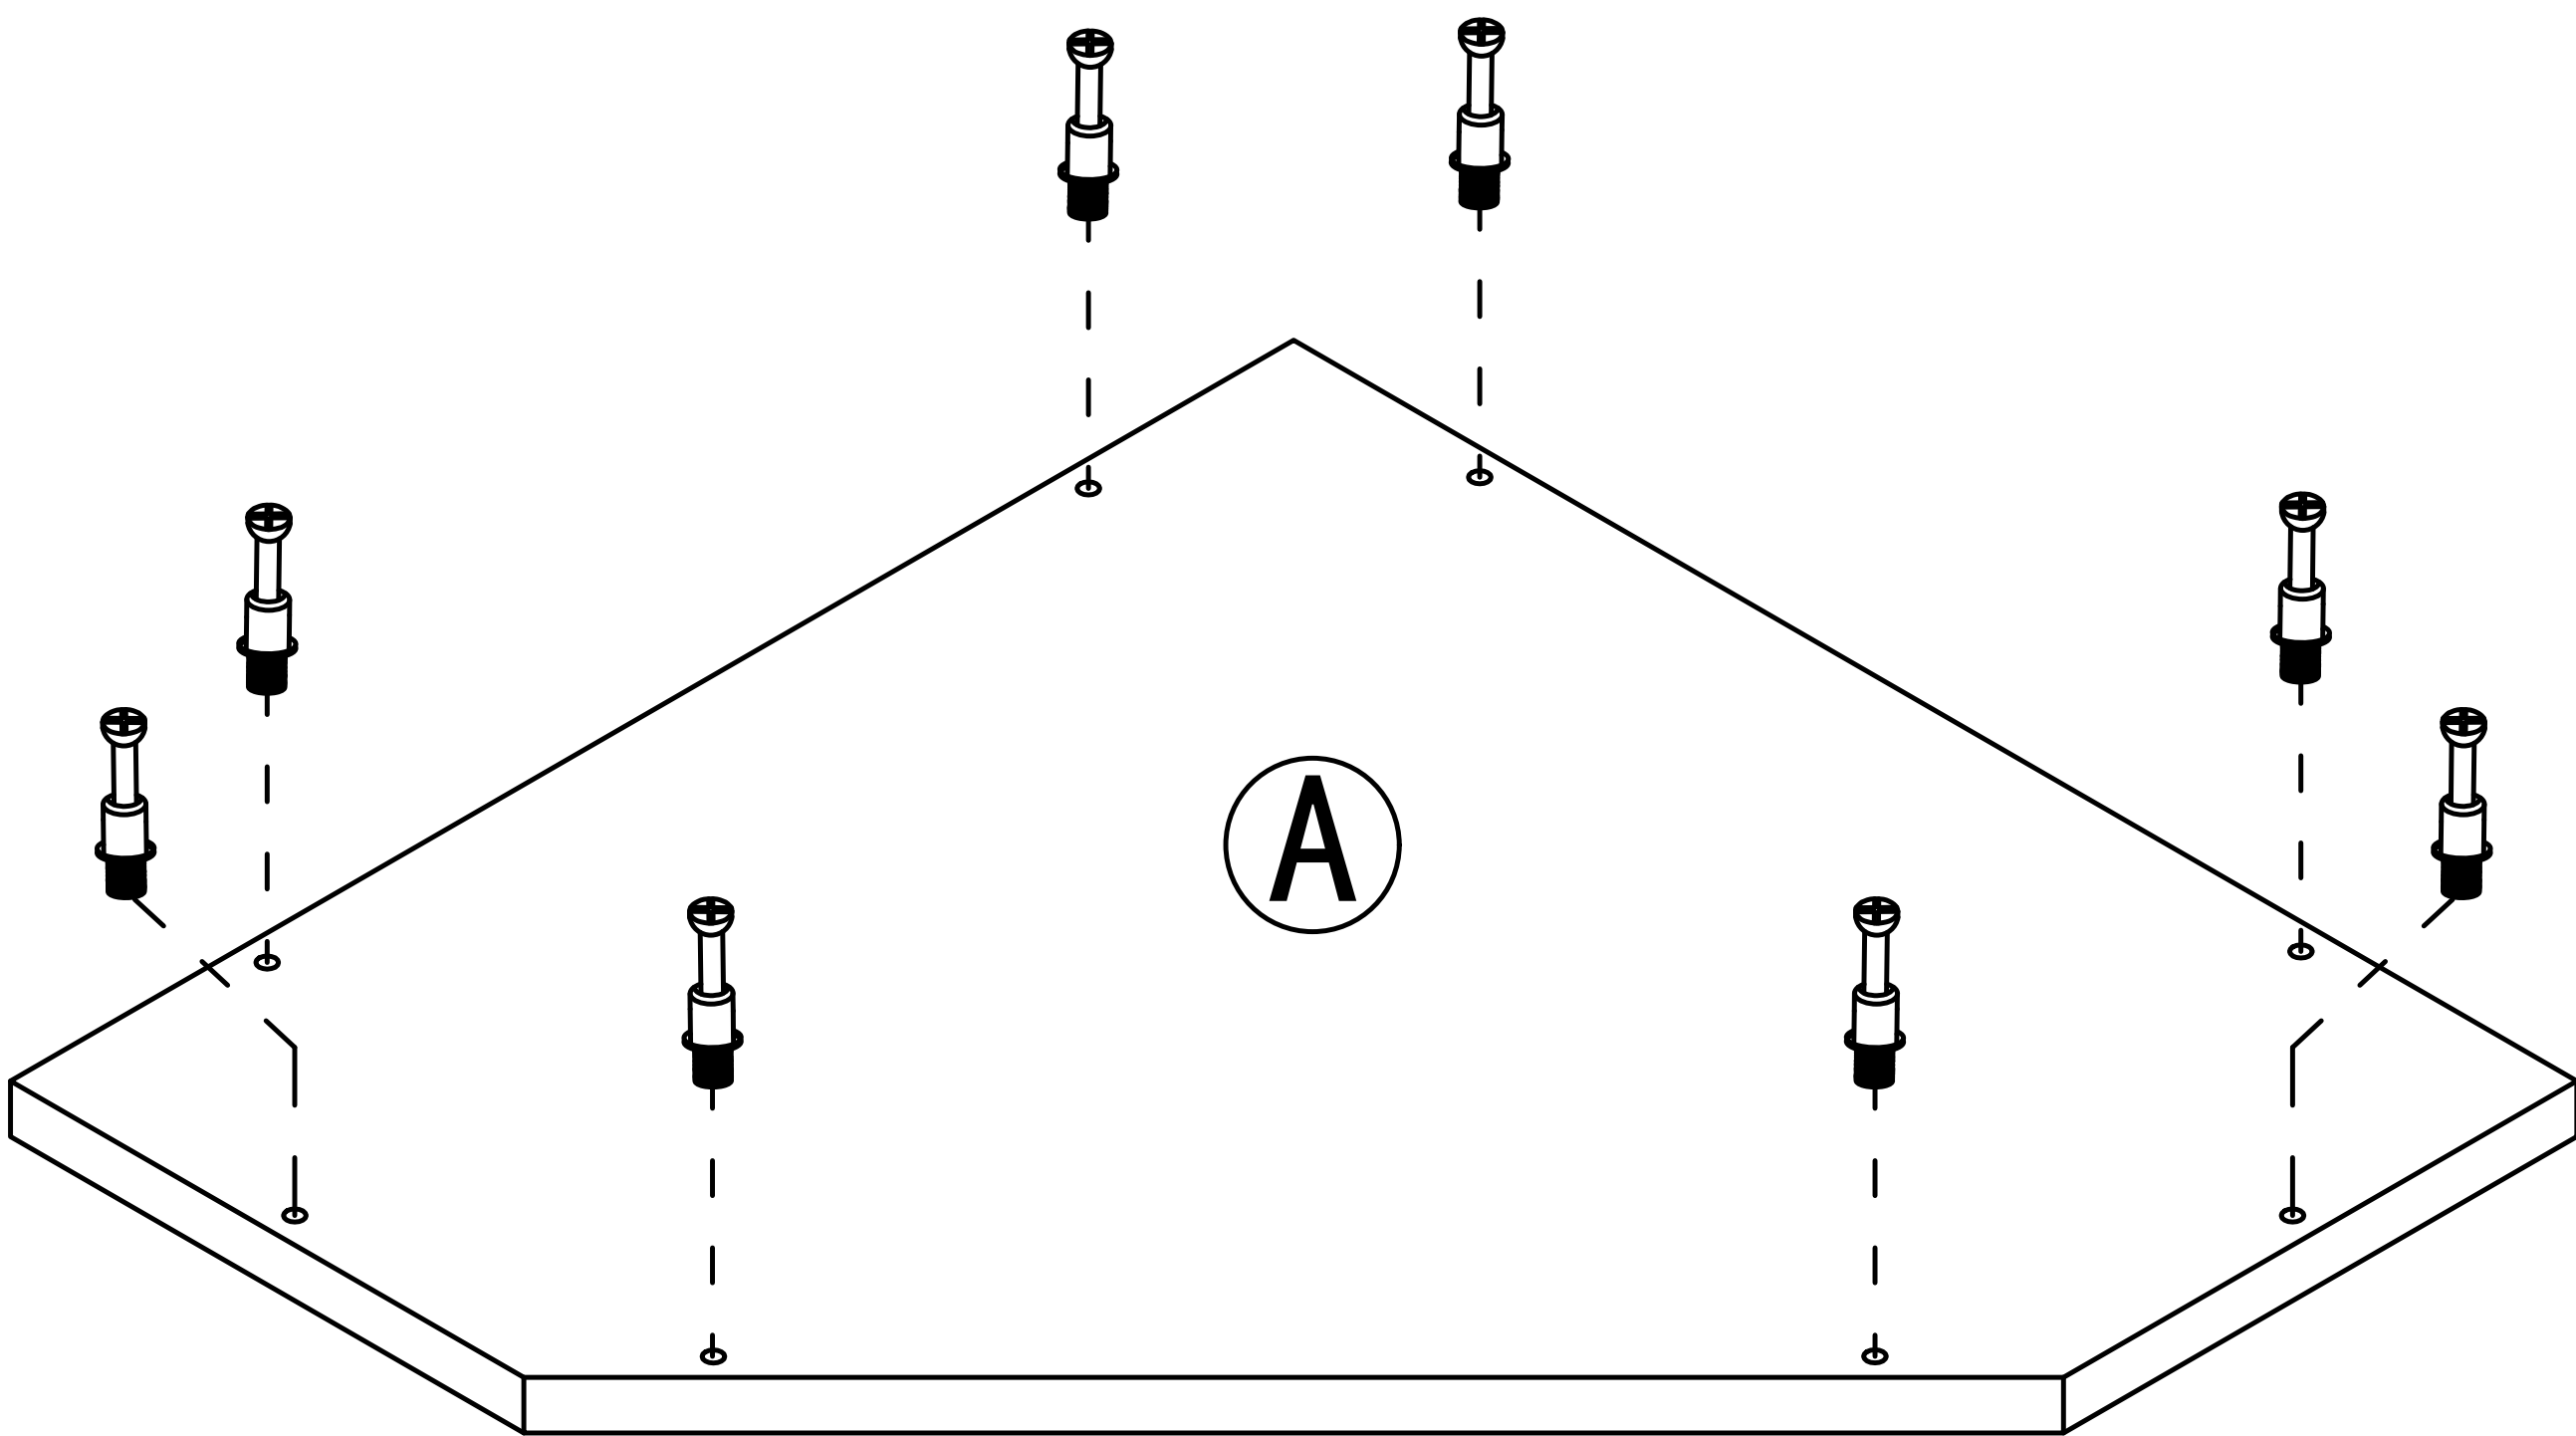


Step 6

2

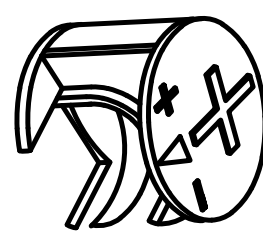


x6

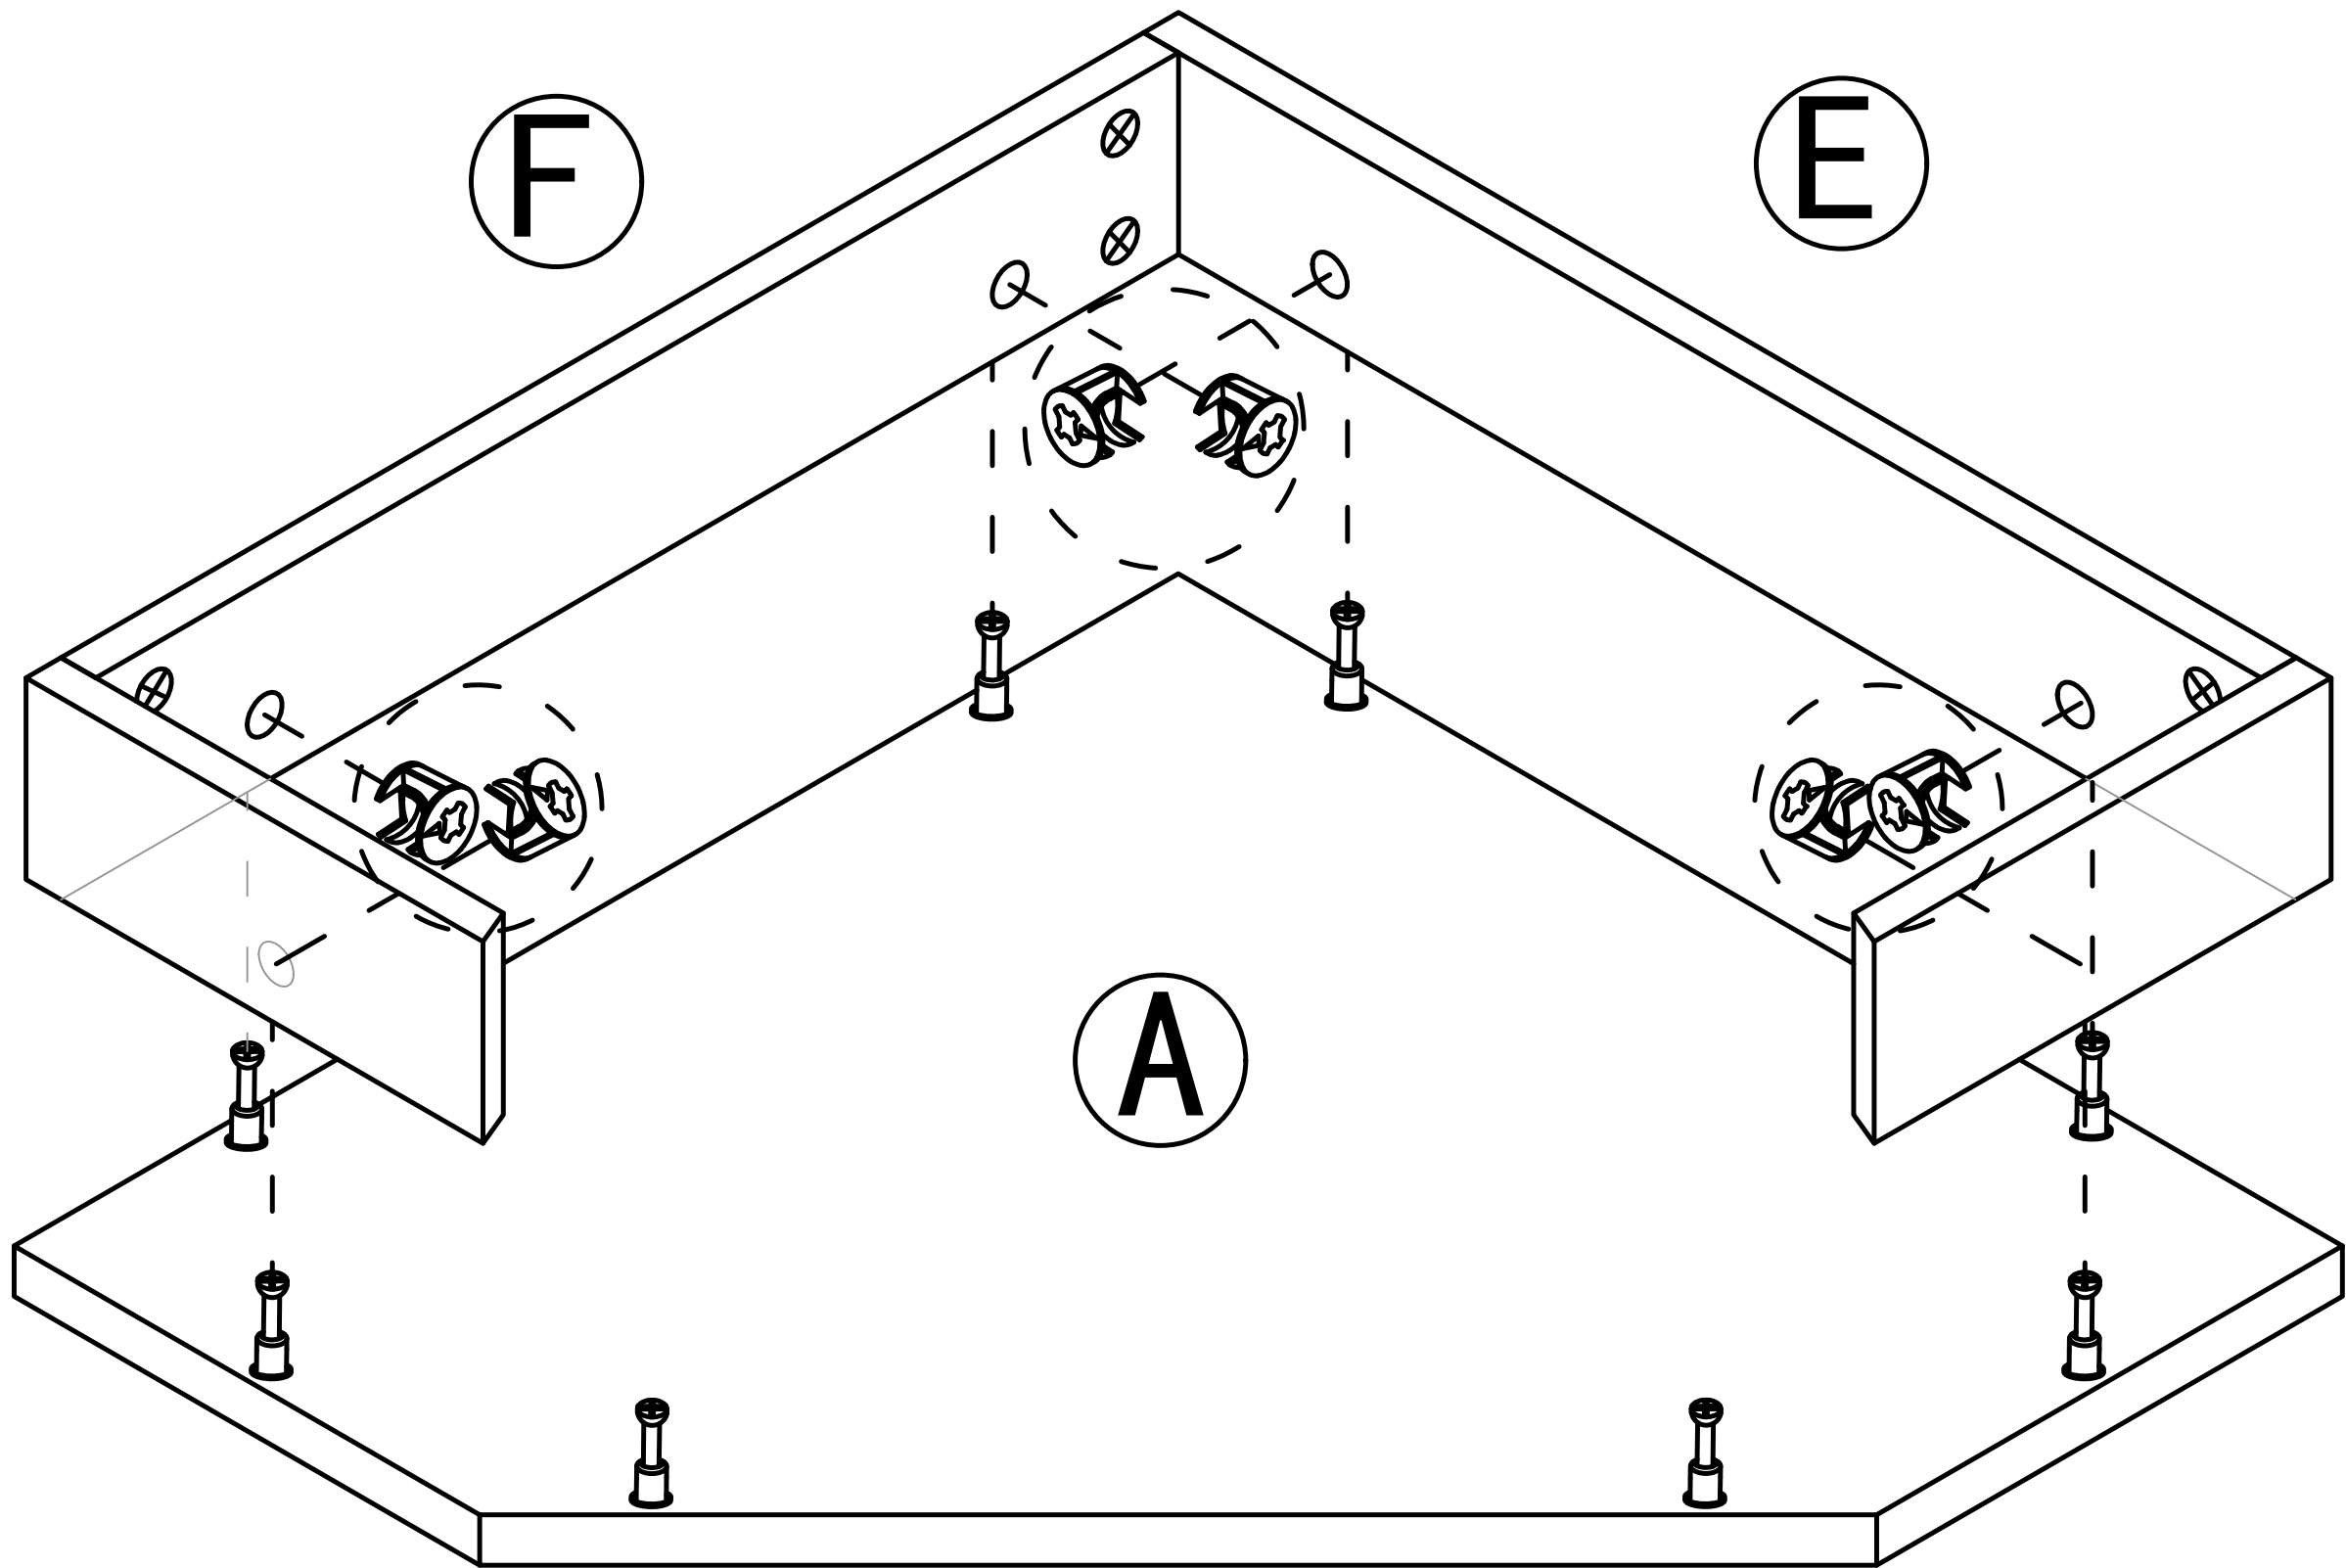


Step 7

2

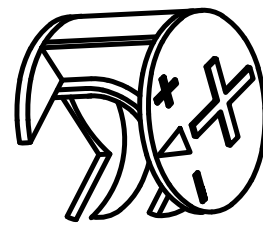


x2

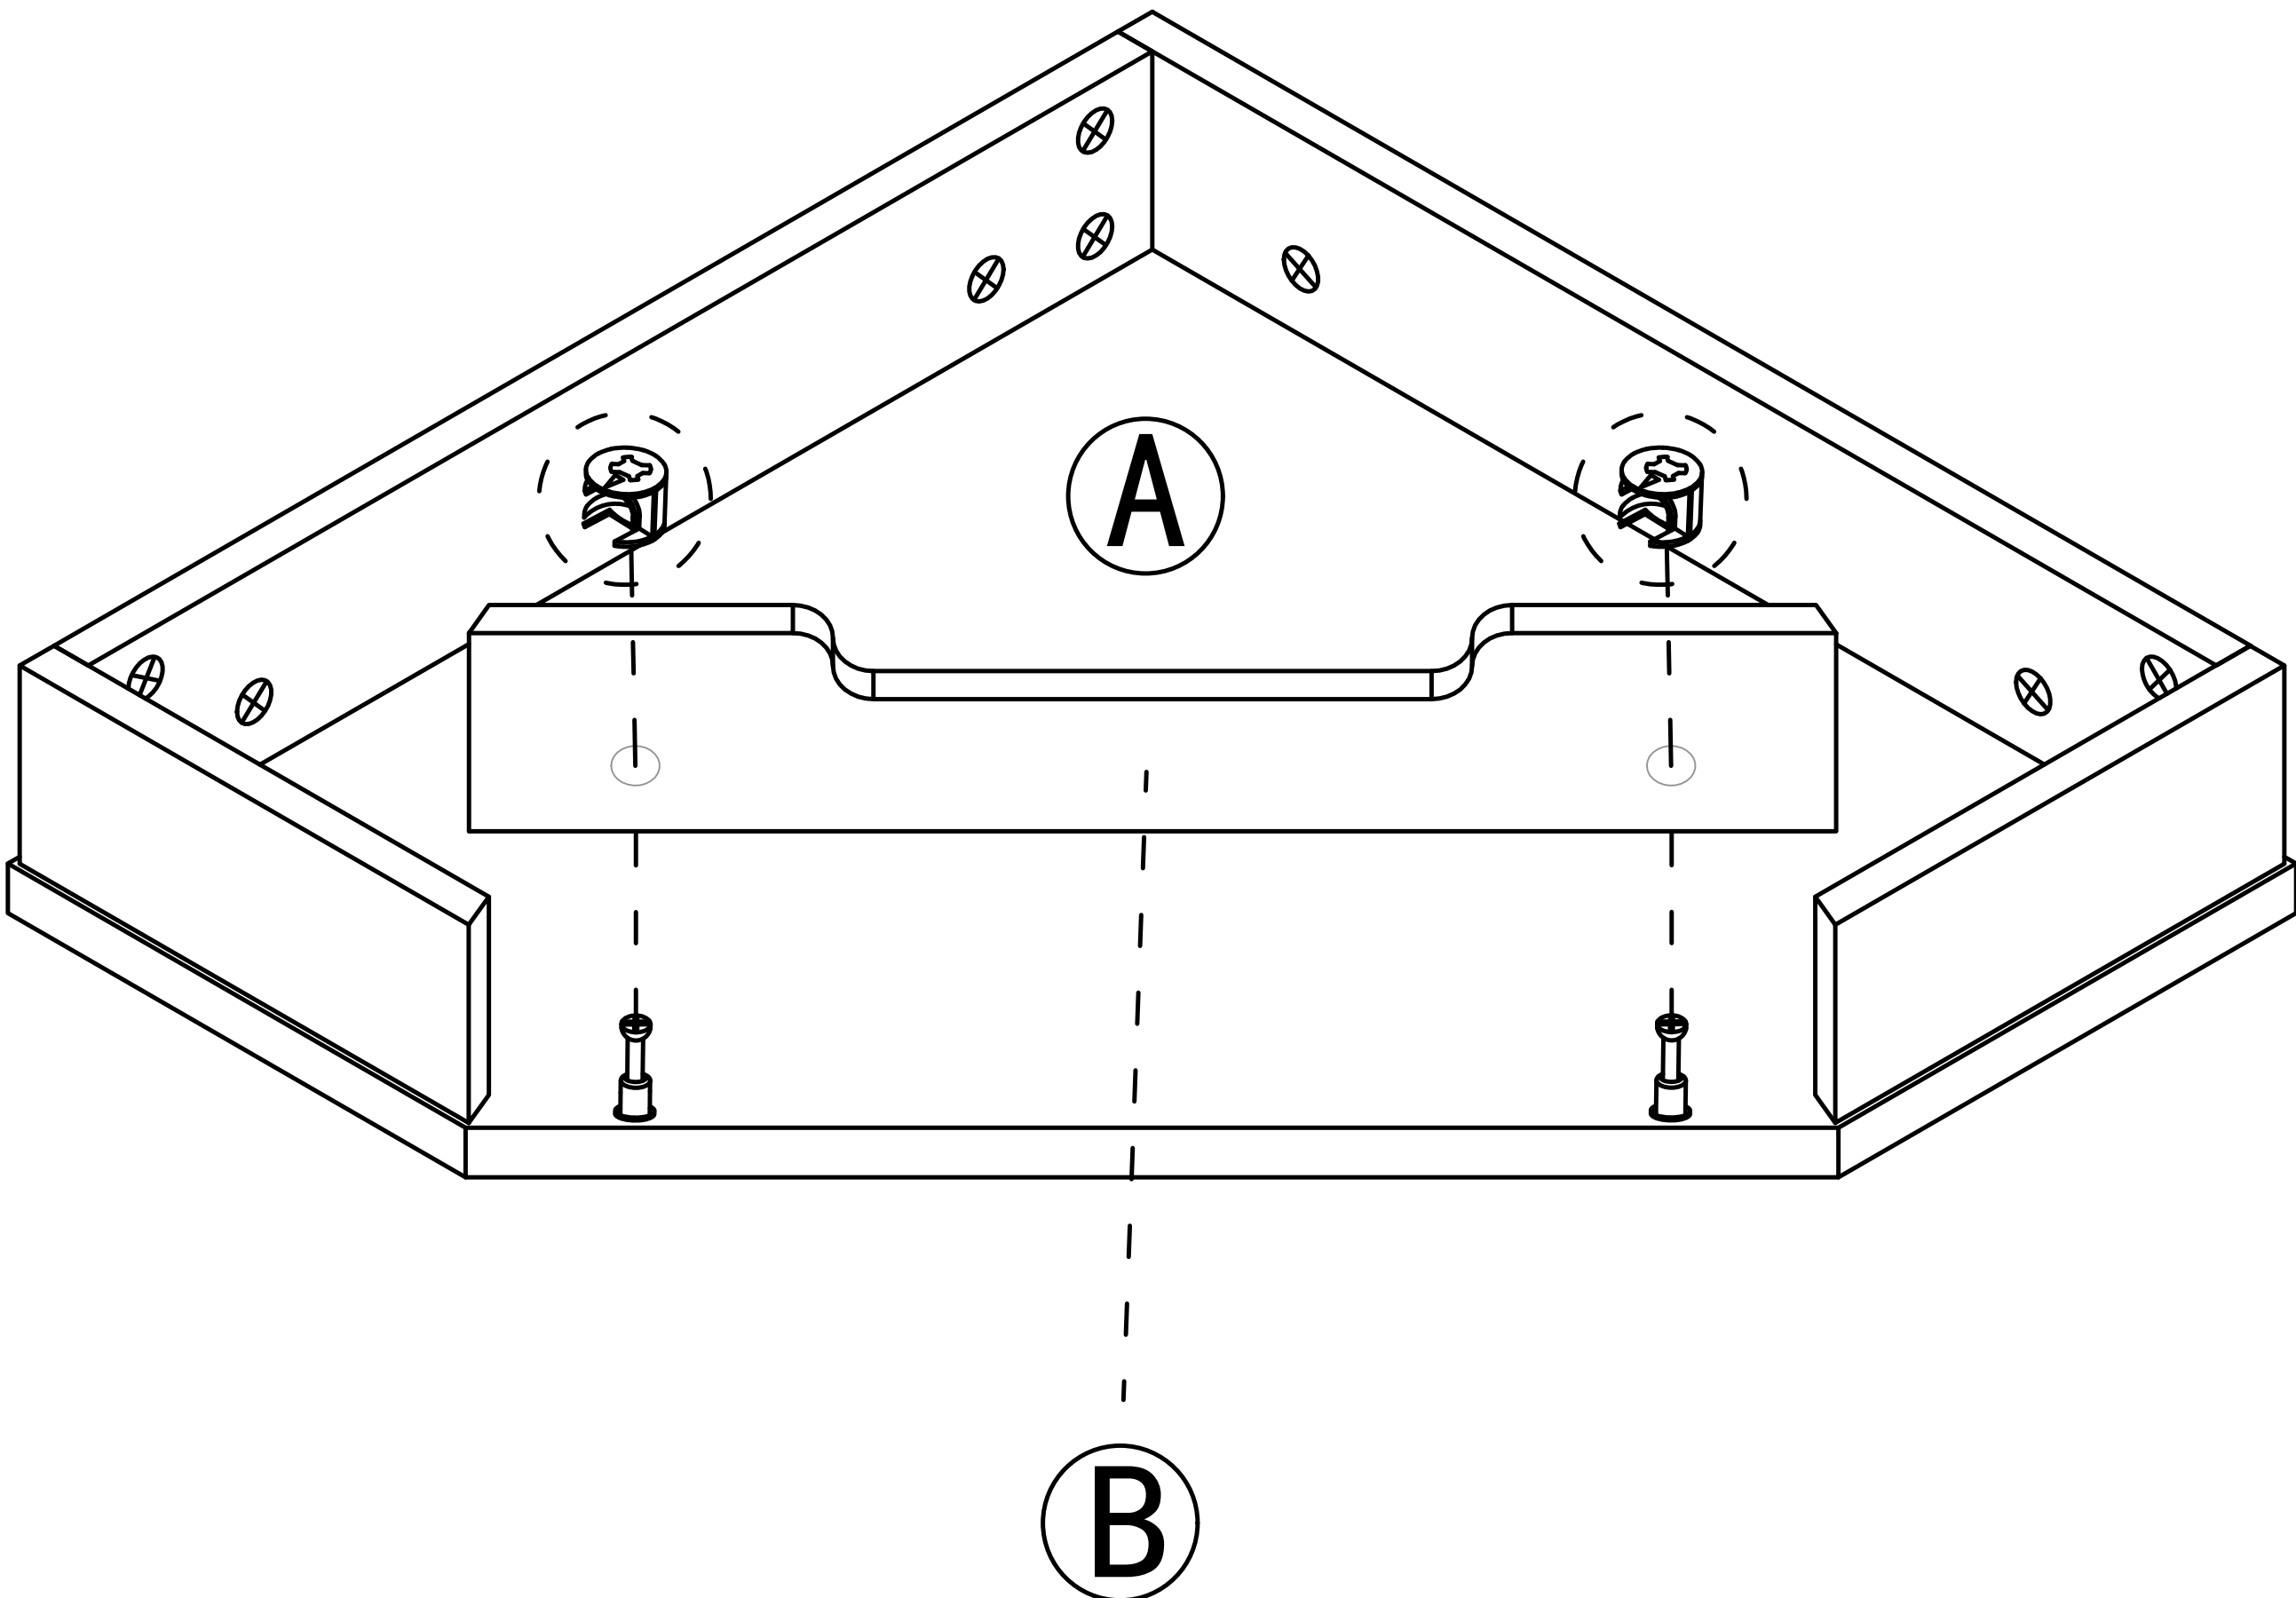


Step 8

3

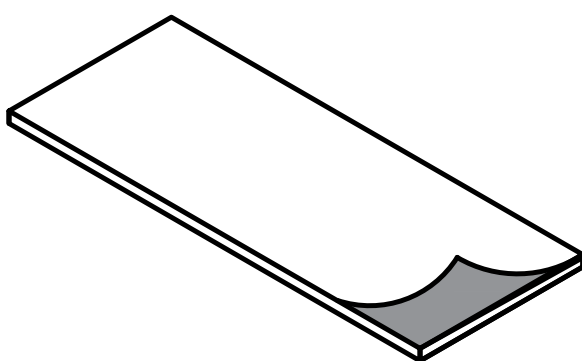


x6

Tear off release paper and stick the black foot pad on the board

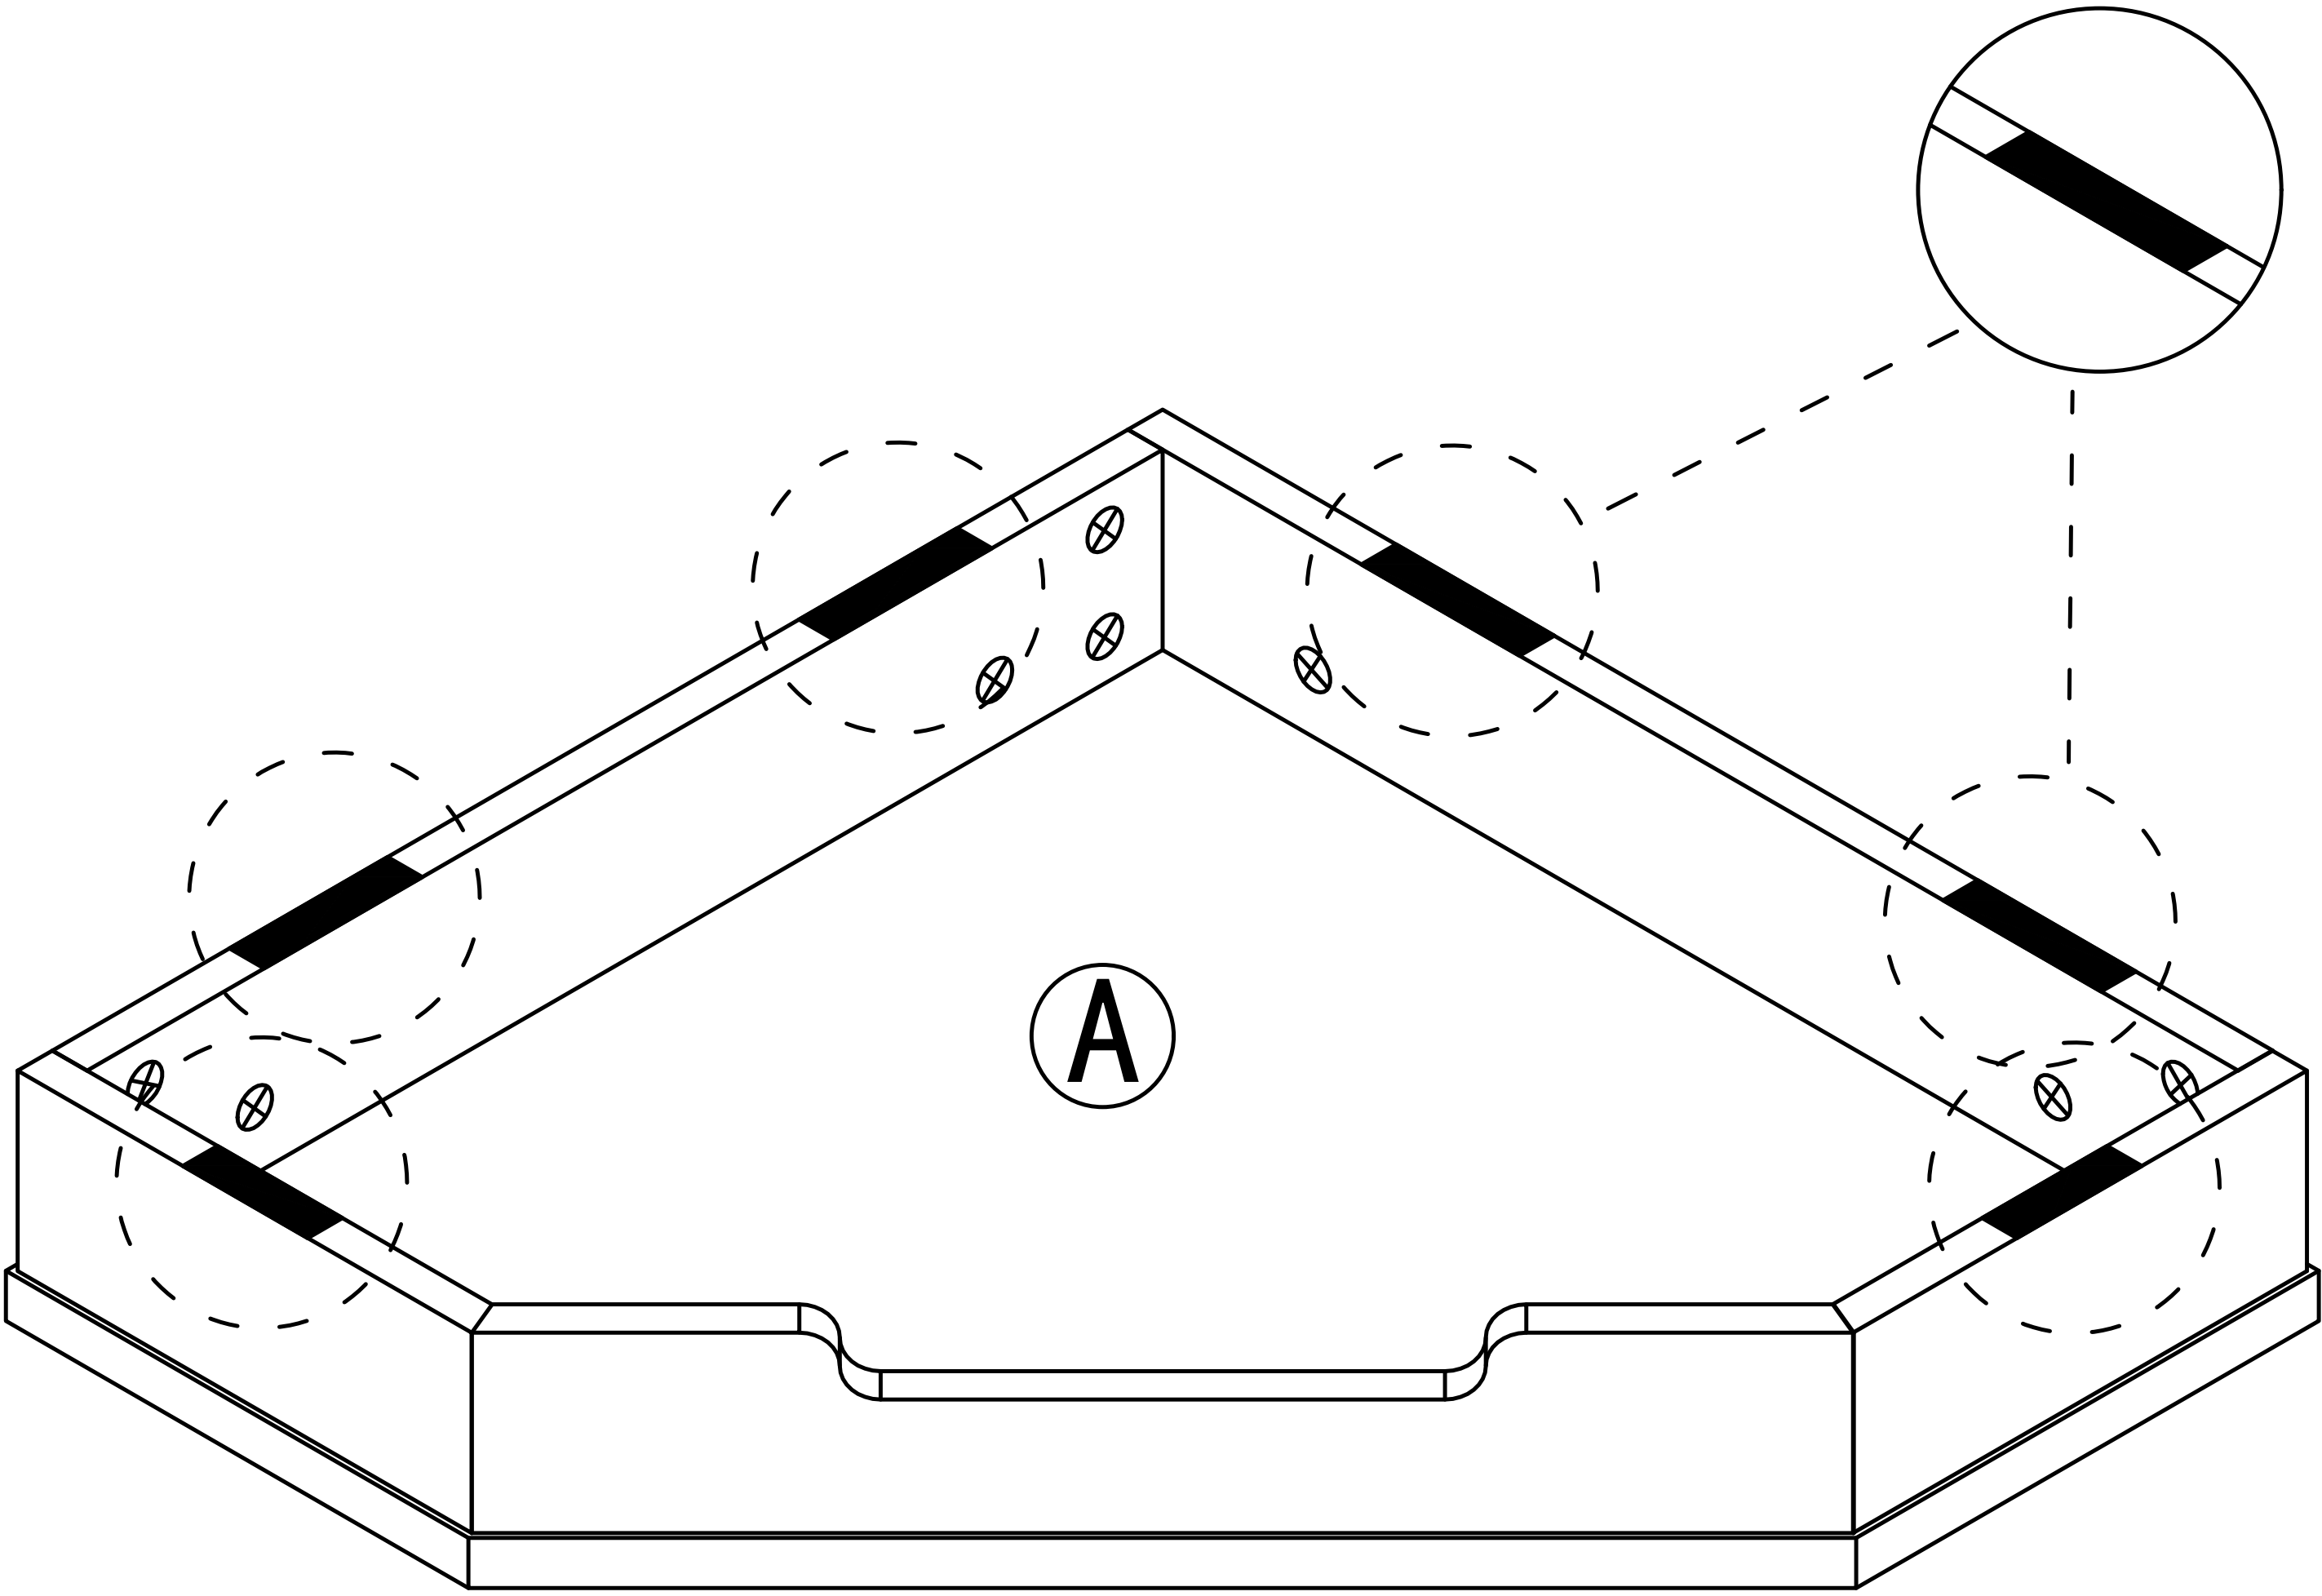


Step 9

1

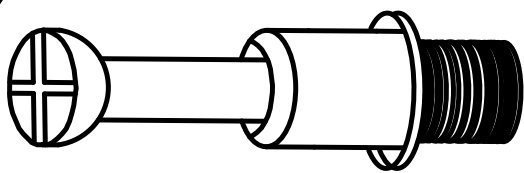


x2

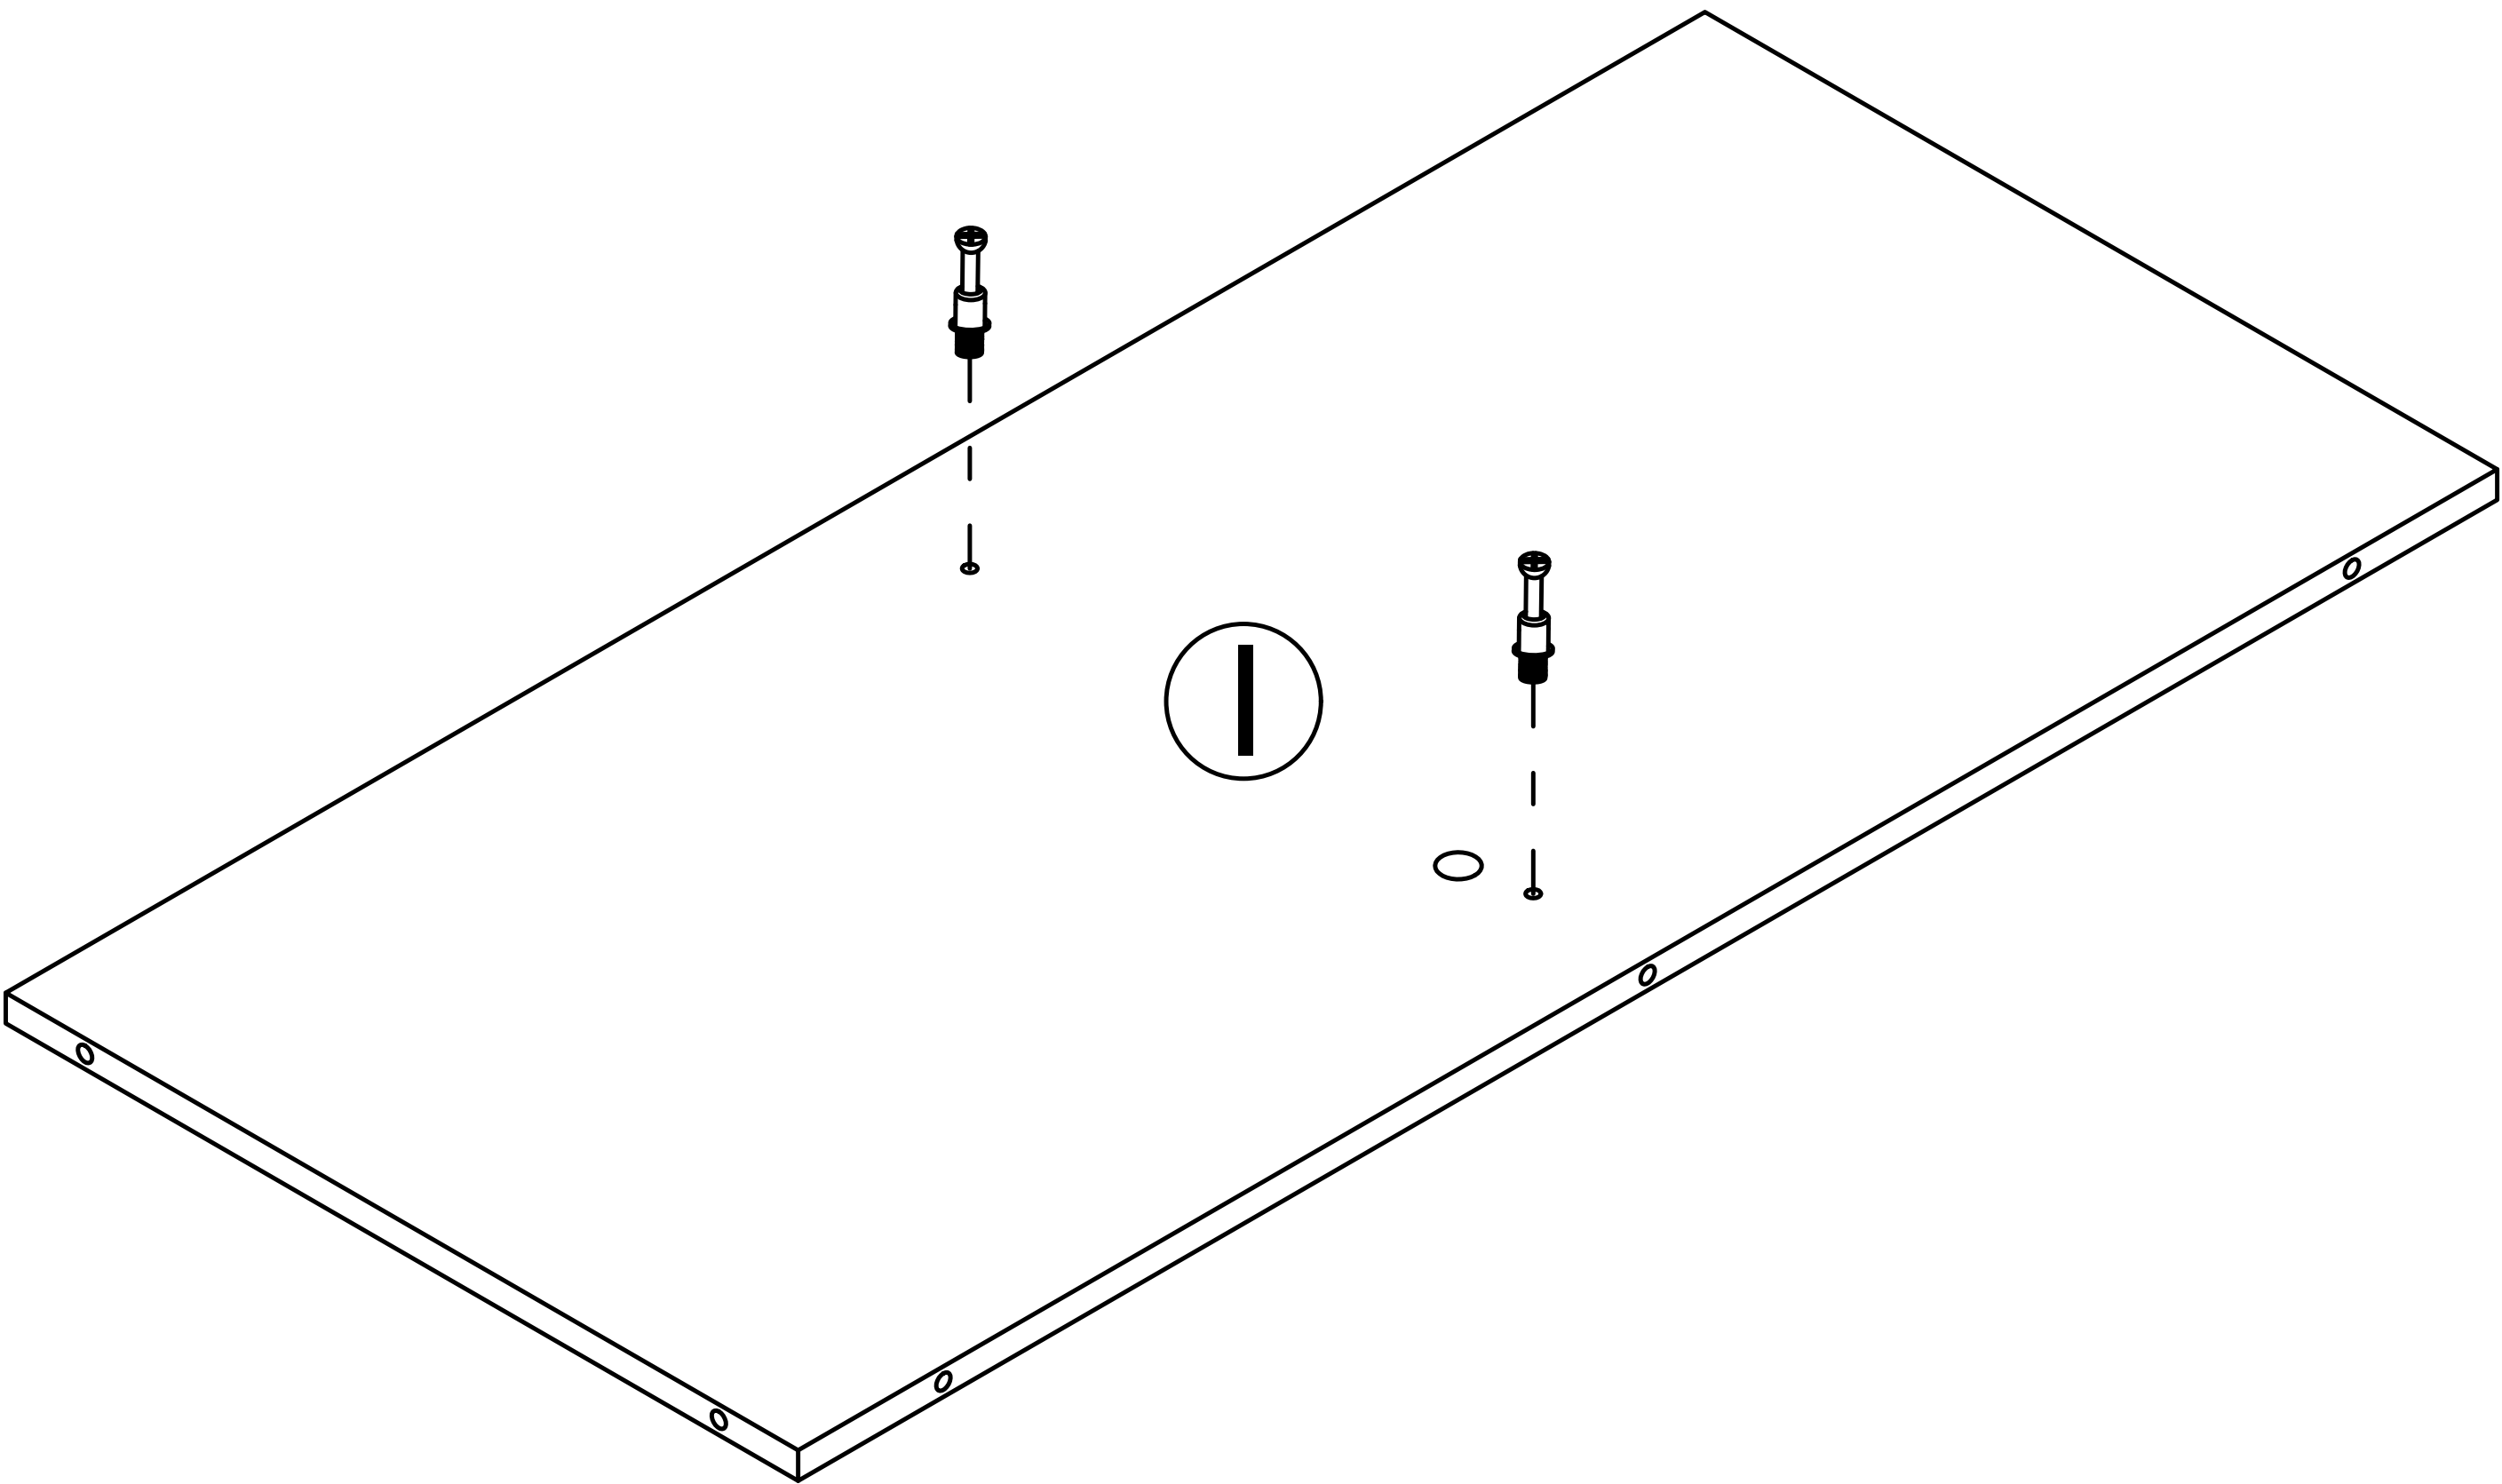


Step 10

2

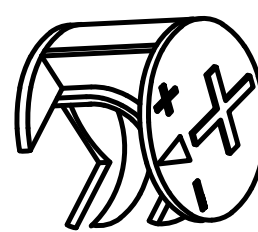

x2


Attention: Don't let the I-board press the lamp wire.

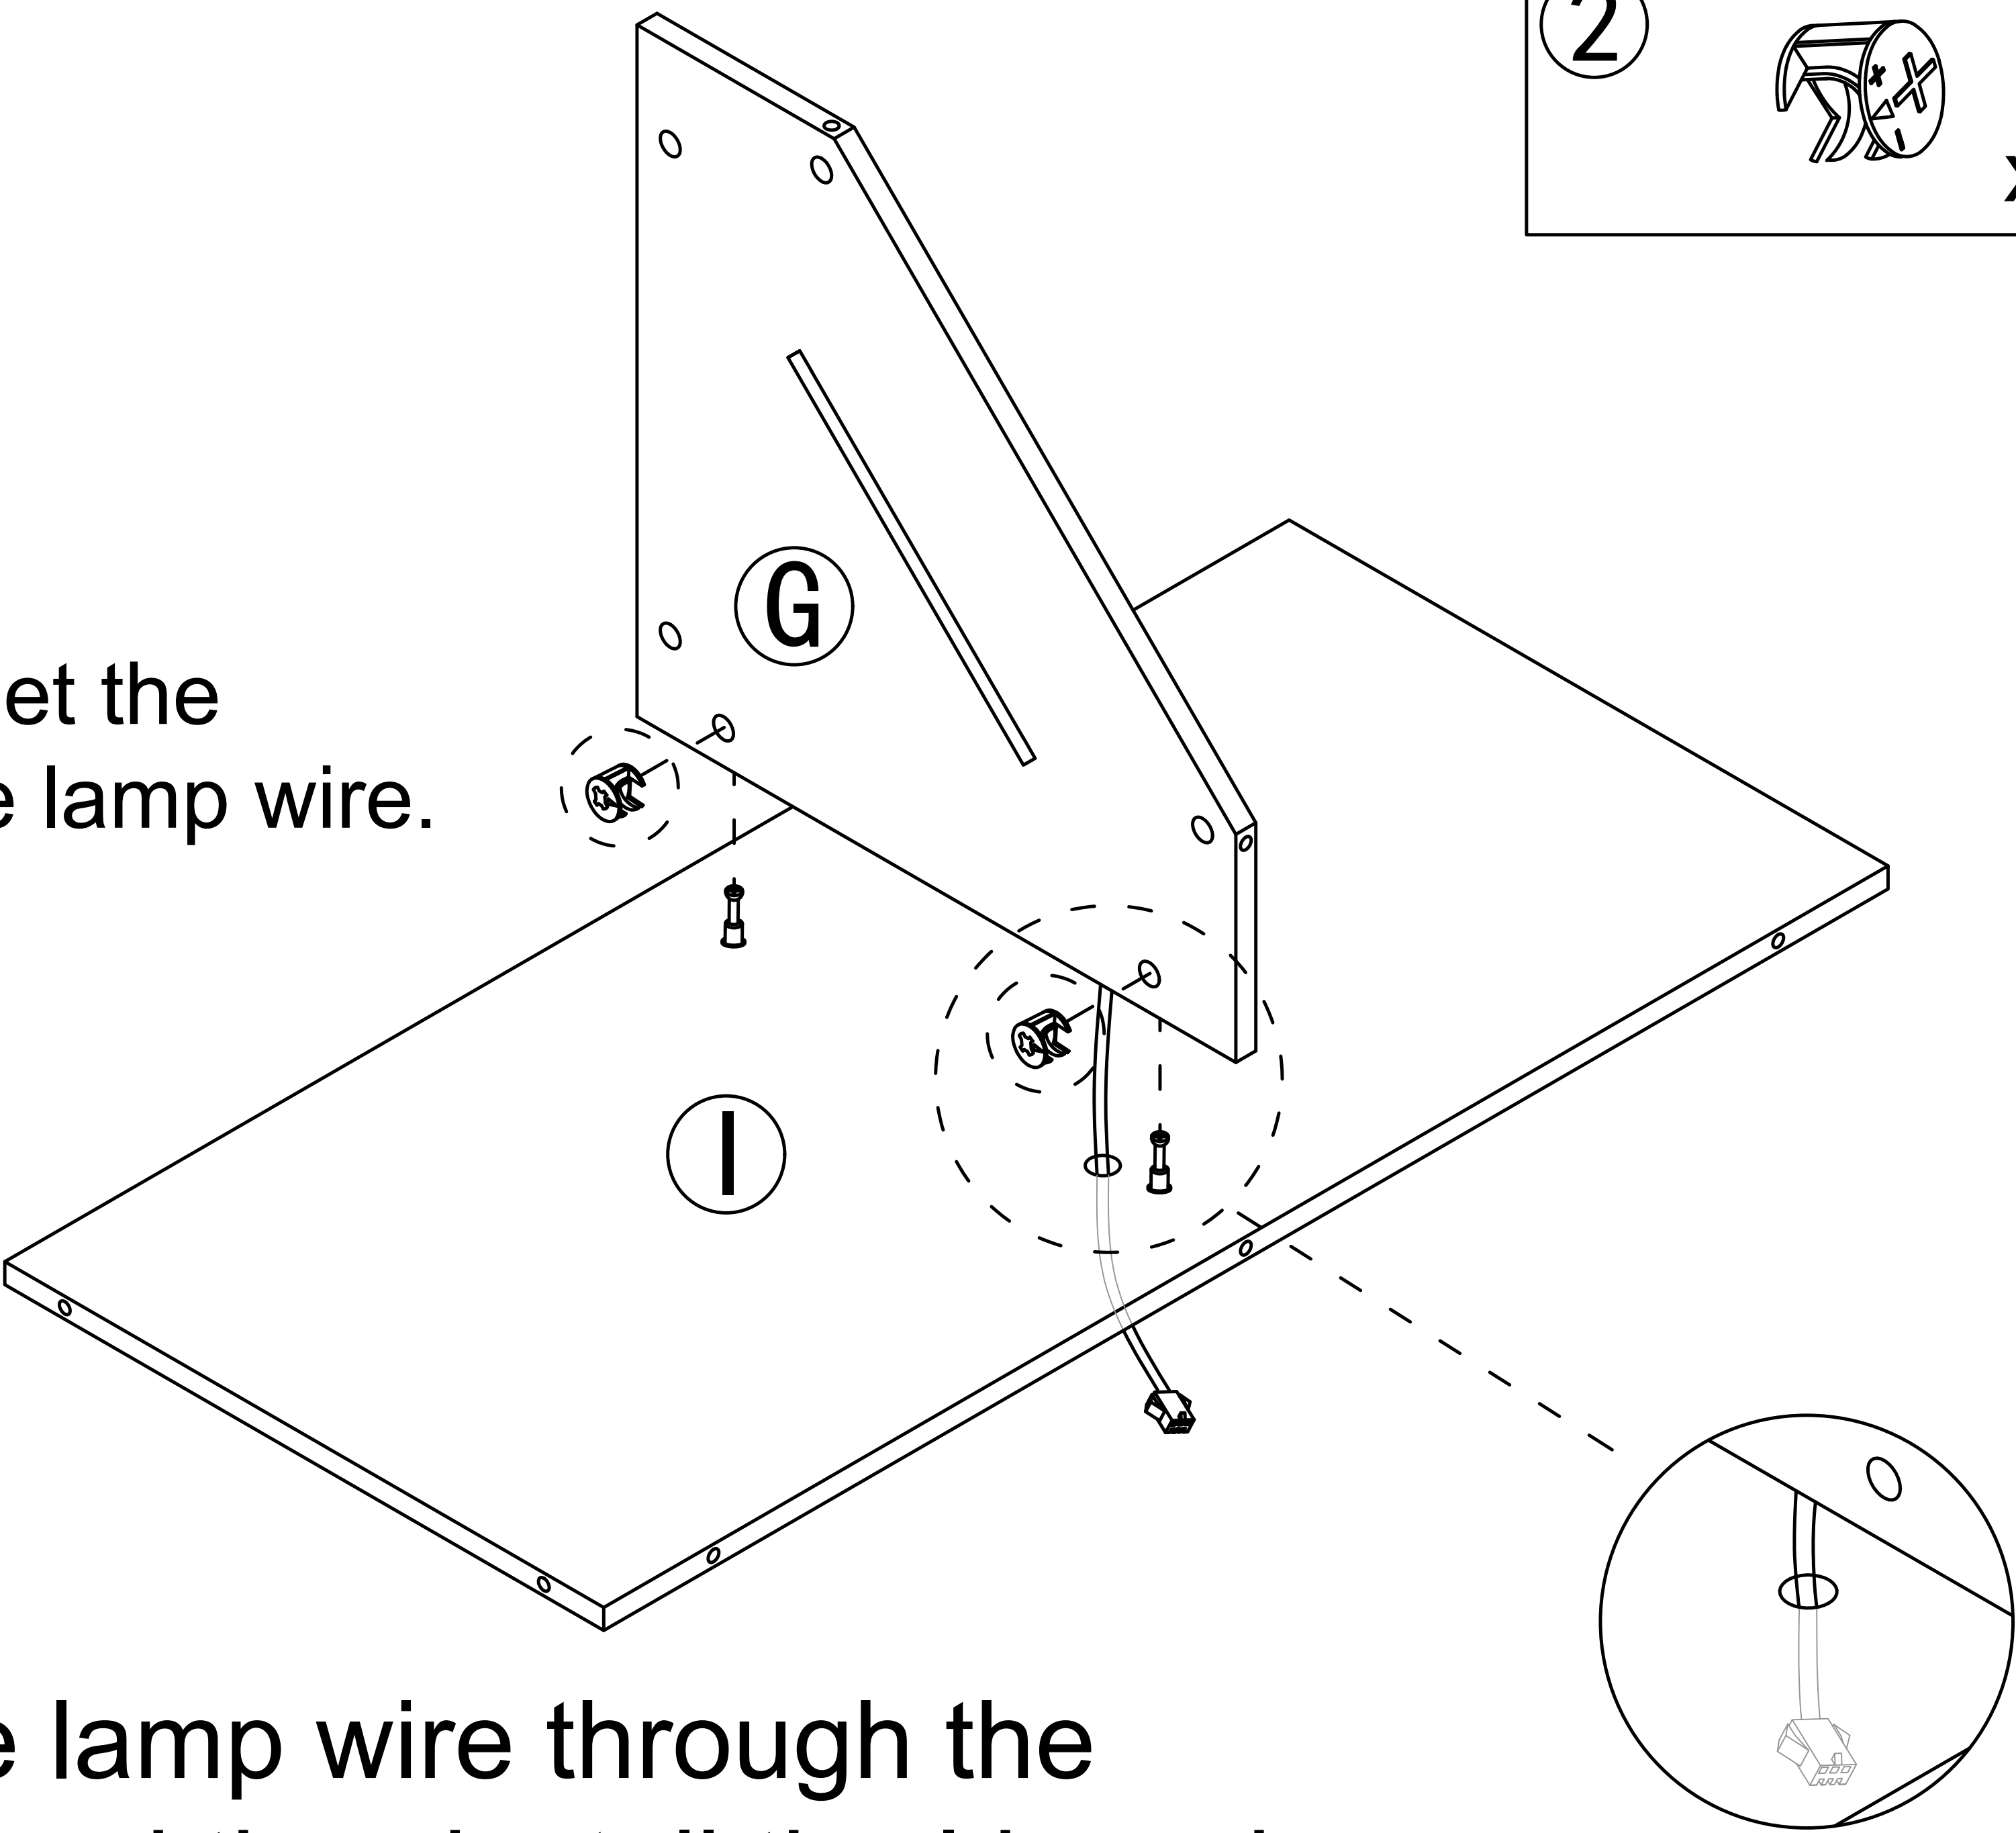


Note: pass the lamp wire through the through hole, and then install the I board.

Step 11

1

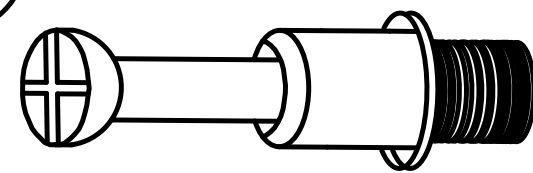


x5

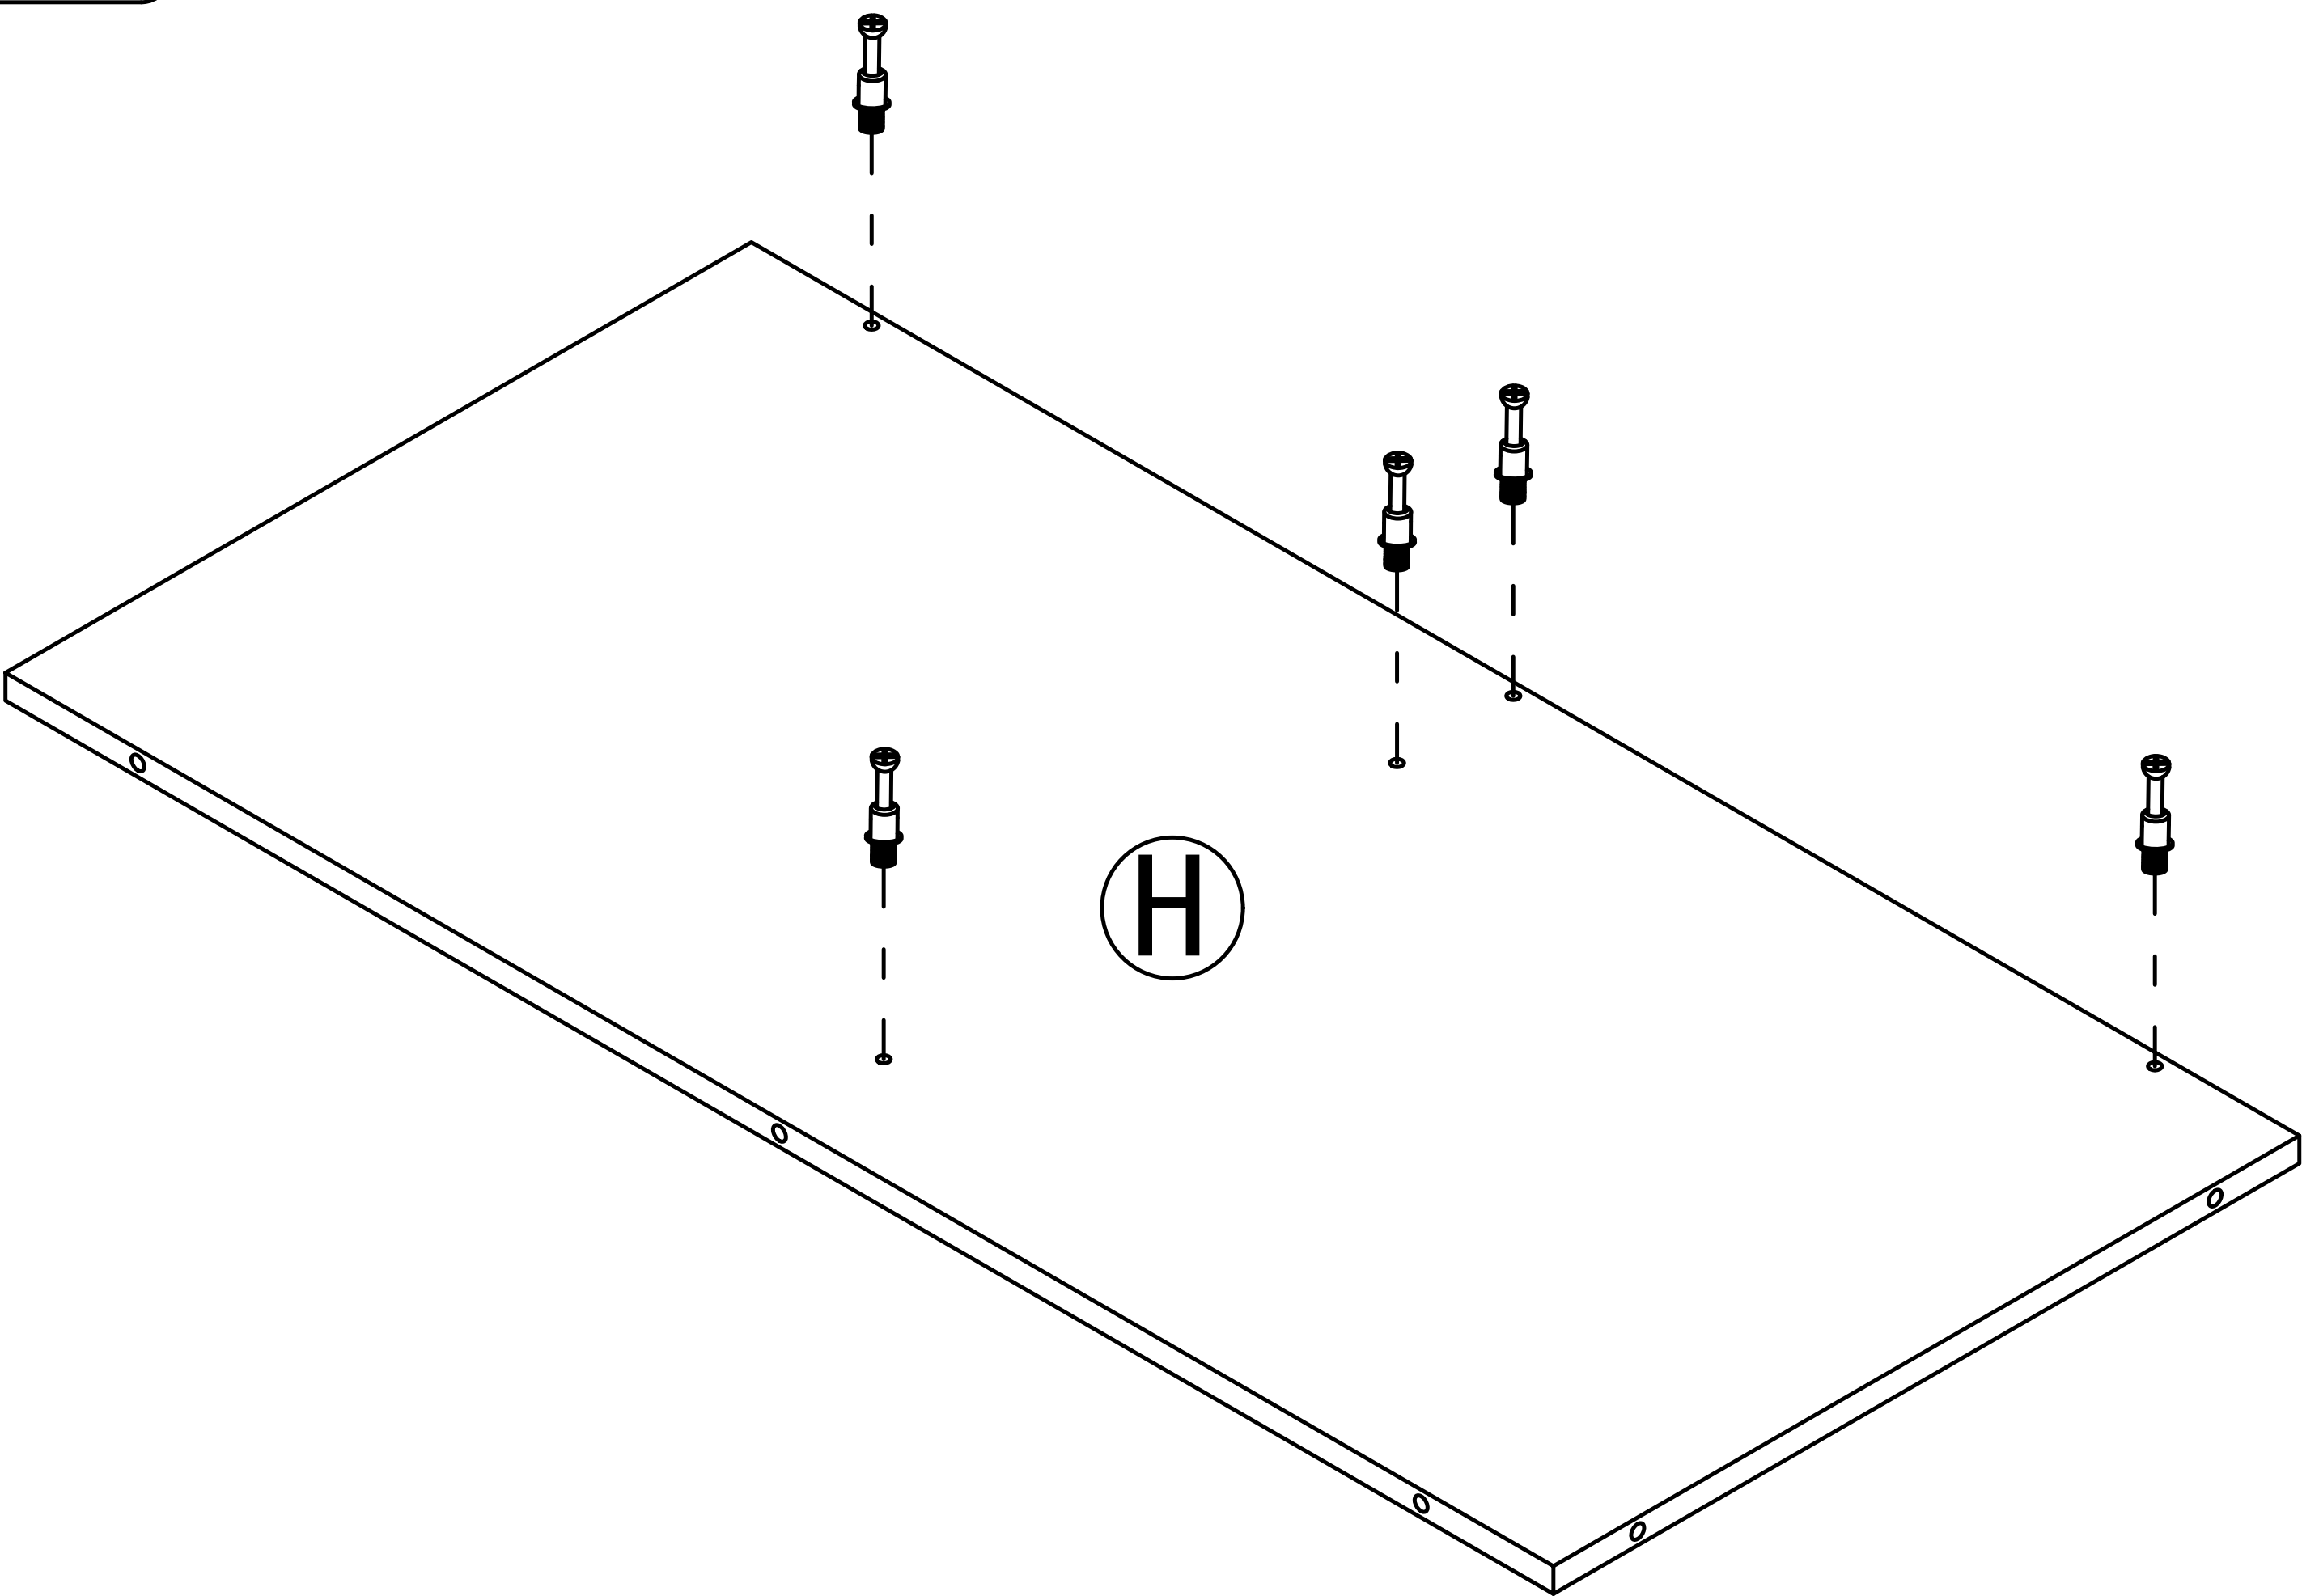


Step 12

2

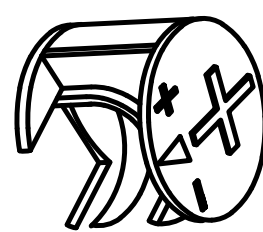


x5

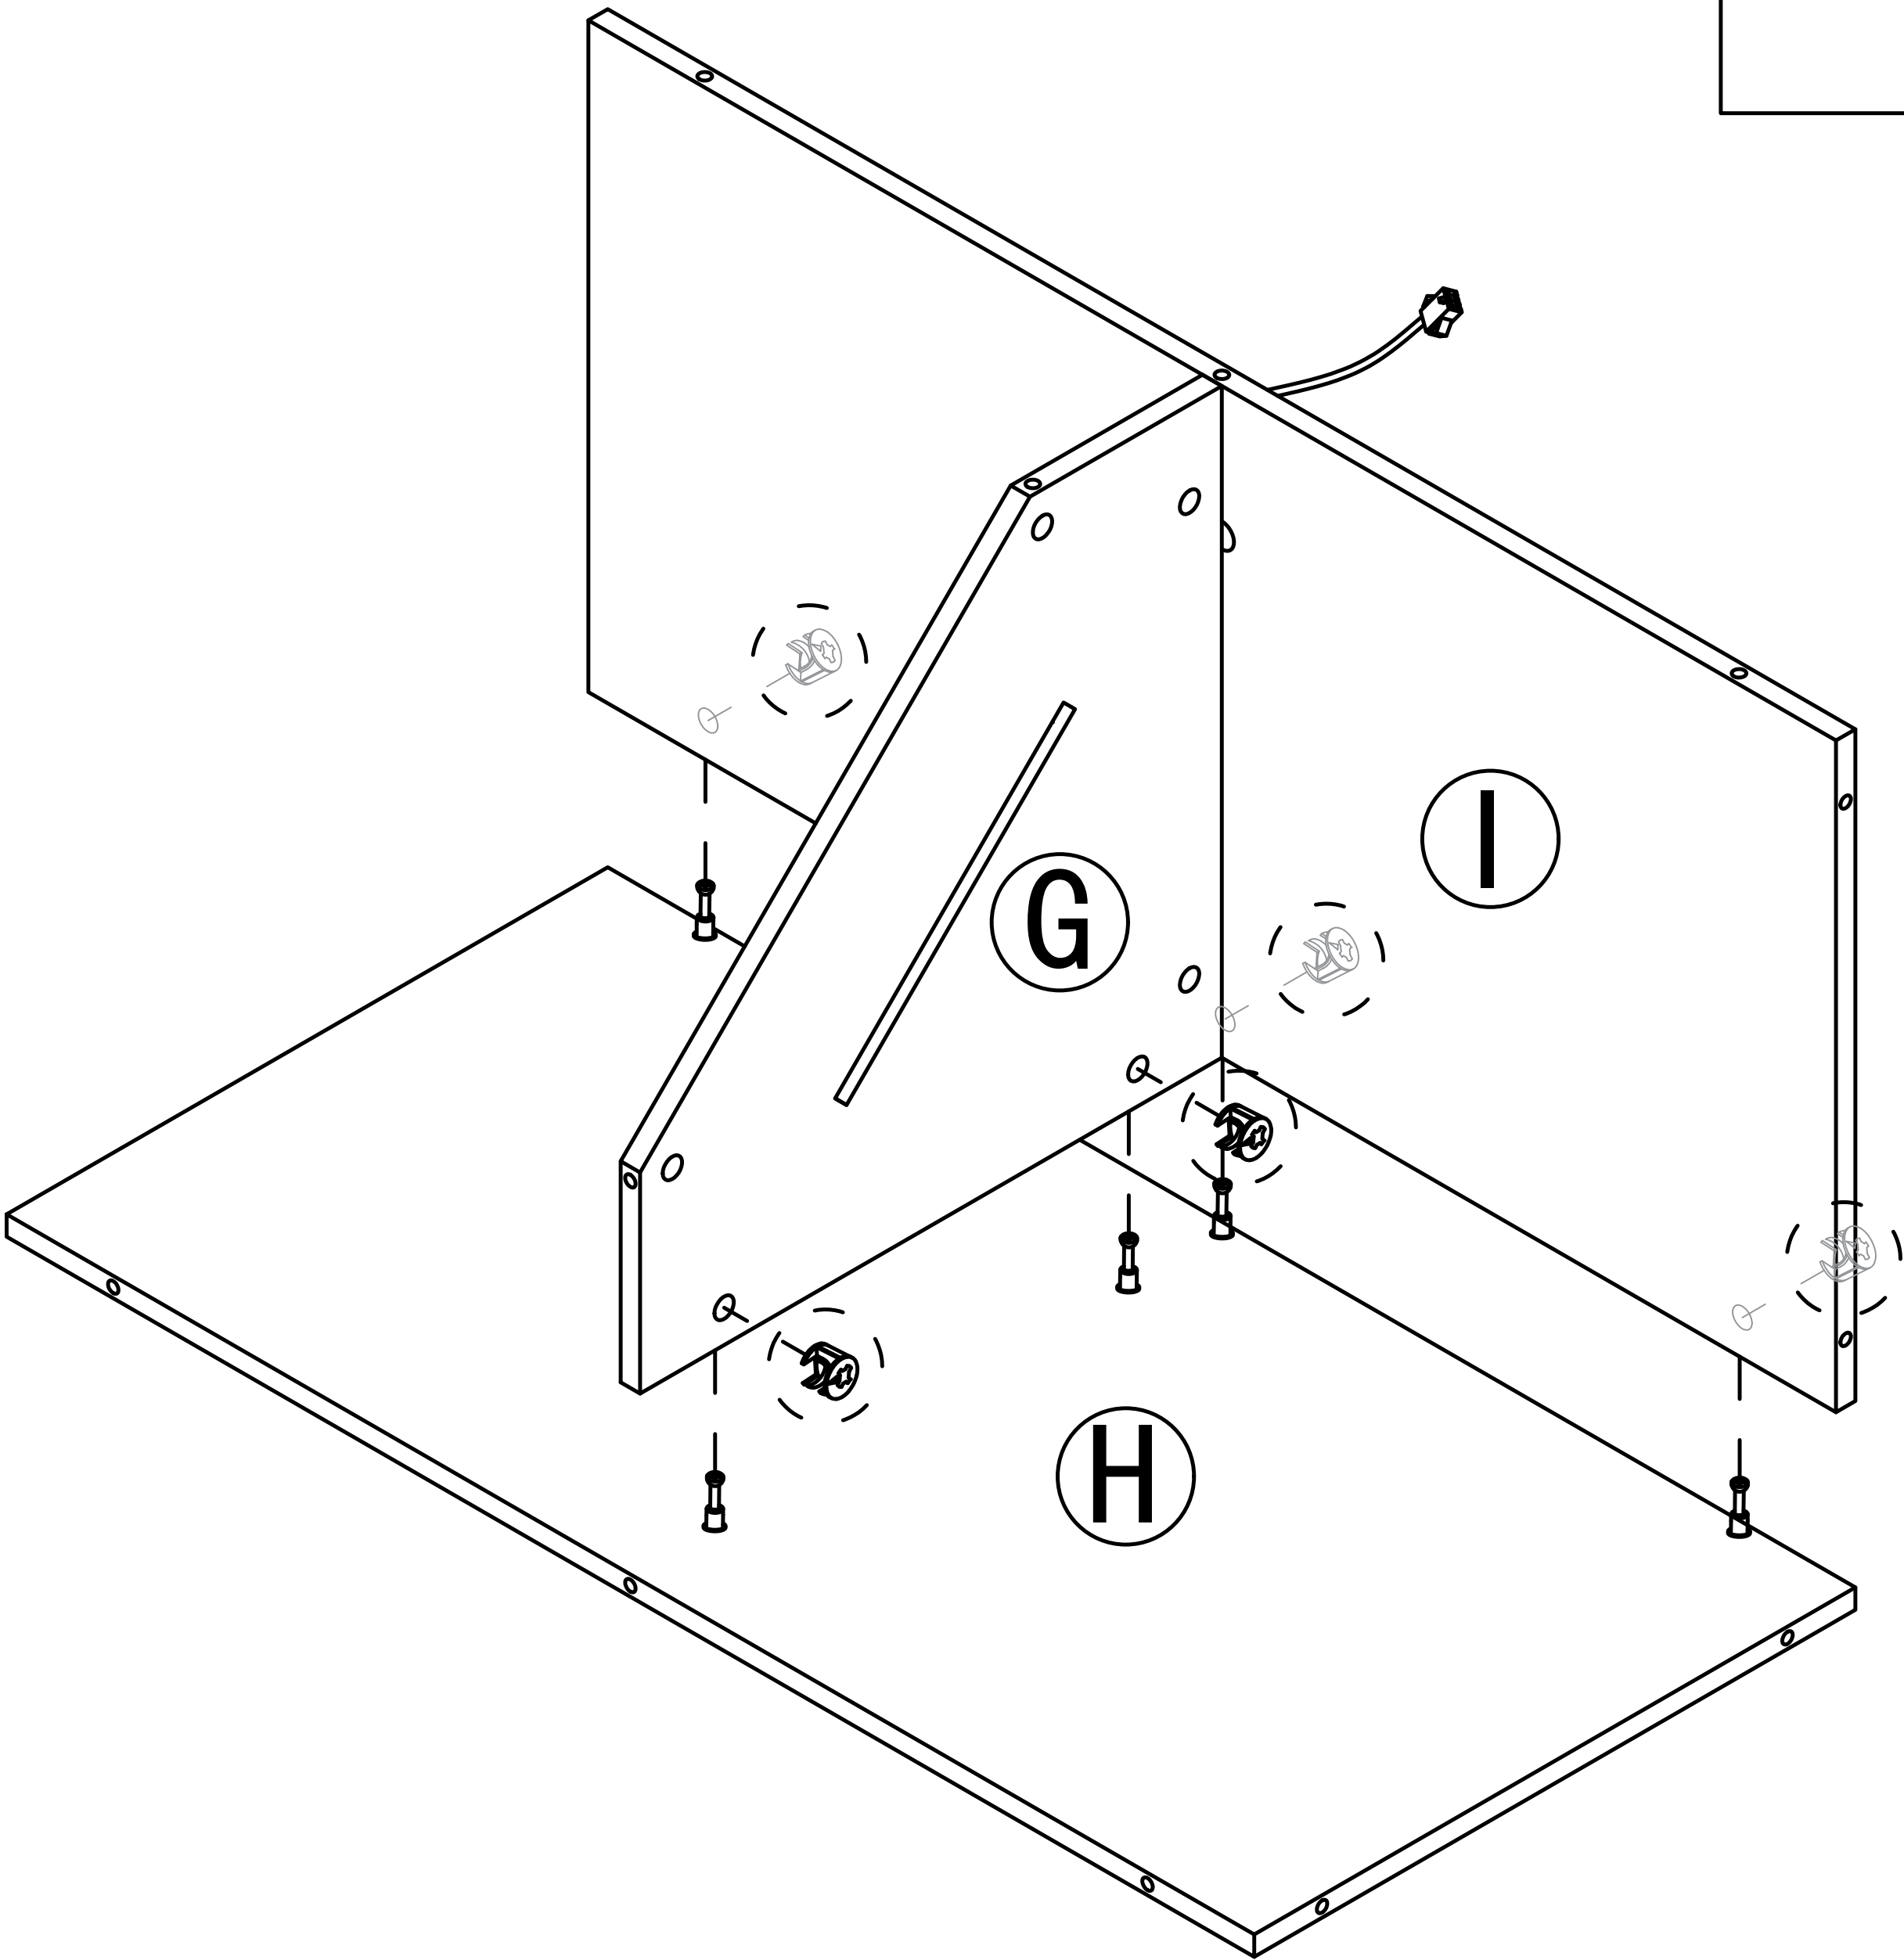


Step 13

1

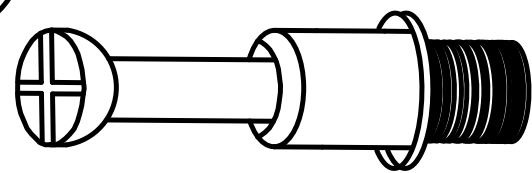


x8

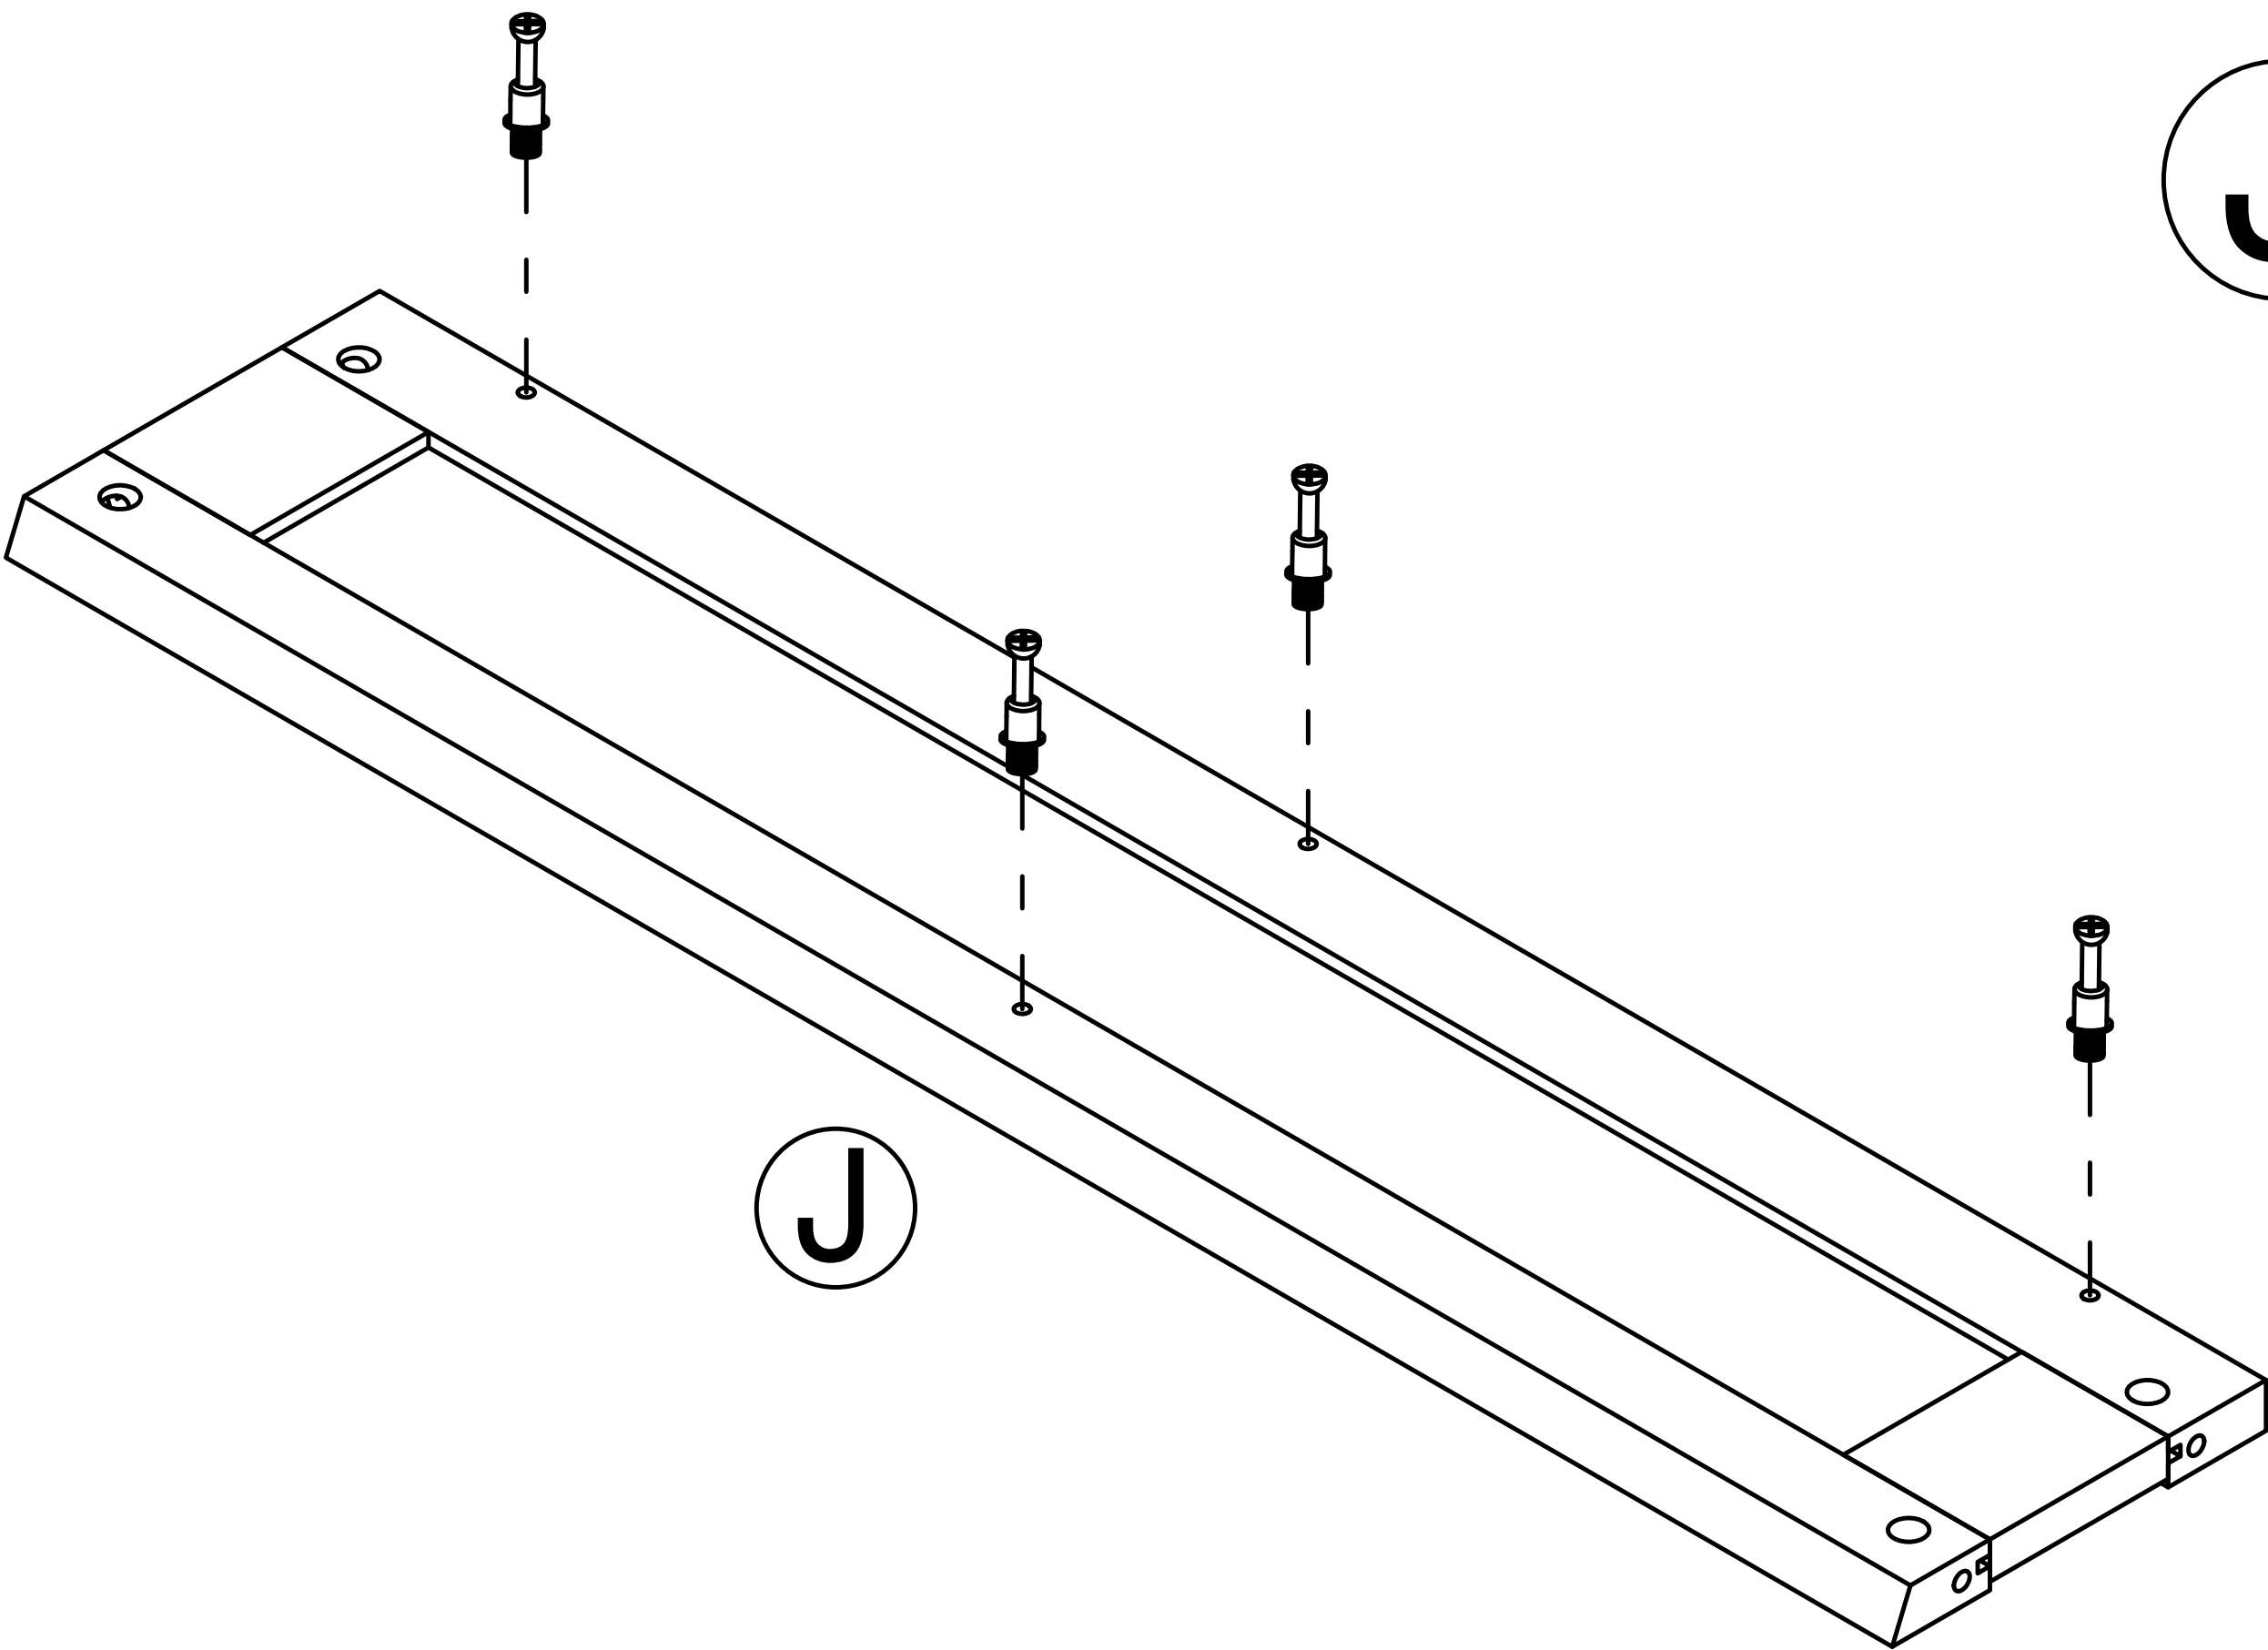


J x2

Step 14

2

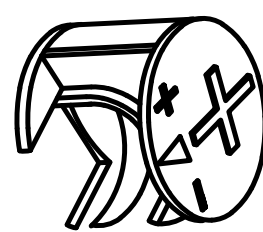


x4

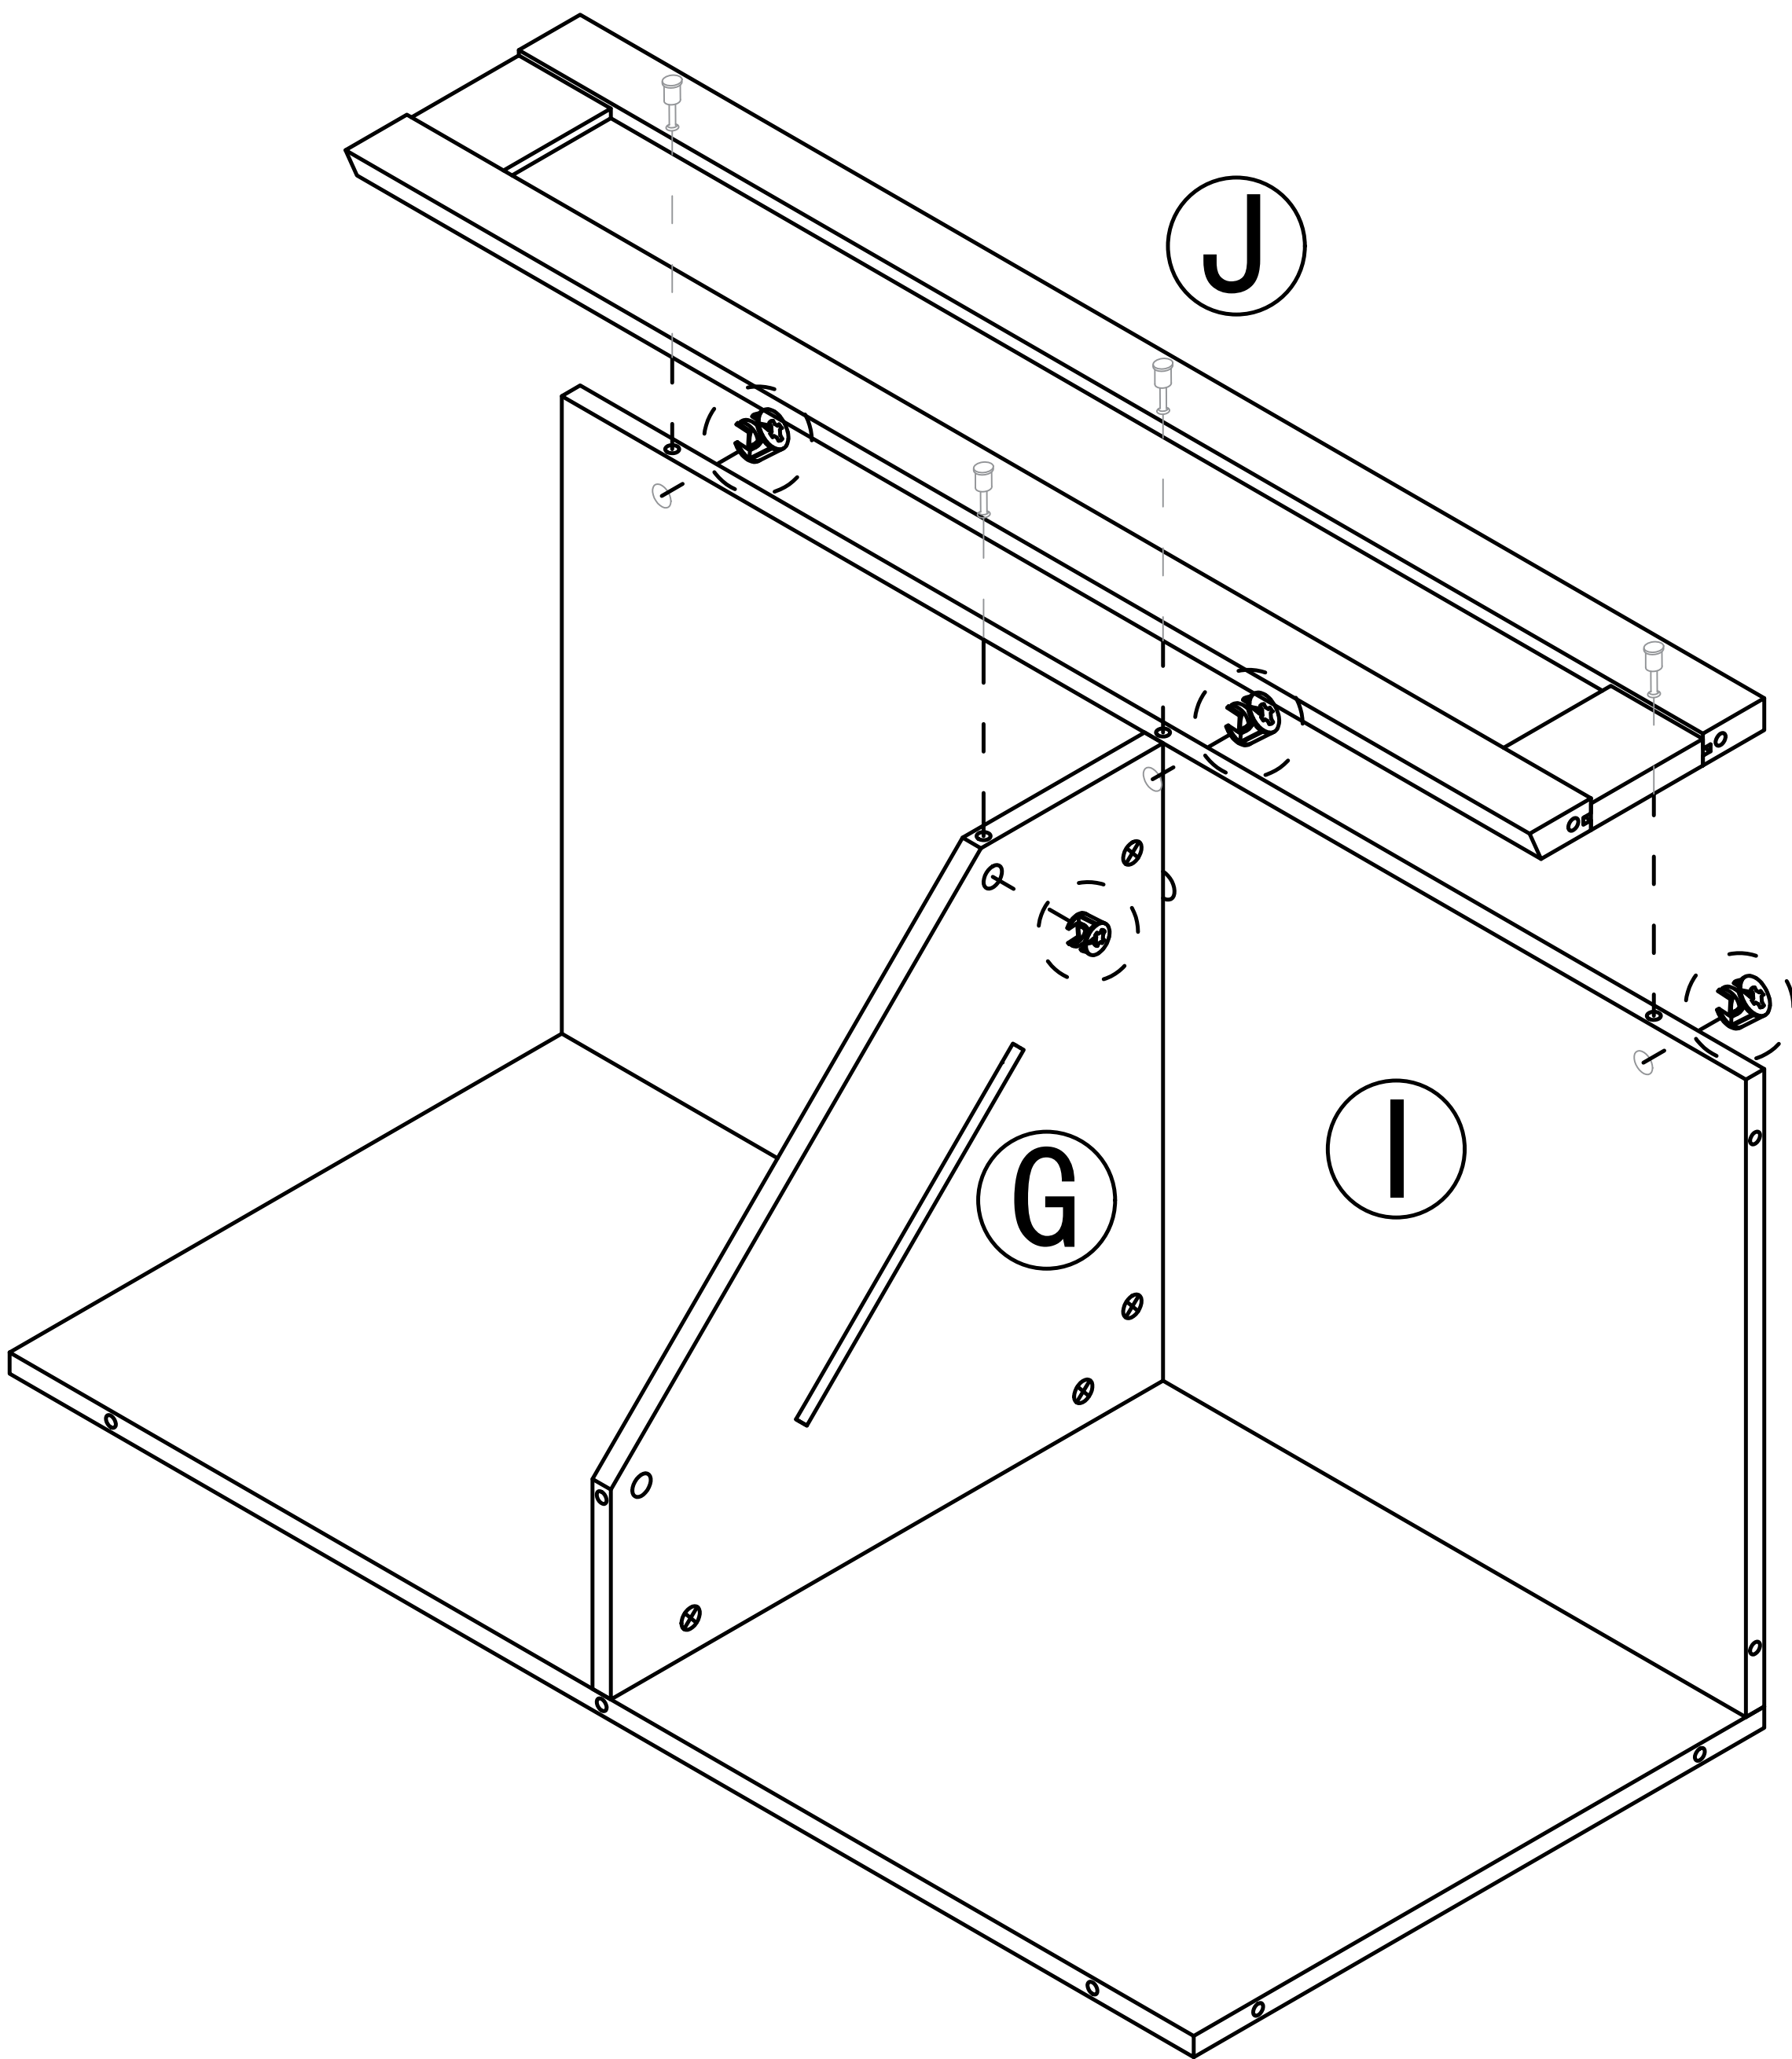


Step 15

2

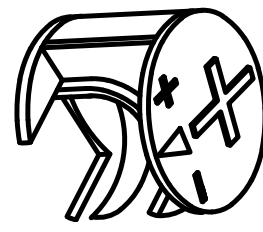


x1

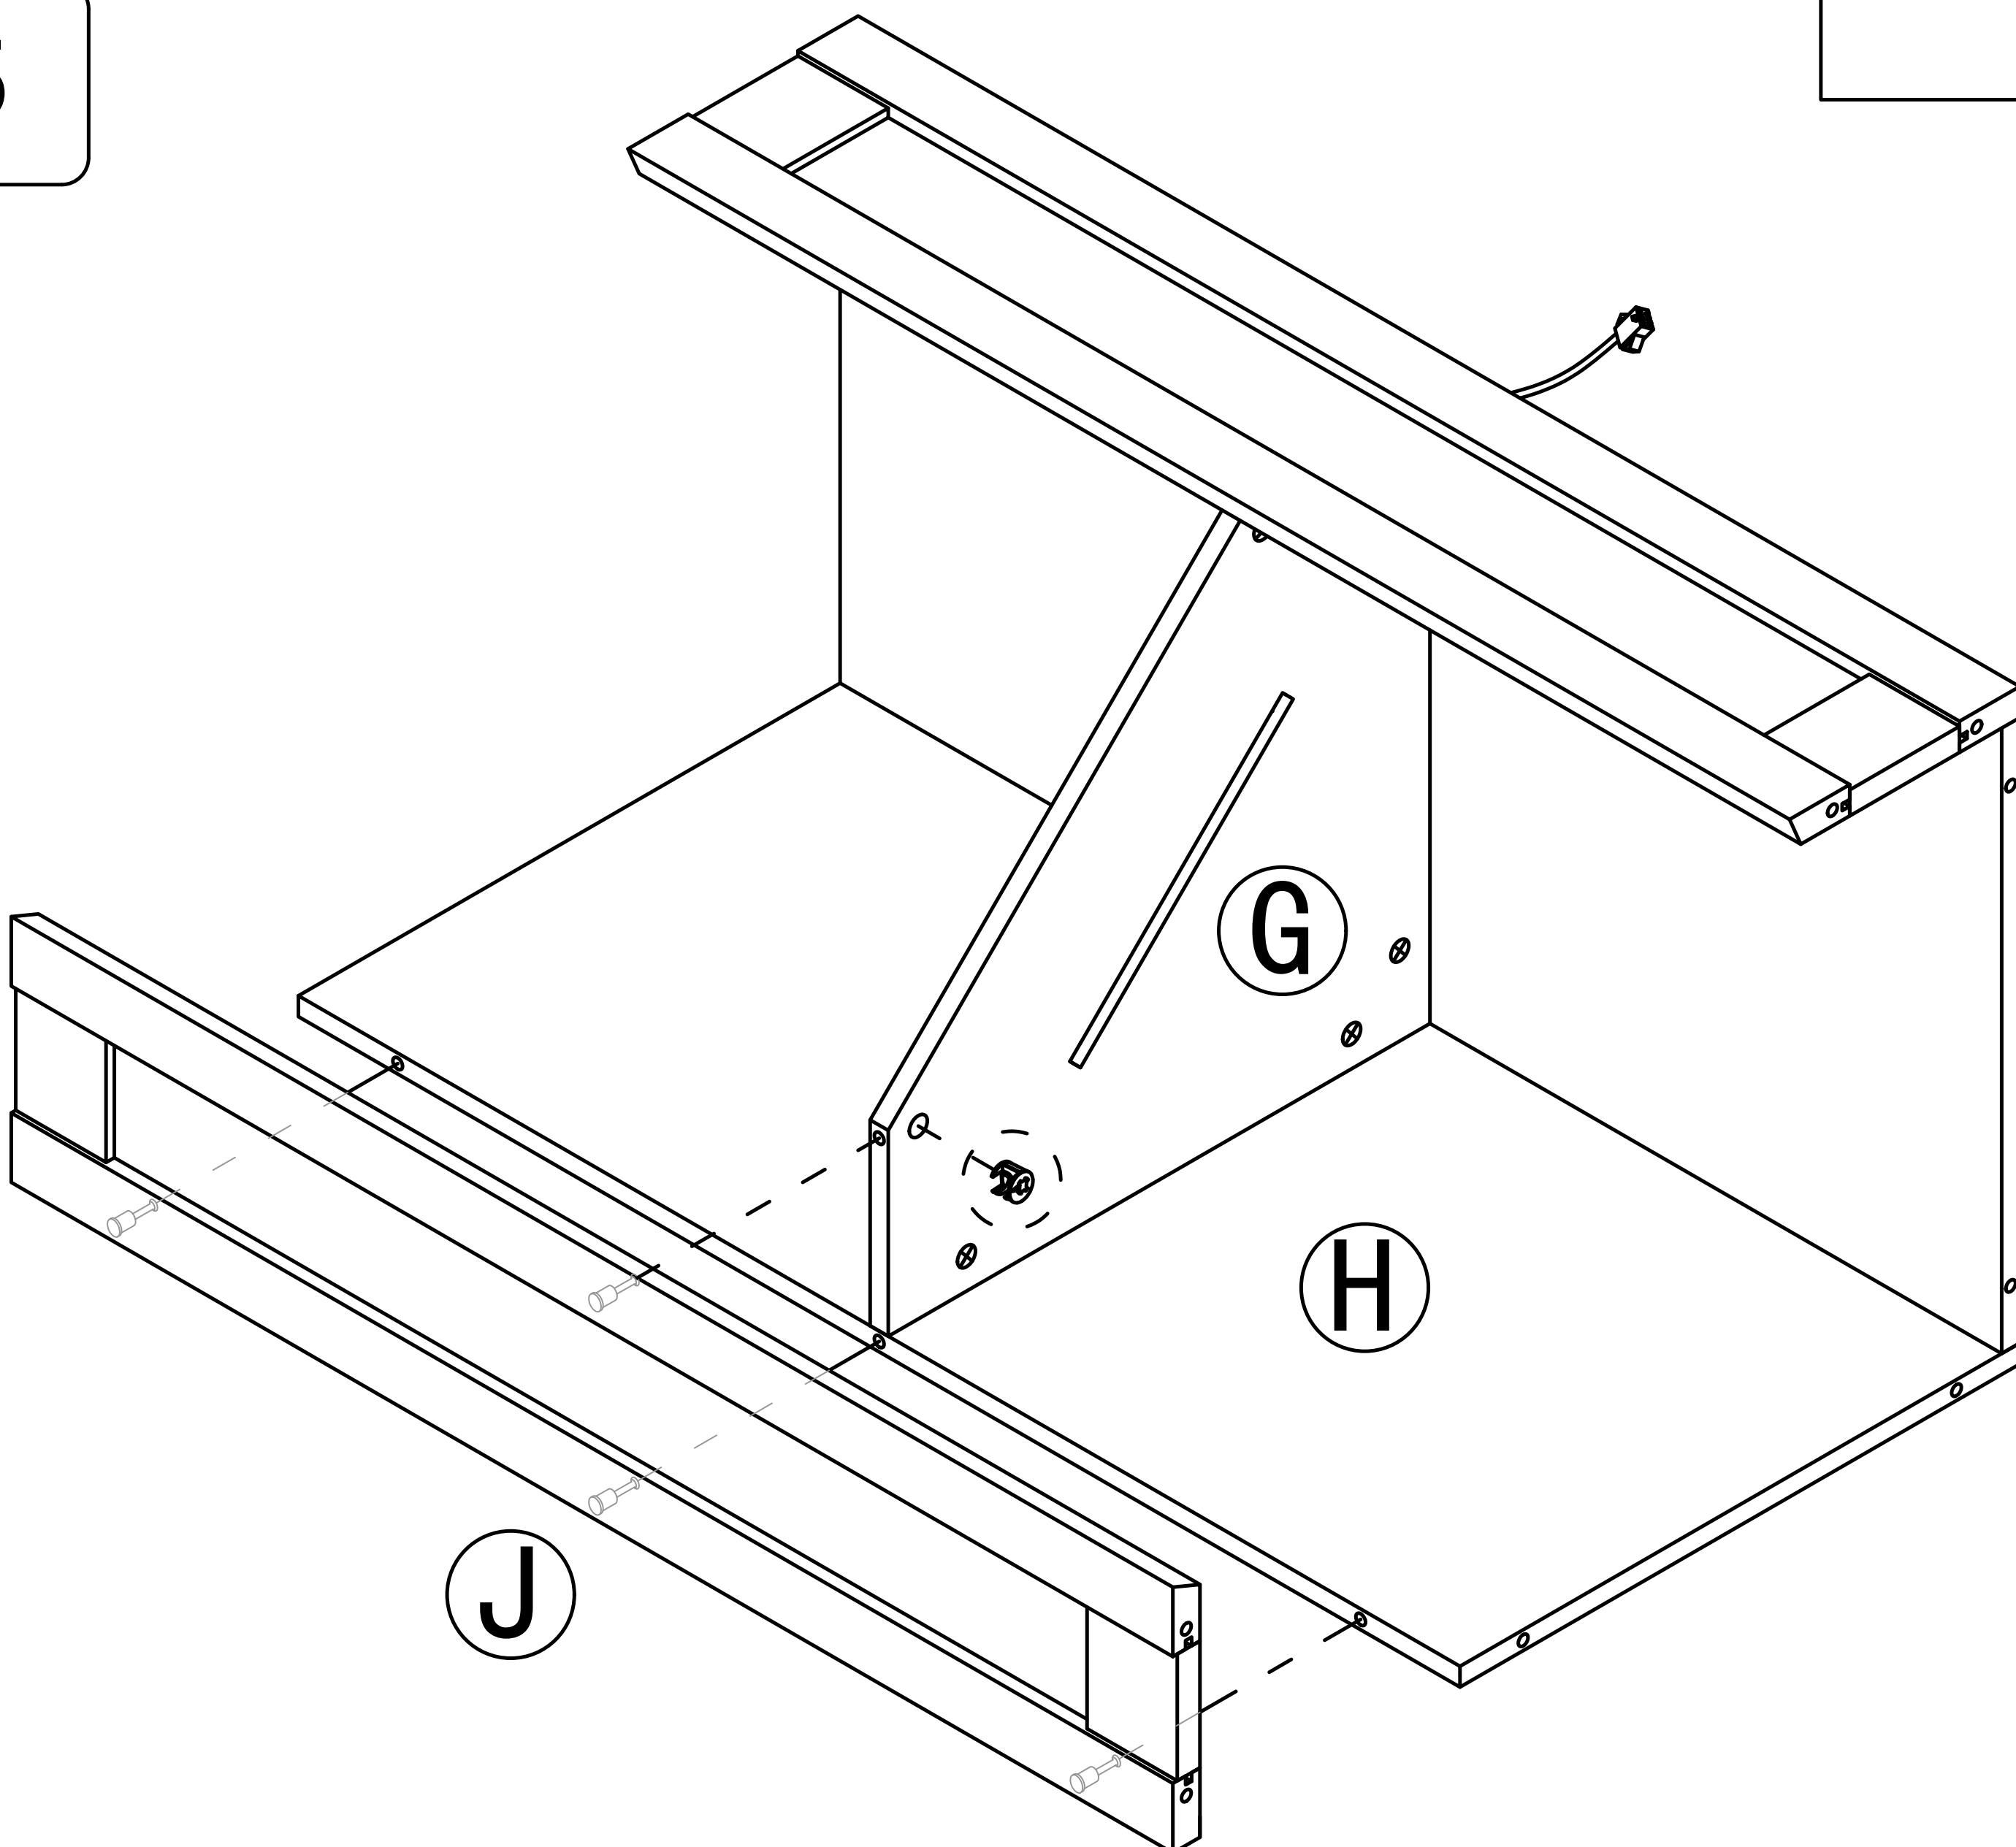


Step 16

2

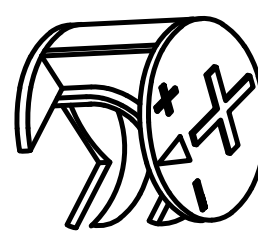


x3

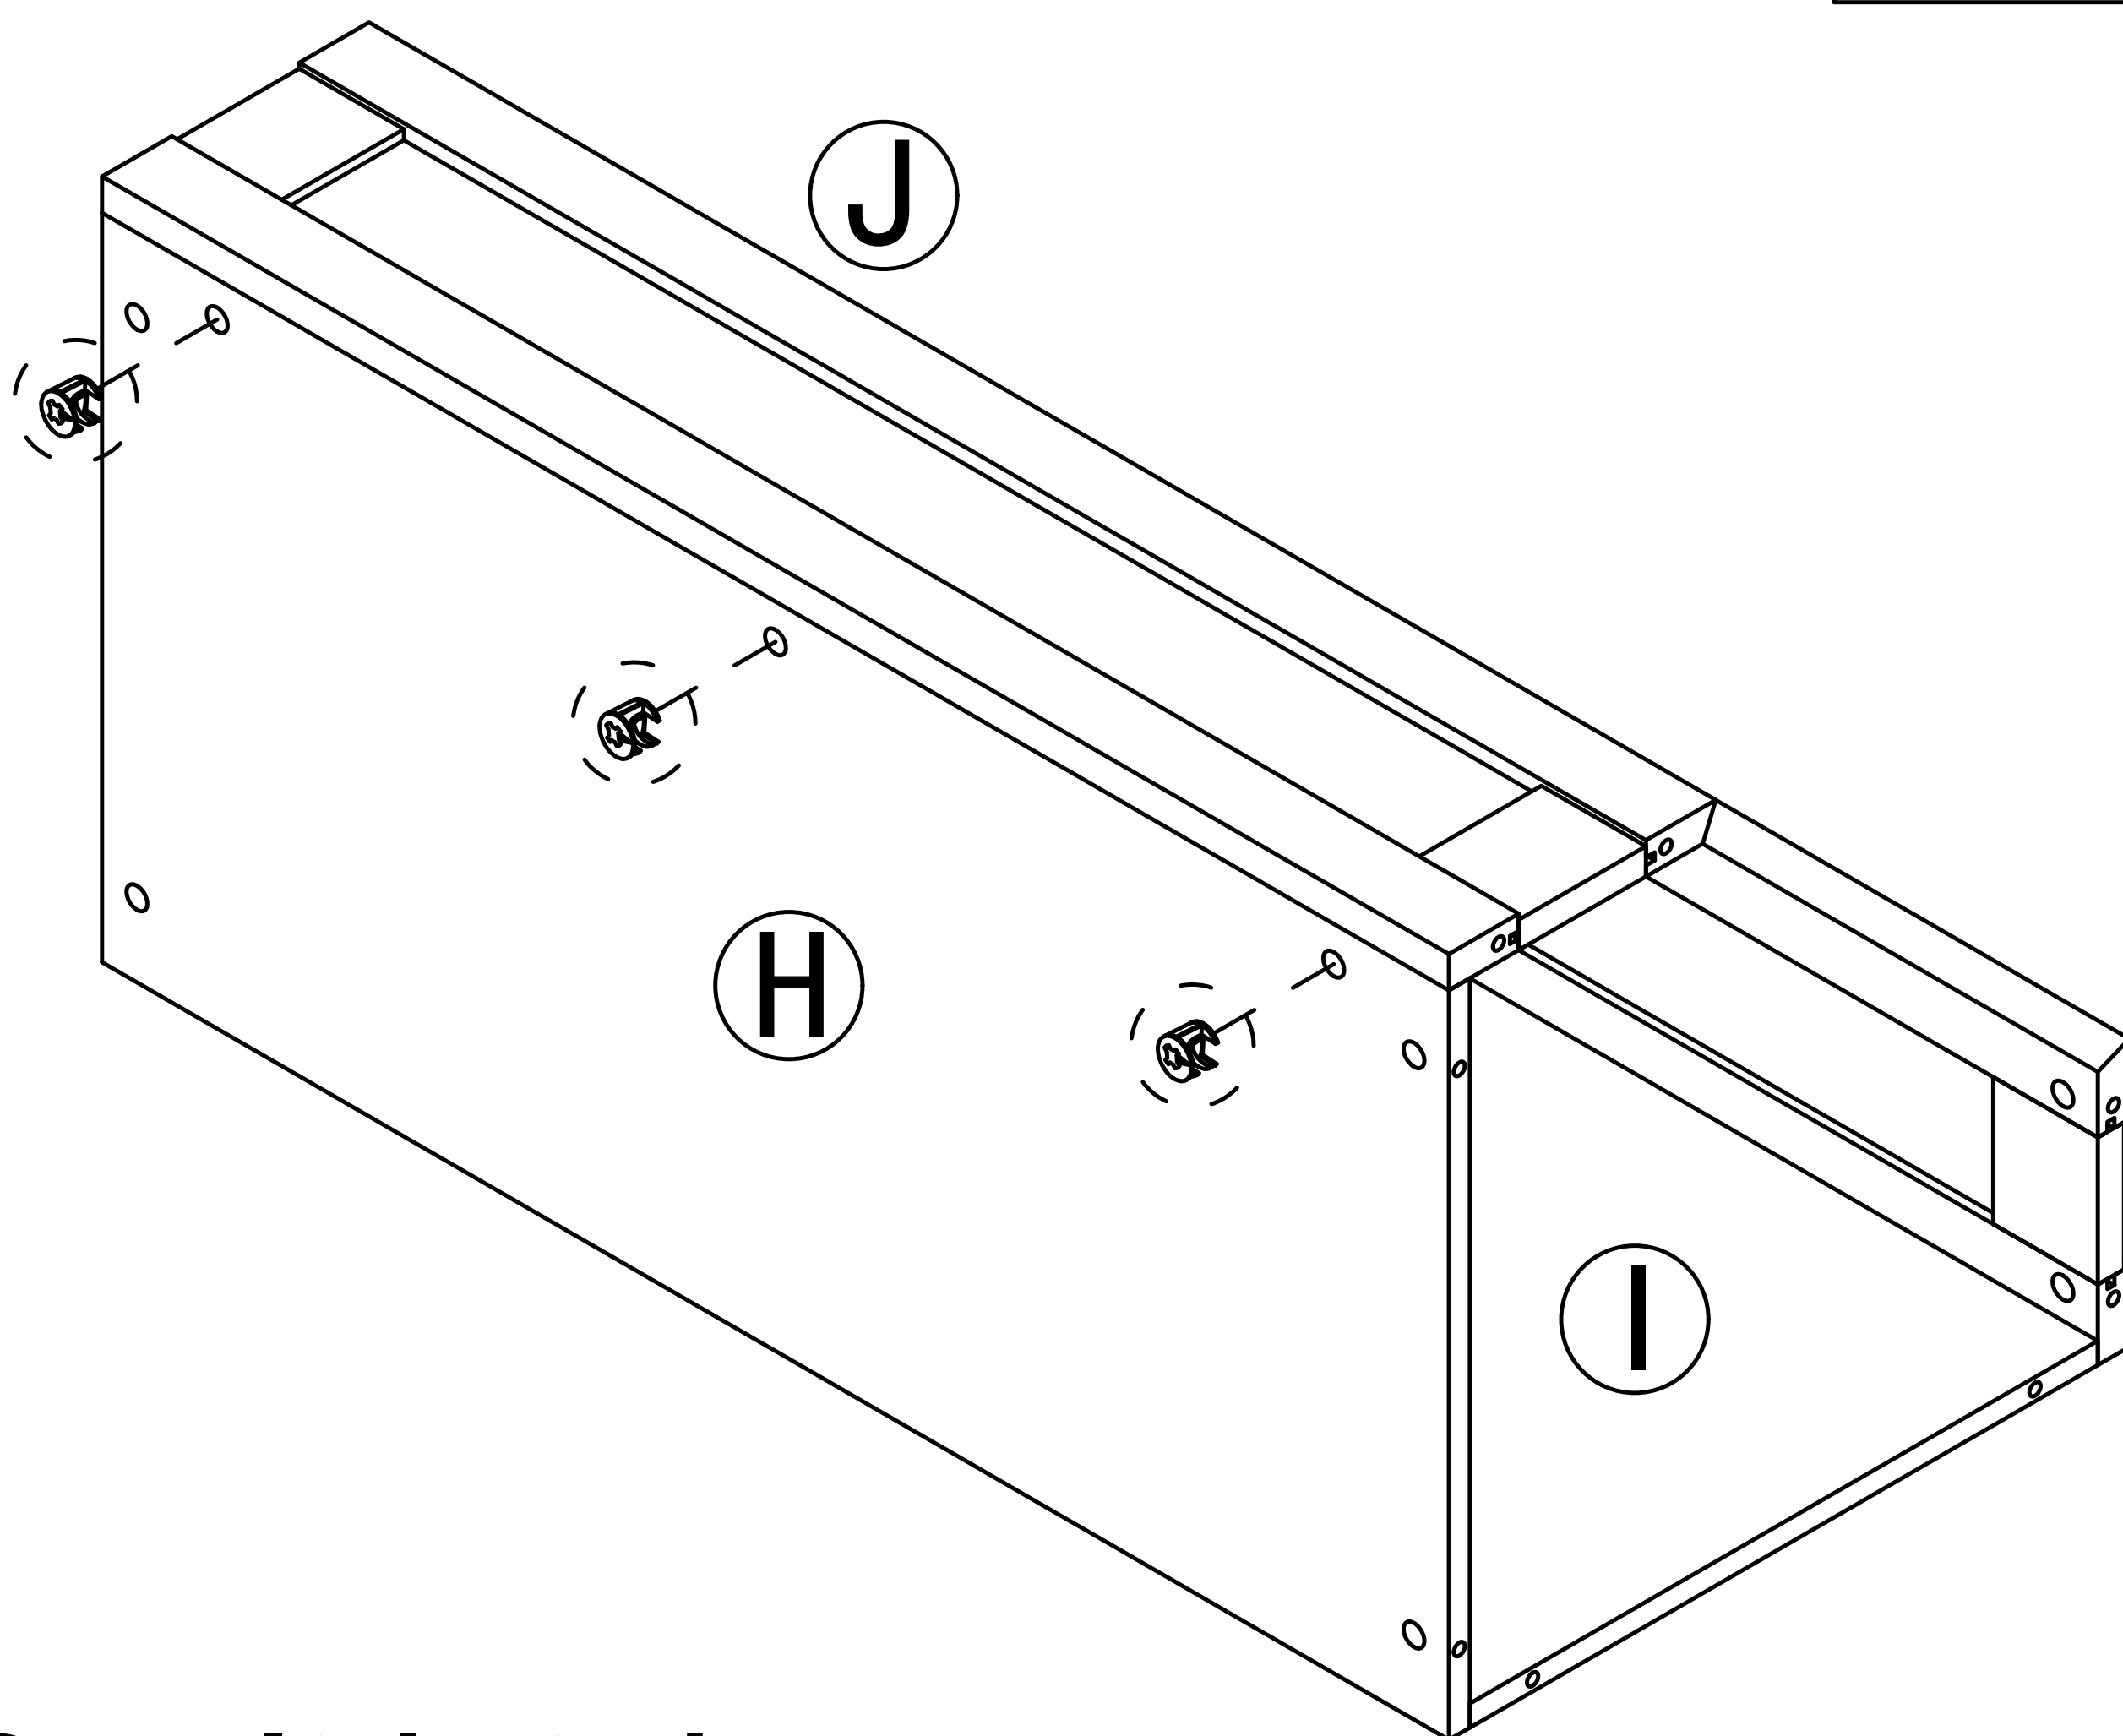


Attention: Don't let the
I-board press the lamp wire.

Step 17

1

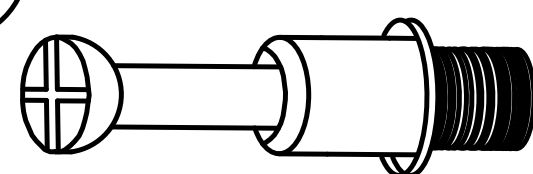


x8

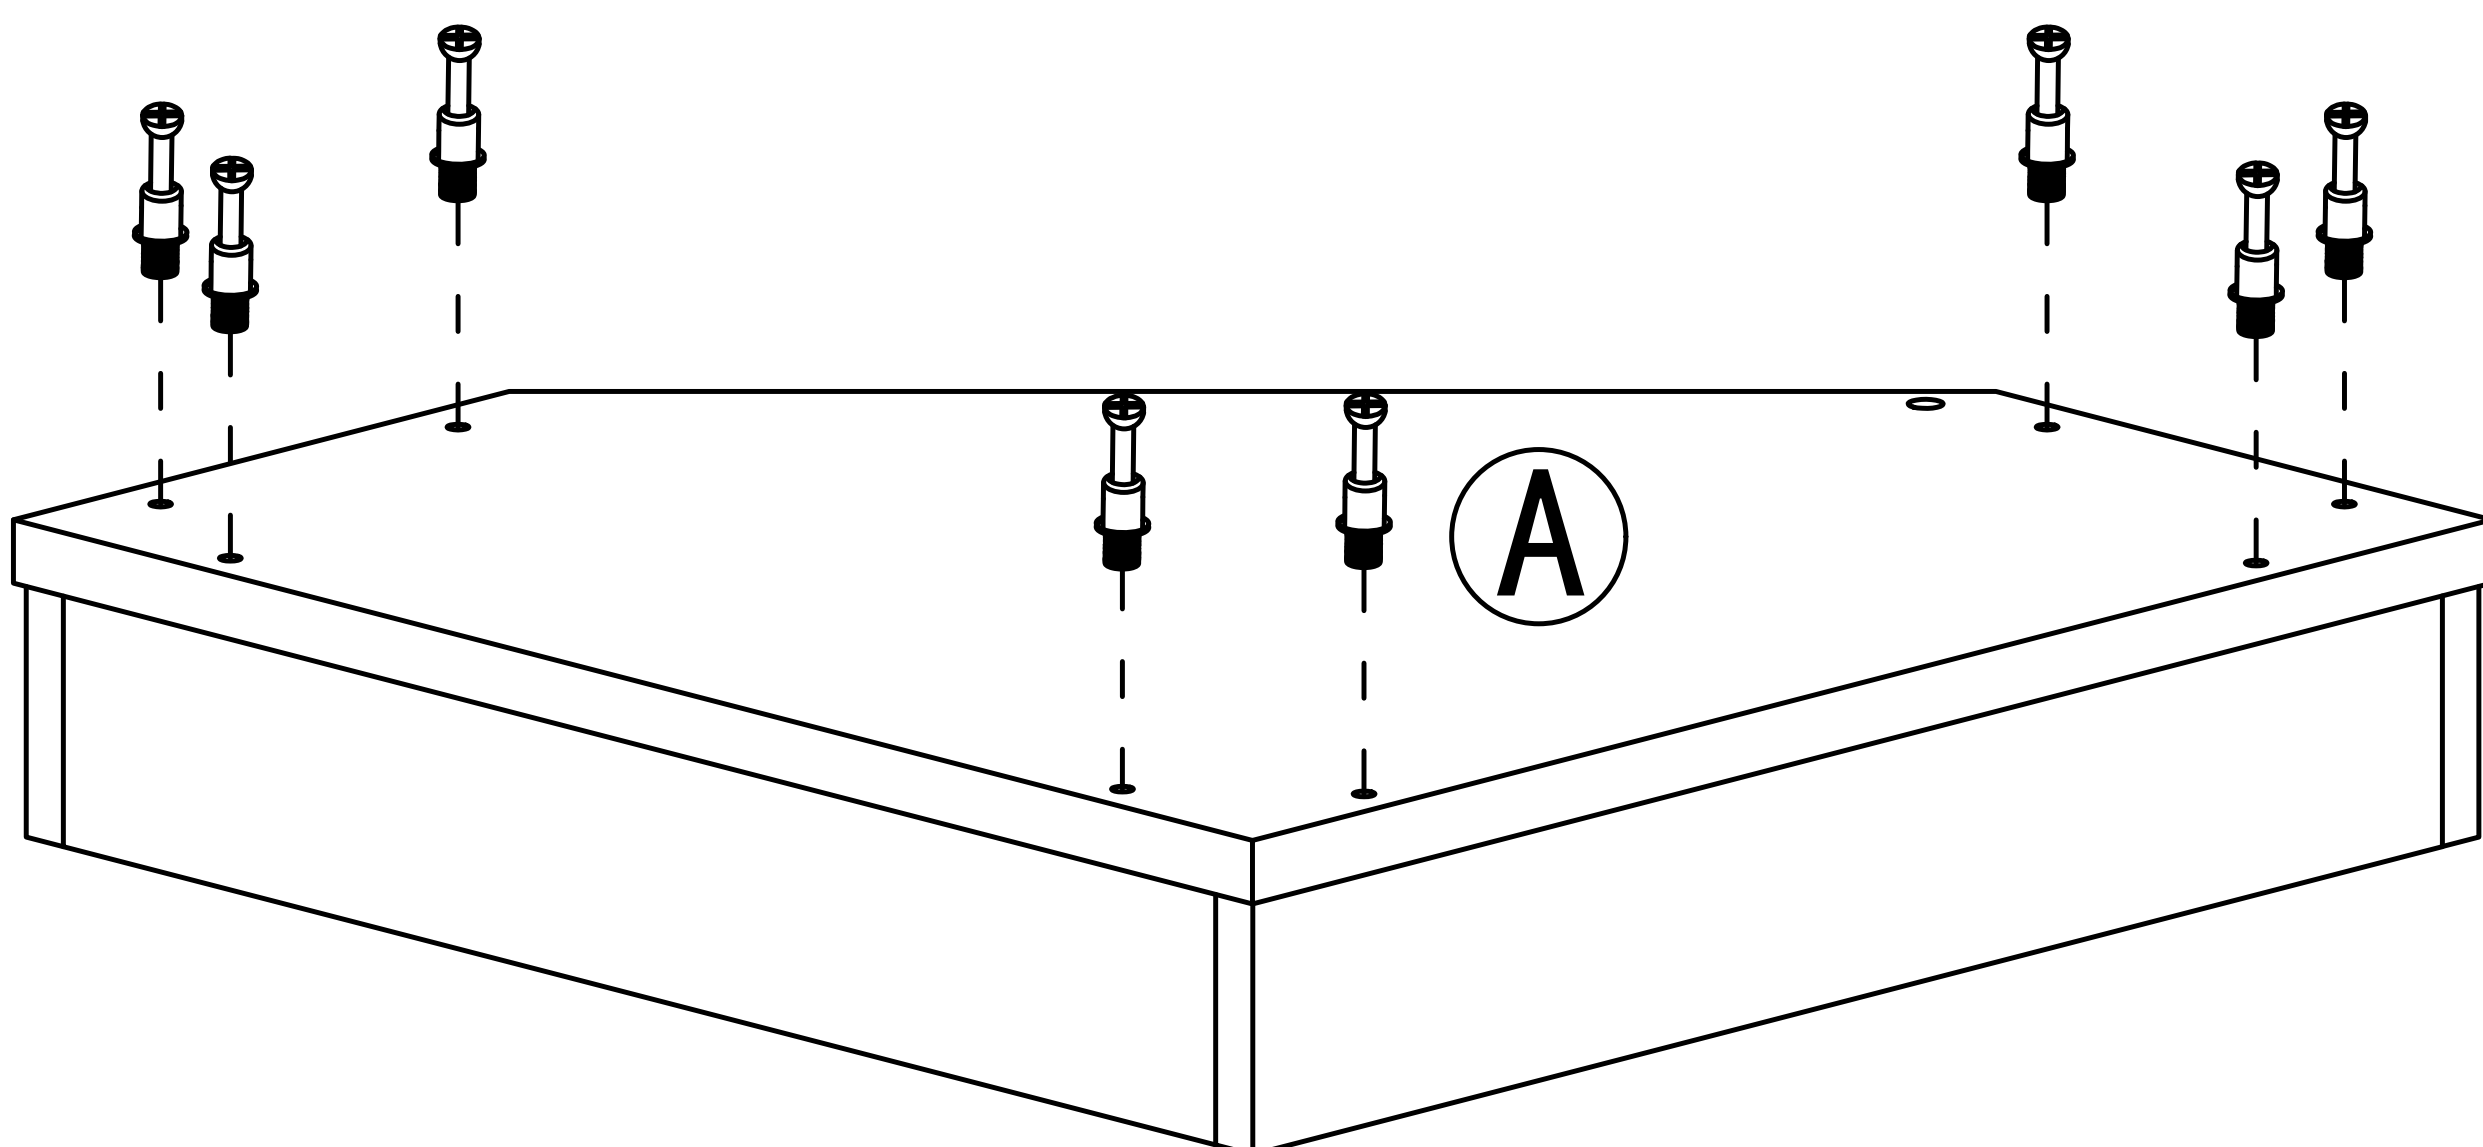


Step 18


2



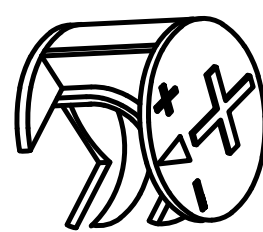


x8

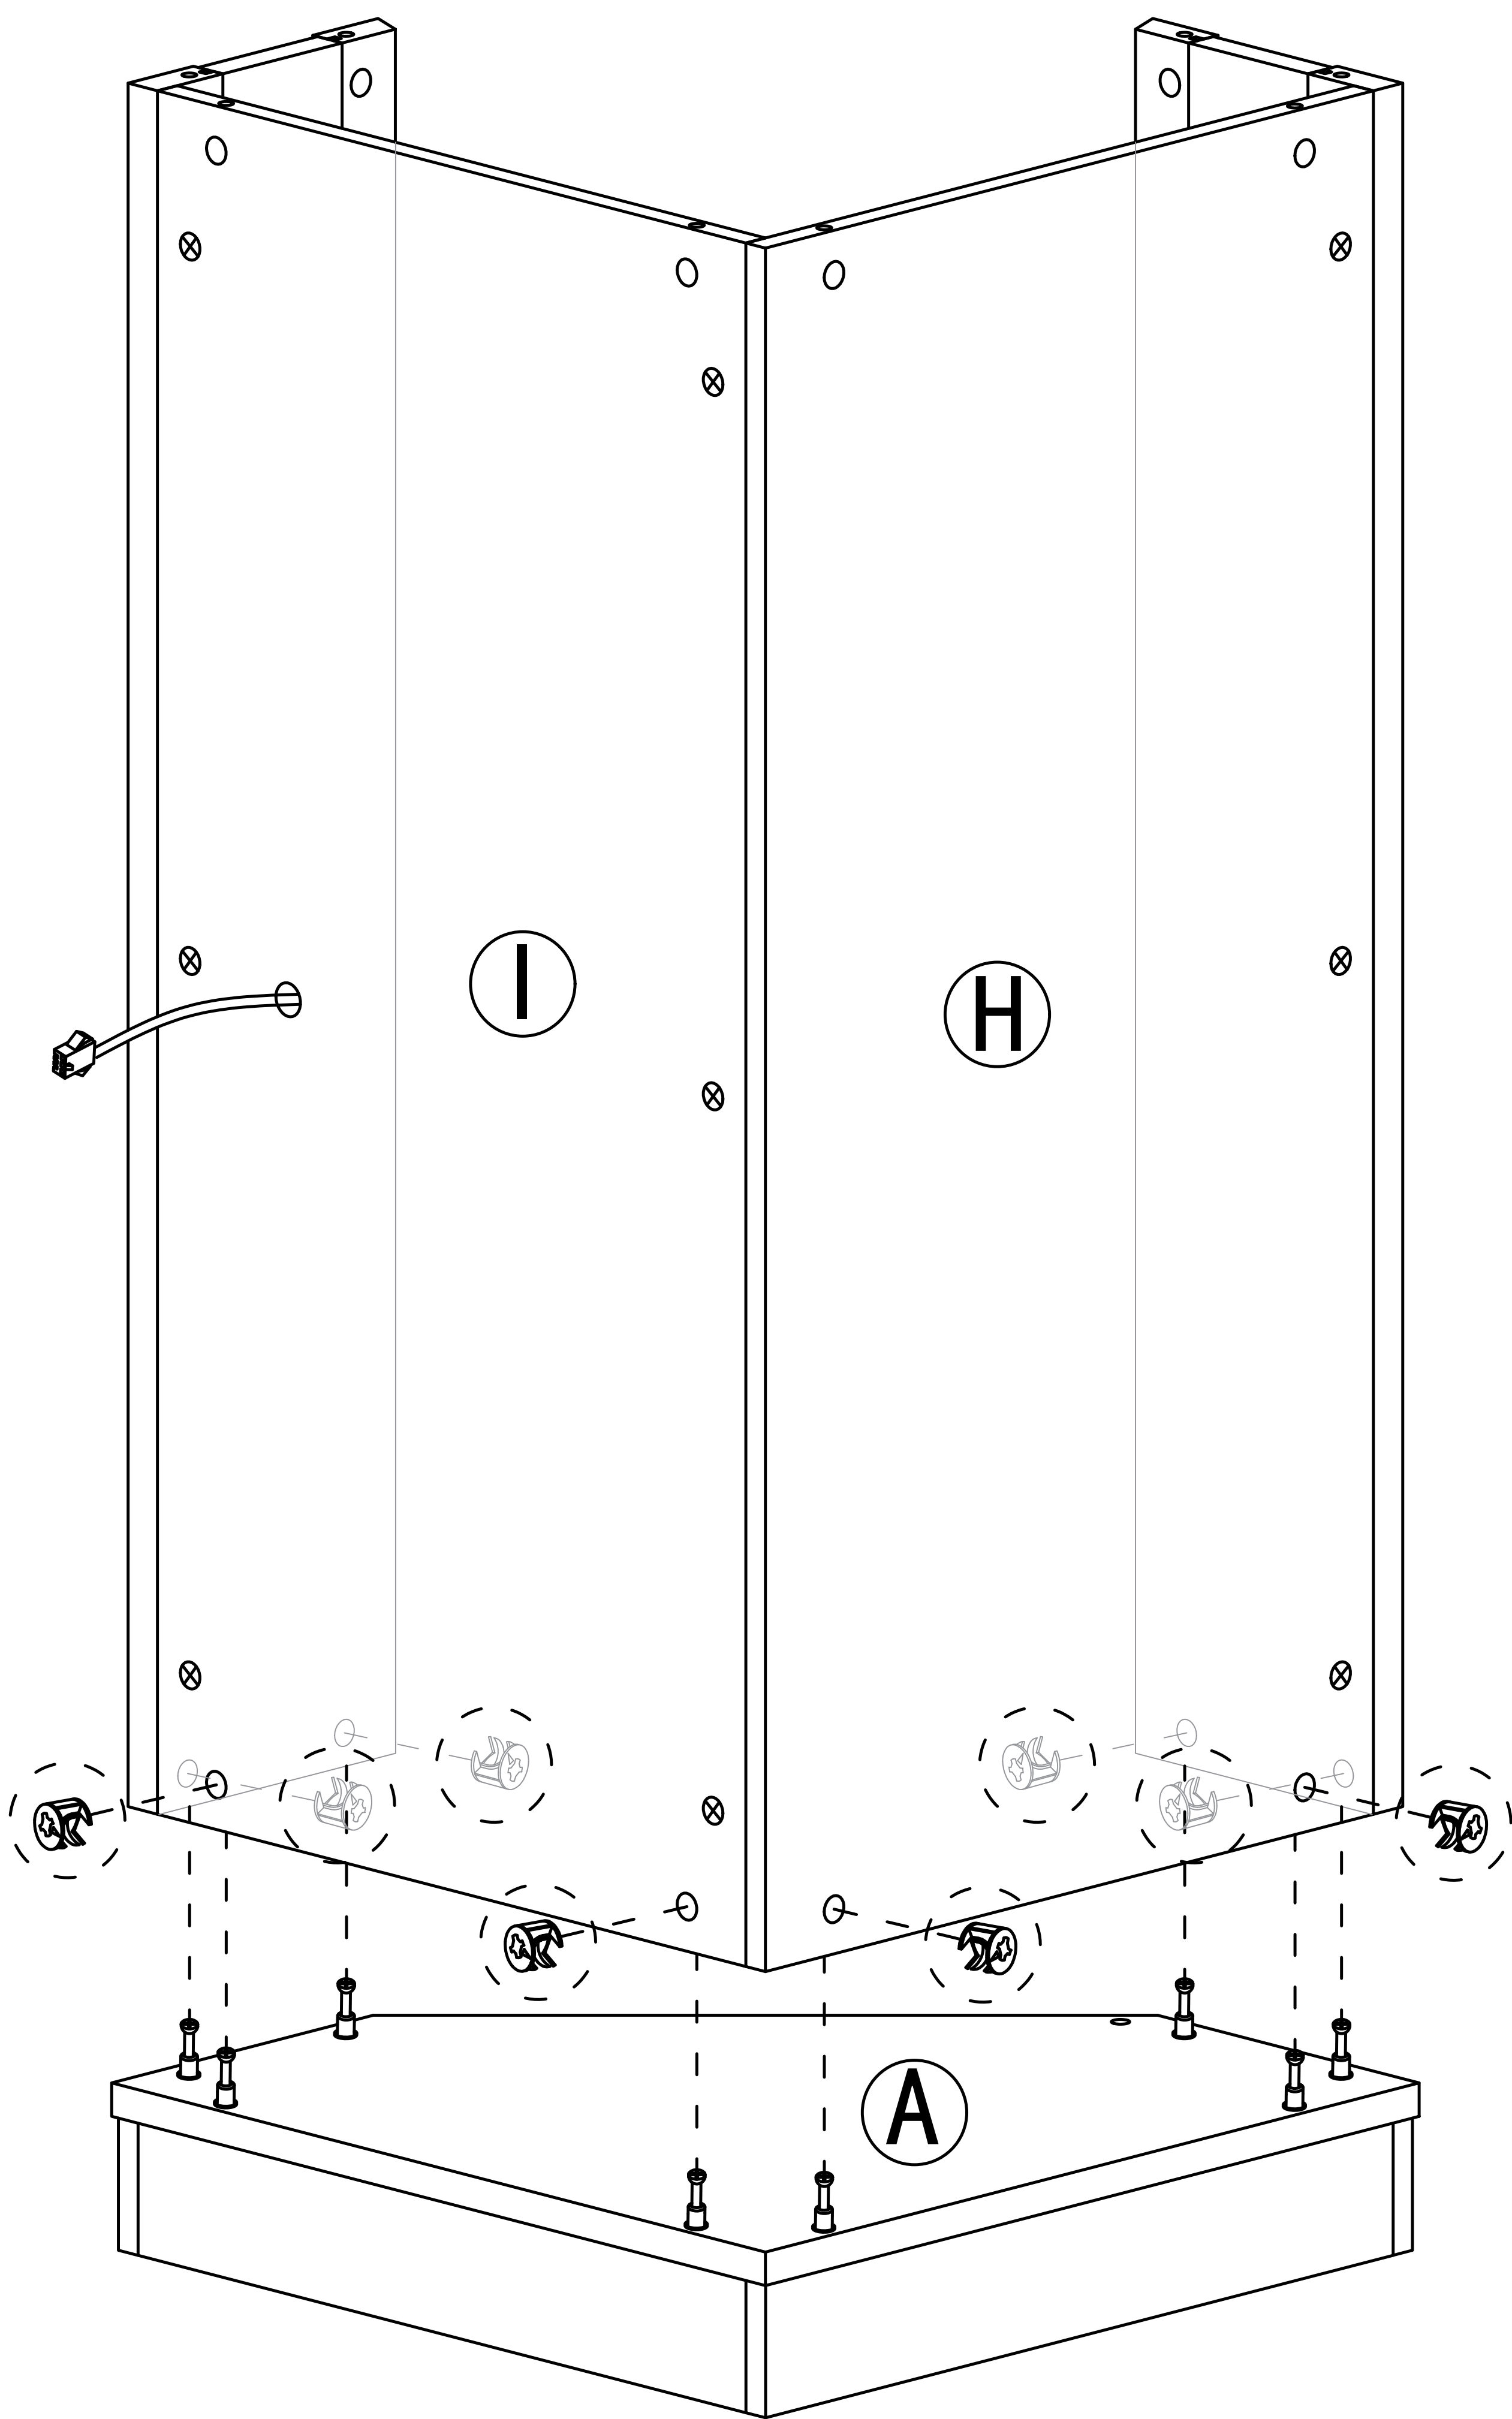



Step 19

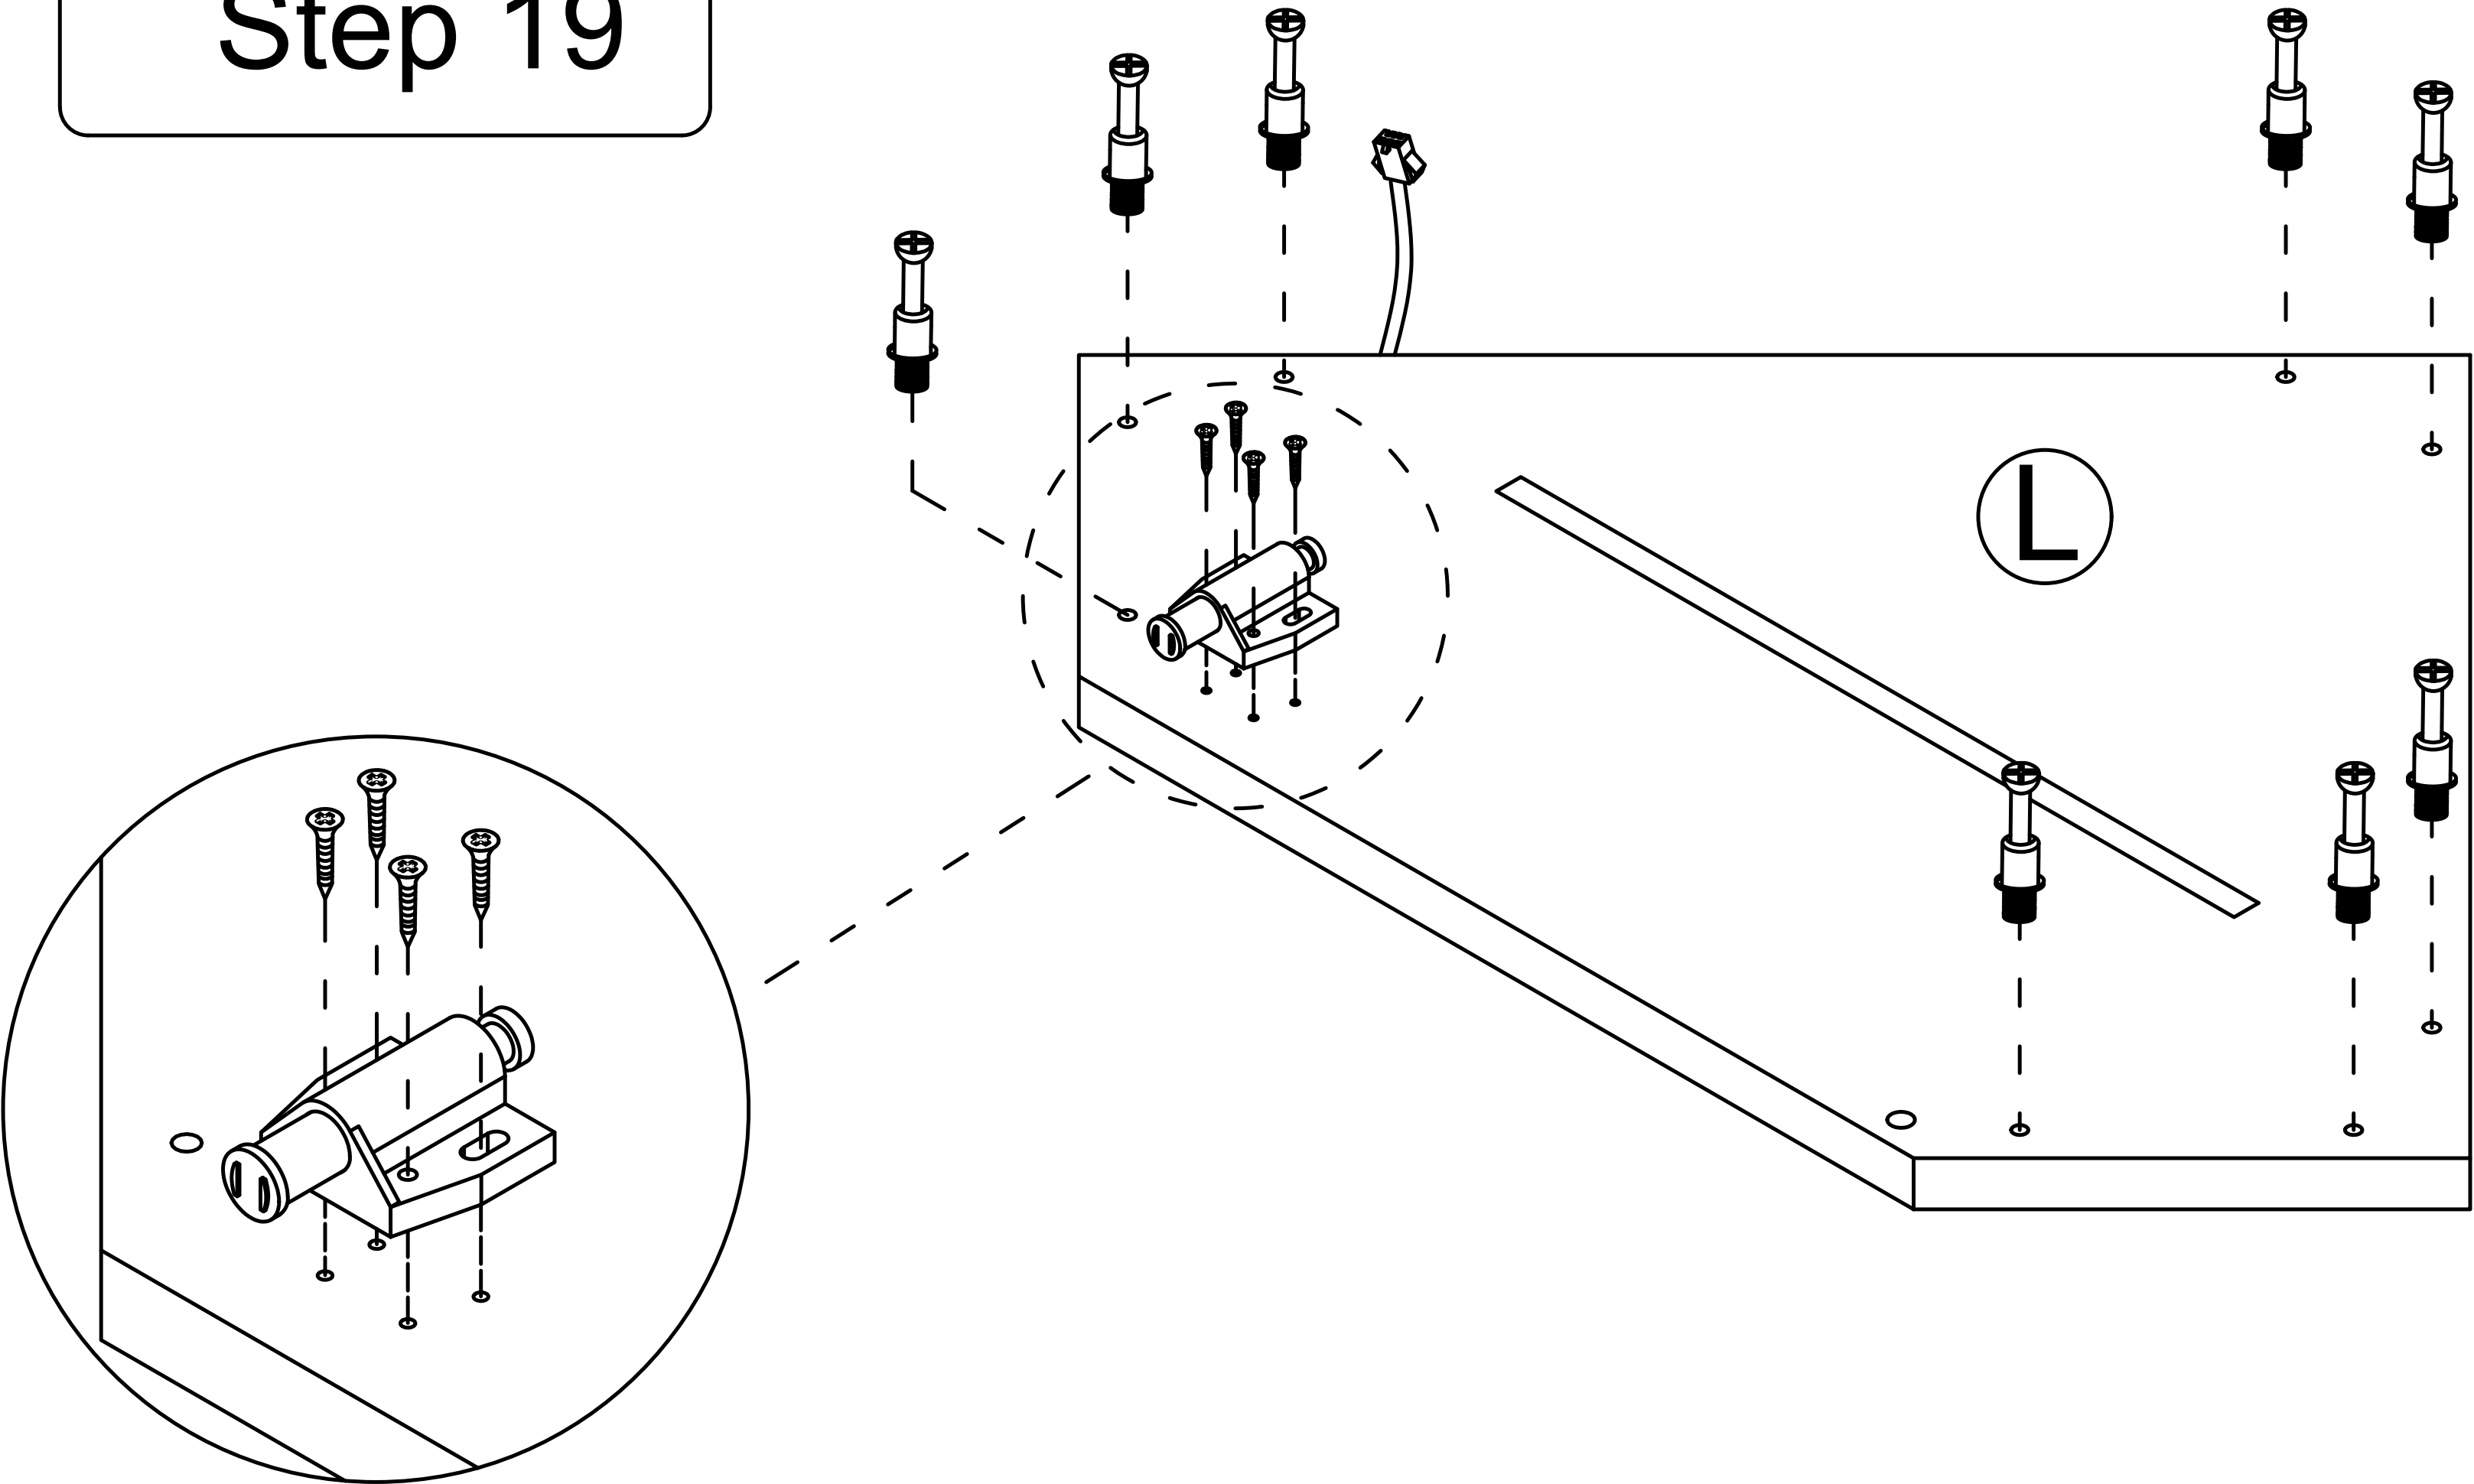

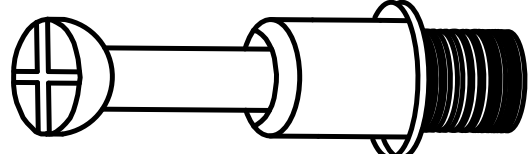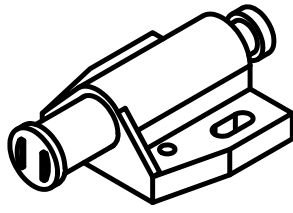

- 1  x8
- 7  x1  x4

Step 20

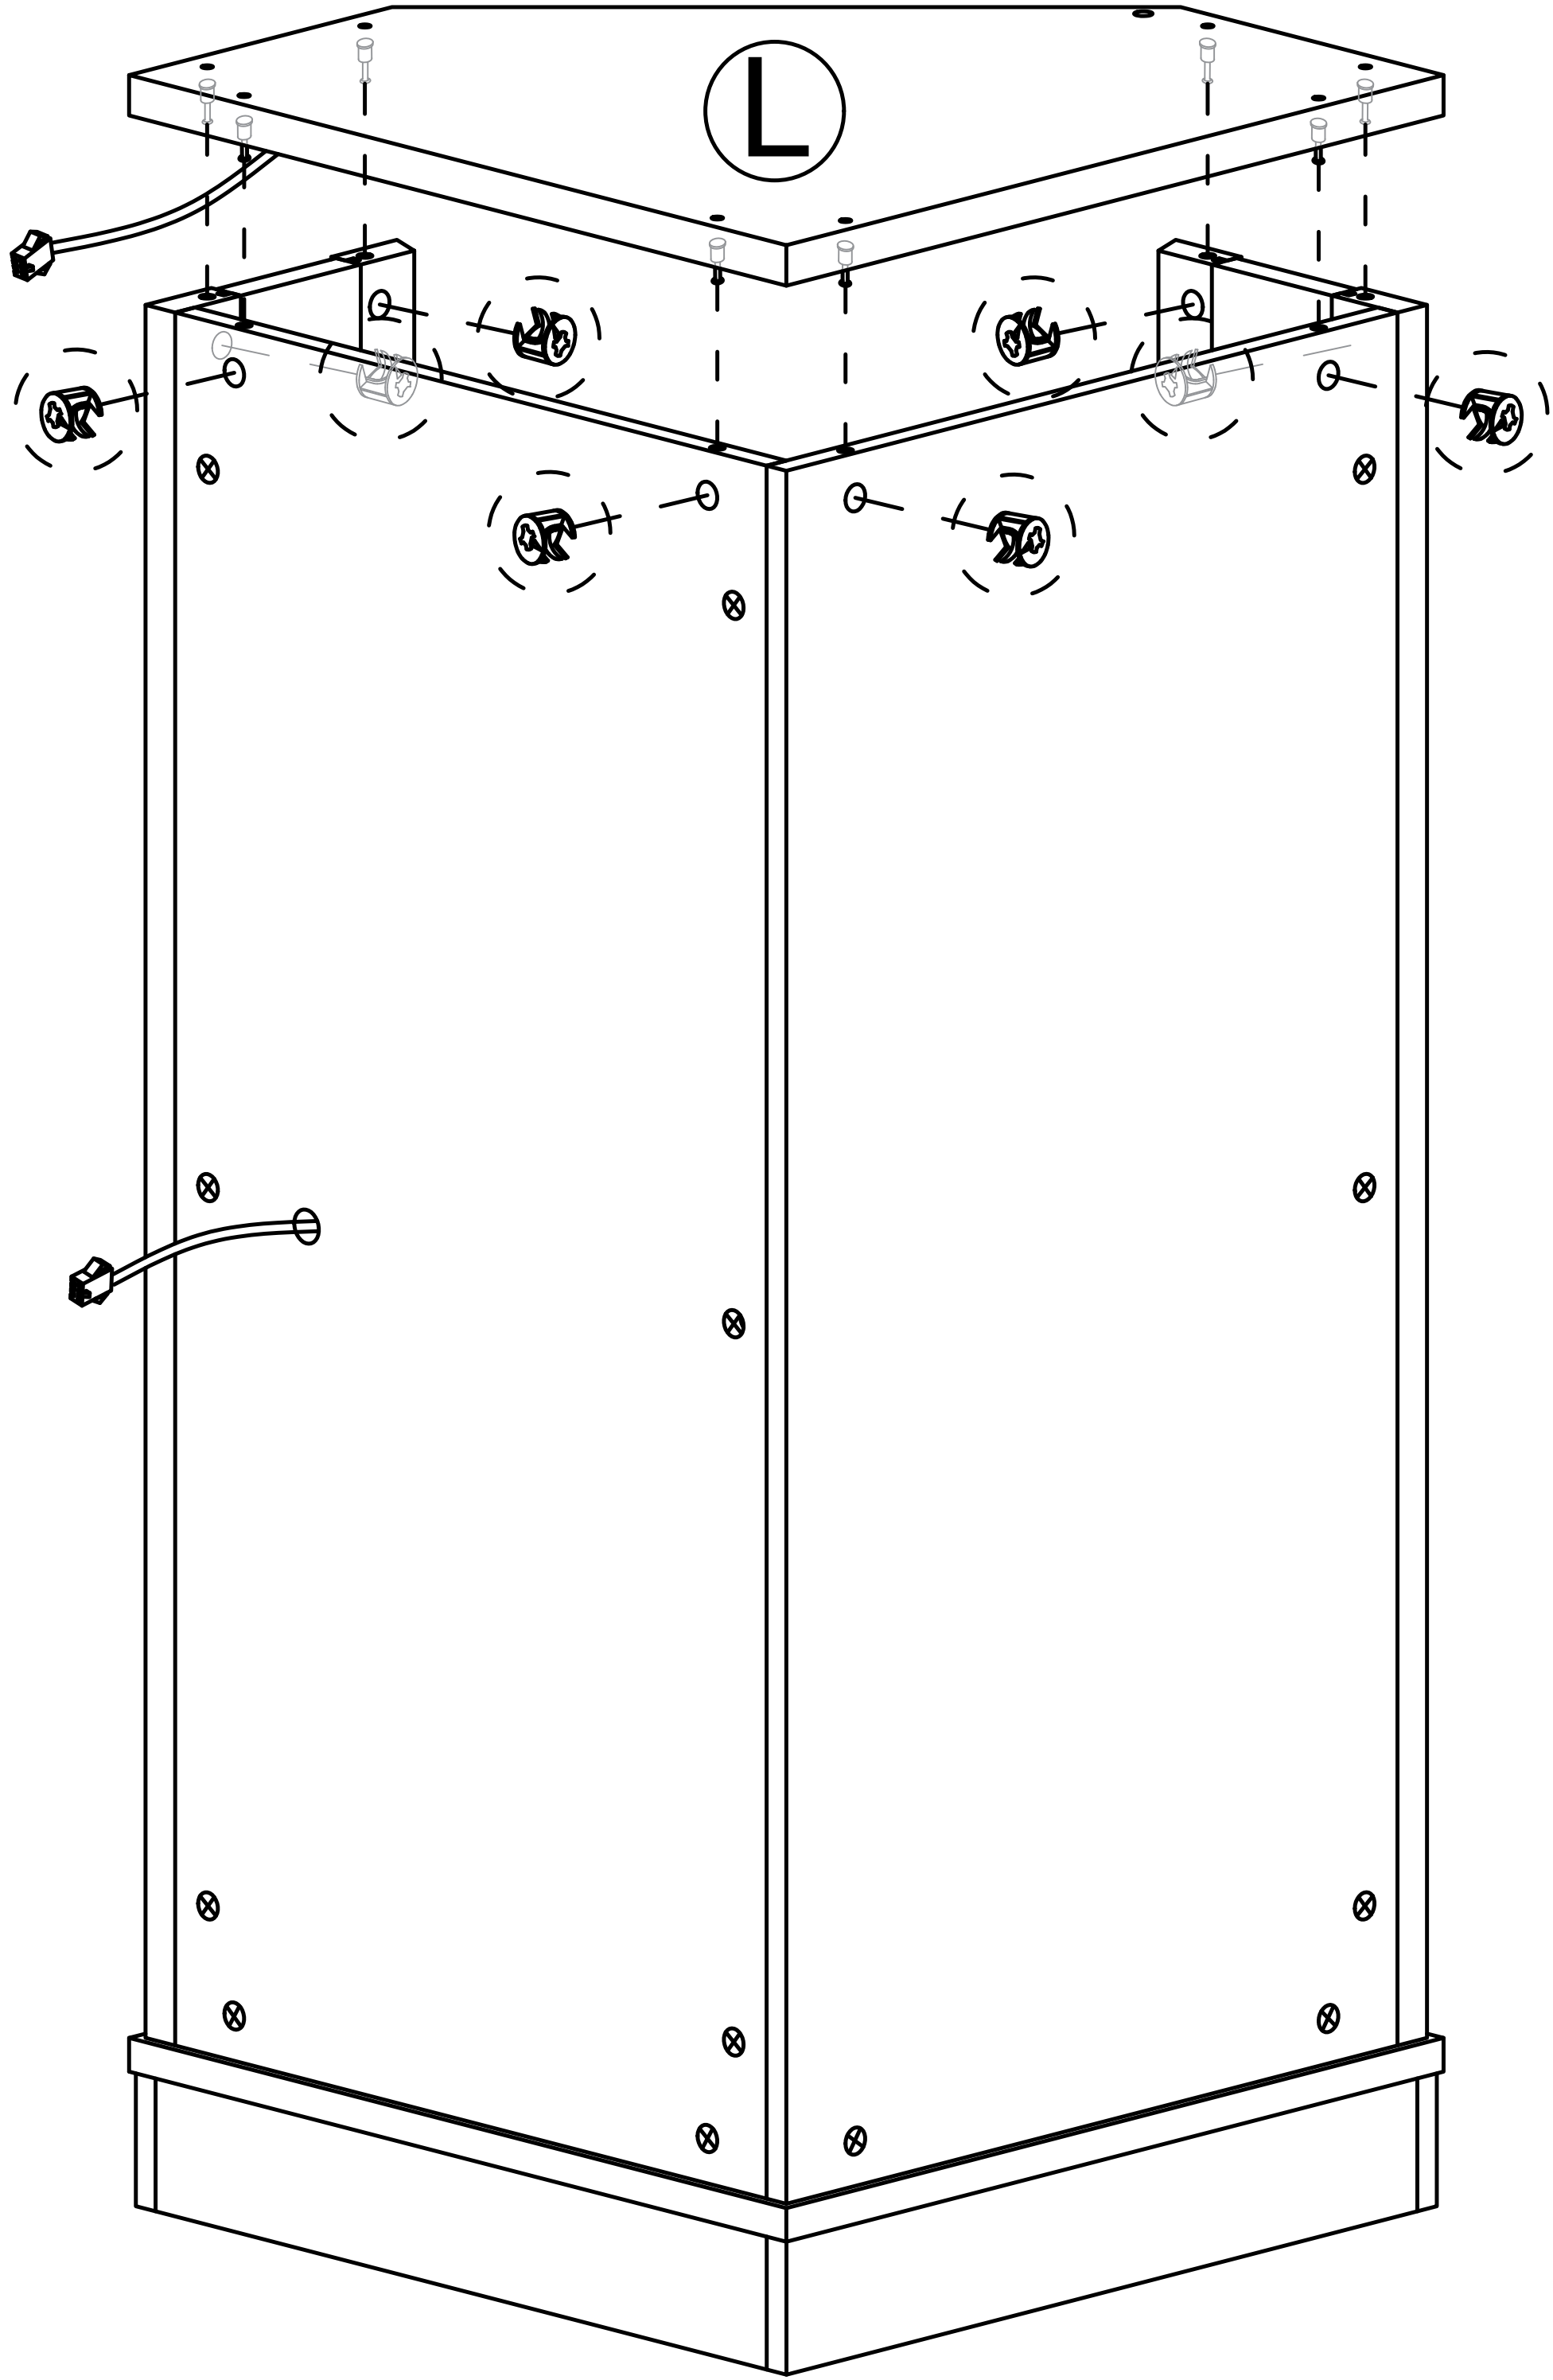


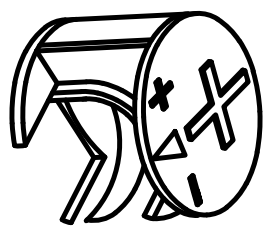- 2  x8


Step 21

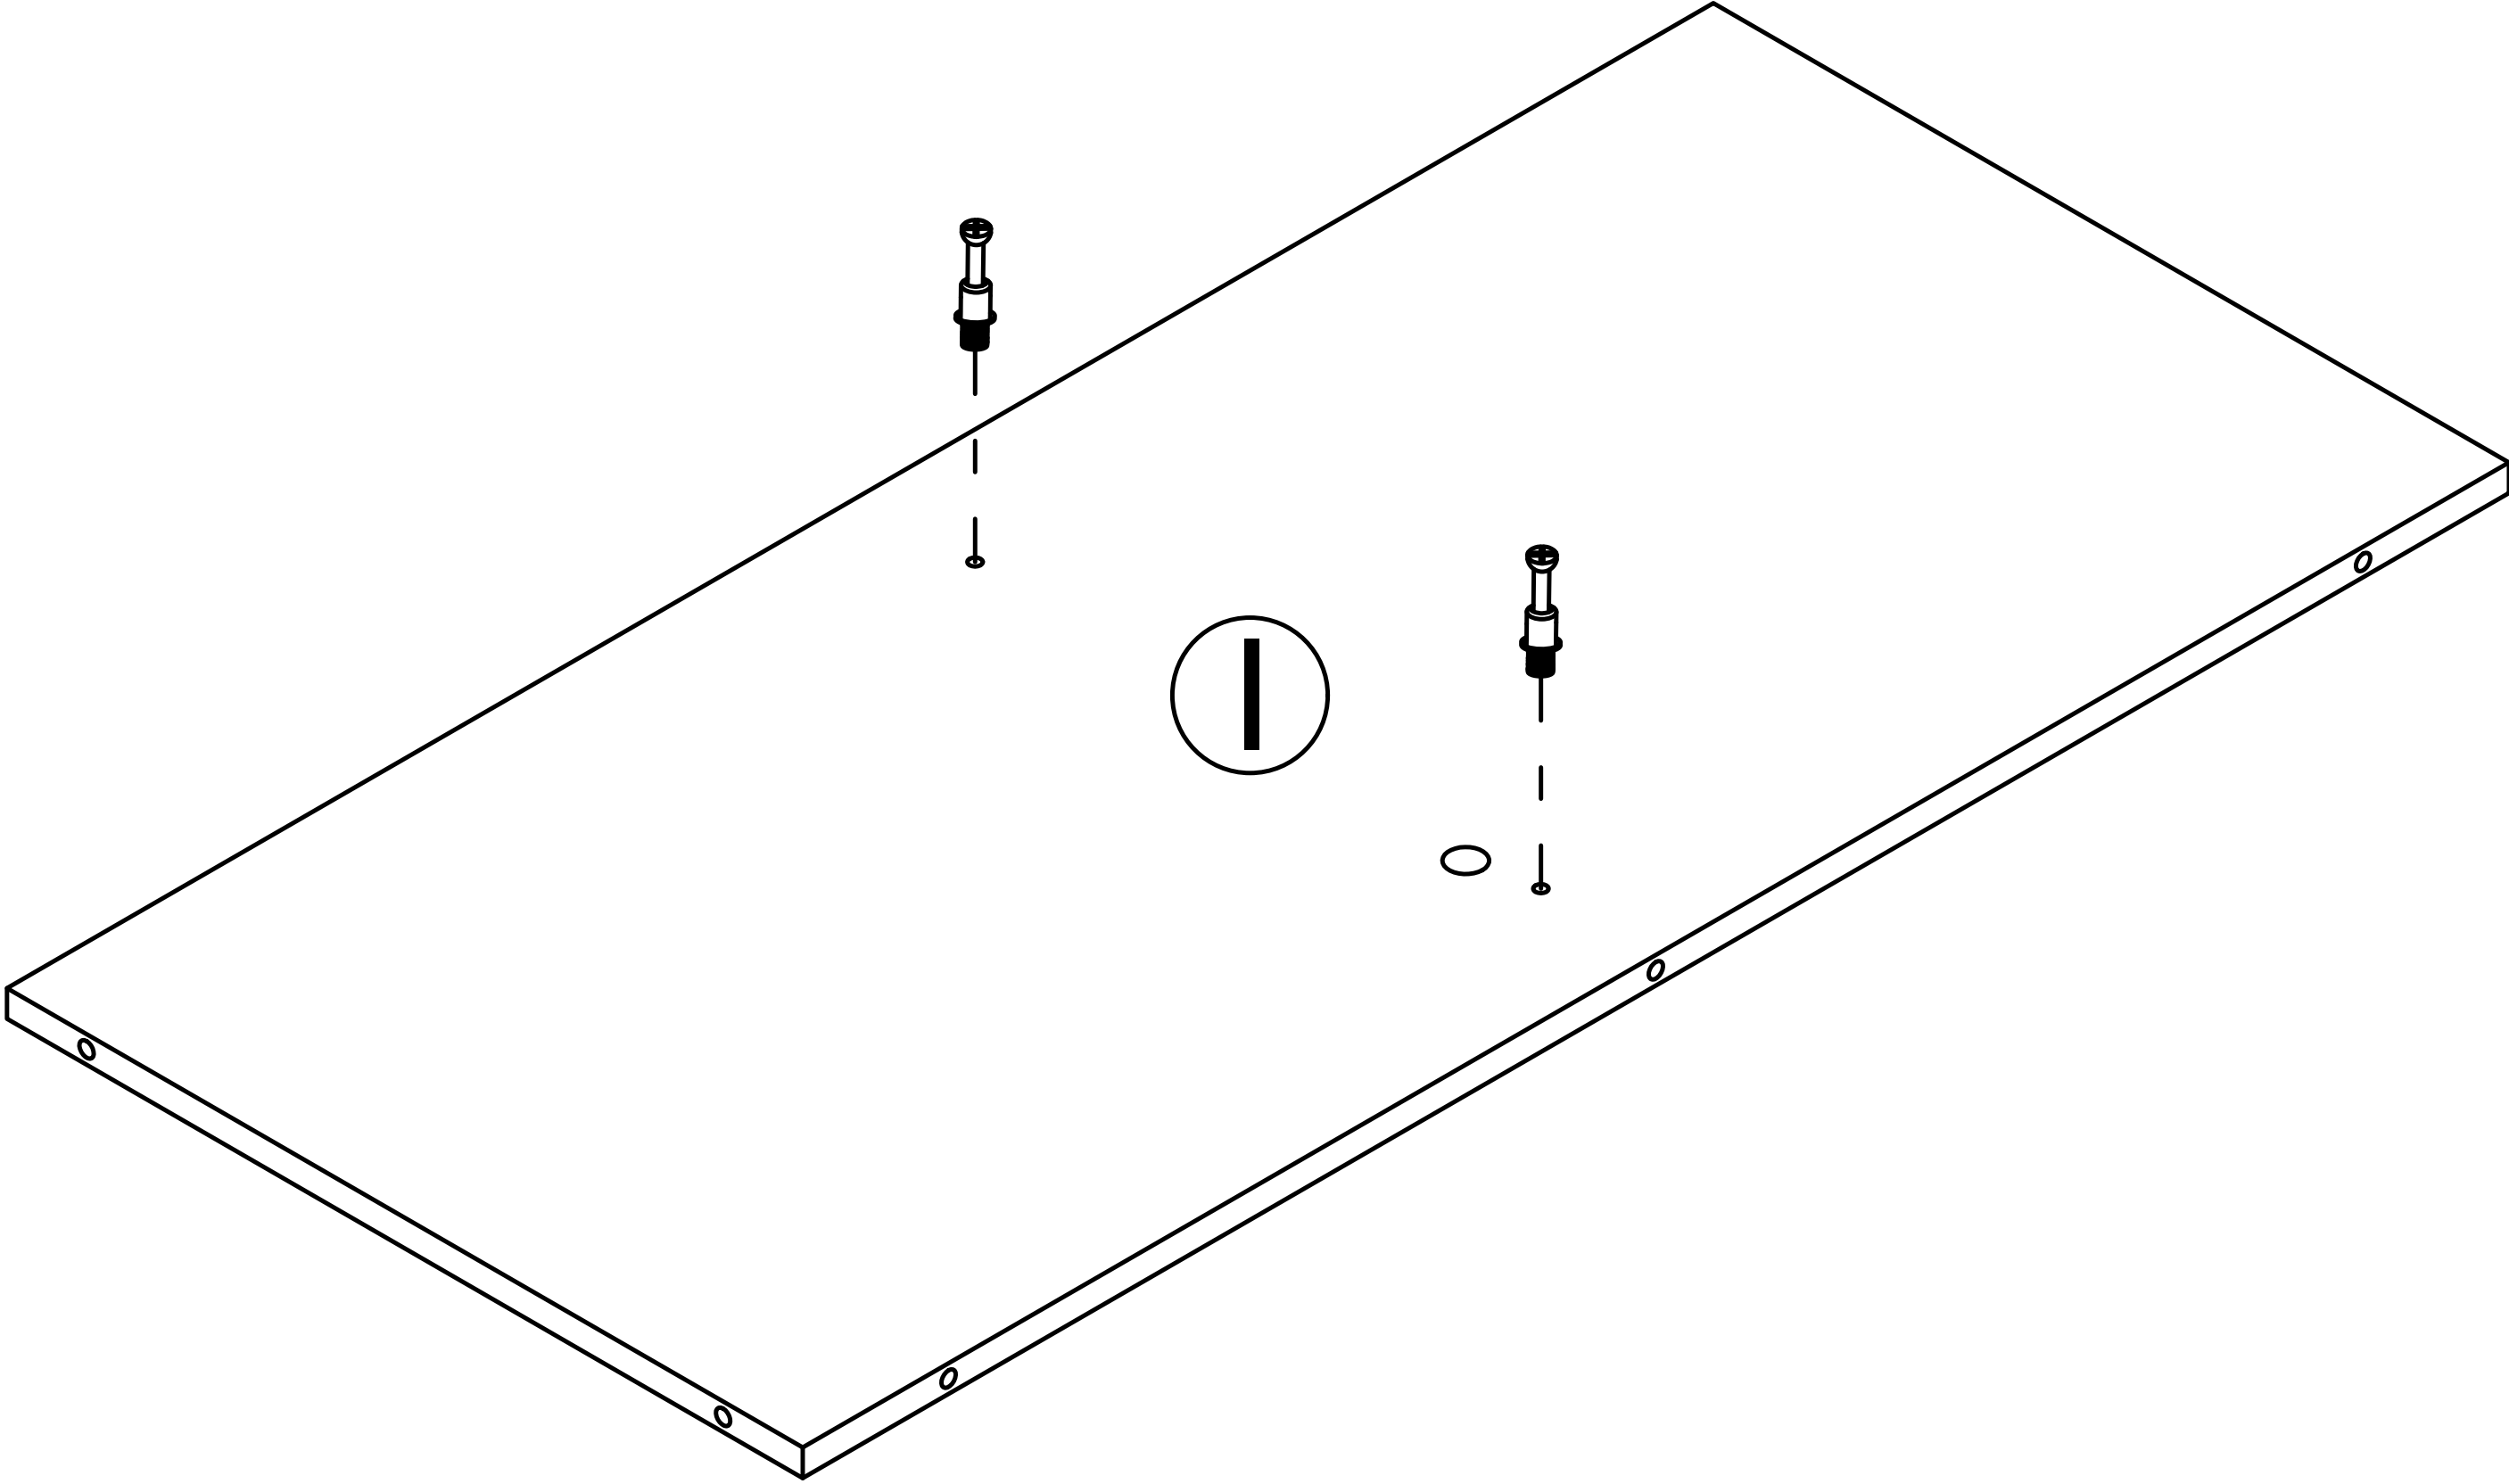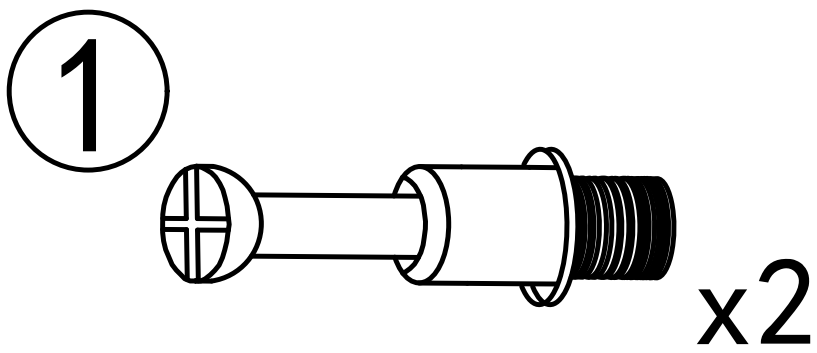

Step 22


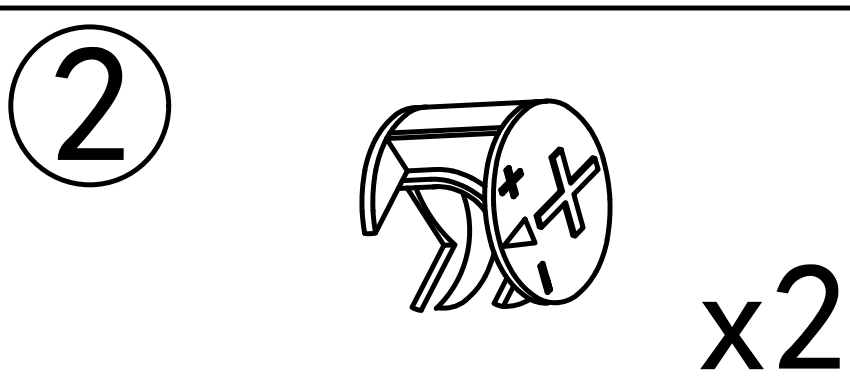


Attention: Don't let the I-board press the lamp wire.


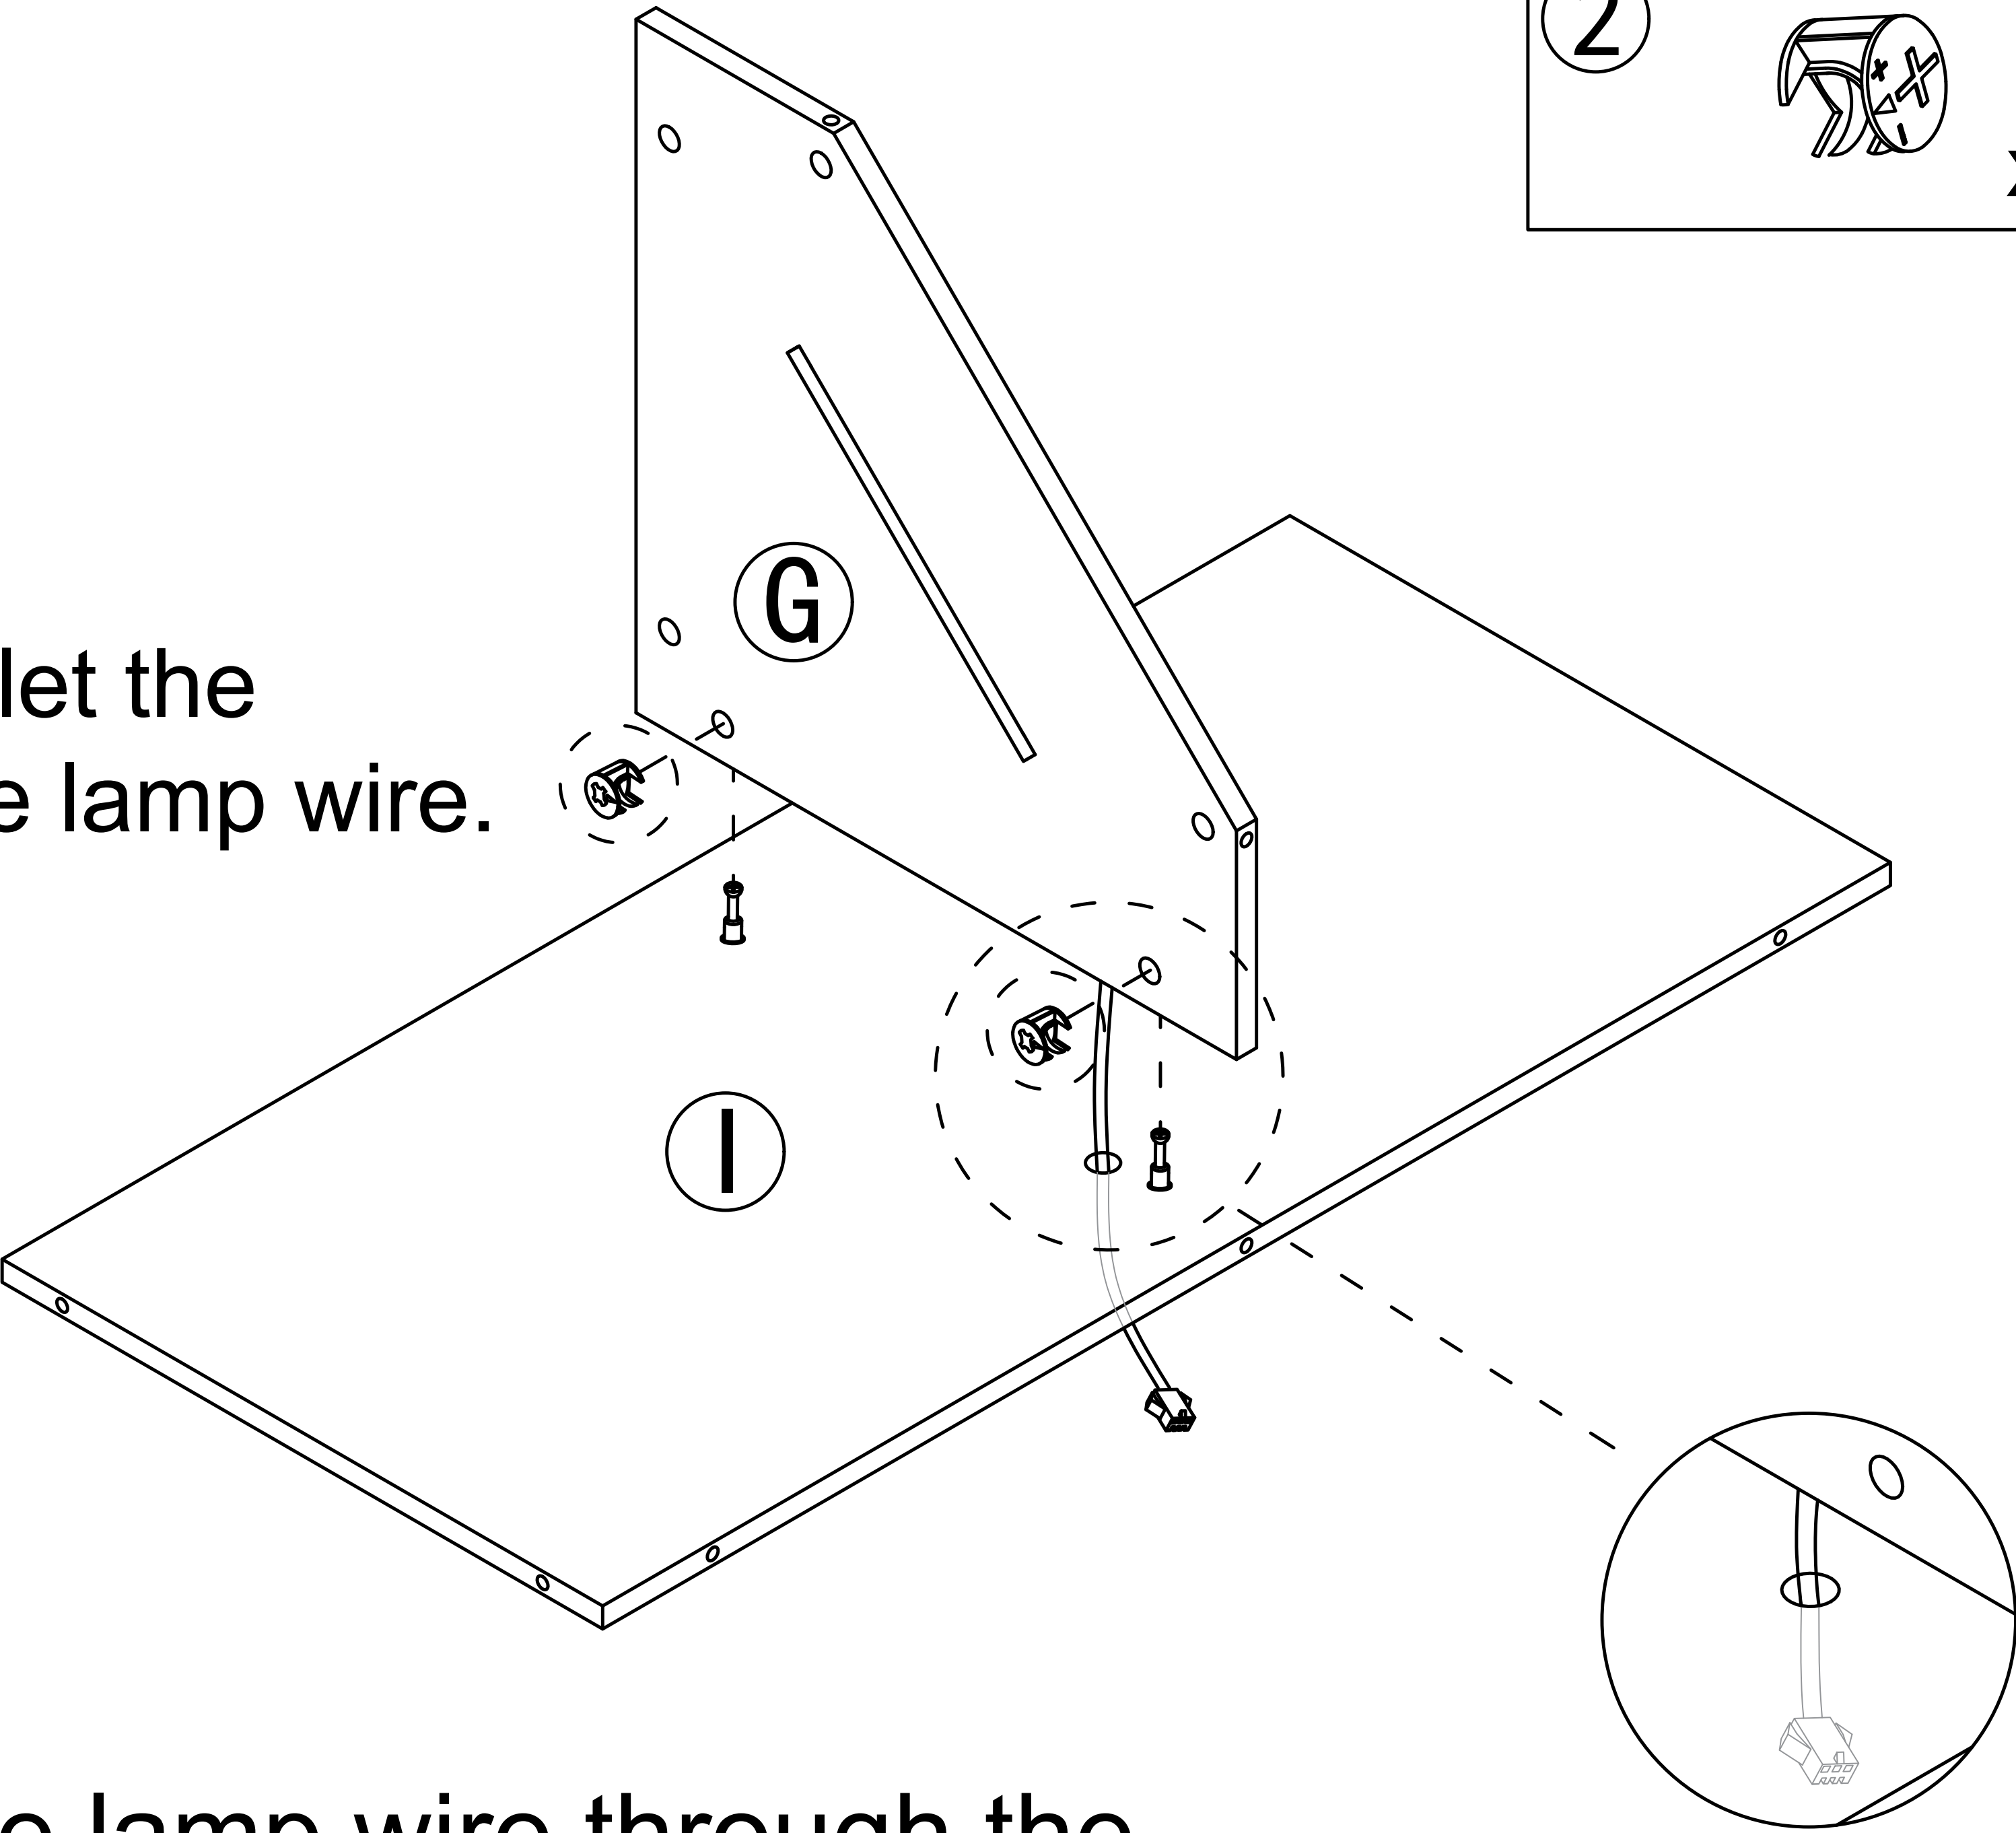


Note: pass the lamp wire through the through hole, and then install the I board.



Step 23

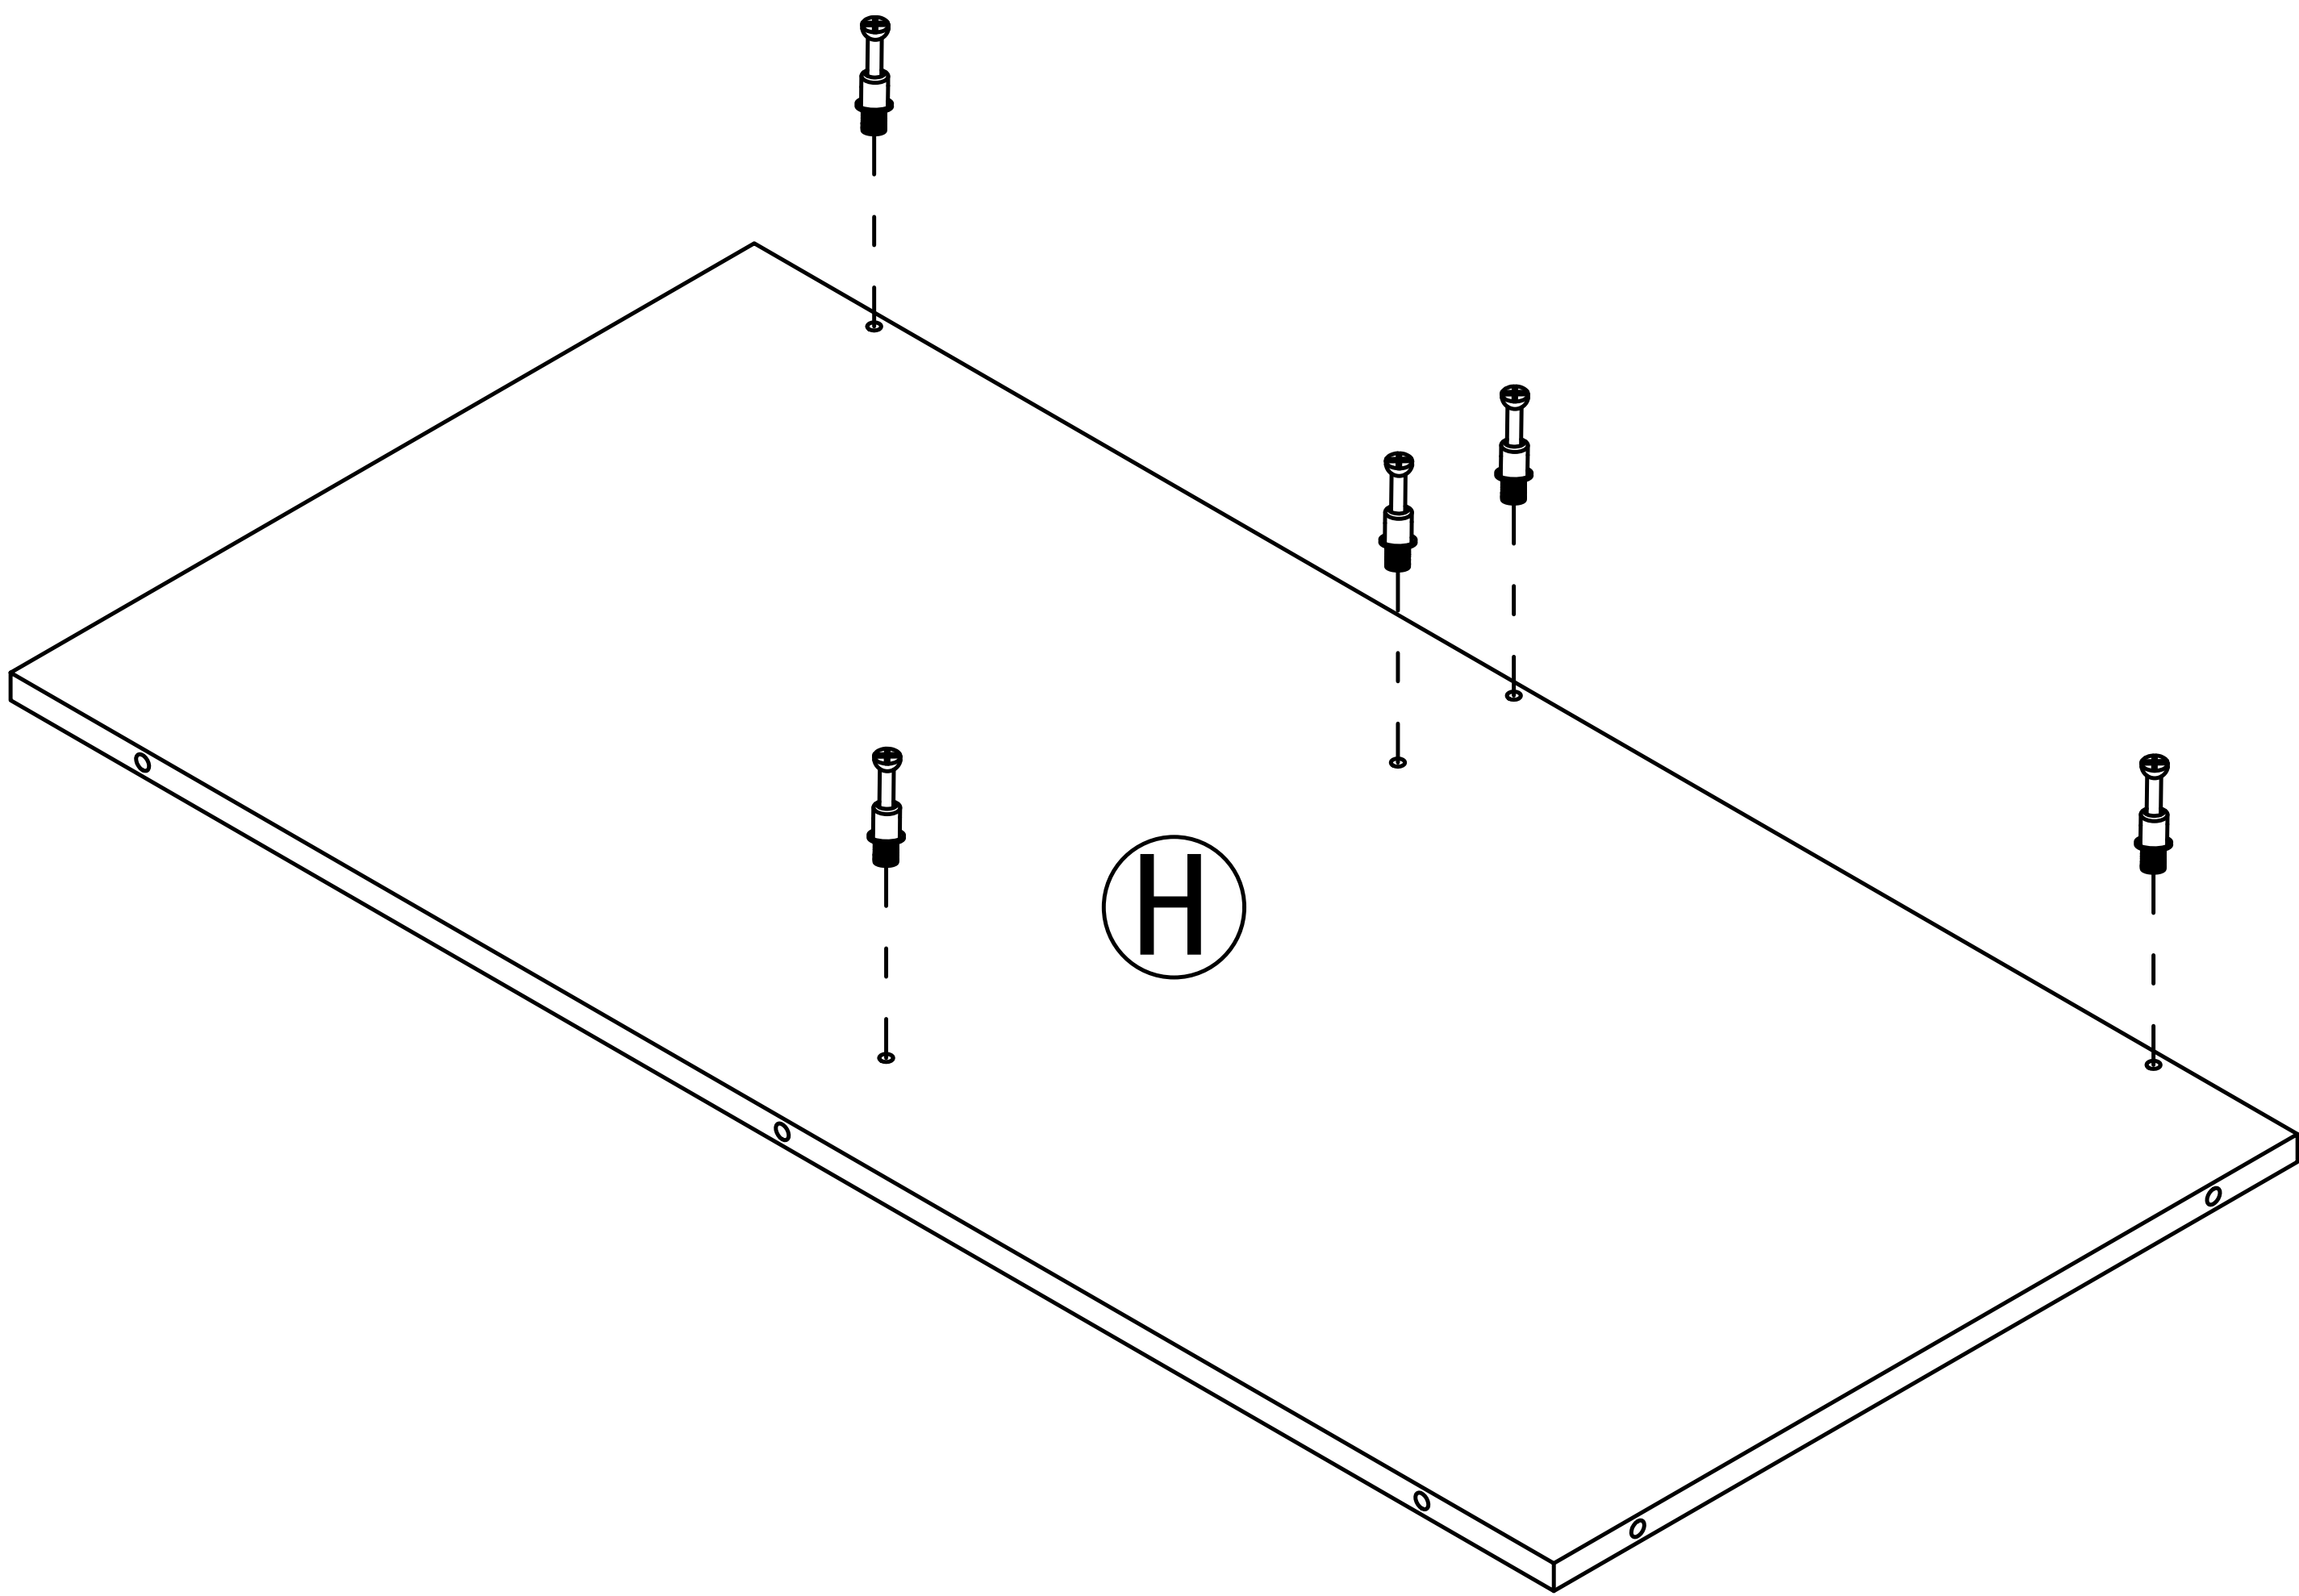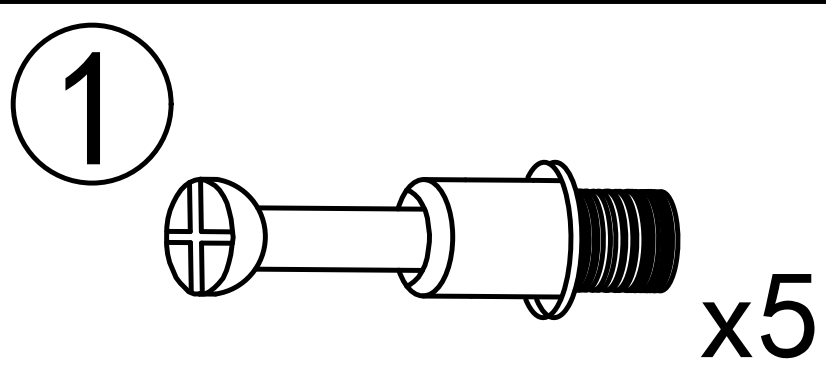



Step 24

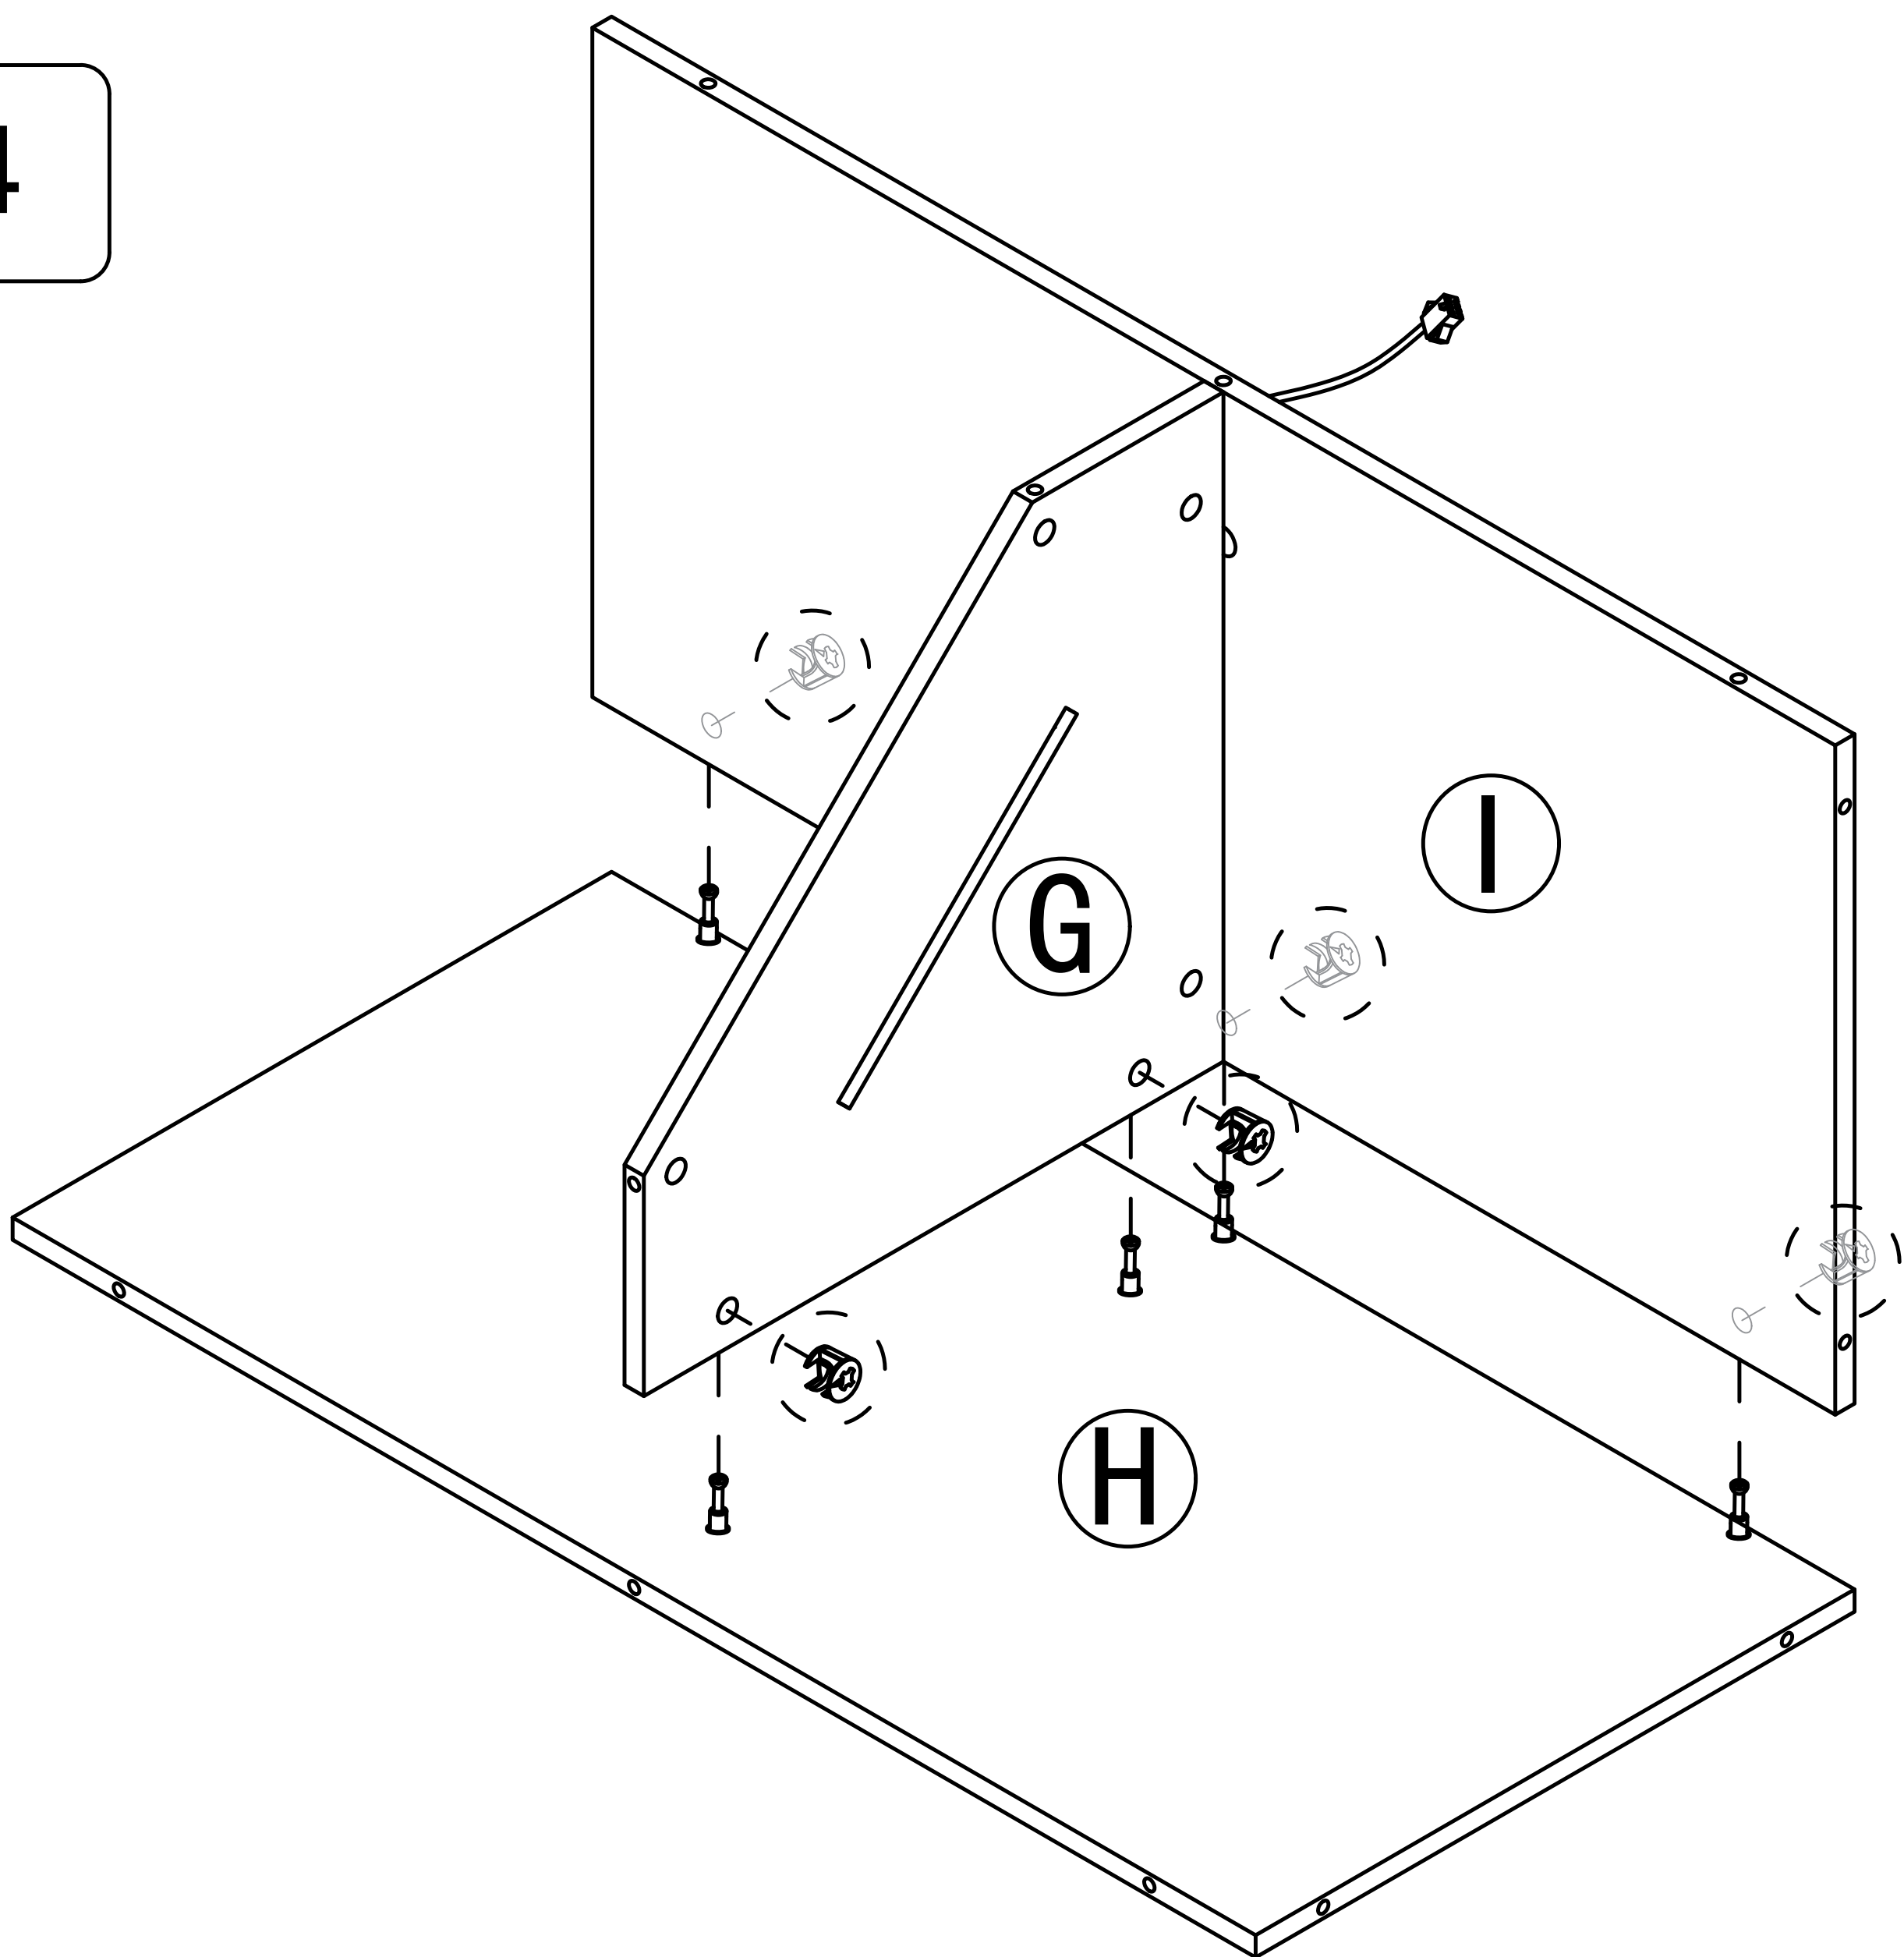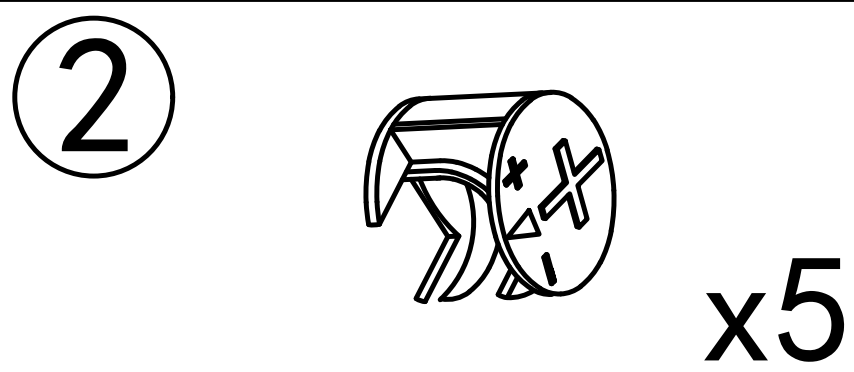

Step 25

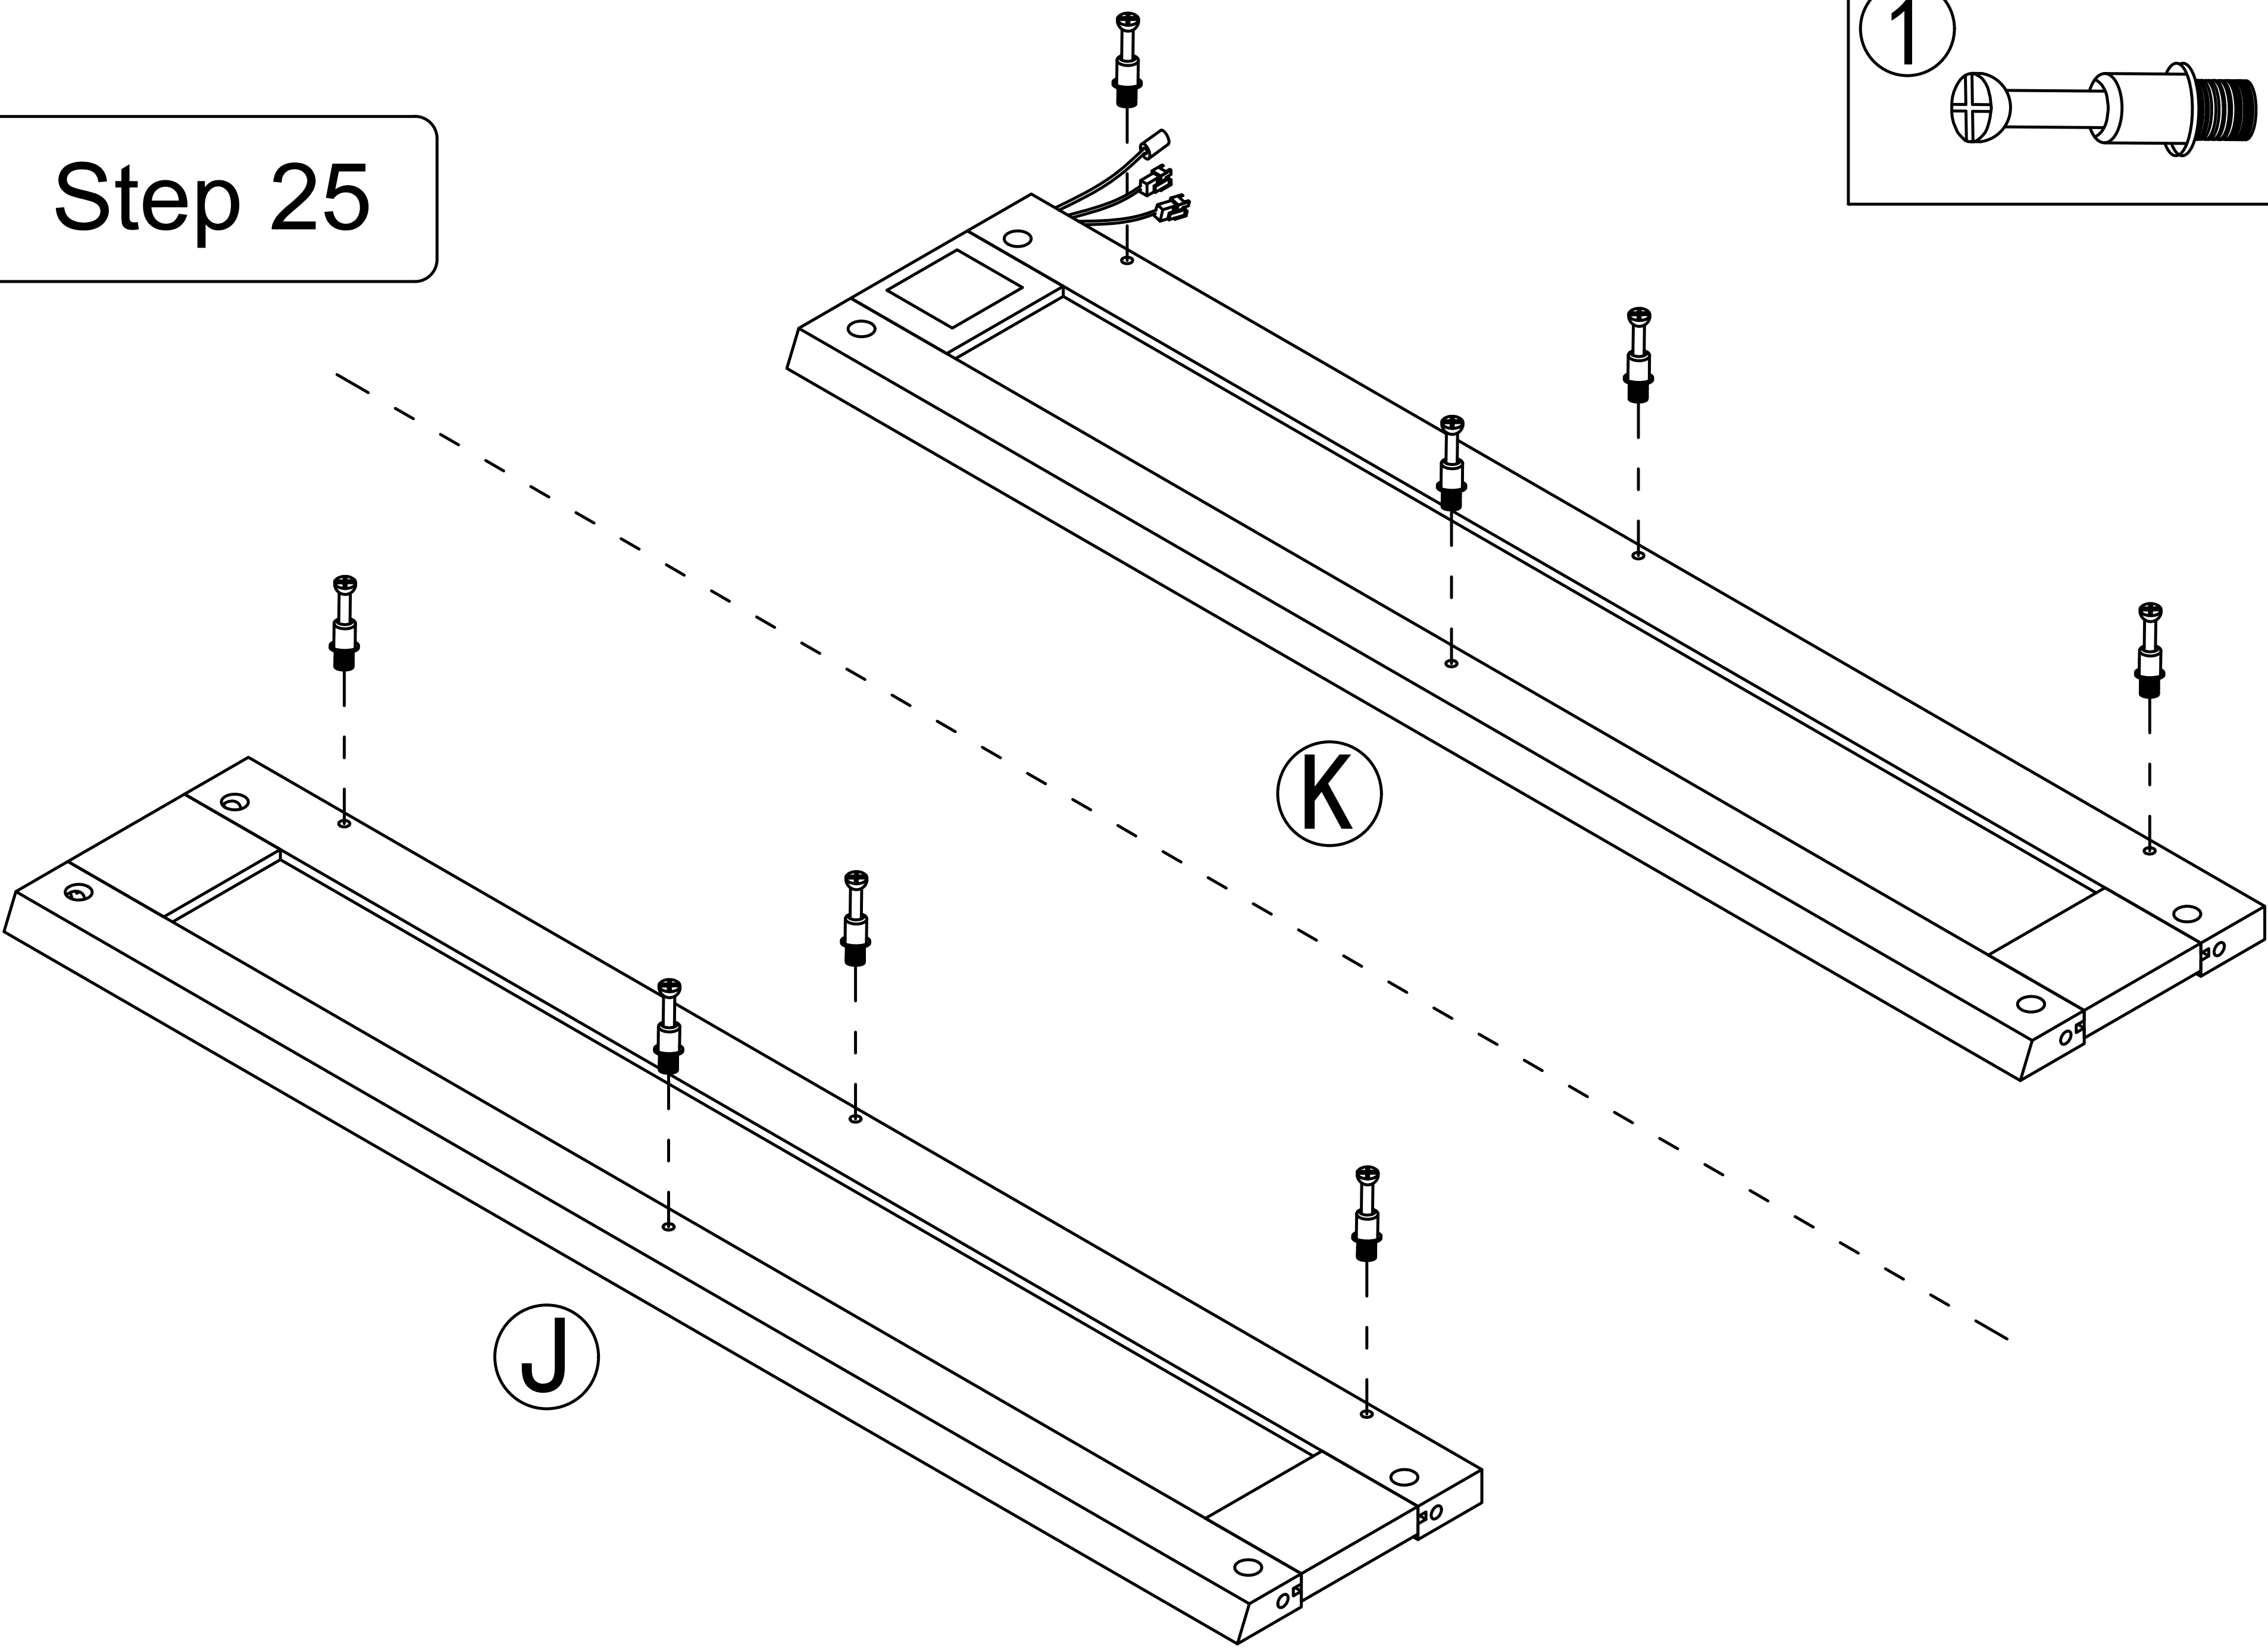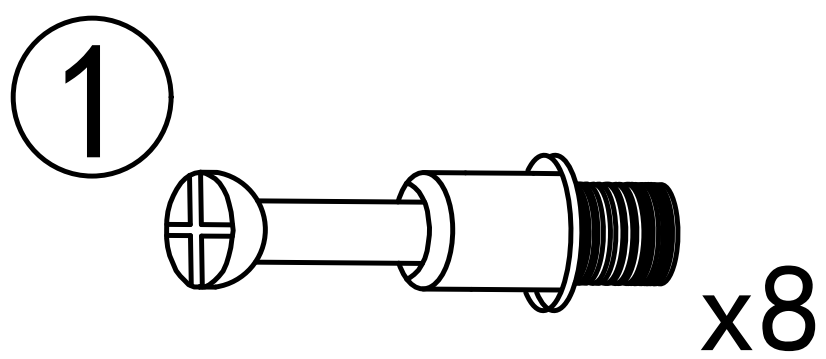


Step 26

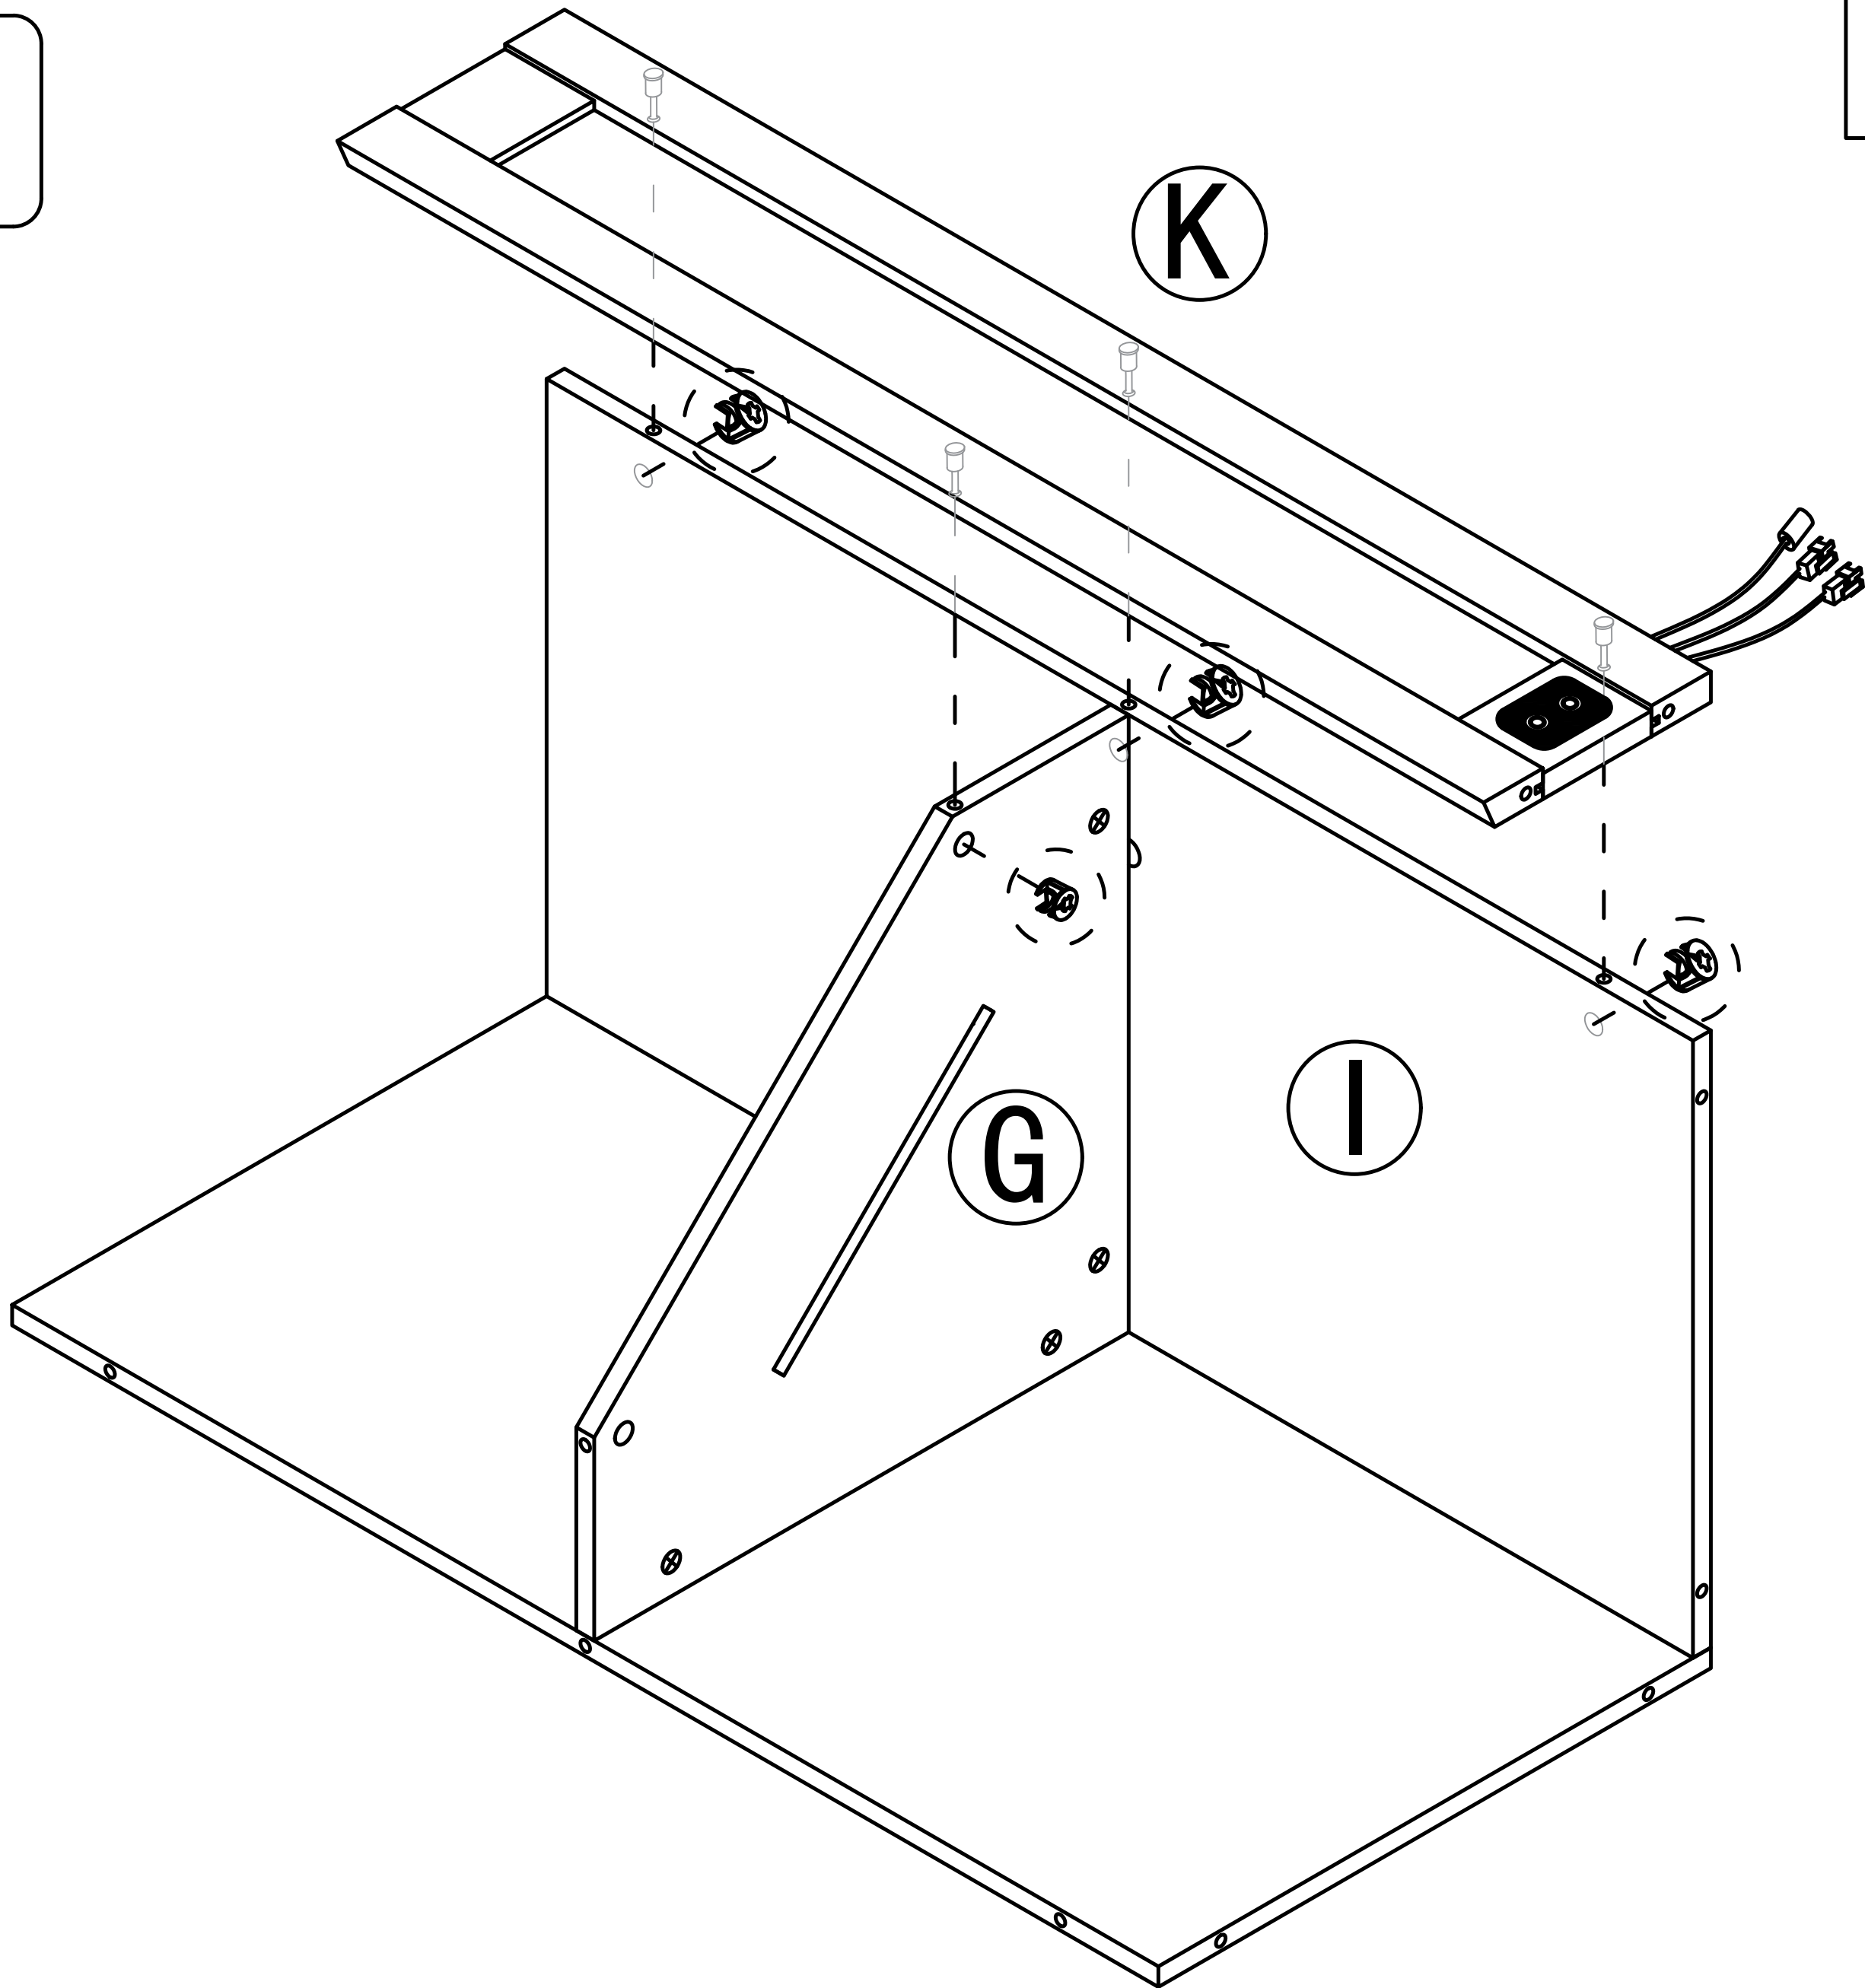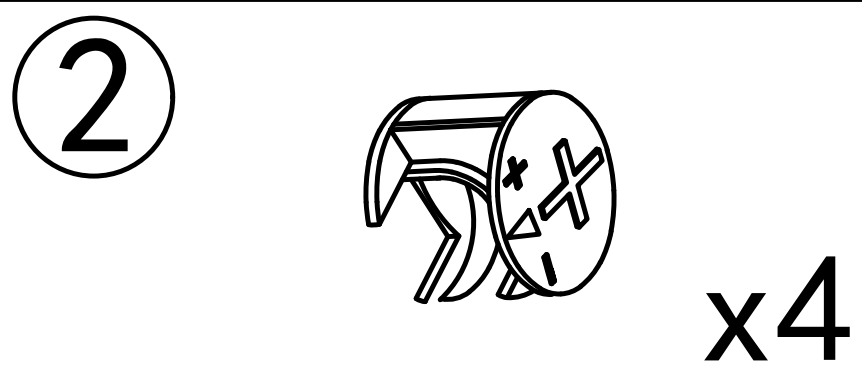


Step 27

2

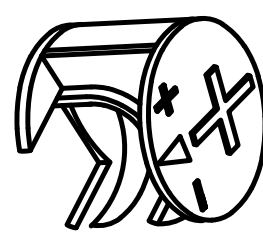


x1

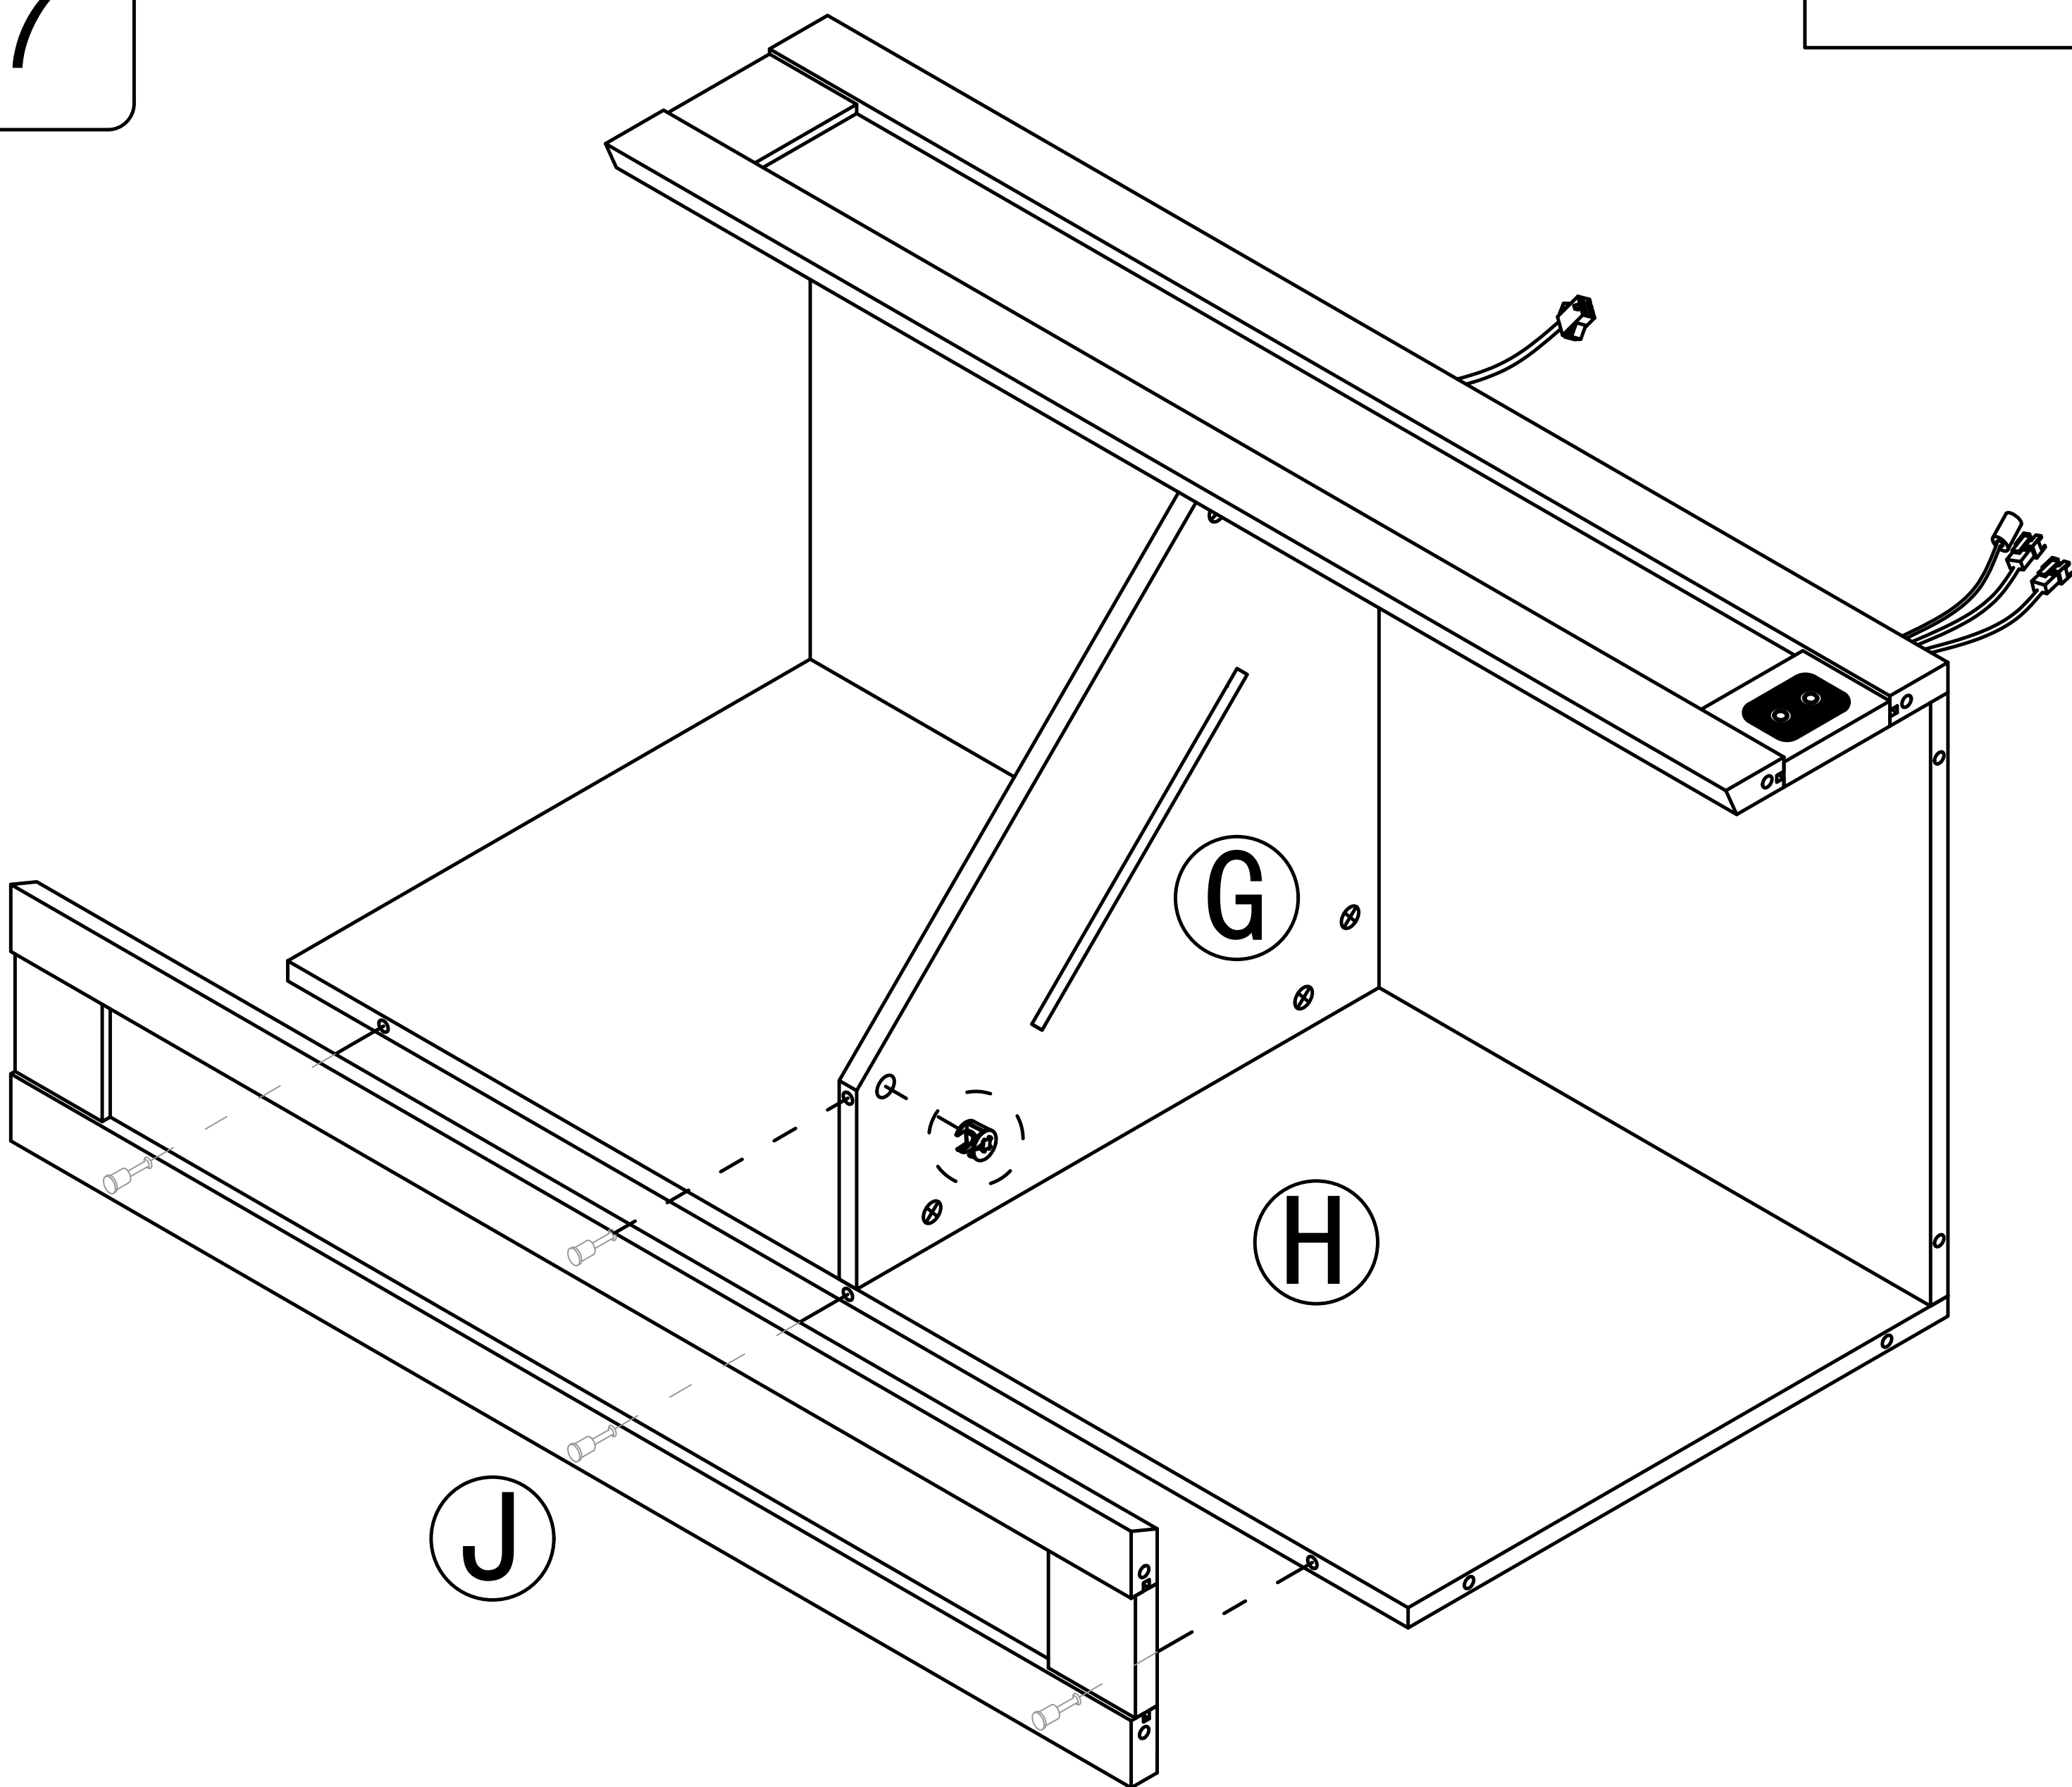


Step 28

2

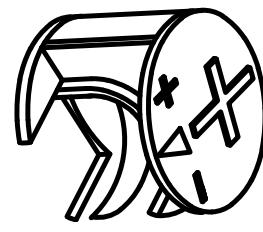


x3

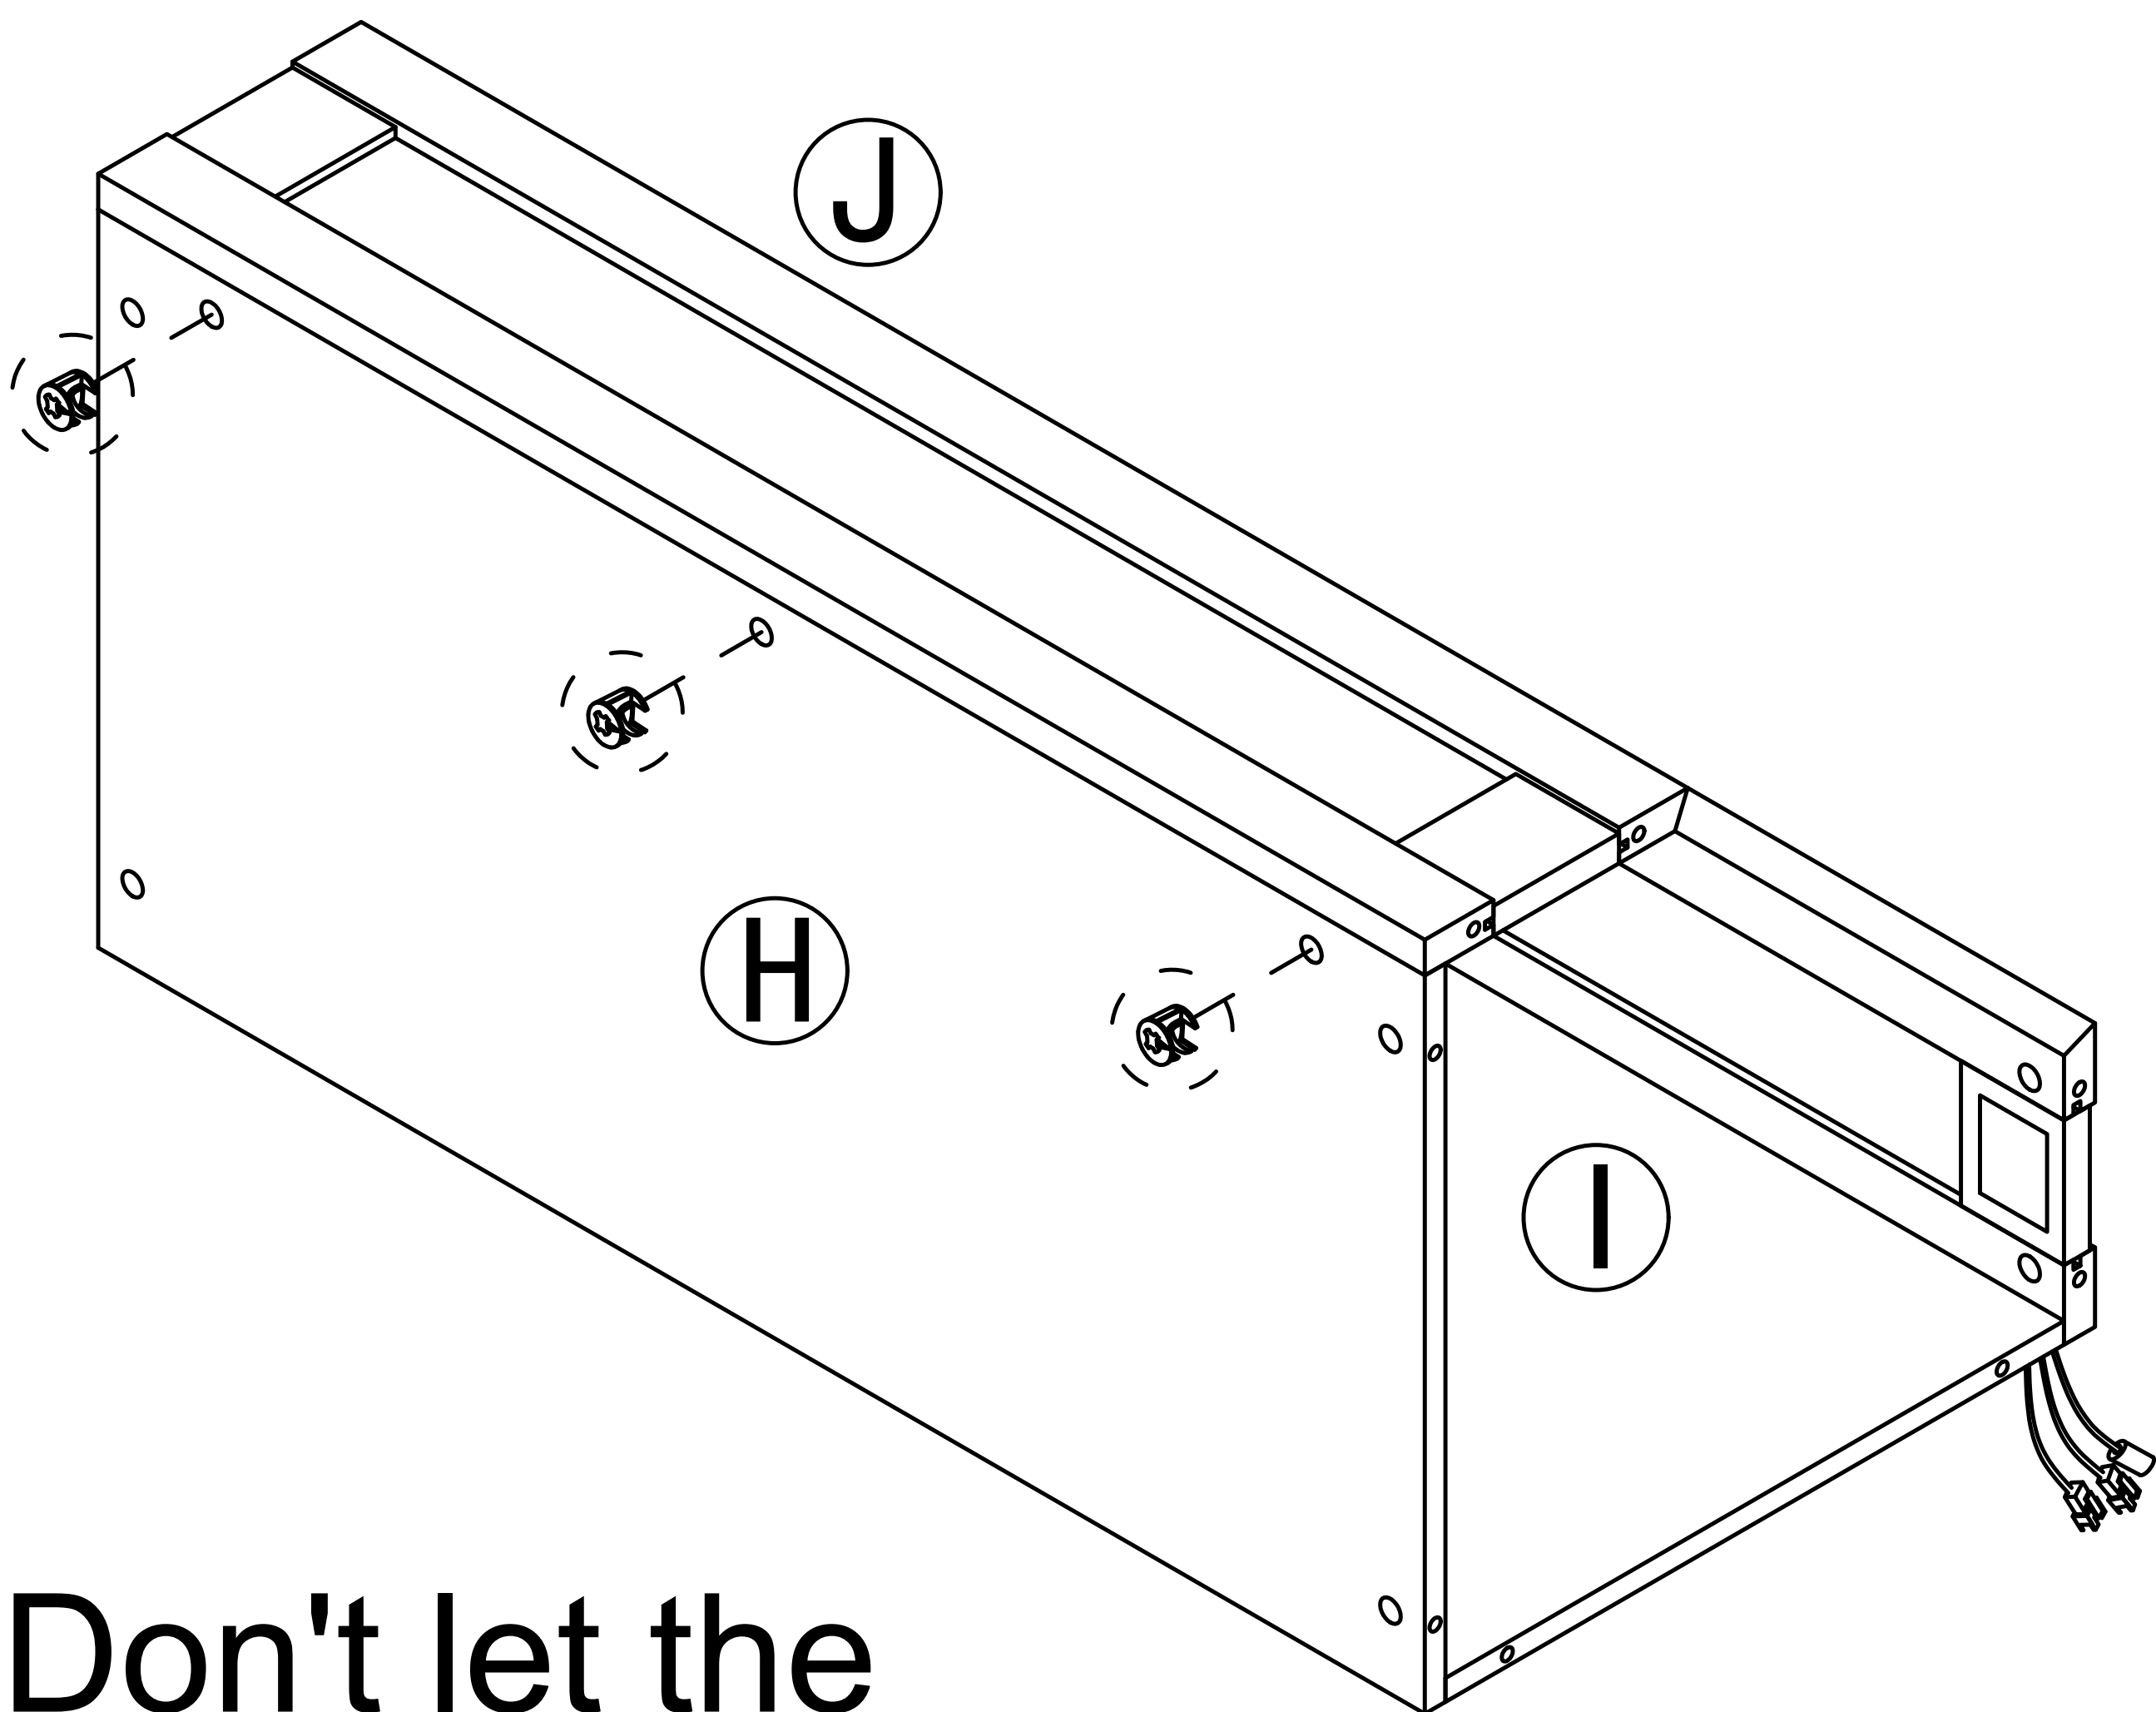


Attention: Don't let the
I-board press the lamp wire.


Step 29

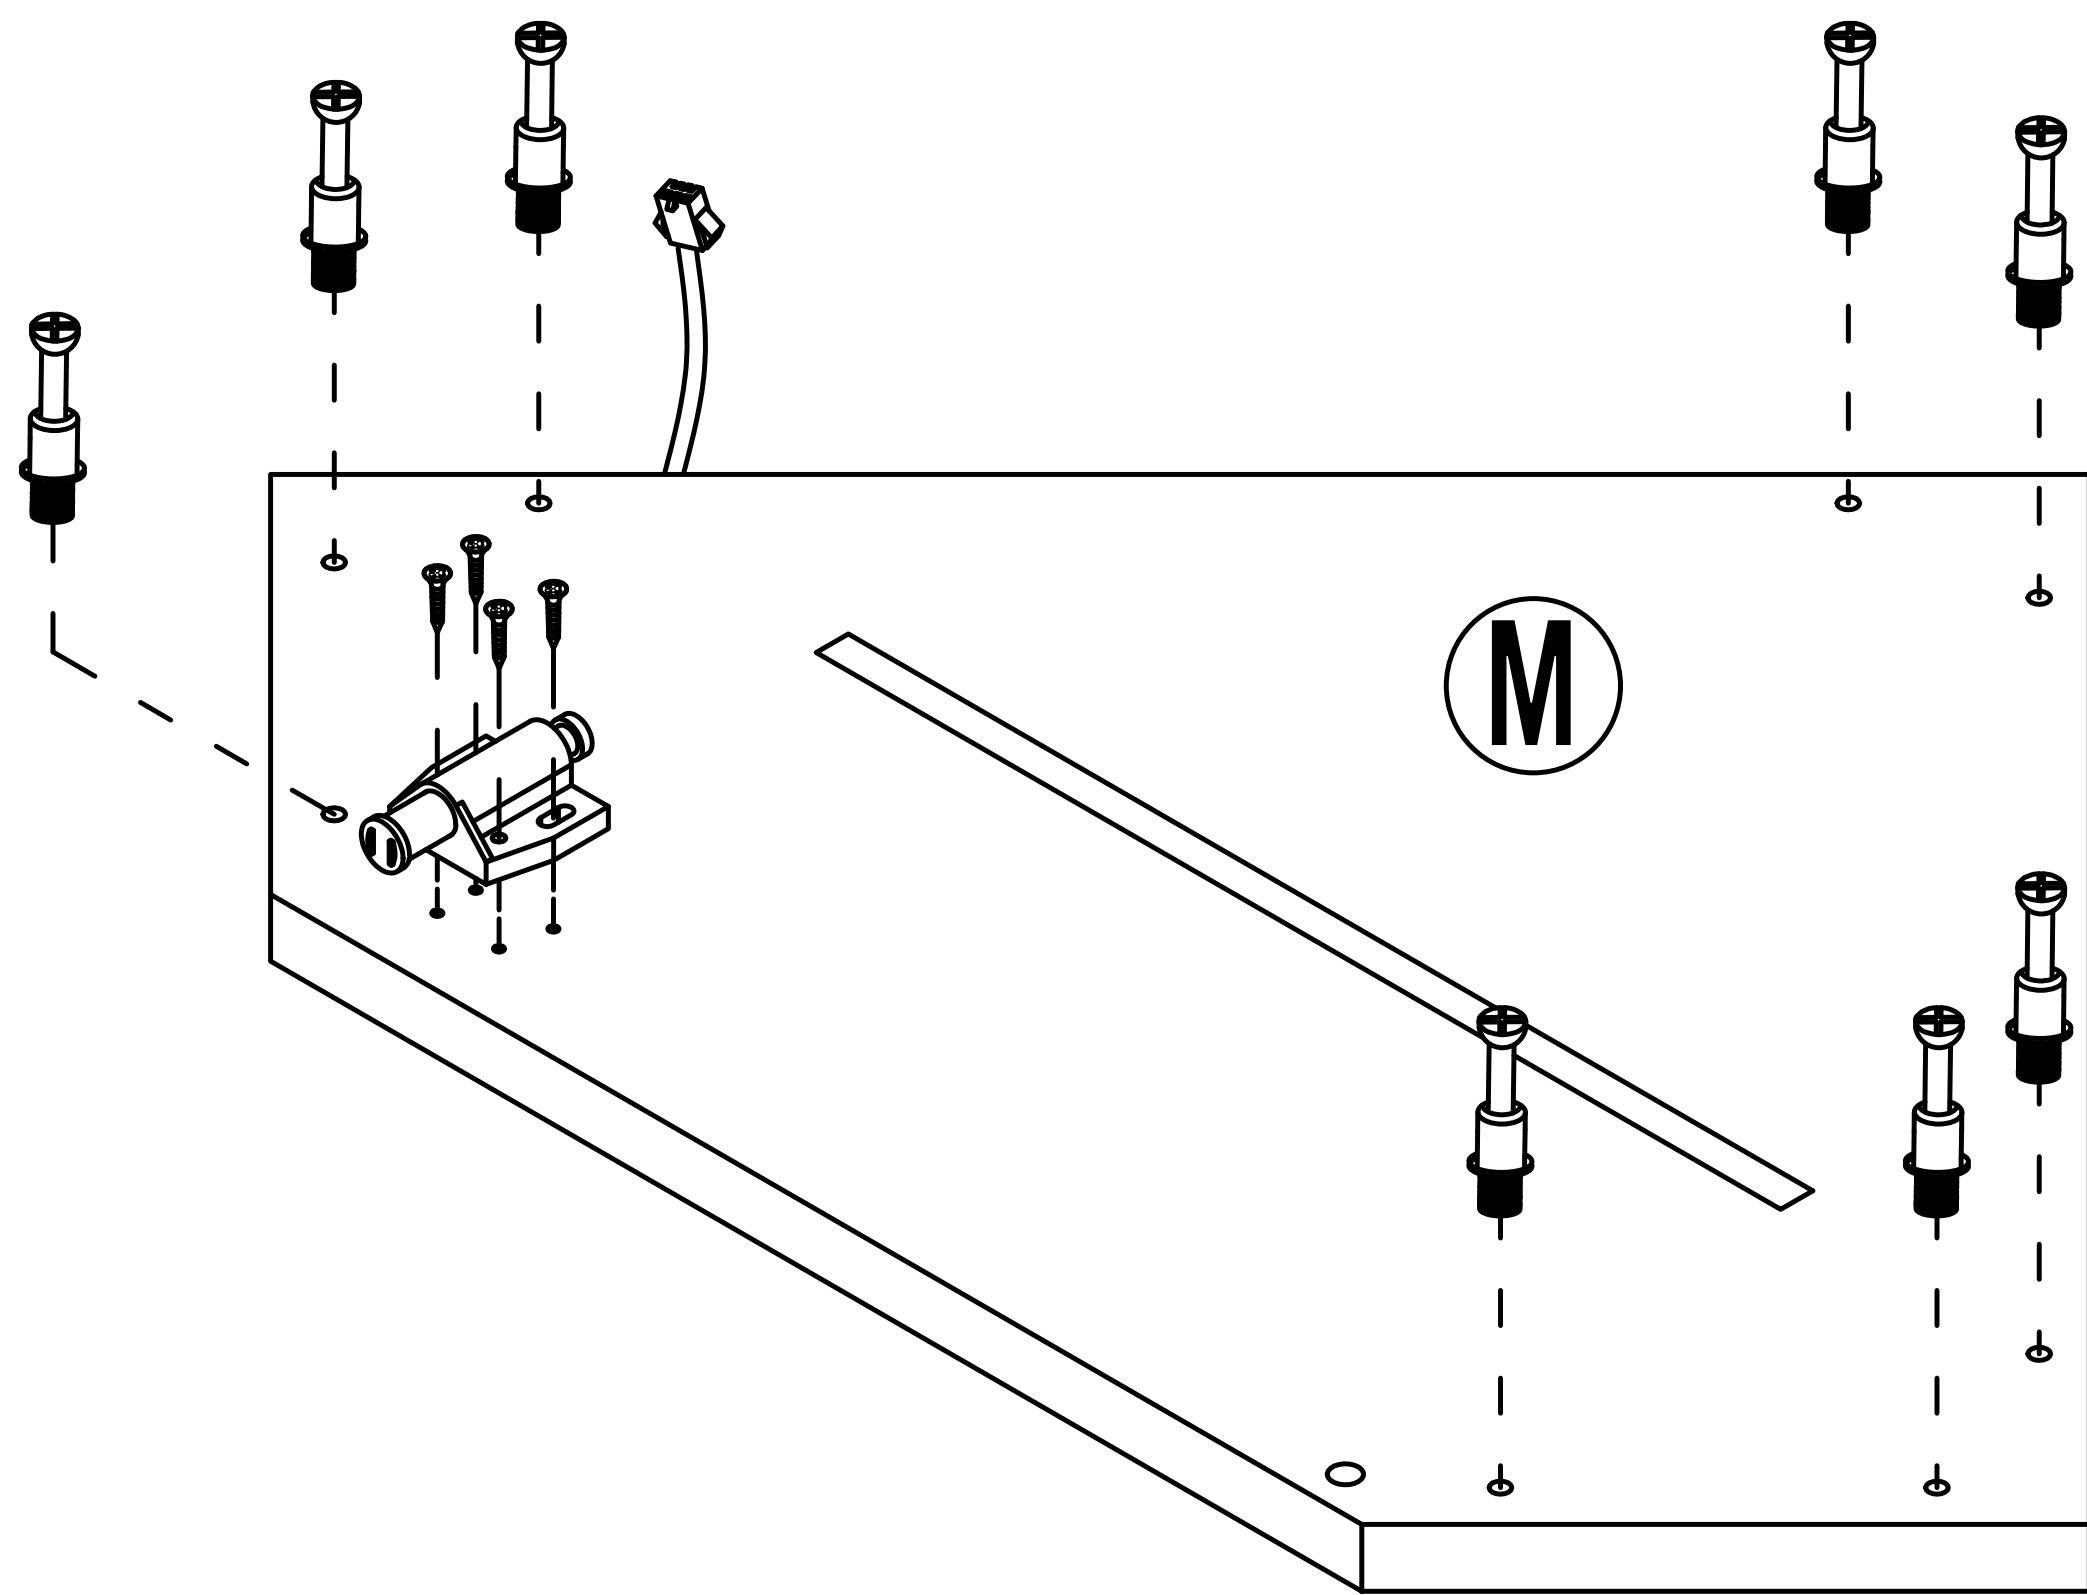


- 1

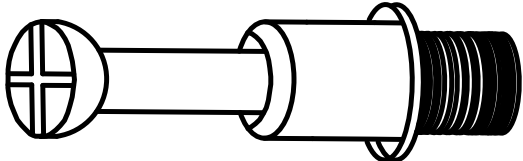

x8
- 7

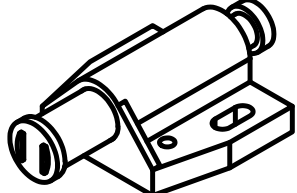


x1




x4

Step 30

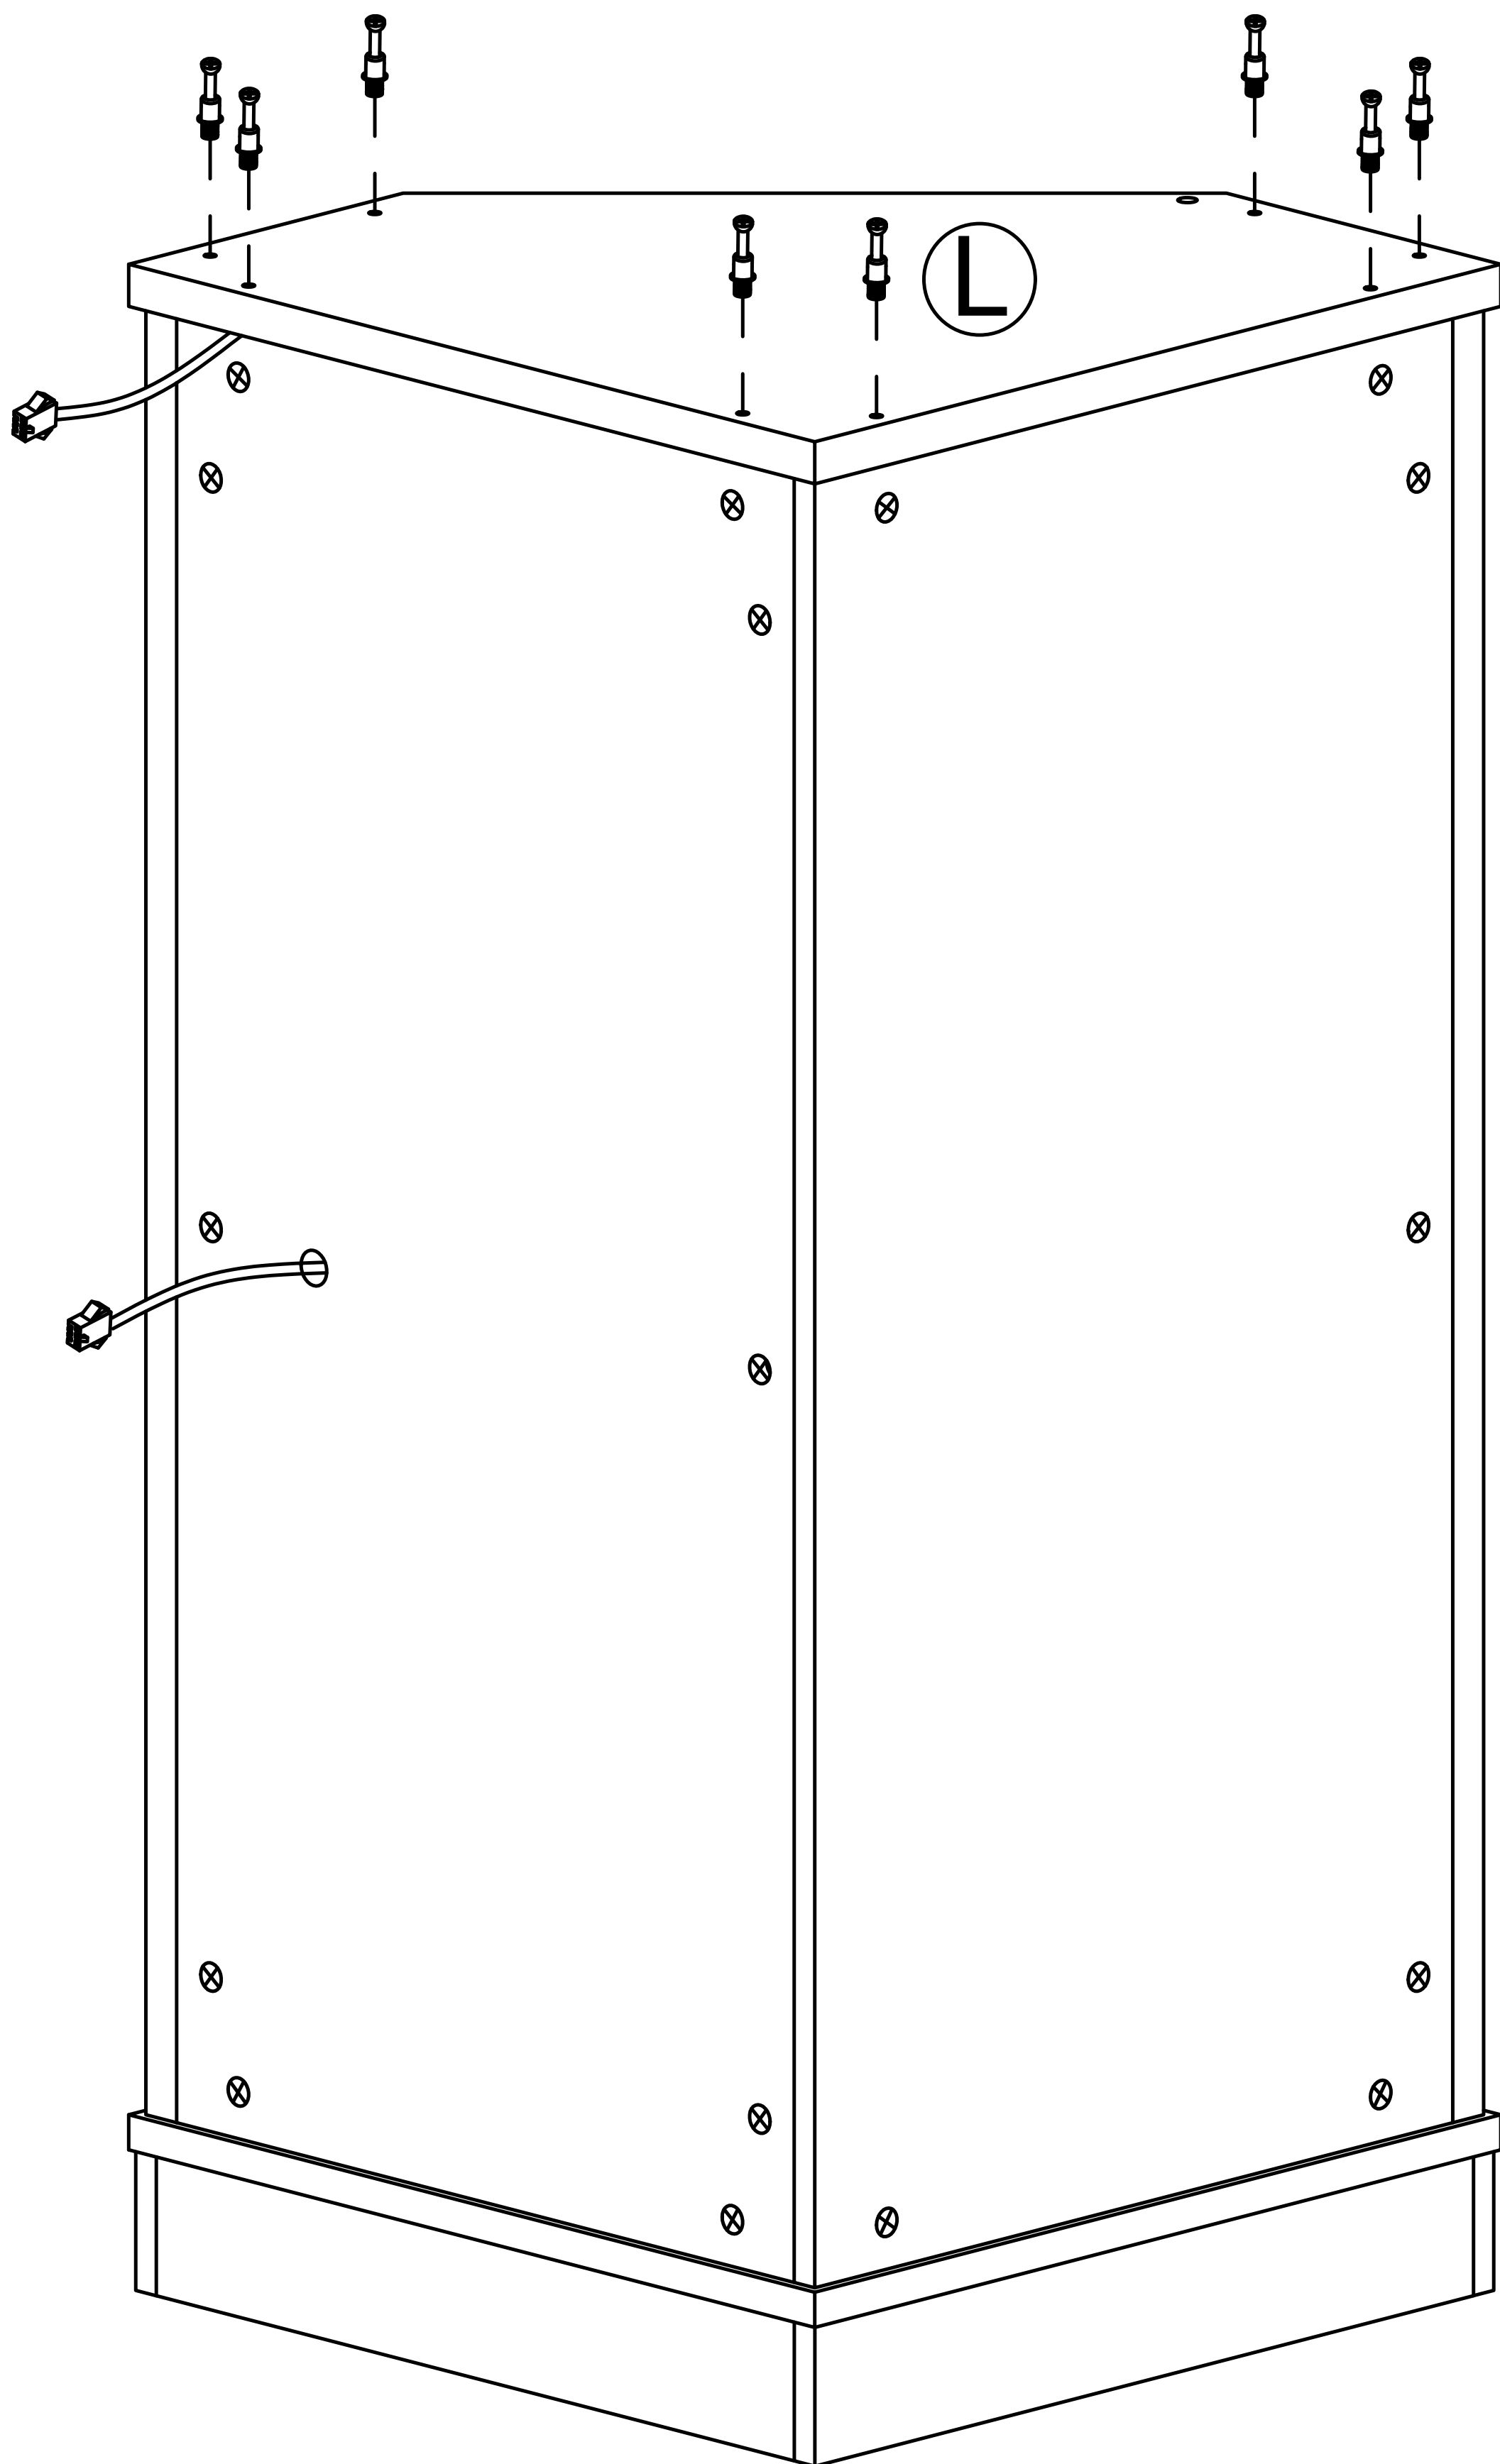


- 1

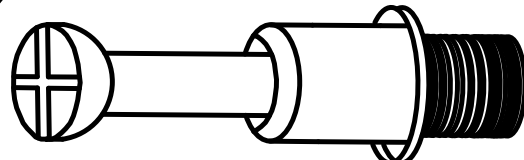


x8

Step 31

2

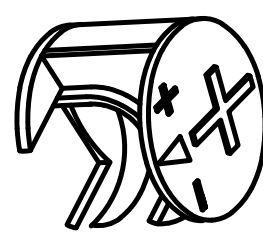


x8

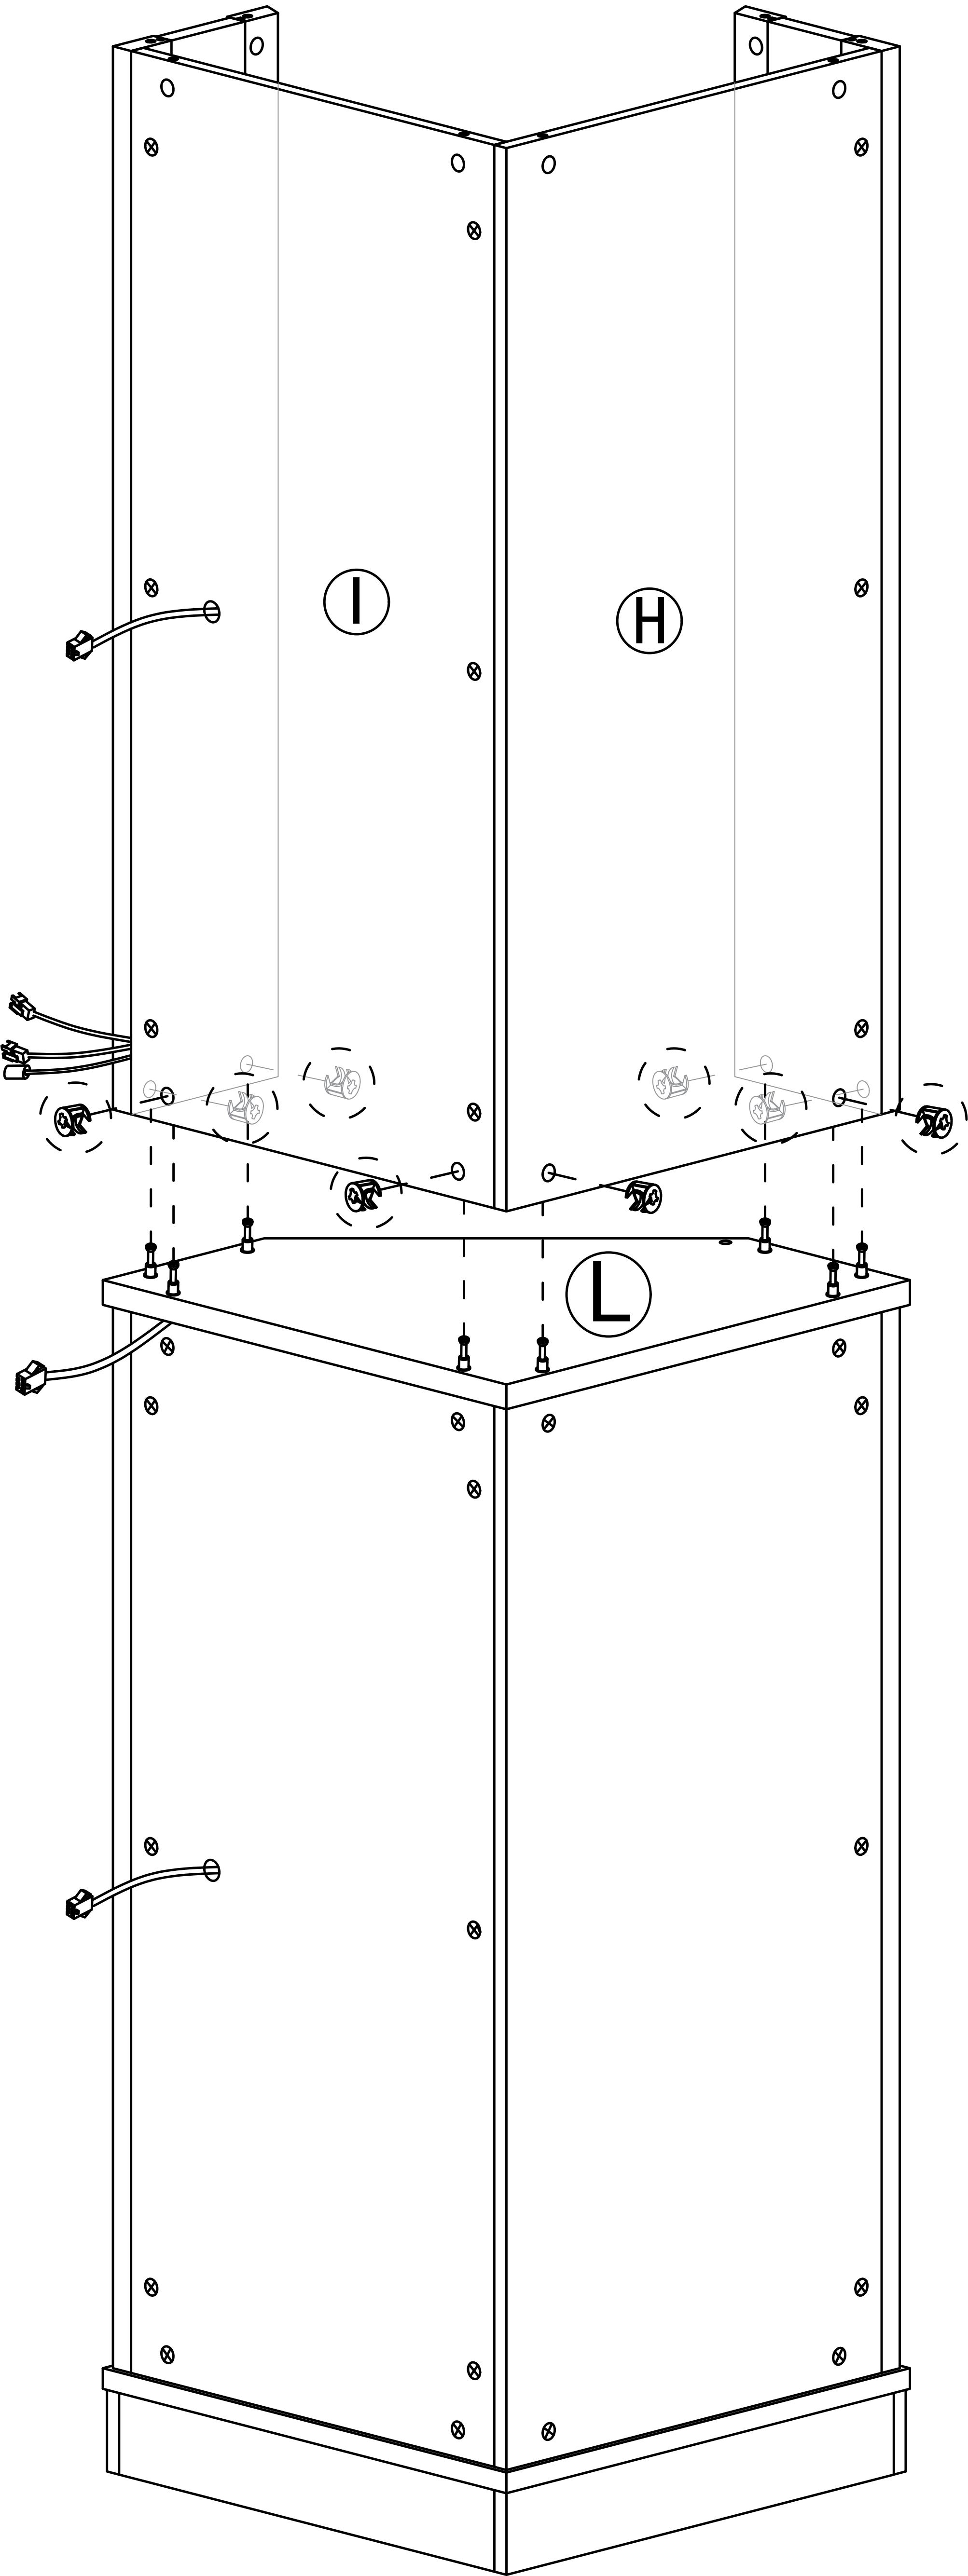


Step 32

2




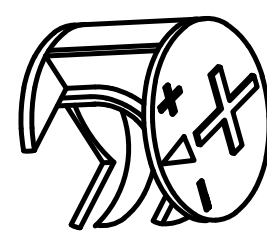


x8

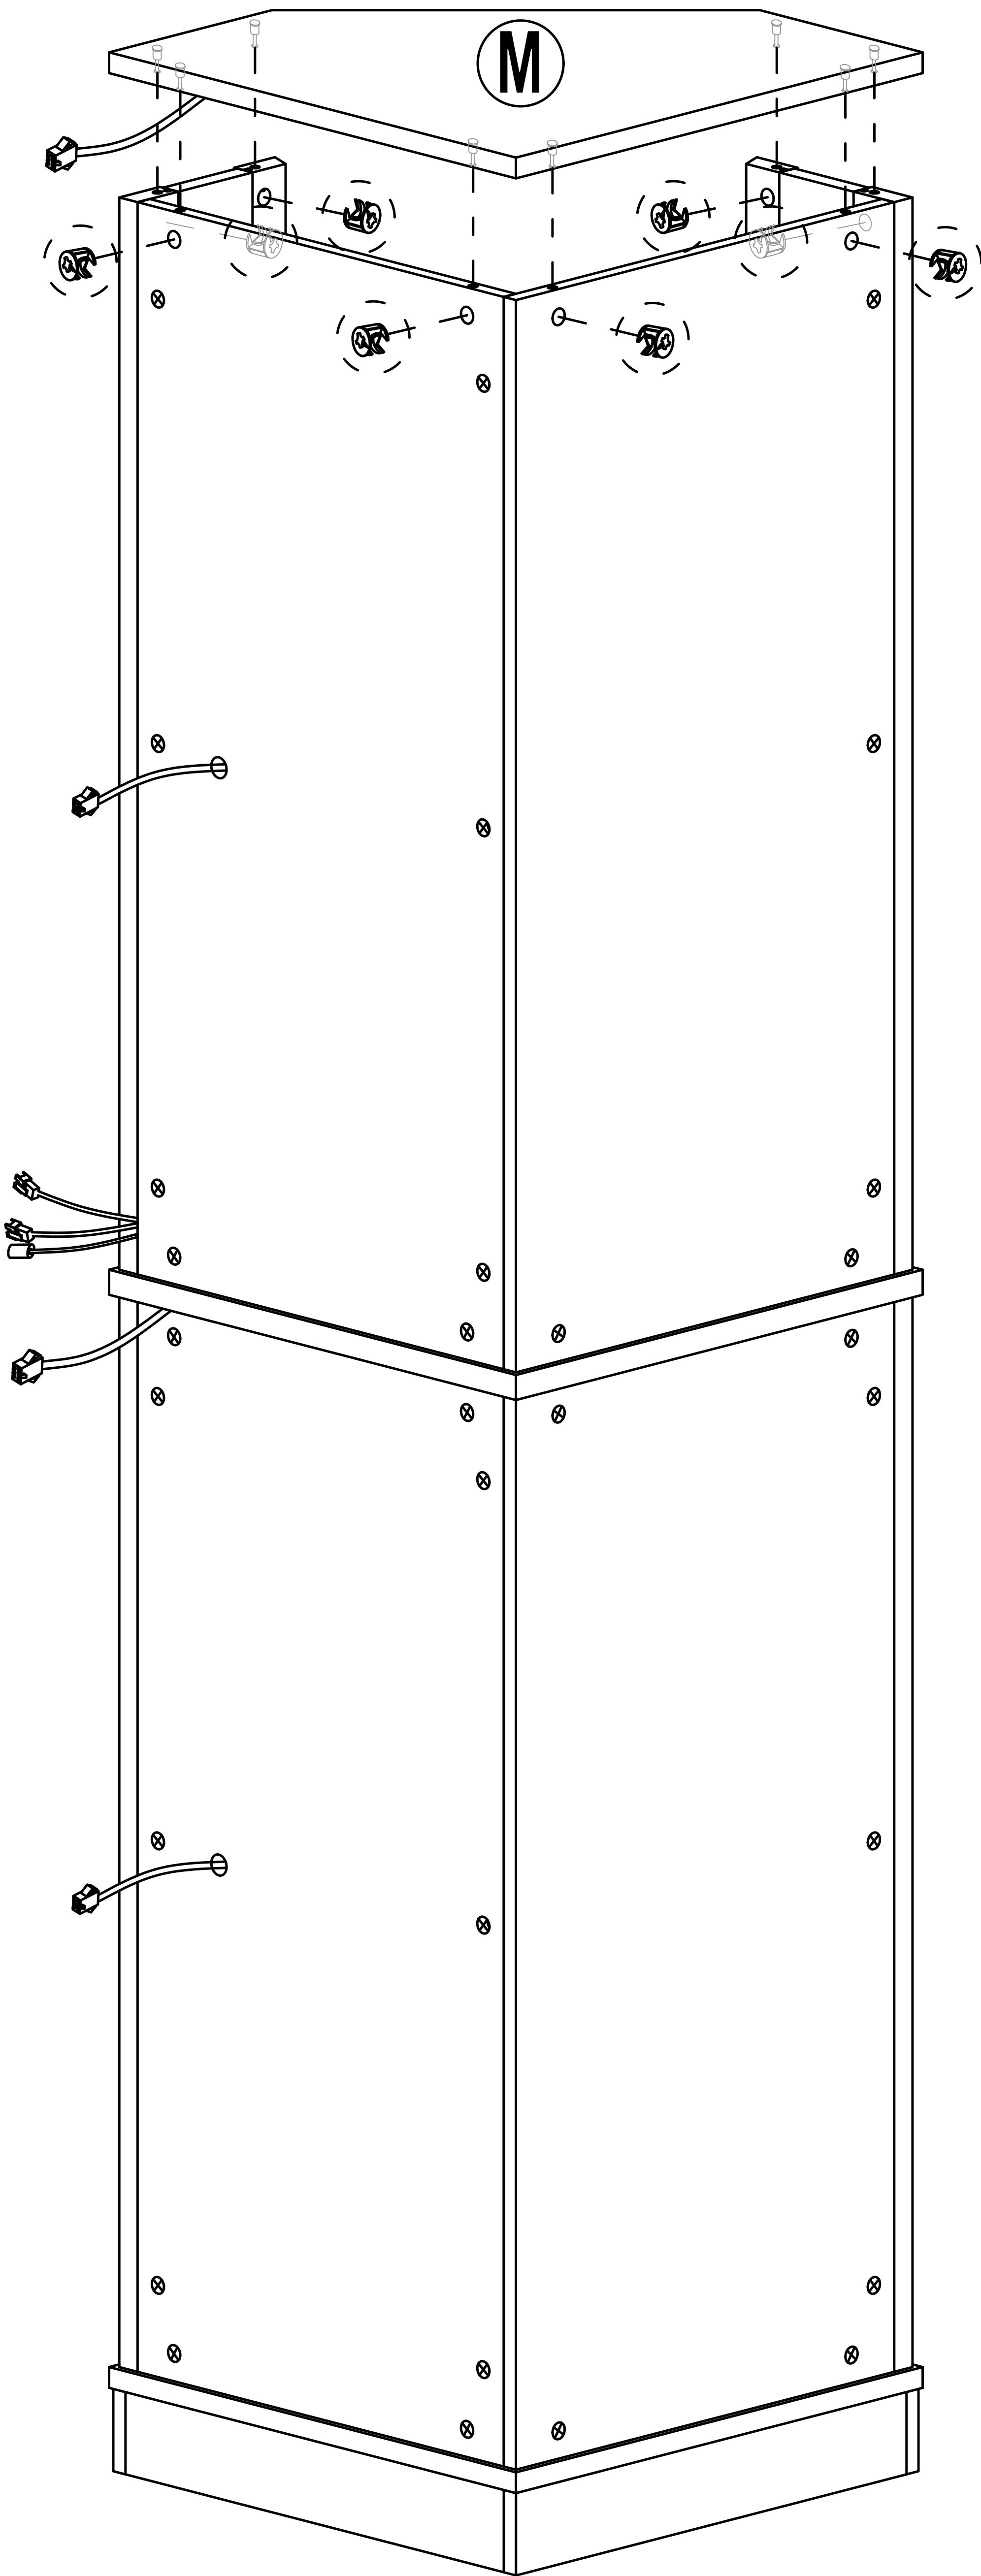


Step 33

5 x2

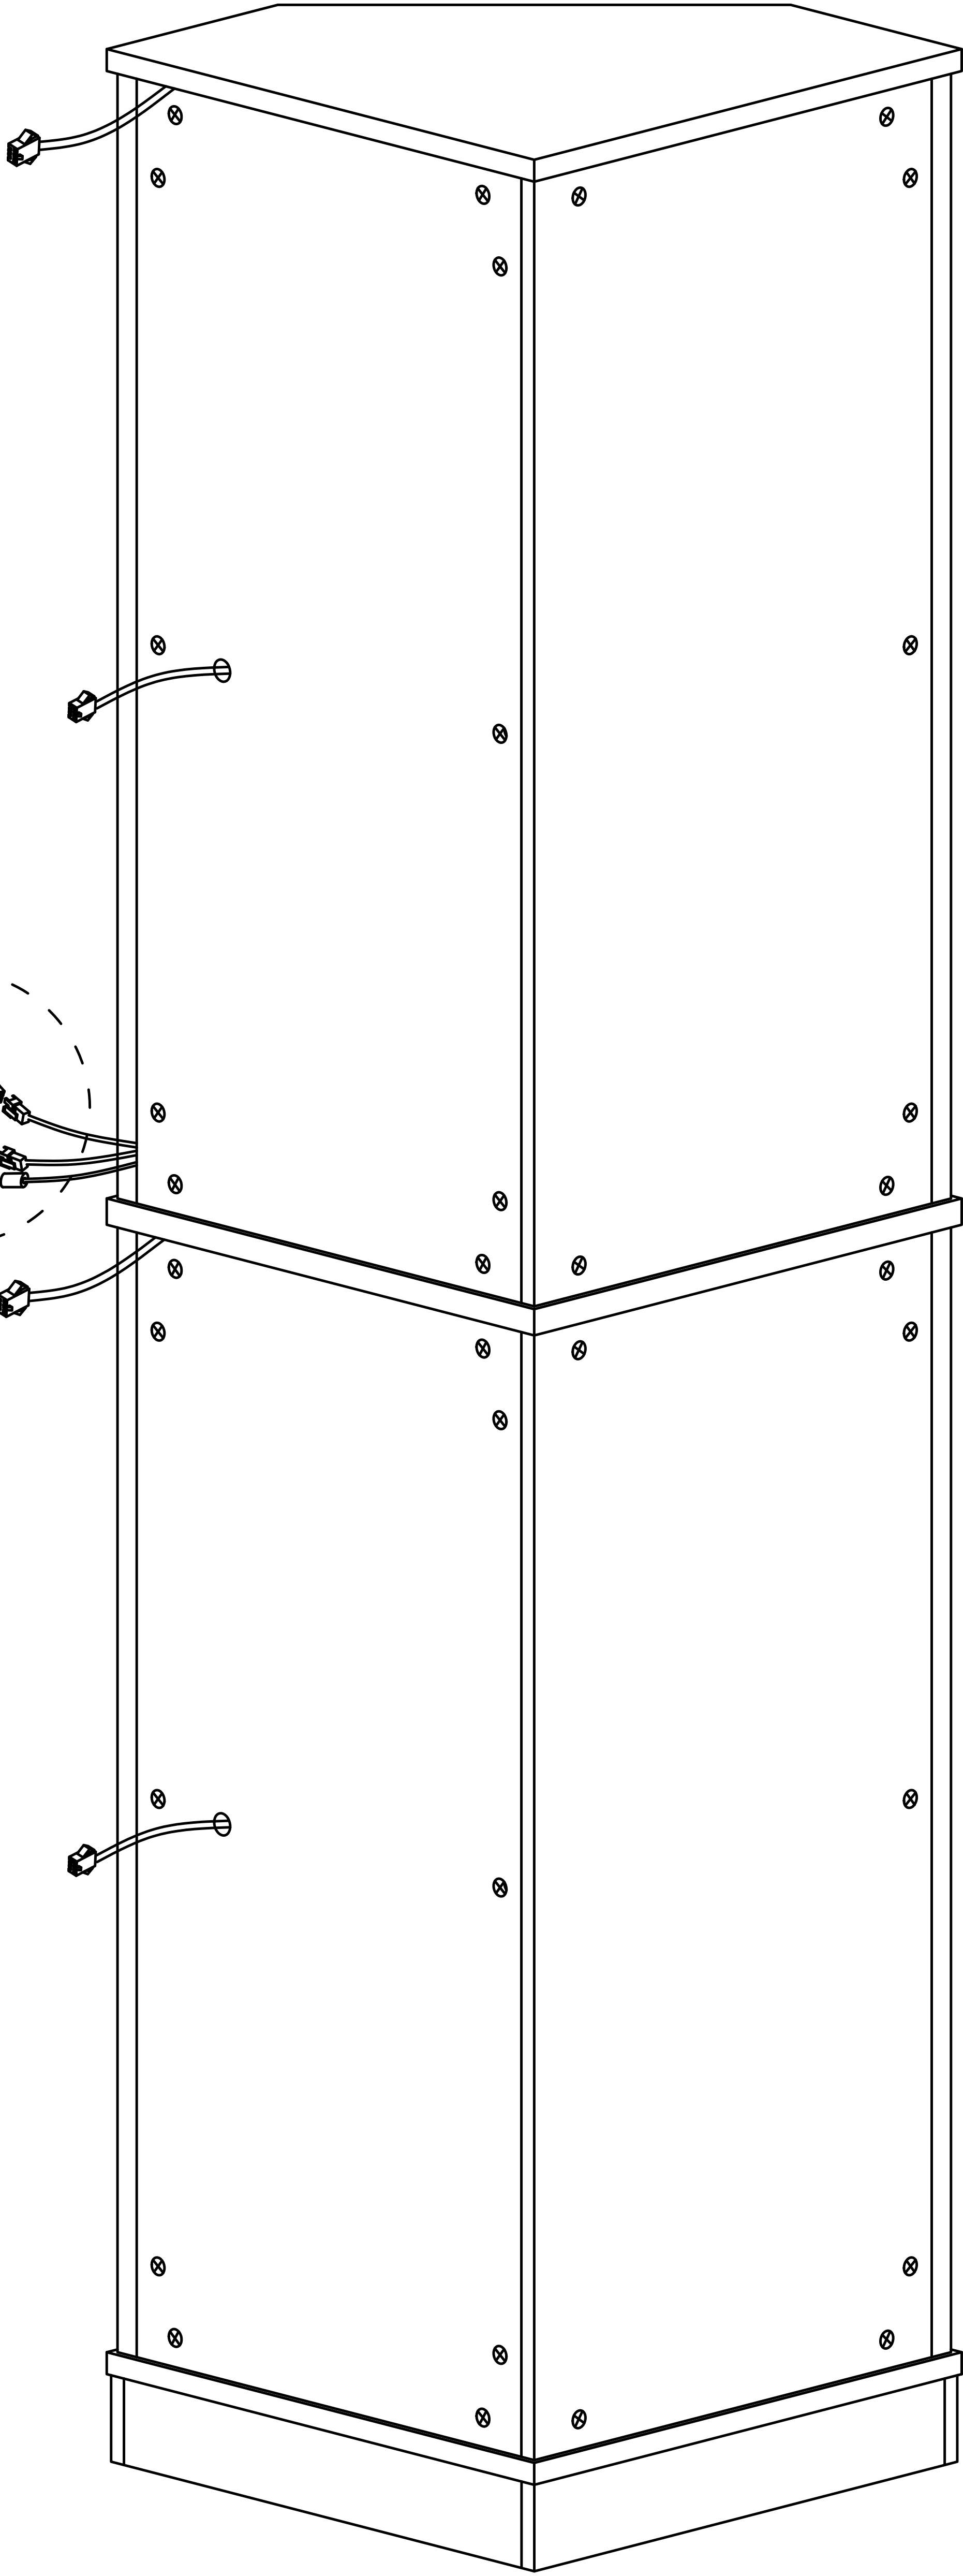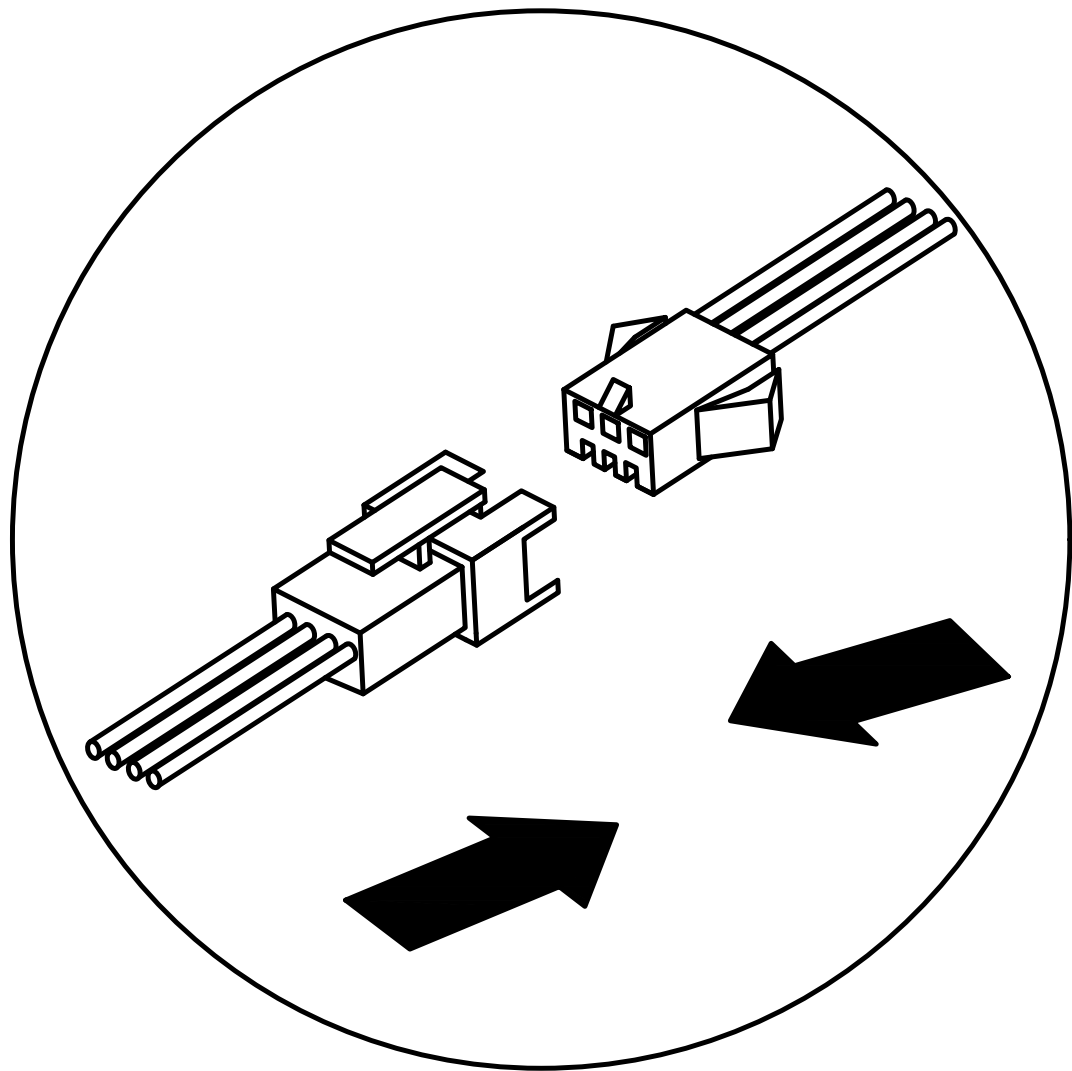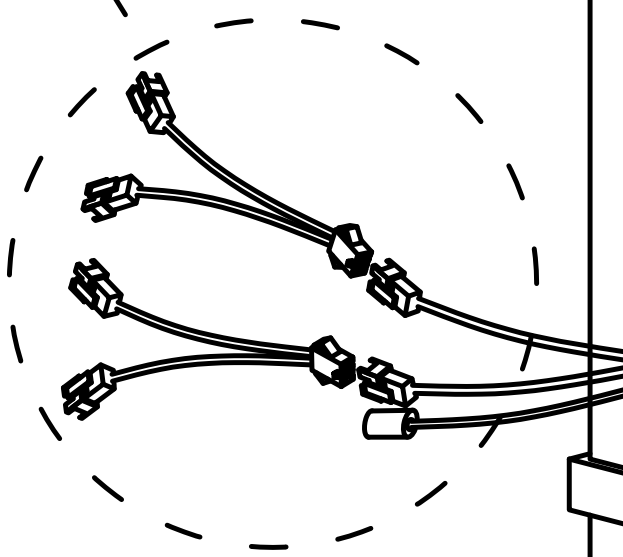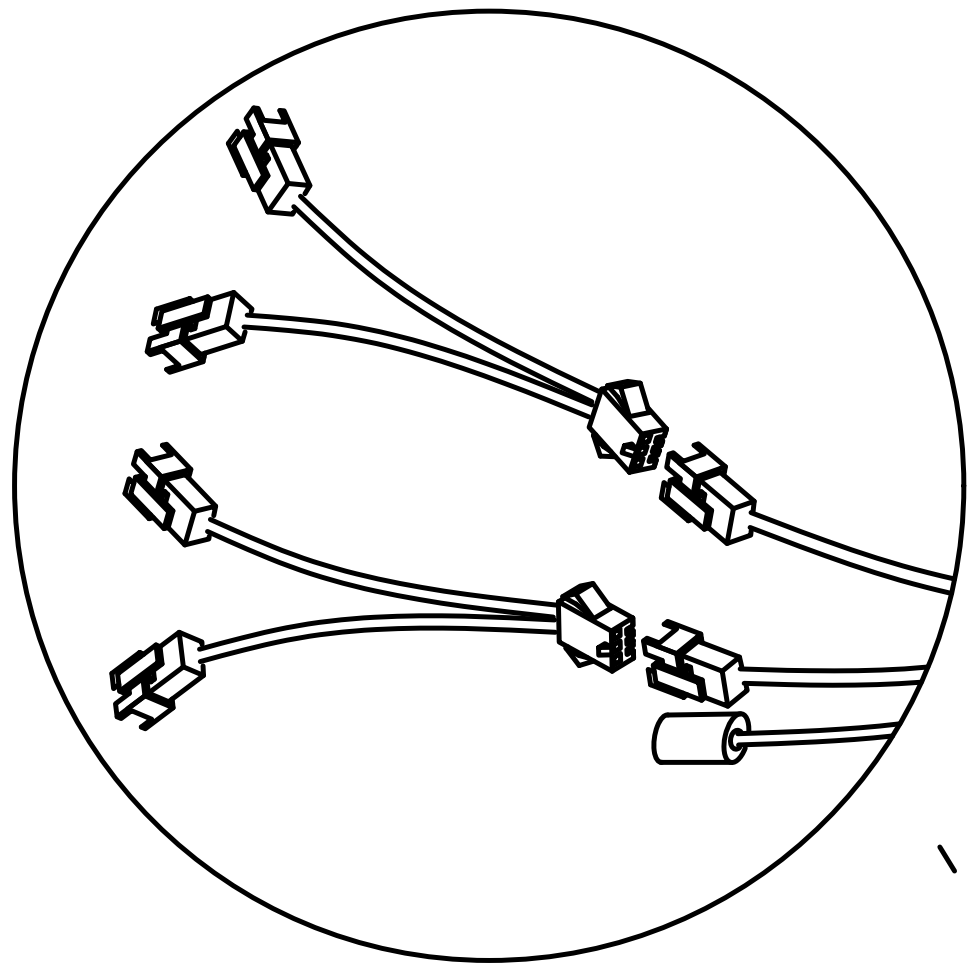


Step 34

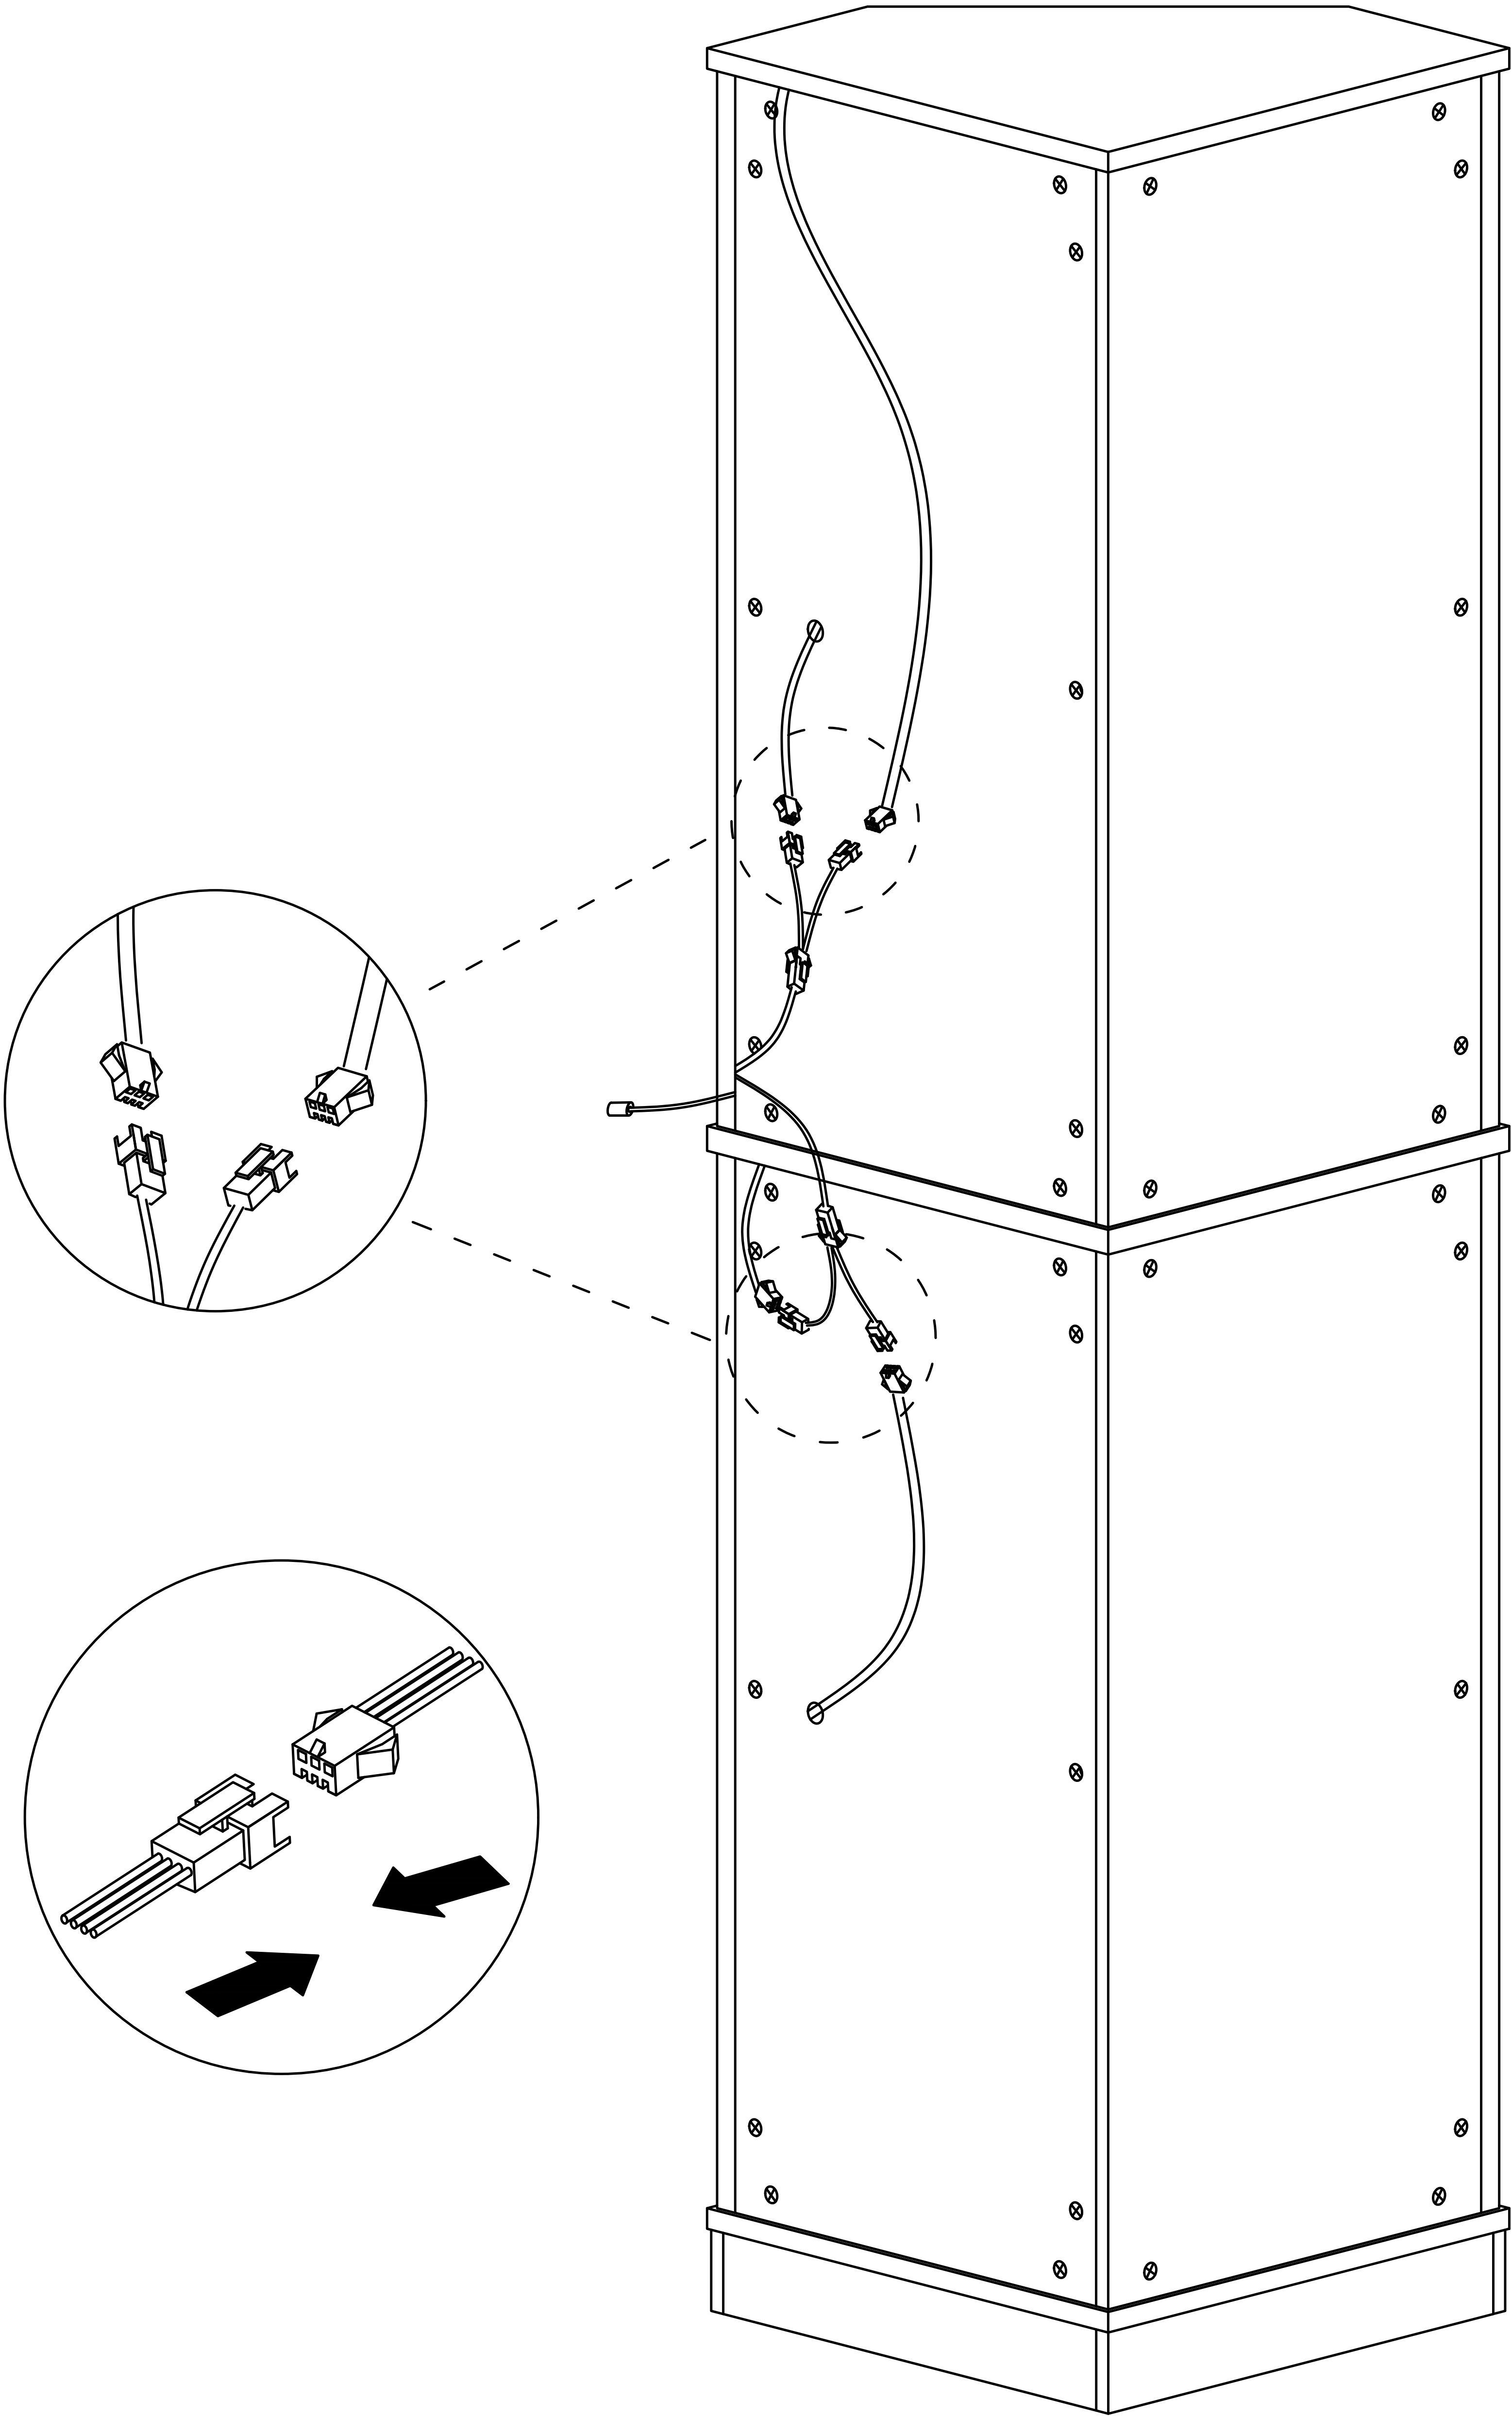


Step 35

4

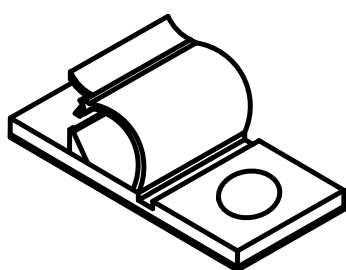


x4

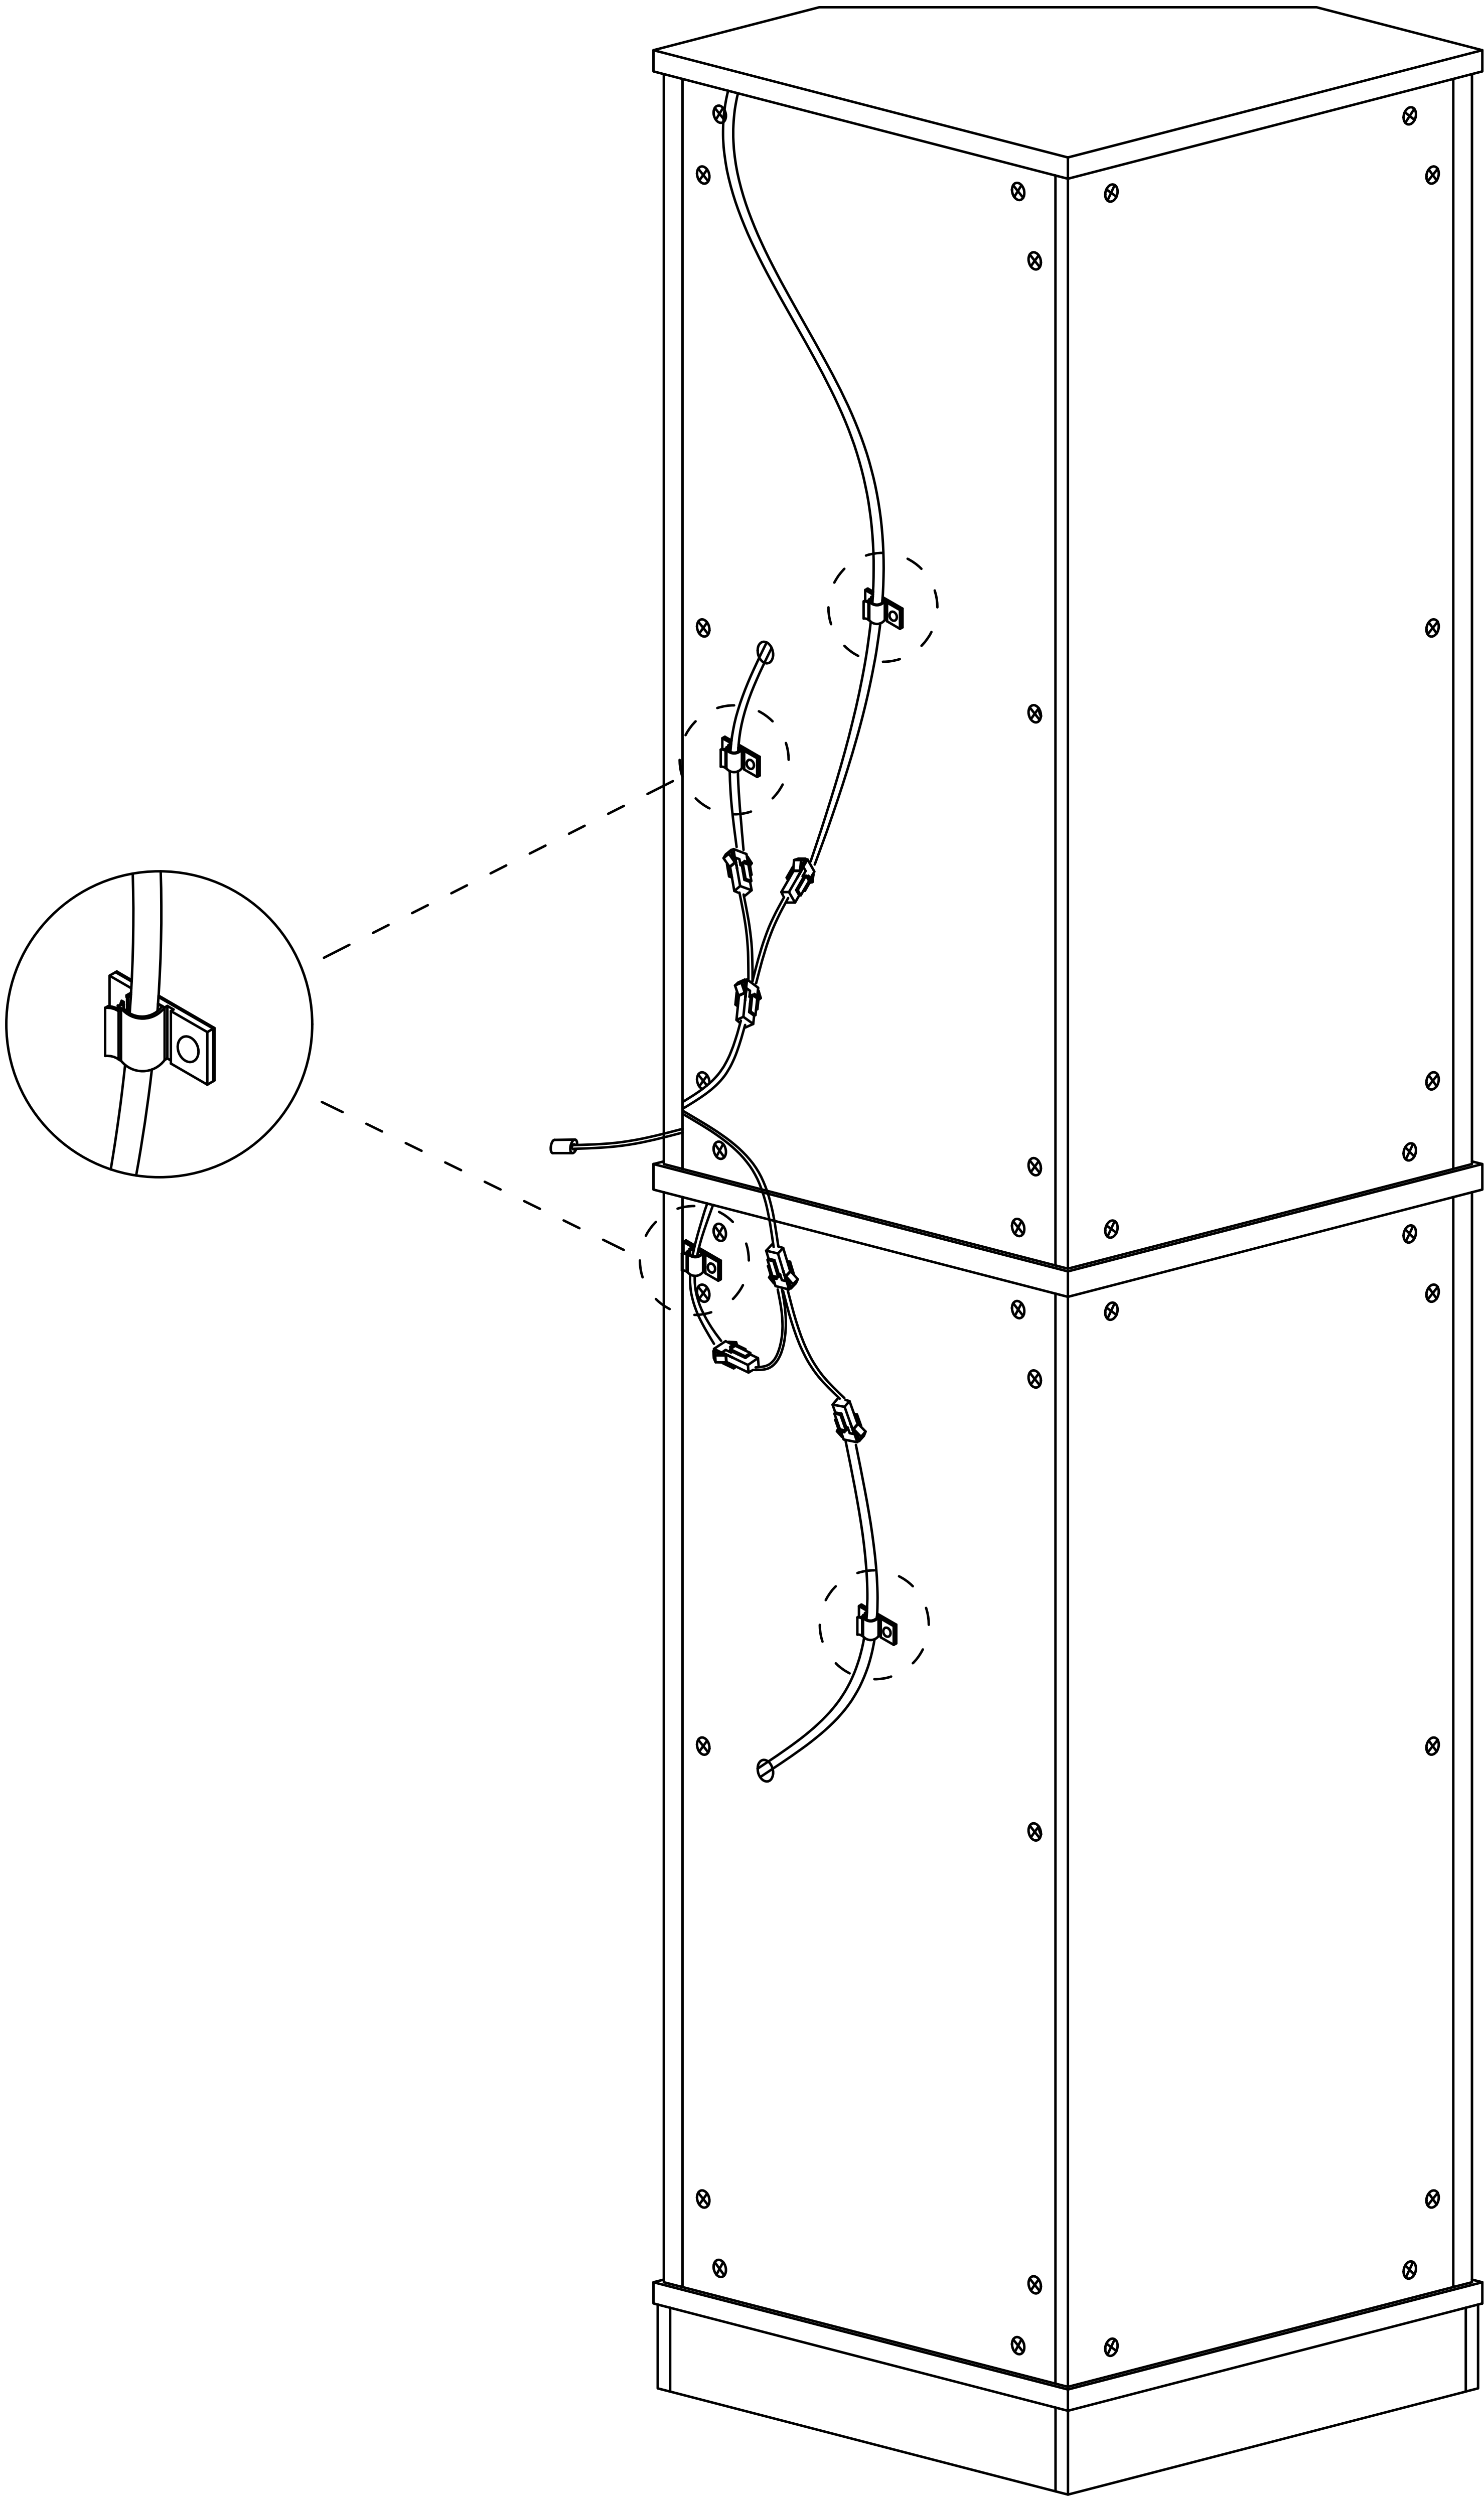


Step 36

First, completely unscrew the screws on the parts

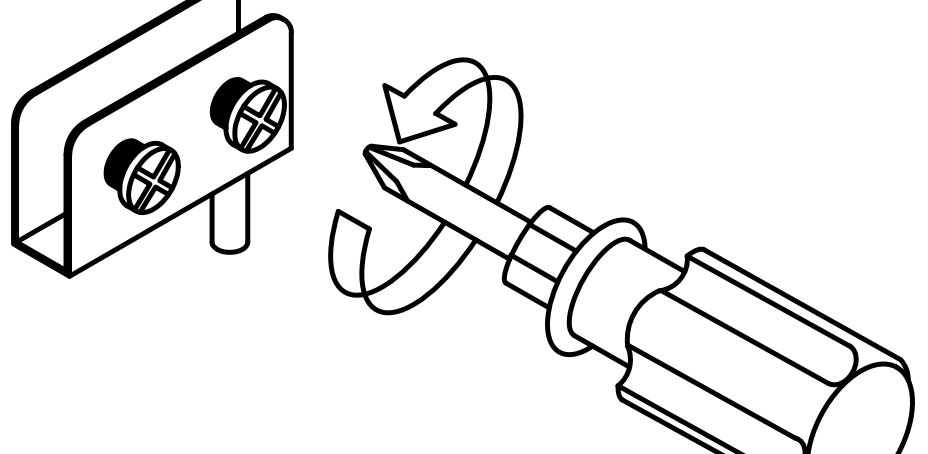


A line drawing illustrating the first step of the assembly process. On the left, a rectangular bracket with two circular holes is shown. Two screws are being removed from the bracket. On the right, a screwdriver is shown with a curved arrow indicating the direction of rotation to unscrew a screw. The screwdriver has a long handle and a flat tip.

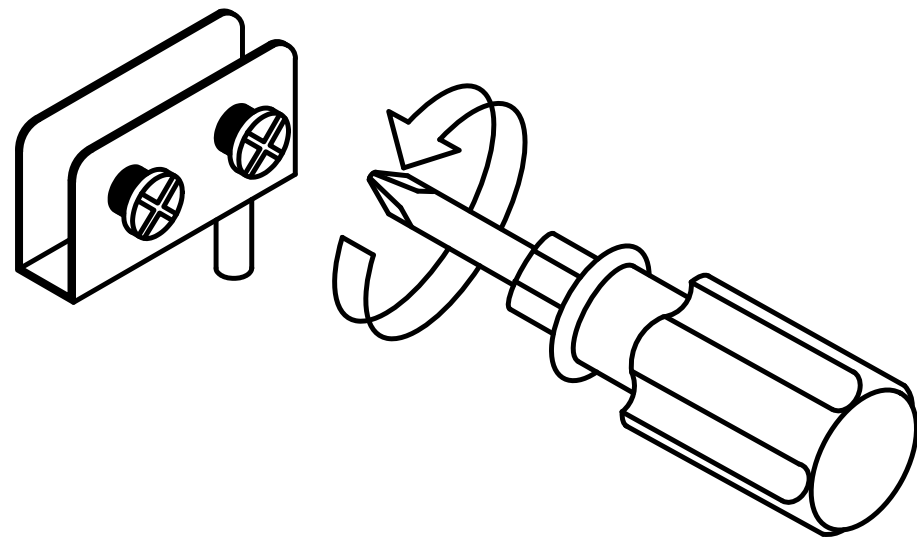


Then take out the black rubber pad from the inside of the part, and the white sponge remains unchanged inside the part.

The diagram illustrates the removal of the black rubber pad. On the left, a 3D perspective view shows a white U-shaped sponge pad. In the center, a 2D cross-sectional view shows the white sponge pad with two circular holes, with a black rectangular rubber pad being lifted out of its top channel by an upward-pointing arrow. On the right, a 3D perspective view shows the black rubber pad being removed. Labels 'White sponge pad' and 'Black rubber pad' are positioned below their respective components.

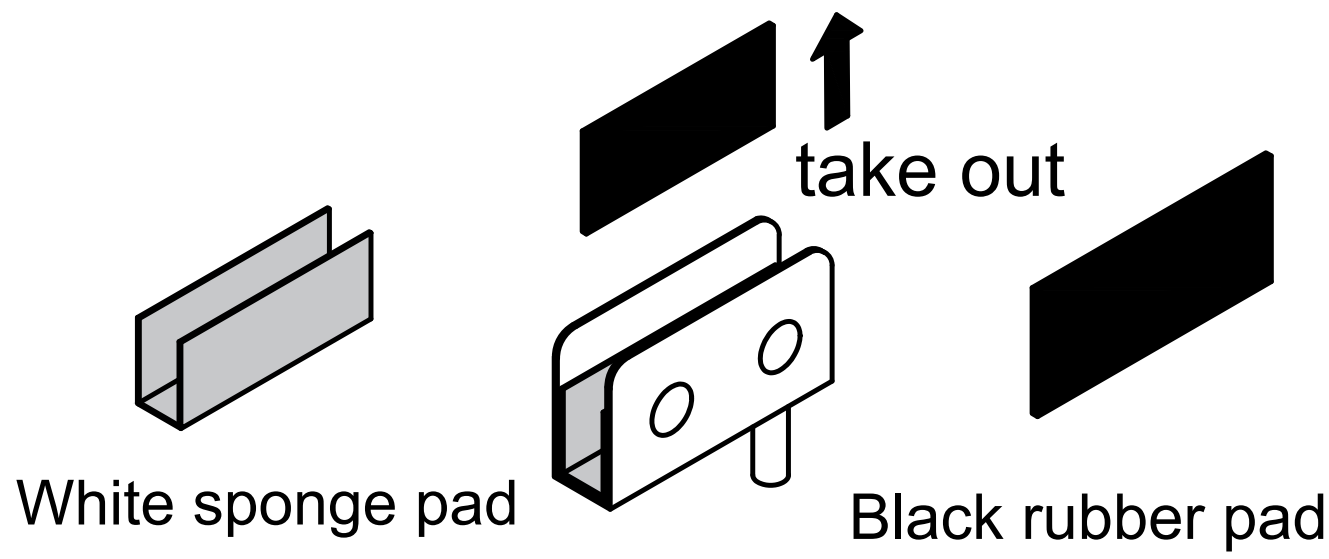

7

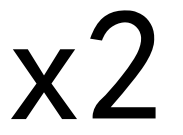 x^2 

x2




x2


Pay attention to the direction of the door hinge,
rotate the screws to compress the black gasket,
and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed


Step 37

- 7

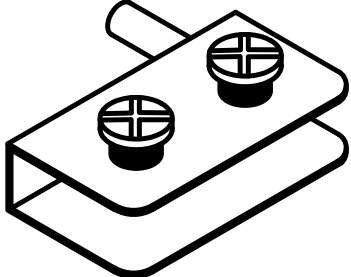

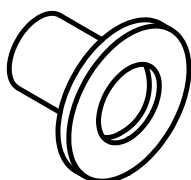x1
- 


x1

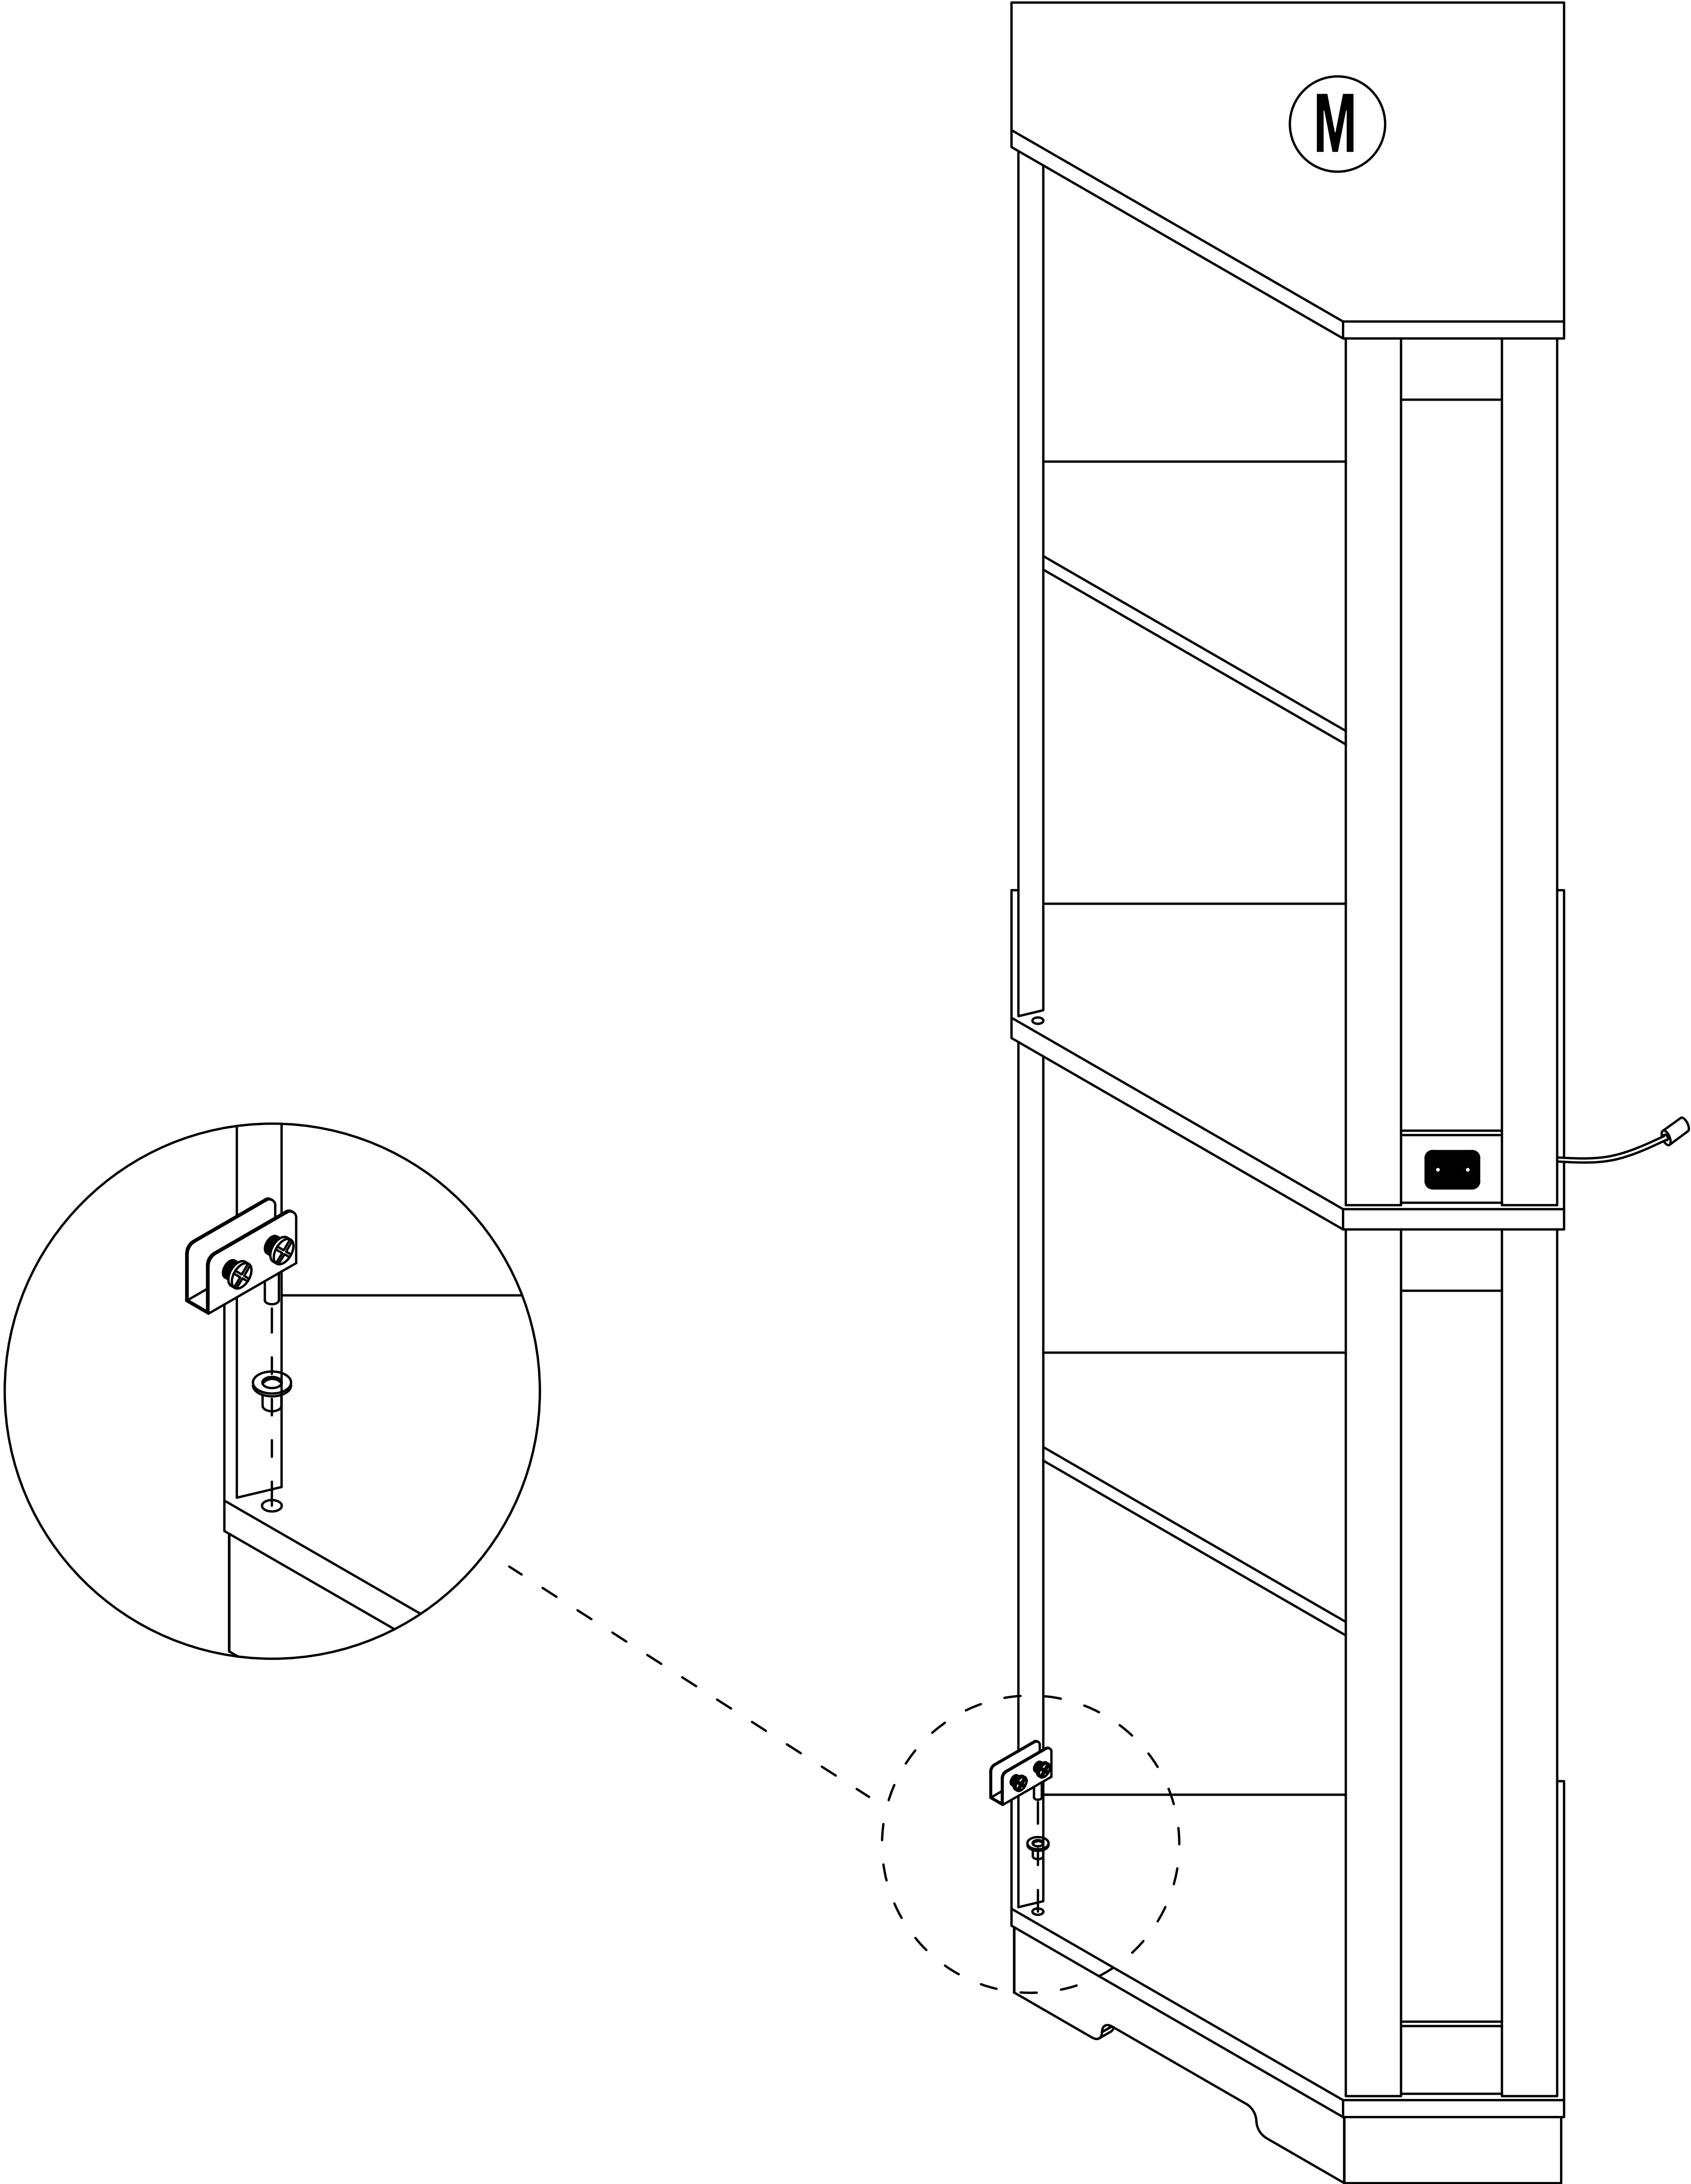

Step 38


Pay attention to the direction of the door hinge during installation

7

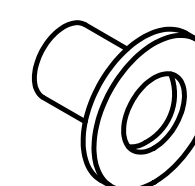


x1

When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.

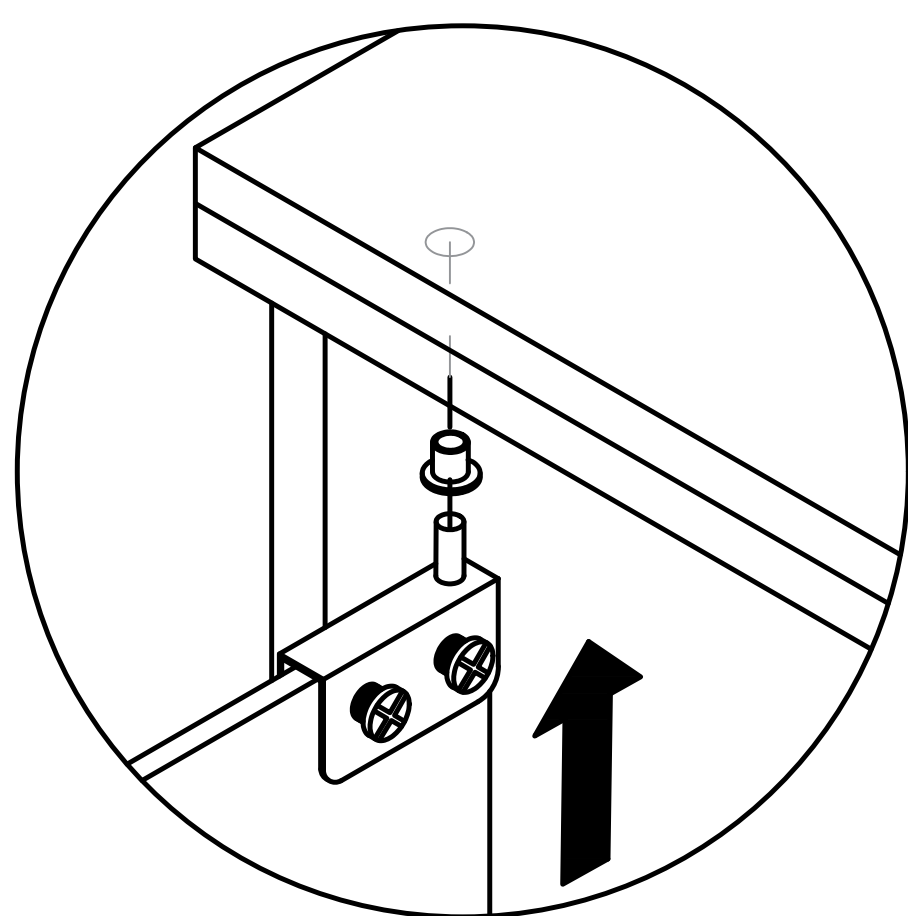


first

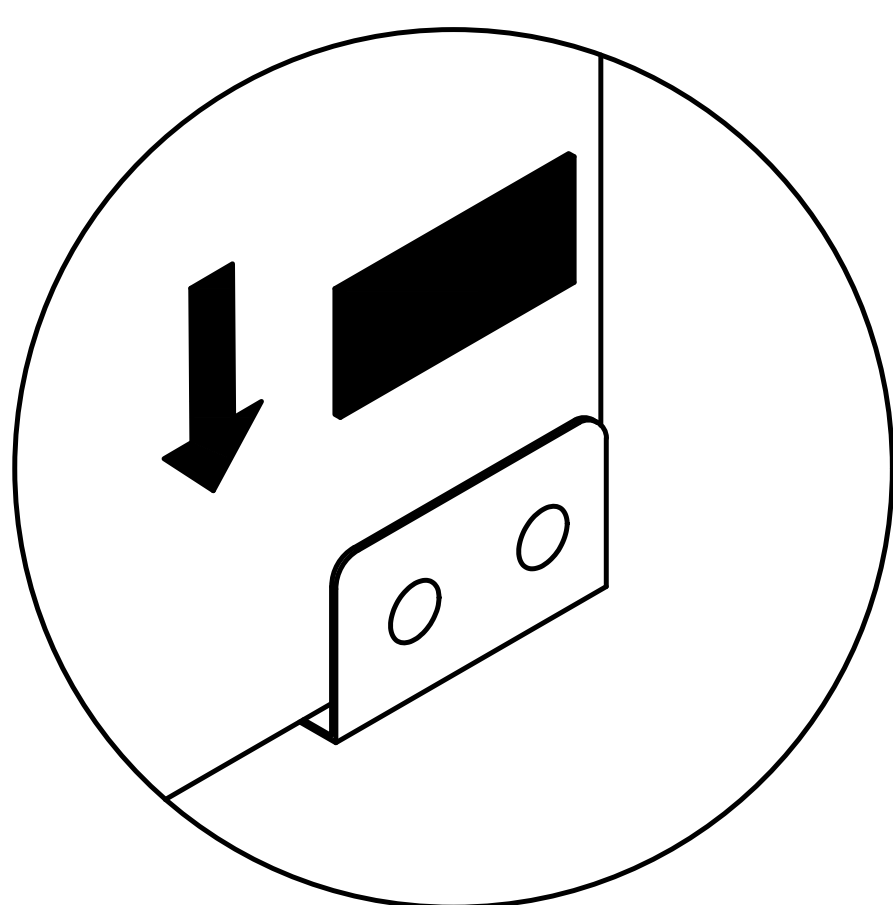


second

After installing the glass door, place the black gasket on the side where the screws are installed

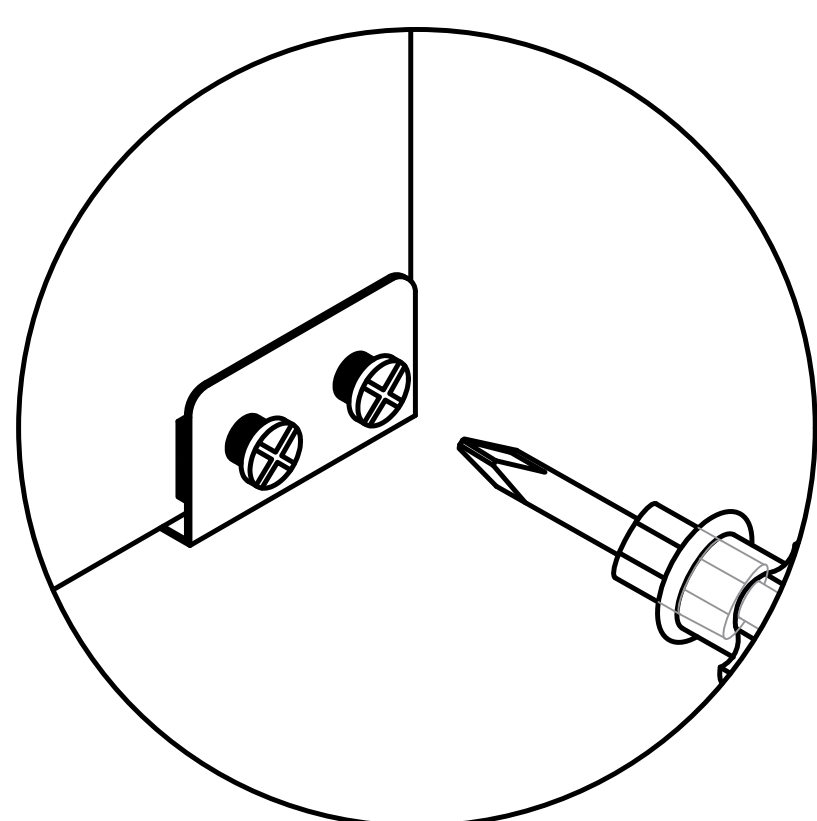


third

Locking screw

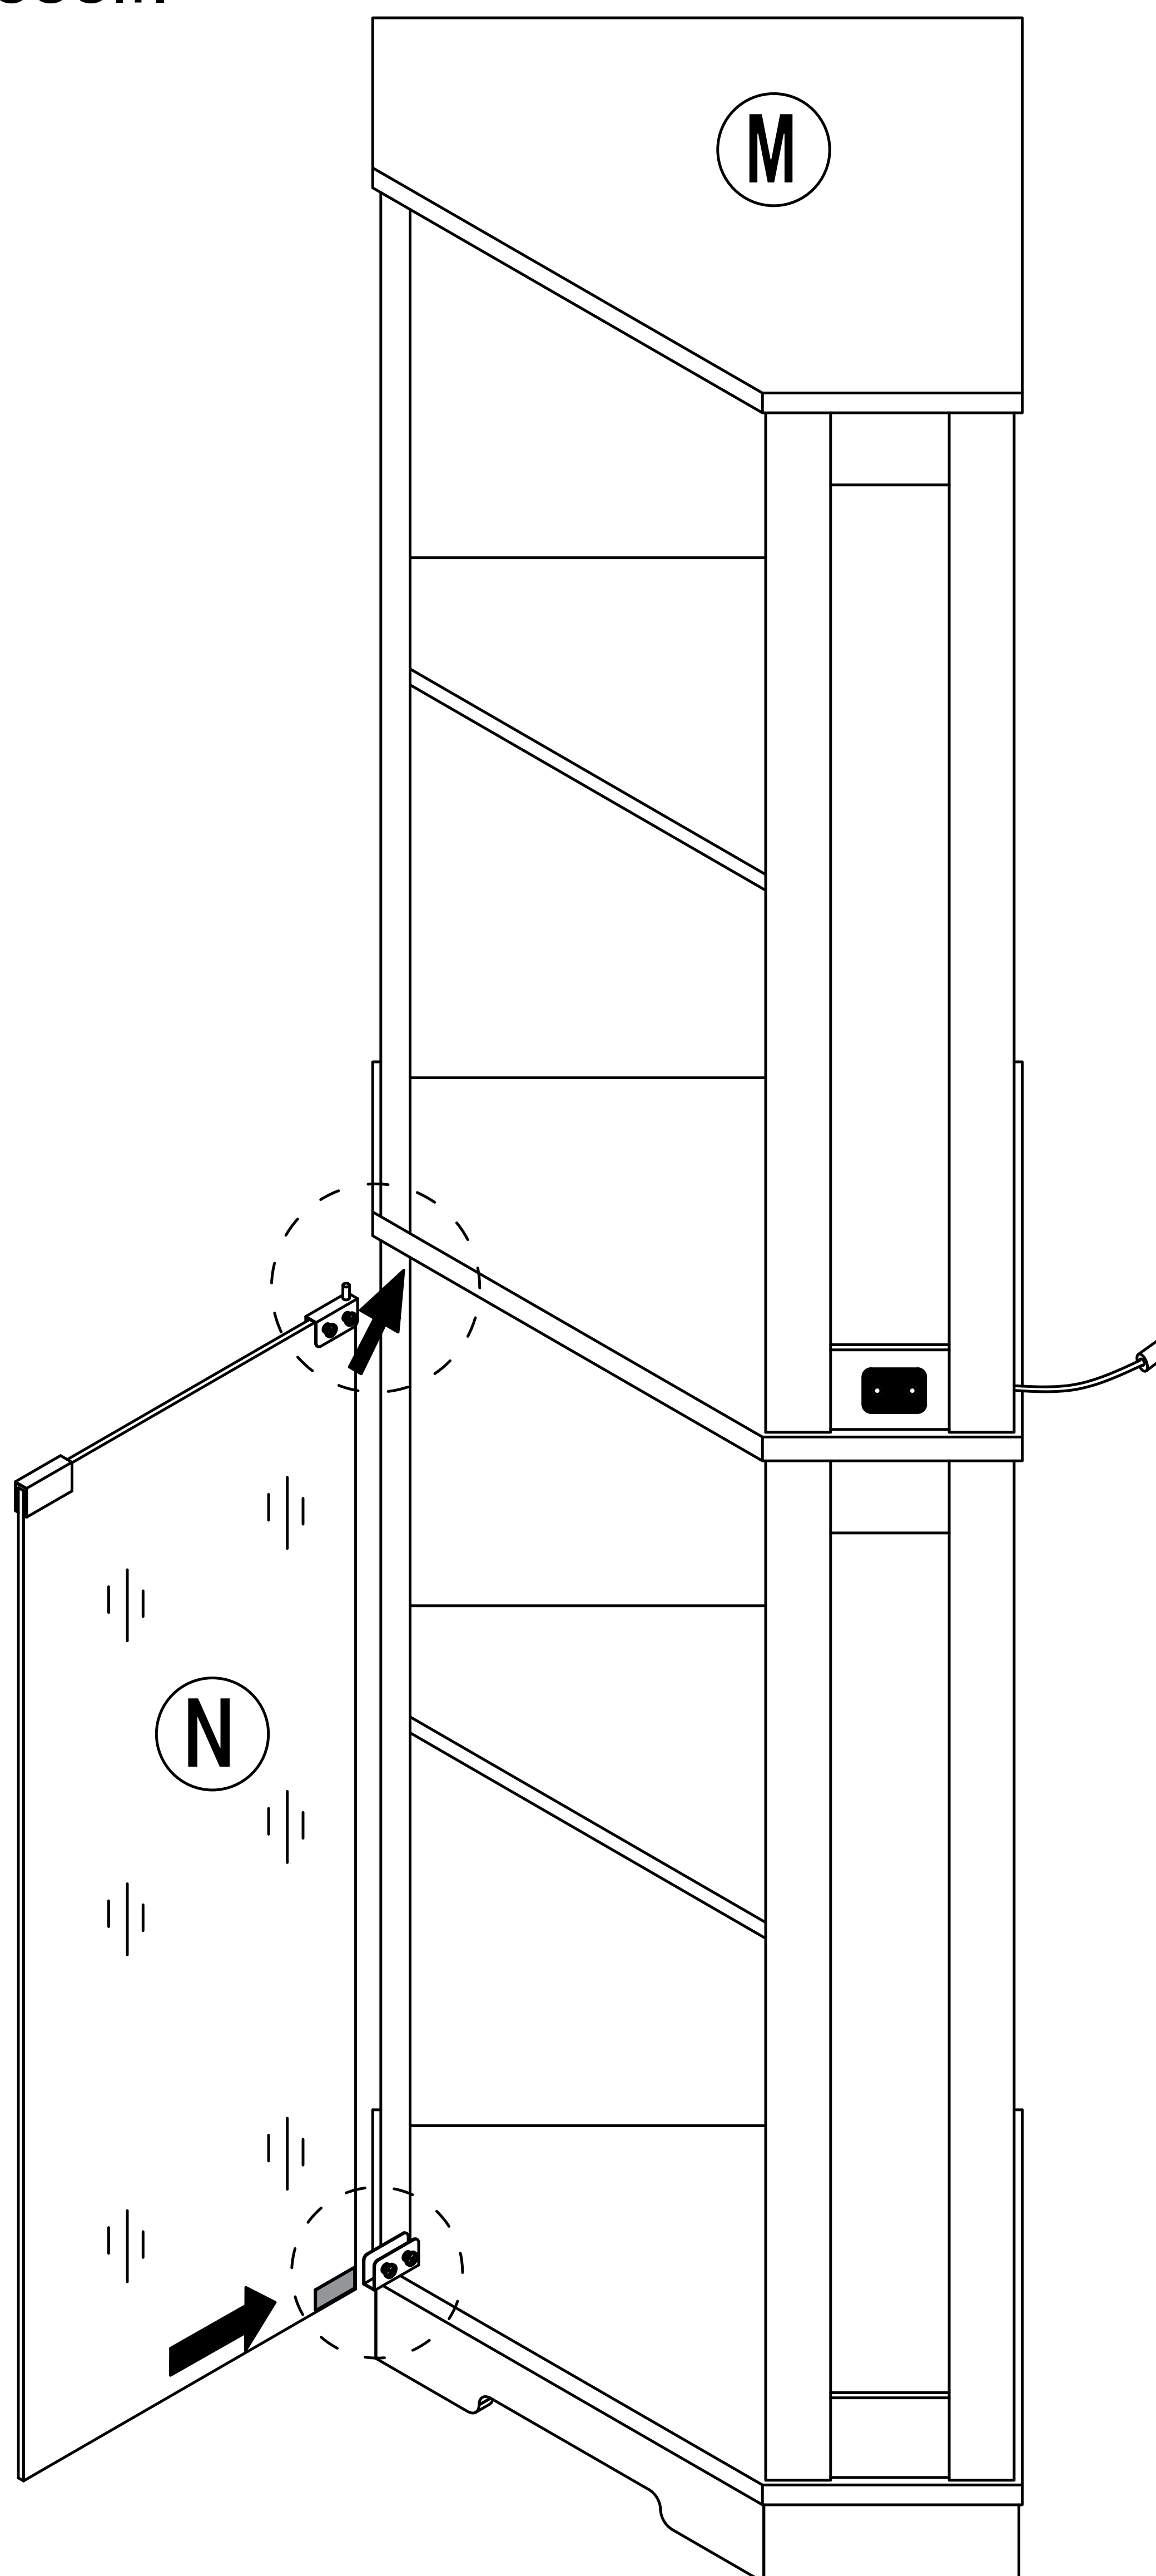


Step 39


7

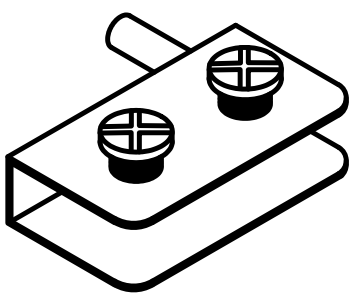

x1



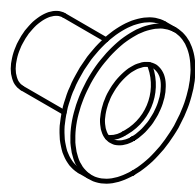


x2

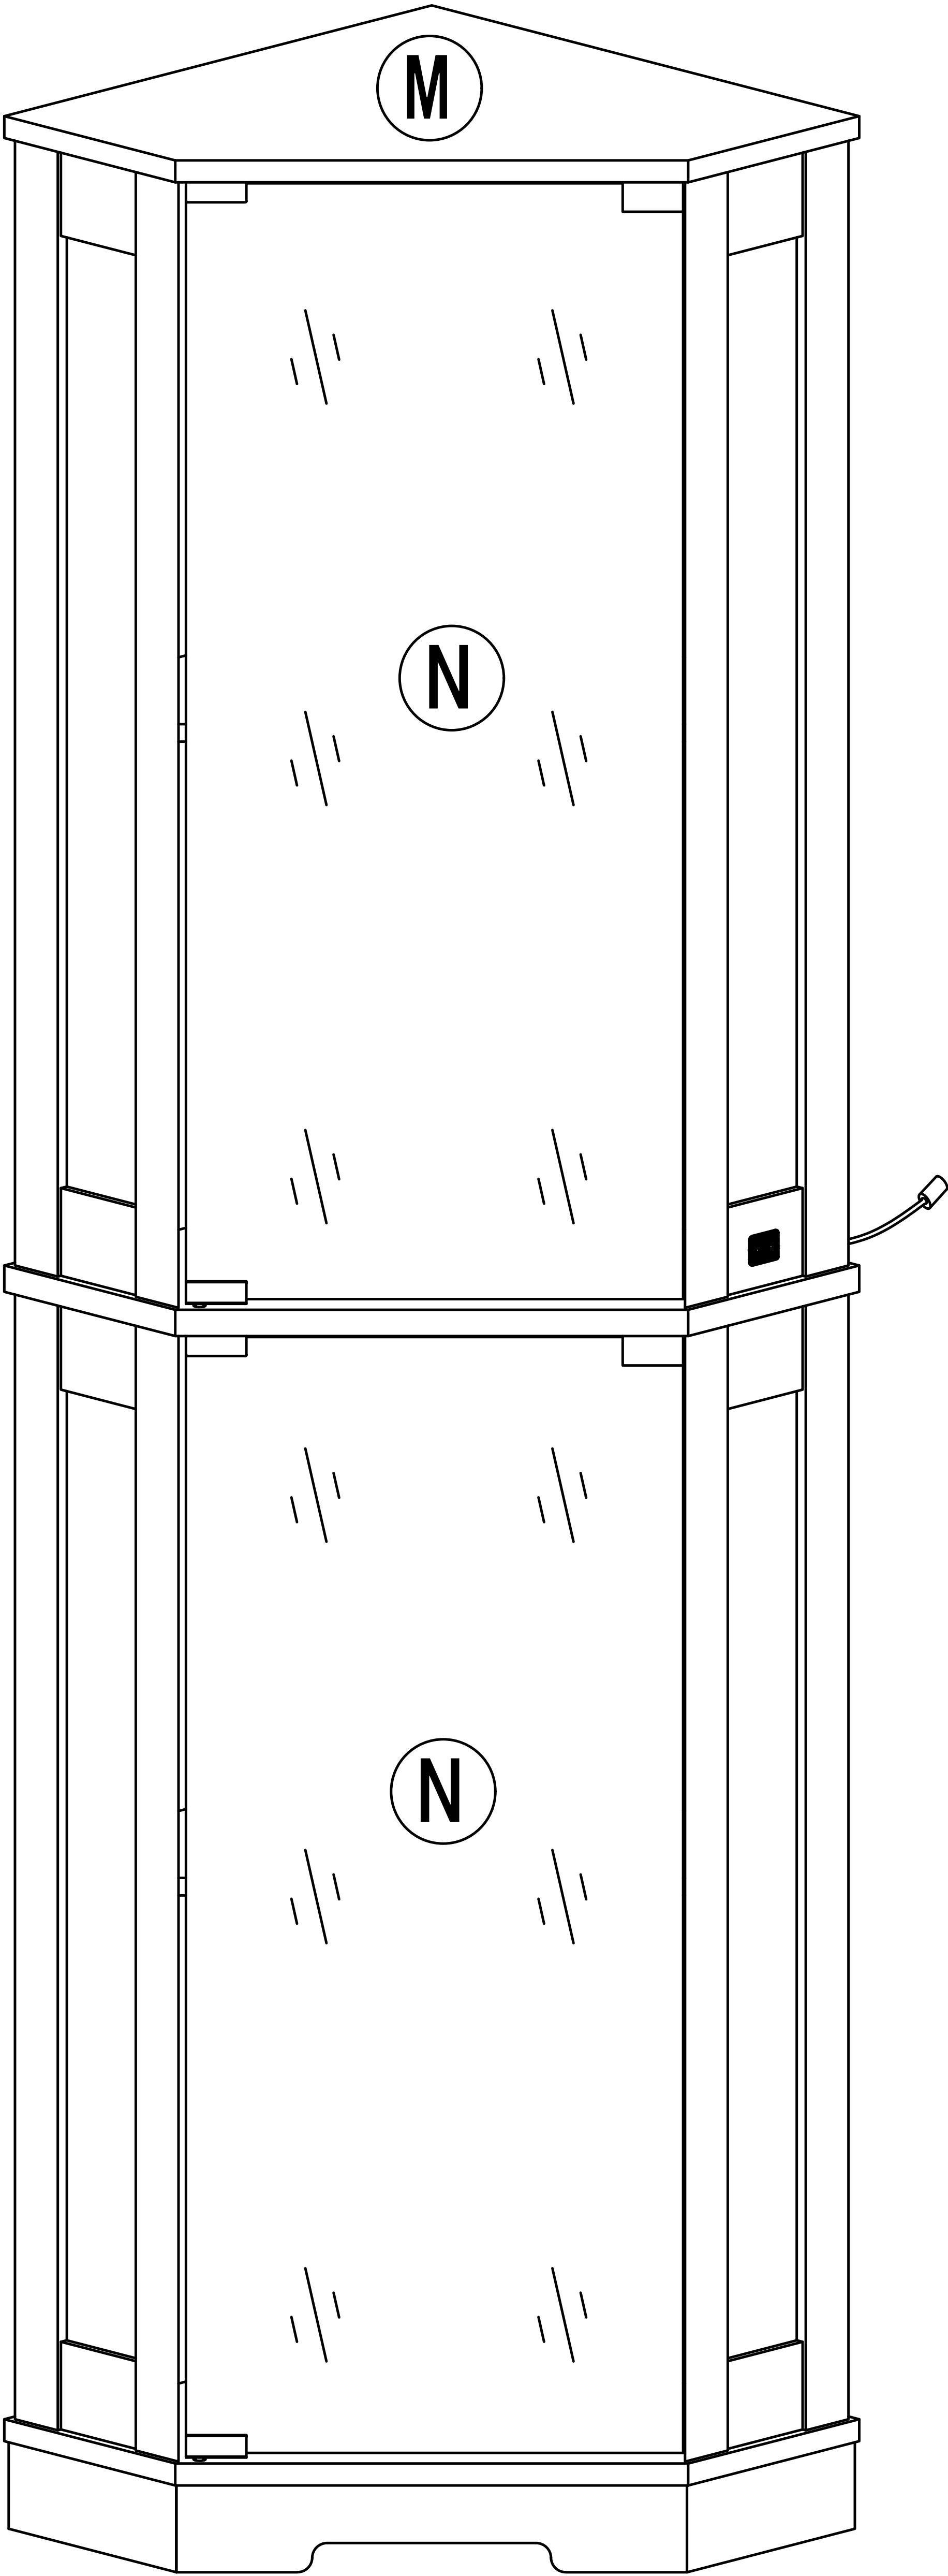


Repeat the door installation steps.

Step 40

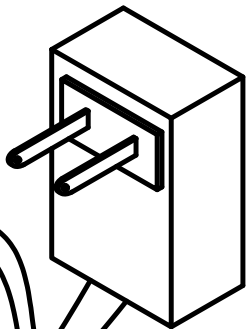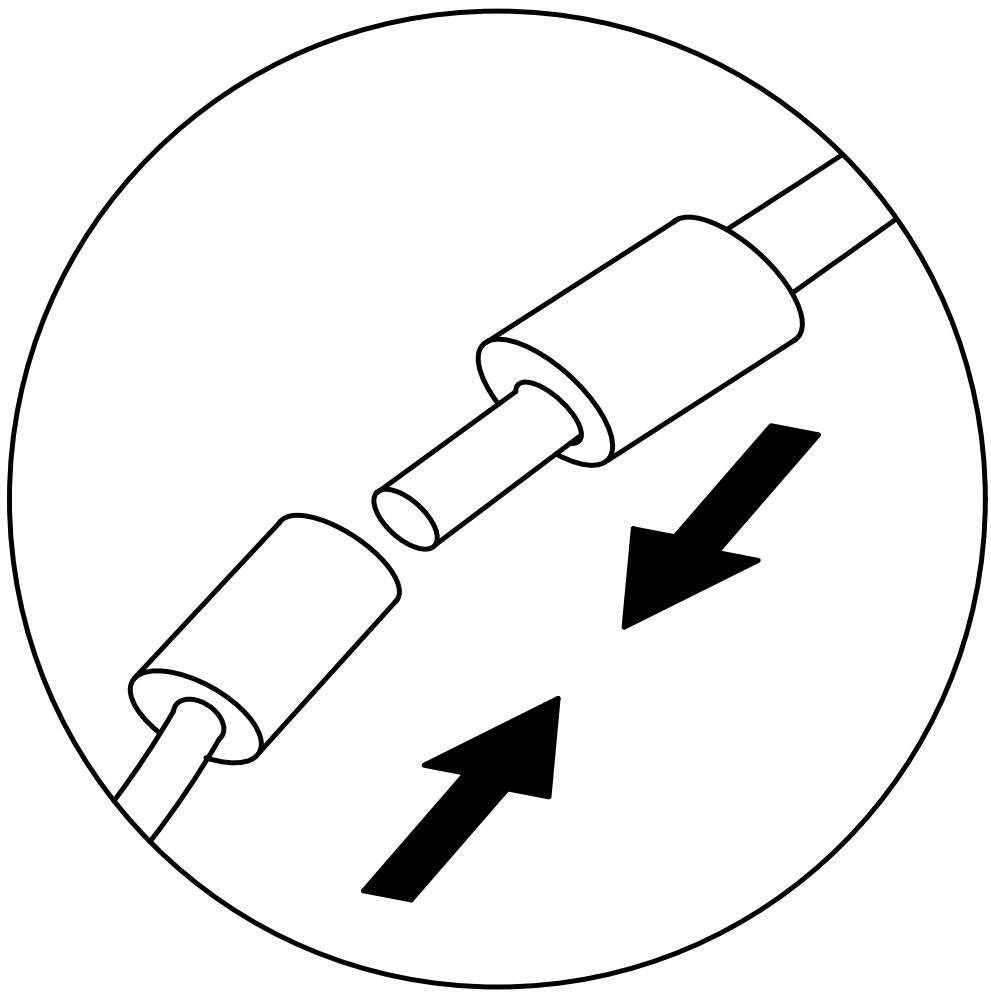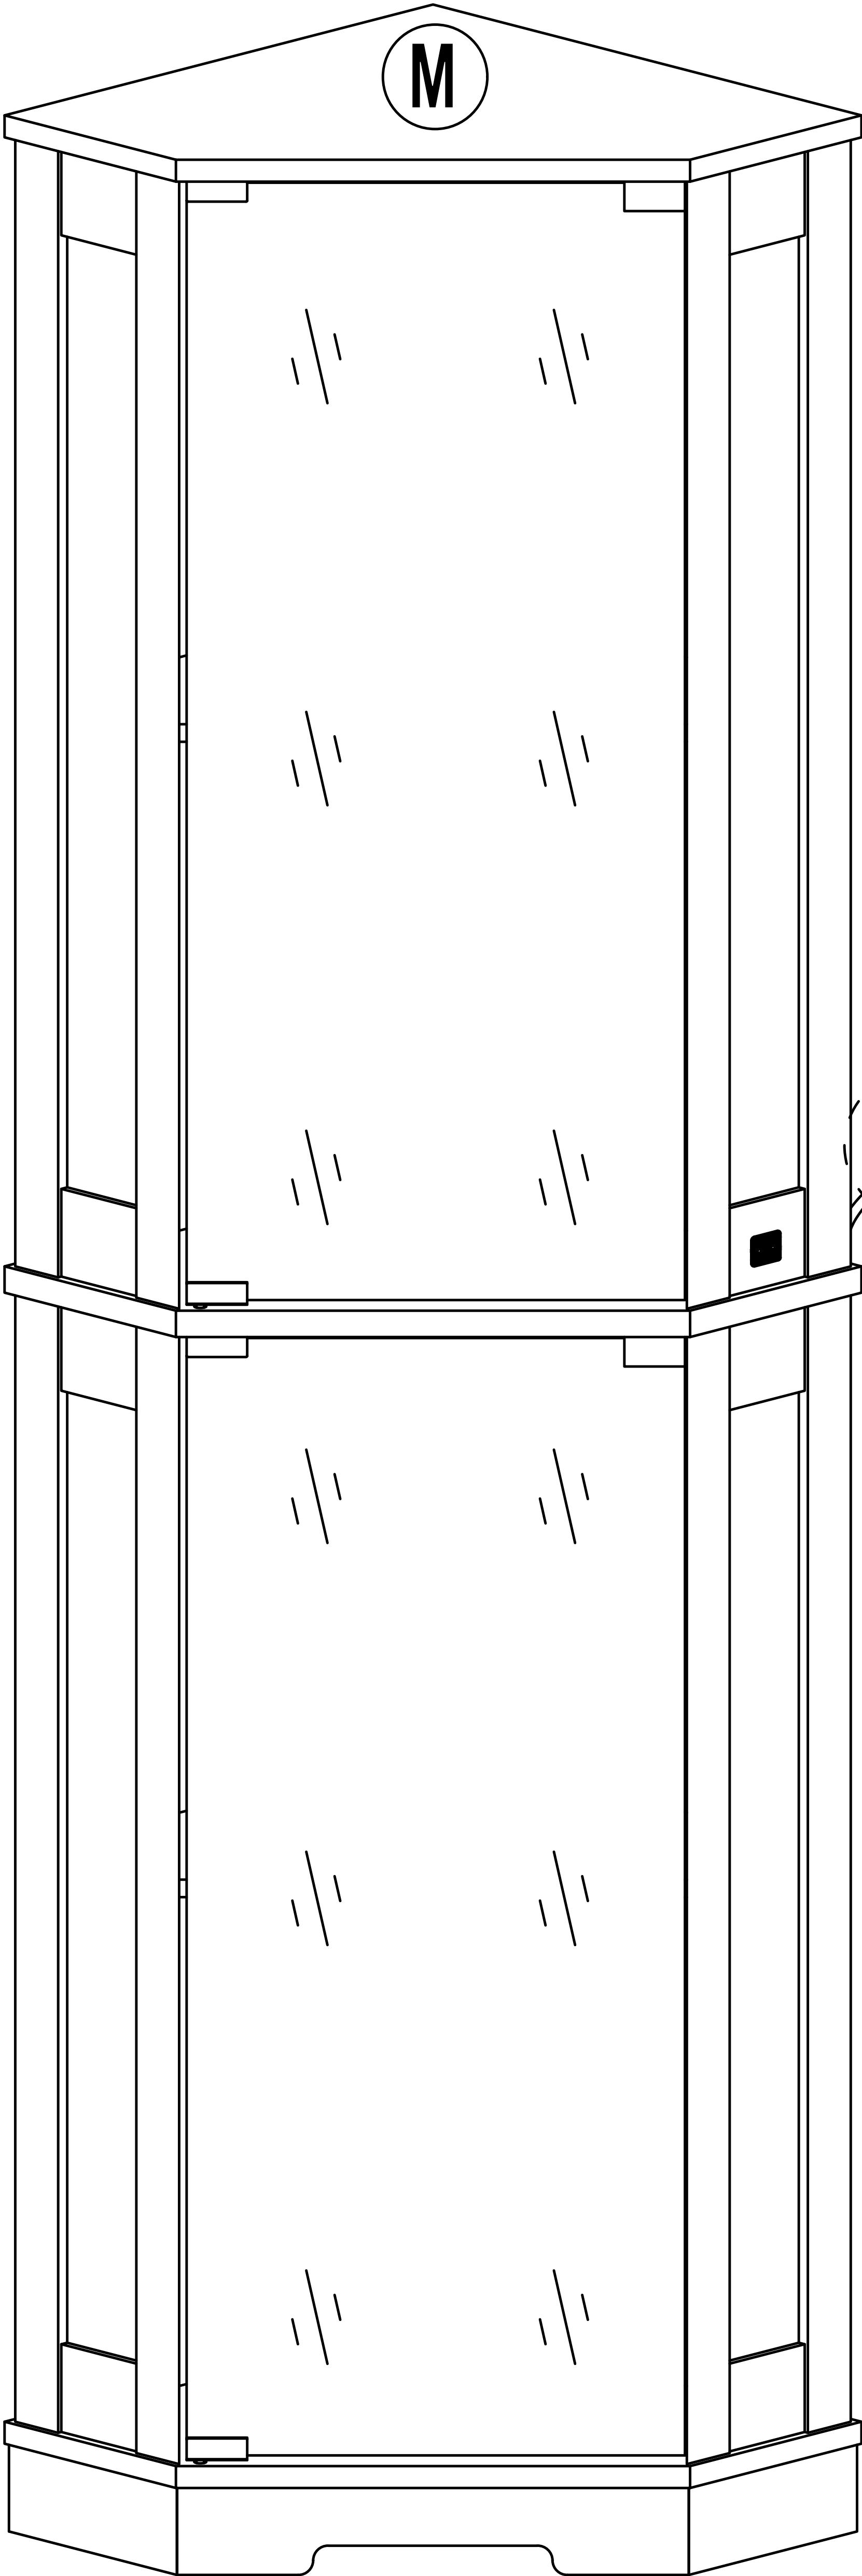


Step 41

Note: Adjust the installation position of anti-fall hardware according to the actual situation.



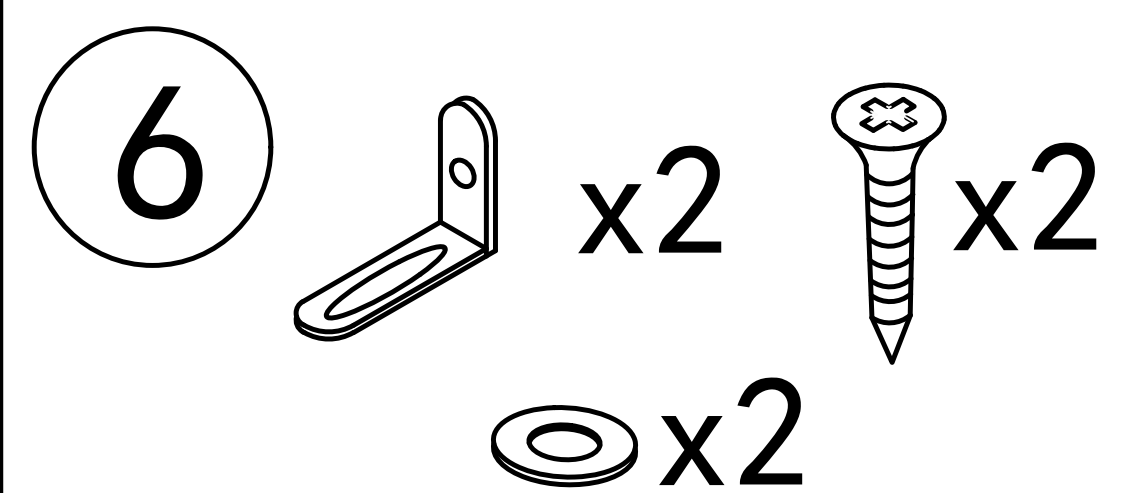


Install as required

3.5x14mm


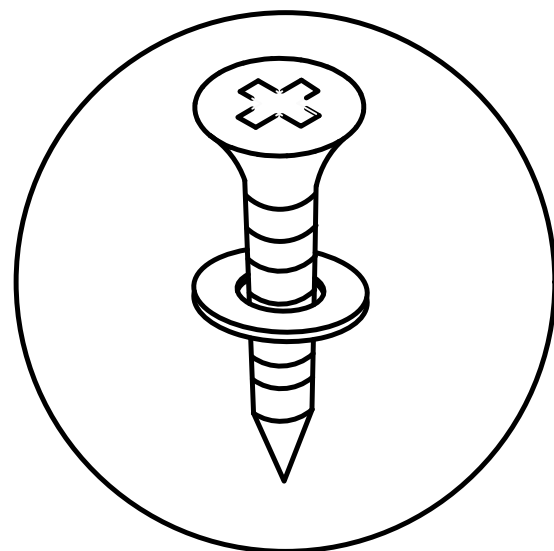




Install the anti fall hardware on the cabinet as shown in the picture first

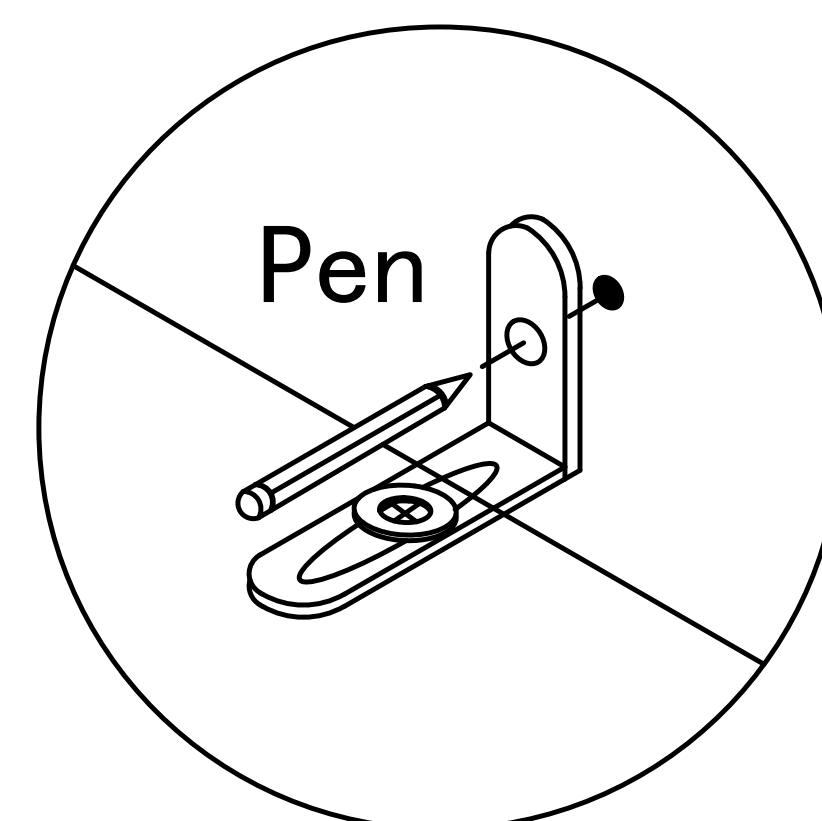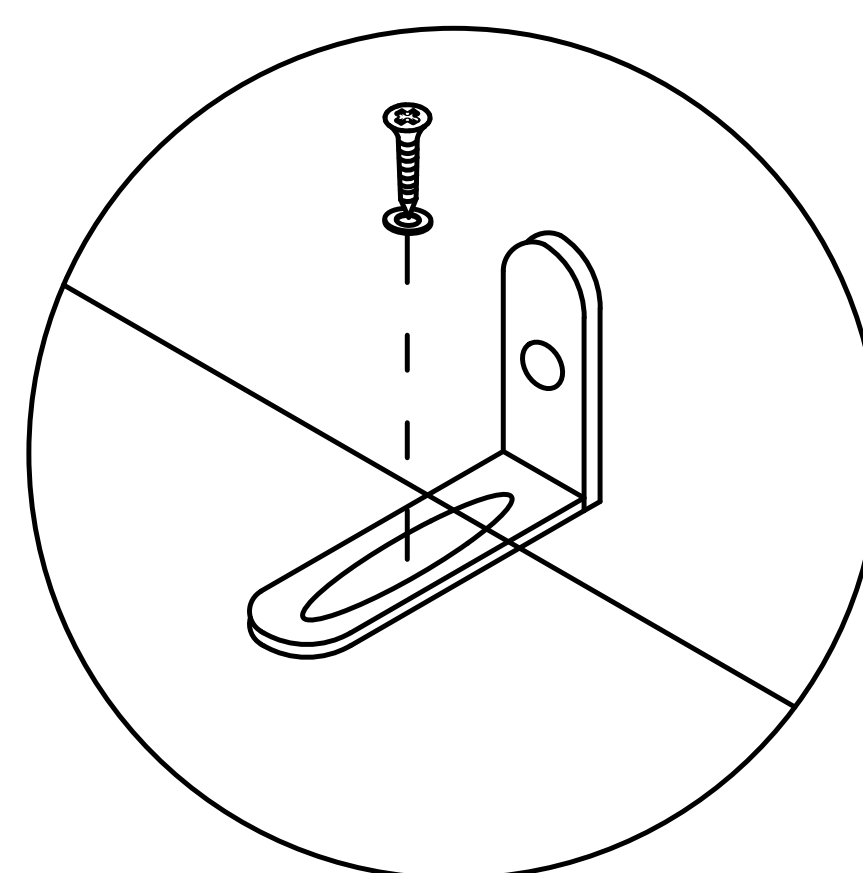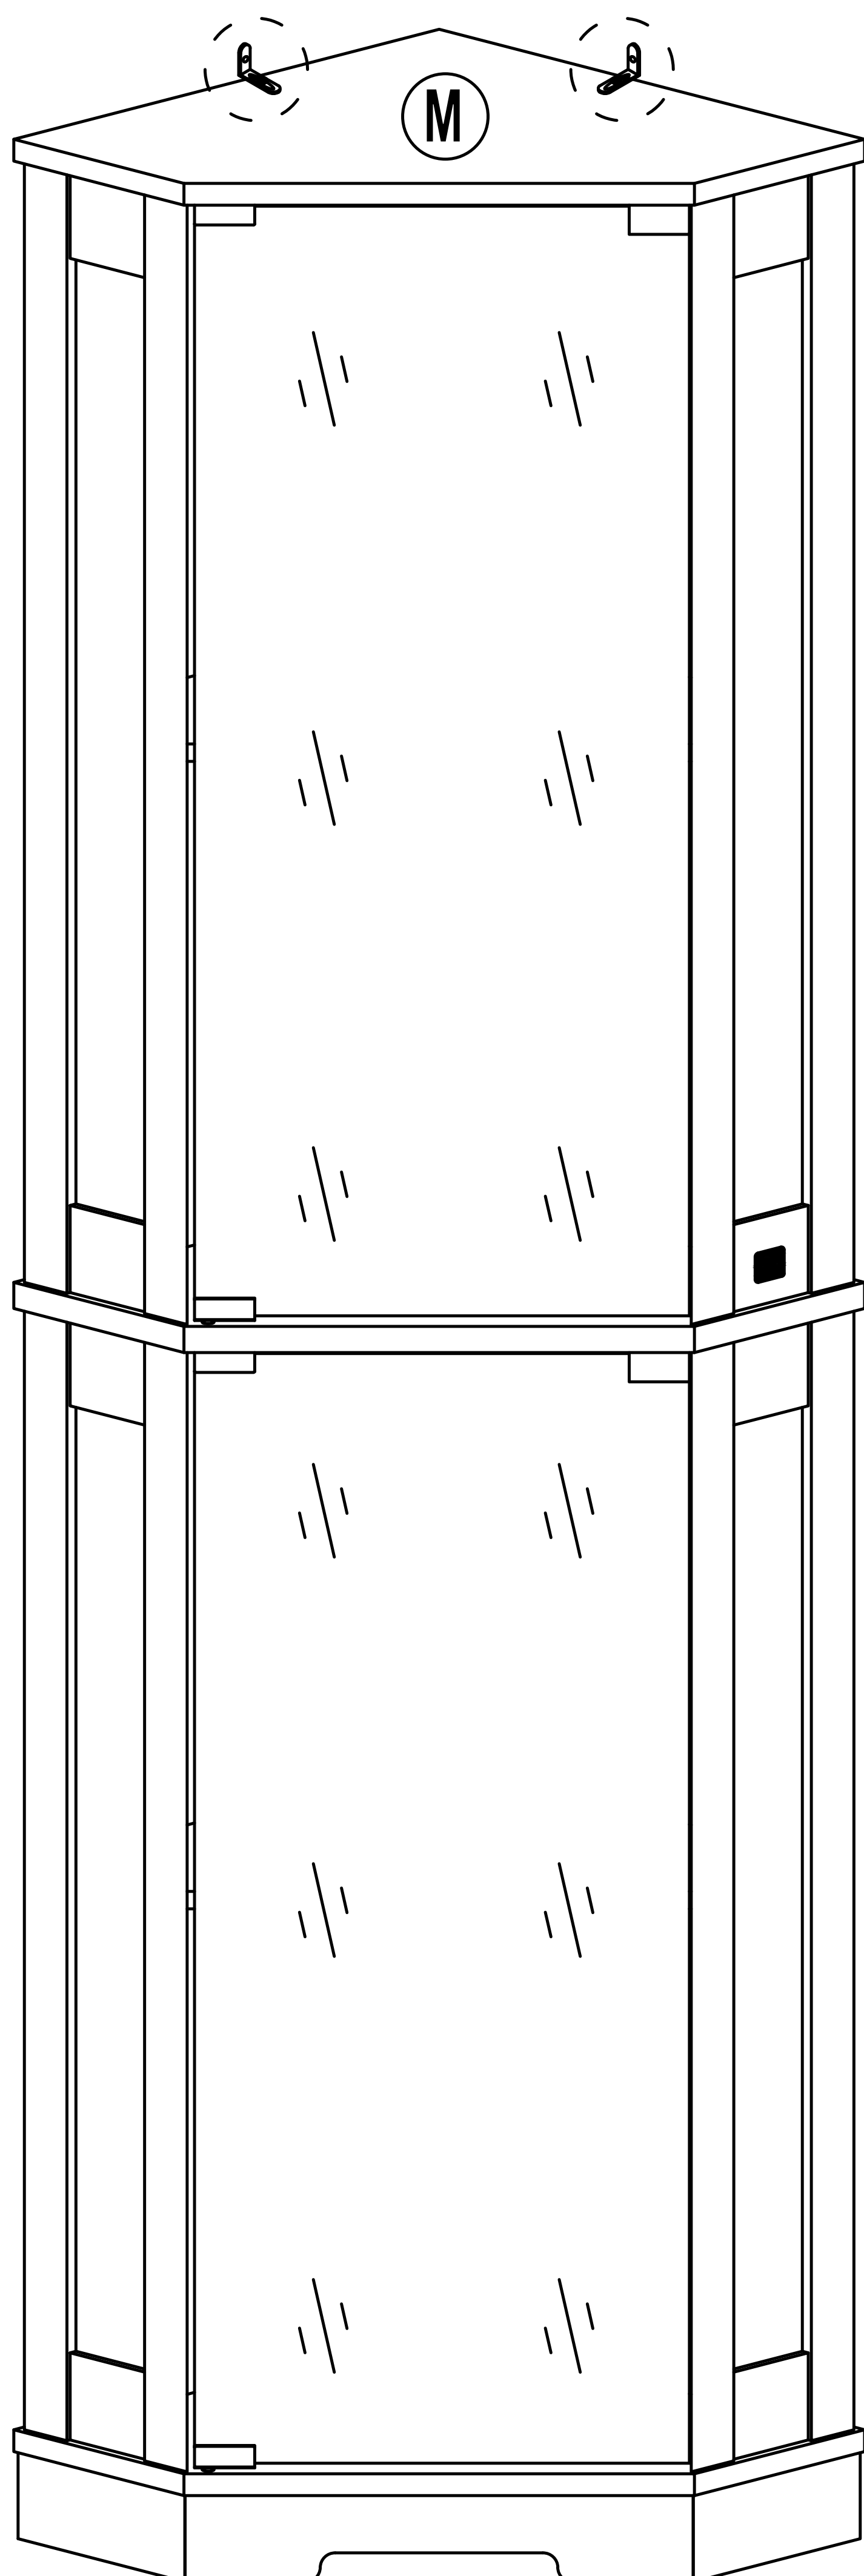



Then mark the wall with a pen through the holes in the anti-fall hardware

Step 42

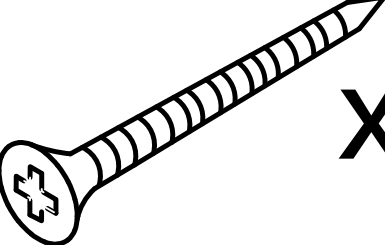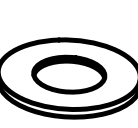6  x2
 x2  x2

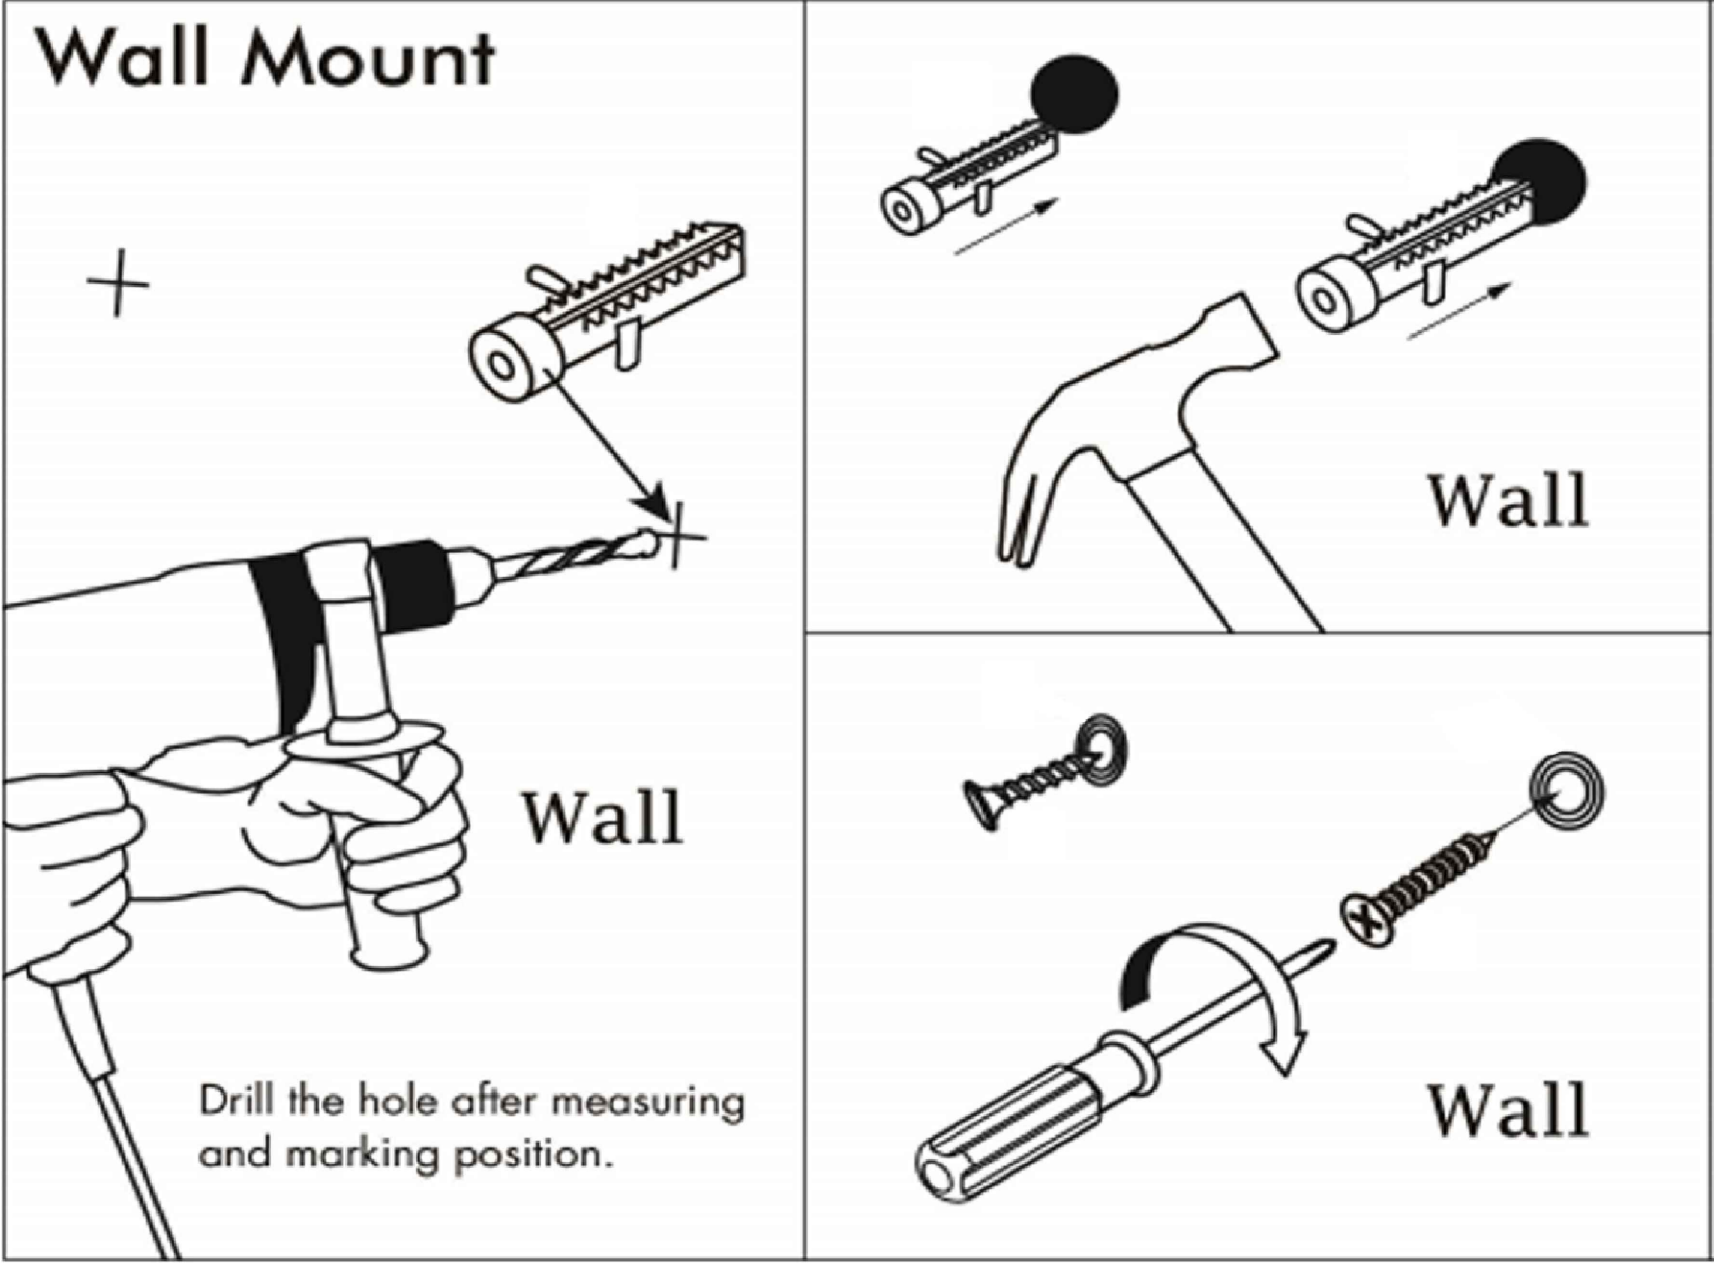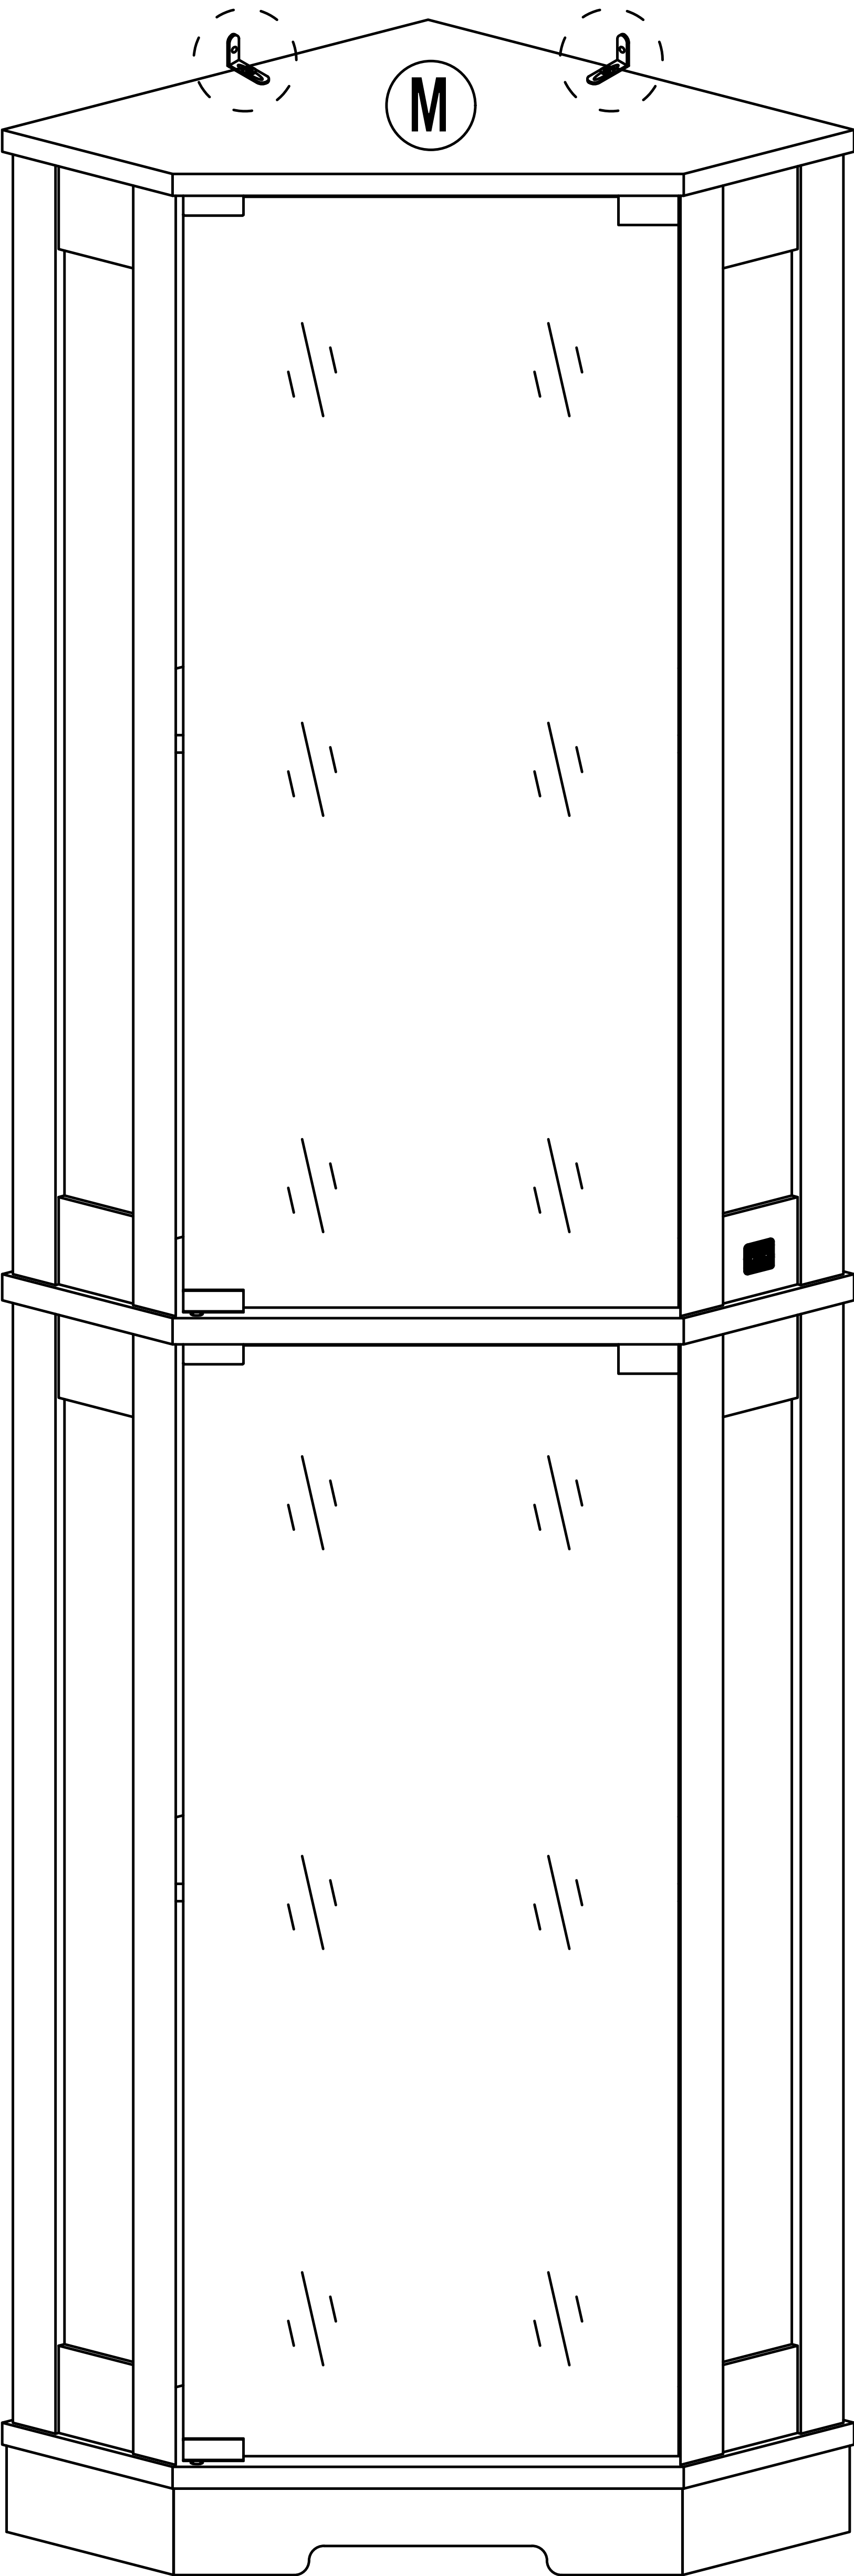

Drill the hole with an electric drill
and punch in the colloidal particles

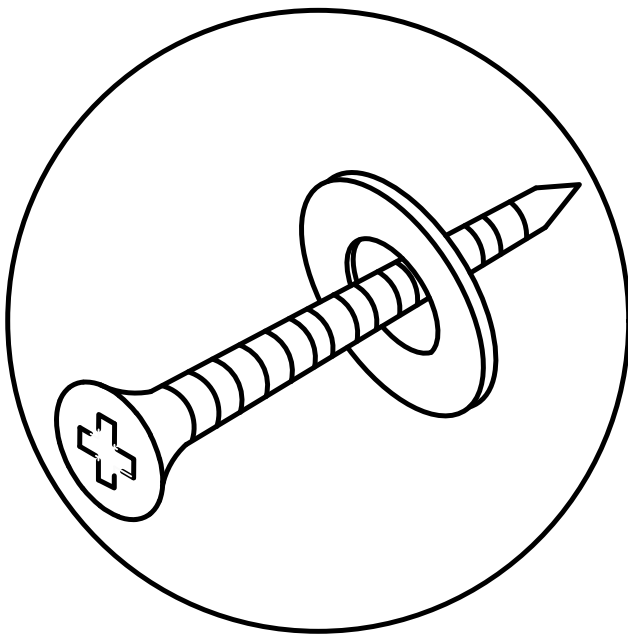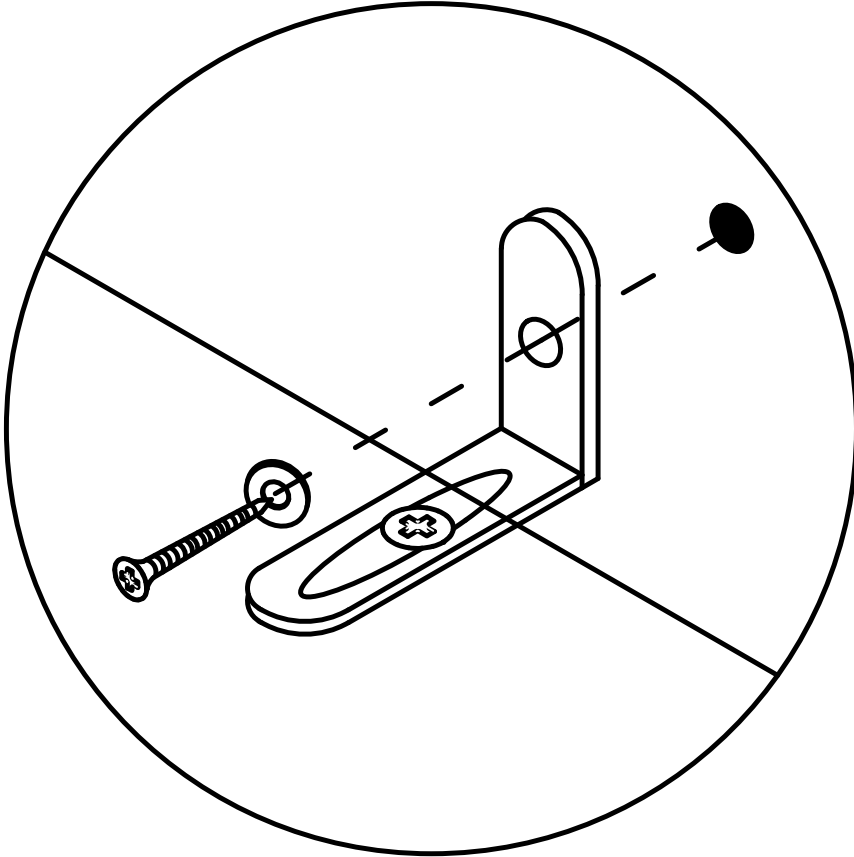

4x45mm

Fix the dressing
table to the wall


User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V DC power supply. Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller with 2 touch buttons. It can turn ON/OFF the light, change light colors, and adjust the light luminance.

Product Show

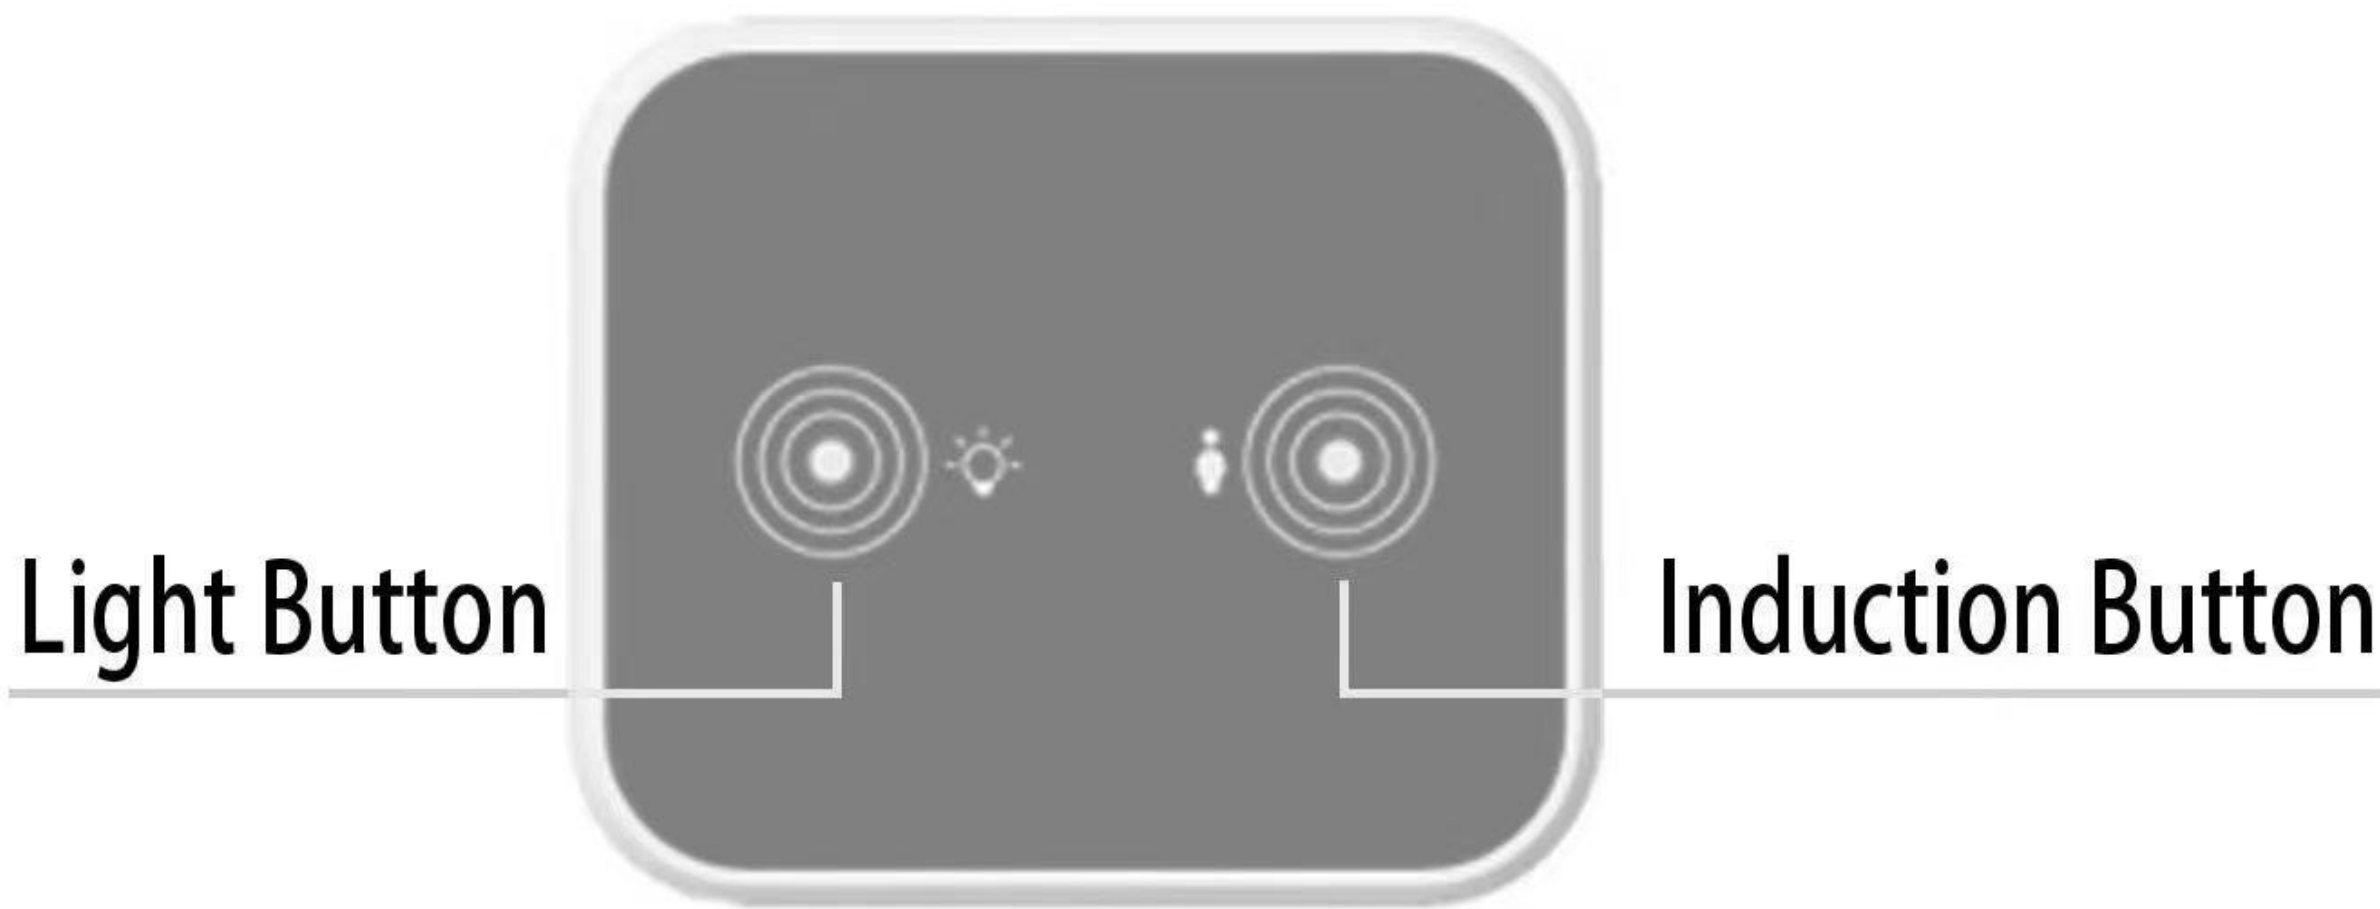

ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If bubbles appear on the panel, remove the protective film.

Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. B. Long touch -> adjust the luminance



This touch button is used to turn on/off the induction function.

A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.

B. Long touch to turn off the induction function.

C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.