

ASSEMBLY INSTRUCTION

MODEL : MIST QUEEN BED

(BOX 1) BOX OF HEADBOARD

NO	ITEM	QTY
A	HEADBOARD	1
B	FOOTBOARD	1
C	HEADBOARD LEG L/R	2
D	BED SLATS	4
E	BED SLATS SUPPORT	4

(BOX 2) BOX OF SIDE RAIL


NO	ITEM	QTY
F	SIDE RAILS	2

(BOX 1) HARDWARE LIST

NO	ITEM	QTY
1	ALLEN WRENCH M4 X 65MM BLK	1
2	JCBC	4
3	SPRING WASHER 1/14" BLK	4
4	FLAT WASHER 1/14"IDX13MM MOD BLK	4
5	ADAPTOR 12V+12W+1A ADAPTOR WITH UL CERTIFICATE	1
6	FLAT HEAD SCREW M4 X 28MM BLK	16
7	ALLEN WRENCH M5 X 65MM BLK	1


STEP 1

STEP 1:1 Attach the Headboard Leg (C) to Headboard (A) as show, Using JCBC Bolt (2), Spring Washer (3), Flat Washer (4) and fasten with Allen Wrench (1).
STEP 1:2 Fix the Headboard Leg (C) by using Flat Head Chipboard Screw (6) as shown

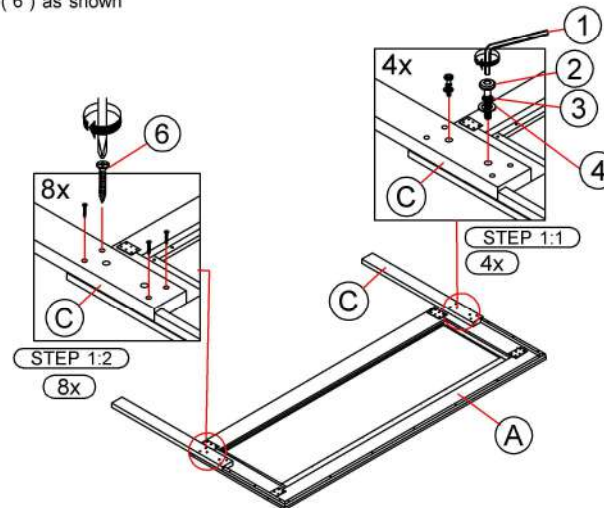

STEP 3



STEP 3:1 Fix the Bed Slats Support (E) to Bed Slats (D) as Shown. Loosen or Tighten the Adjuster as necessary to level the Bed.
STEP 3:2 Fix the Bed Slats (D) with Bed Slats Support (E) to Side Rail (F) by using Flat Head Screw (6). Bed assembly should be done in final location to ensure stability.

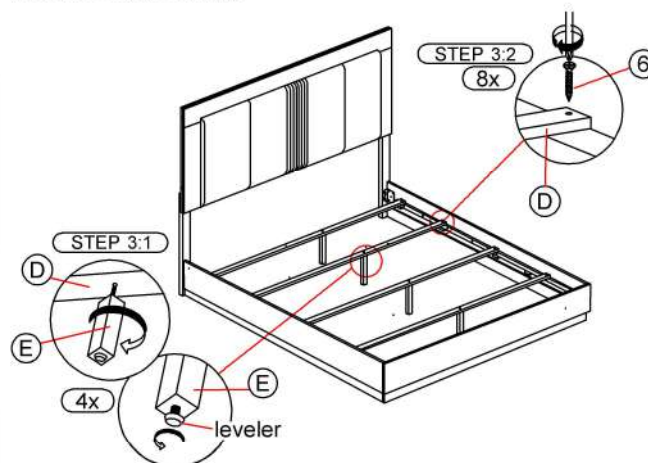

STEP 2

STEP 2:1 loosen the bolt on Headboard Leg (C) and Hook the Side Rails (F) to Headboard Leg (C) closely and push down to fit.

STEP 2:2 Retighten the bolt using an with Allen Wrench (7) as shown. Repeat the same step with other and of rail to hook onto Footboard (B).

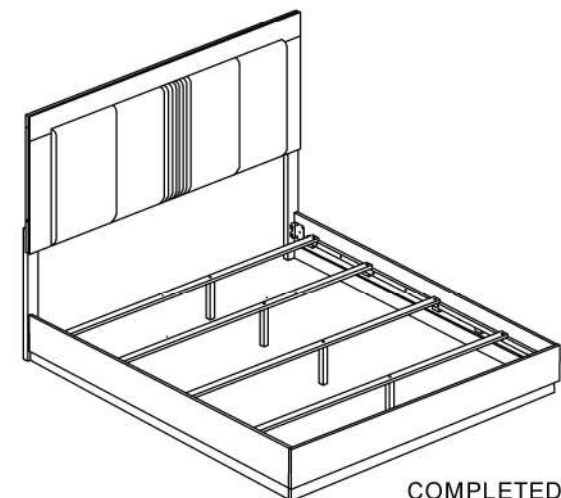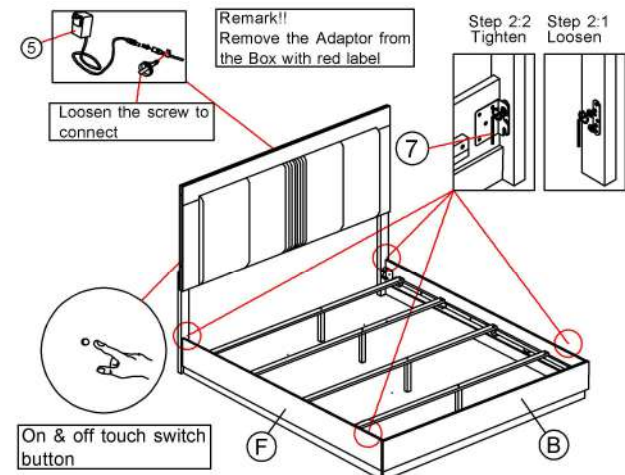

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.
DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.