
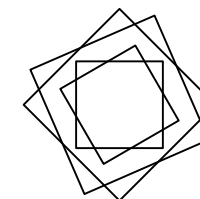


THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

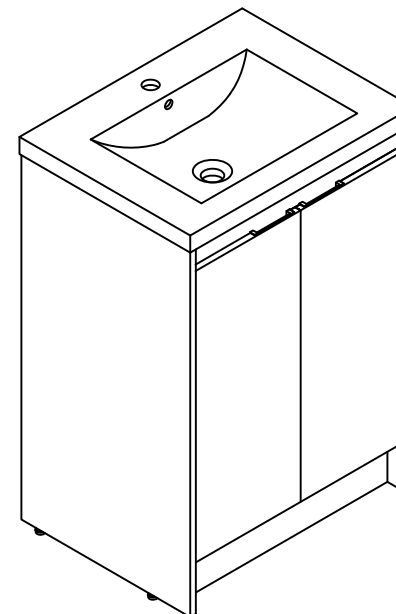

Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 D24 GWH


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	44	H	 Bracket (19x19x35mm)	2
B	 Two-in-one connector	24	I	 Hinges(Internal hiding)	4
C	 Two-in-one connector	24	J	 Adjustable feet	4
D	 Wood plug	4	K	 Movable laminate support	4
E	 Plastic anchor(Ø10mm)	2	L	 Anti-collision gasket	4
F	 Screws for fix on the wall	2	M	 Screwdriver	1
G	 Bracket (53x70x44mm)	2			


Recommended tools

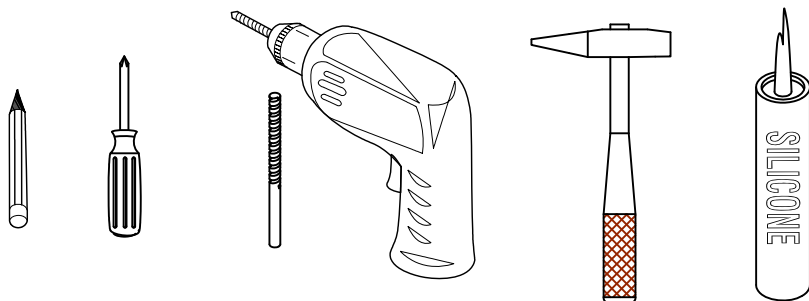


Dimensions

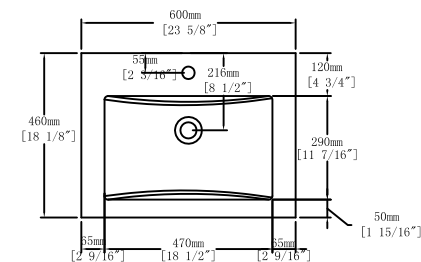

Top View

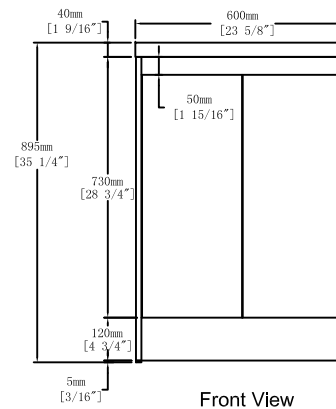

Front View

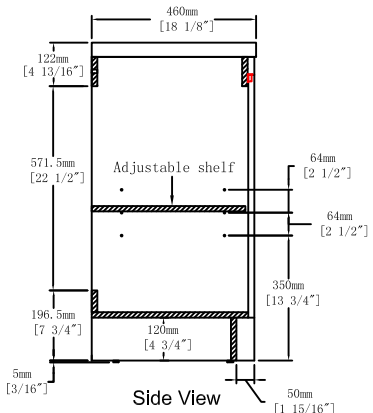

Side View

CARE CLEANING AND MAINTENANCE


- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

Step 14


Notes:
The installation position can be selected according to the required height.

K x4


K x 4

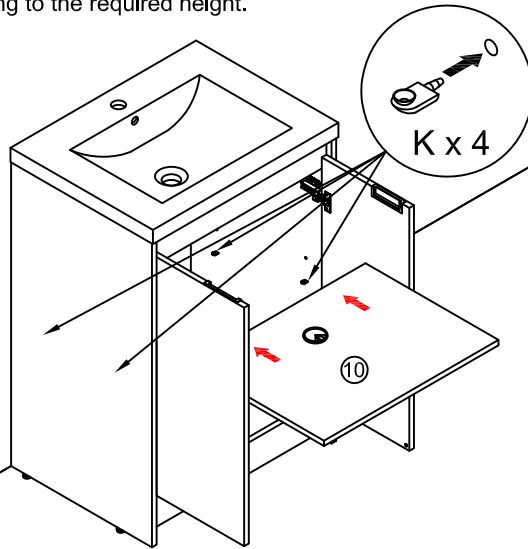


Dimensions

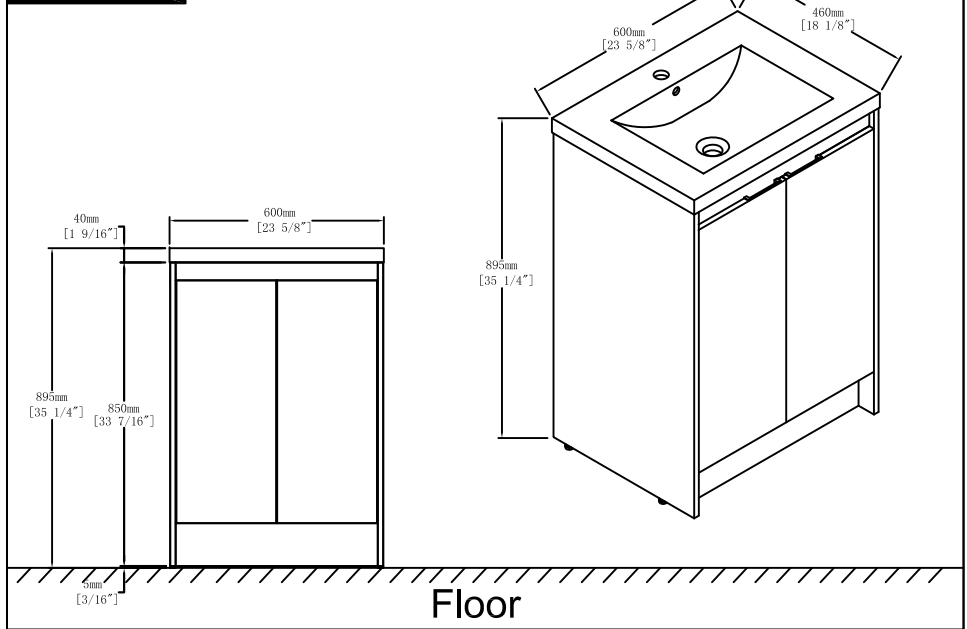

Finished



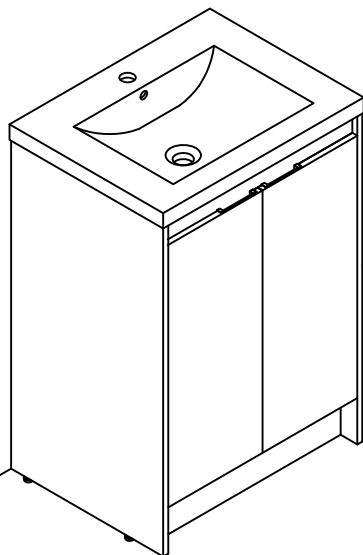


Components

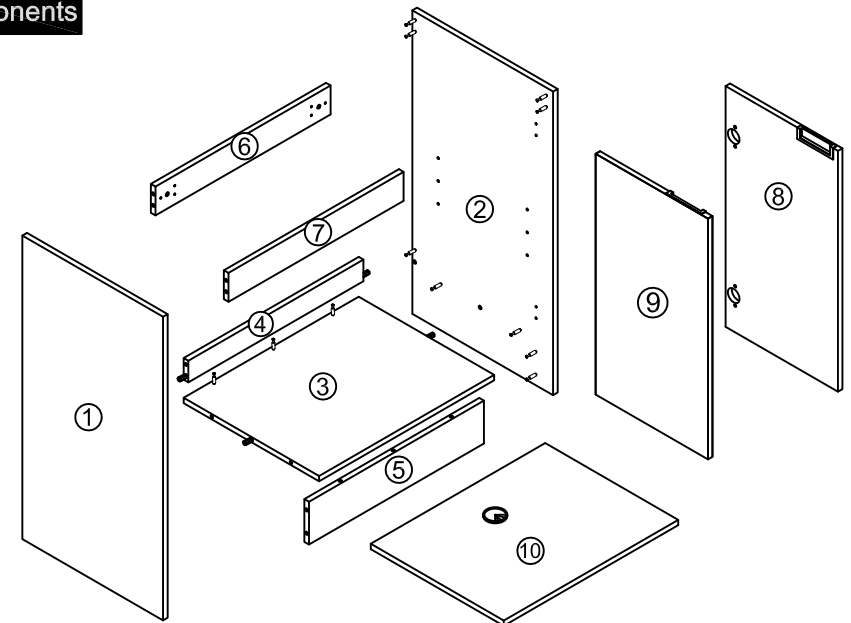


Step 1

-  x3
-  x3
-  M

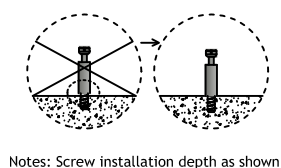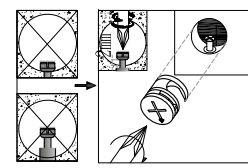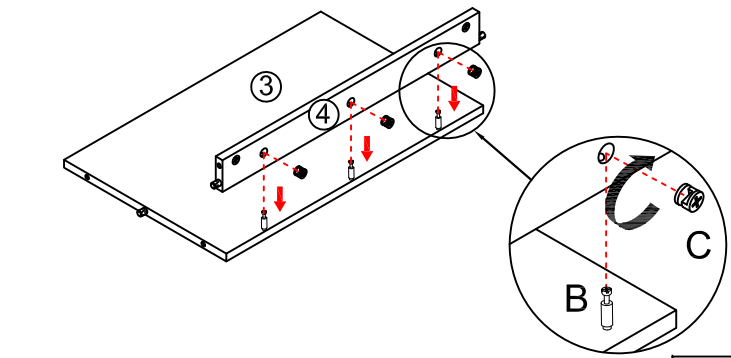




Notes: Screw installation depth as shown

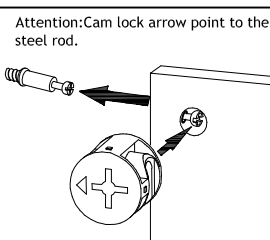

Attention: Cam lock arrow point to the steel rod.

Step 2

-  x3
-  x3
-  M

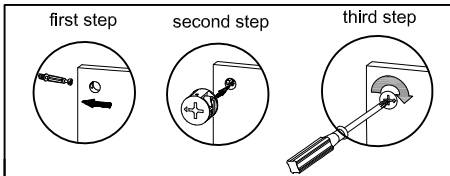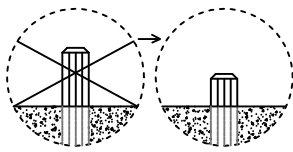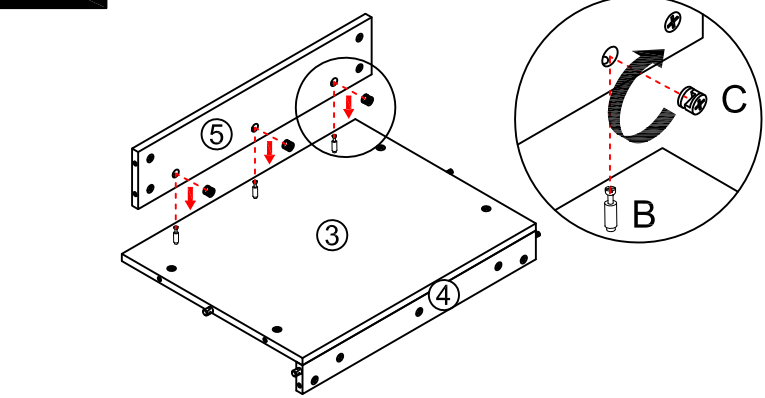



first step

second step


third step





Step 12





-  x2
-  Tool

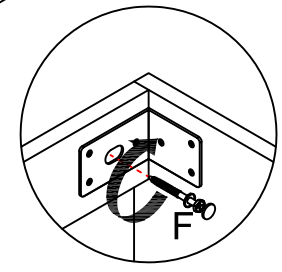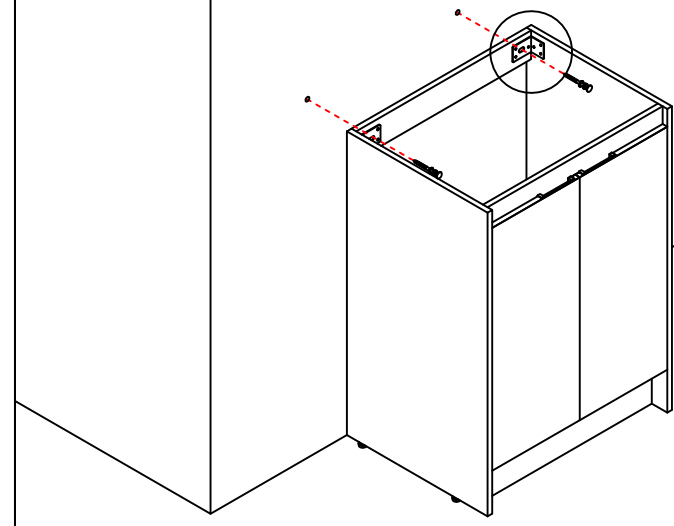

Step 13


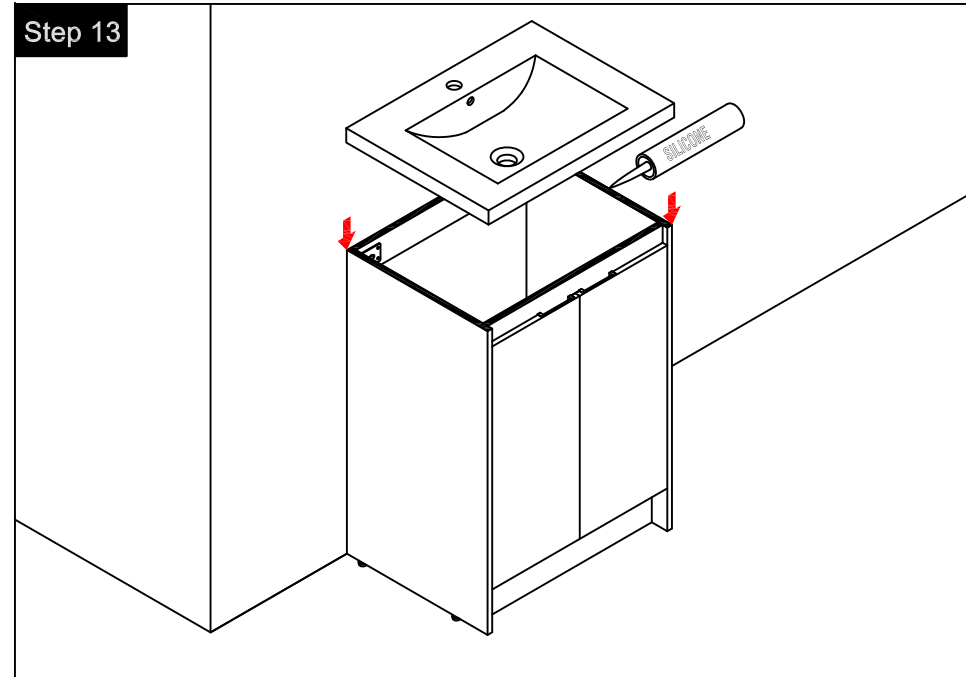


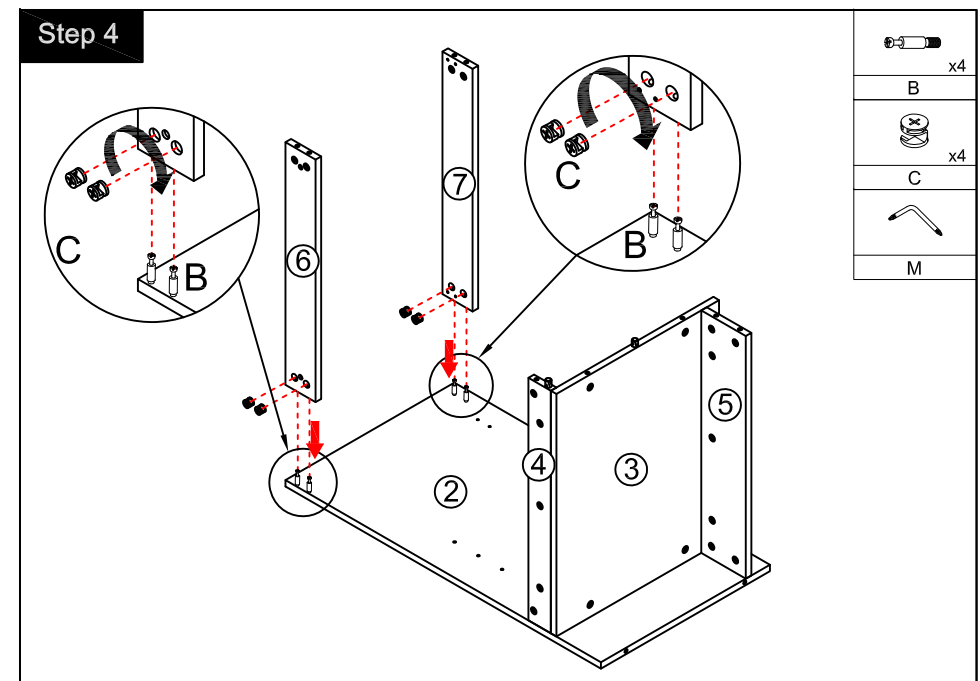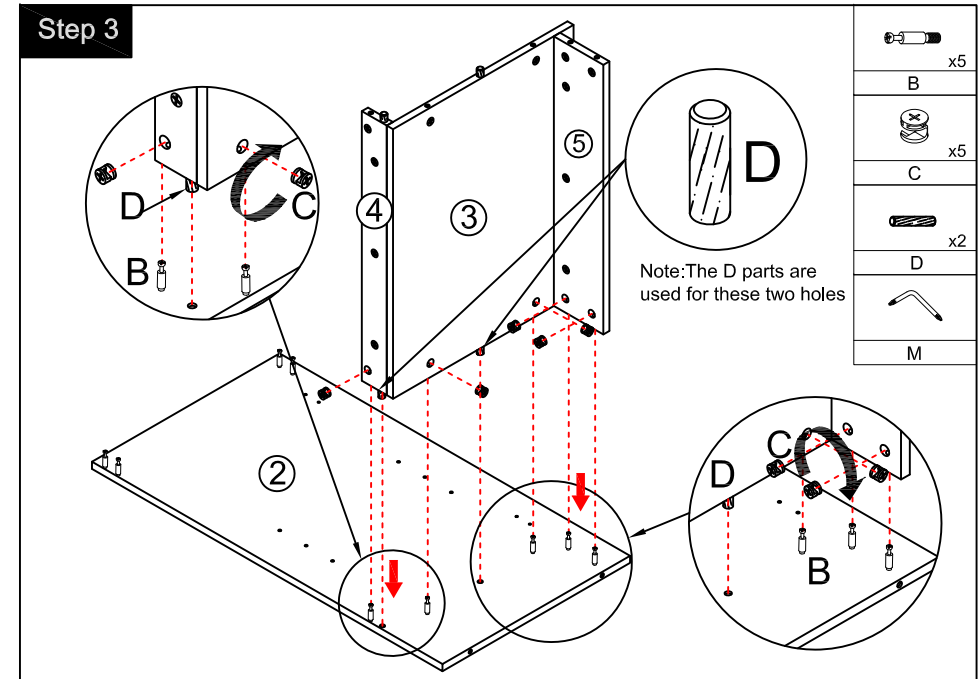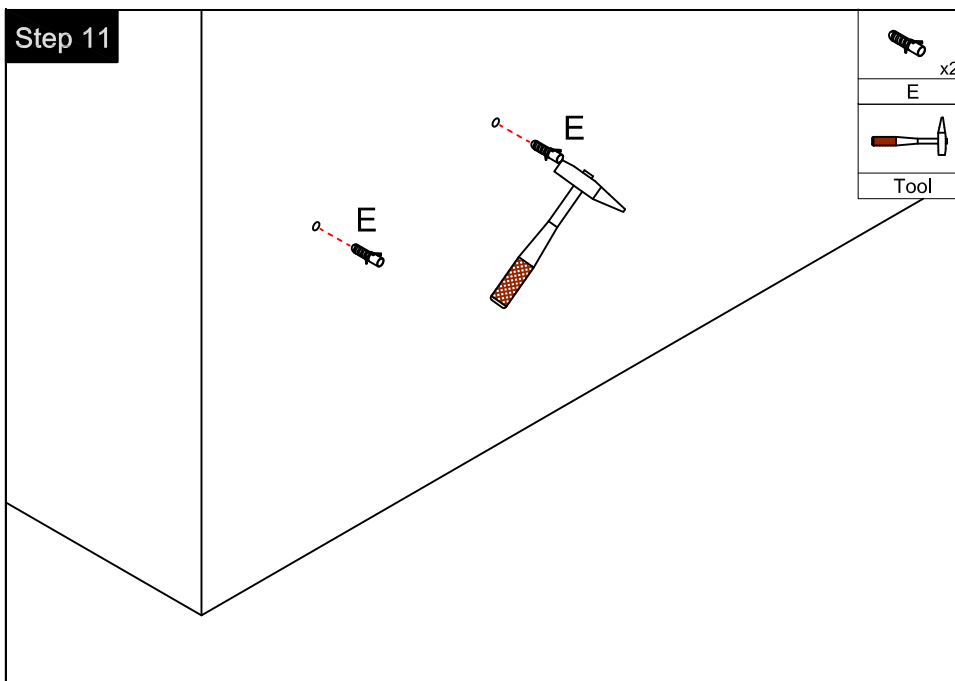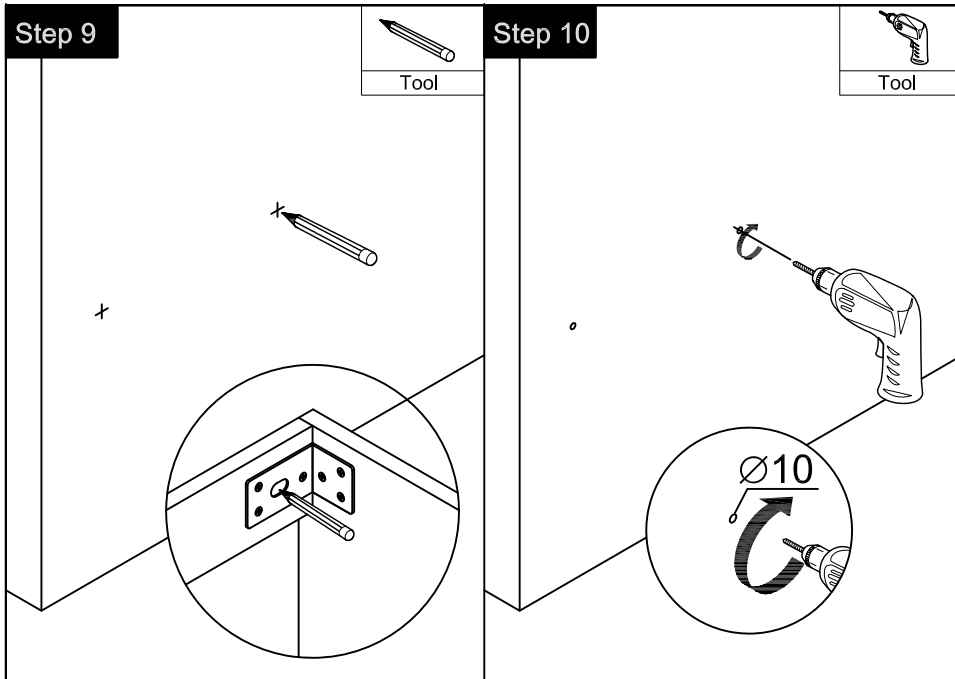

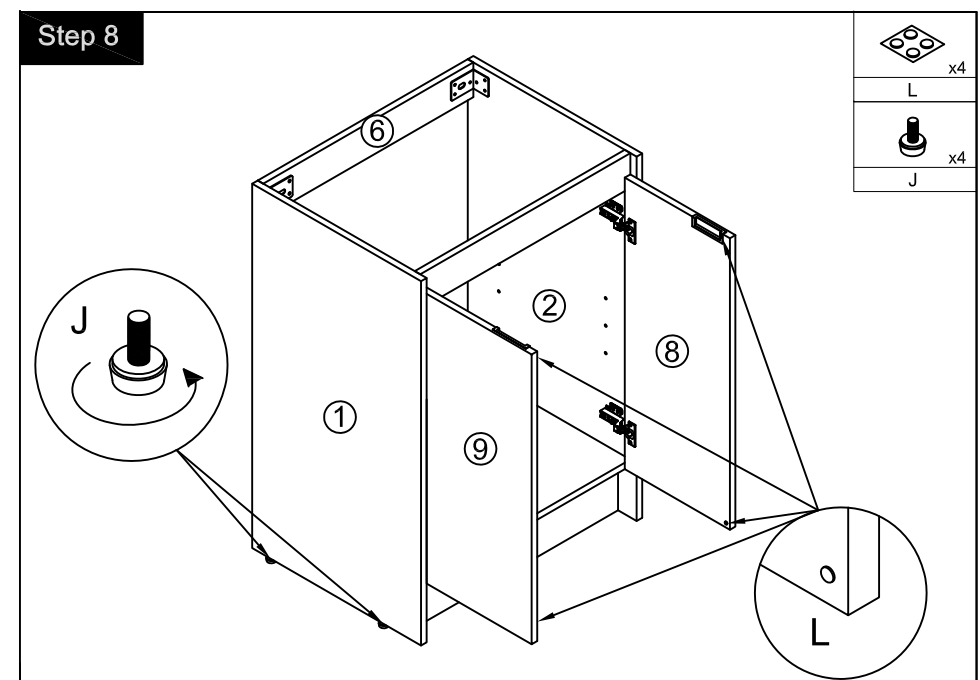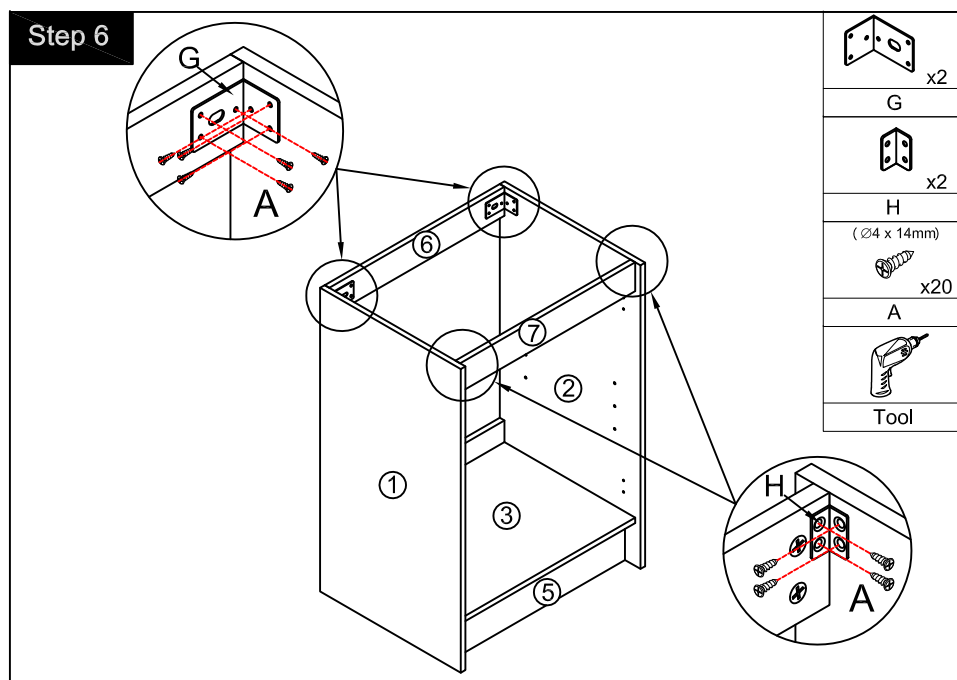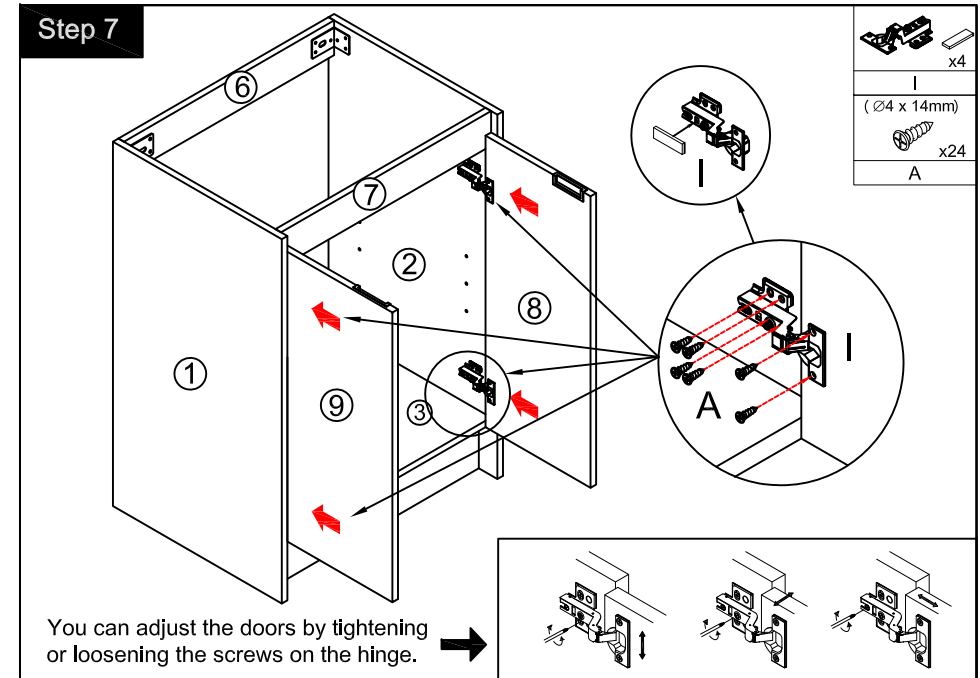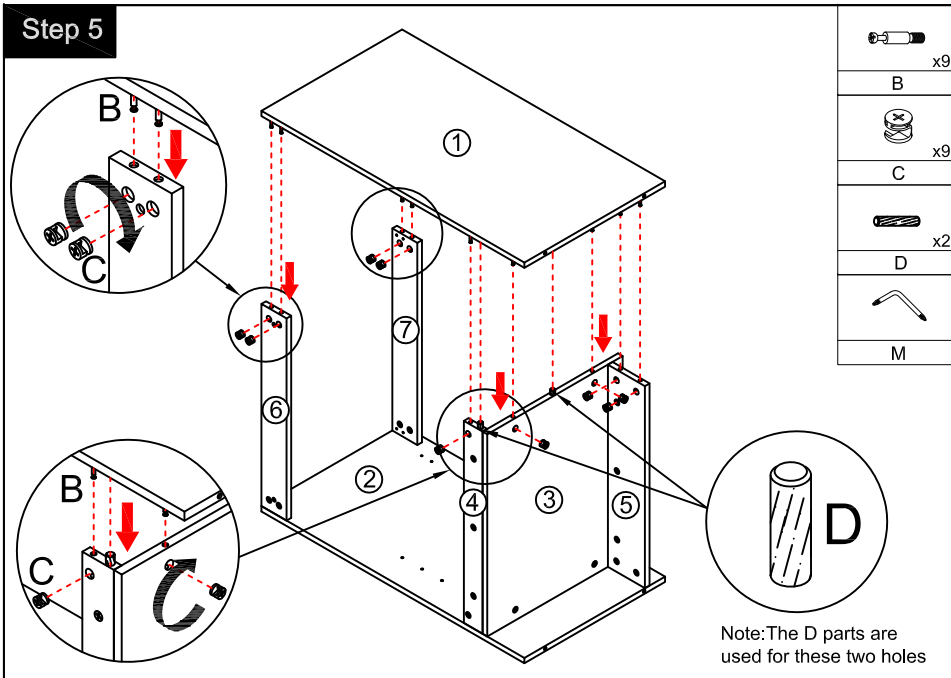

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

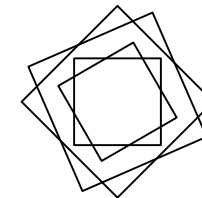
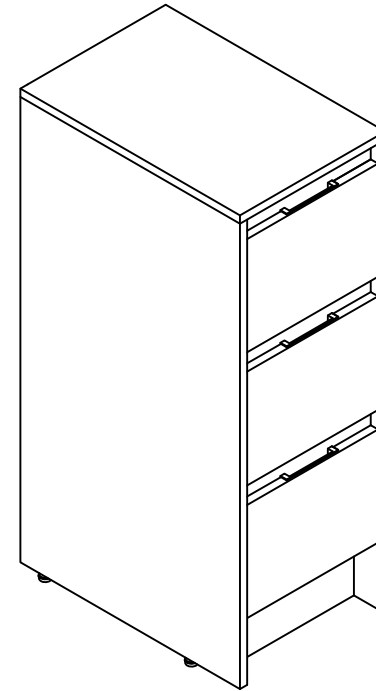


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 E12B GWH




Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	30	G	 Screws Ø4x20mm	6
B	 Two-in-one connector	57	H	 Adjustable feet	4
C	 Two-in-one connector	57	I	 Track	3
D	 Wood plug	8	J	 Anti-collision gasket	12
E	 Plastic anchor(Ø10mm)	2	K	 Screwdriver	1
F	 Screws for fix on the wall	2			

Recommended tools

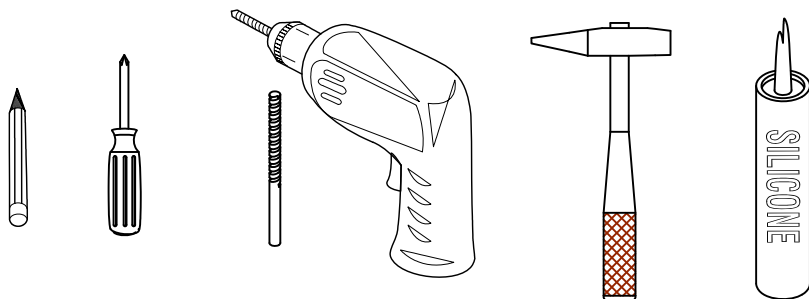


Dimensions

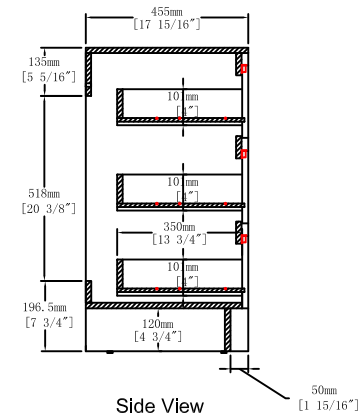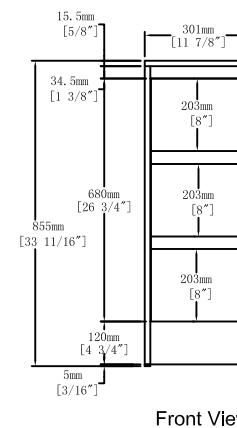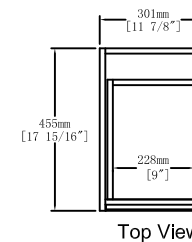


CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Finished

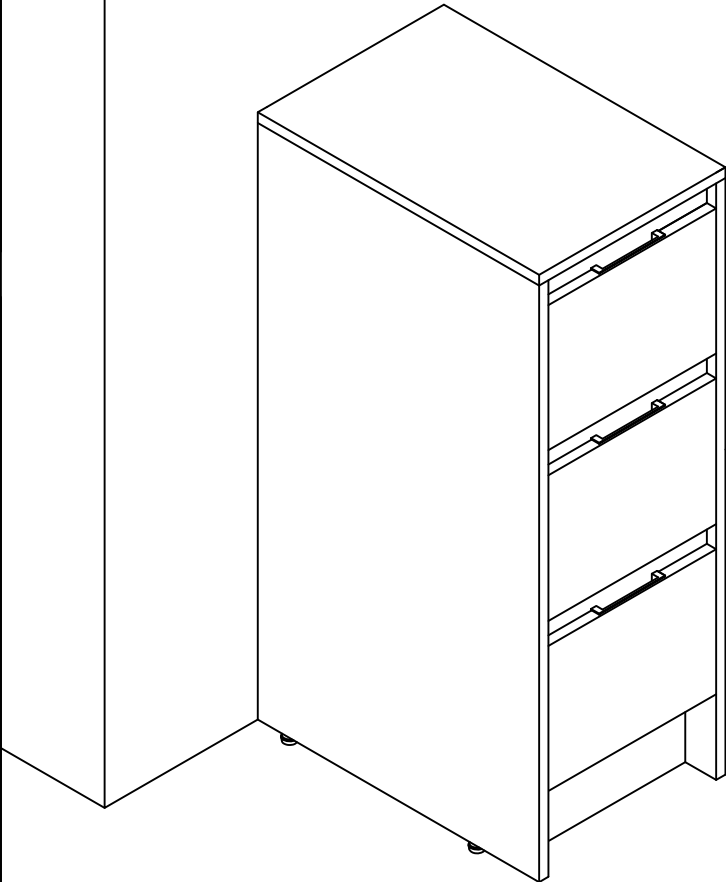

Dimensions



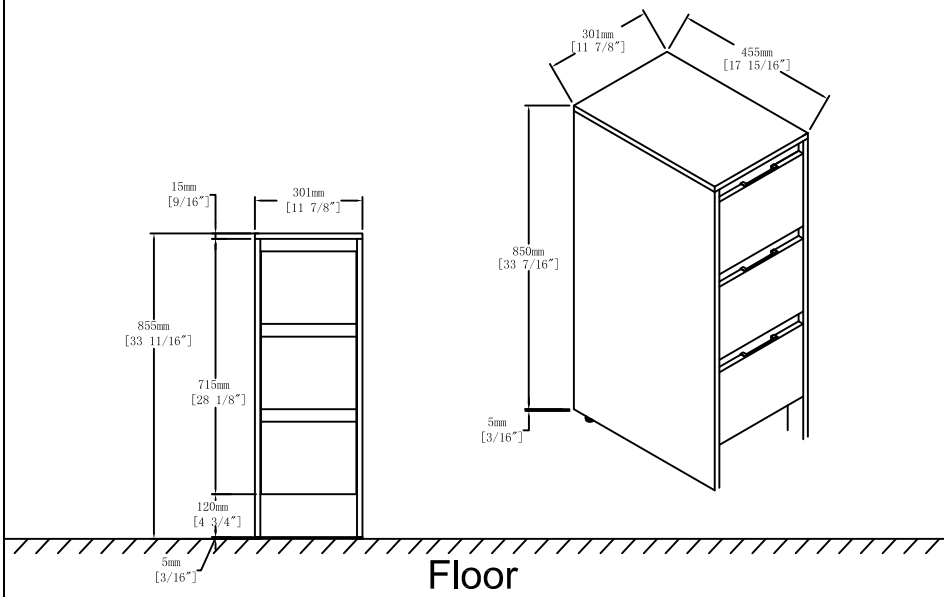


Components


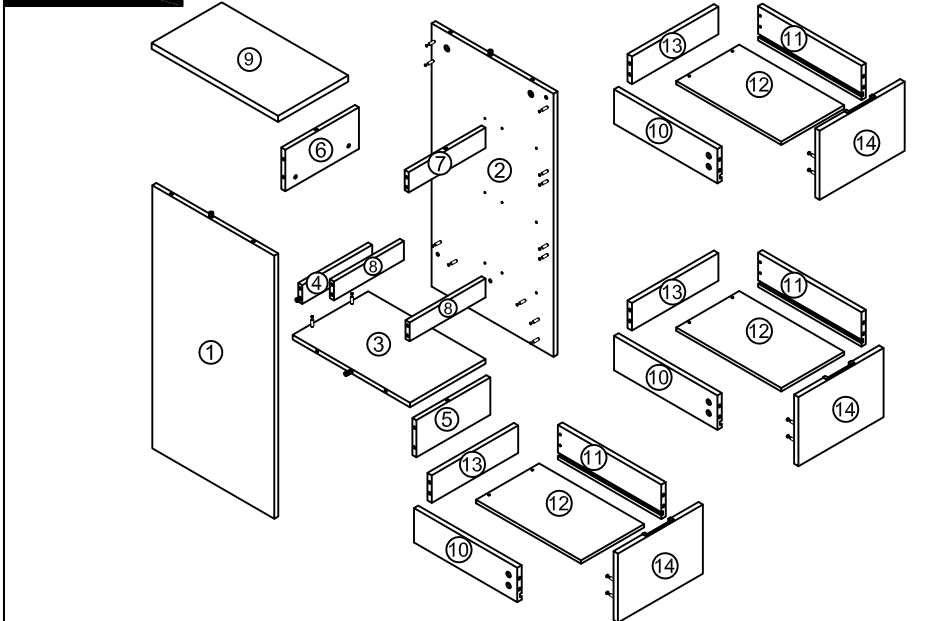


Step 1



Note: Follow the holes positions exactly.

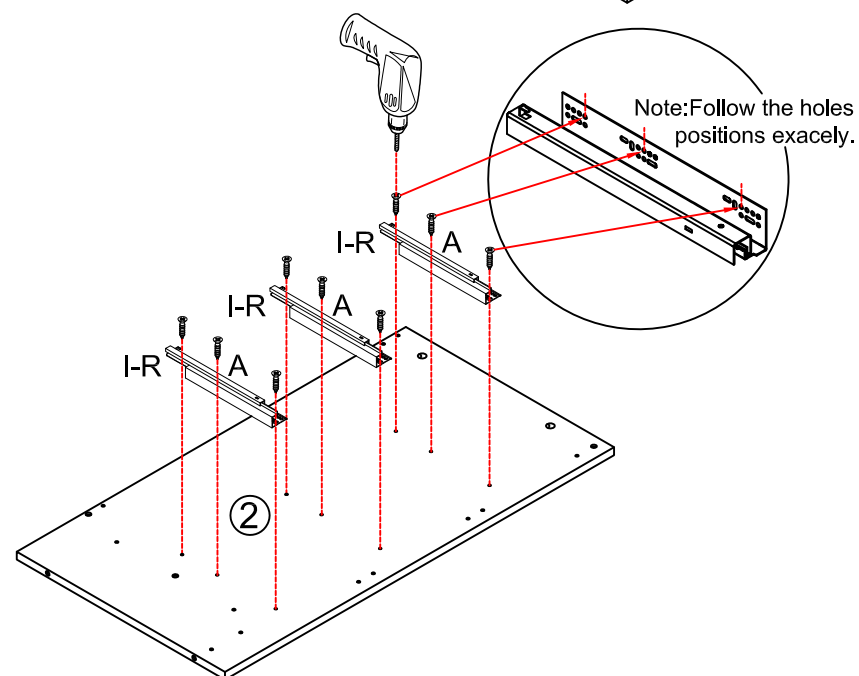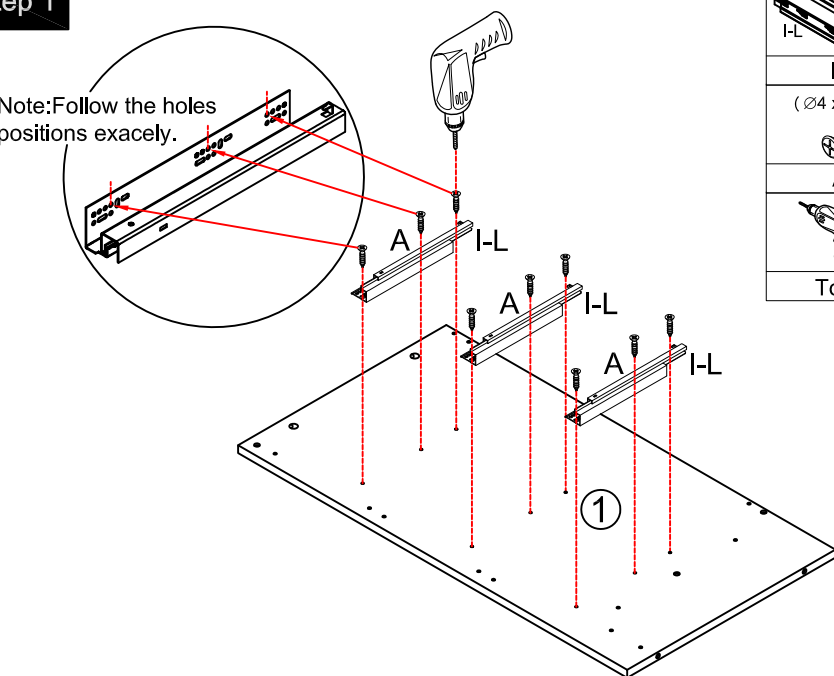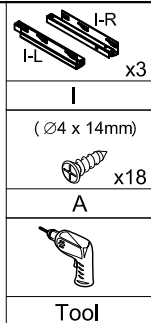

Step 16

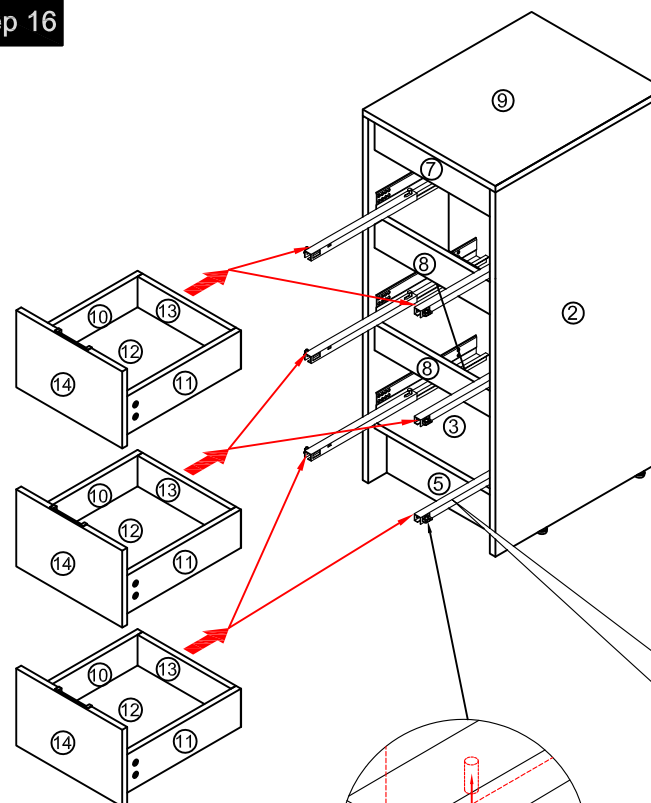
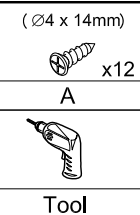


First

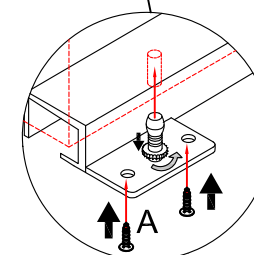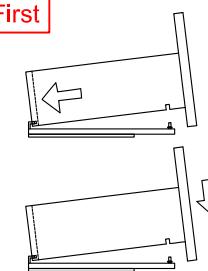




Third step: The bottom of the rail is fixed with screw A.

Second step: Tuck the rear holes.




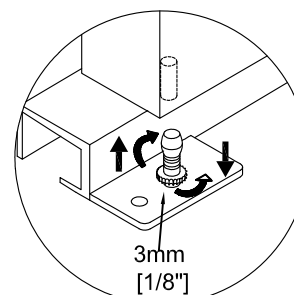
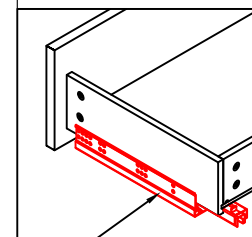


Note: The rails adjust their height 3mm.


Step 15

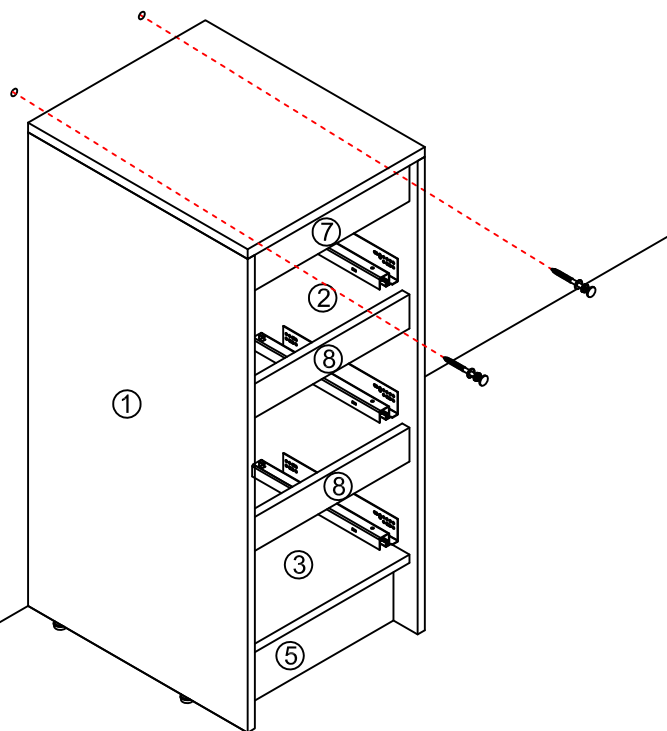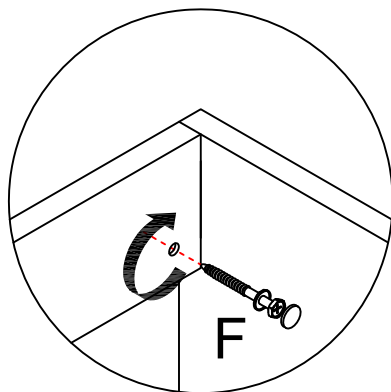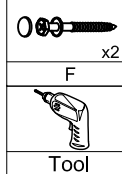

Step 2

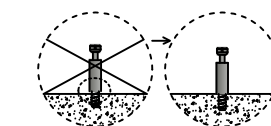
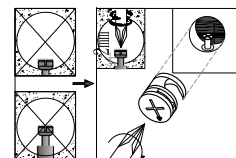
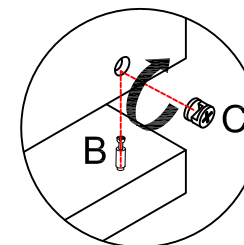
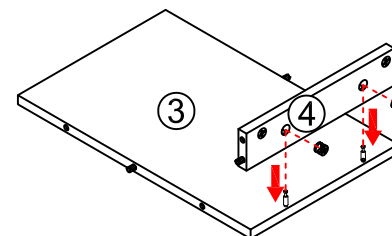
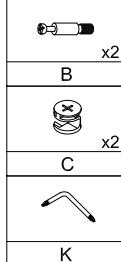


Notes: Screw installation depth as shown

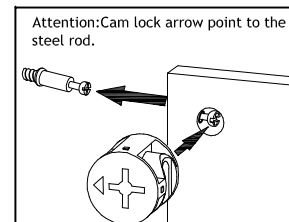


Attention: Cam lock arrow point to the steel rod.

Step 3

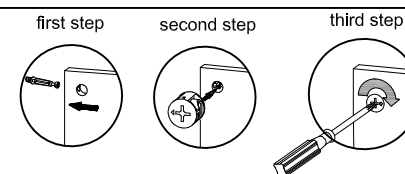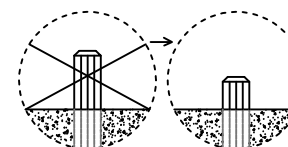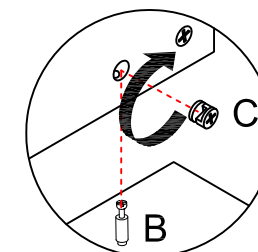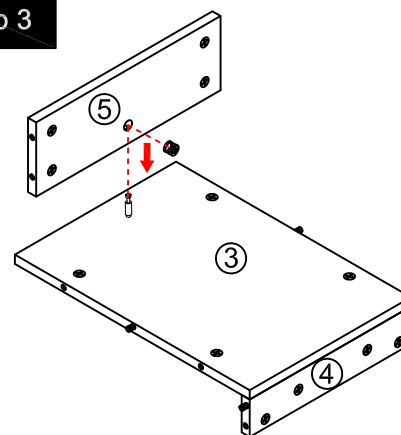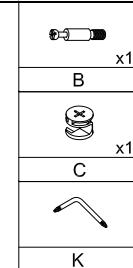


Step 4

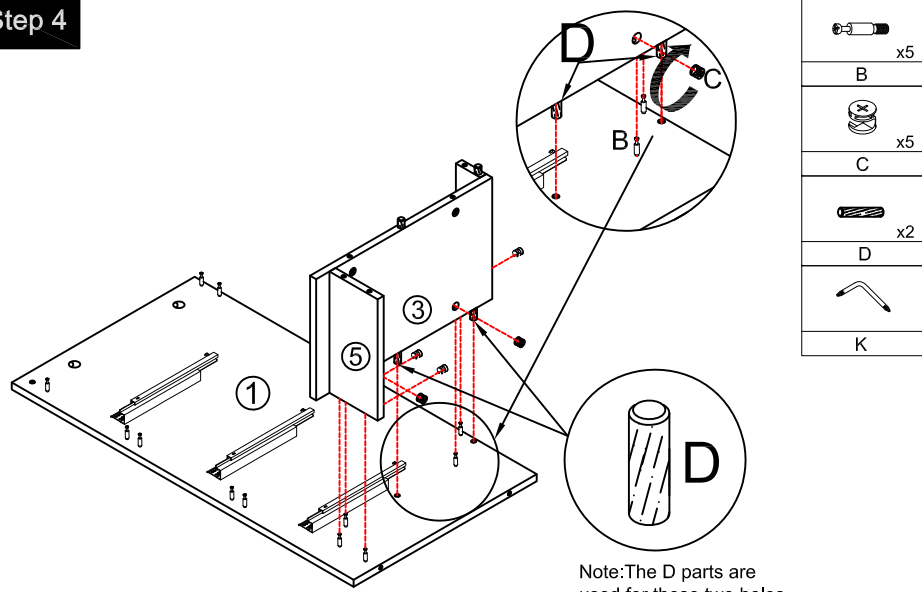


	x5
	x5
	x2

Step 13

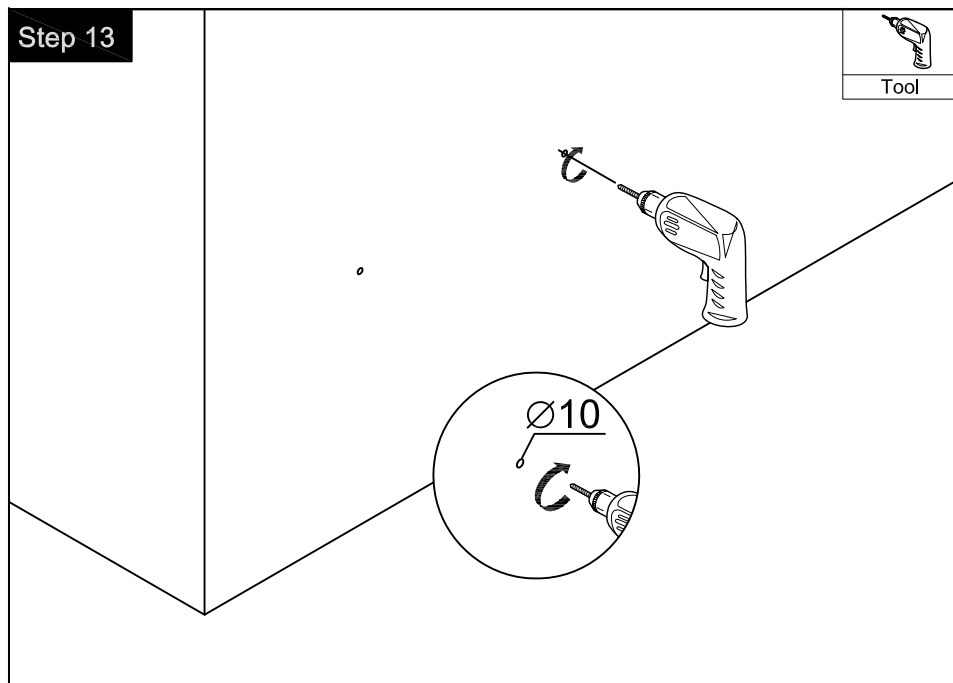


Step 5

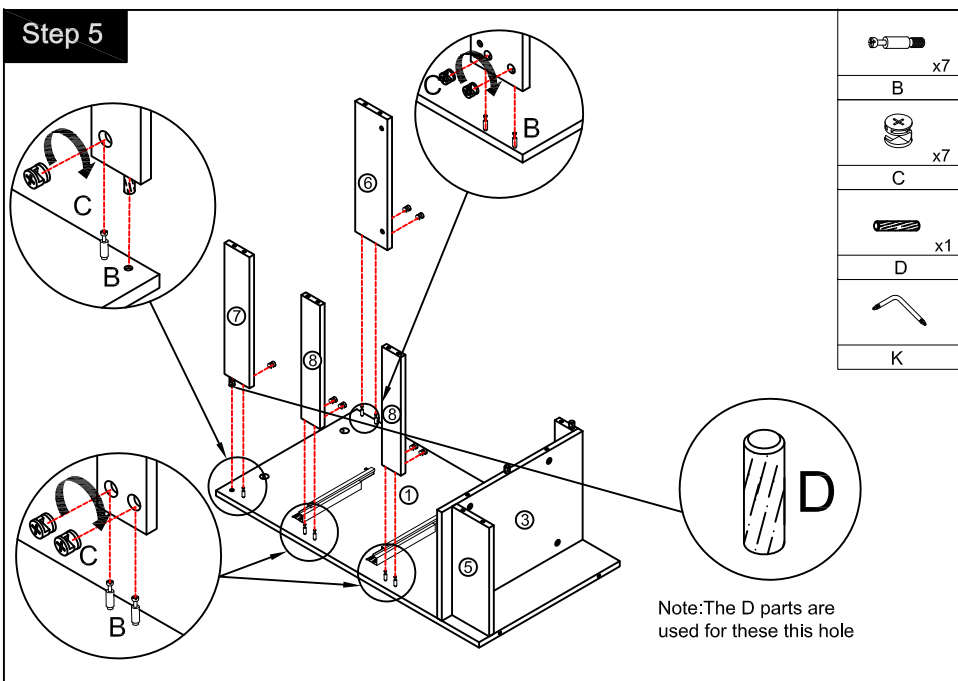


	x7
	x7
	x1

Step 14

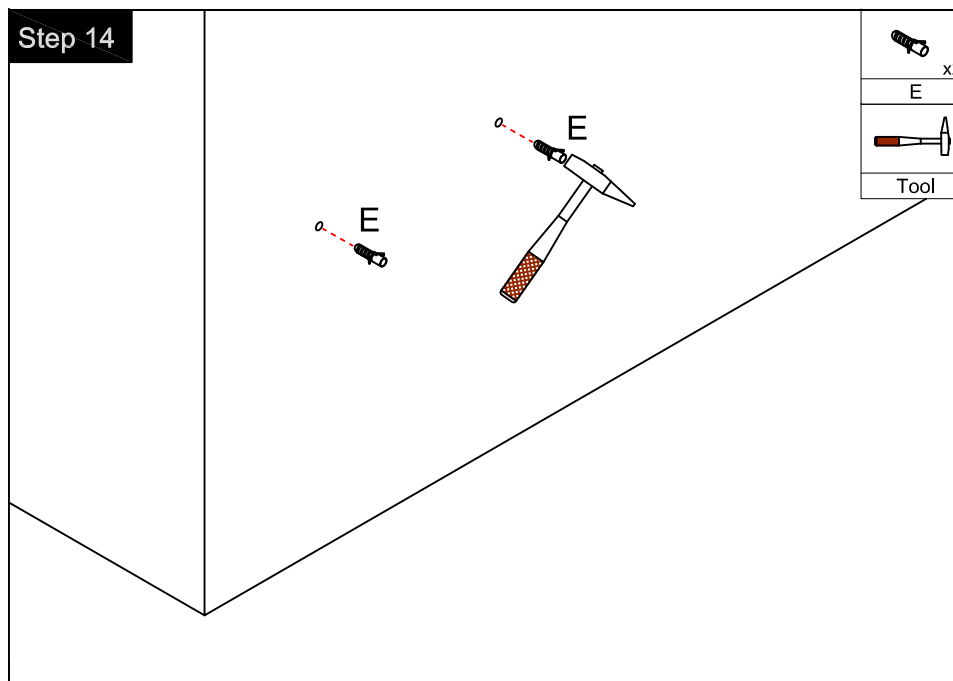


	x2


Step 11

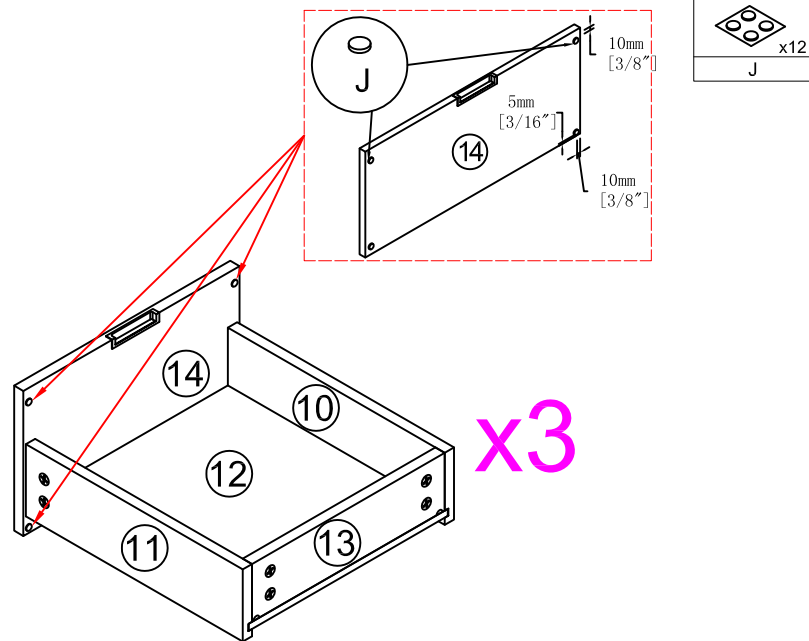


Step 12

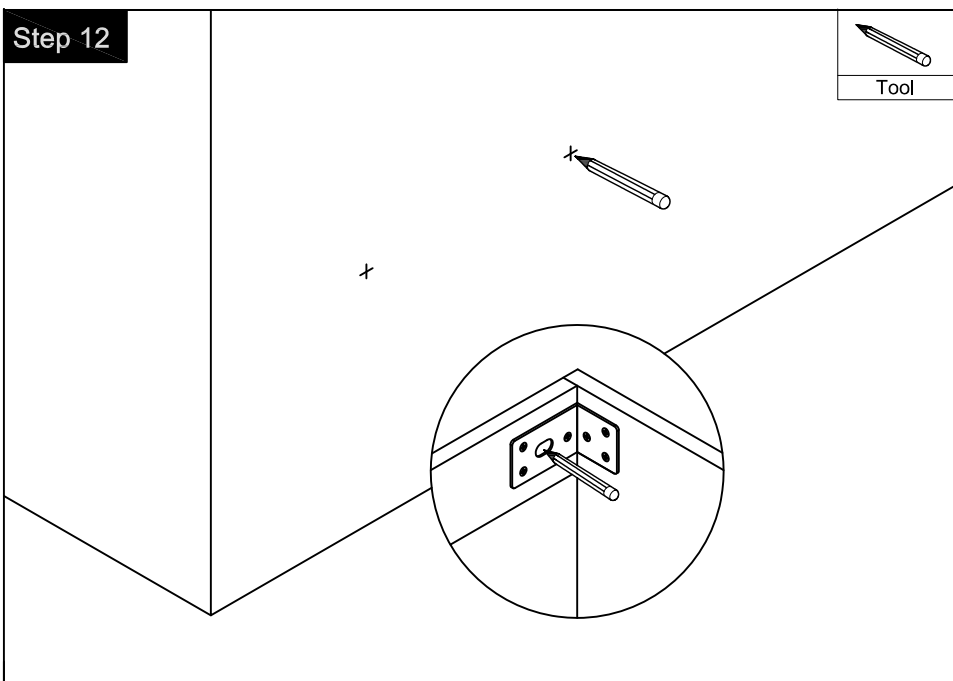


Step 6

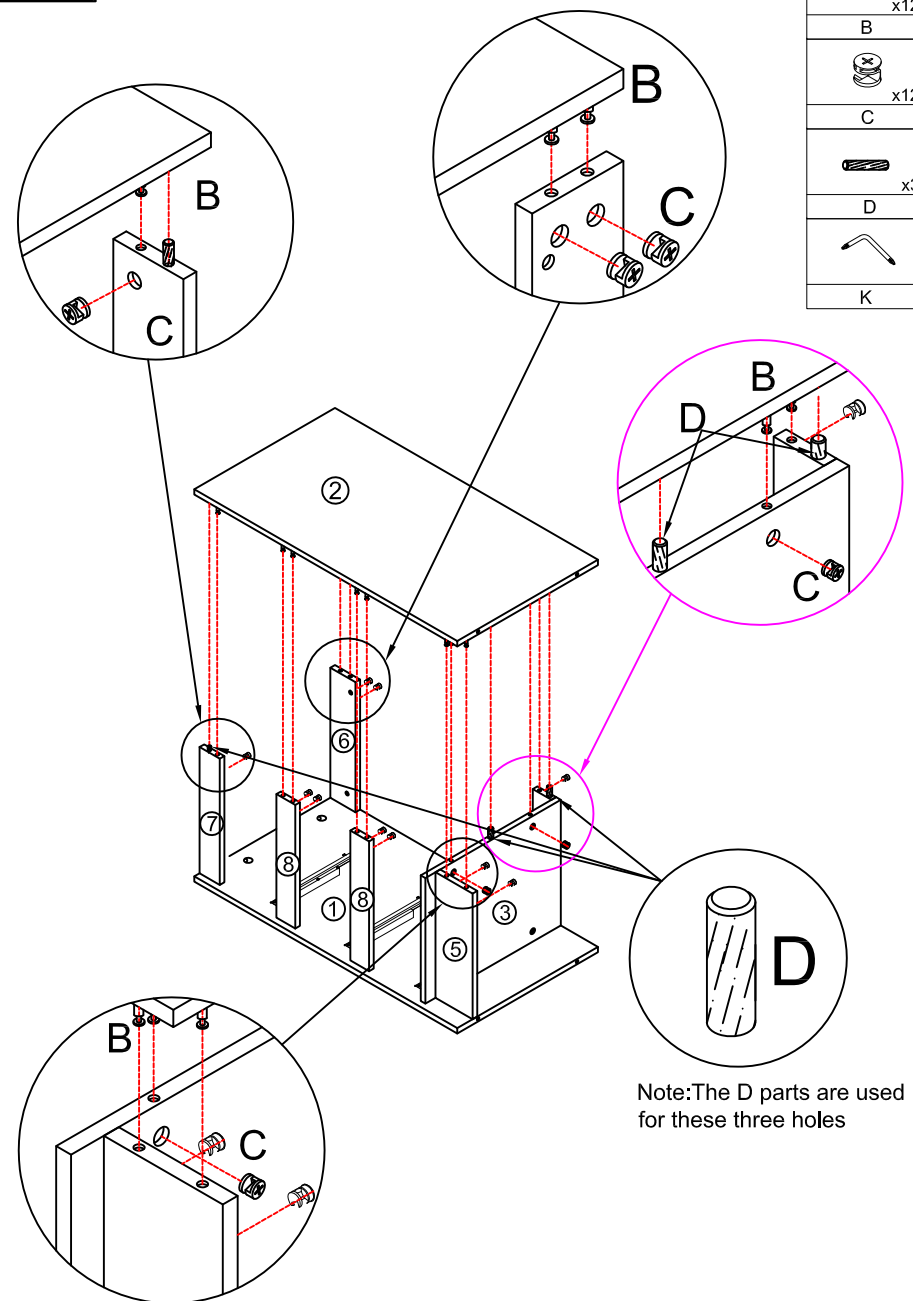


Step 7

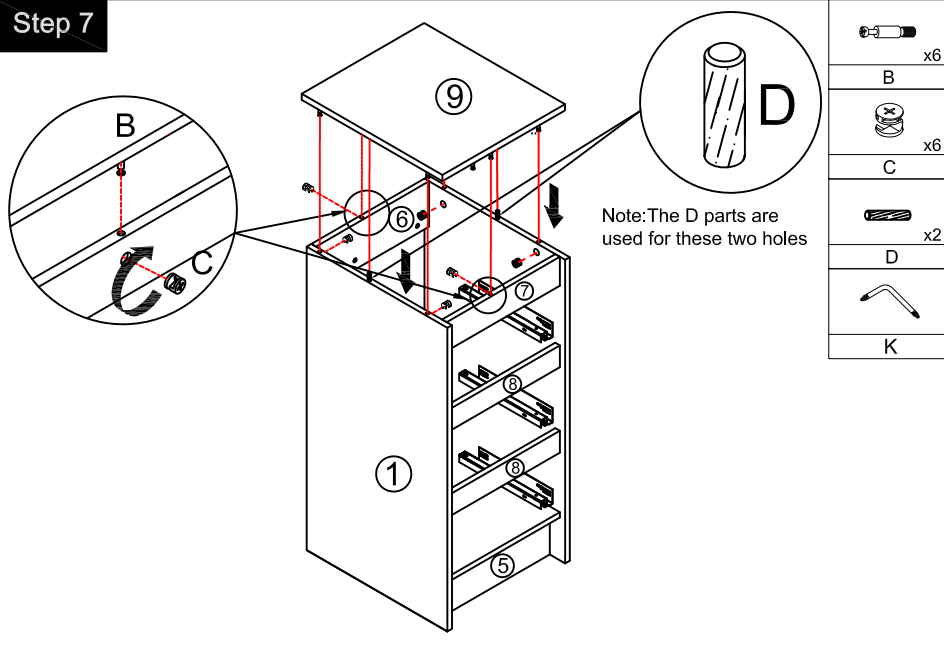

Step 8

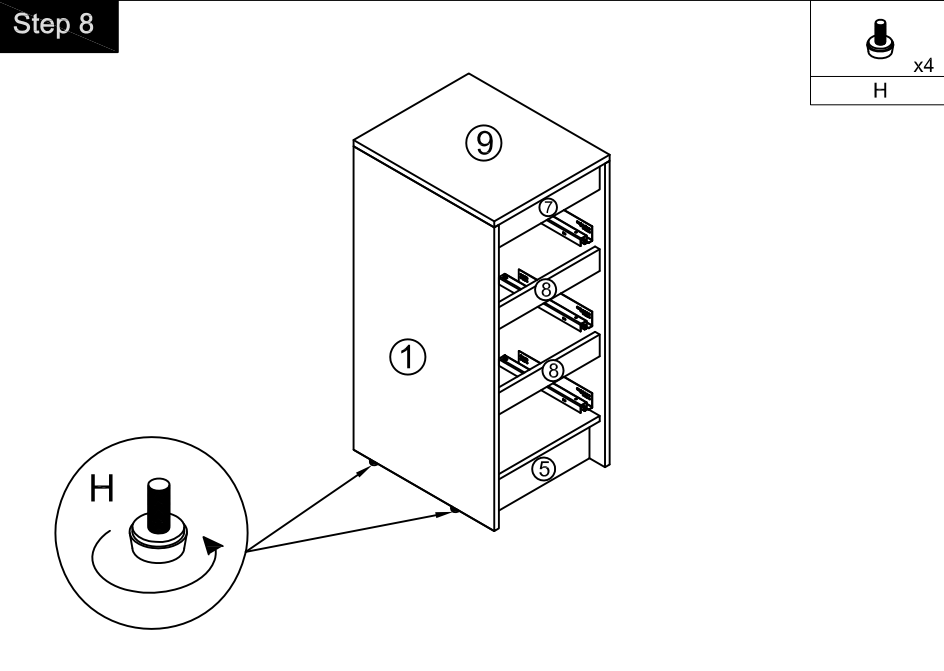

Step 9

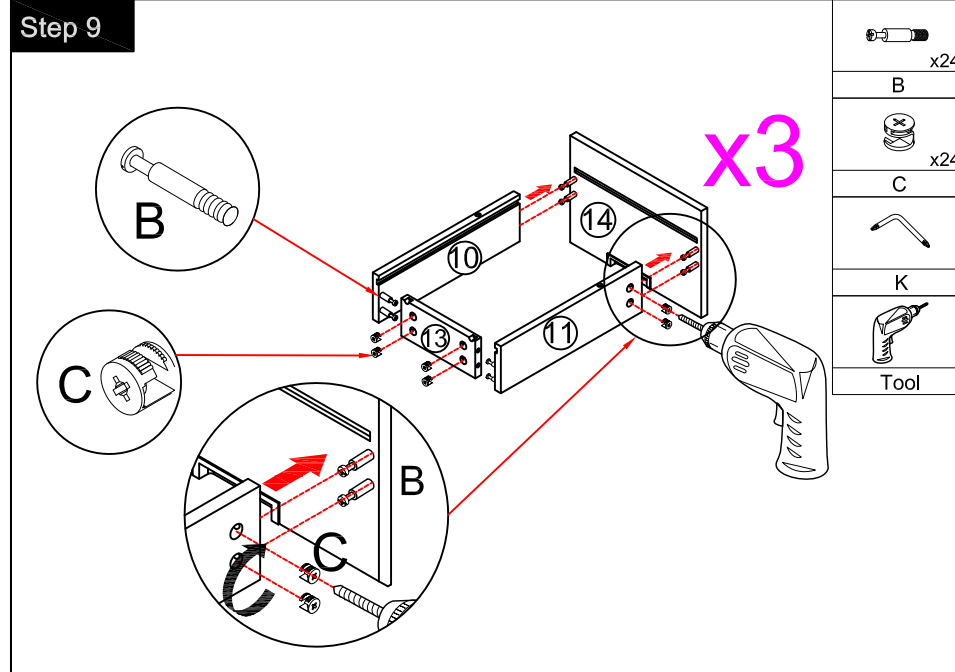

Step 10

