




Vanity Installation Manual



Hammer

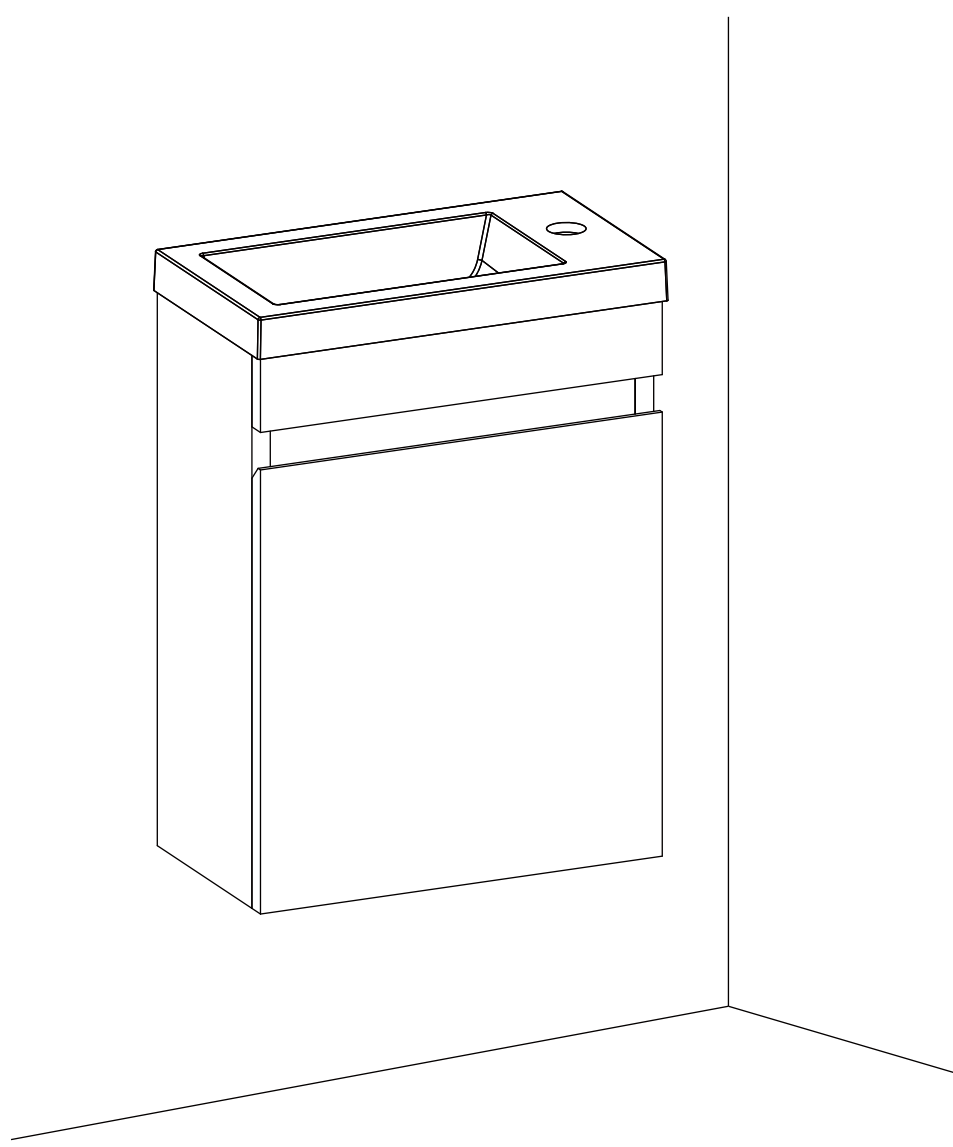


Pencil




Drill




Ruler




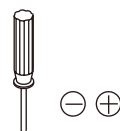



Spirit level




Screwdriver





Silicone

A  X1	B  X1	C  H1X2	D  H2X2	E  H3X2
---	---	---	---	---



1

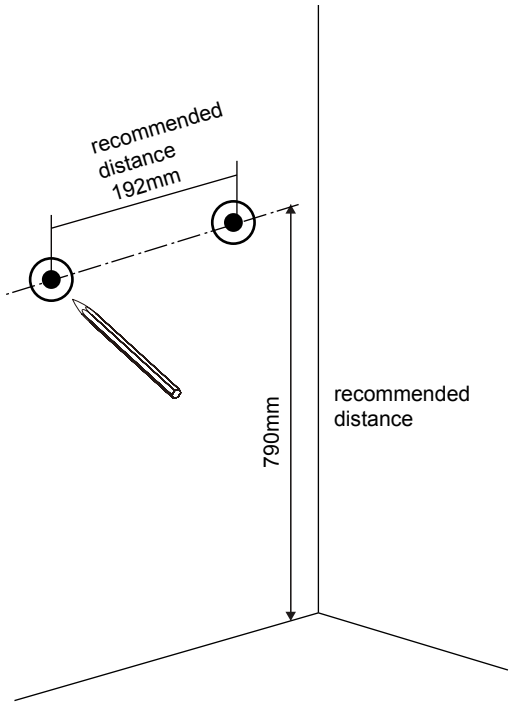

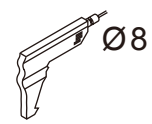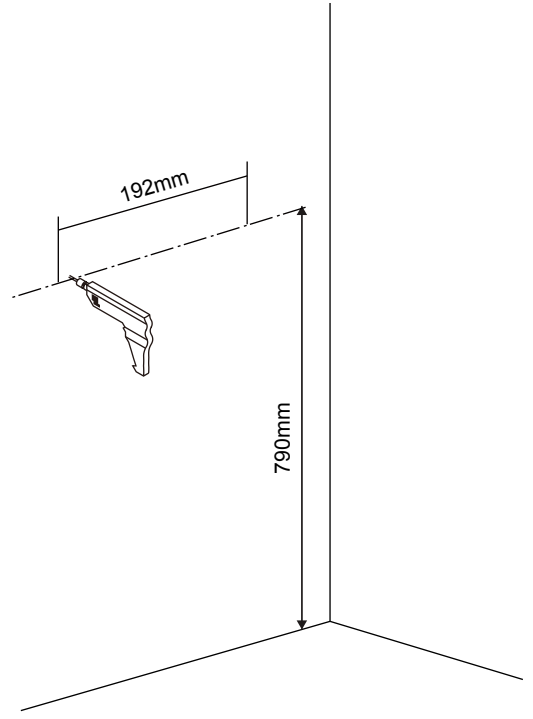


2

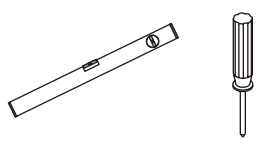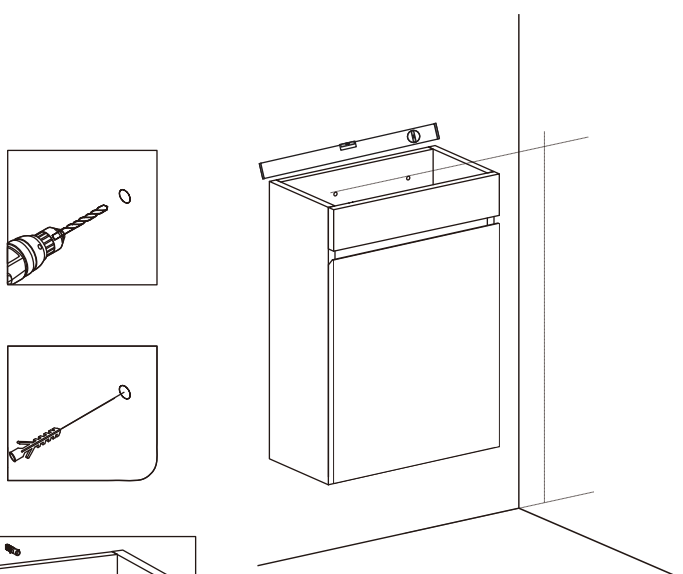

3



- C**

 H1X2
- D**

 H2X2
- E**

 H3X2

4

