
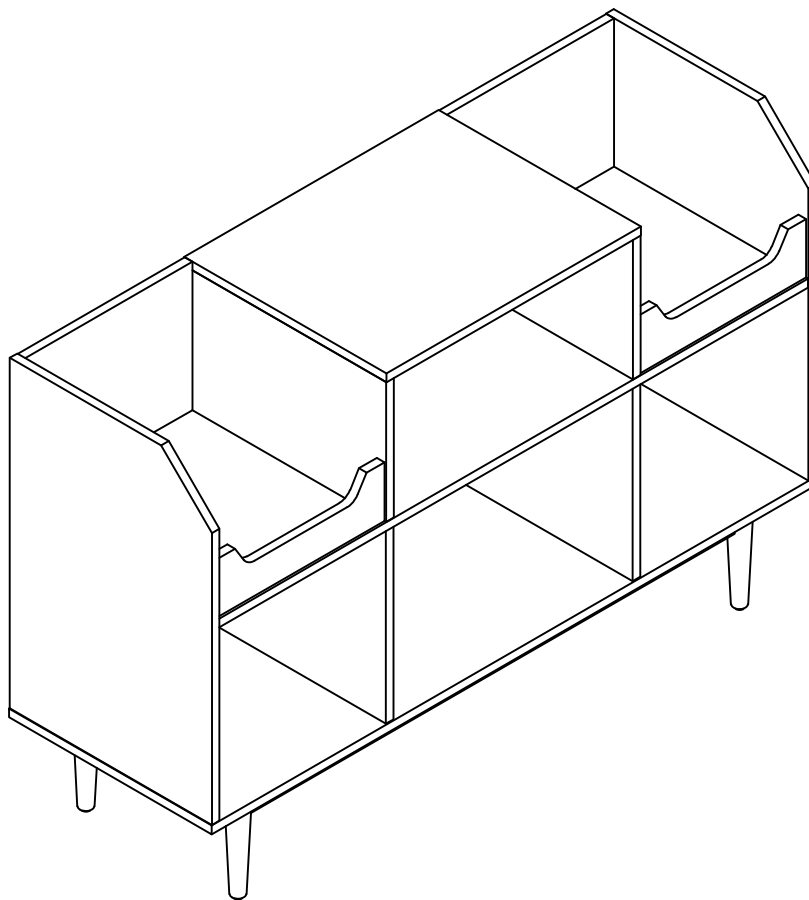
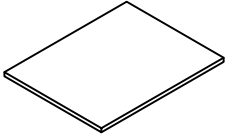
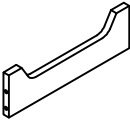

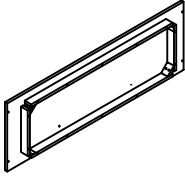
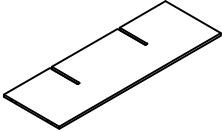


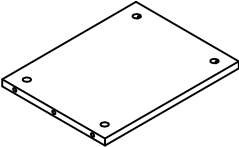


CROSLEY
FURNITURE





Large Record Player Stand
with Vinyl Storage
CF1225

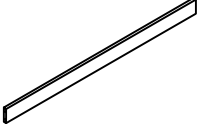

PARTS LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Front Panel 2 PCS	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
Shelf Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC	Back Panel 2 PCS	Back Rail 1 PC
<div>K</div> 				
Leg 4 PCS				

HARDWARE LIST
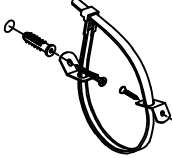
#1  1/4"*45mm	#2  1/4"*10mm	#3  1/4"*13mm	#4  7*38mm	#5 
Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Tapping Bolt 10 PCS (Extra 1)	Cam Bolt 24 PCS (Extra 1)
#6 	#7  8*30mm	#8  M4	#9 	#10 
Cam Lock 24 PCS (Extra 1)	Wood Dowel 18 PCS (Extra 1)	Allen Wrench 1 PC	Cam Sticker 24 PCS (Extra 1)	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach legs (part K) to bottom panel (part E) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #8).

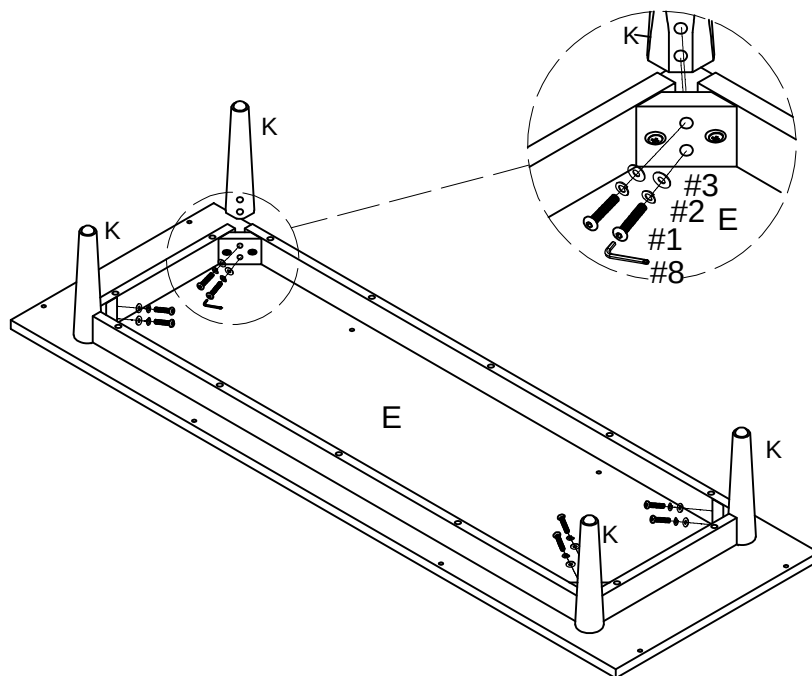

#1		x 8
#2		x 8
#3		x 8
#8		x 1


Step 2. Insert cam bolts (part #5) into panels (parts A, C, D, G & H) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

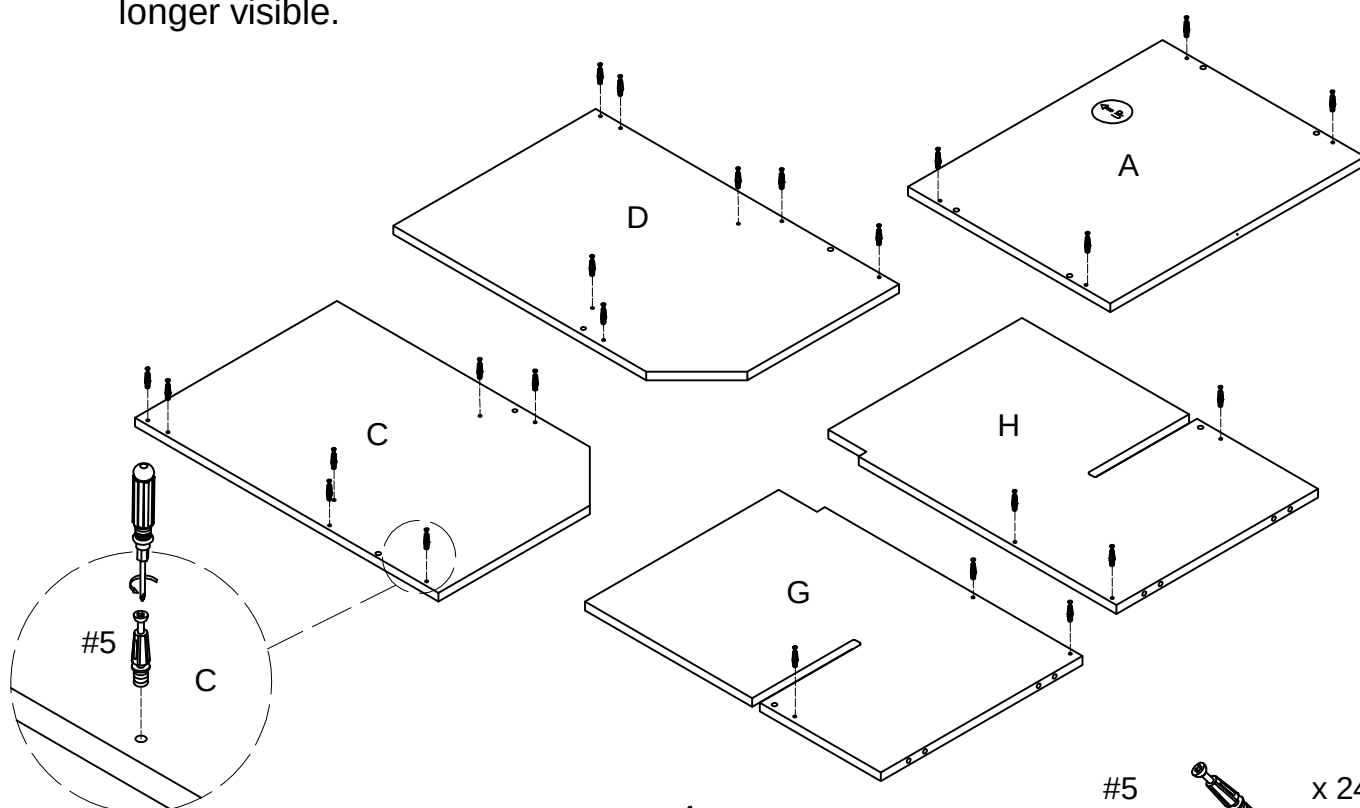



#5		x 24
----	---	------

Step 3. Insert partition panels (parts G & H) to shelf panel (part F).

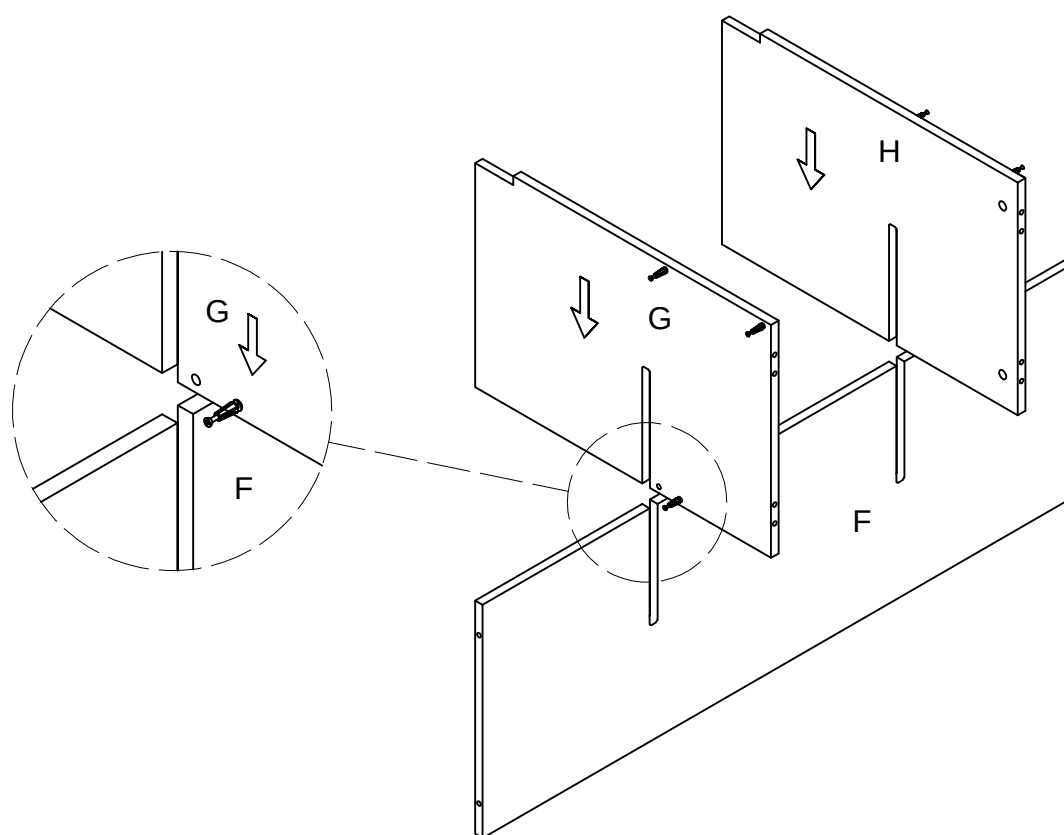


Step 4. Attach top panel (part A) to assembled unit (parts G & H) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

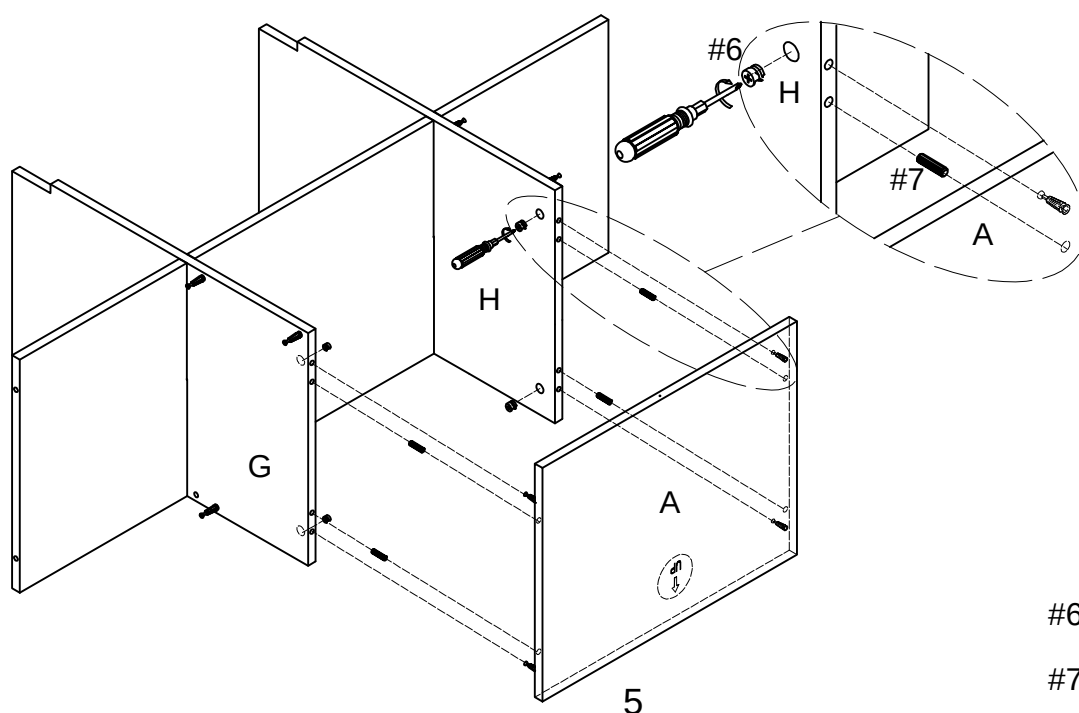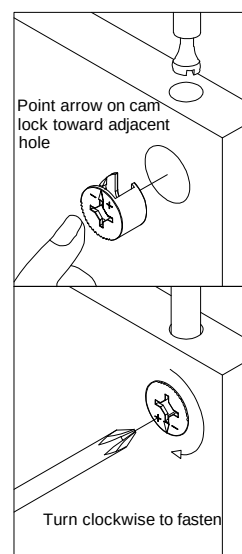


#6		x 4
#7		x 4

Step 5. Attach front panels (part B) to assembled unit (parts G & H) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

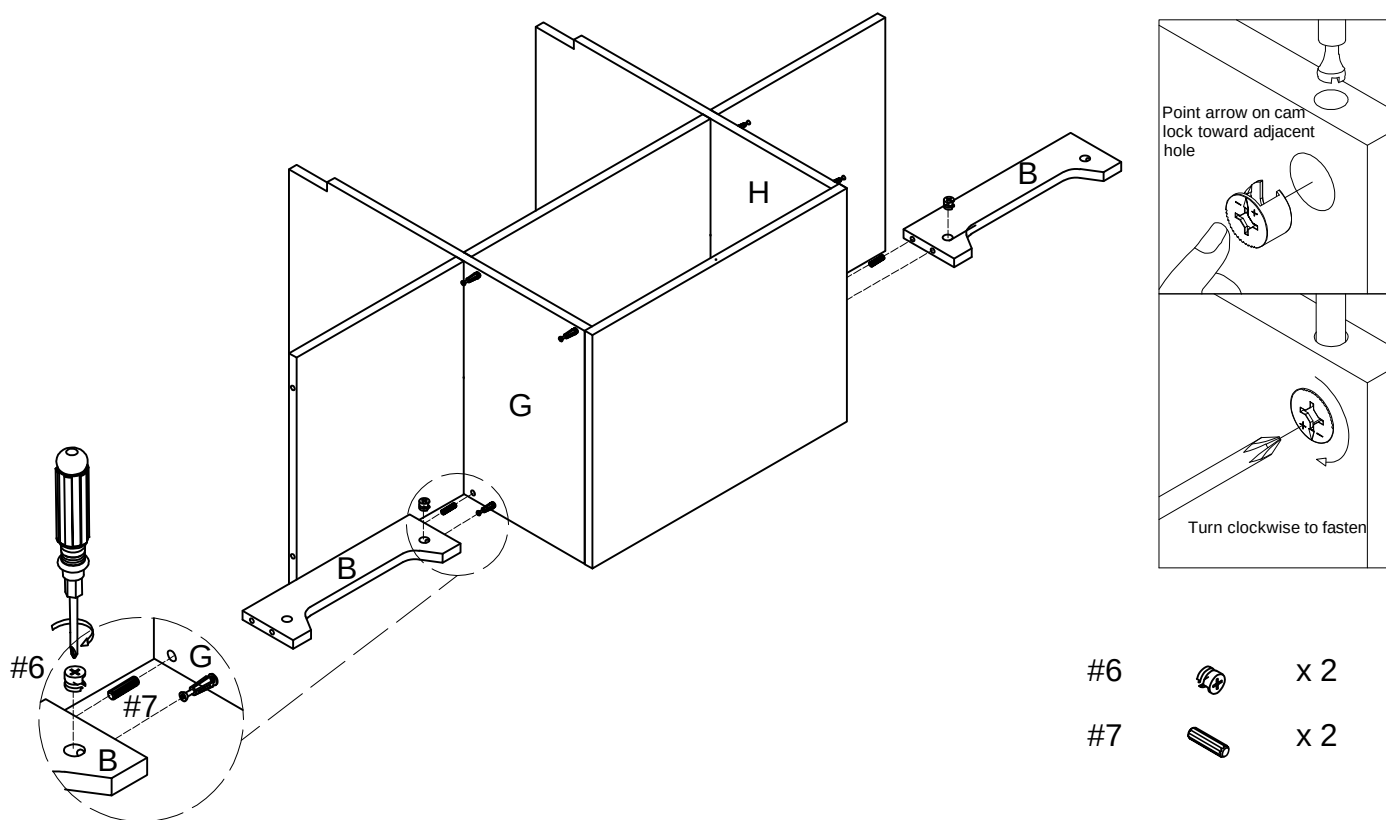


Step 6. Attach back panels (part I) to assembled unit (parts G & H) using cam locks (part #6) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

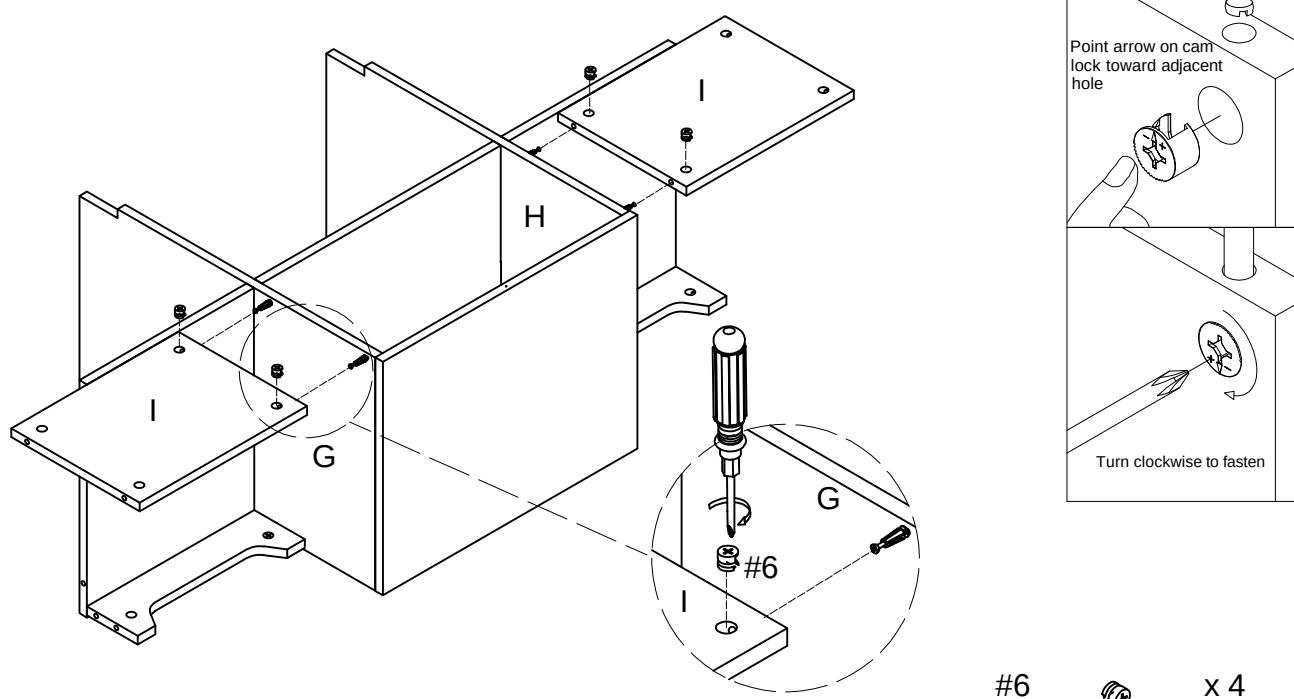


Step 7. Attach right panel (part D) to assembled unit (parts B, F & I) using cam locks (part #6), wood dowel (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

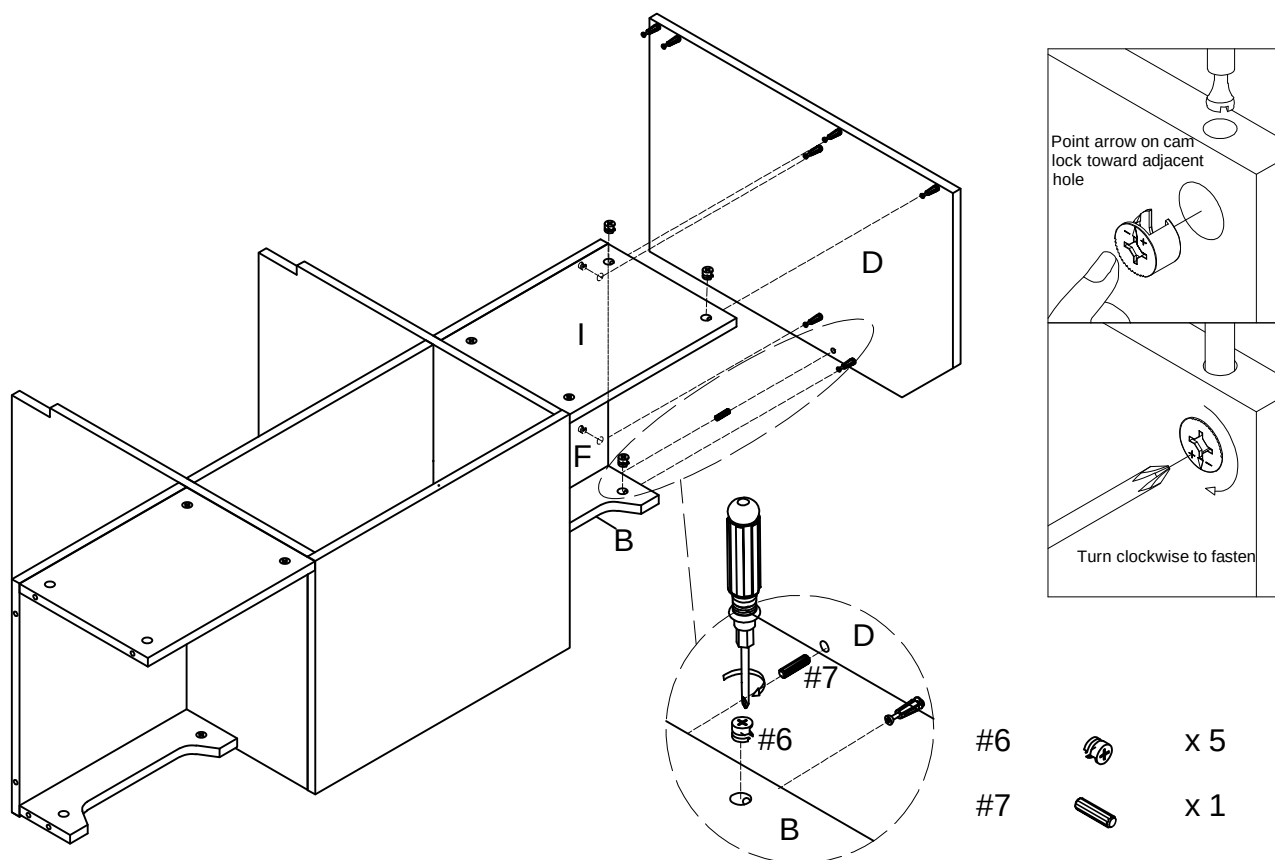


Step 8. Attach back rail (part J) to right panel (part D) using cam locks (part #6) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

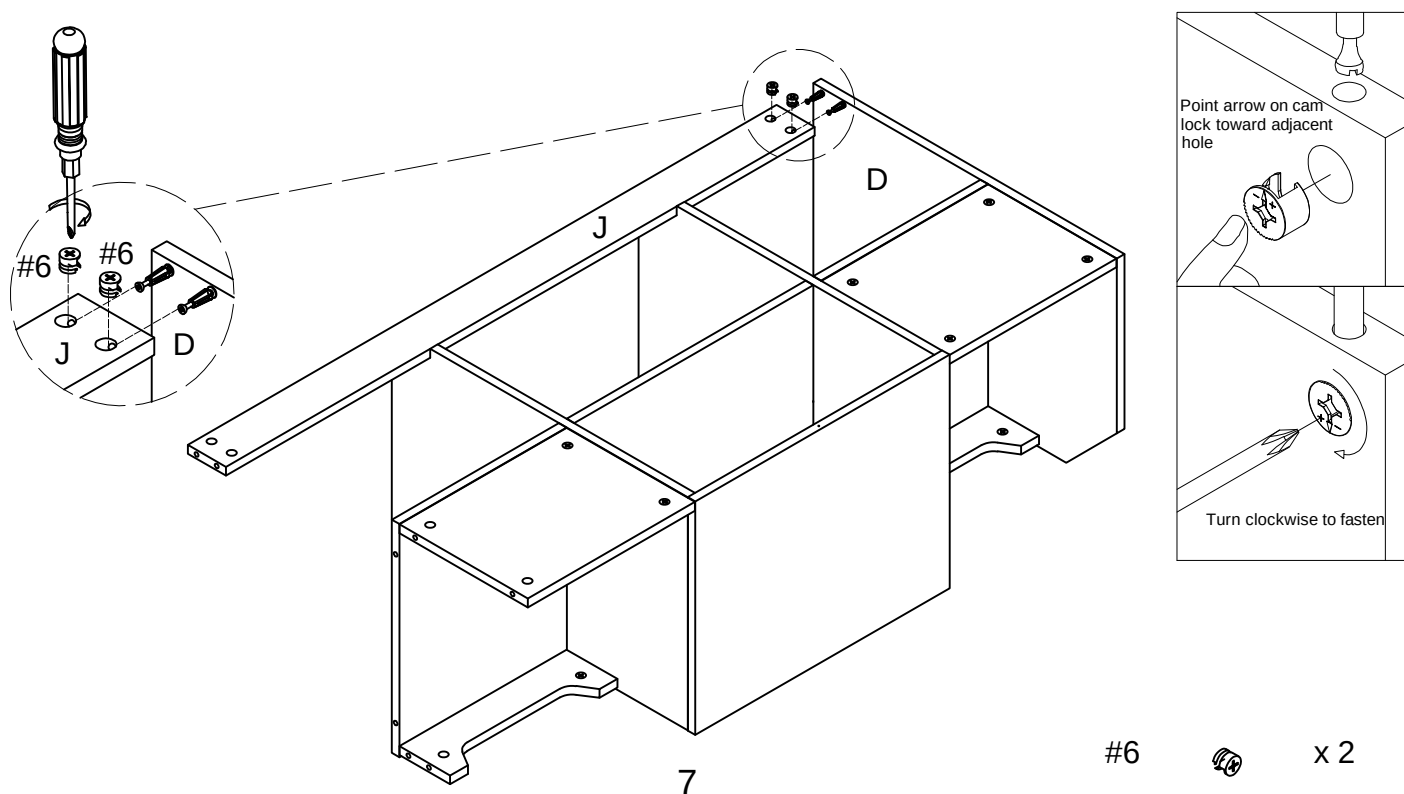


Step 9. Attach left panel (part C) to assembled unit (parts B, F, I & J) using cam locks (part #6), wood dowel (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

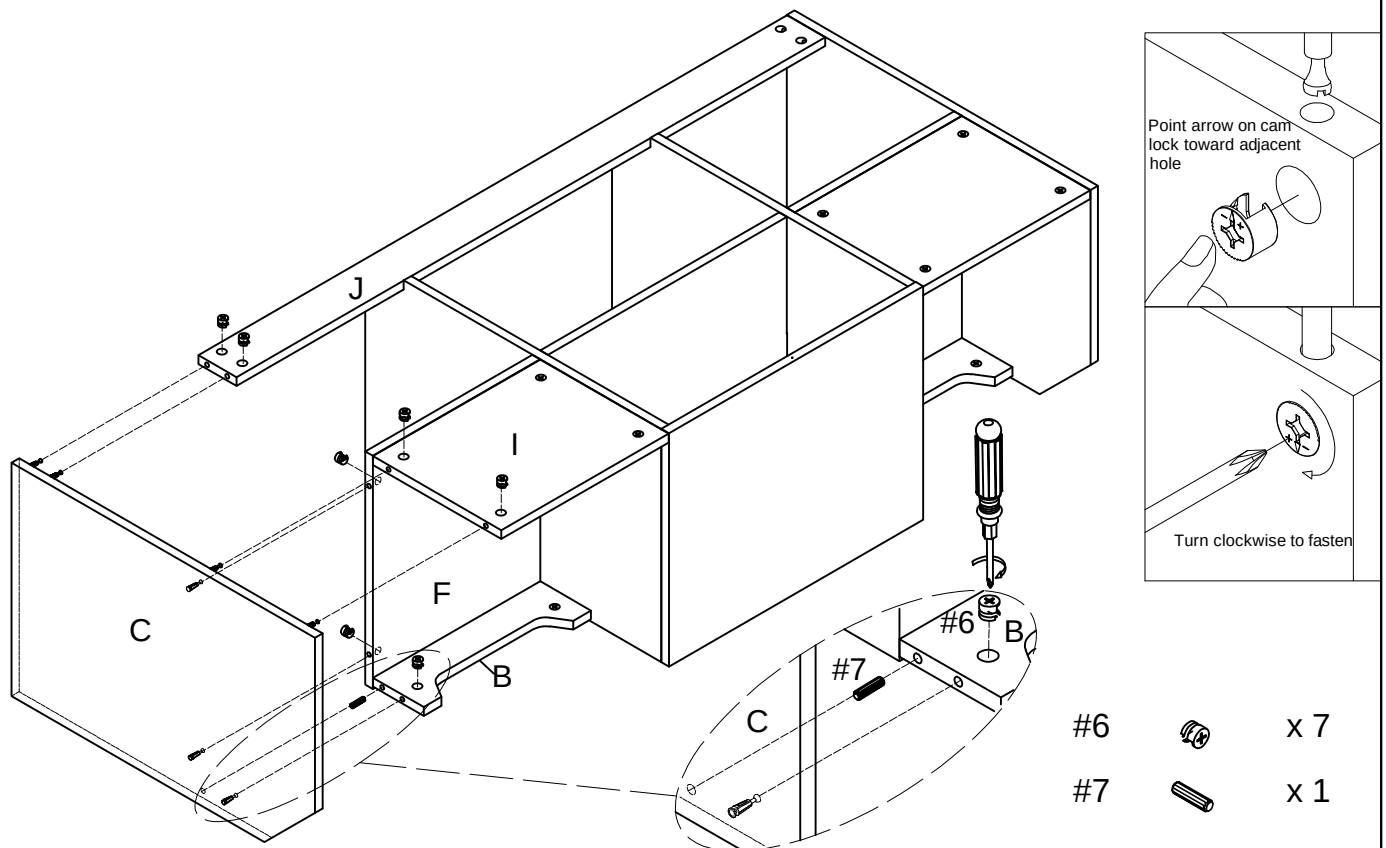



Step 10. Attach bottom panel (part E) to assembled unit (parts C, D, G, H & J) using tapping bolts (part #4), wood dowels (part #7) and allen wrench (part #8).

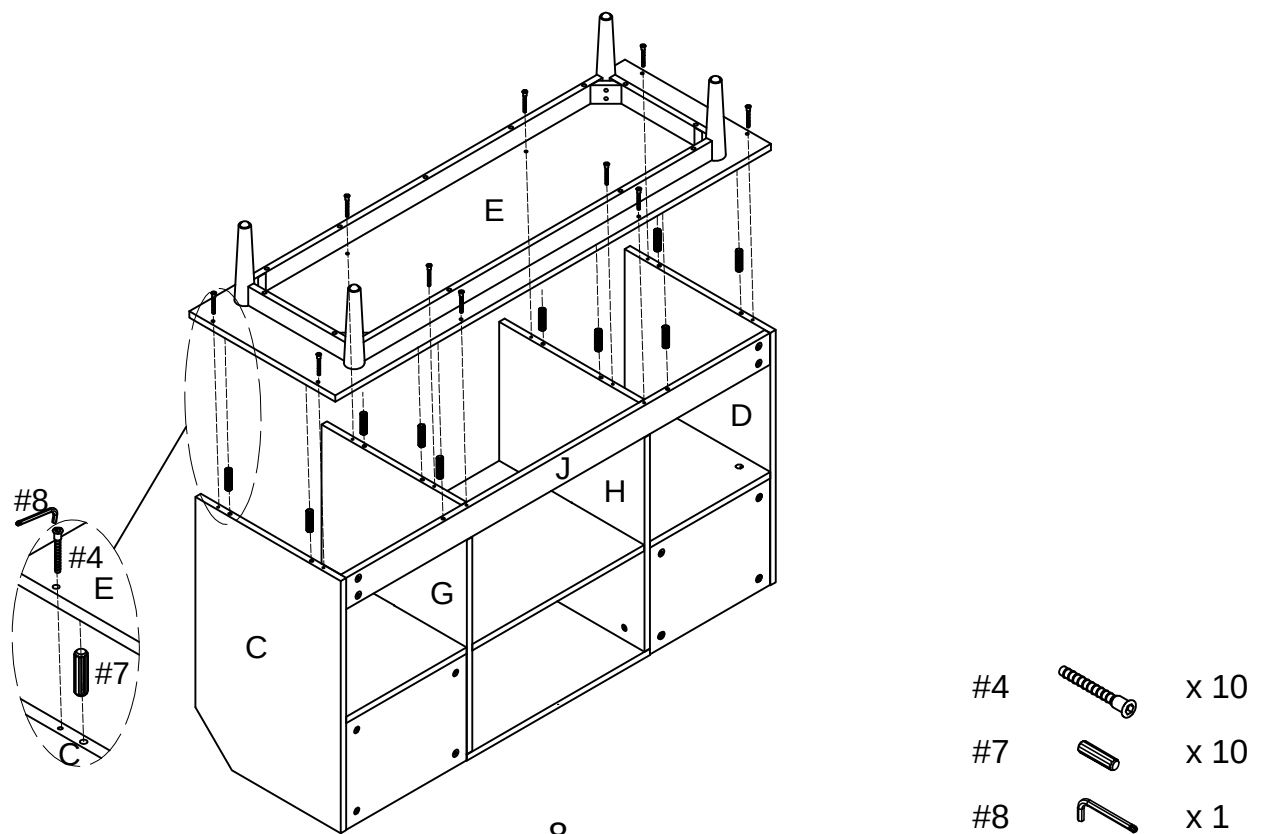



Step 11. Carefully turn unit upright. Using cam stickers (part #9) cover all cam locks (part #6).


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #10) must be installed to prevent tipping damage and/or injury.

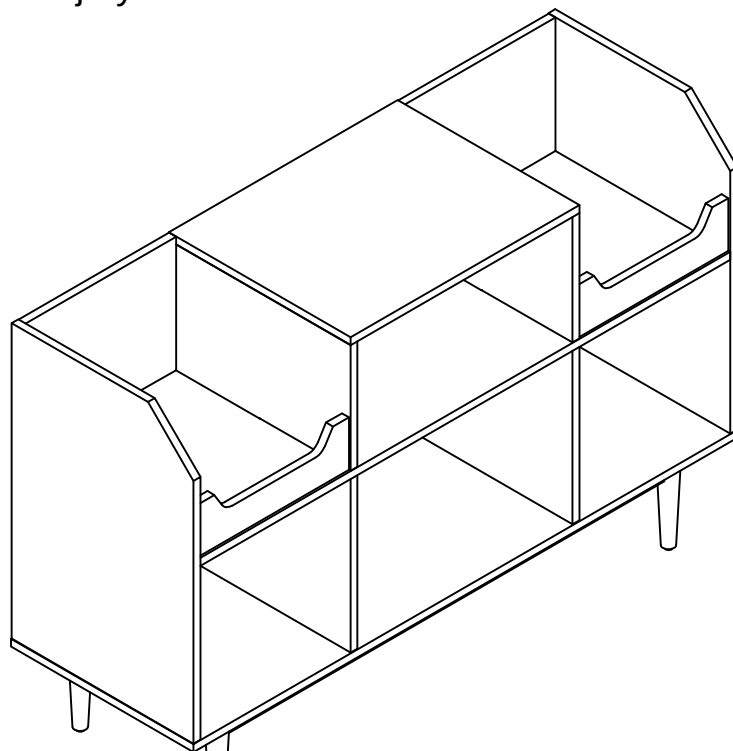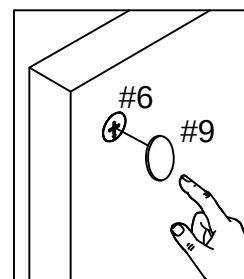

#9  x 24

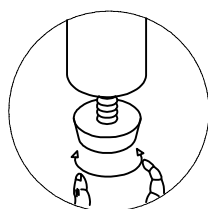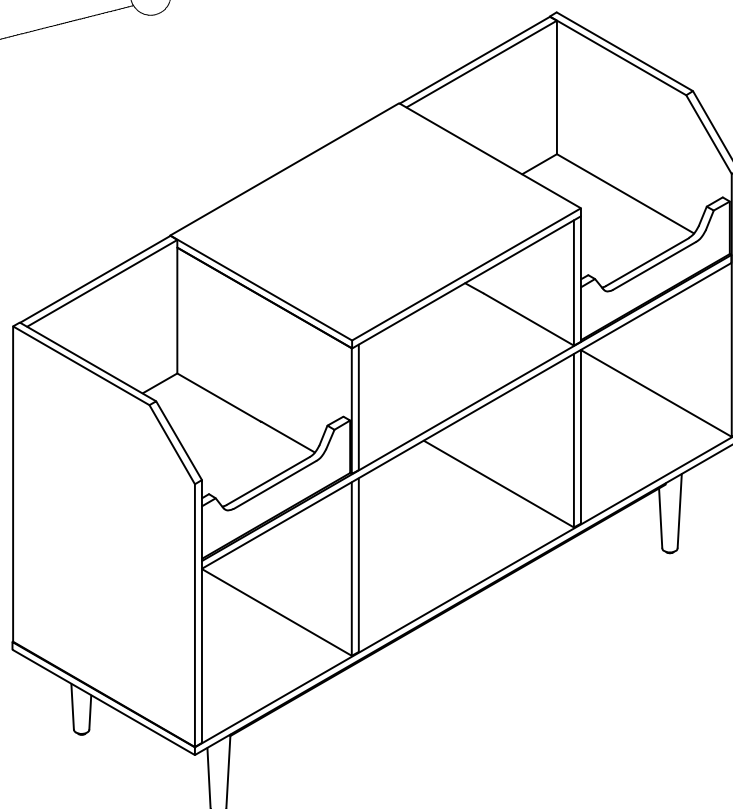

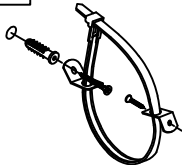
#10	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC


SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

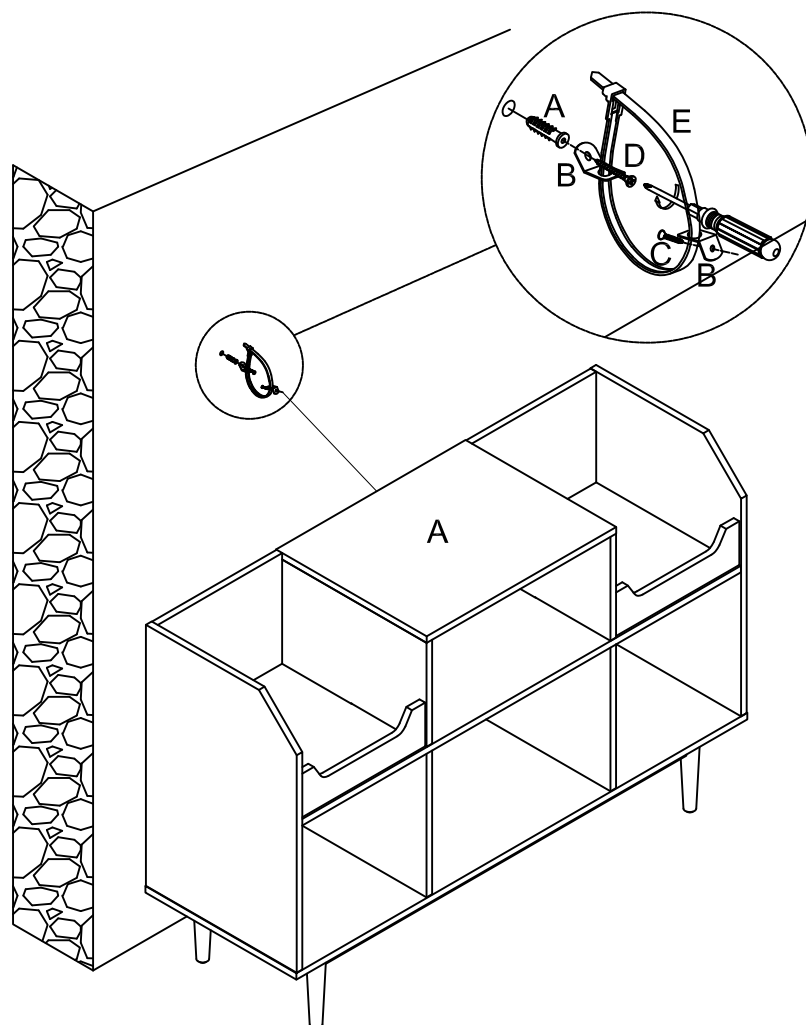

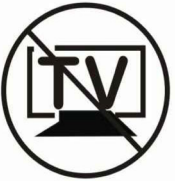⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<p>This is a permanent label. Do not remove!</p>