

ASSEMBLY INSTRUCTIONS



Before assembling your bunk bed, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726



PO :

CODE	ITEM
BK-SCPL-COL	B-5520X

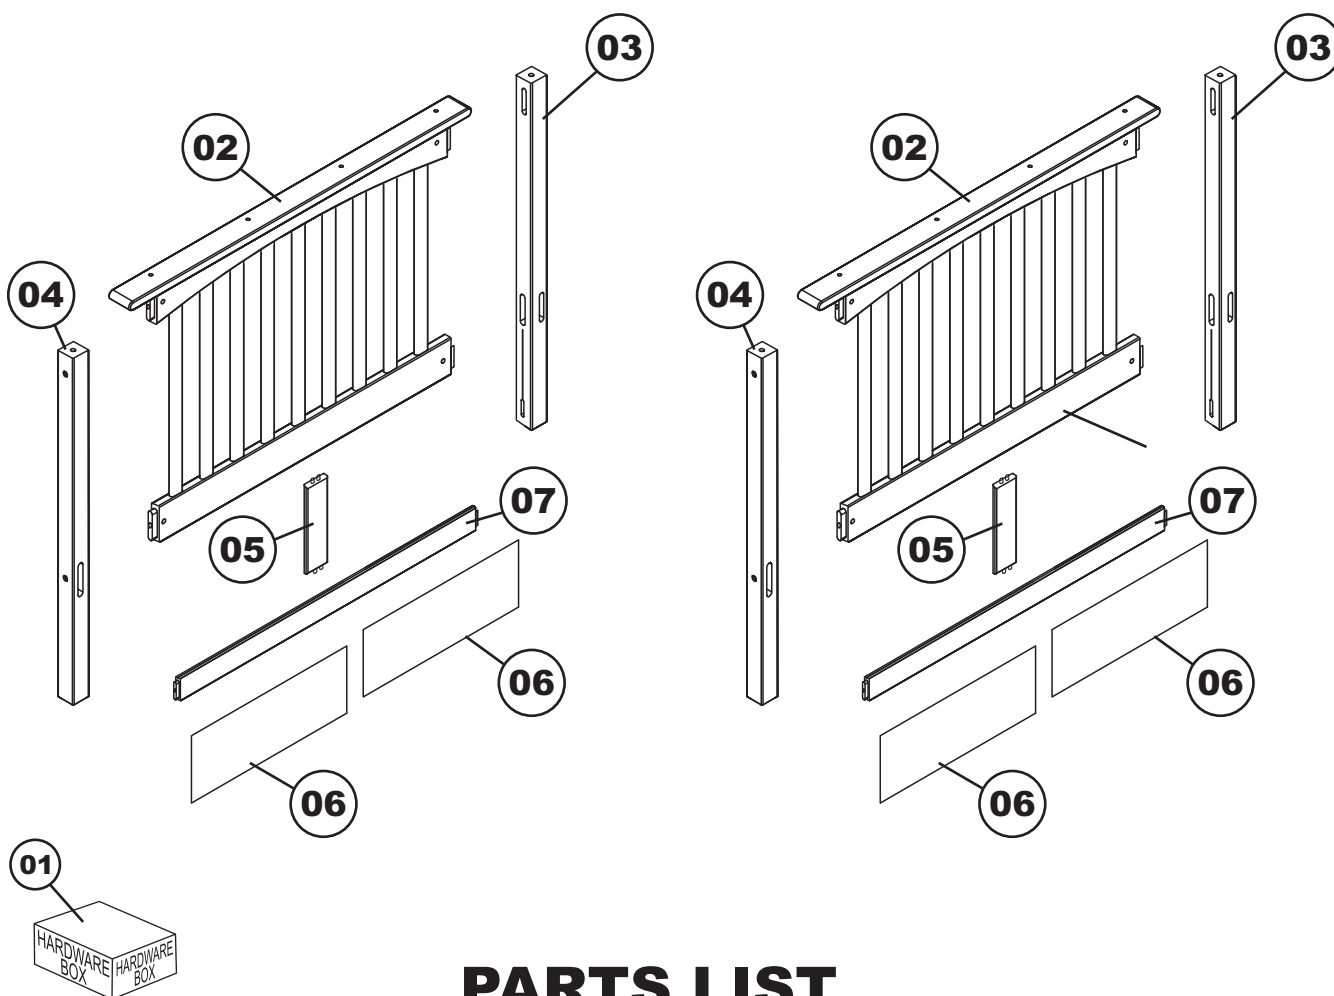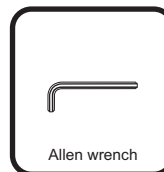


PARTS LIST

- 01** HARDWARE 1 PC
 02 LOWER PANEL 2 PCS
 03 RIGHT POST 2 PCS
 04 LEFT POST 2 PCS
 05 CENTER RAIL 2 PCS
 06 MODESTY PANEL 4 PCS
 07 BOTTOM RAIL 2 PCS

HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

- A**  JCB M6 X 3 1/2" (90mm) - 12 pcs
 Spare - 1 pcs

- C**  10 X 40mm
 Wooden dowel - 12 pcs
 Spare - 1 pcs

- B**  Barrel nut - 12 pcs
 Spare - 1 pcs

- D**  Allen wrench - 1 pc
 Spare - 1 pc

Step 1

Attach right post (03) to lower panel (02) using JCB (A) and barrel nut (B). Do not fully tighten JCB (A) with allen wrench (D) until step 3 is complete.

A



JCB M6 X 3 1/2"



Adult assembly

B




Barrel nut

D



Allen wrench

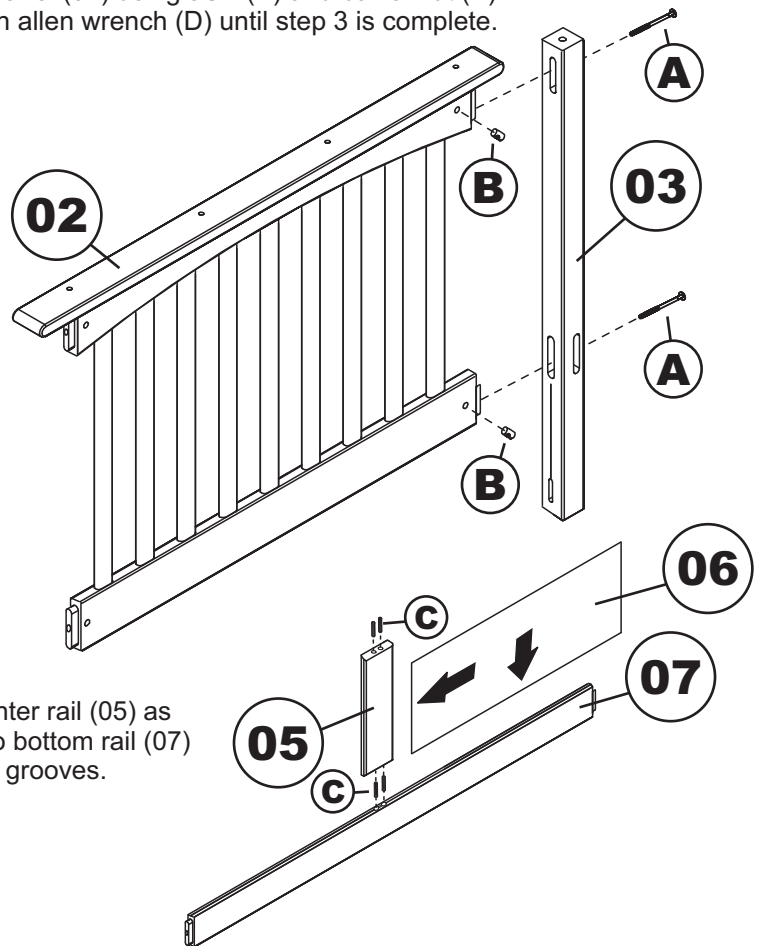

Step 2

Insert wooden dowels (C) into center rail (05) as shown. Connect center rail (06) to bottom rail (07) and slide modesty panel (06) into grooves.

C




Wooden dowel

Step 3

Insert modesty panel (06), center rail (05), and bottom rail (07) into lower panel (02) and right post (03). Make sure modesty panel does not jump out of the grooves. Use JCB (A) and barrel nut (B) to attach bottom rail (07) to right post (03), tightening with allen wrench (D). Now tighten both JCB (A) that were used in step 1.



Adult assembly

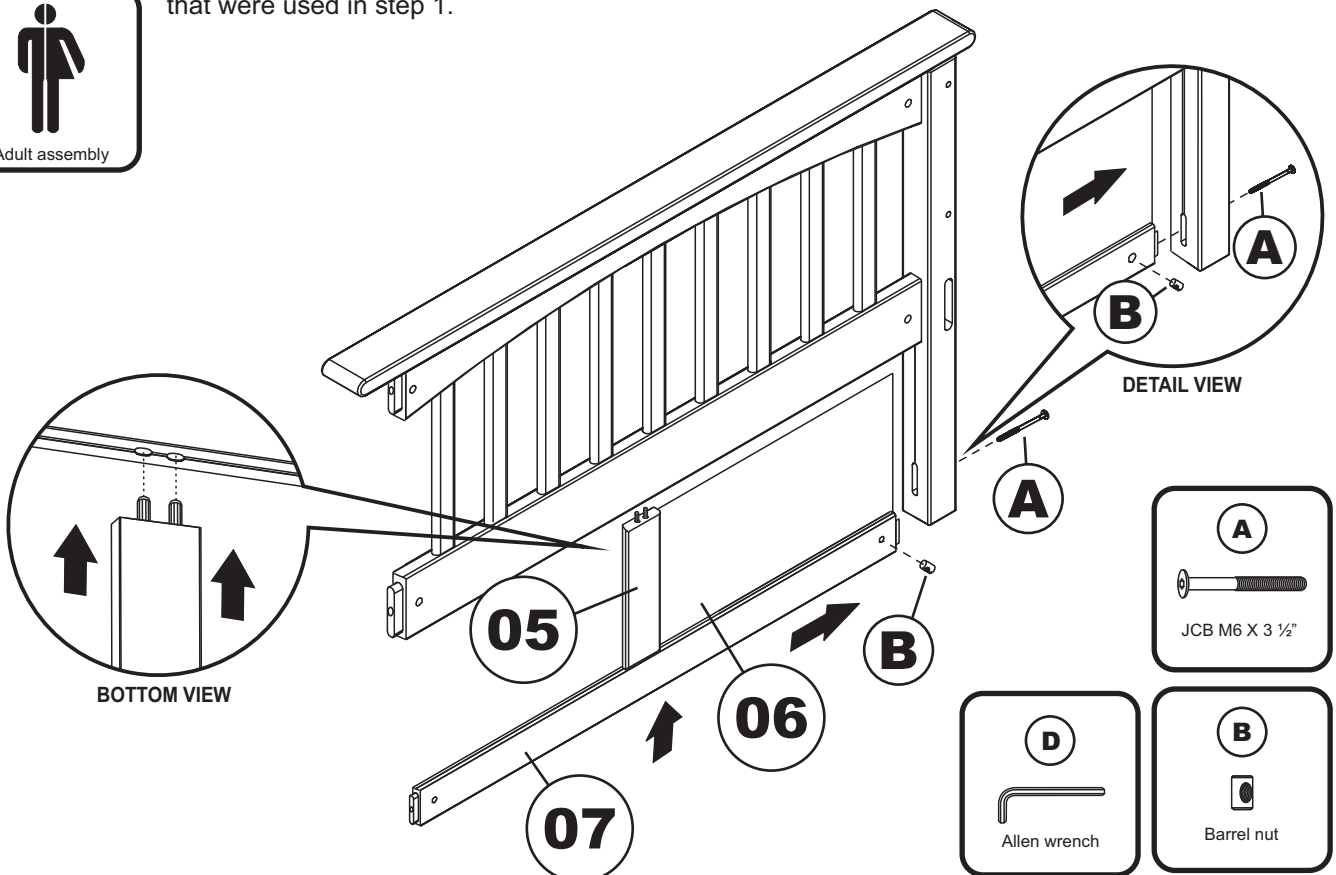

A



JCB M6 X 3 1/2"

D



Allen wrench

B



Barrel nut

Step 4

Insert modesty panel (06) into grooves between lower panel (02) and bottom rail (07) making sure it doesn't jump out of the grooves. Attach left post (04) to lower panel and bottom rail using JCB (A) and barrel nut (B). Tighten with allen wrench (D).



Adult assembly

A



JCB M6 X 3 1/2"

B




Barrel nut


D



Allen wrench

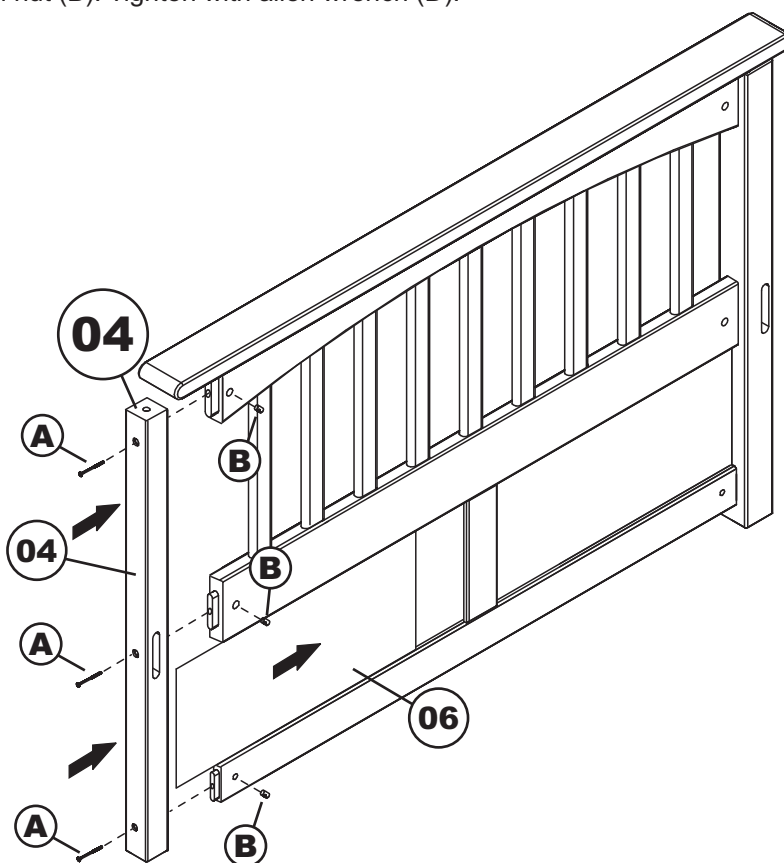

Repeat steps 1-4 for the other lower panel.

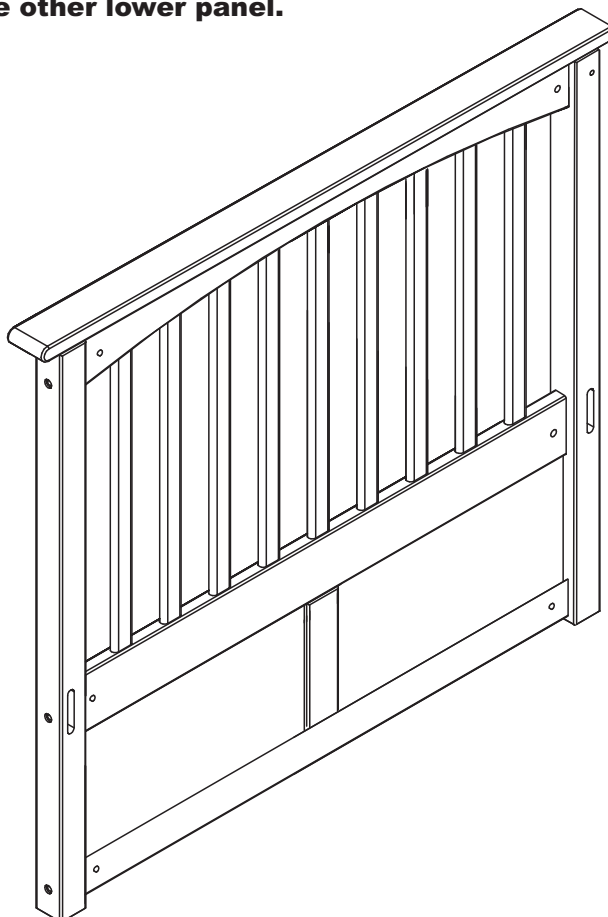

Assembly of Lower Panels Complete.

Continue to assembly instructions for bunk bed.