



INSTALLATION

Product Manual

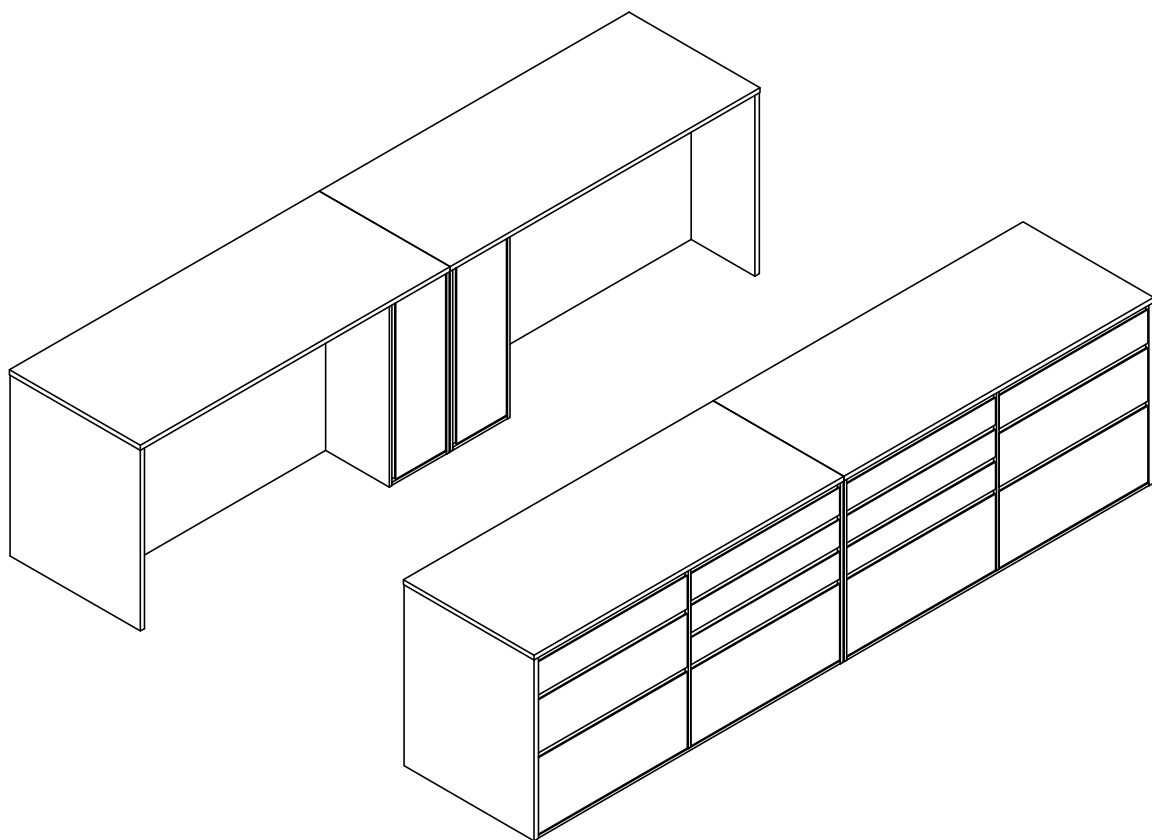


MODEL:CWG-GK026-01

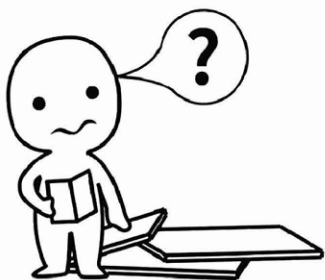


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

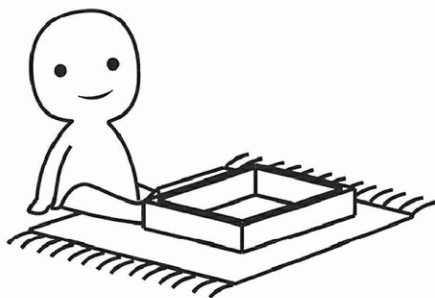




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

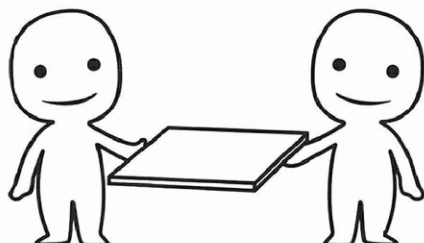

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

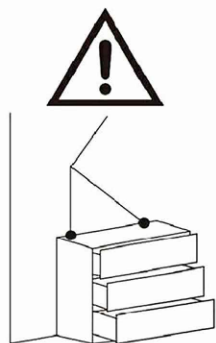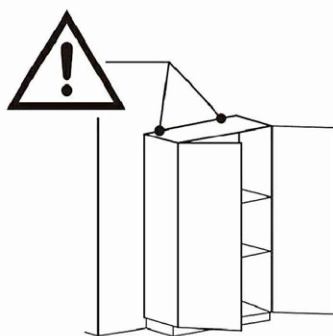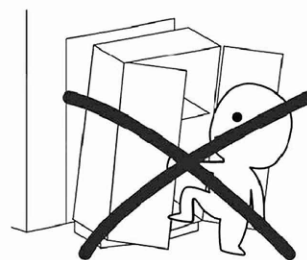

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

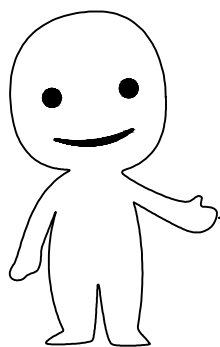


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A×2



B×192



C×196



D×190



M3.5×14

E×56



M3.5×35


F×56



G×38




H×20




350*35*12

I×8

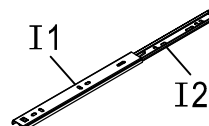


350*45*12

J×2



K×2



L×8




M×140




M3.5×18


Die Rutschen müssen vor dem Zusammenbau getrennt werden.
Nach dem Trennen beiseite legen, bis sie für die Montage benötigt werden.

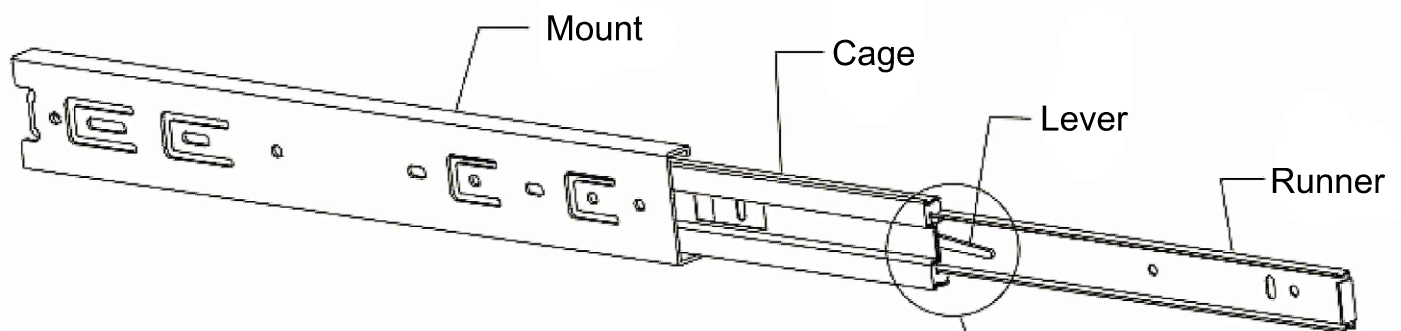


SCHRITT 1: Rutsche ausfahren


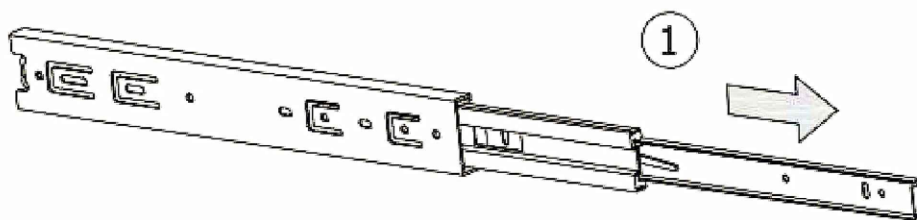



SCHRITT 2: Hebel nach oben drücken

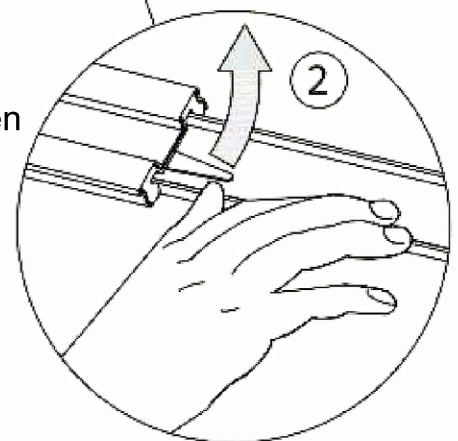


SCHRITT 3: Läufer entfernen

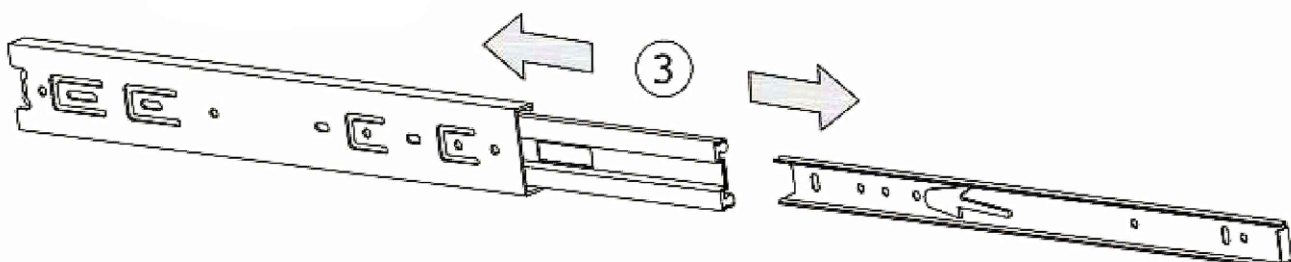

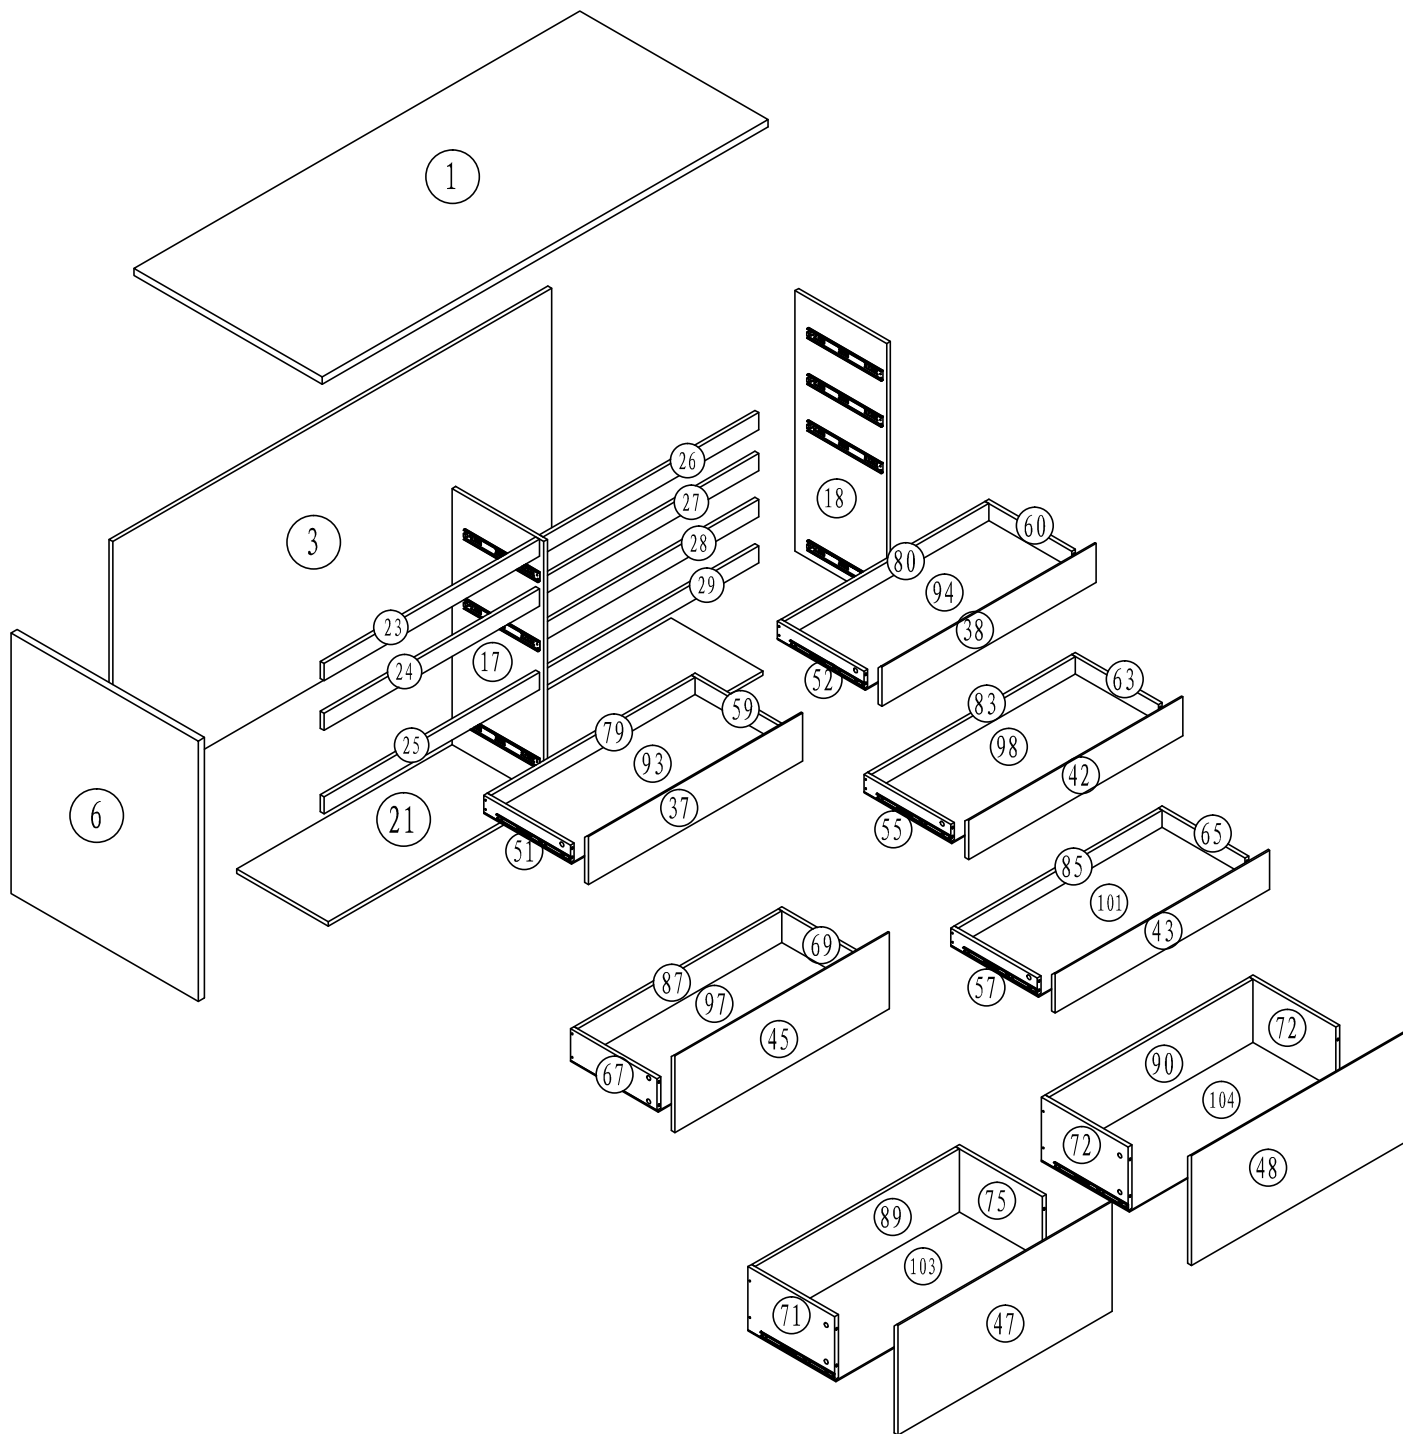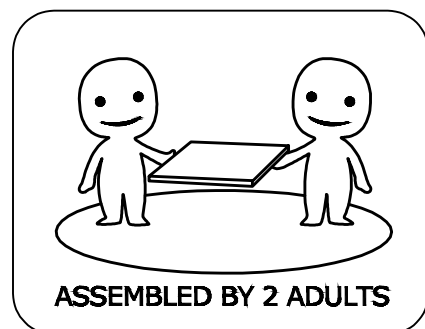

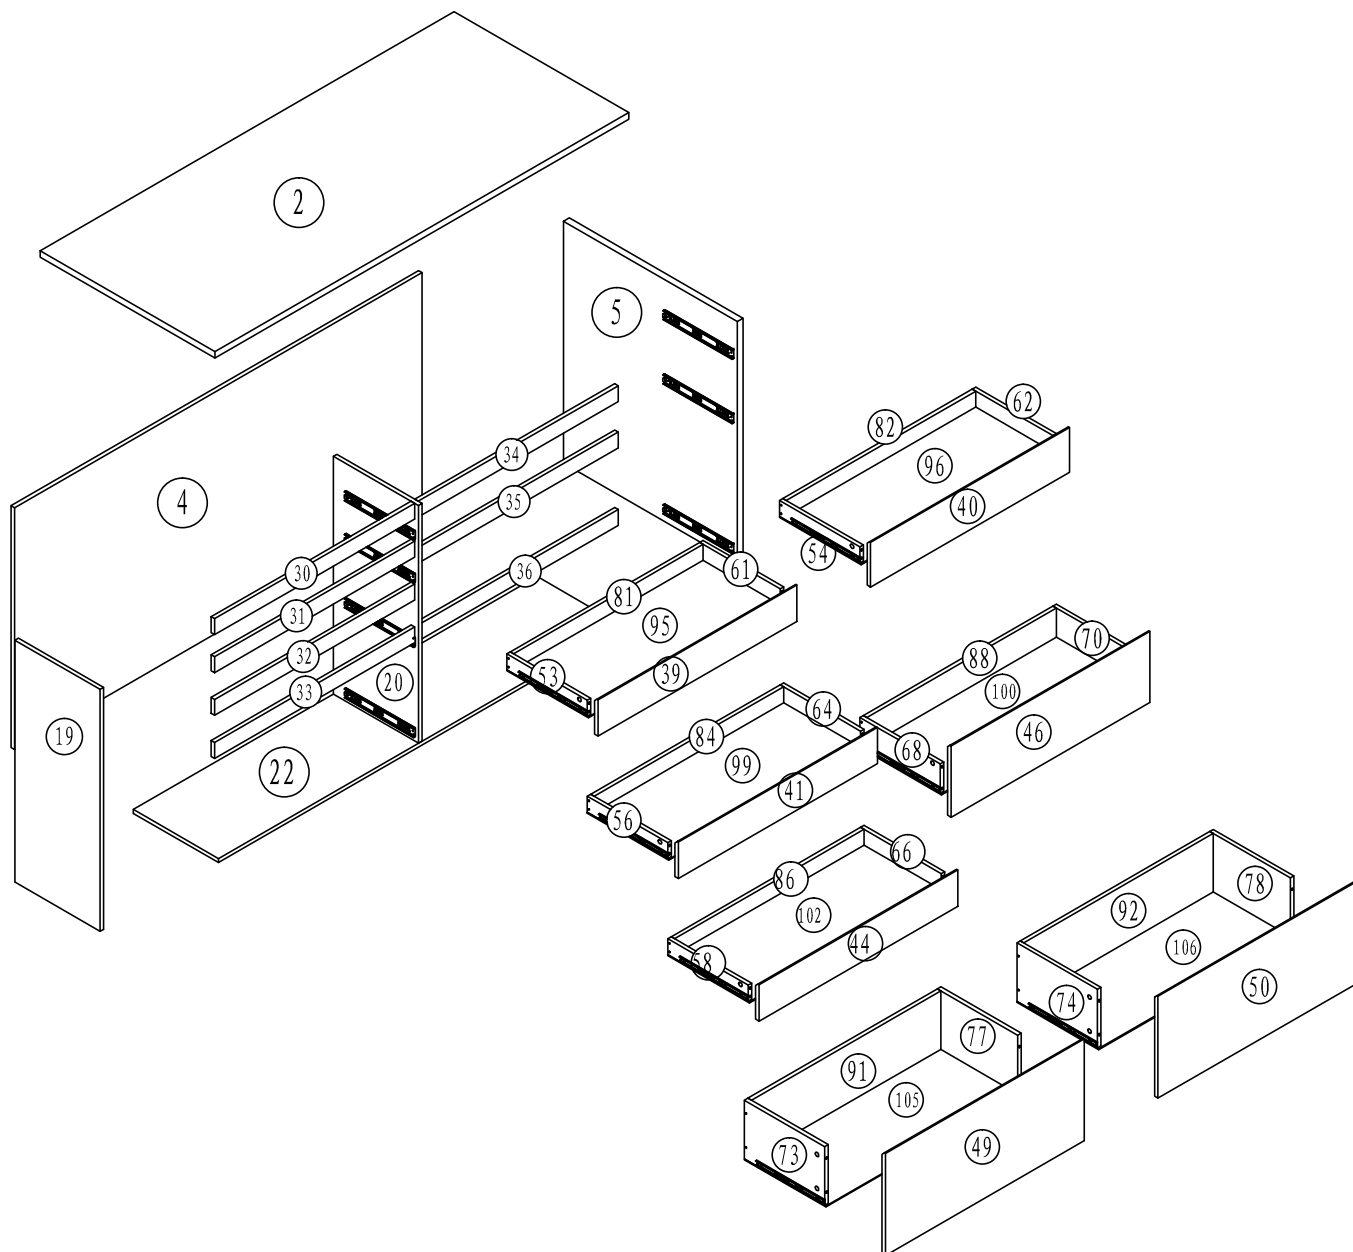

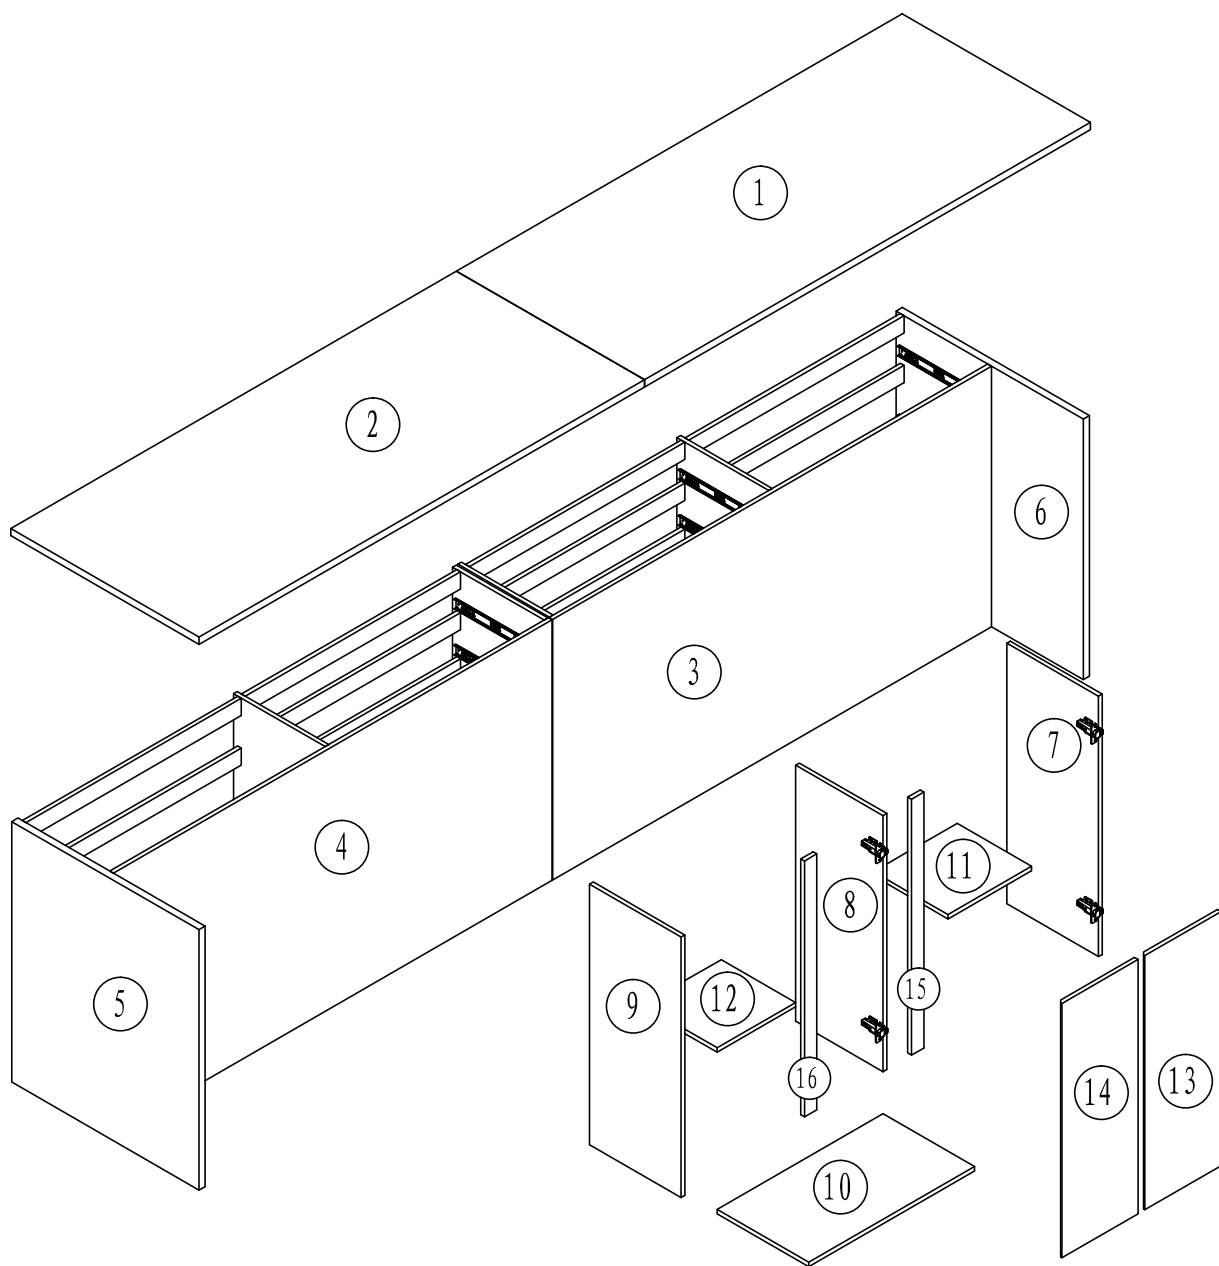


ATTENTION: This illustration shows the assembly of one drawer.
Assemble the remaining drawers in the same way.

01


E×56



4×14=56



Attach panels (51) and (59) to panel (79) with four screws (E).

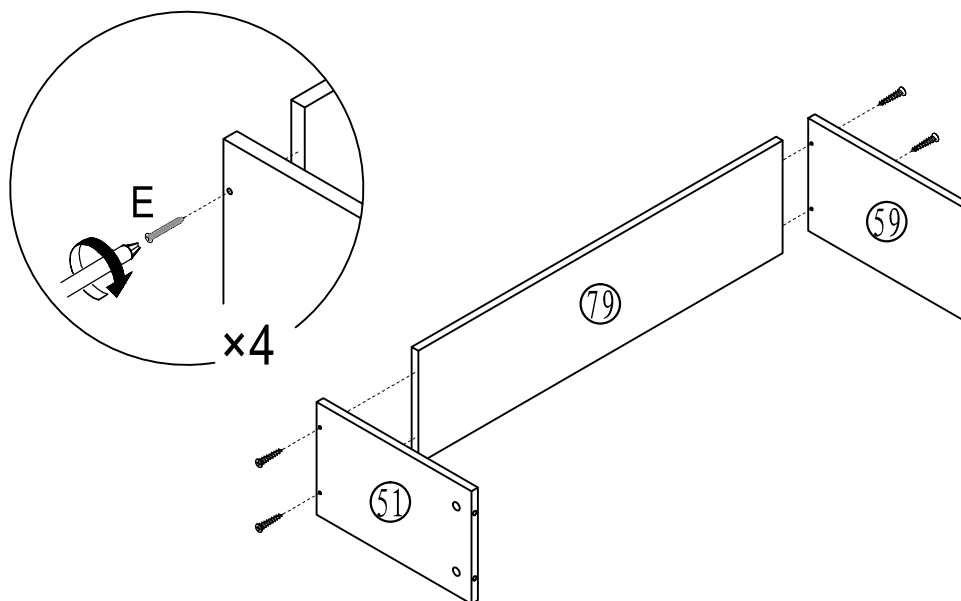


02



B×56



4×14=56



Install four cam bolts (B) in panel (37).

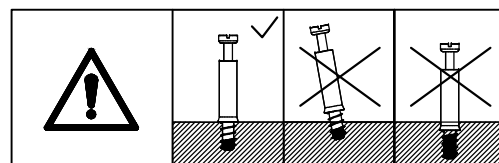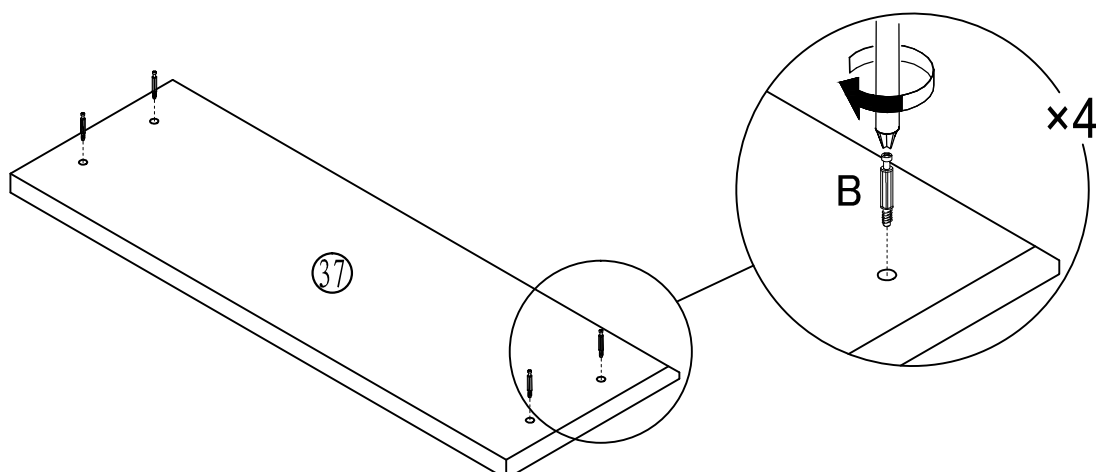


03




C×56



4×14=56

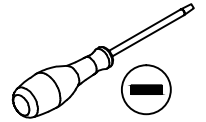

Align the holes in panel (37) with those in panels (51) and (59).
Insert four cam locks (C) and turn them clockwise to
secure the joints.

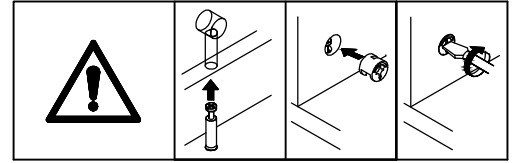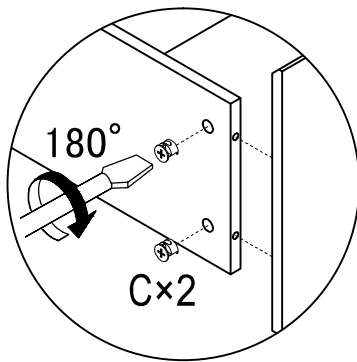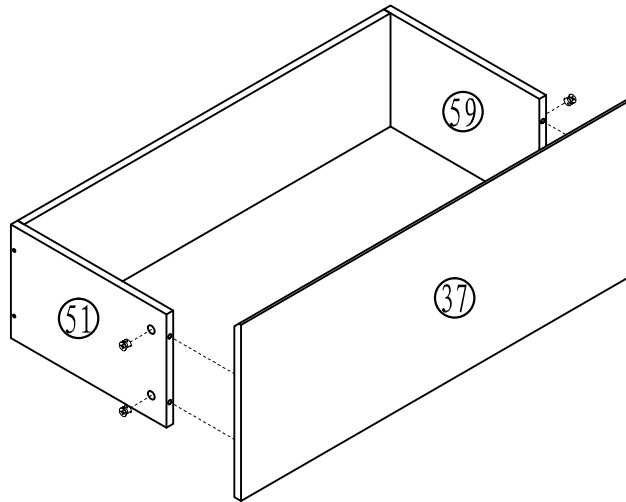


04



M×140



10×14=140



Secure panel (93) to panels (51), (59), and (79) with eight screws (M).

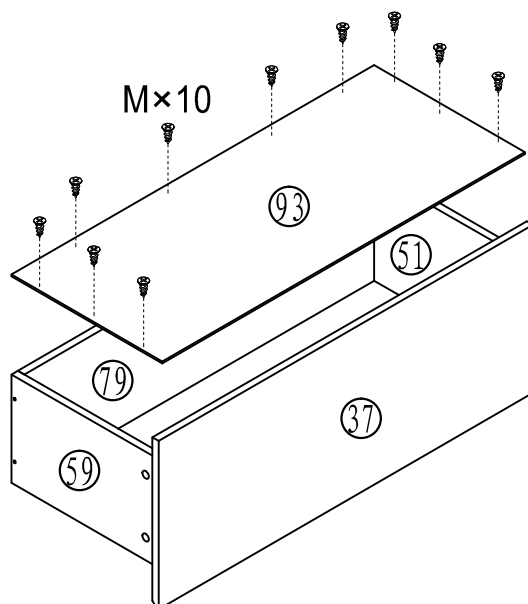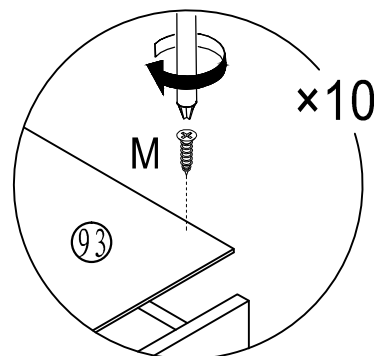

05

D×56




F×56




D: 4×14=56

F: 4×14=56



Install four brackets (F) on panel 93 with four screws (D).

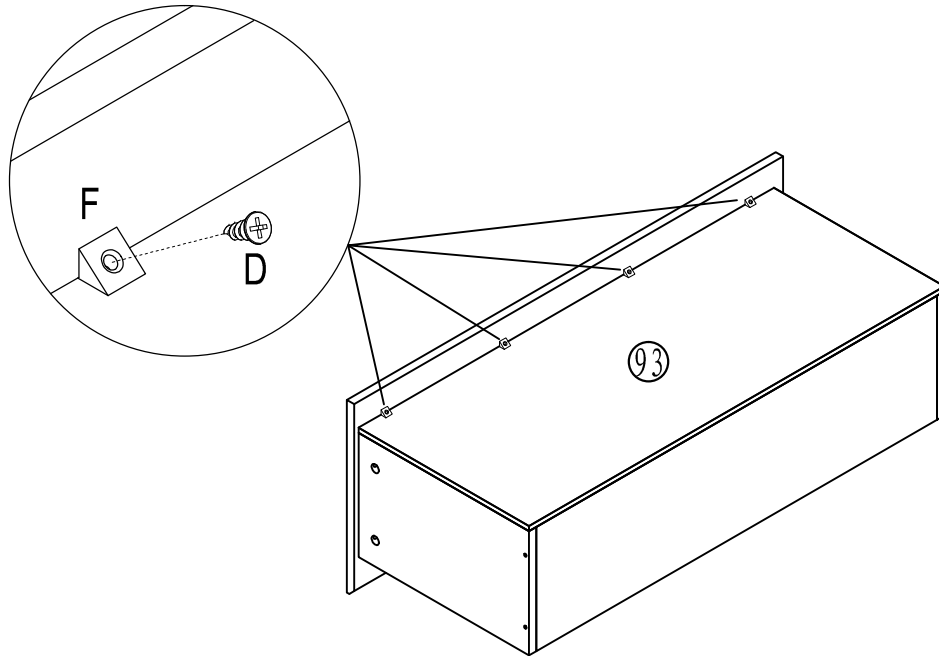

06

D×56



I2×8




H2×20




D: 4×14=56

I2: 2×4=8

H2: 2×10=20



Attach two (I2) drawer slides to panels 51 and 59 with four screws (D), as shown. Install the slides beneath the drawer.

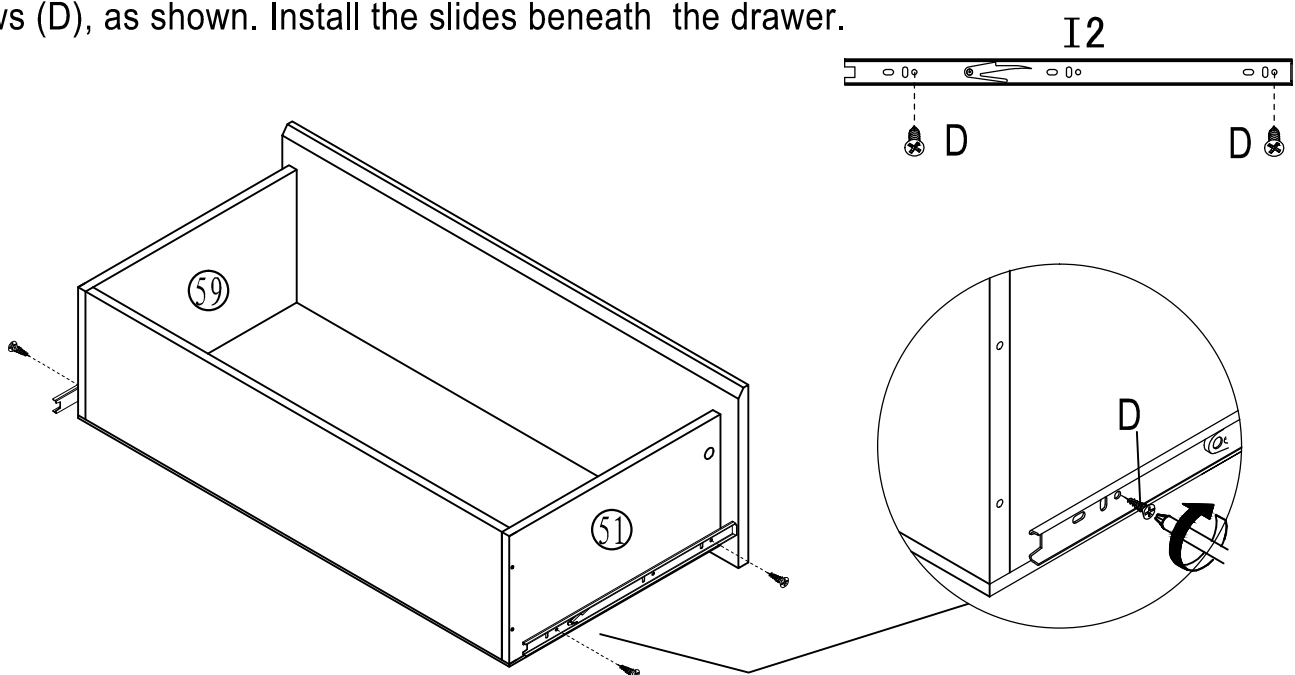

Slide rails are installed under the drawer

07

B×6




D×6







G×4



H1×3



Attach three (H1) drawer slides to panel ⑰ with six screws (D). Insert four dowels (G) halfway into panel ⑰, then install six cam bolts (B).

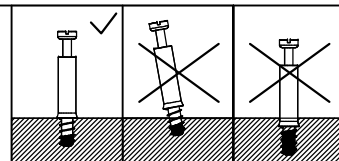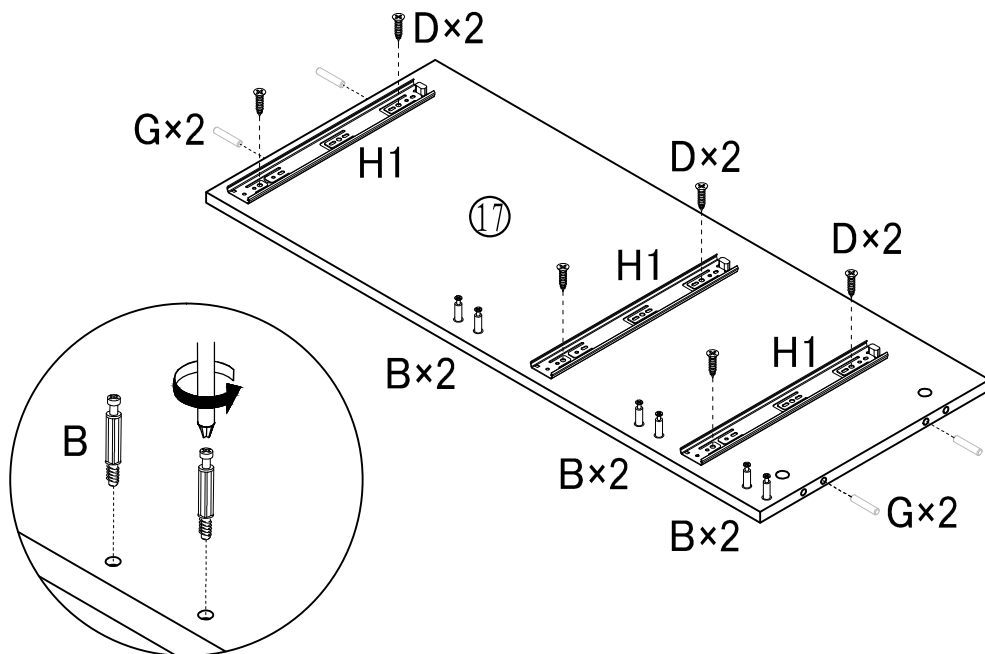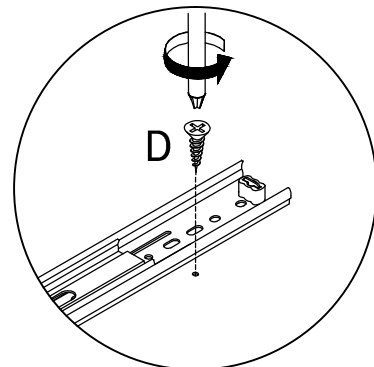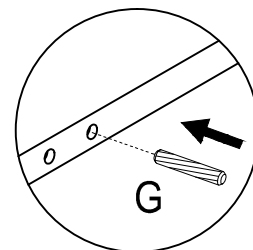

08

B×8




D×8






H1×3



I1×1



Attach three (H1) drawer slides and one (I1) drawer slide to panel ⑰ with eight screws (D). Install six cam bolts (B) in panel ⑰.

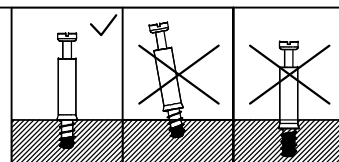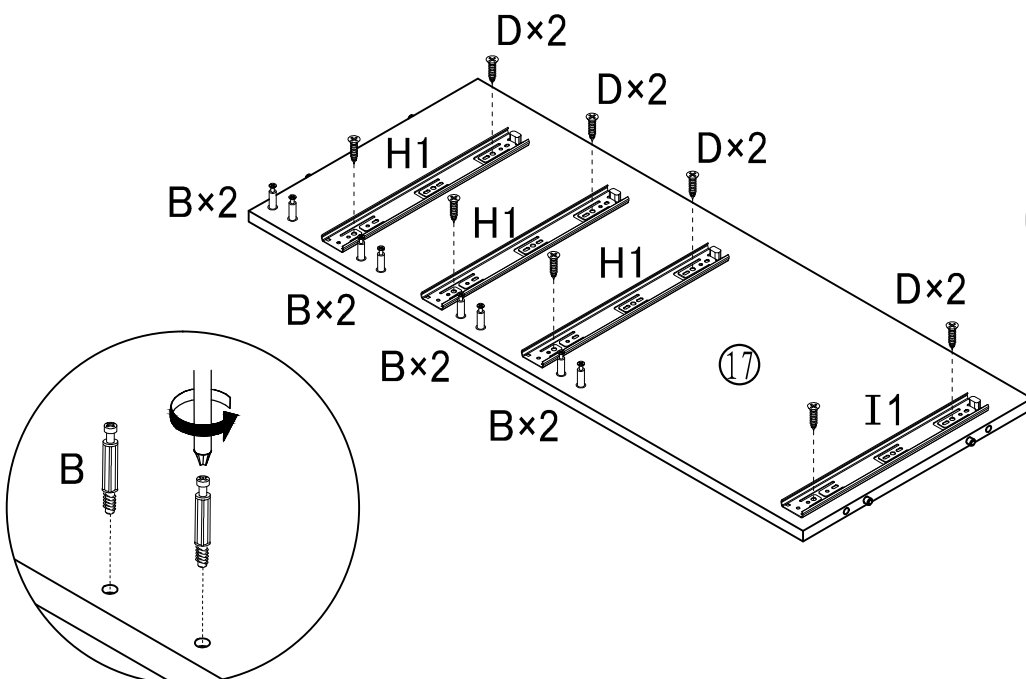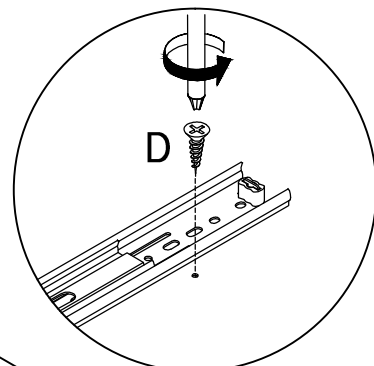

09

B×11



D×6



G×2





H1×2



I1×1



Attach two (H1) drawer slides and one (I1) drawer slide to panel ⑥ with screws (D). Insert two dowels (G) halfway into panel ⑥, then install eleven cam bolts (B).

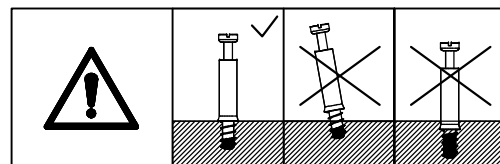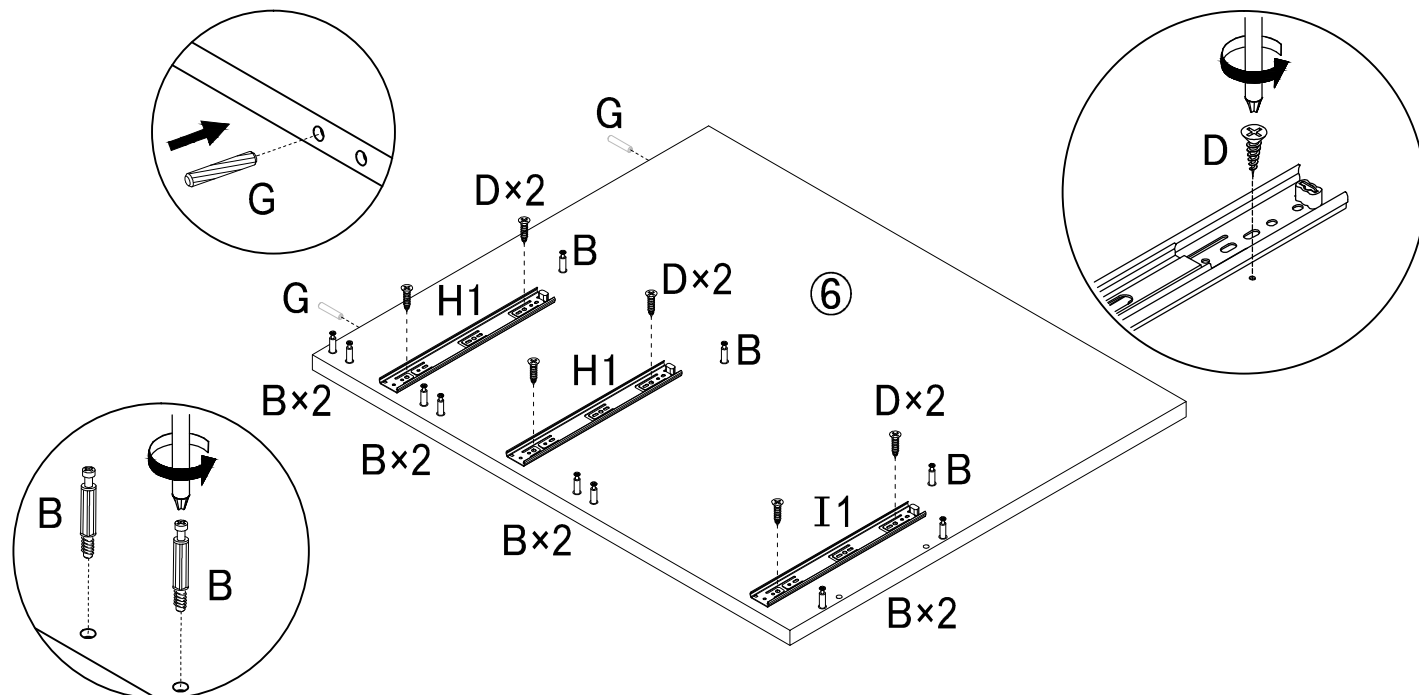


10



B×2



C×2

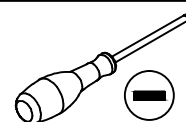


Install two cam bolts (B) in panel ②①. Align panel ②① with panel ①⑦, then insert and tighten two cam locks (C).

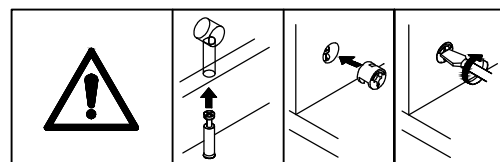
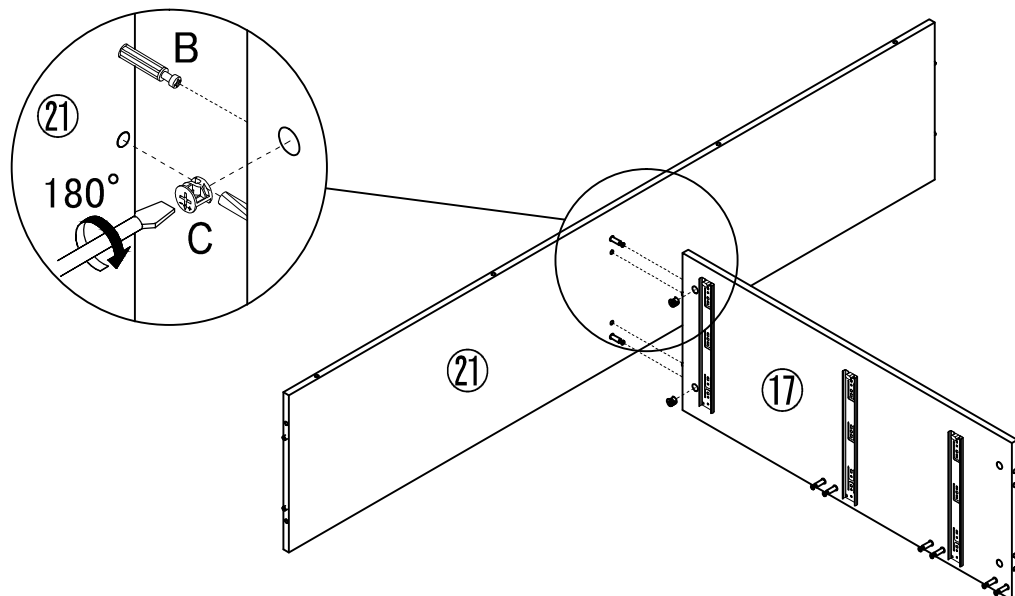


11

C×14

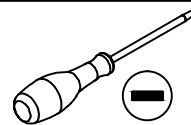

Align panel (17) with panels (23) through (29). Insert the cam locks (C) into the indicated holes and turn them clockwise to secure the joints.

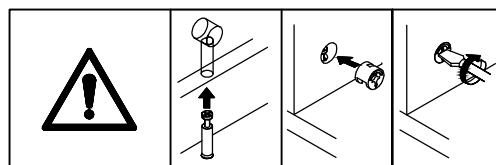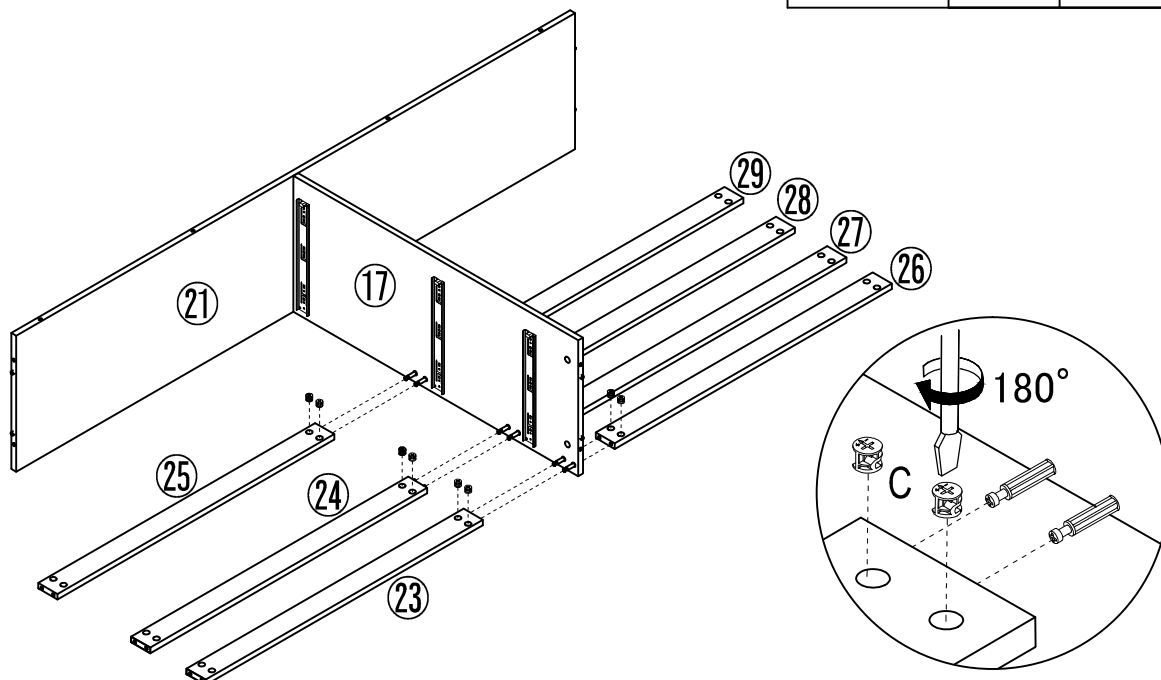


12



C×10



B×10

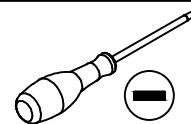

Align panel (18) with panel (21) and panels (26) through (29). Insert and tighten the cam locks (C).

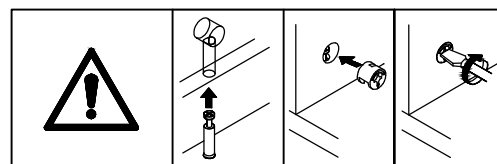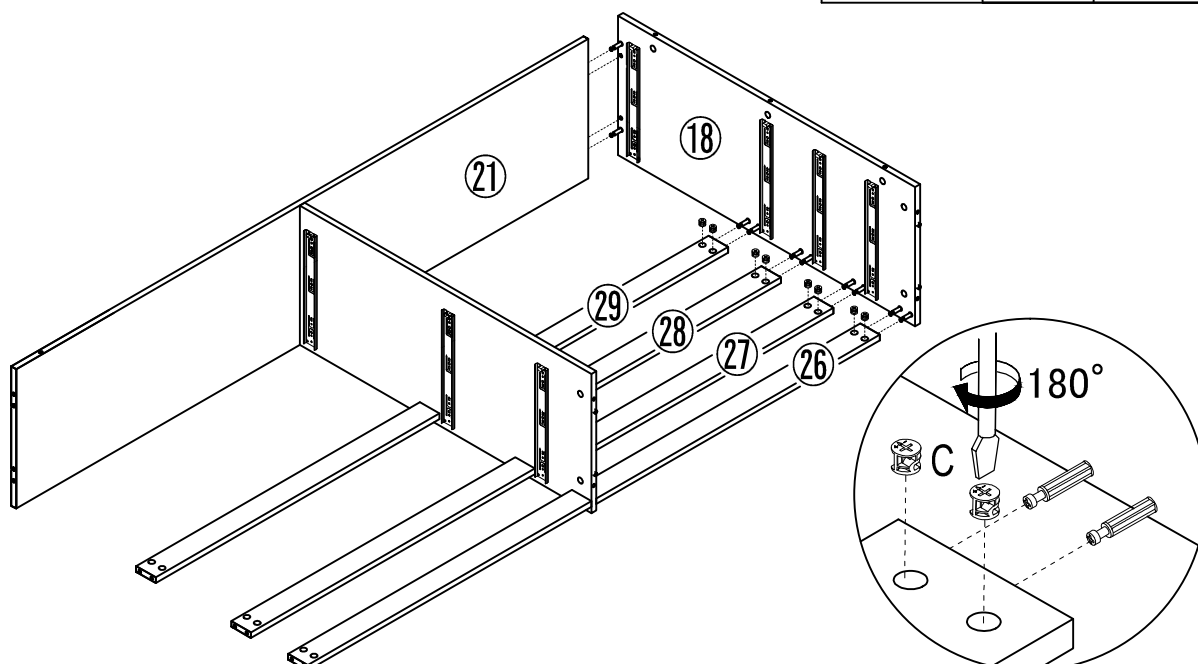


13




C×7



B×7

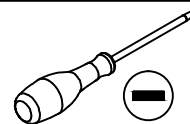


Align panel ③ with panels ②①, ①⑦, and ①⑧. Insert and tighten seven cam locks (C).

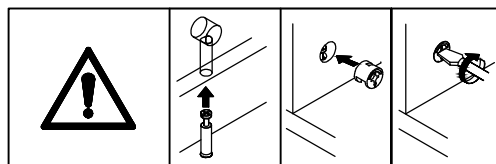
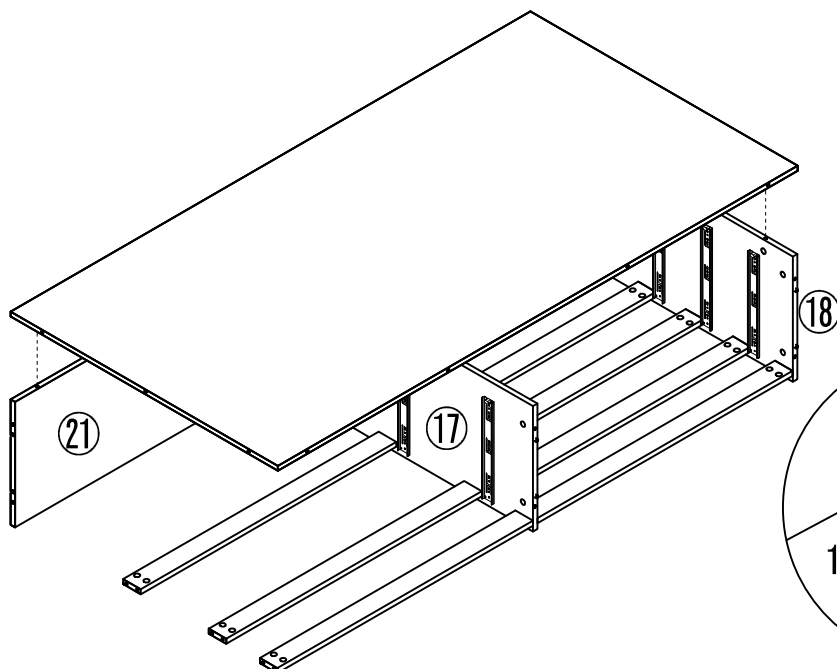
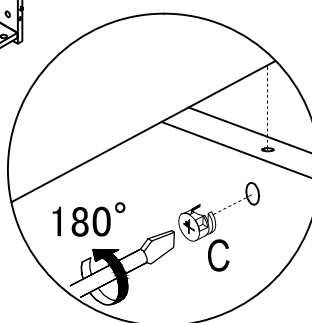


14

C×11

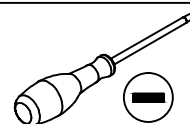



Align panel ⑥ with panels ②① and ②③ through ②⑤. Insert and tighten eleven cam locks (C).

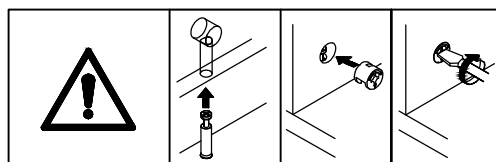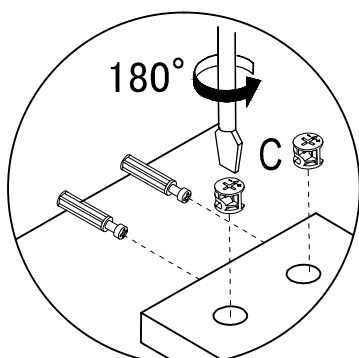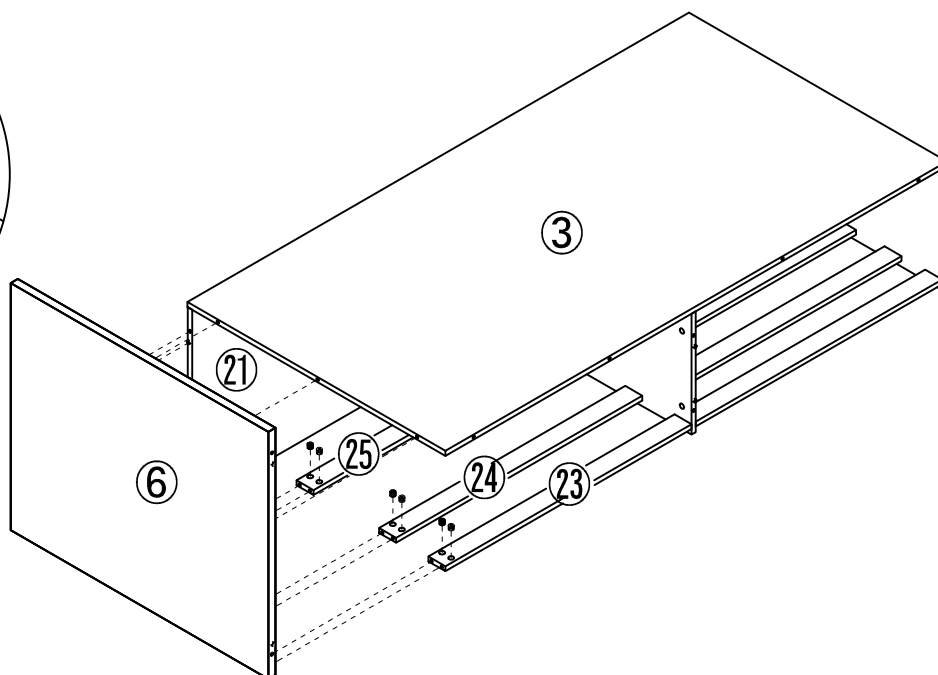

15


B×44 	C×44 	D×20 	G×6 	H1×8 	I1×2 
---	---	---	--	---	---

The installation method on the other side is the same.

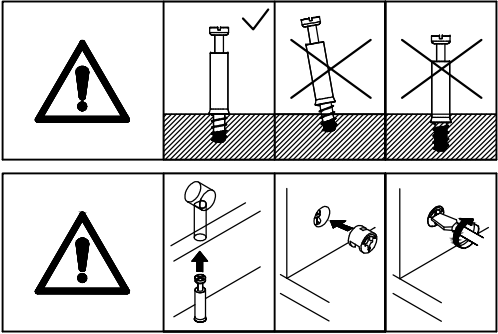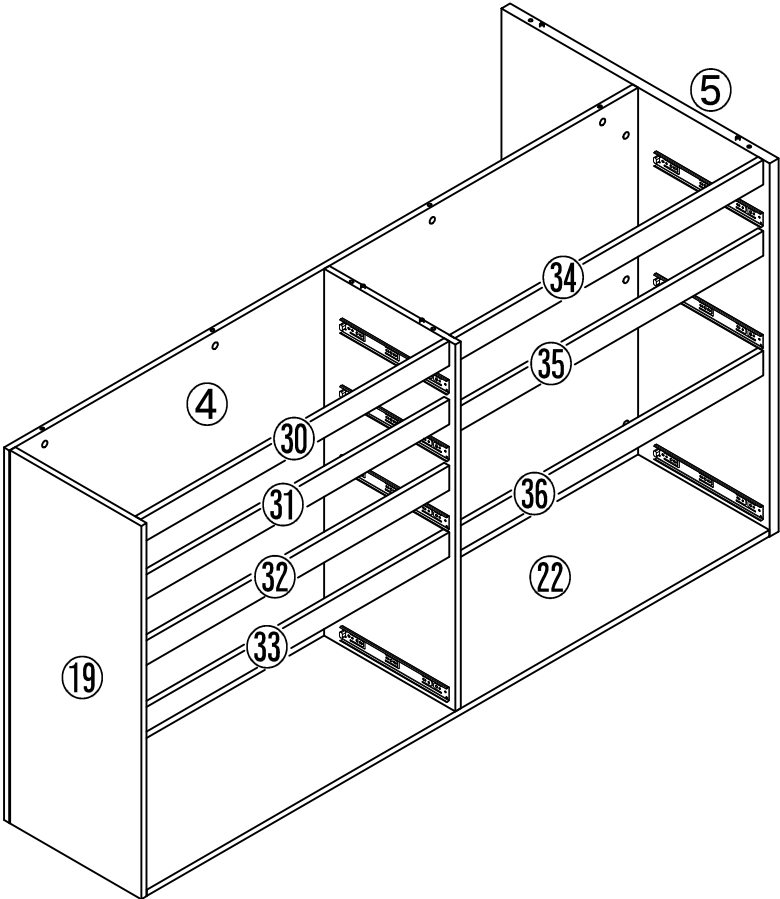

16

Position the two cabinet assemblies together as shown.

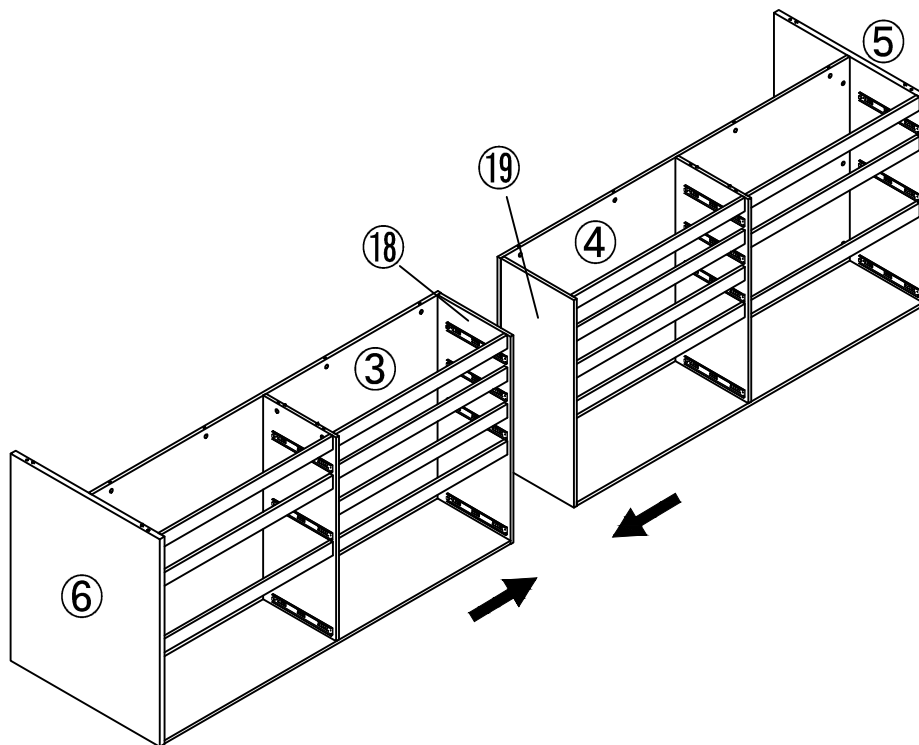

17




B×3



C×3



Install three cam bolts (B) in panel ⑧. Align panel ⑧ with panel ⑮, then insert and tighten three cam locks (C).

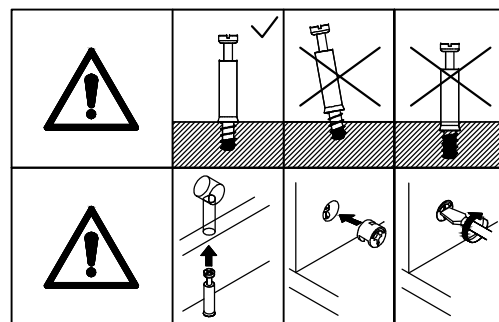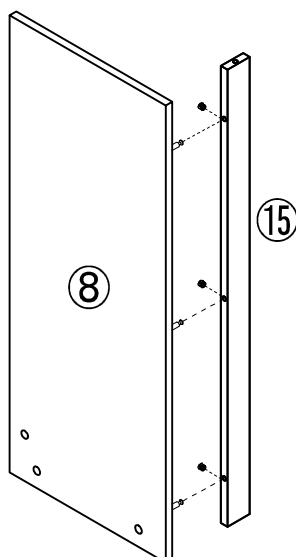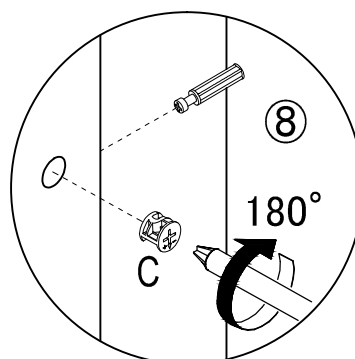

18


B×2






C×2



G×2



Install two cam bolts (B) and two dowels (G) in panel ⑩. Align panel ⑩ with panel ⑧, then insert and tighten two cam locks (C).

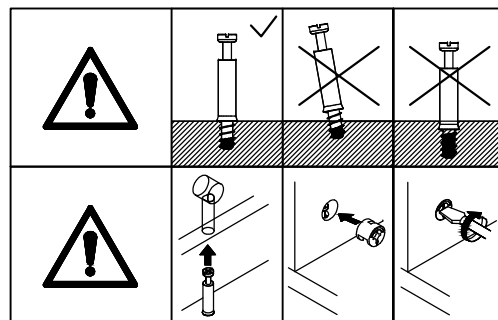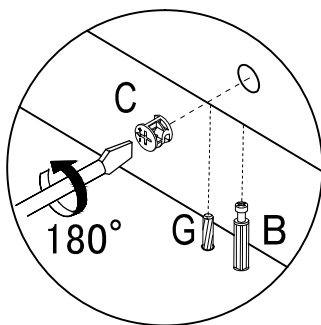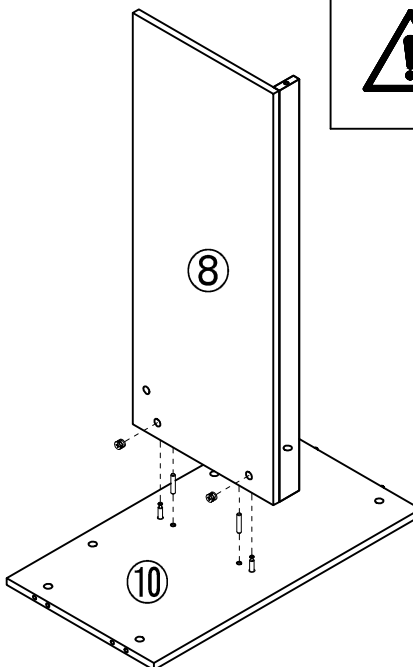


19




B×7



C×7



Install seven cam bolts (B) in panels ⑦ and ⑨. Align them with panel ⑩, then insert and tighten seven cam locks (C).

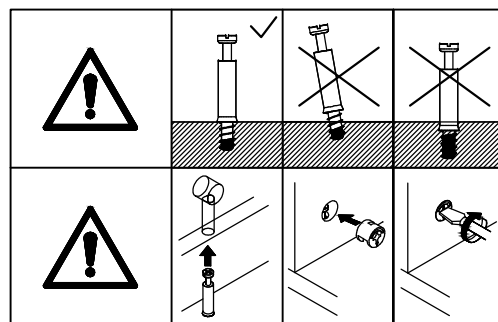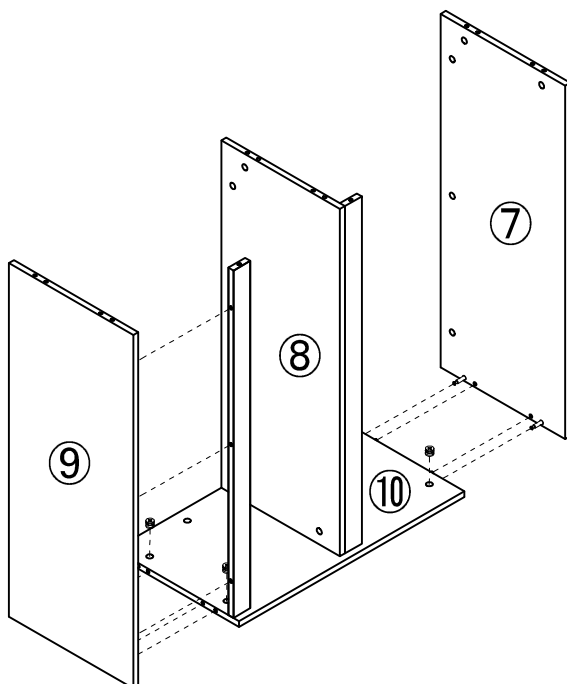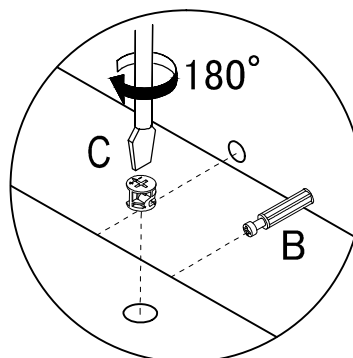

20


B×11





C×11



L×8

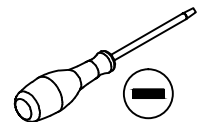

Install eight shelf support pins (L) in panels ③ and ④ as shown. Fit parts ⑦, ⑧, ⑨, and ⑩ into place. Insert eleven cam bolts (B) and tighten them with eleven cam locks (C).

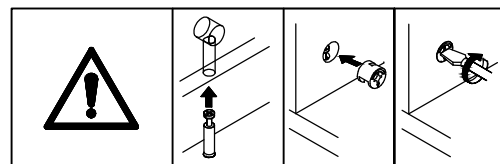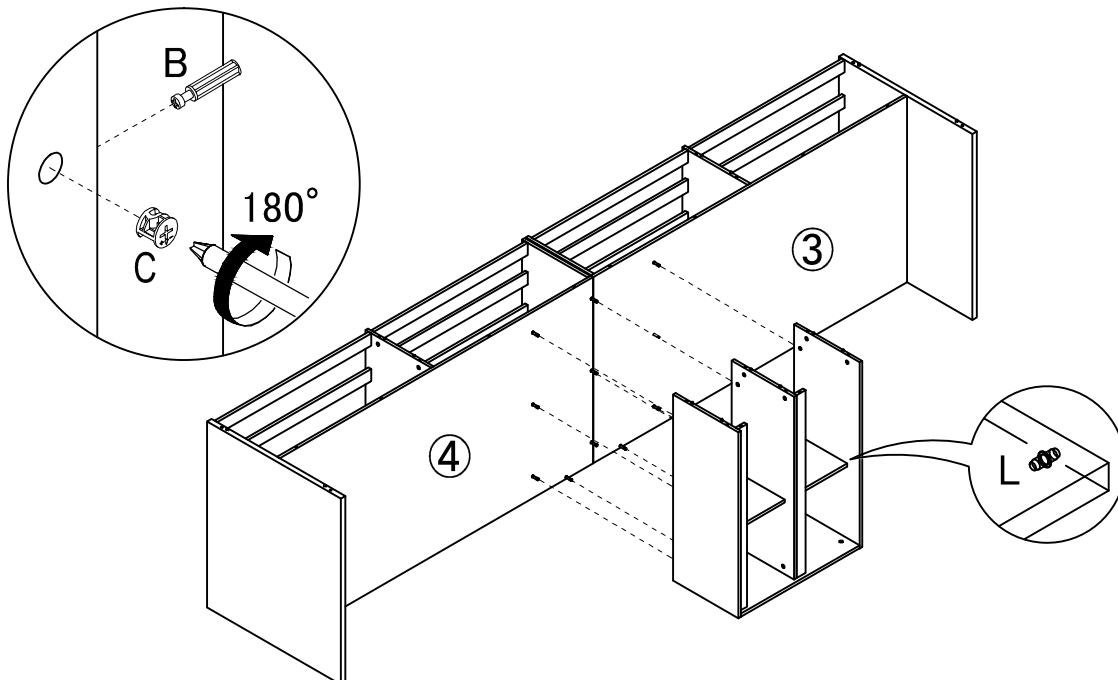

21

B×28




C×32





G×18



K×2

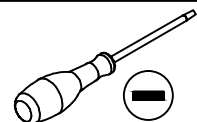


Attach panels ① and ② to the cabinet assembly using cam bolts (B), dowels (G), connector bolts (K), and cam locks (C), as shown.

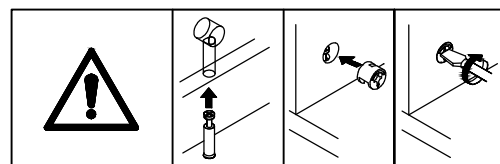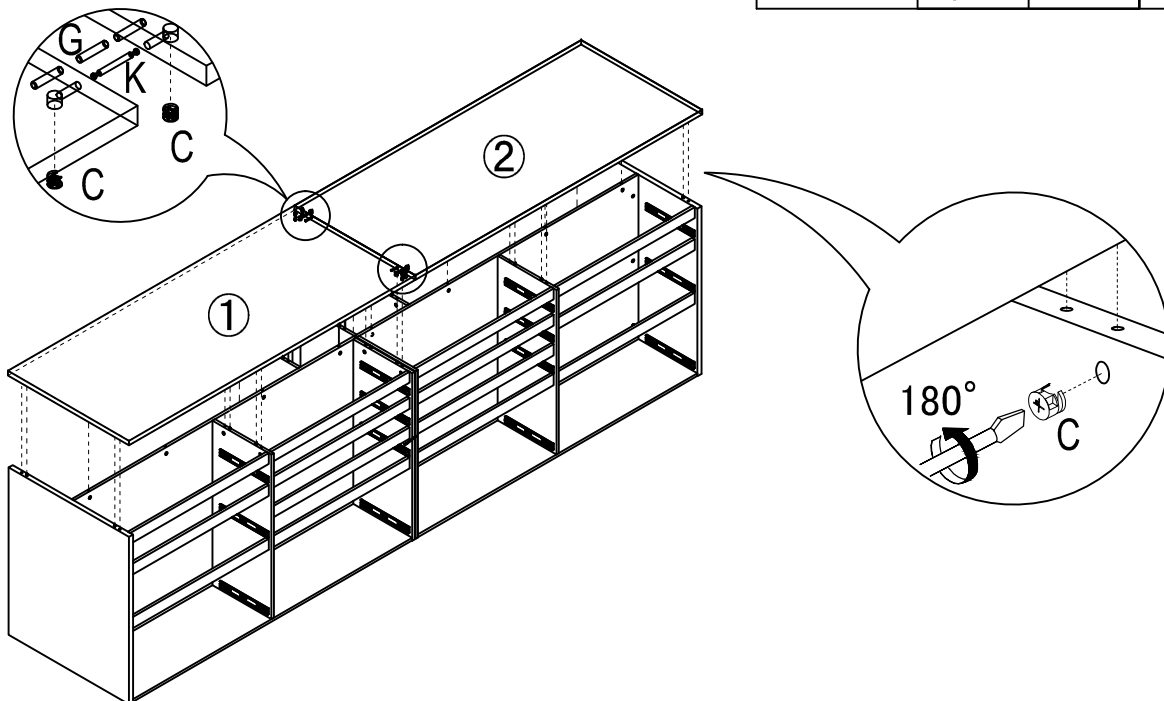

22

Slide each assembled drawer into the cabinet, aligning the drawer slides with the cabinet rails.

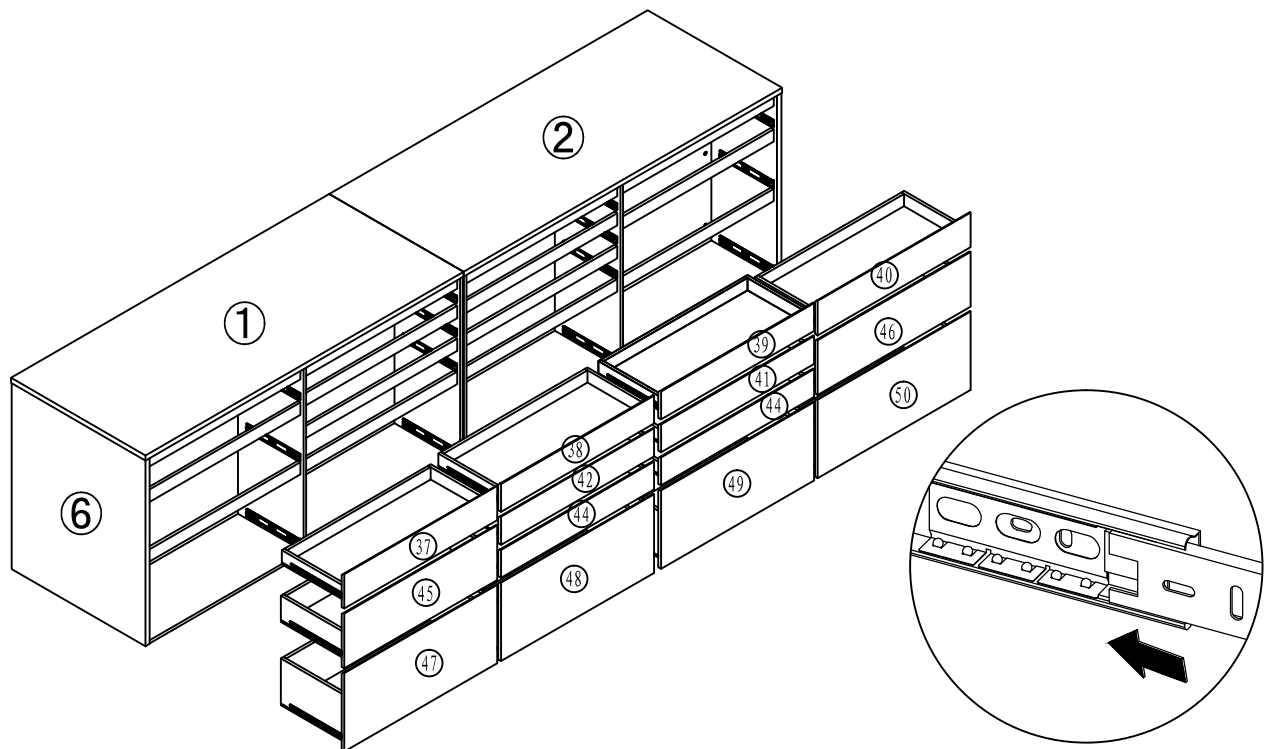

23


A×2




D×24



J×2



Install panel ⑭ on panel ⑧ with hinge (A) and screws (D). Then install panel ⑬ on panel ⑦ with hinge (J) and screws (D). Tighten all screws.

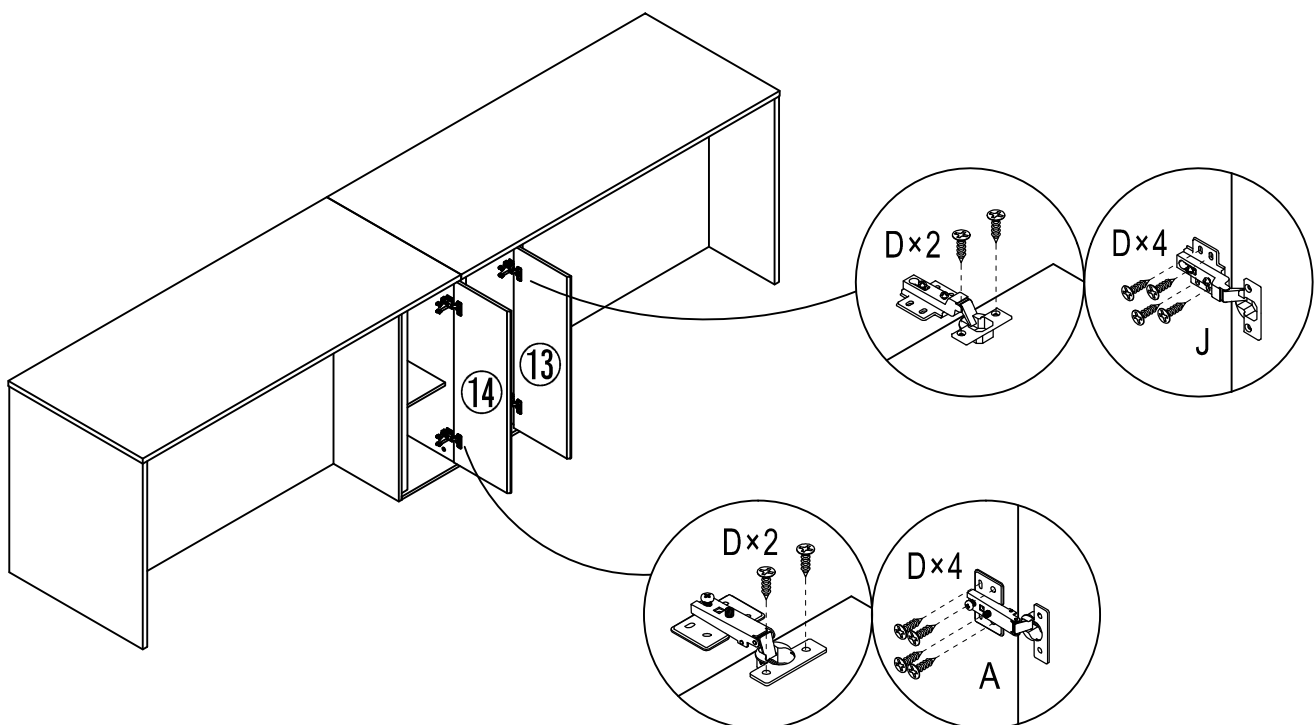

Wenn die Türen nach der korrekten Montage der Scharniere immer noch nicht ausgerichtet sind, sehen Sie sich bitte das Video an.

<https://youtu.be/n0Lb36SoODM>

