
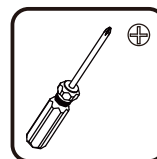
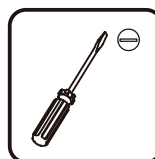


HLG197

Version : 1.0

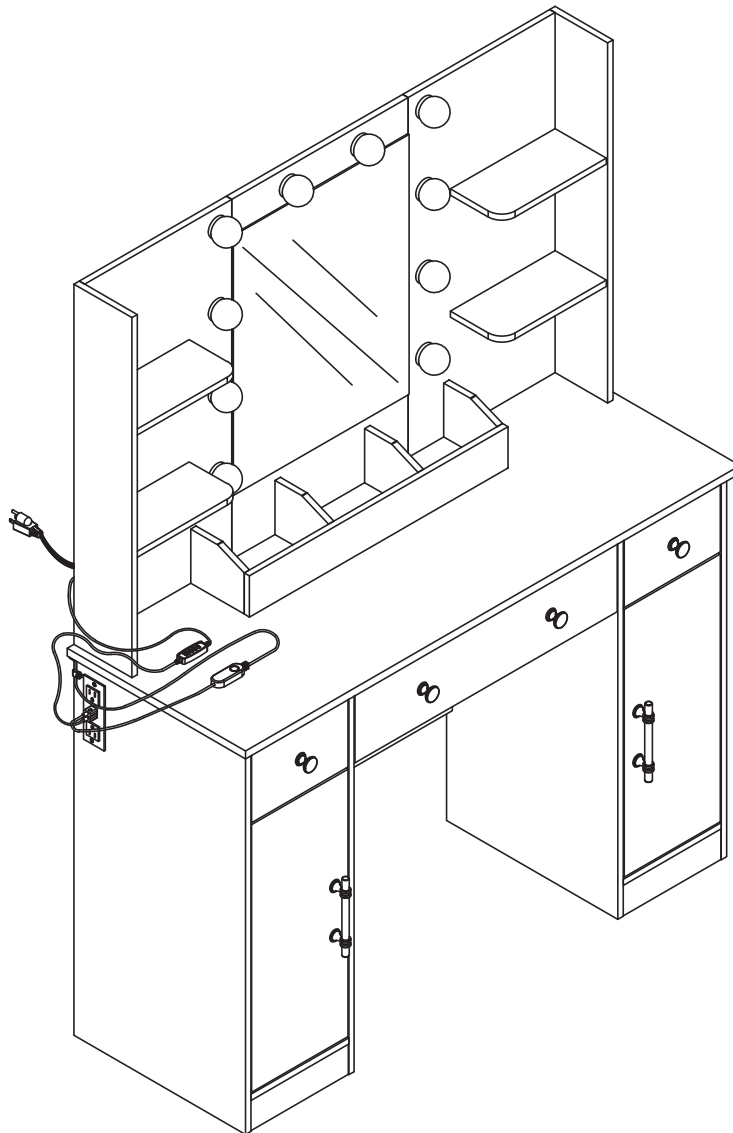

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: support@anymaple.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

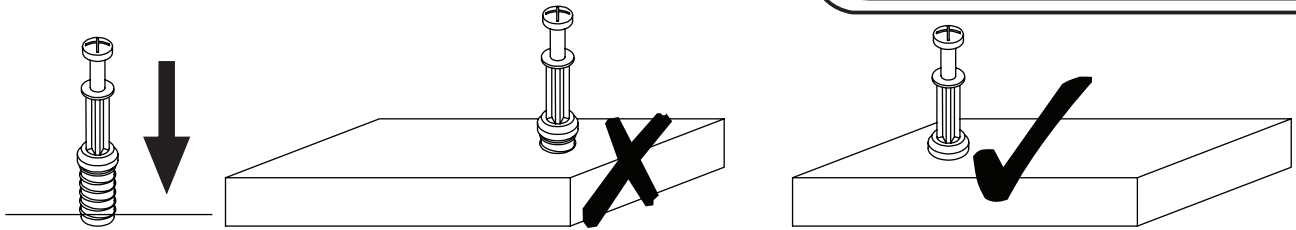


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

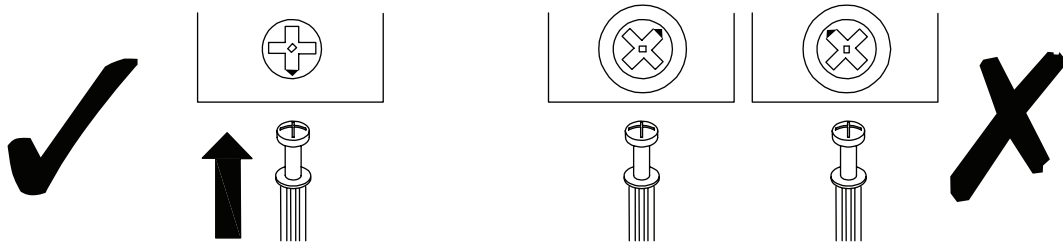









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










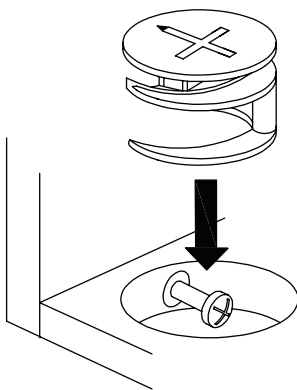











EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


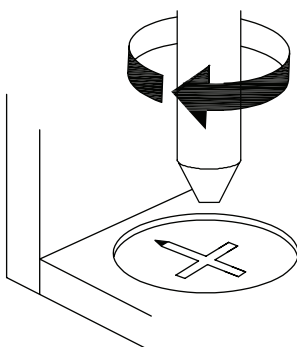





EN_Turn cam lock clockwise to tighten.

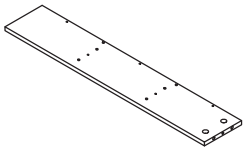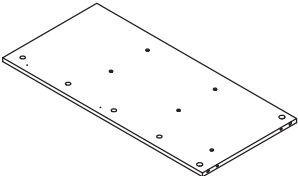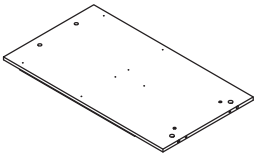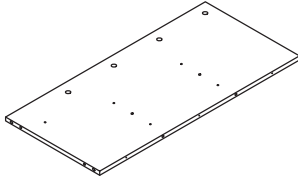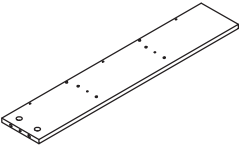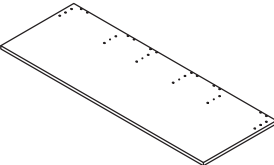NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x4	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x1	

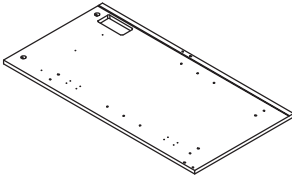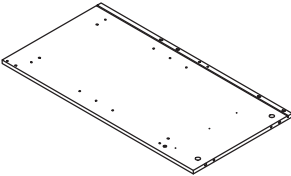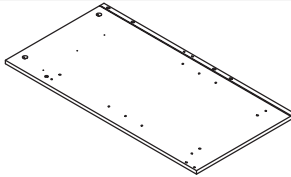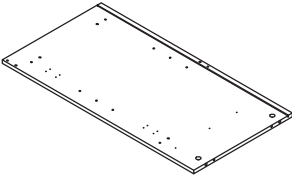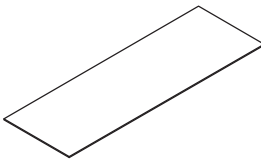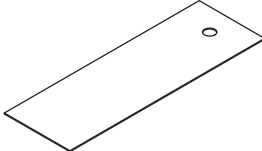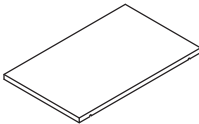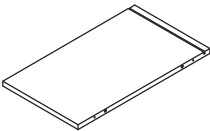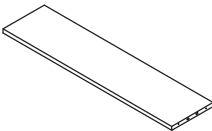
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x6	
⑱		x2	
⑲		x2	
⑳		x1	

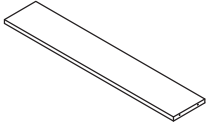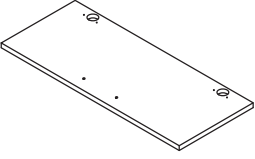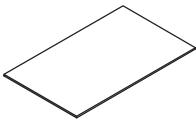
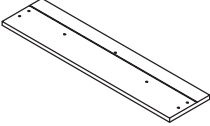
NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x2	
24		x2	
25		x3	
26		x3	
27		x2	
28		x2	
29		x1	
30		x1	

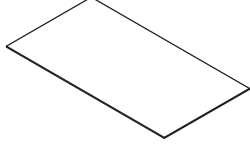NO.	PARTS	QTY	SPARE
31		x1	
32		x1	
	 Hardware Kit		

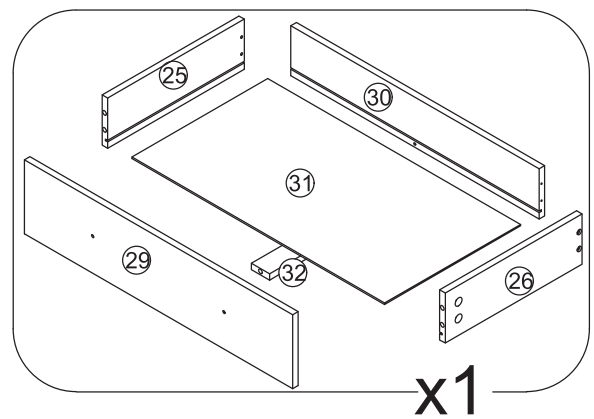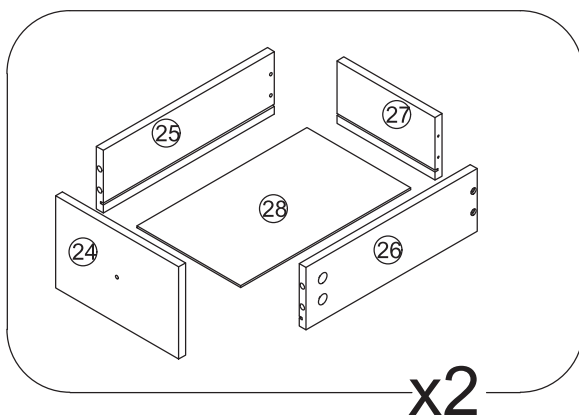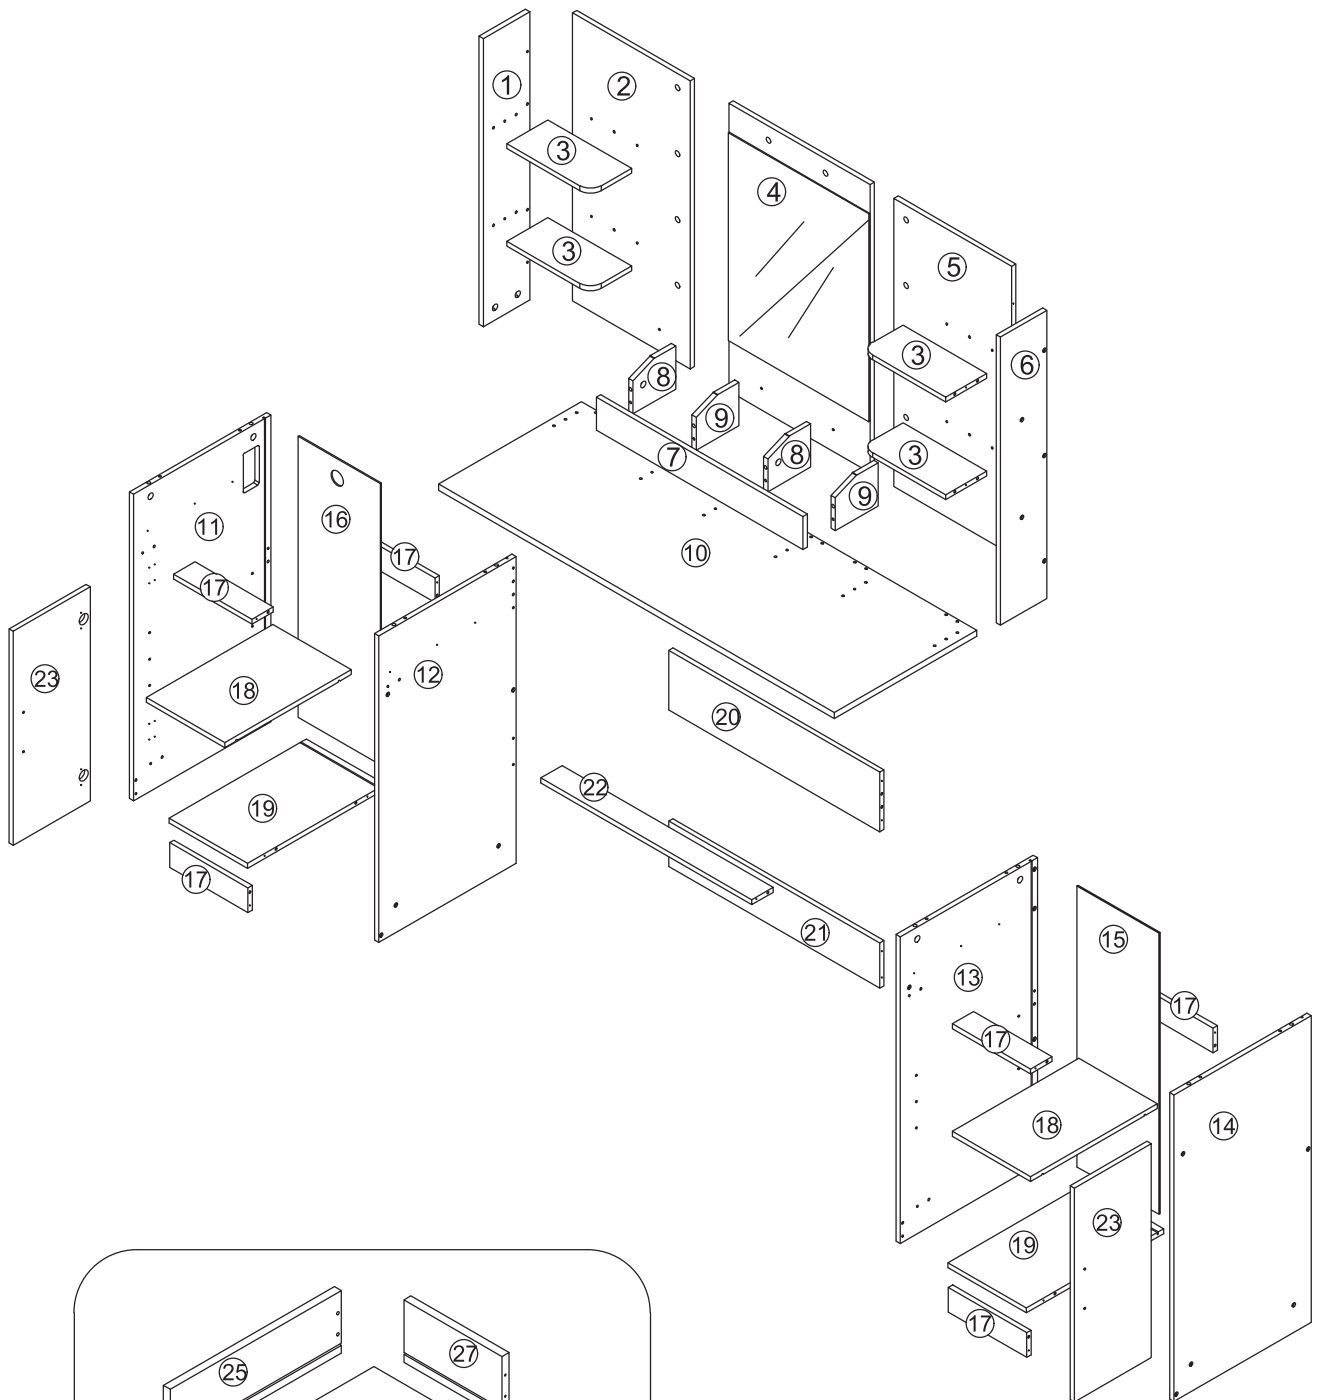

A x35 Ø6x35mm +2(spare) 	B x35 Ø15x10mm +2(spare) 	C x70 Ø6x30mm +2(spare) 	D x71 Ø4x35mm +2(spare) 	E x36 Ø3.5x12mm +3(spare) 	F x4  
G x2  	H x8 +1(spare)  	I x4 	J x2 	K x12 +1(spare) 	L x2  
M x2 Ø6x30mm 	N x8 	O x4 	P x24 Ø3.5x12mm +2(spare) 	Q x8 Ø18mm 	R x30 Ø18mm +2(spare) 
S x1 	T x2 Ø3x12mm 	U-1 x1  U-2 x1  U-3 x10  U-4 x10 			V x1 
X x2 	CL x3 L300mm 	CR x3 L300mm 	DL x3 L300mm 	DR x3 L300mm 	

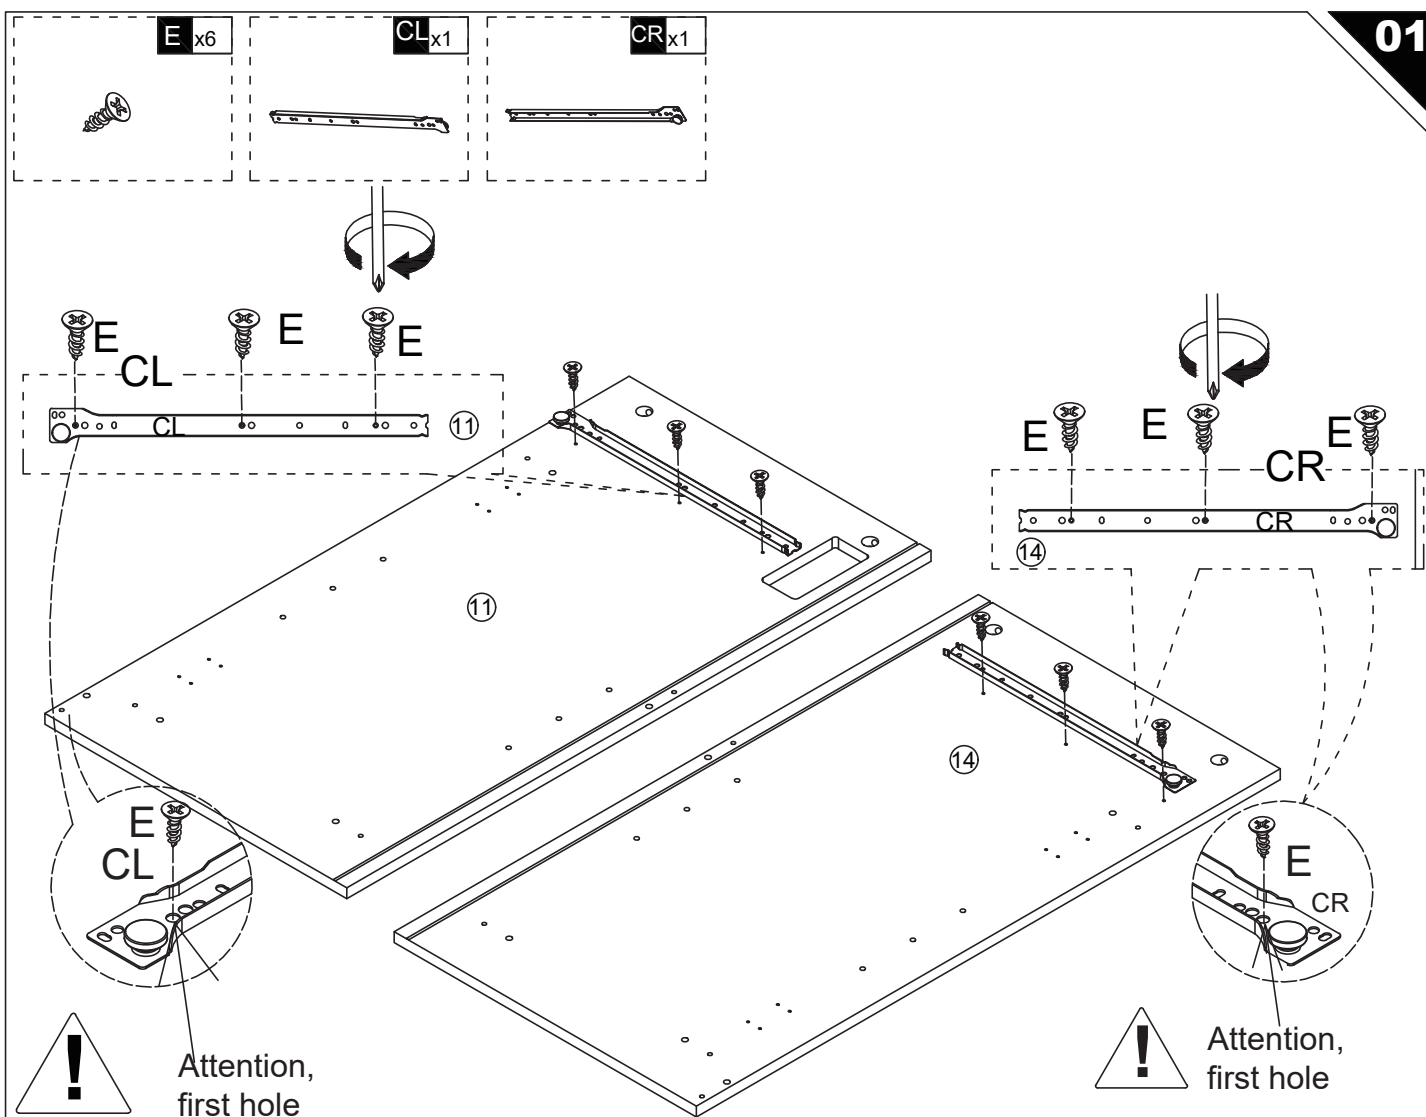


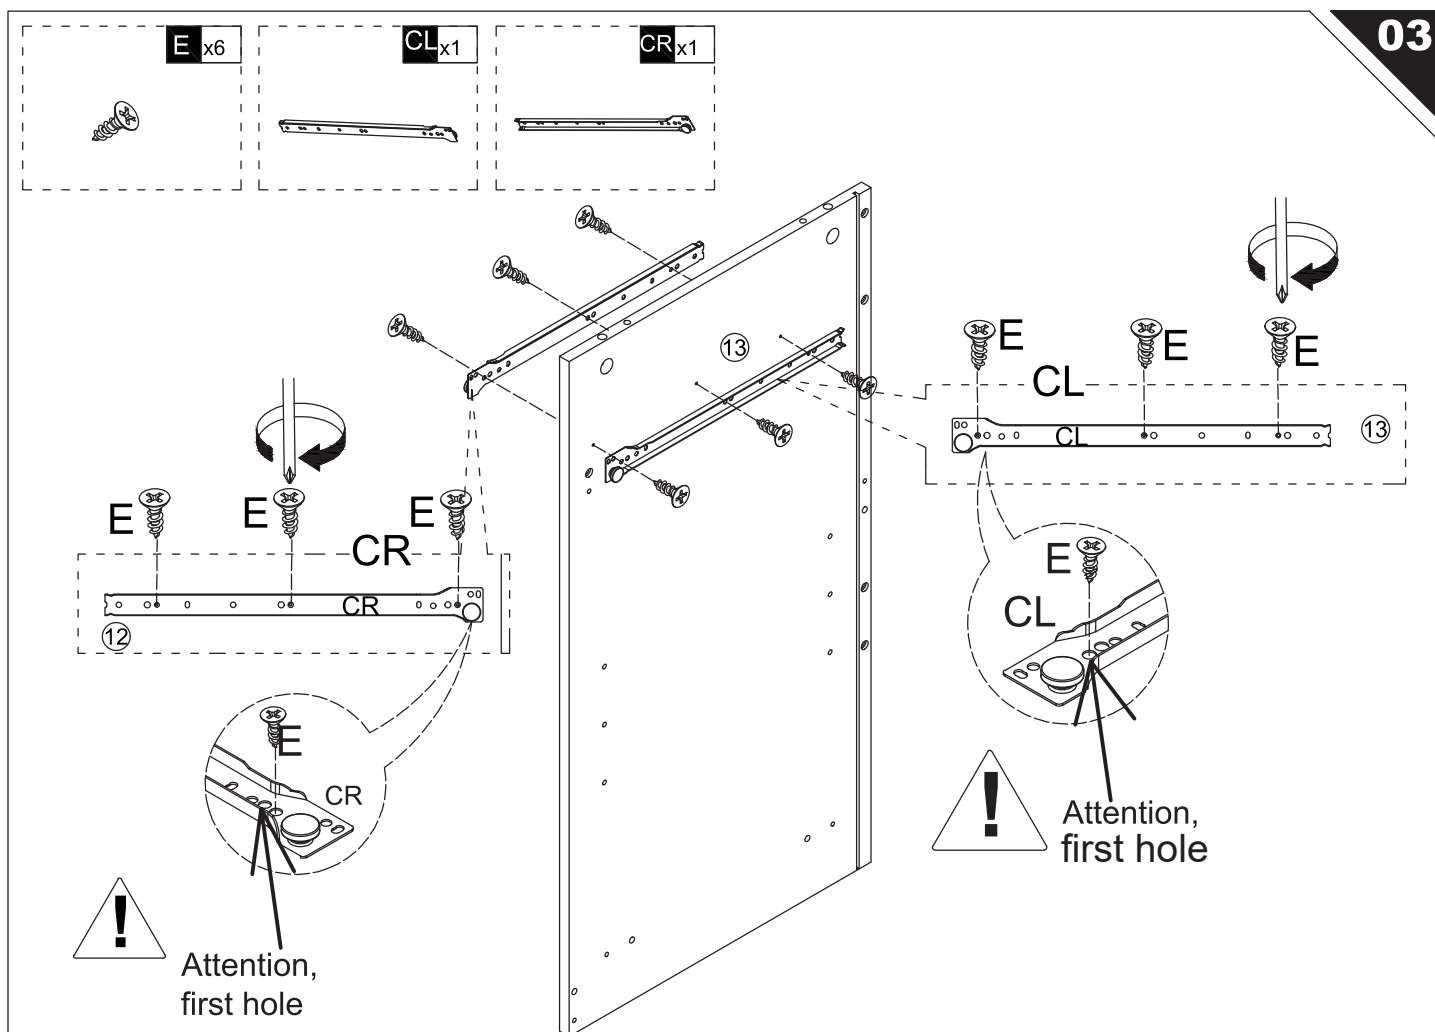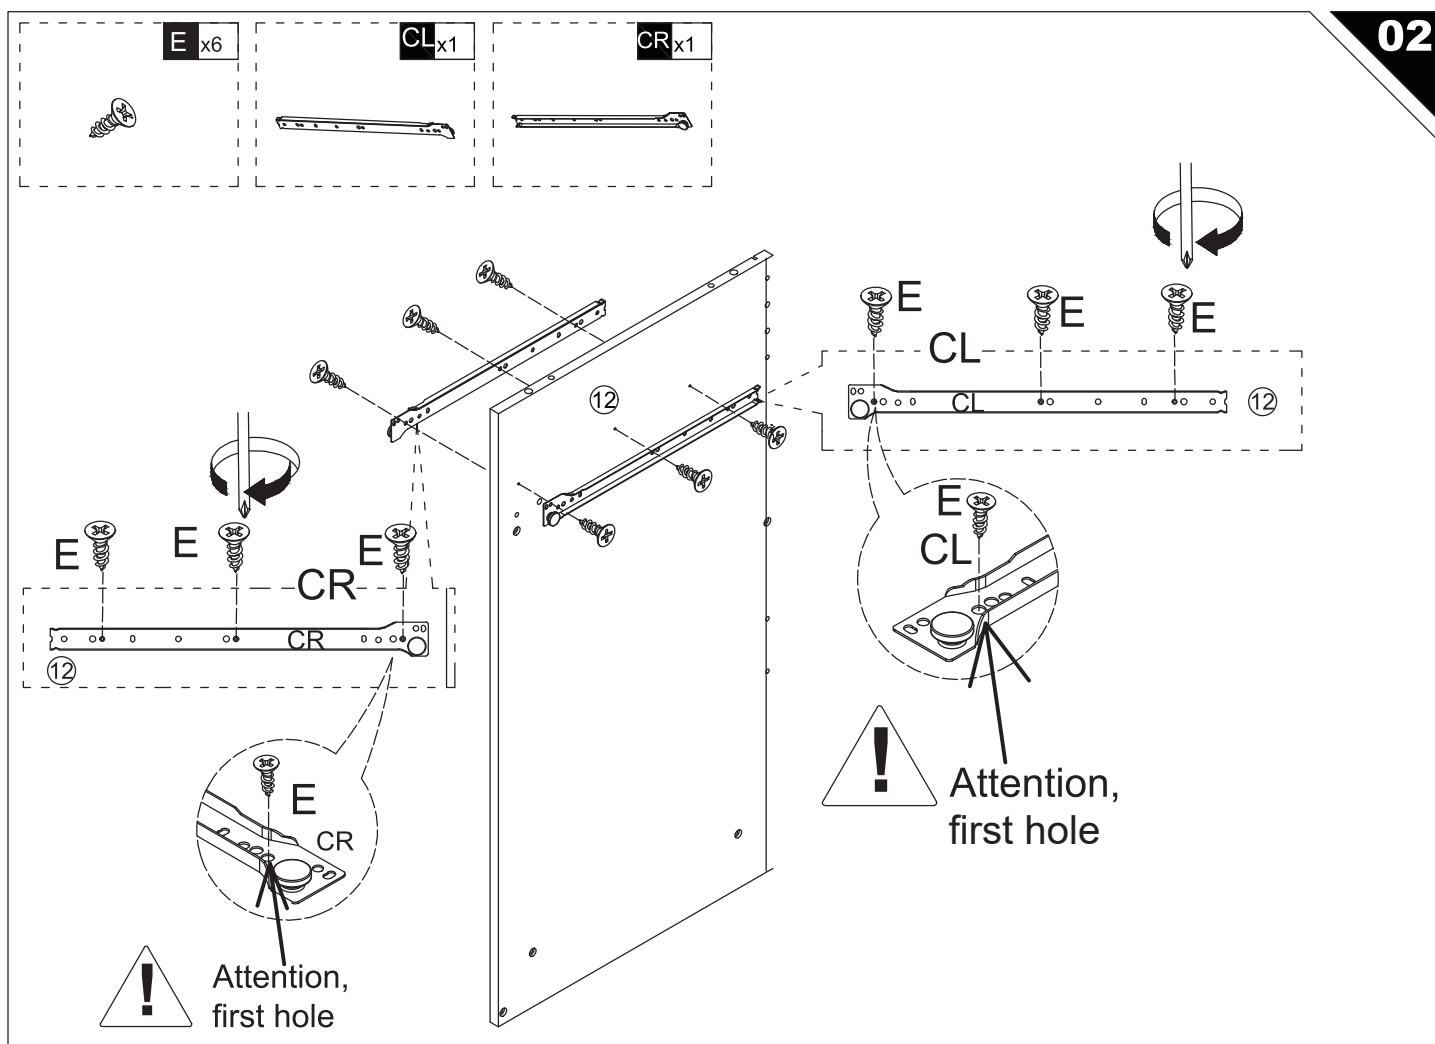

04


C x6

D x5

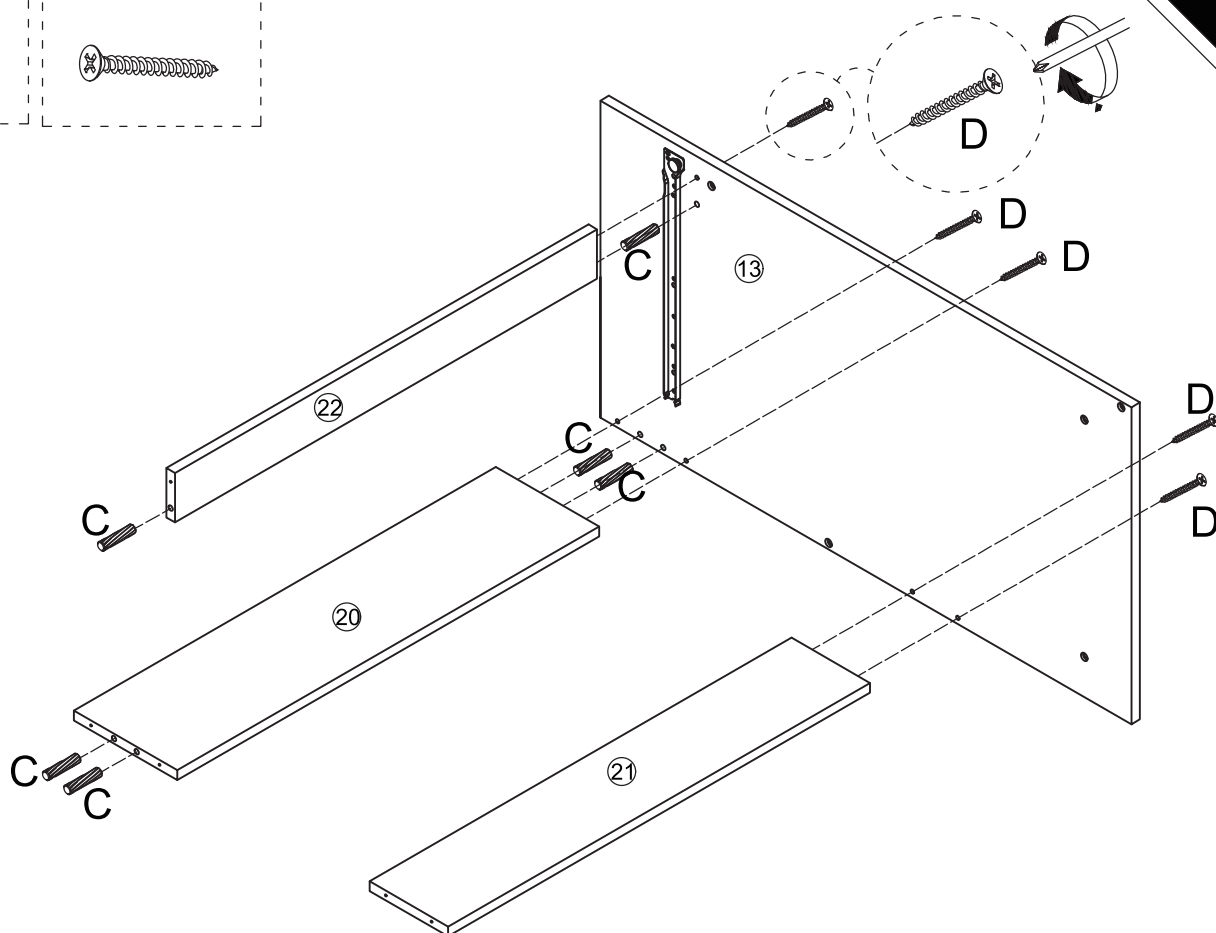

05

D x5

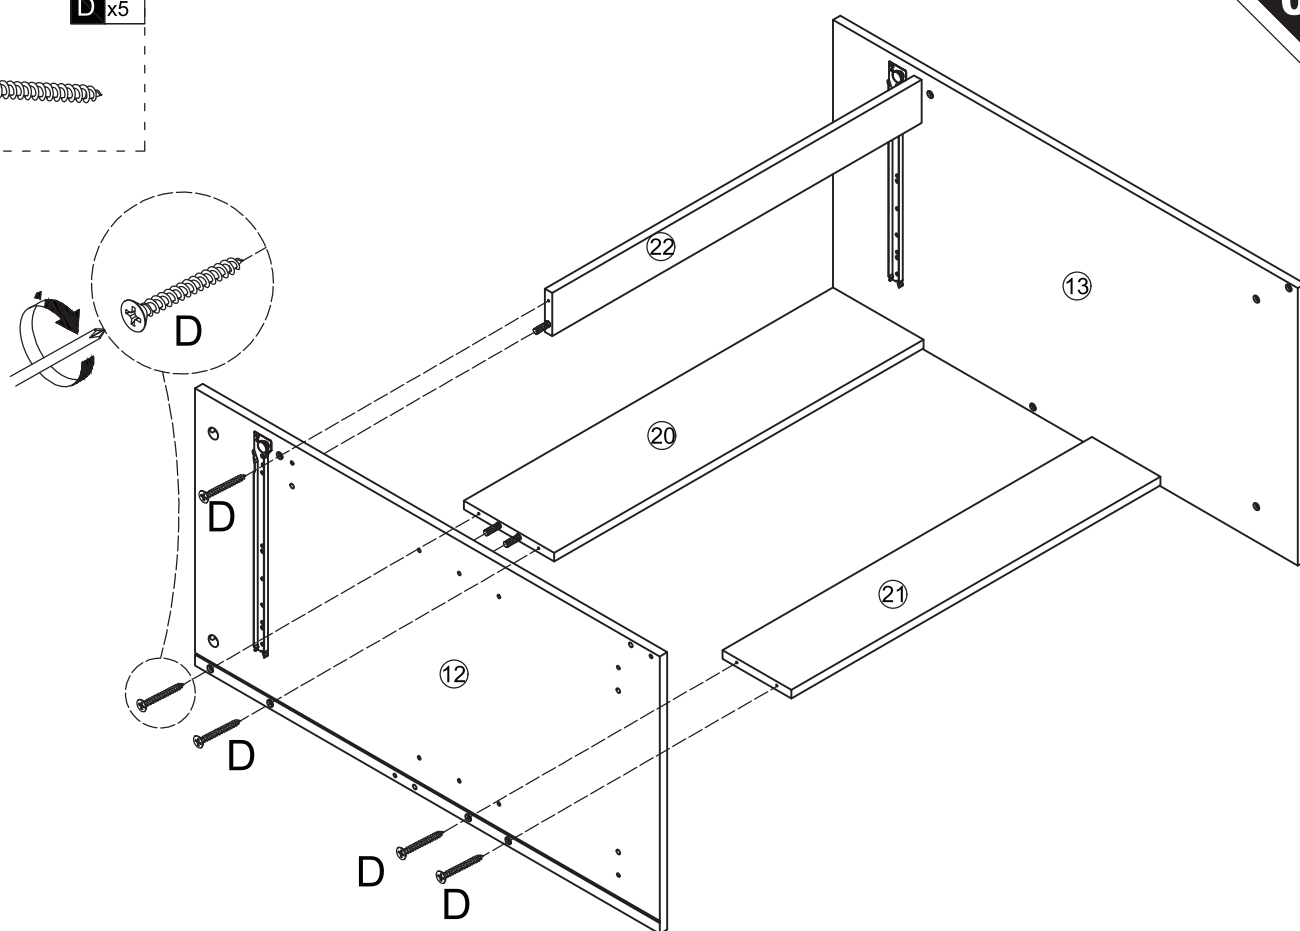


06

C x4

D x2

R x2

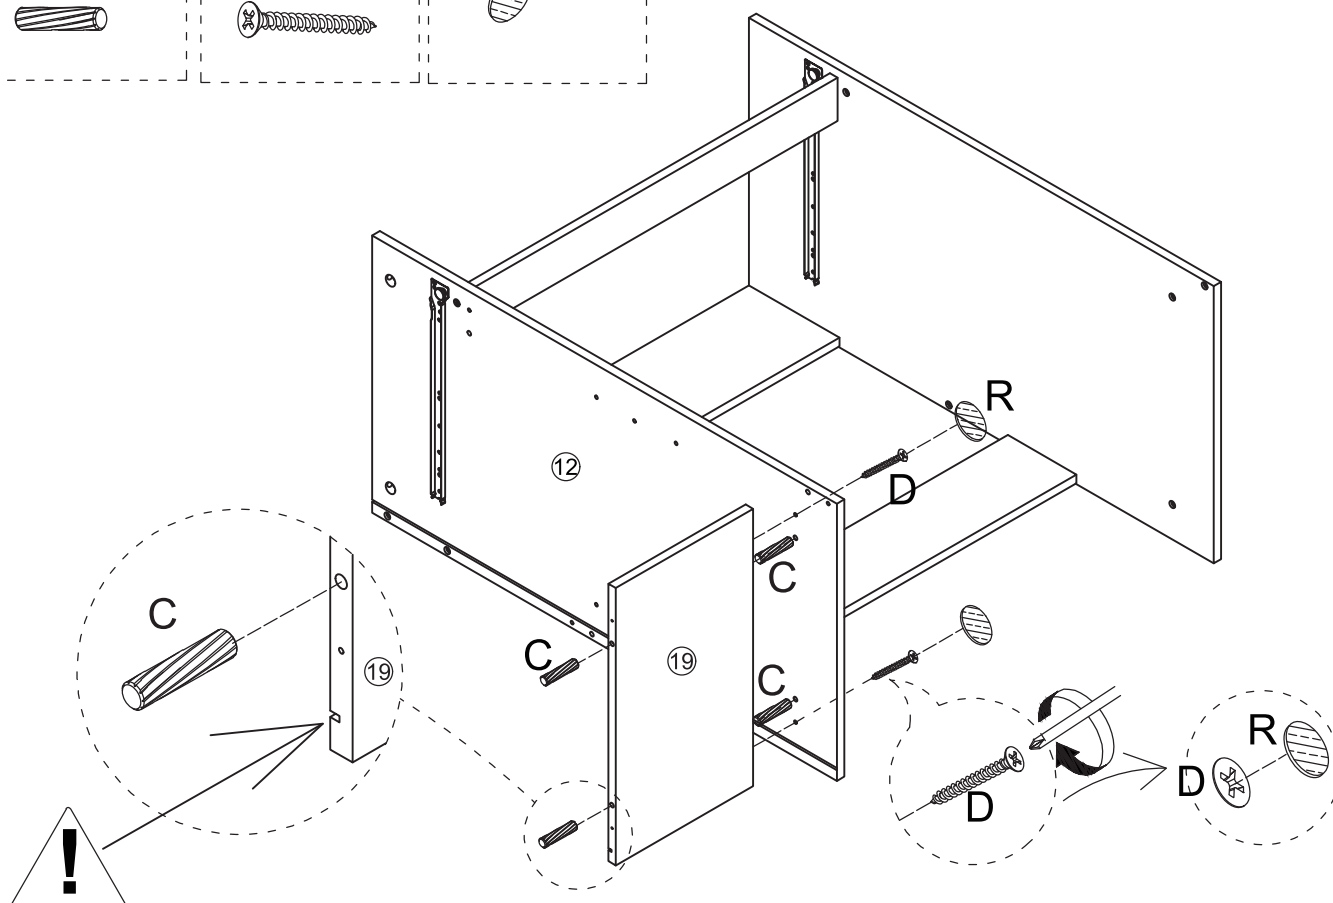




07



C x6


D x3

R x3

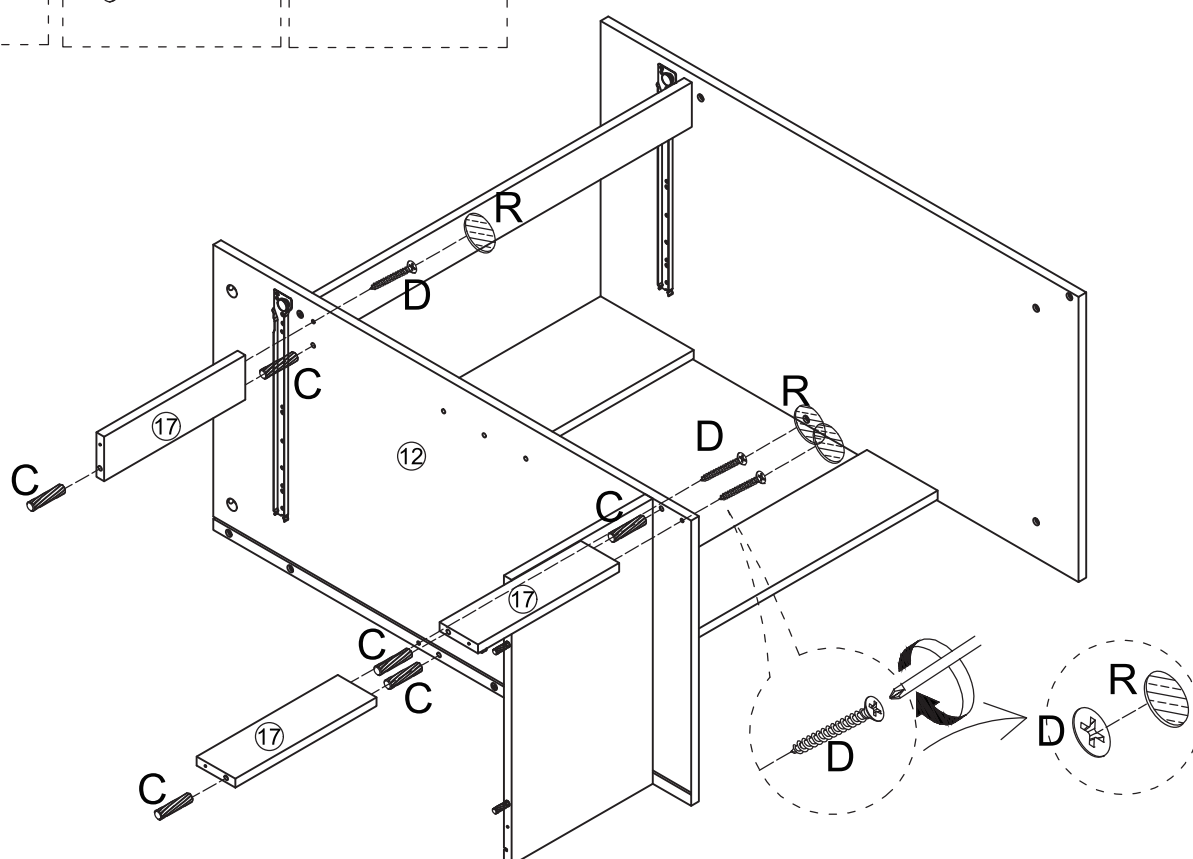


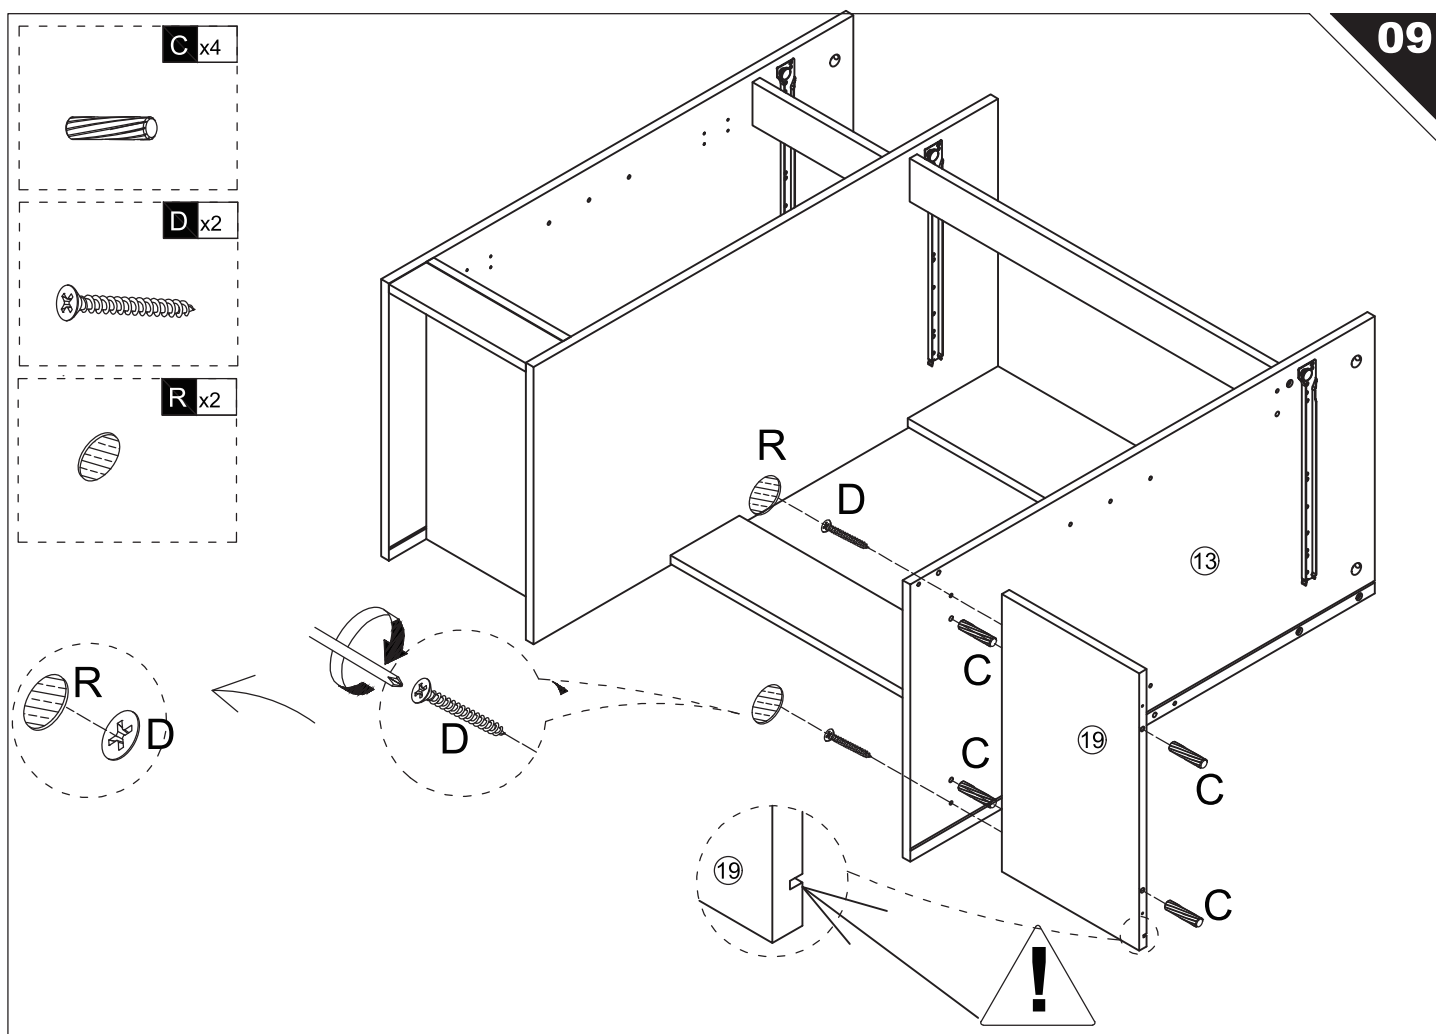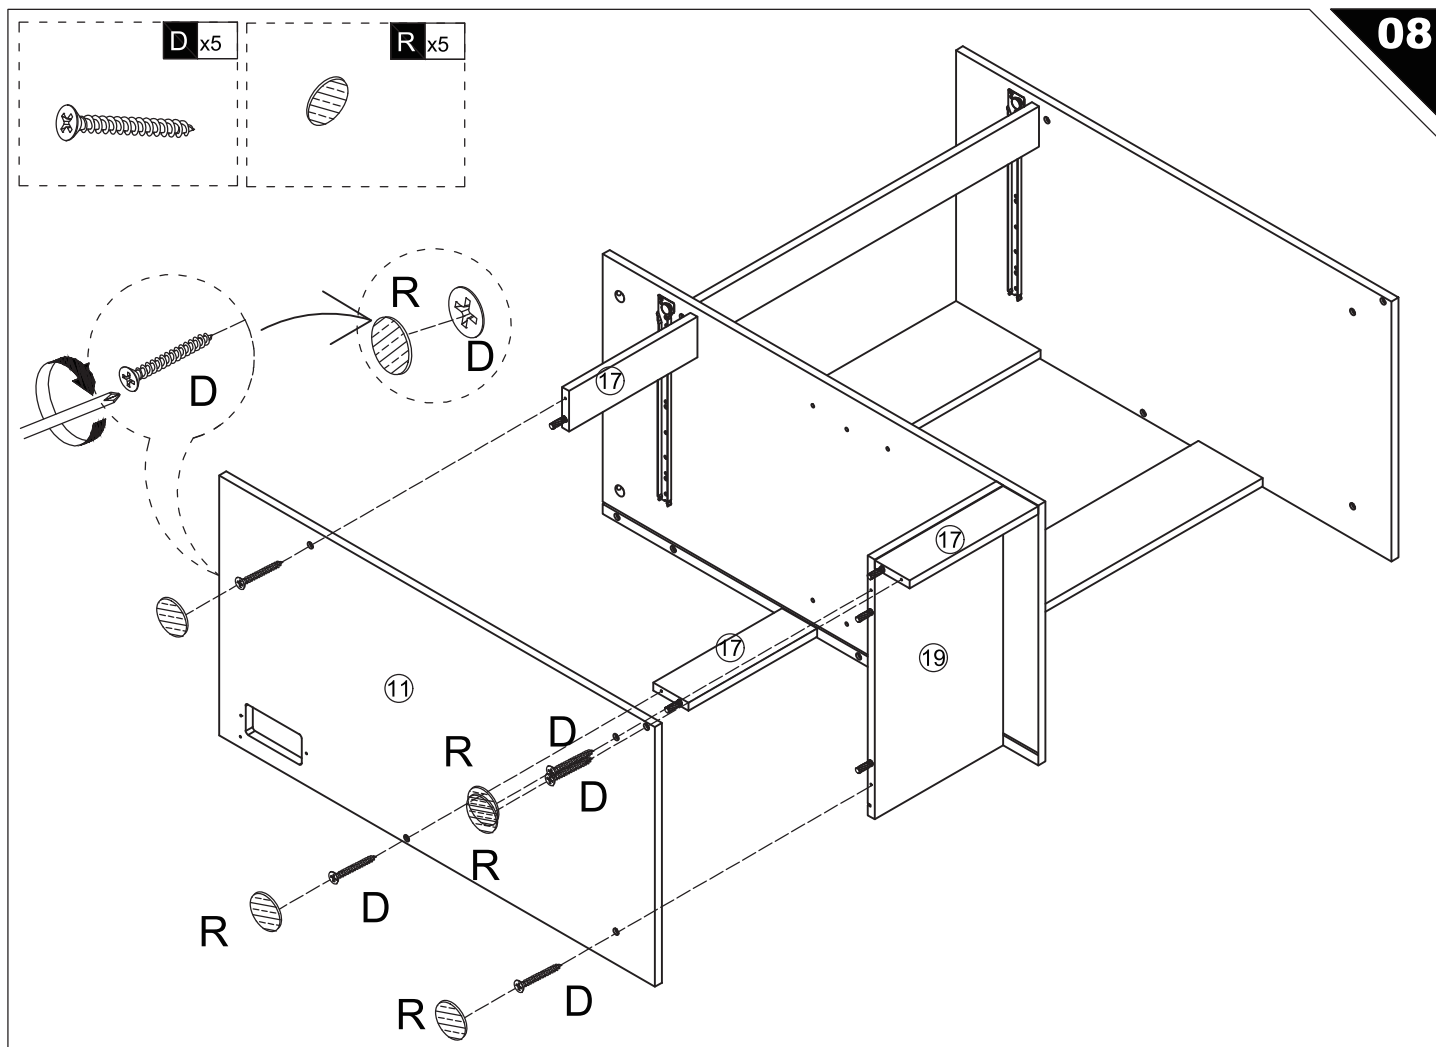

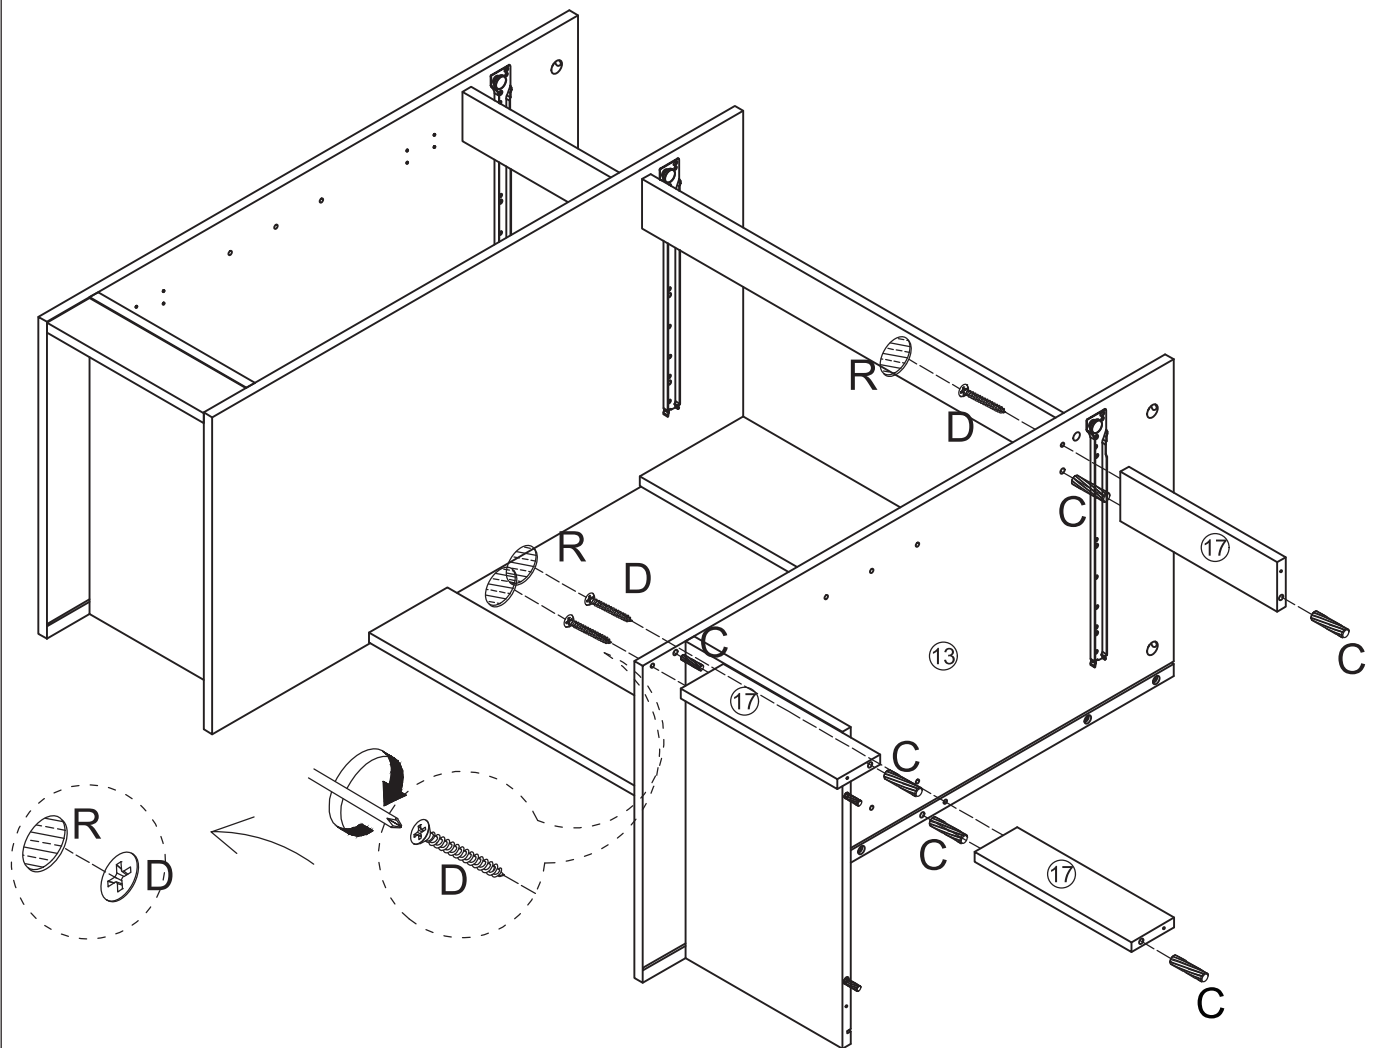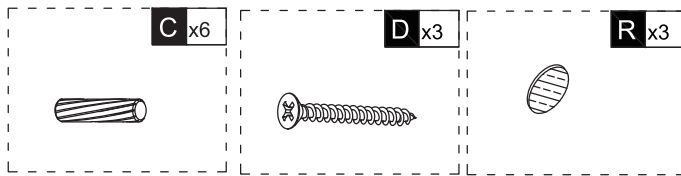


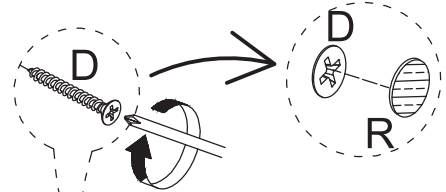


C x8

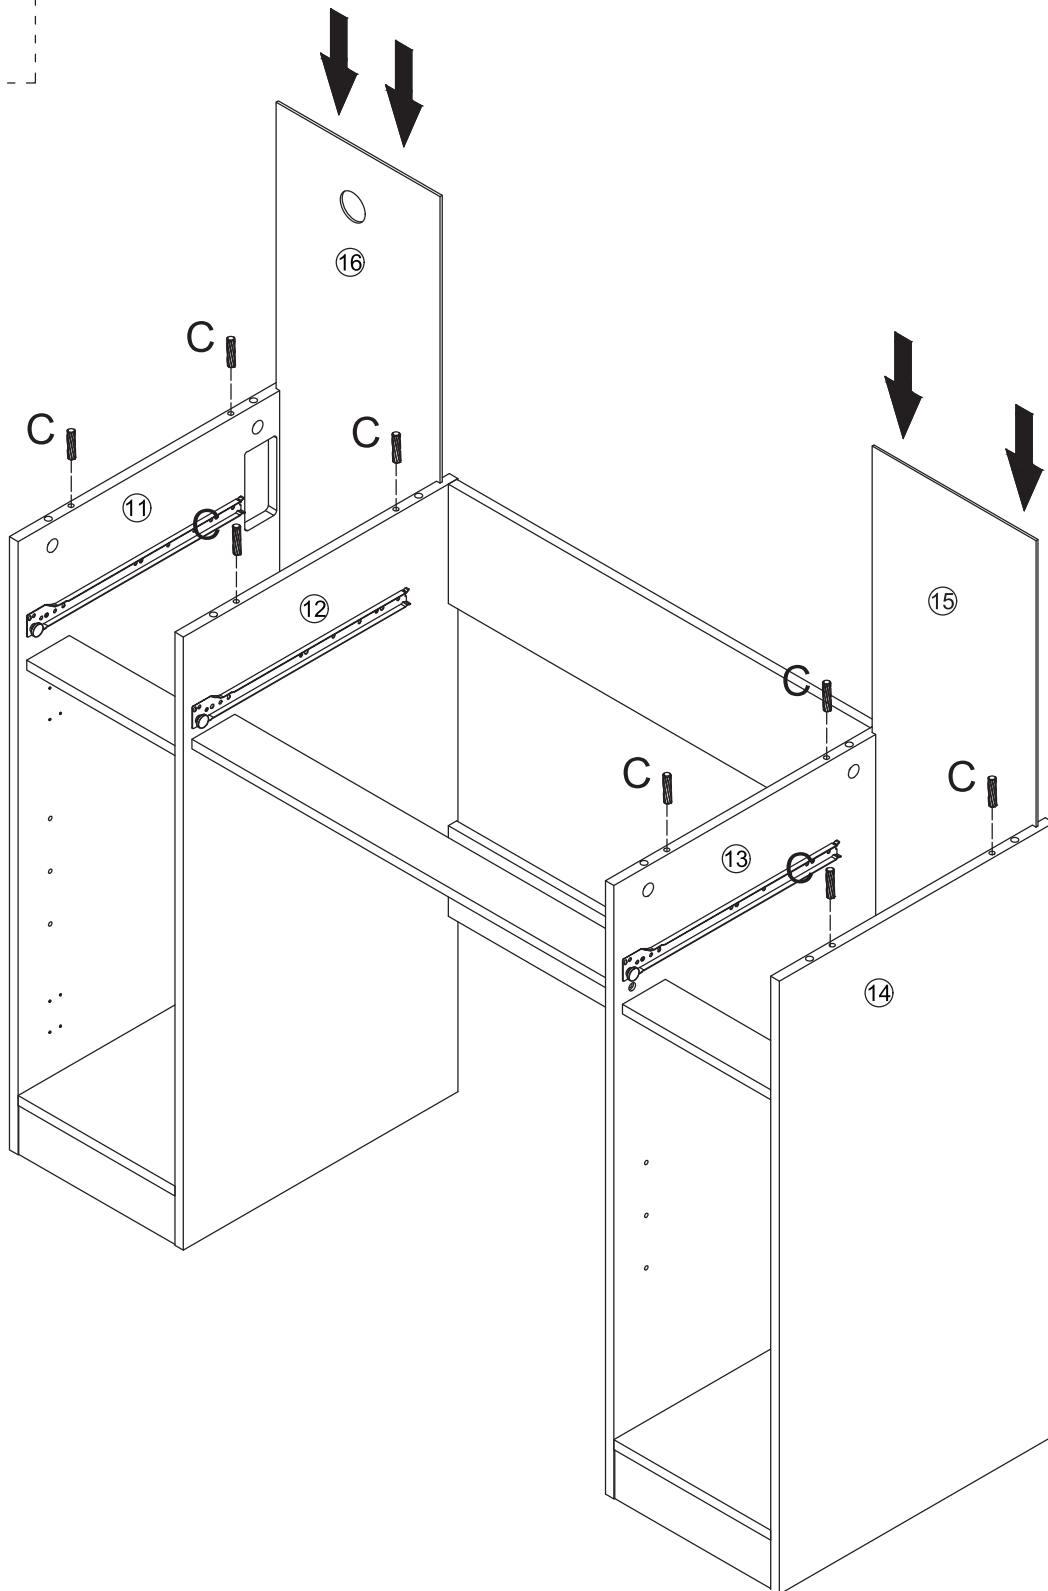




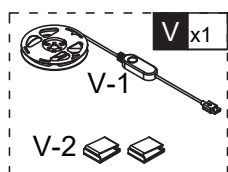


- (1) Firstly, move the cabinet to the designated location as shown in the picture, tear off the adhesive on the back of the accessory (V-2), and then stick the accessory (V-2) to the front left and right ends of the tabletop of board 10 as shown in the picture, with the opening direction facing outward.

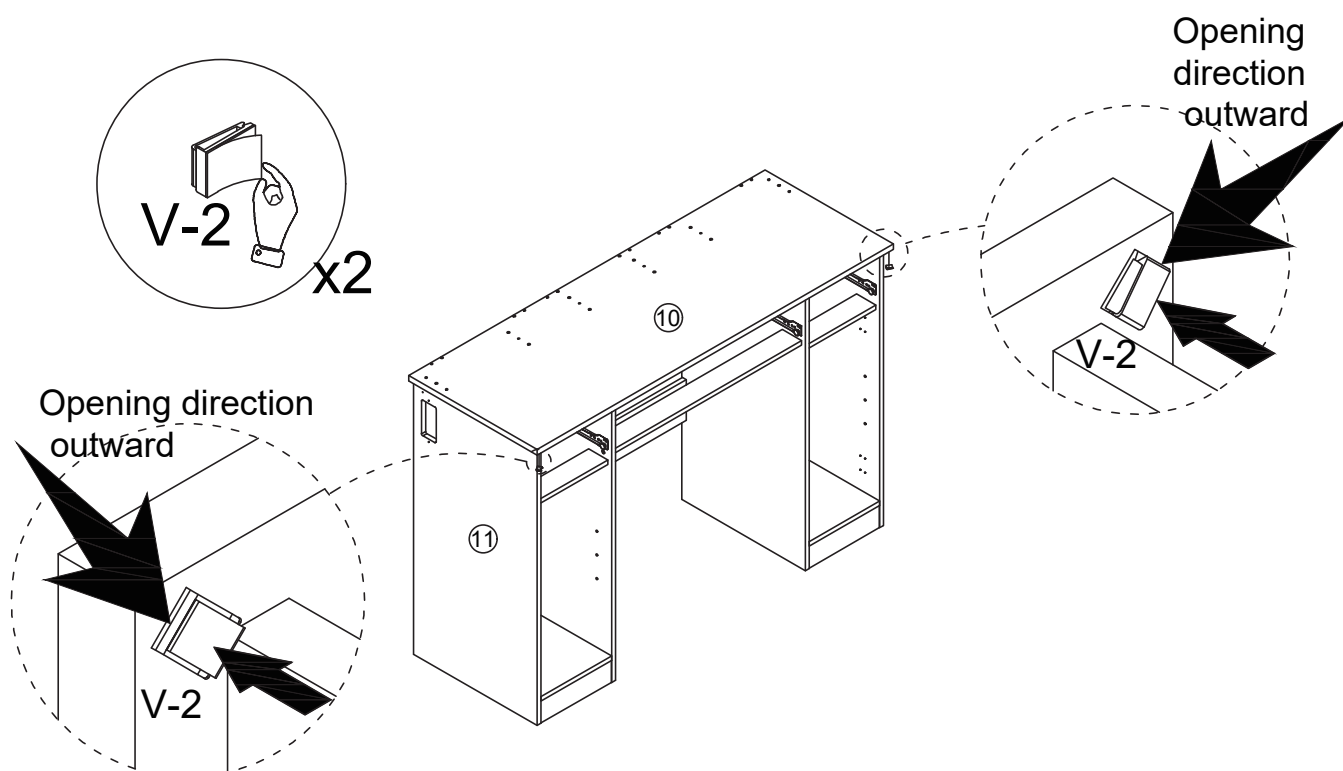


- (2) Please unfold the light strip (V-1), and then peel off a small piece of adhesive from the back of in the middle of the light strip.

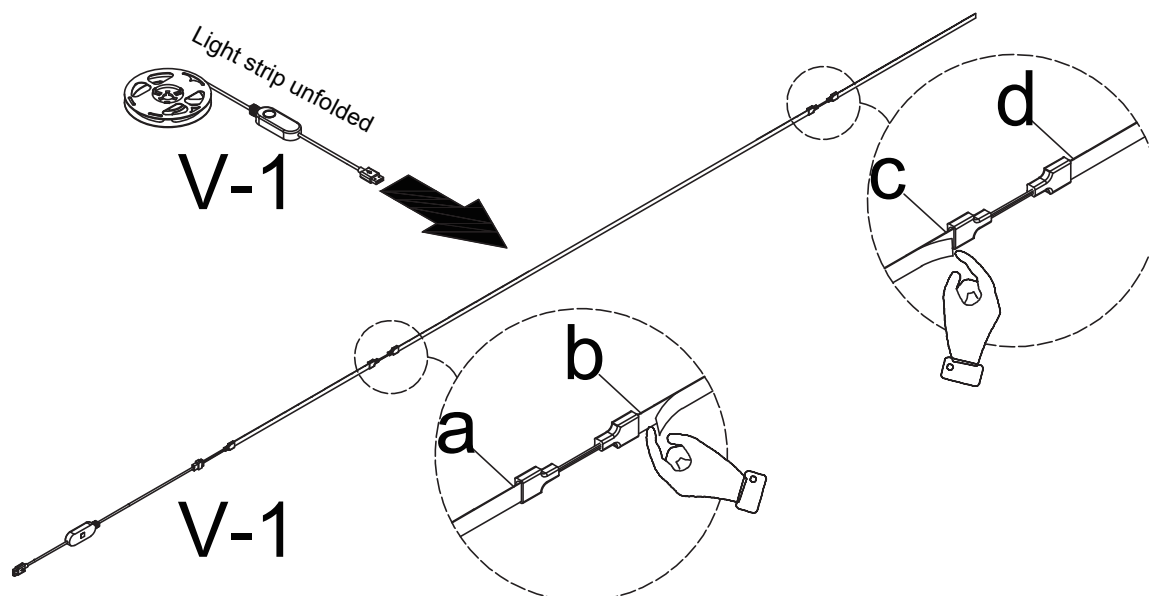

- (3) Please place the light wire between the "a" and "d" ends on the left side as shown in the diagram into accessory (V-2), and then peel off the adhesive on the light strip (V-1) to the right and stick it to board 10. When it reaches the right accessory (V-2), place the light wire between the "c" and "d" ends into accessory (V-2) as shown in the diagram.

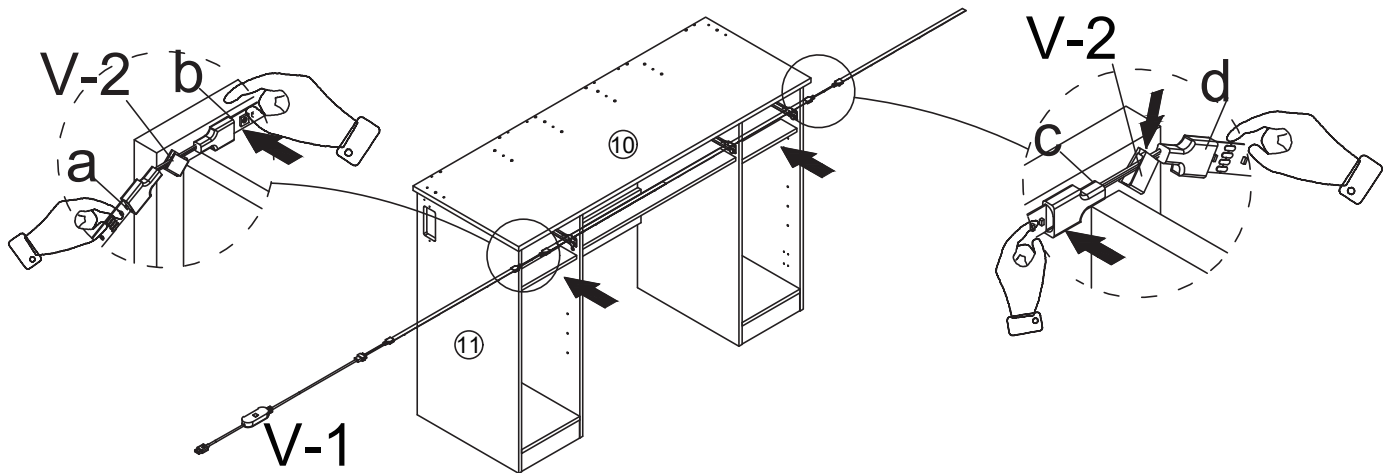


- (4) Finally, tear off the adhesive backing of the left and right light strips and paste the light strip "V-1" onto the left and right ends of board 10.



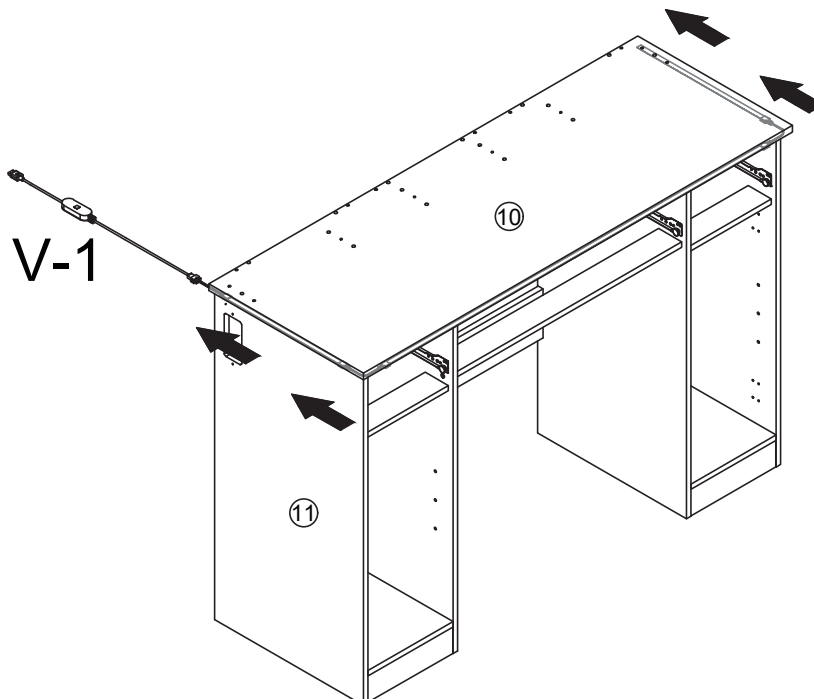









D x4





Q x4

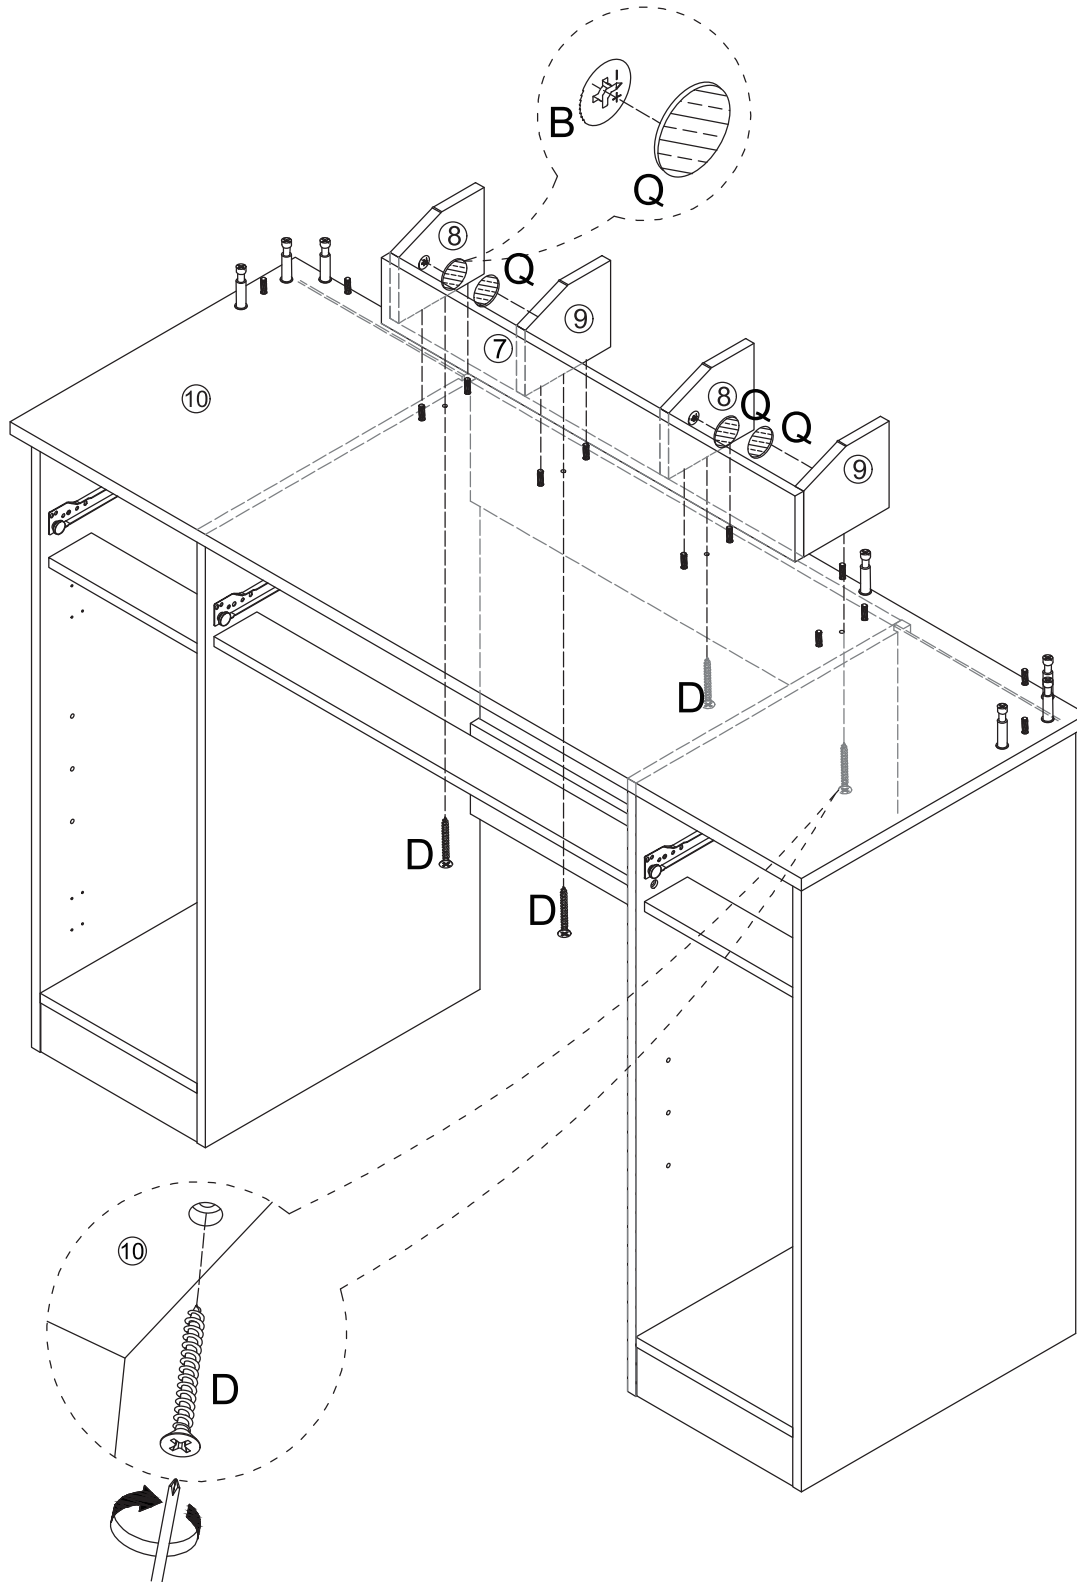


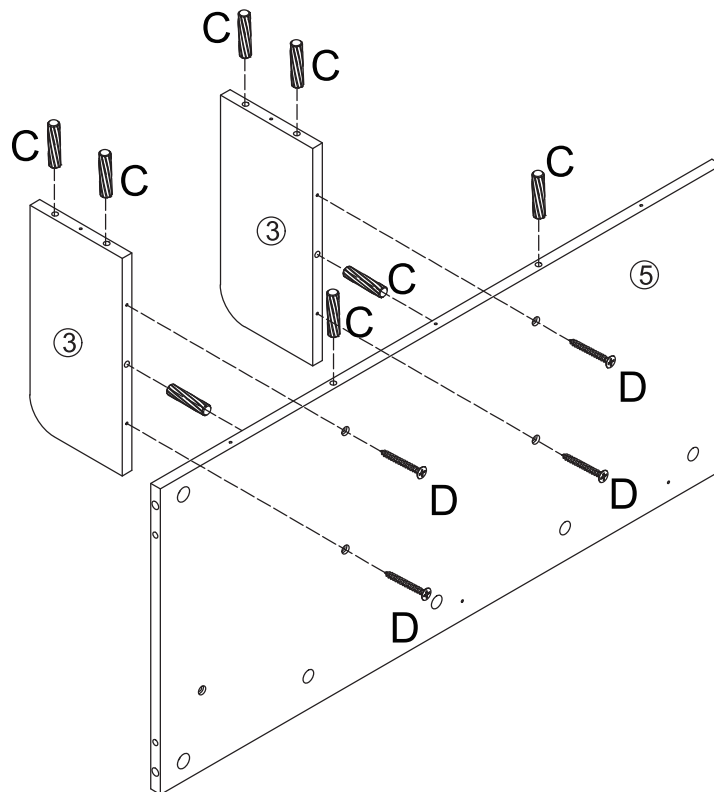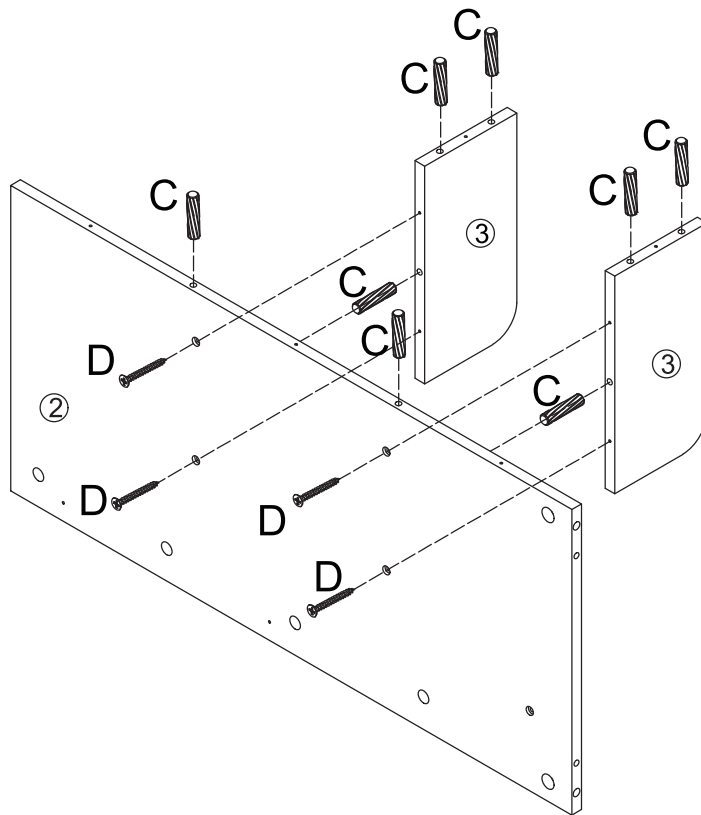
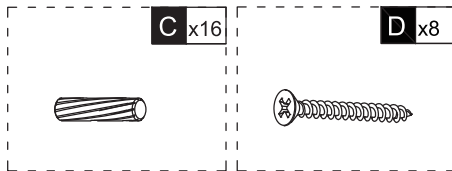


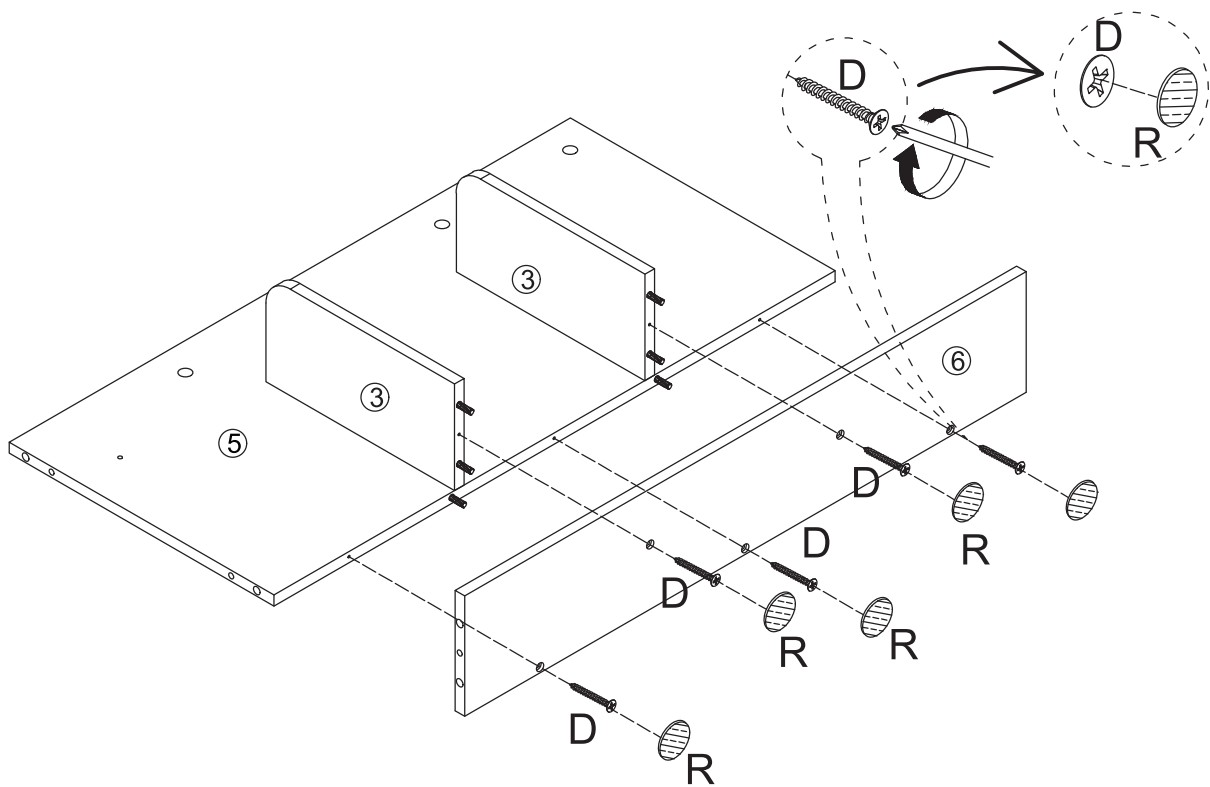
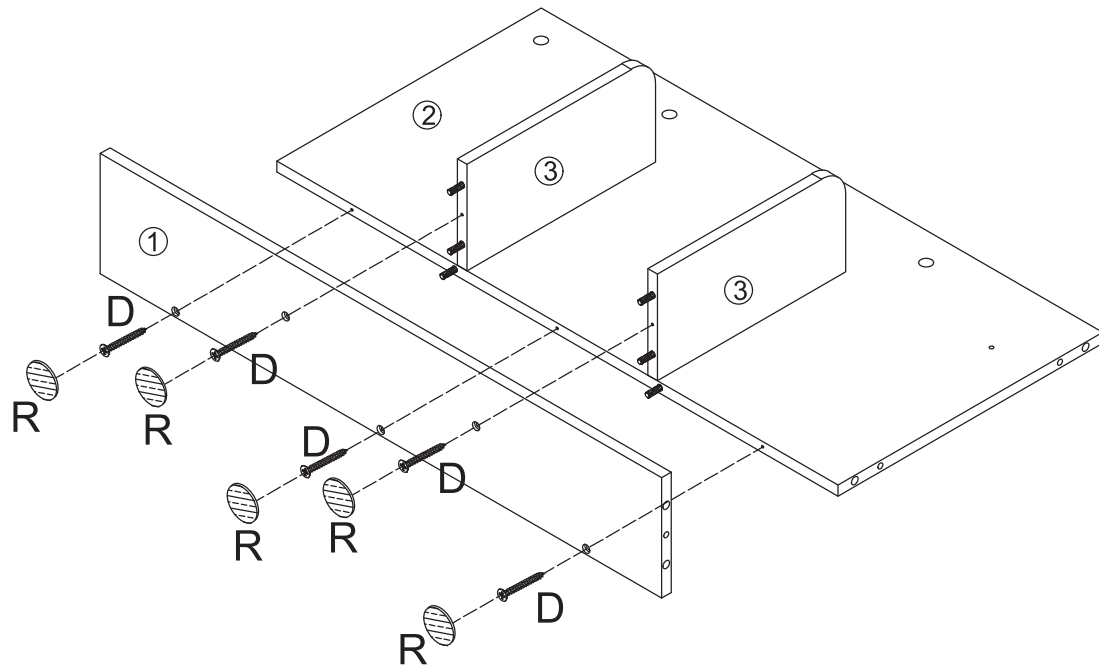
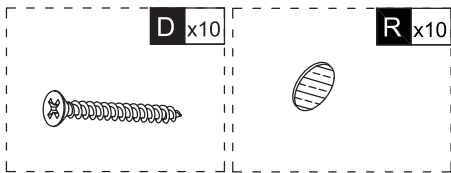



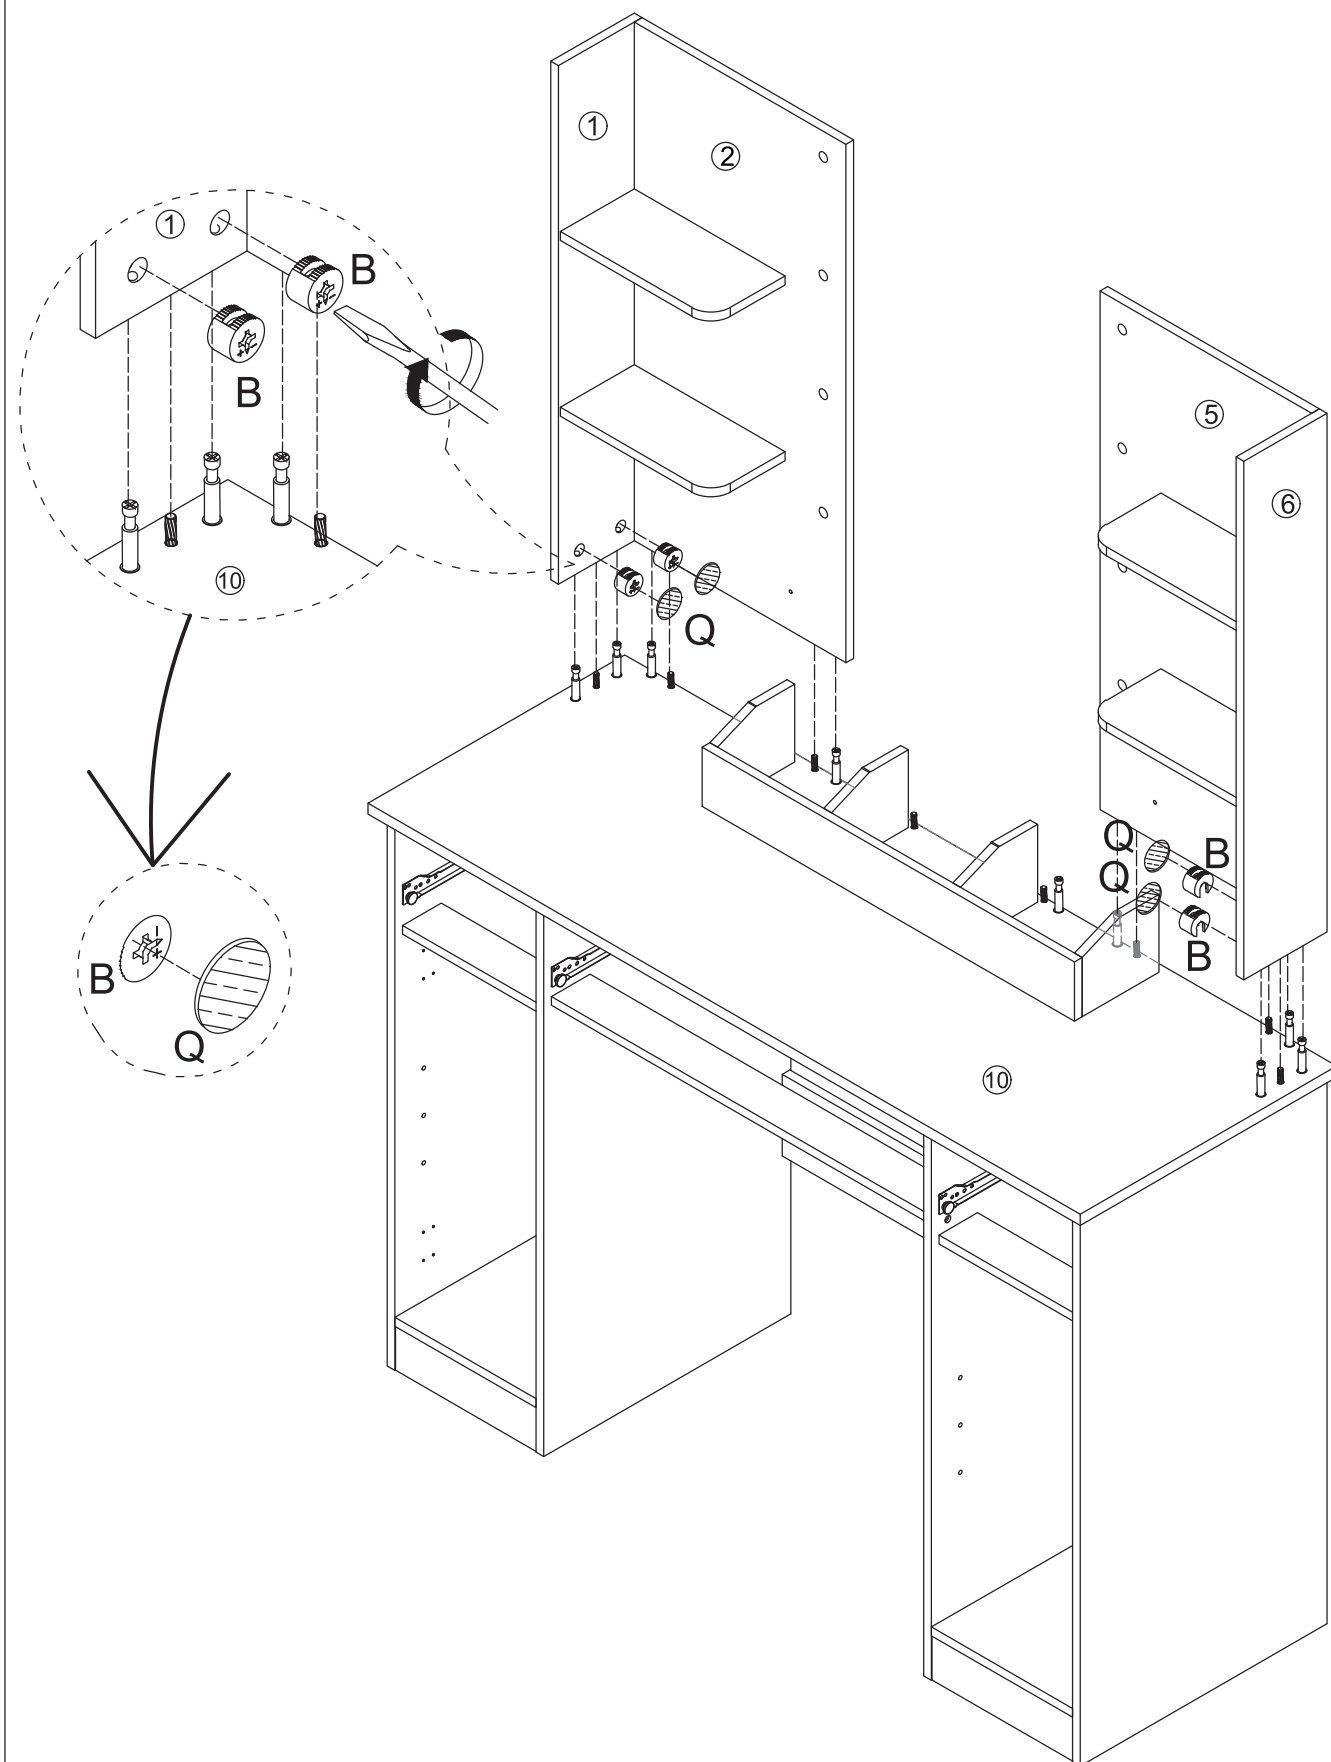
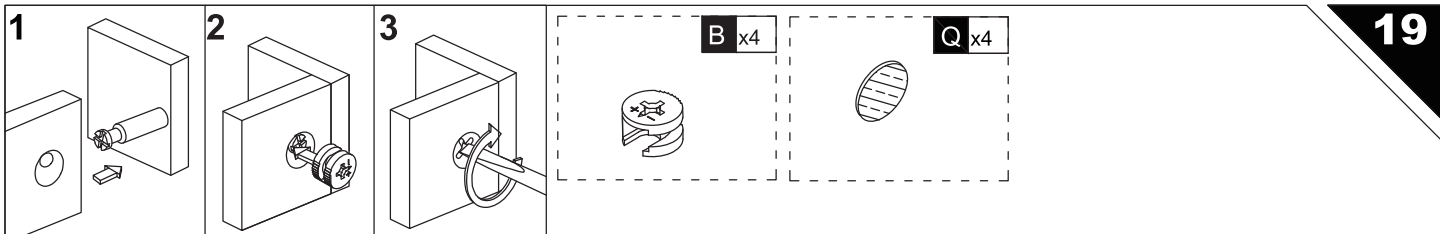


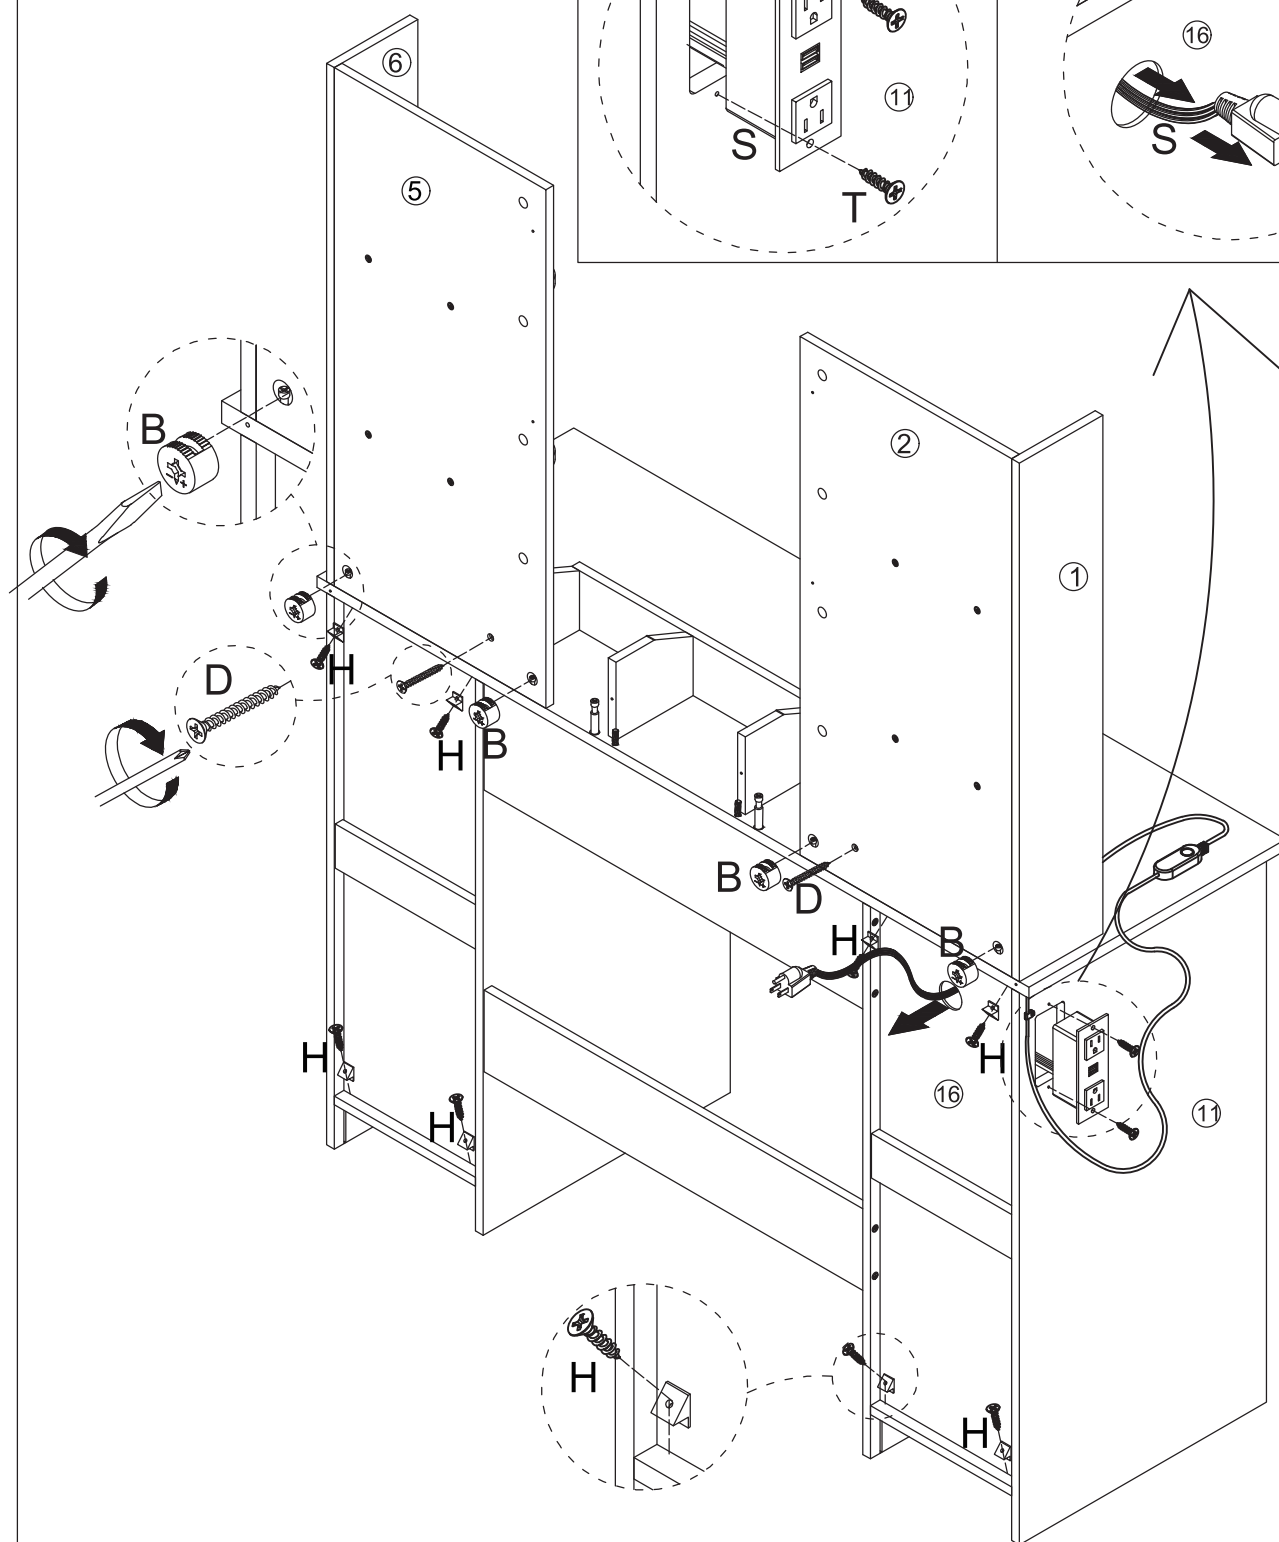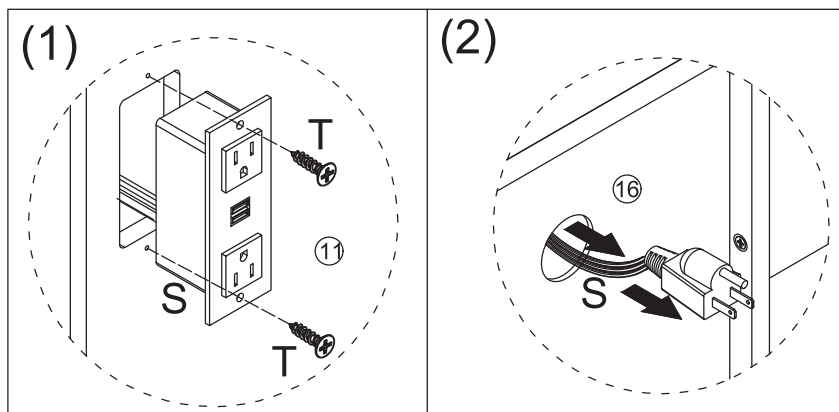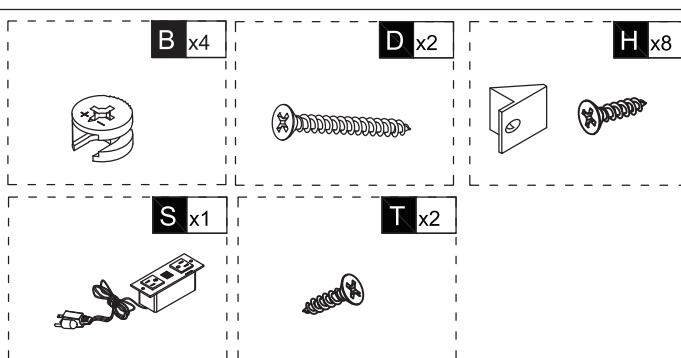
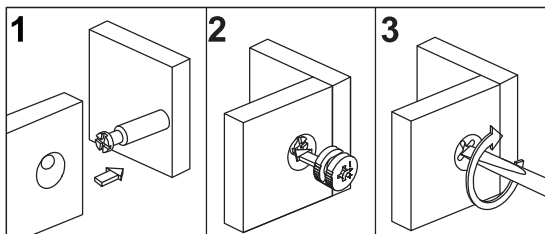


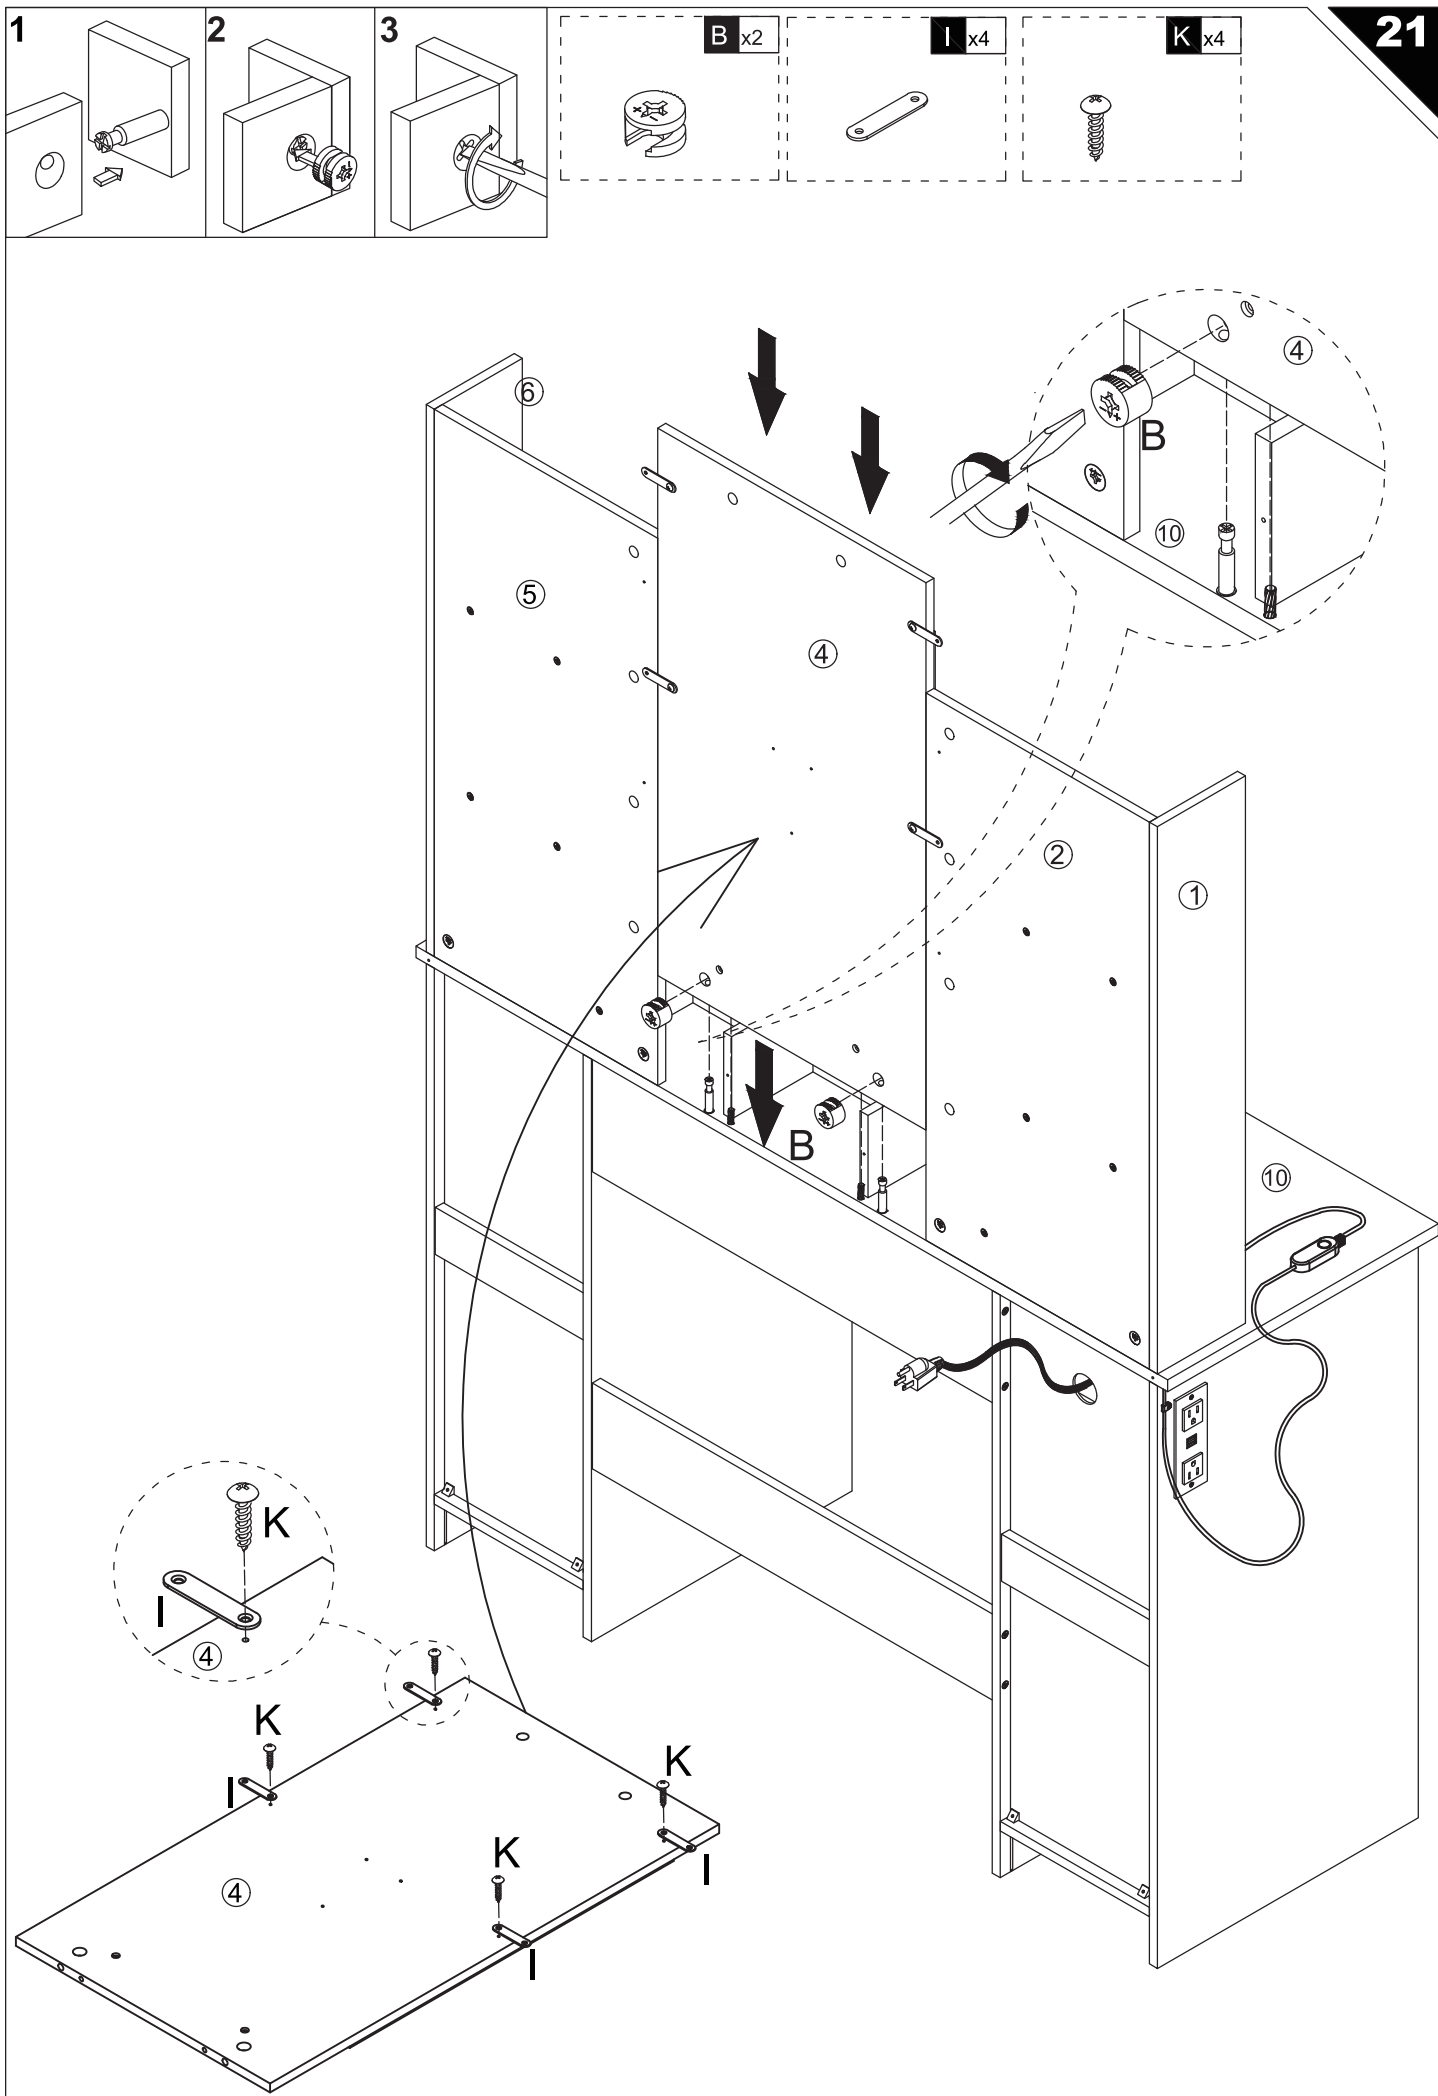


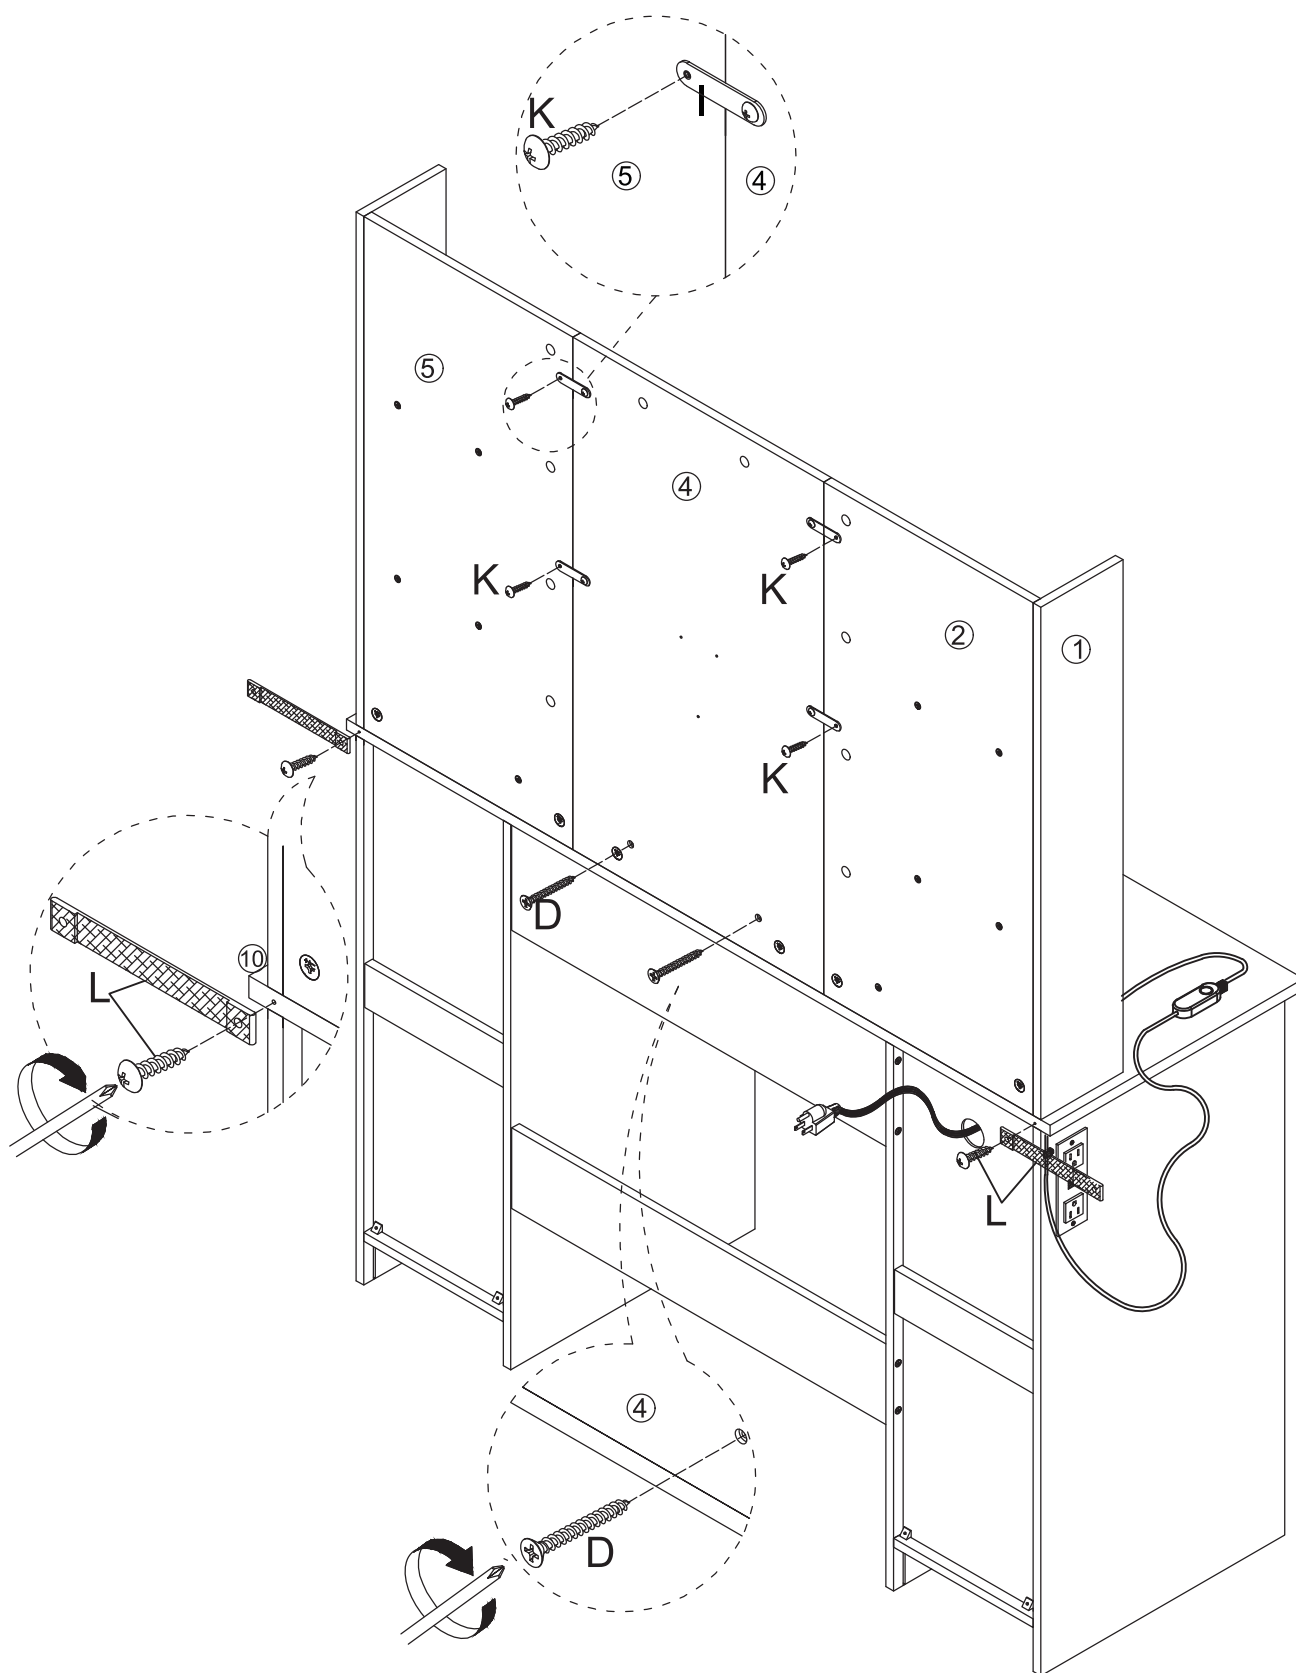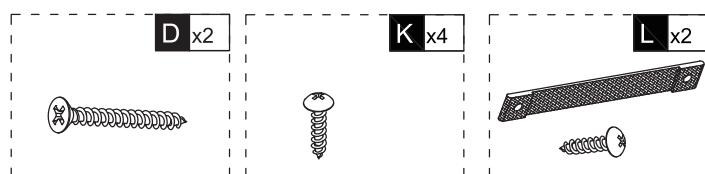

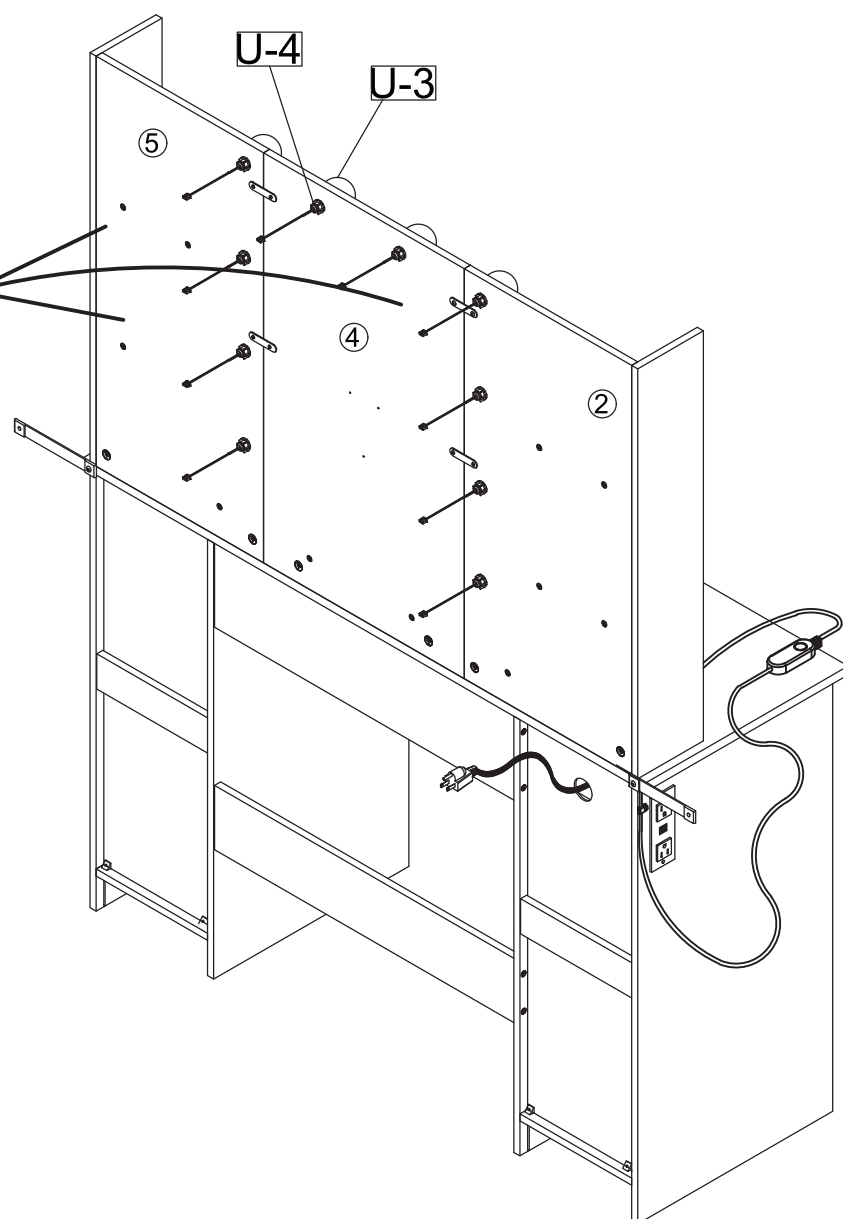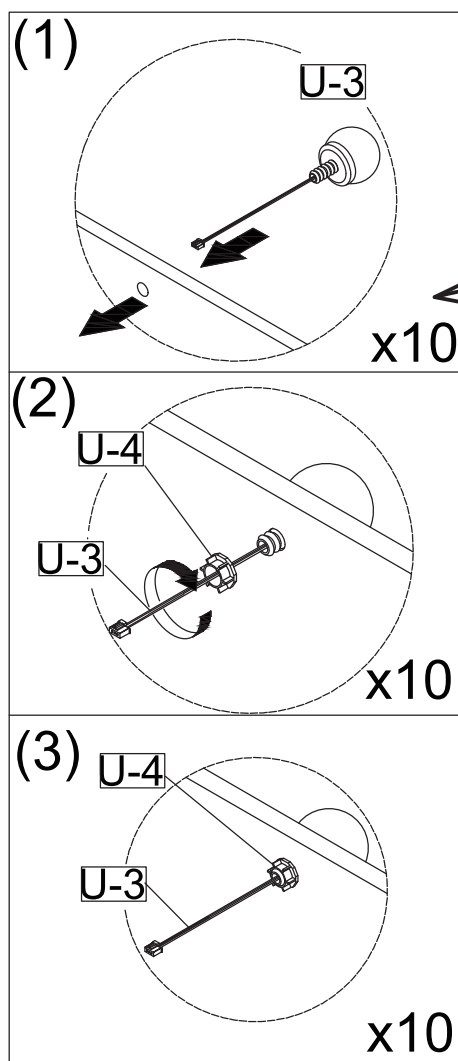
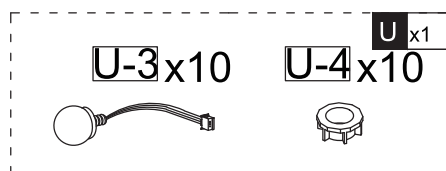


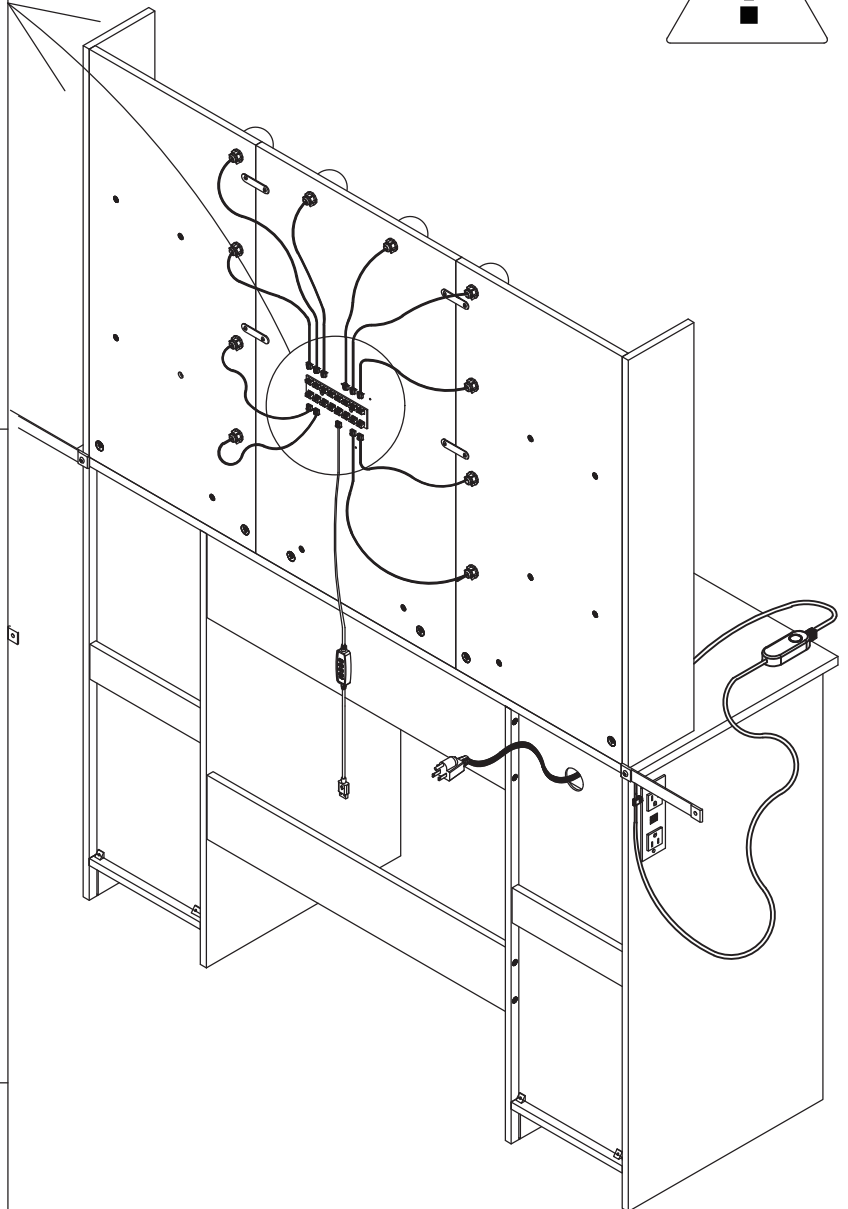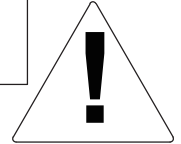

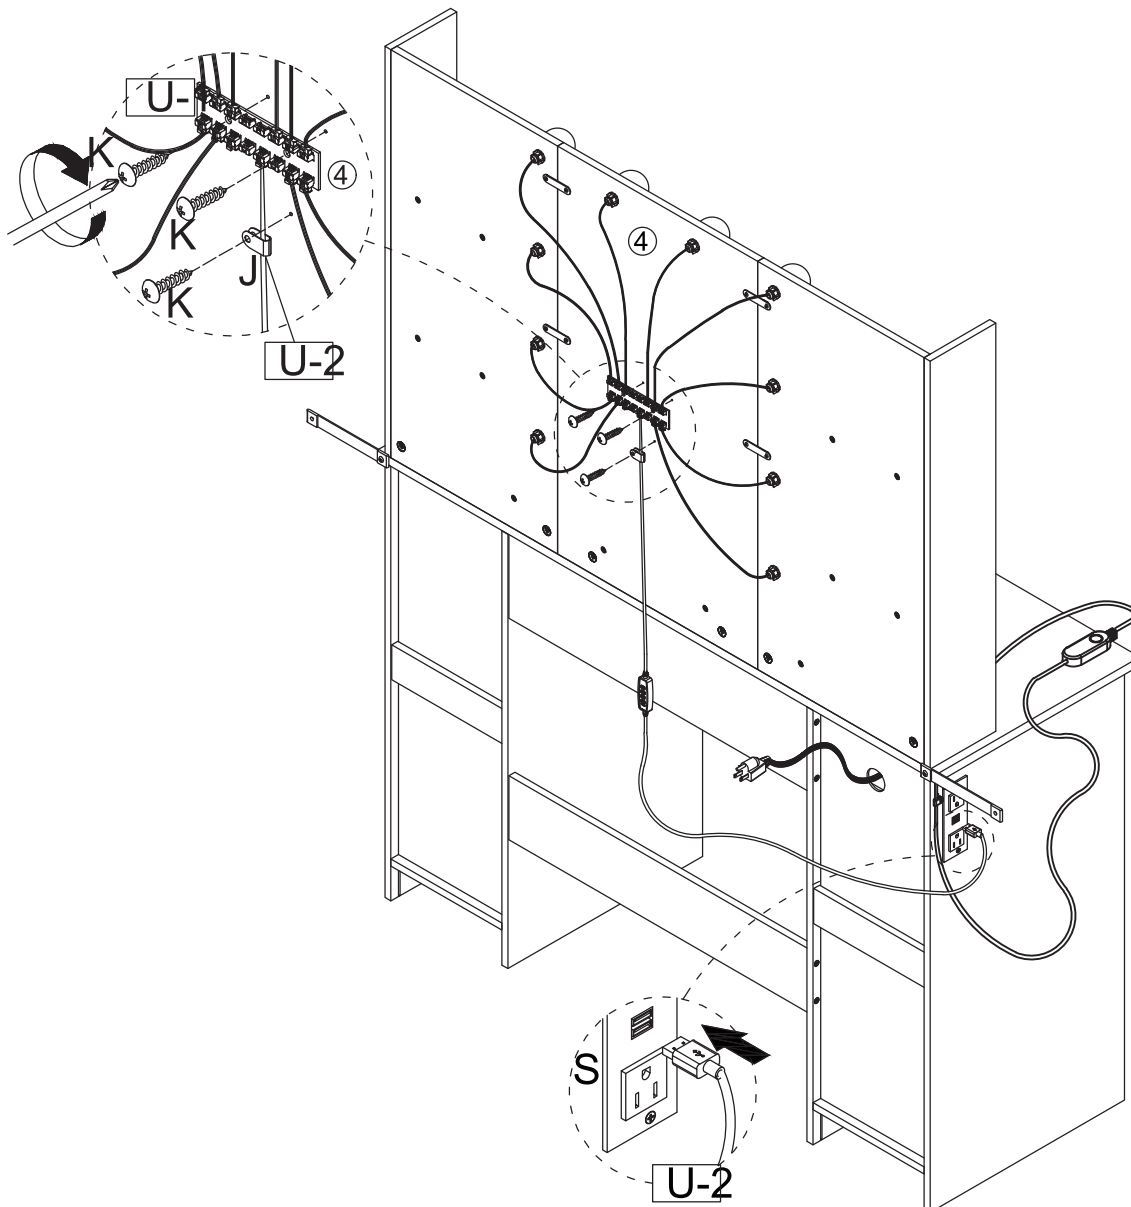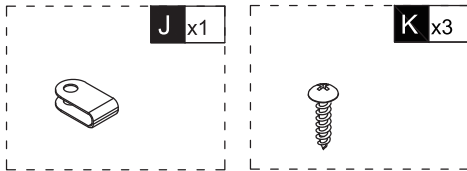

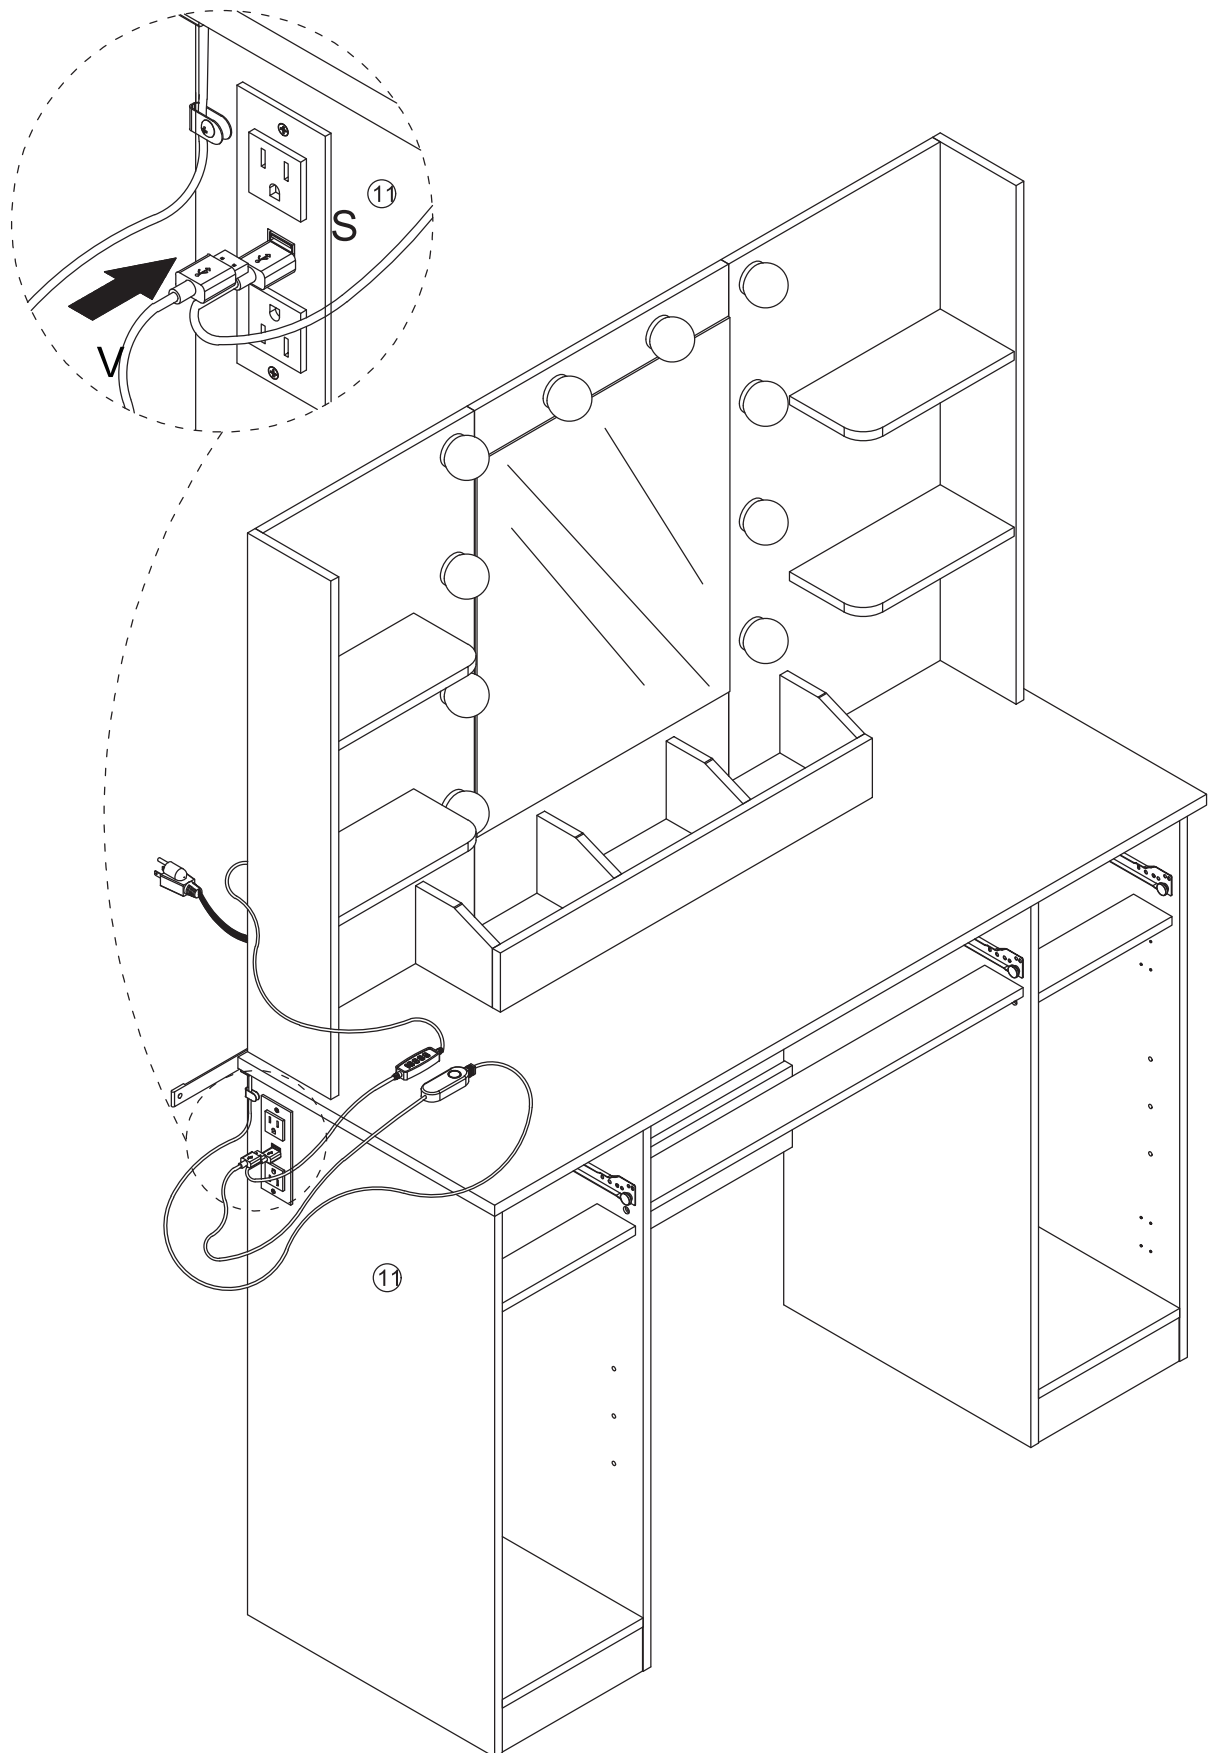

D x8

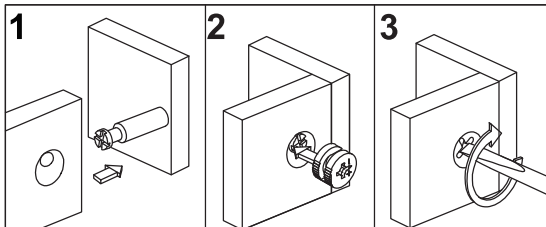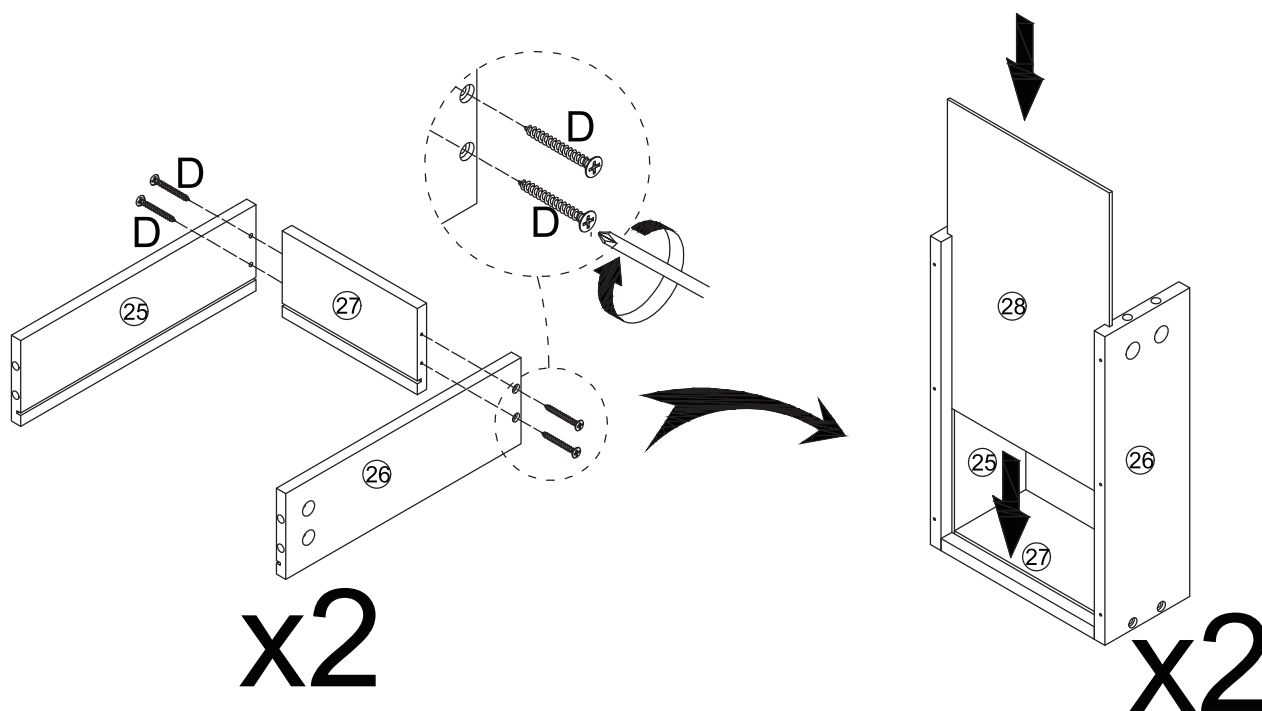


A x8



B x8






F x2

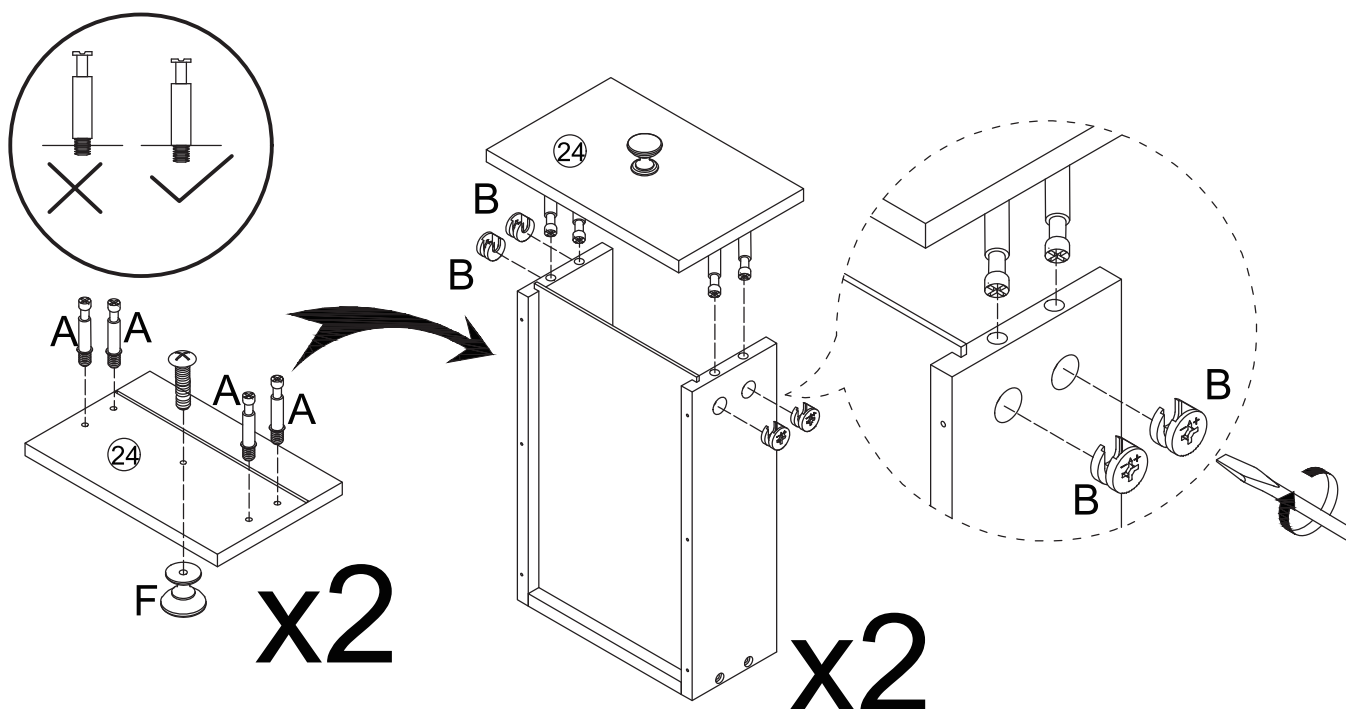

E x12


DL x2



DR x2

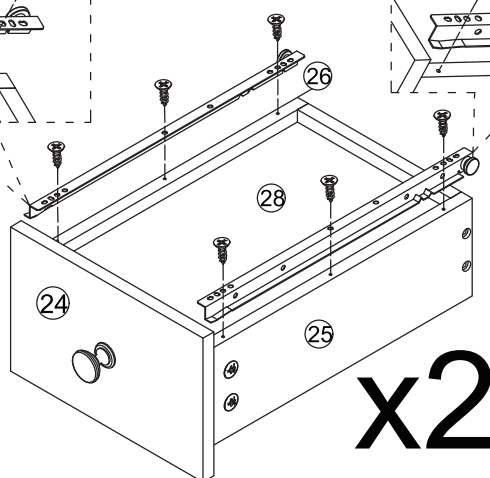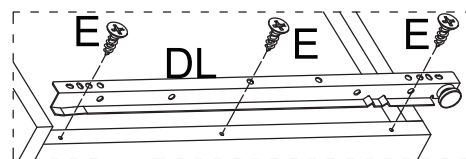
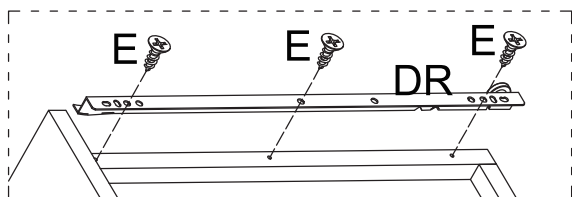



x2



D x5



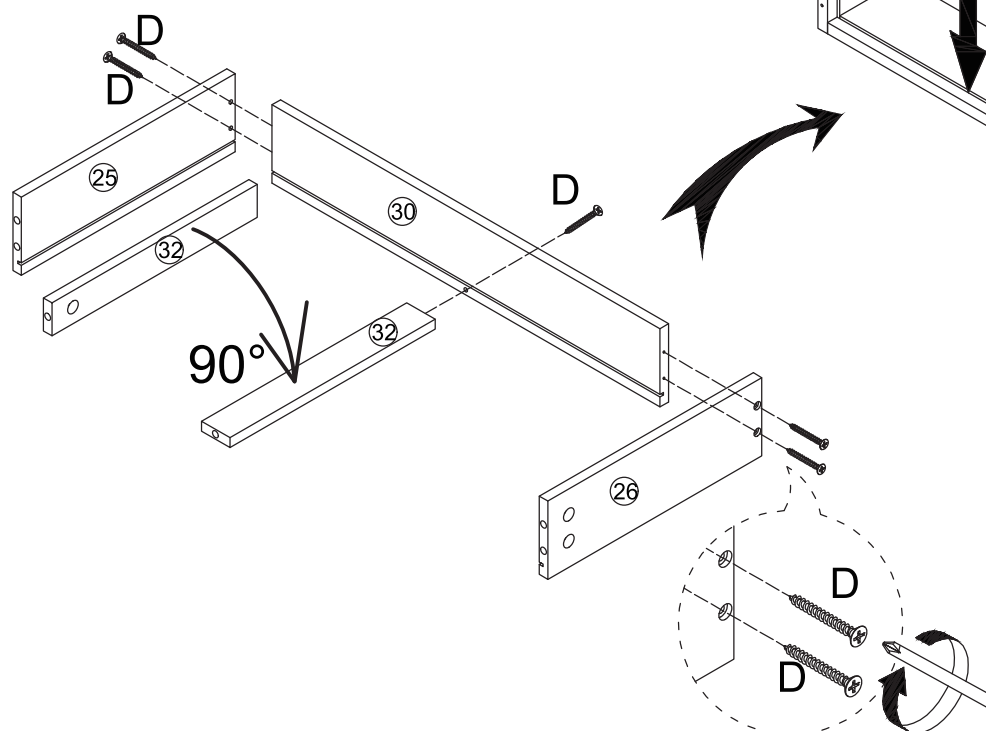


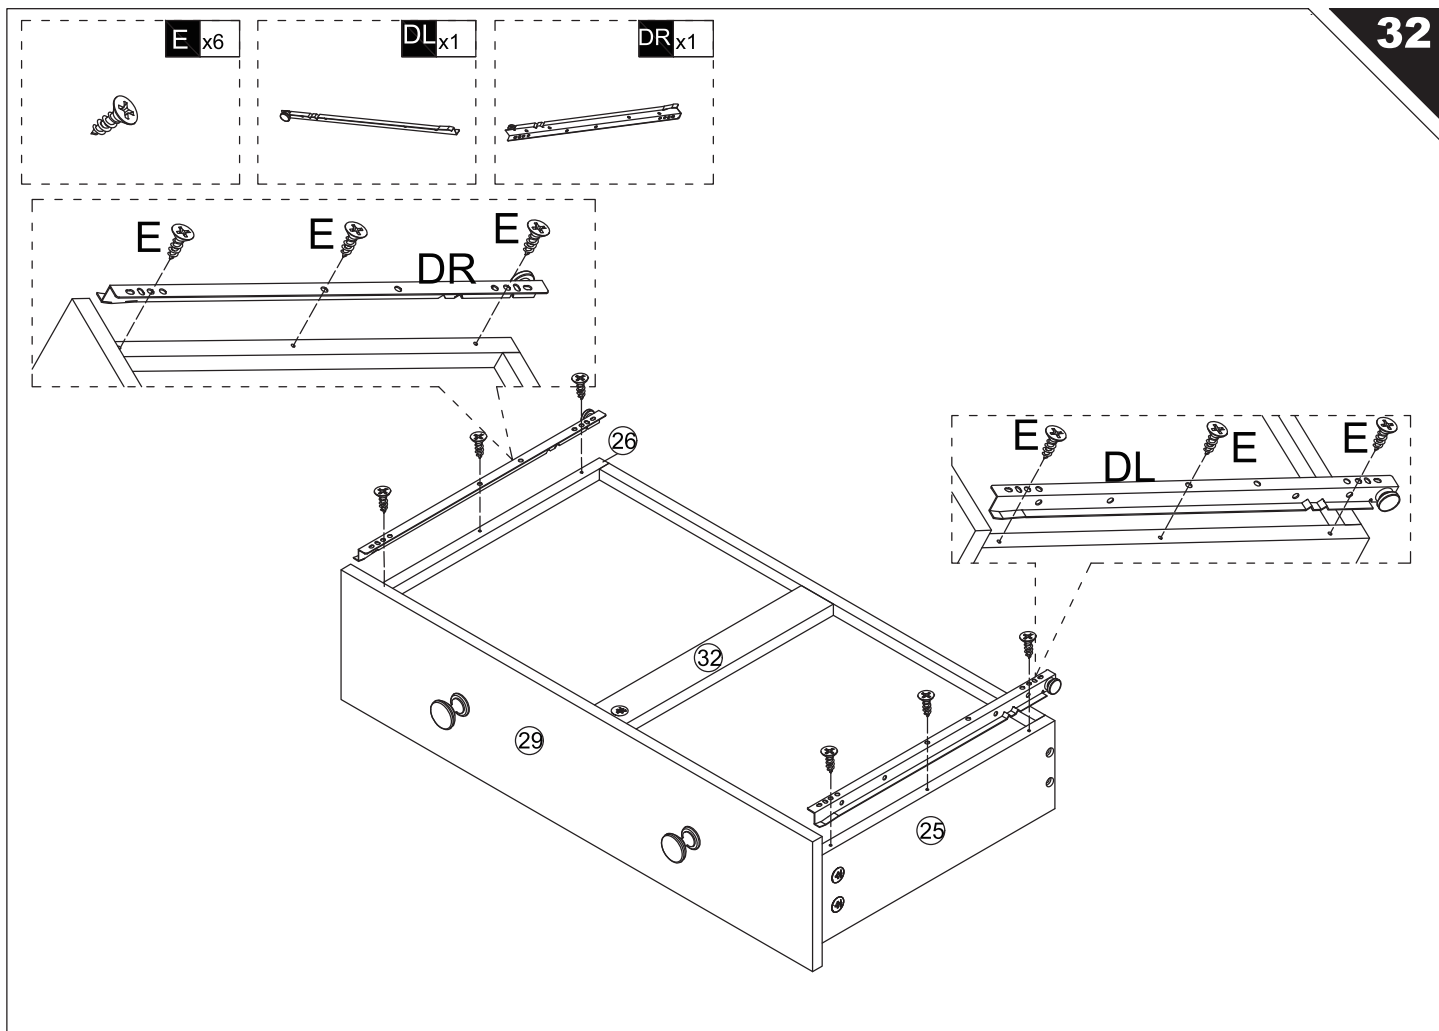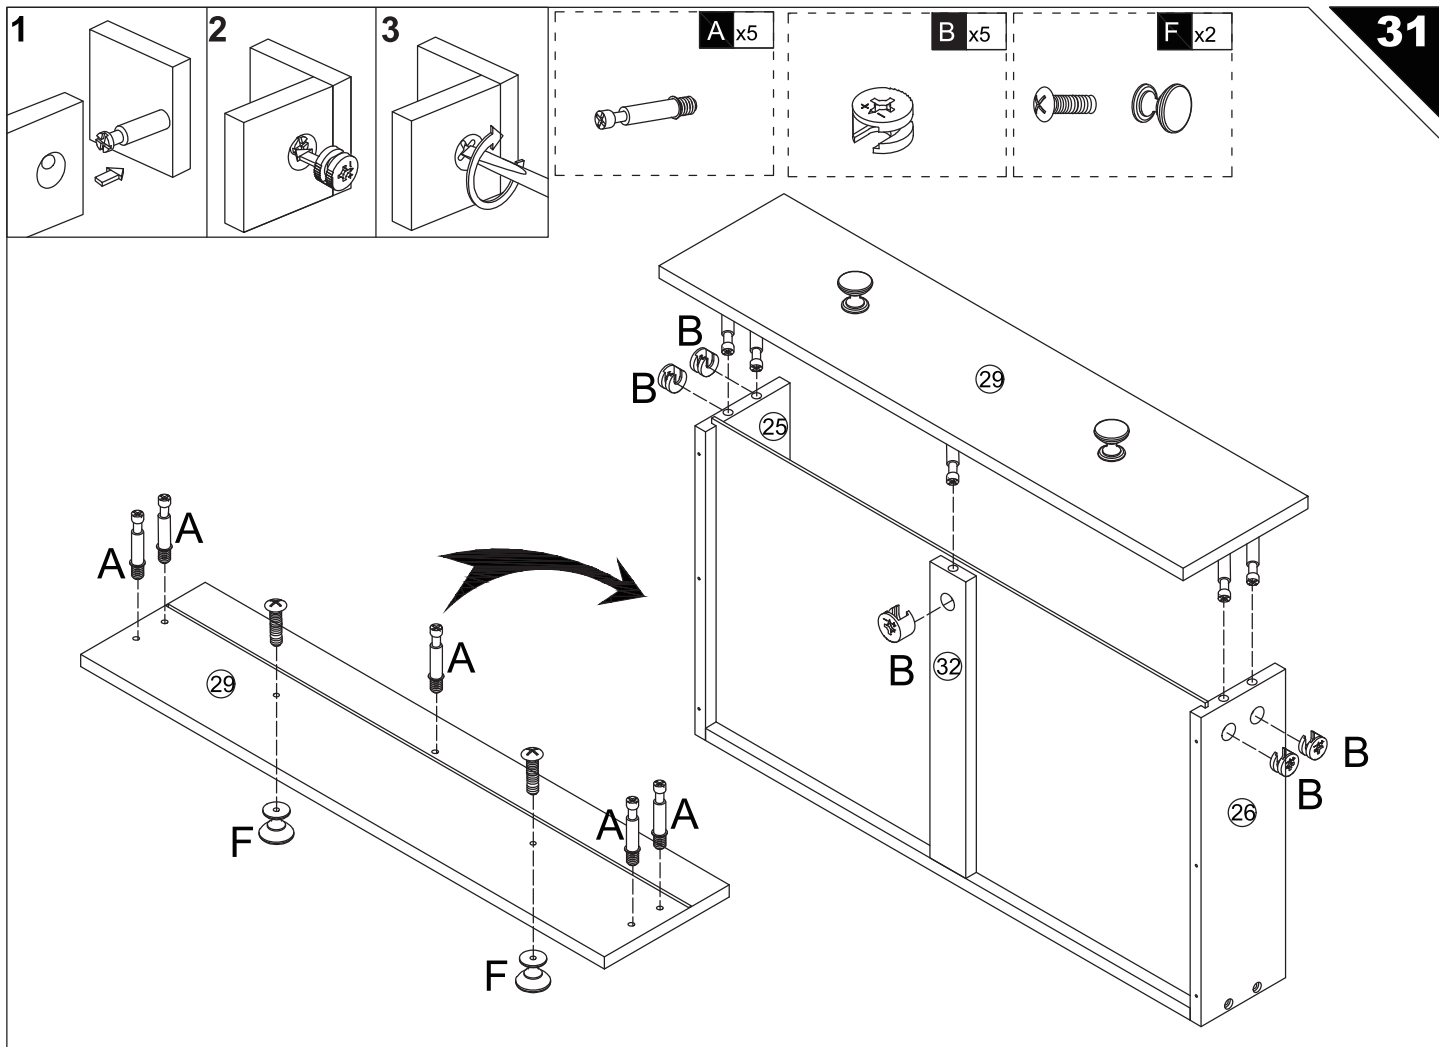

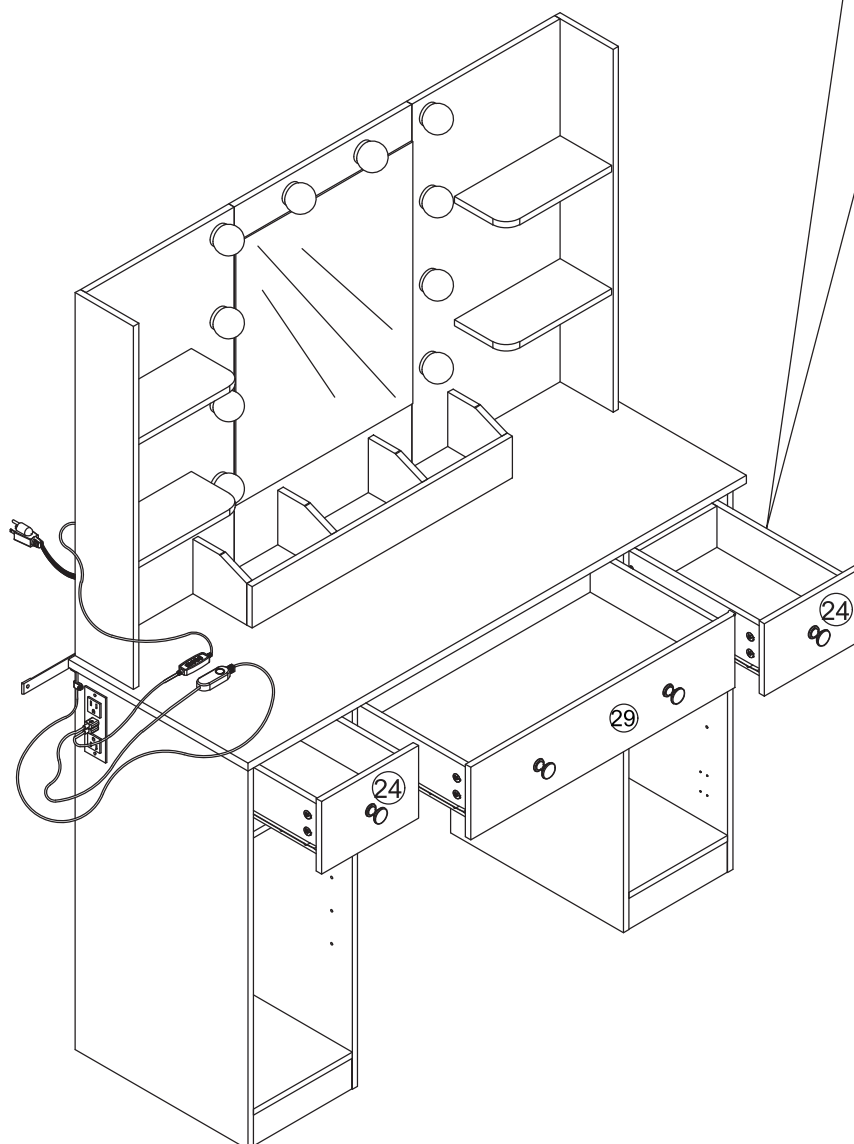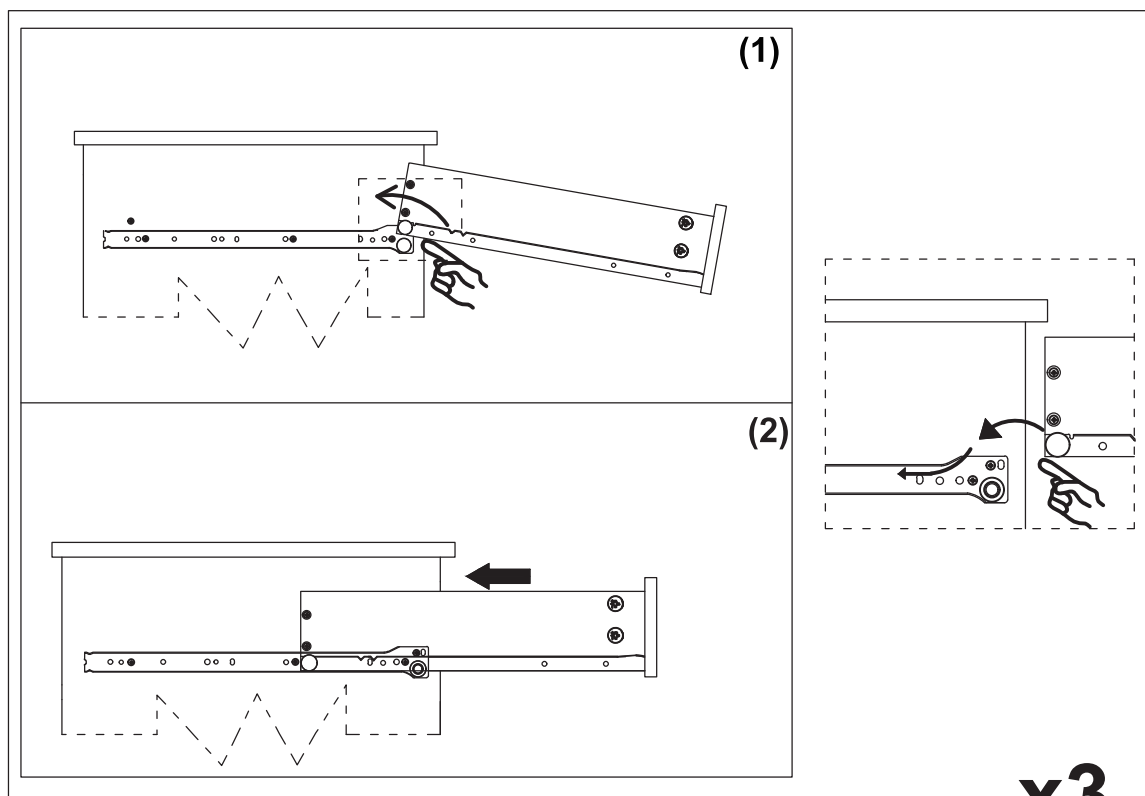




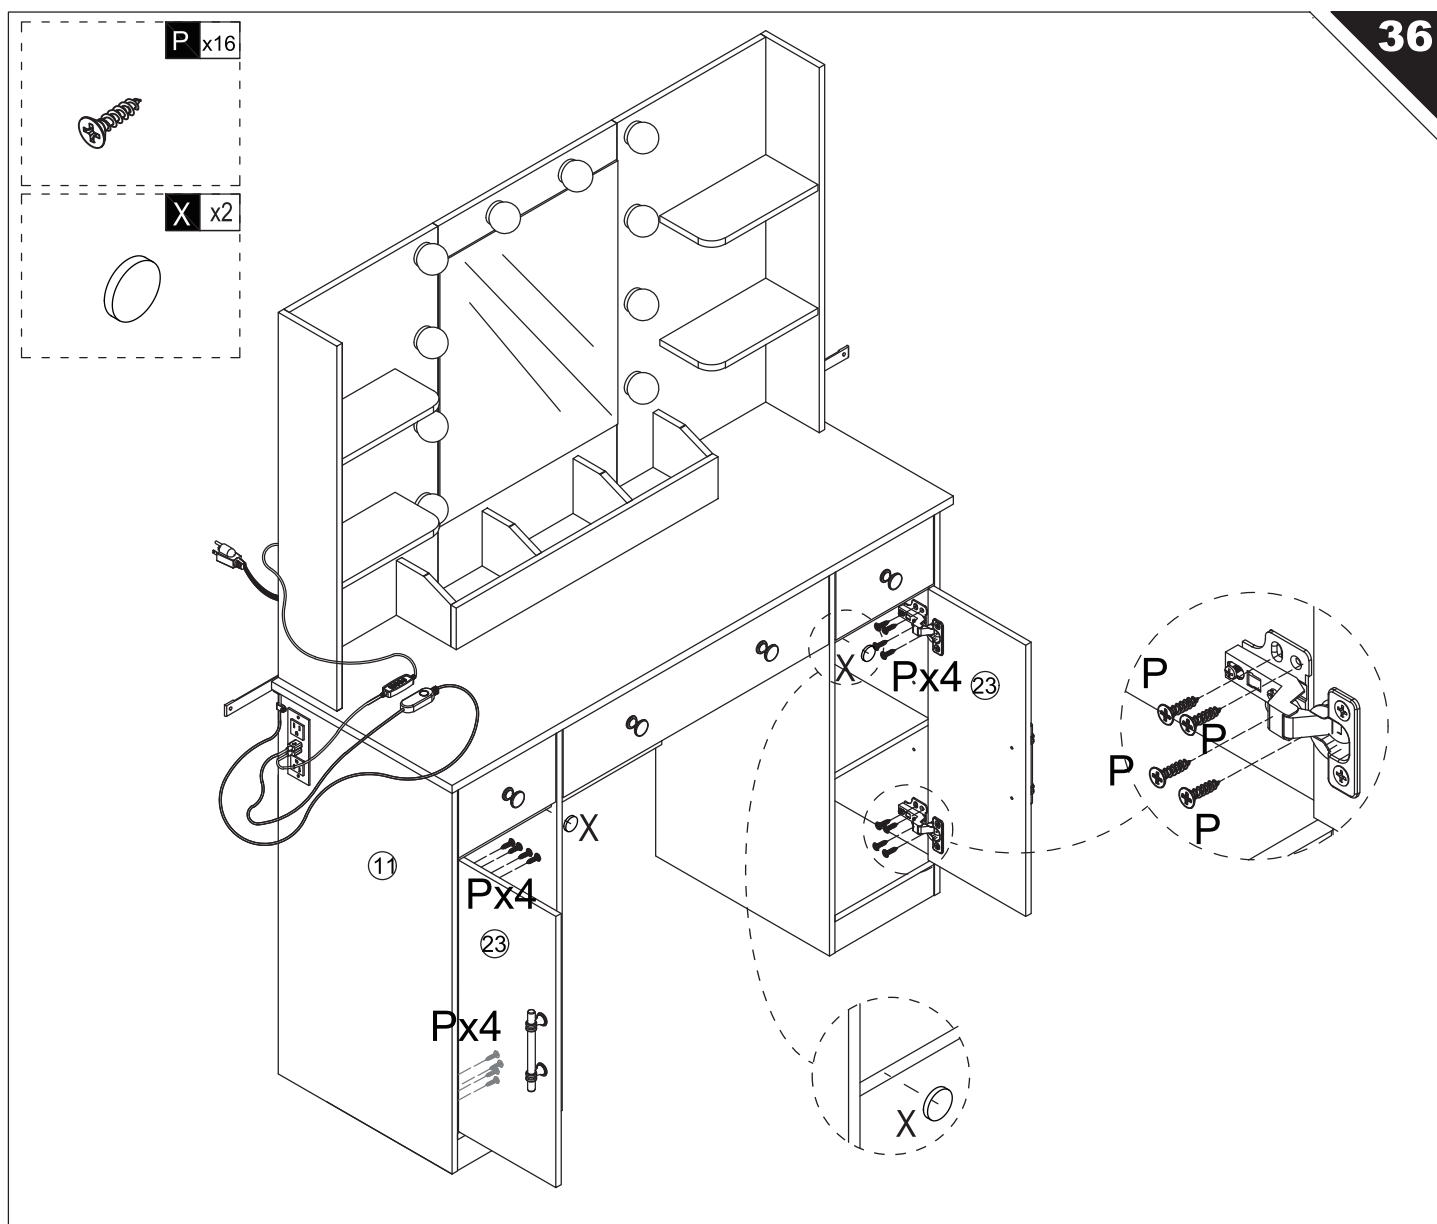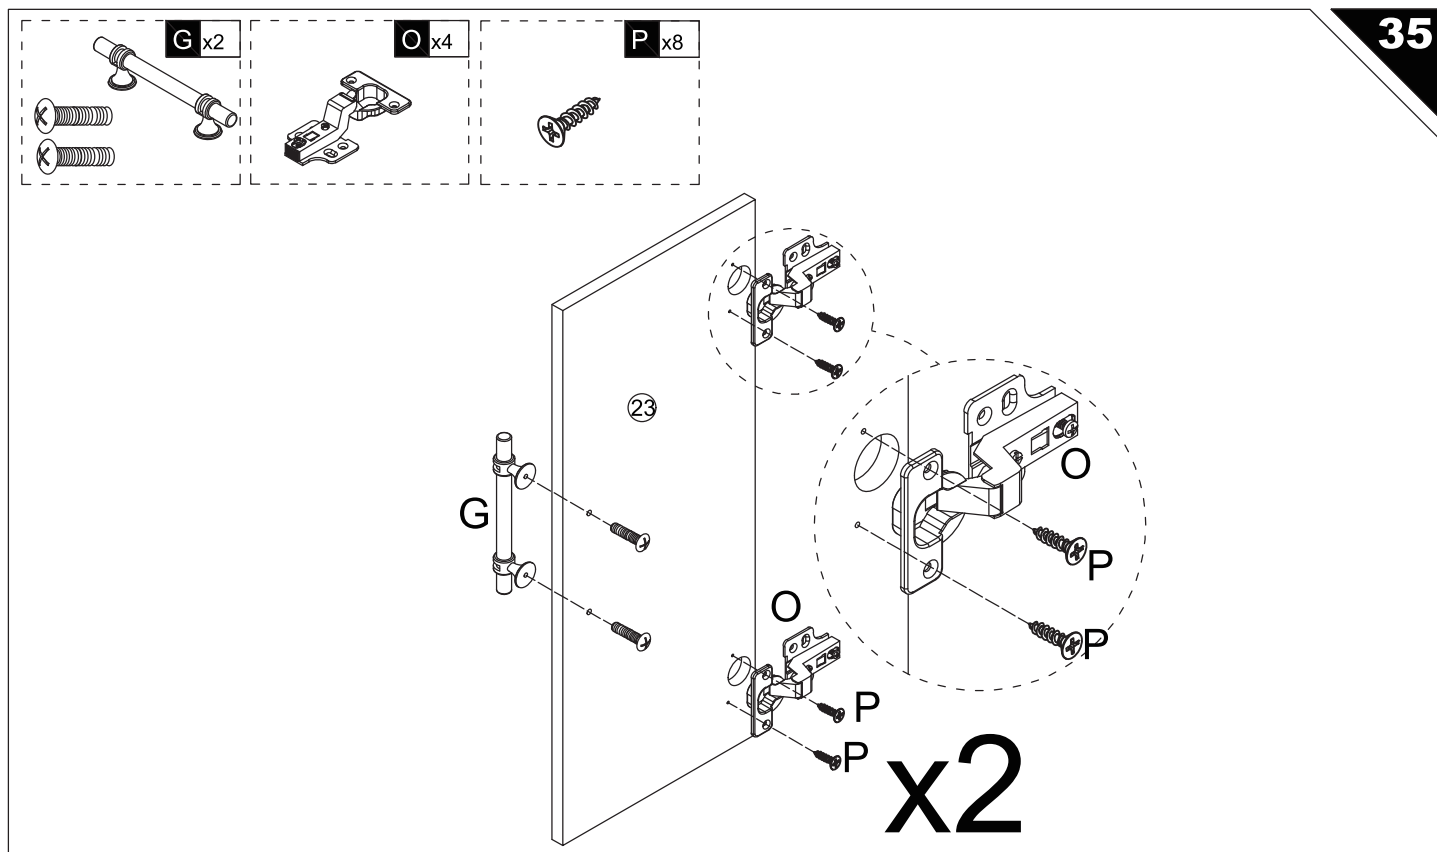

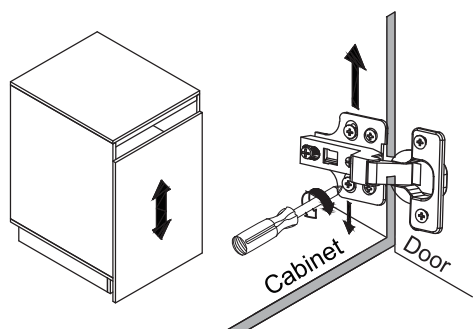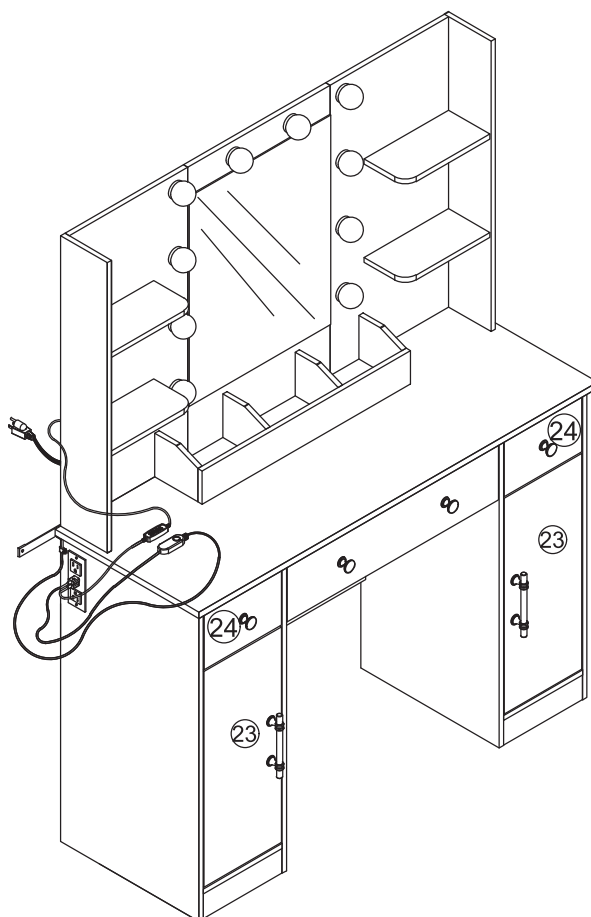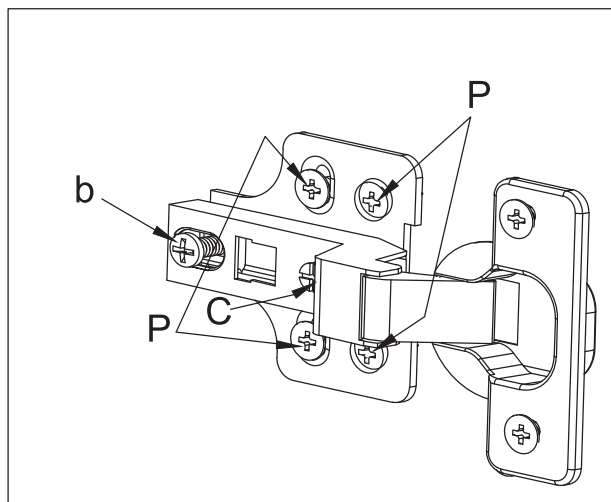


To adjust the vertical height.

Loosen the four screws "p" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

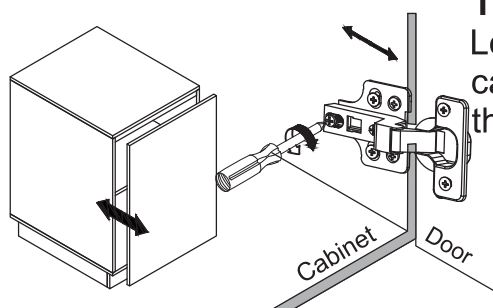

To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

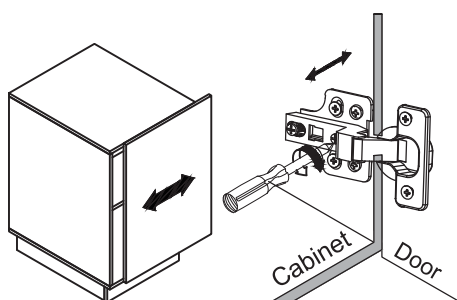

To adjust side ways.

Turning the screw "c" on BOTH hinges on each door.


D x2

M x2



WALL

I x2

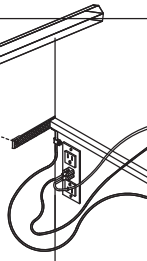

WALL +

drilling hole
Ø6x30mm


II x2



WALL

M


III x2

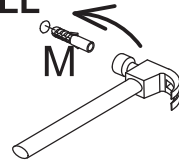

WALL

switch

U-2



Power supply

M L

D


M

D

Scan QR code to download
APP controller

V

OR

Flip to the other side to
find the control button

V



WALL

