

Assembly Instruction

Accent Cabinet




Assembly Instruction

WARNING:

- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- DO NOT use power tools.
- DO NOT over-tighten hardware.
- Periodically check all hardware and re-tighten as necessary.
- DO NOT use product if any component becomes damaged.
- For residential (non-commercial) use only.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80lbs for the tabletop and 30lbs for the shelf, evenly distributed.

Parts List


Check all parts before assembly

A. <u>Table top</u>  *1	B. <u>Front Panel</u>  *1	C. <u>Side Panel</u>  *1	D. <u>Side Panel</u>  *1
E. <u>Back panel</u>  *1	F. <u>Side Panel</u>  *1	G. <u>Shelf</u>  *1	H. <u>Drawer front</u>  *1
I. <u>Drawer left panel</u>  *1	J. <u>Drawer right panel</u>  *1	K. <u>Drawer bottom</u>  *1	L. <u>Drawer back panel</u>  *1
			M. <u>Leg</u>  *4


H1.Hex bolt  *8(+1 extra)	H2. Washer  *8(+1 extra)	H3. Screw(short)  *2(+1 extra)	H4. Drawer stop  *2
H5. Bolt  *4 (+1 extra)	H6. Screw  *4 (+1 extra)	H7. Screw(long)  *4(+1 extra)	H8. Foot pad  *4
H9. Allen Key  *1	H10. Spanner  *1	H11. Shelf pin  *4	

Step 1:Put the Tabletop (A) on a soft surface to protect the finish.

Attach Back panel (E)&Front panel (B) to the Top (A) with Hex bolts (H1)& Washers (H2) using Allen key (H9). Ensure the Back panel (E)&Front panel (B) alined with the groove on Top(A). **Leave hardware loose in this step.**

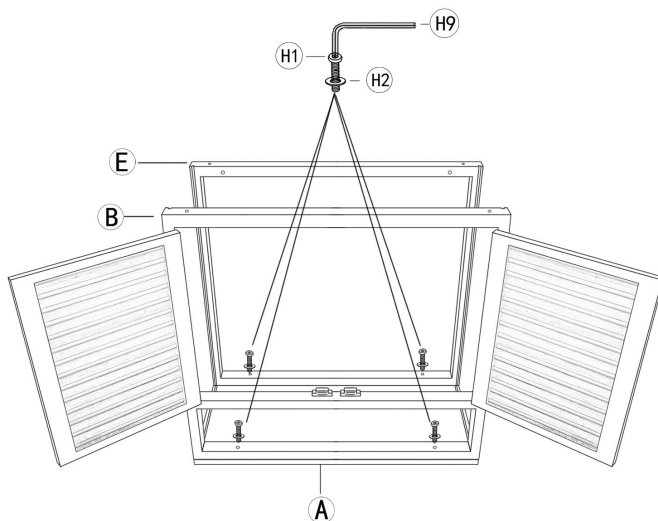


Step 2: Insert the Side panels (C&D) as shown below. Ensure the side panel (C&D) aligned with Groove on the Back panel (E)&Front panel (B)


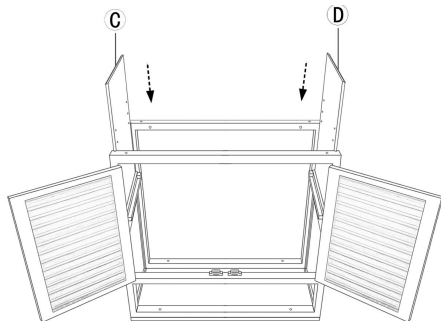


Step 3: Attach the Bottom panel (F) with Hex bolts (H1) and Washers (H2) by Allen key (H9) as shown in picture below.


Fully tighten all bolts from Step 1 to 4.

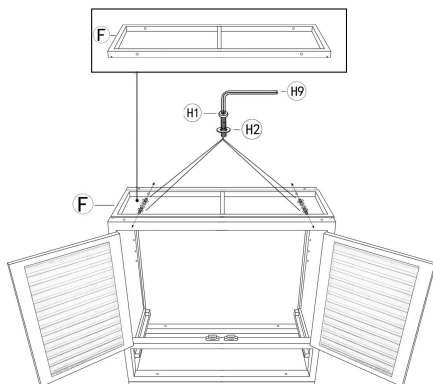

Step 4: Insert the threaded end of the Legs (M) into the body and turn it clockwise to tighten. Attach the Foot pads (H8) to the bottom of all Legs.

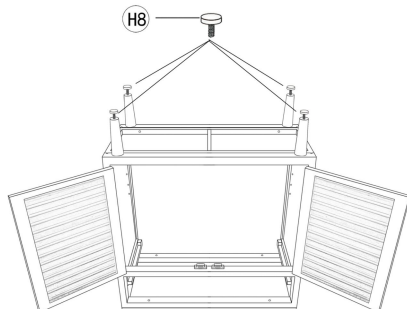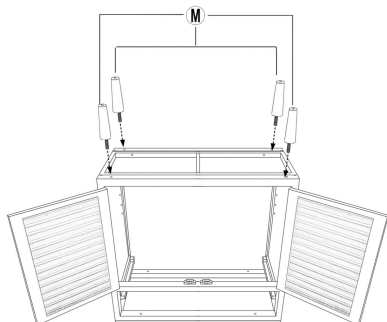


Step 5: Open the doors, insert the Metal tab (H11) into the holes. Place the Shelf (G) inside as shown in picture below. (Each side panel with 6 adjustable holes.)

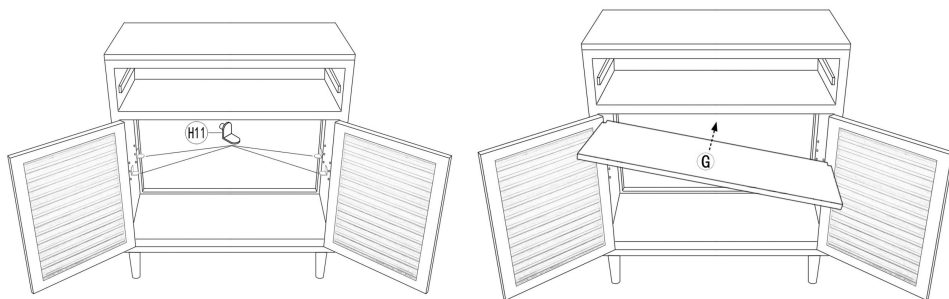

Step 6: Place the Drawer front (H) on soft surface to protect the finish.

1. Attach the Drawer stop (H4) on the Drawer Side panel (I&J) with Screw(H3) by Spanner (H10).
2. Attach the Drawer left&right panel (I&J) on the Drawer front (H) with Bolt (H5)&screw(H6) by Spanner (H10).
3. Insert the Drawer bottom panel (K) to the left&right panel (I&J).
4. Attach the Drawer Back Panel (L) with Screw (H7) by Spanner (H10)

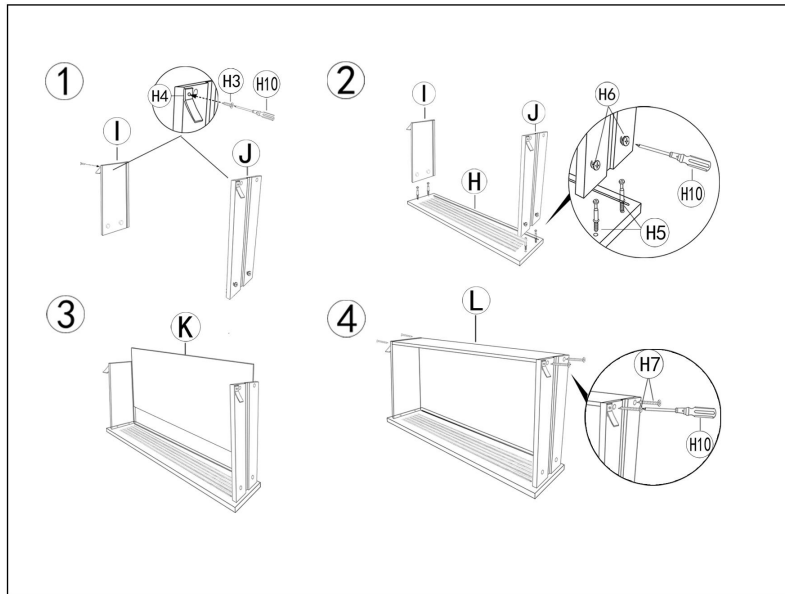

Assembly finished.

