


Vanity Assembly Instructions




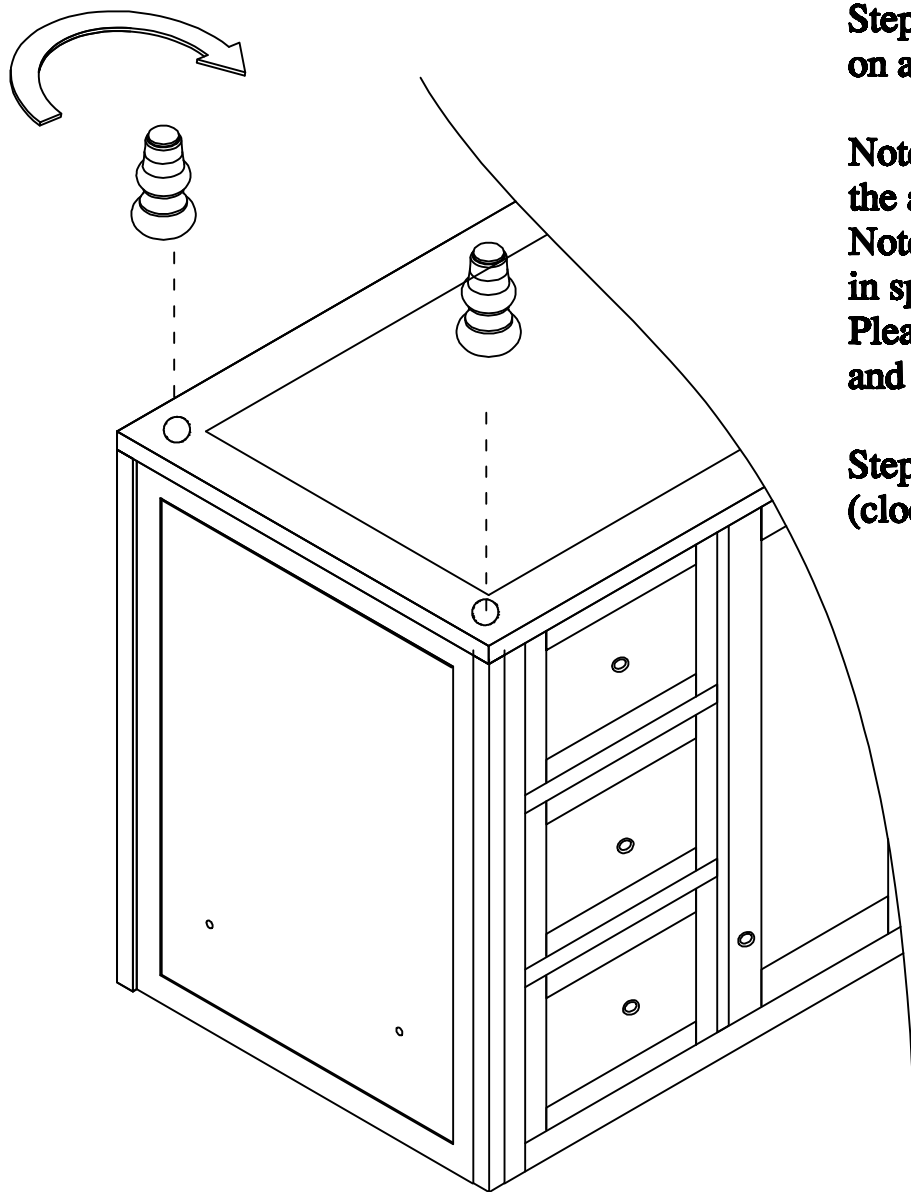




Step 1: To attach the legs, place the vanity cabinet upside down on a blanket on similar soft material.

Note 1: We recommend a minimum of two people for the assembly of all cabinets.

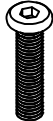Note 2: Legs and assembly hardware and towel bars are located in special packages inside the cabinet or inside the carton. Please look for these parts before discarding the original carton and packing materials.

Step 2: Attached the feet by turning them to the “right” (clockwise) as shown in the diagram on the left.

| | |
|---------------------------------------|---|
| A=4PCS $\varnothing 1/4 \times 1-3/8$ |  |
| B=4PCS $\varnothing 16$ |  |
| C=4PCS $\varnothing 1/4$ |  |
| D=1PC $\varnothing 4$ |  |
| E=4PCS $\varnothing 11$ |  |

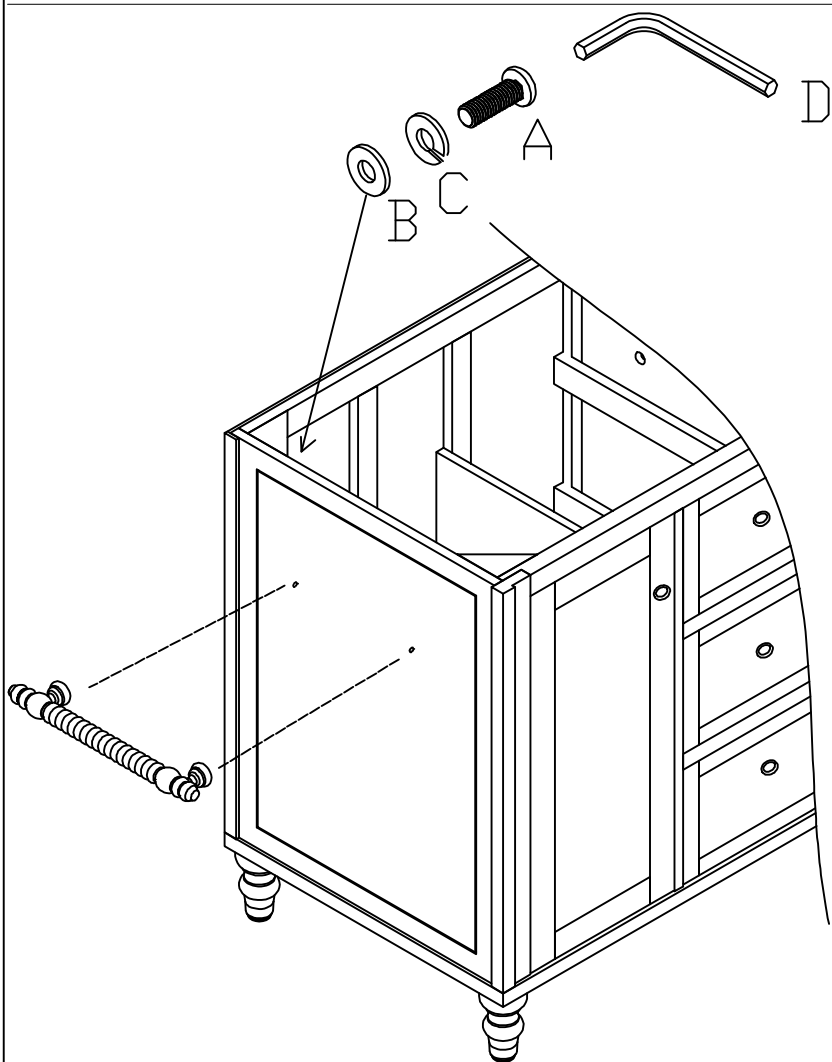

Step 3: Remove any drawers near the towel bars for easier access to attach the hardware.

Step 4: Please hold the towel bar handles against the pre-drilled holes in the cabinet. Insert the bolt through the Flat Washer (B) and the Spring Washer (C) through the cabinet and into the towel bar handles. The Allen wrench needed to tighten the bolts is included in the specially red marked hardware bag.

Note 3: If you purchased your cabinet as a stand-alone vanity, then please attached the towel bars to both sides of the cabinet. If you purchased a pair of vanity cabinets, plus the optional makeup counter, then you only need to attach towel bars to one side of each cabinet.

Refer to Optional Makeup Counter Assembly Instructions if you purchased the optional makeup counter.

Vanity Assembly Instructions

If you don't want to use the towel bars, you can use wooden corka in the hardware bag to hold the holes for towel bars.

