


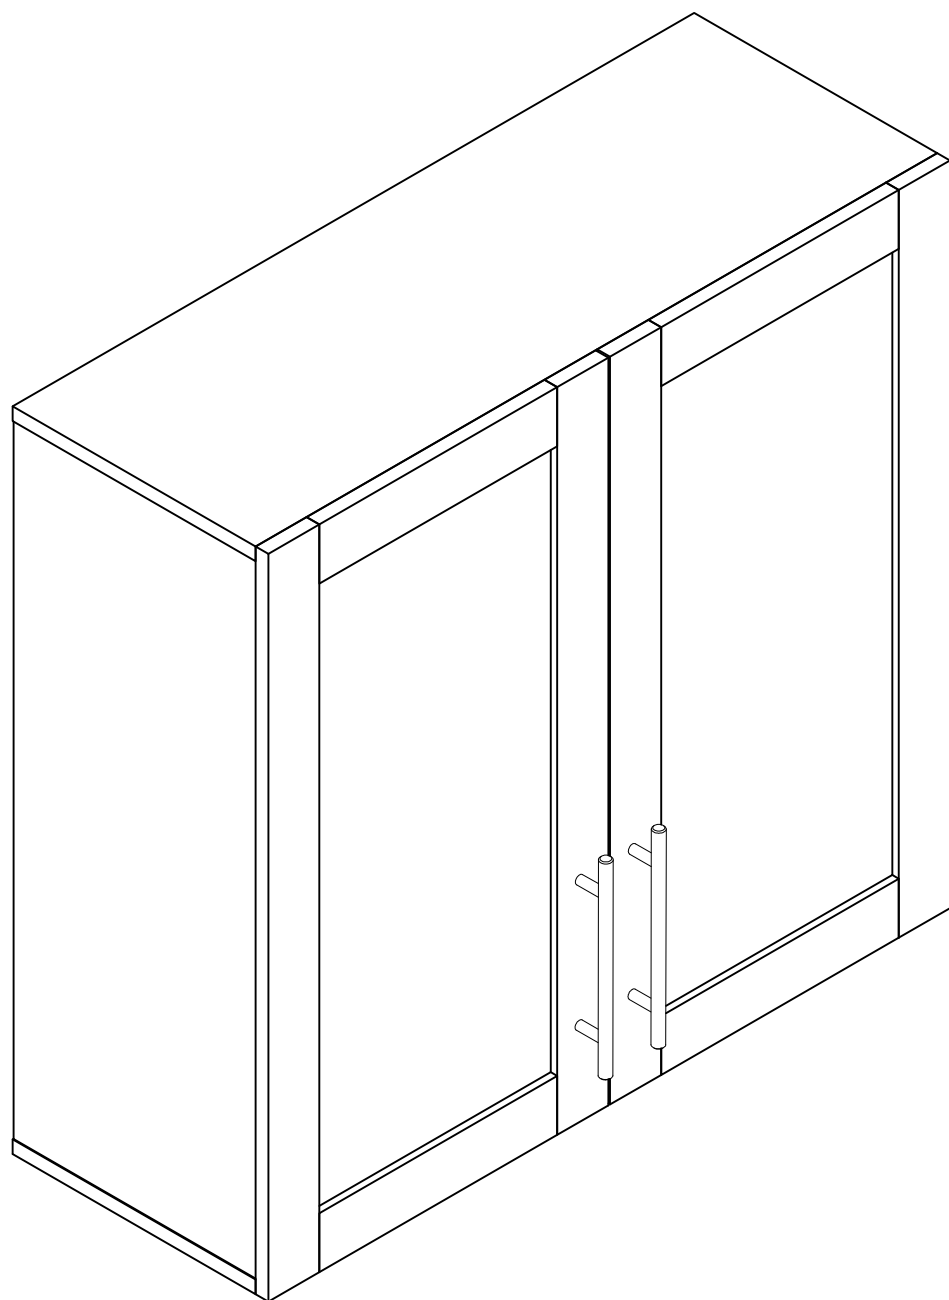
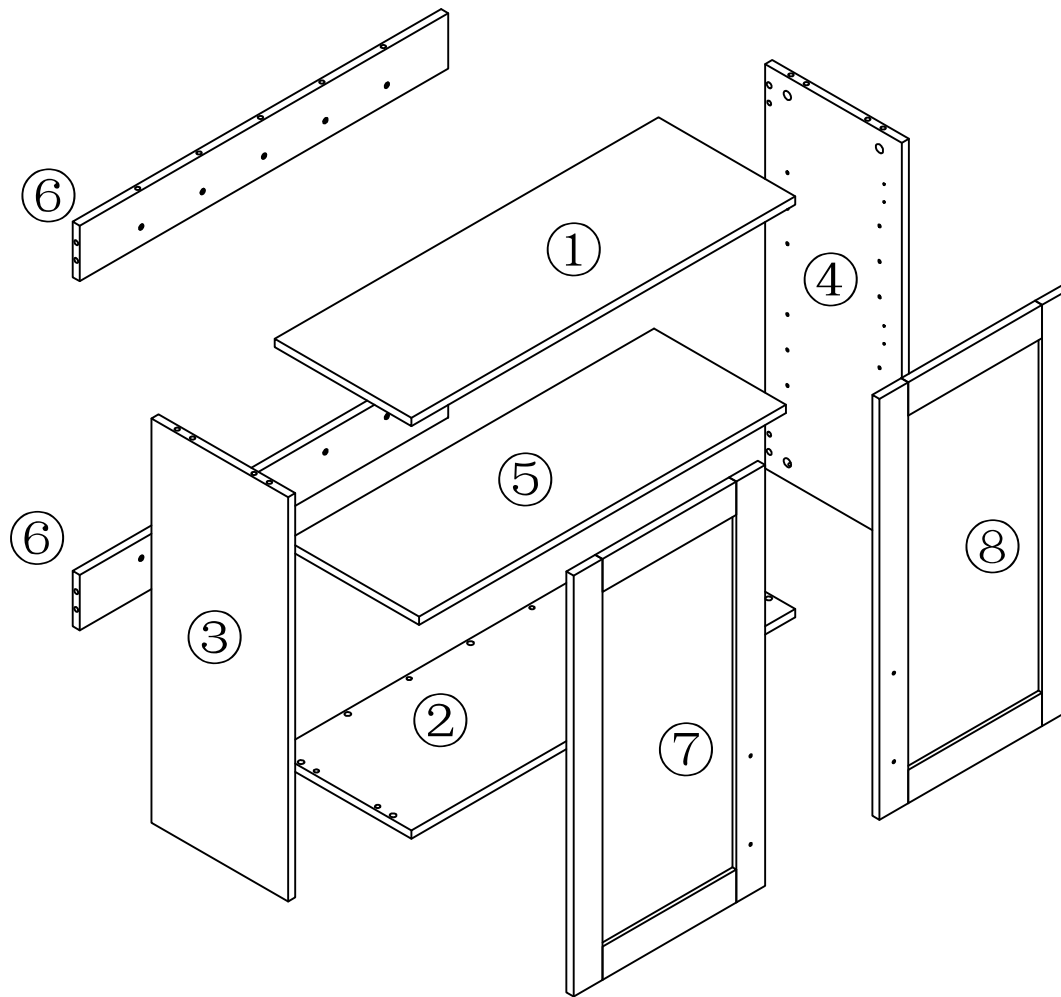

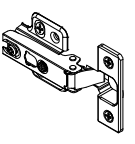








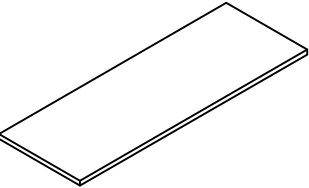
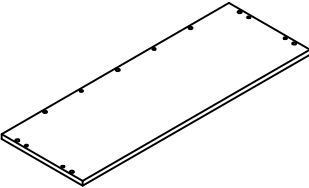
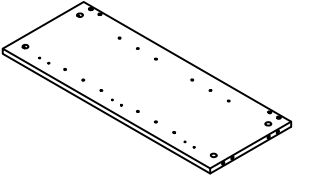
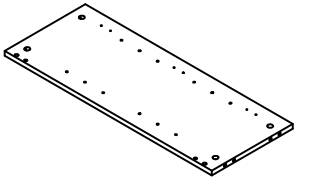
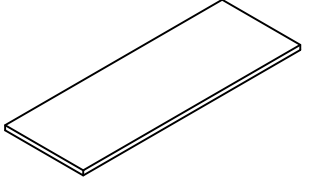


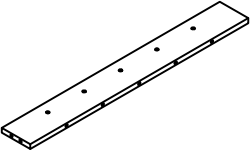

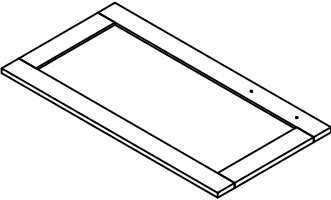

A	B	C	8*40	D	3.5*14	E	F	G	4*22	H	I	4*50	J	8*40
														
18PCS	18PCS	16PCS	36PCS	6PCS	2PCS	4PCS	4PCS	10PCS	10PCS					


1  800*285 1PS	2  800*285 1PS	3  730*285 1PS	4  730*285 1PS	5  765*275 1PS
6  768*100 2PS	7  760*399 1PS	8  760*399 1PS		

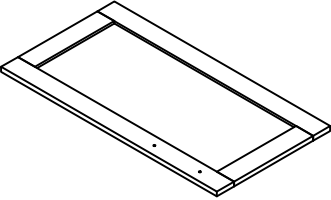


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

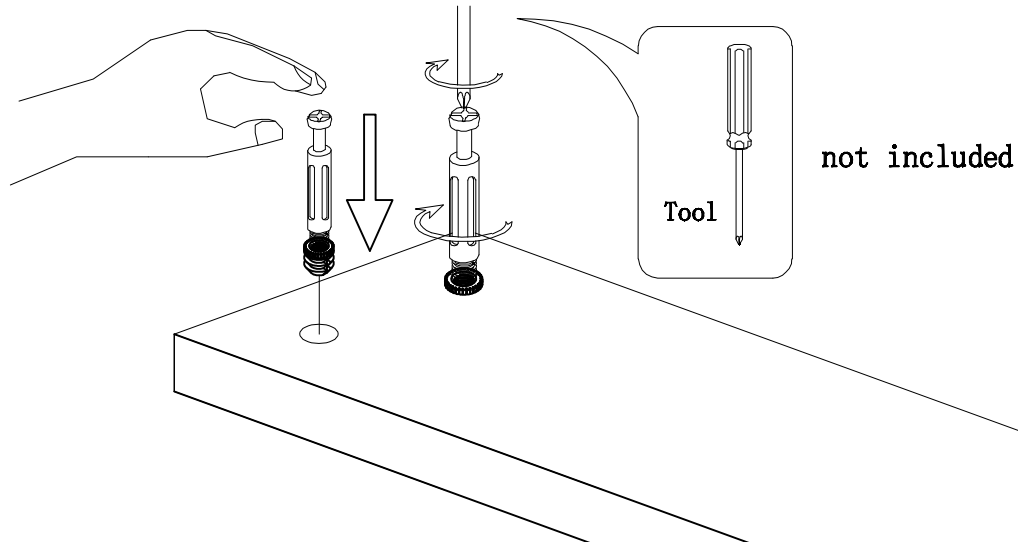

II

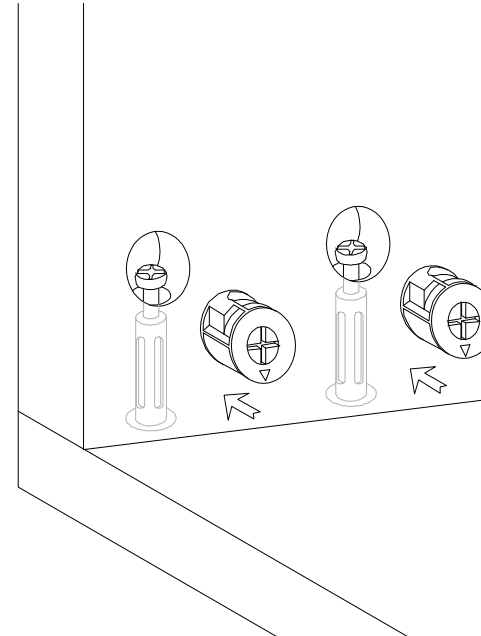

III

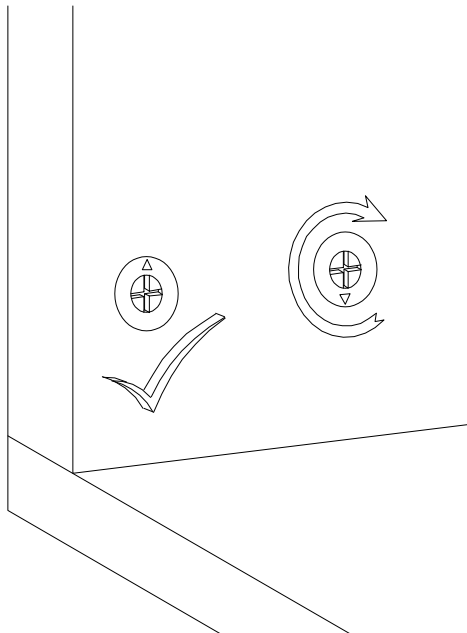


IV





Scan QR code for assembly video

①

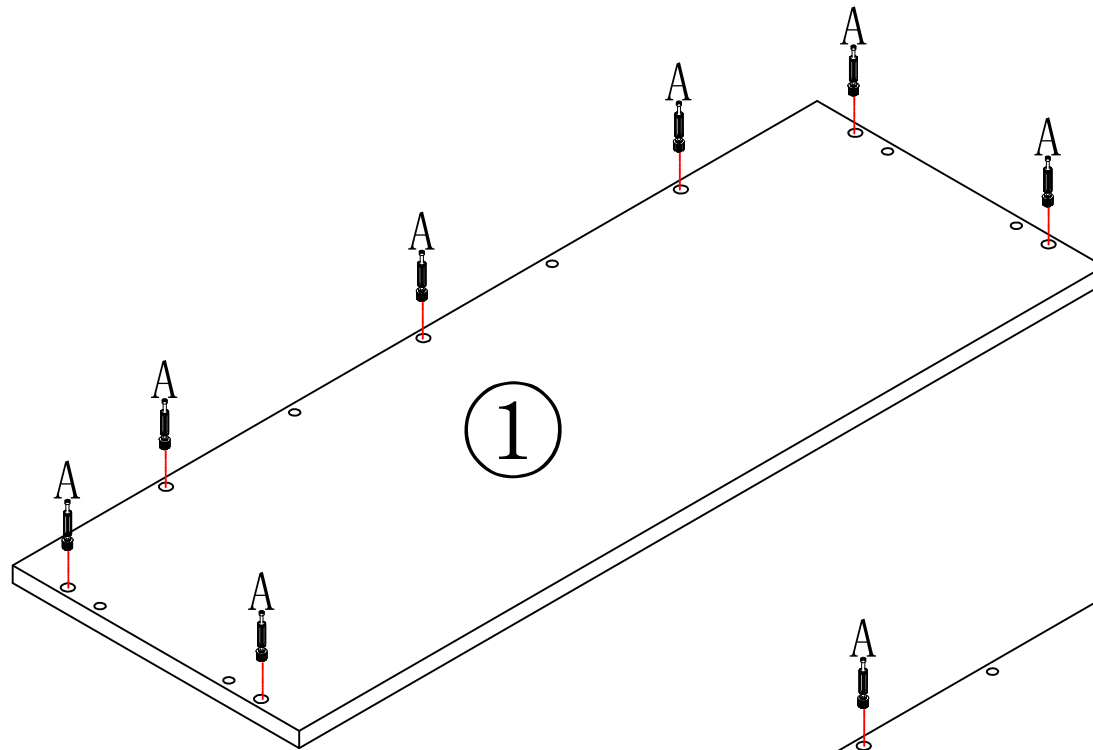

①

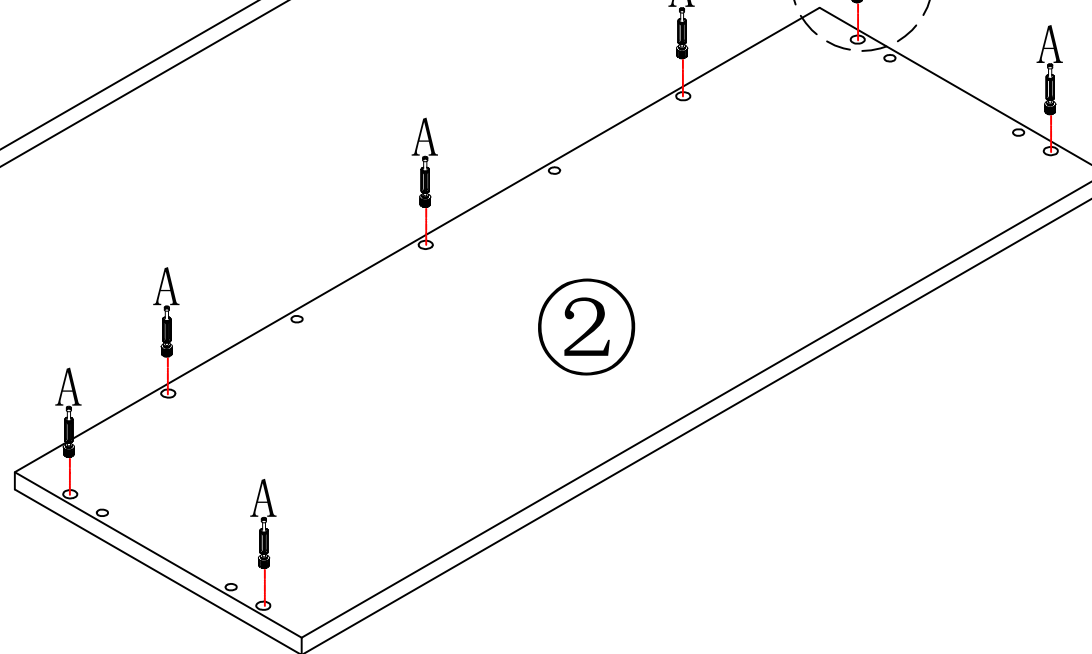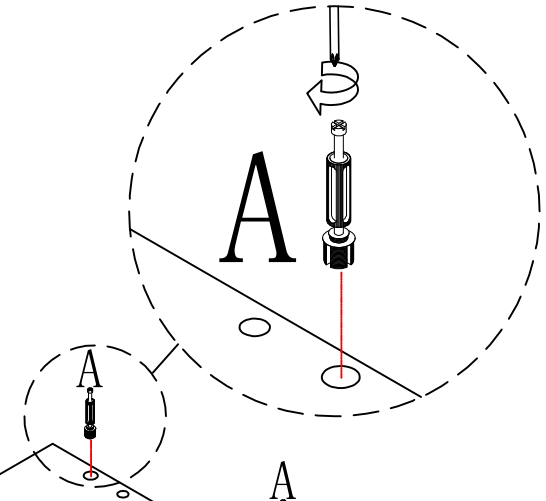


②

put A on board ① ②



A*14

2

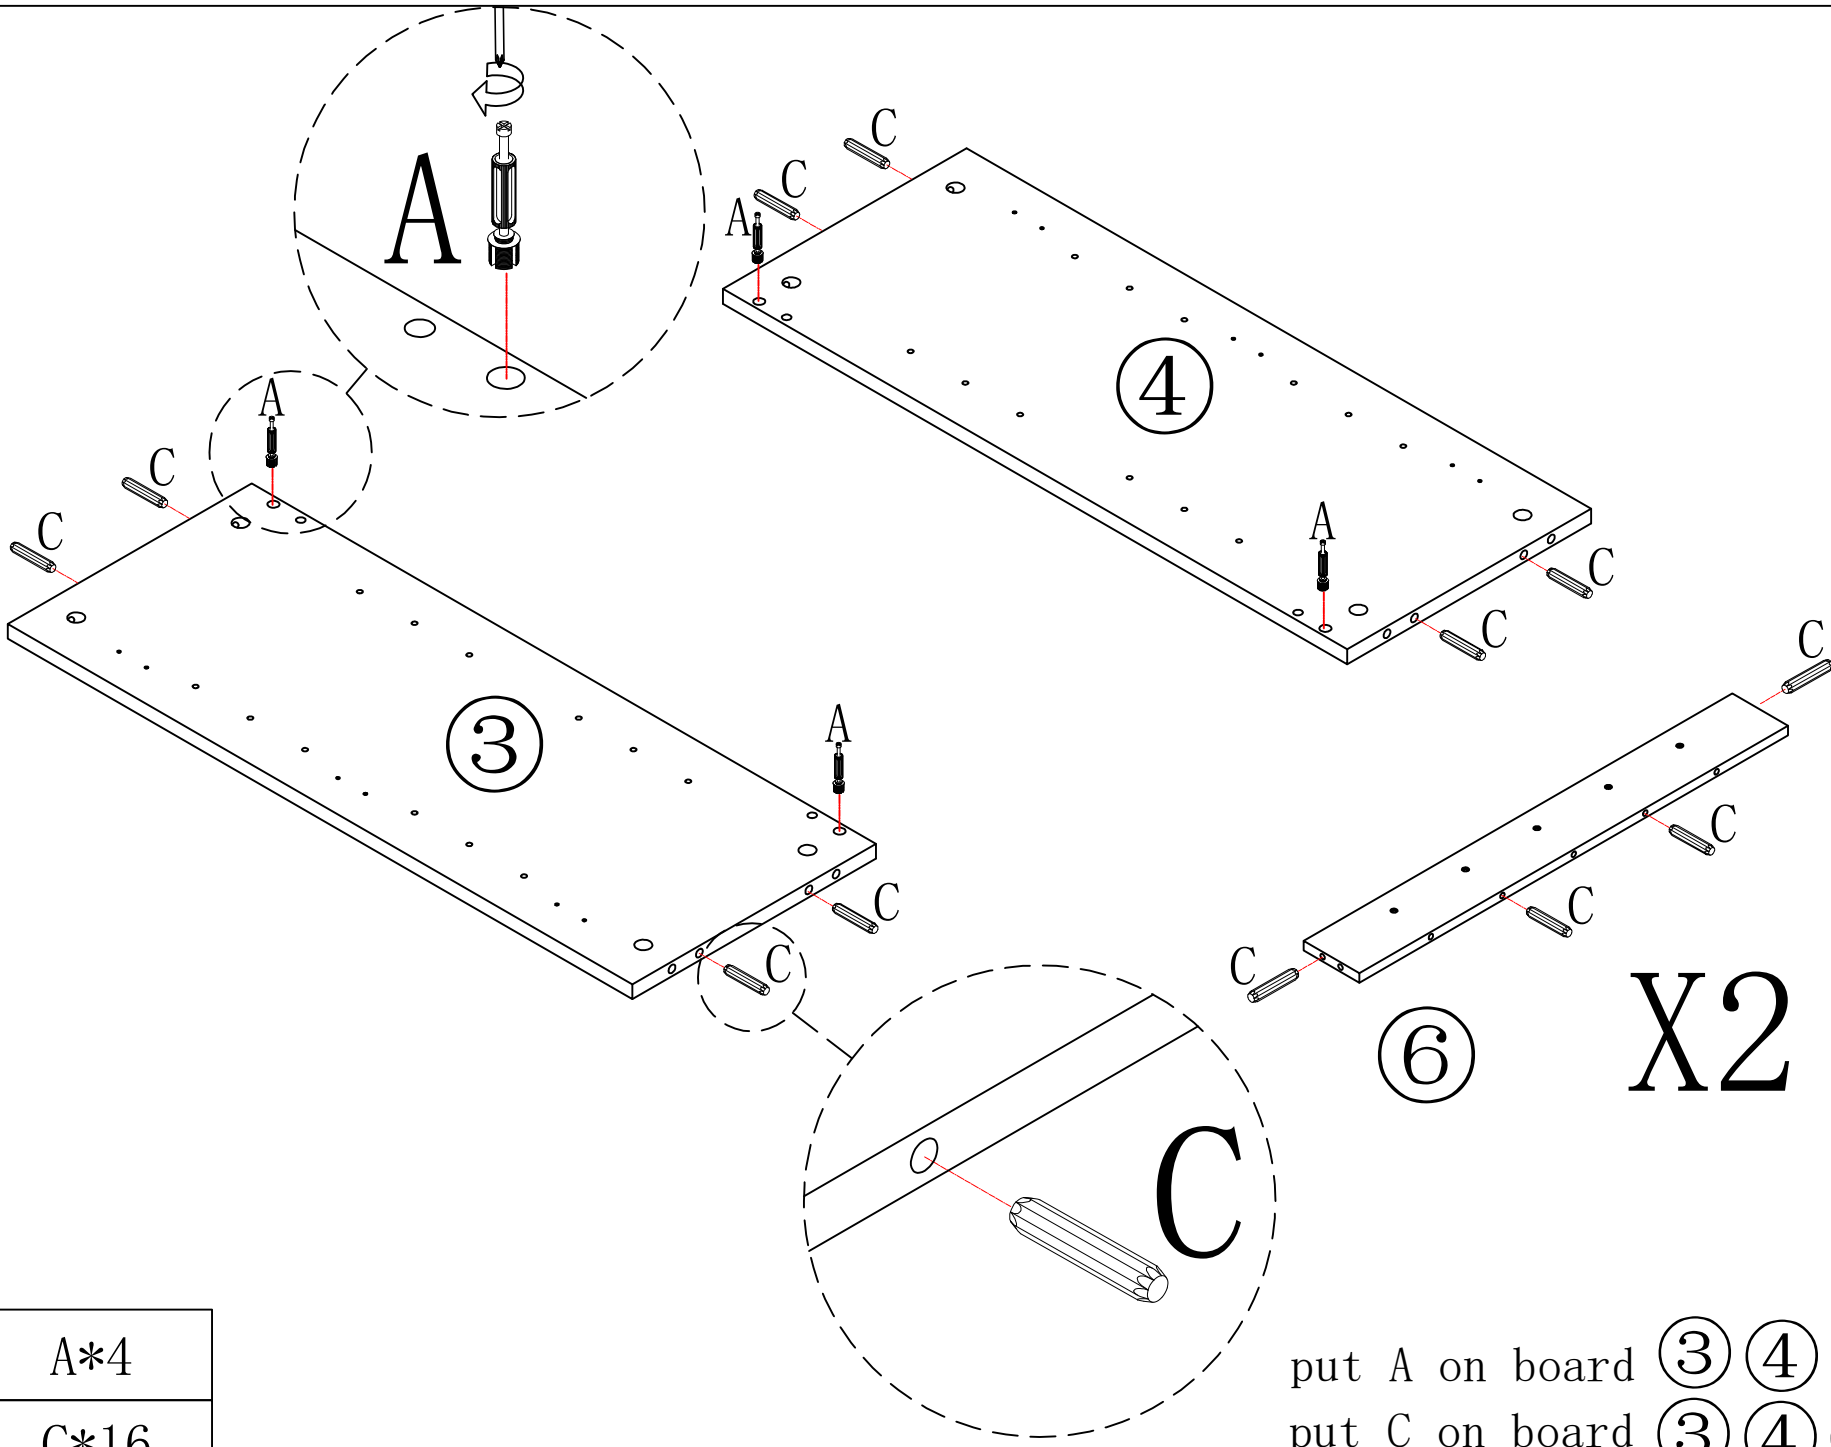


	A*4
	C*16

put A on board ③ ④
put C on board ③ ④ ⑥

3


Make sure the arrow on the screw align to the hole on the side

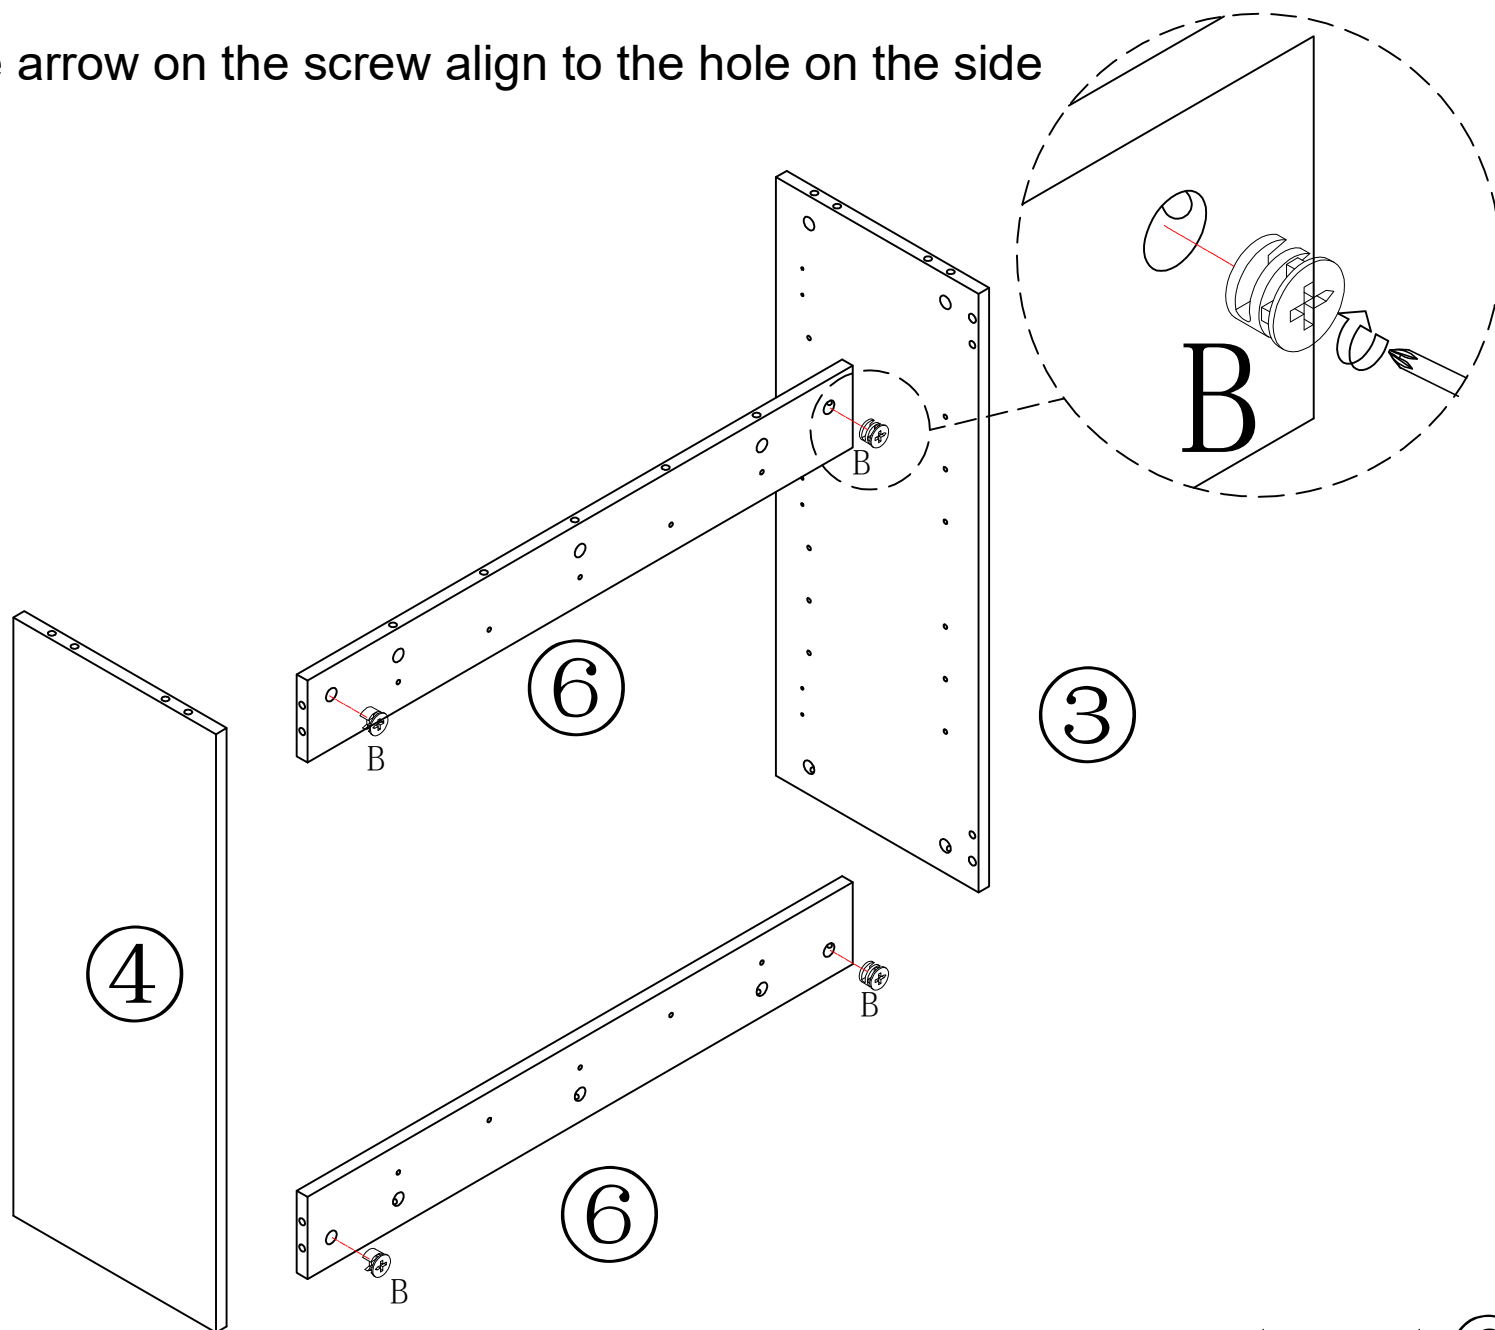


B*4

put B on board 6

4

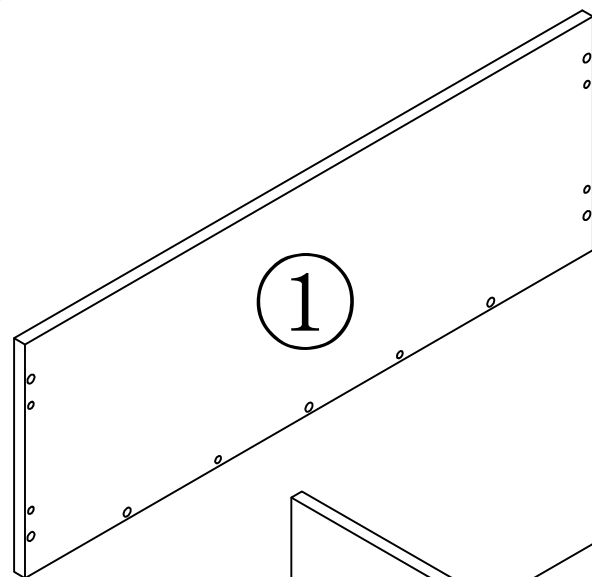


1

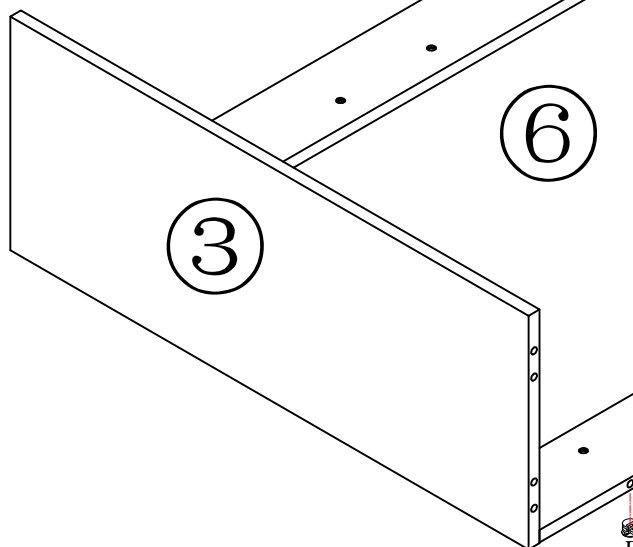


3

6


6

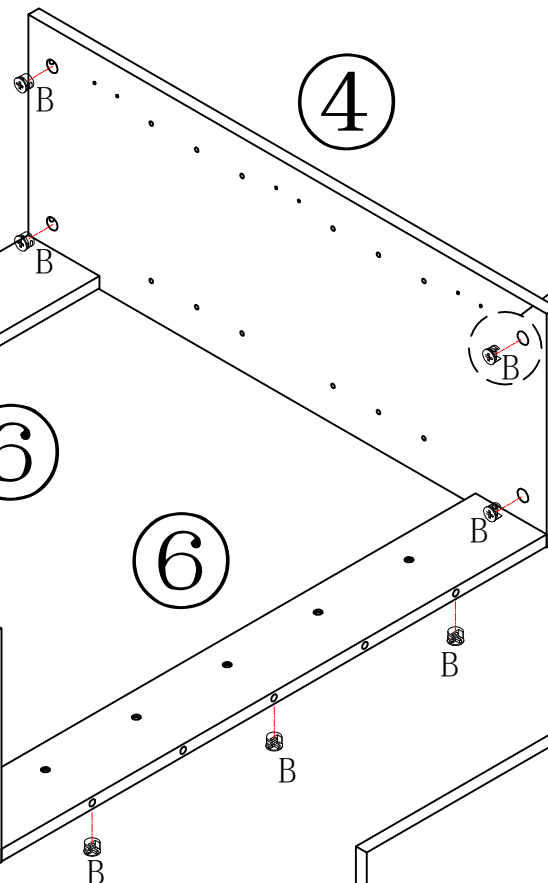

4

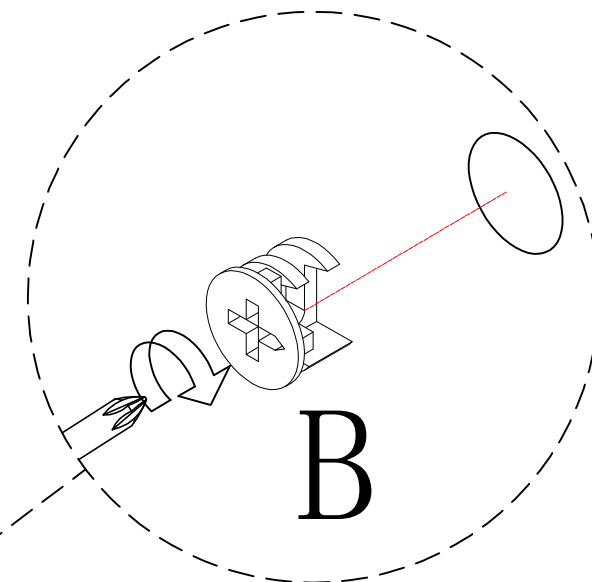

B

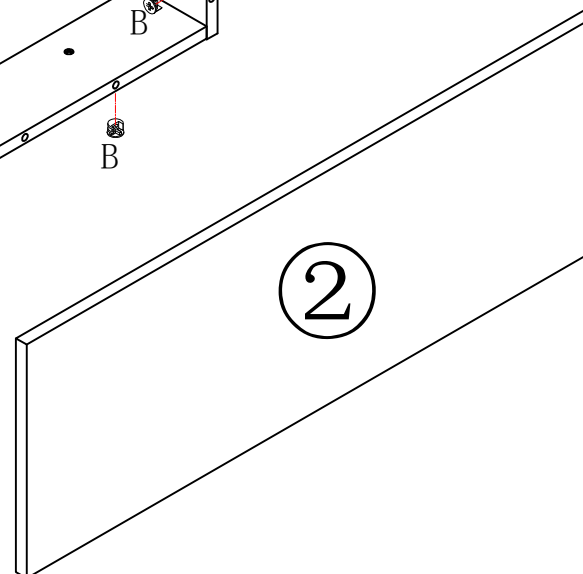



2



B*14

put B on board ③ ④ ⑥

5



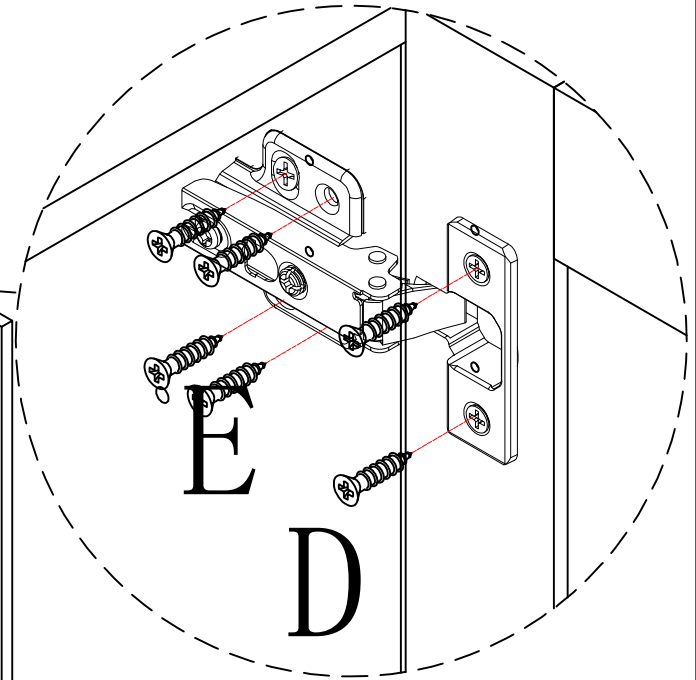
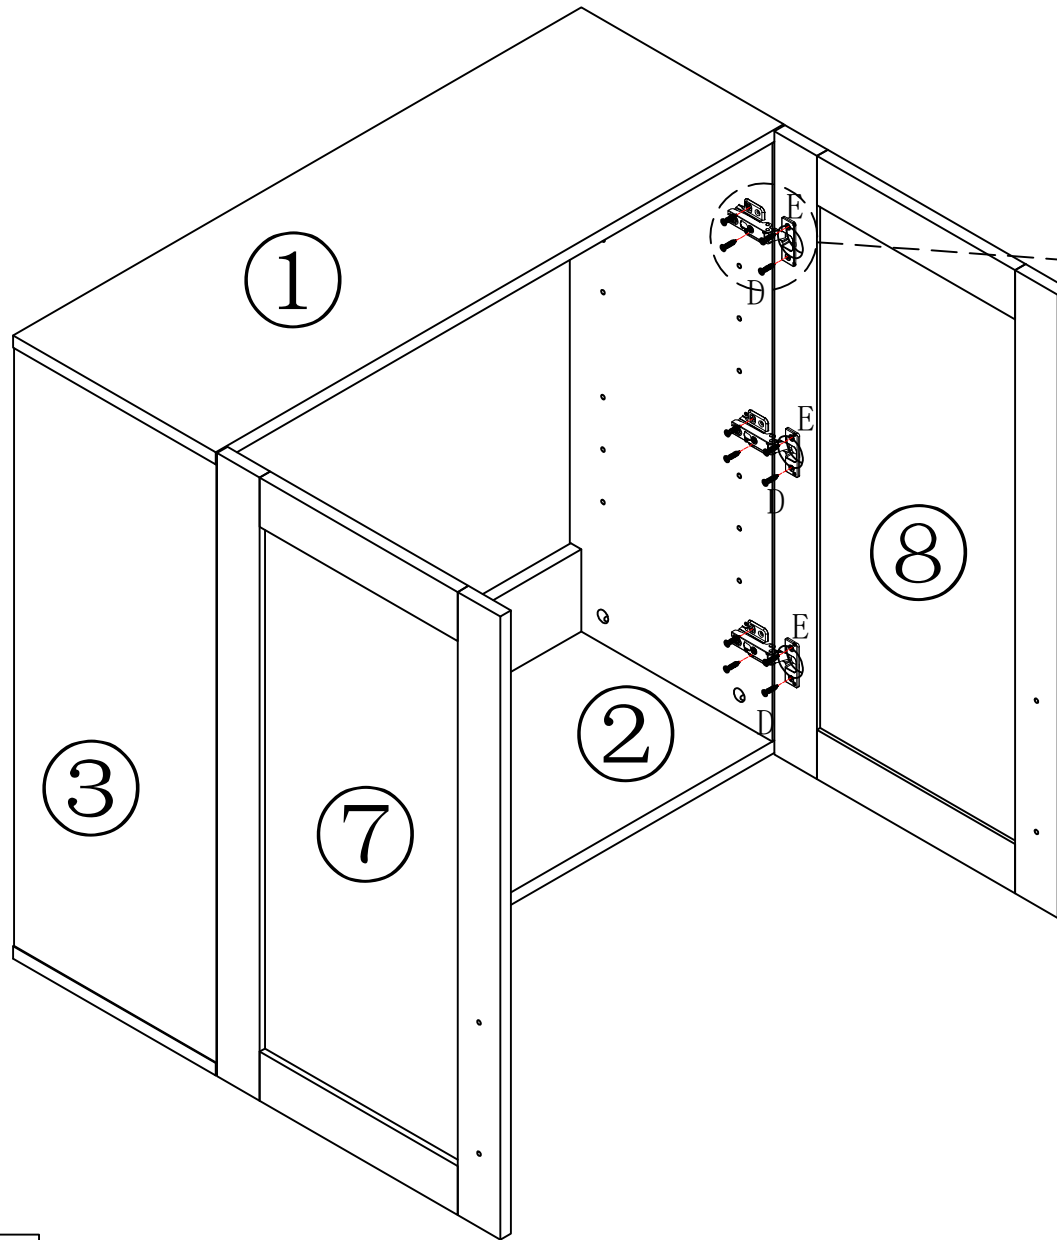



D*36










E*6

⑥

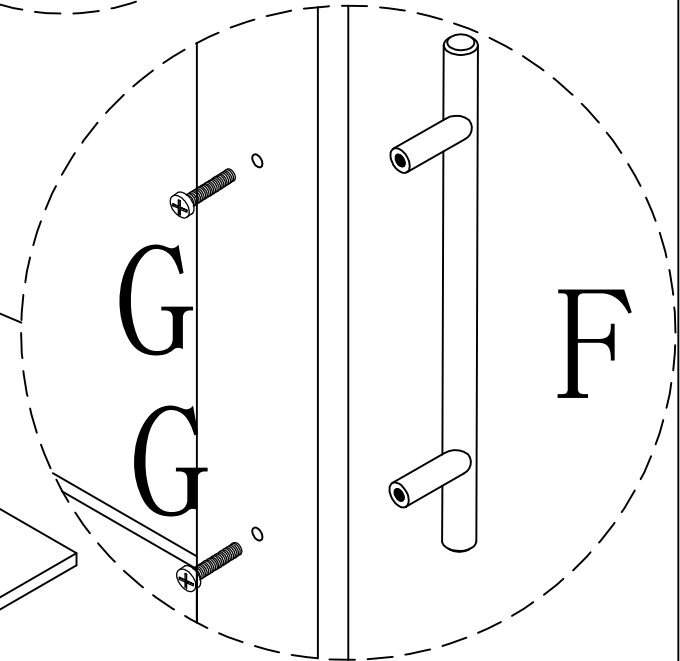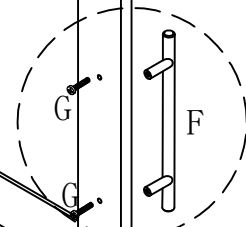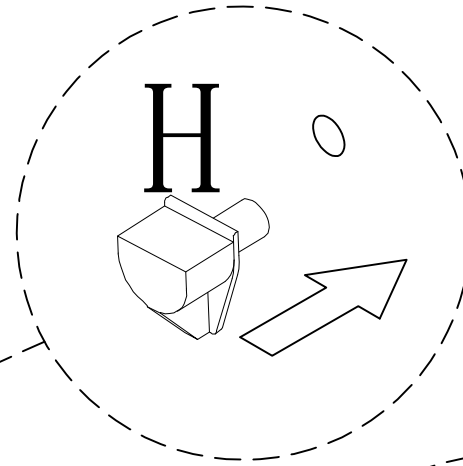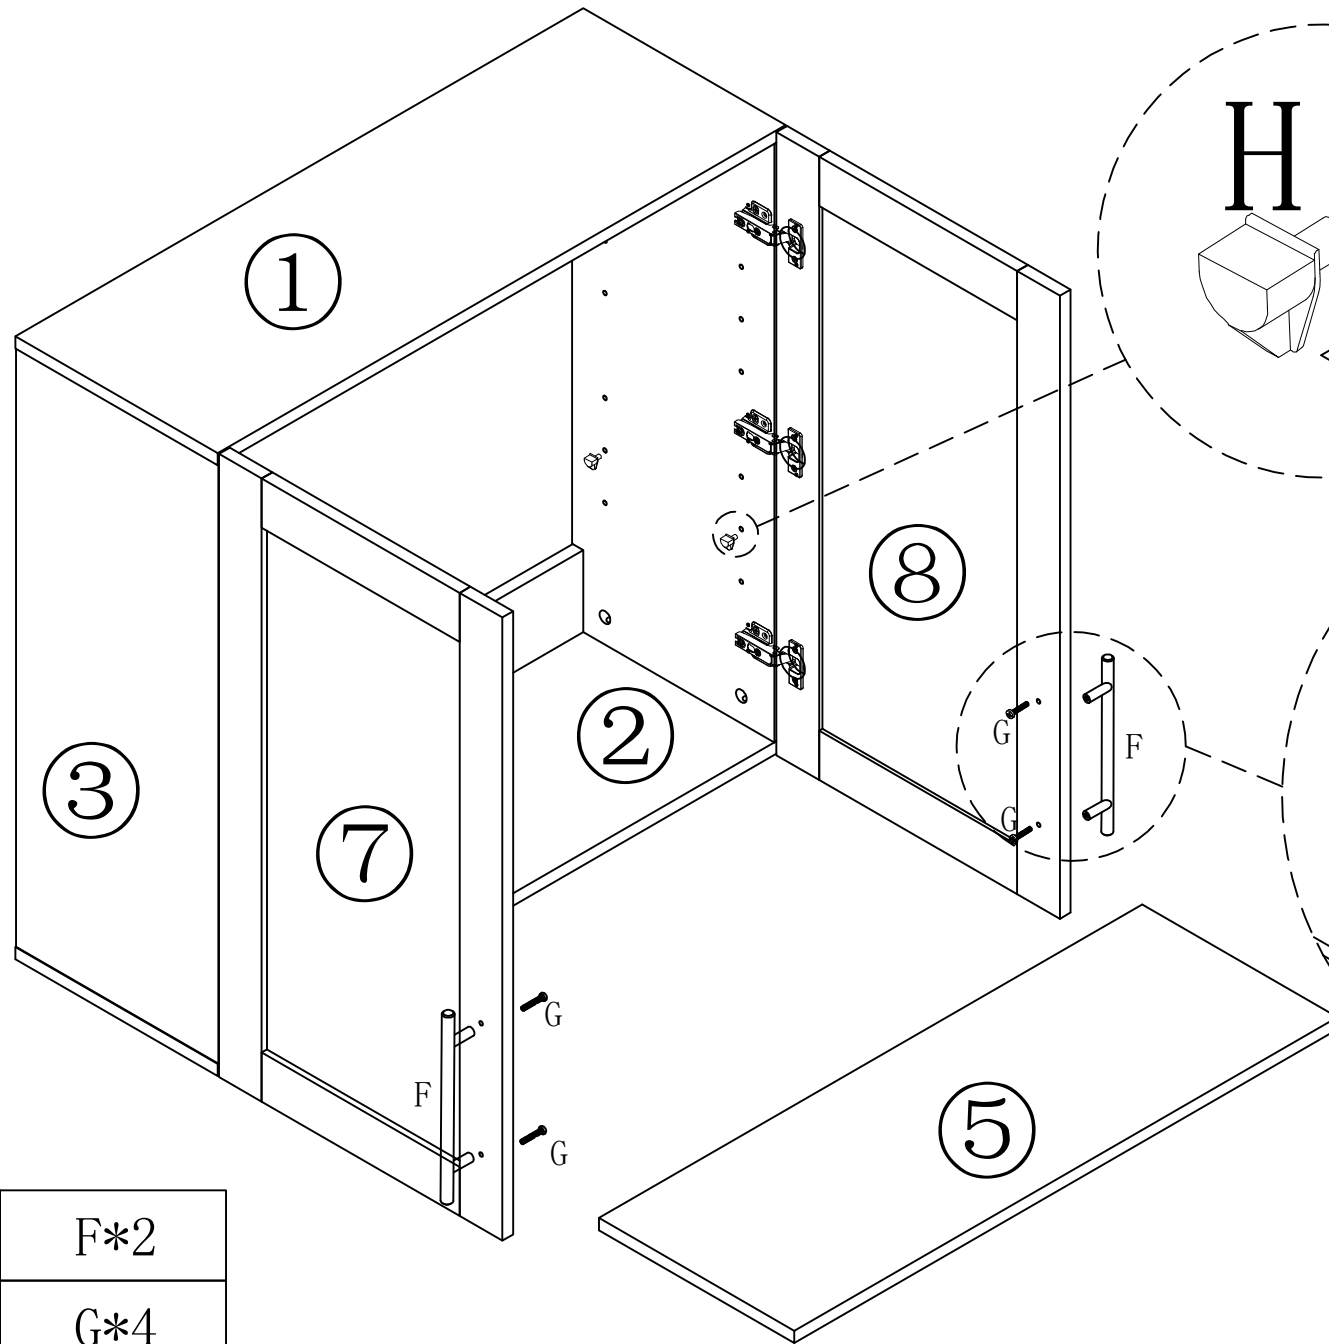


	F*2
	G*4
	H*4


7

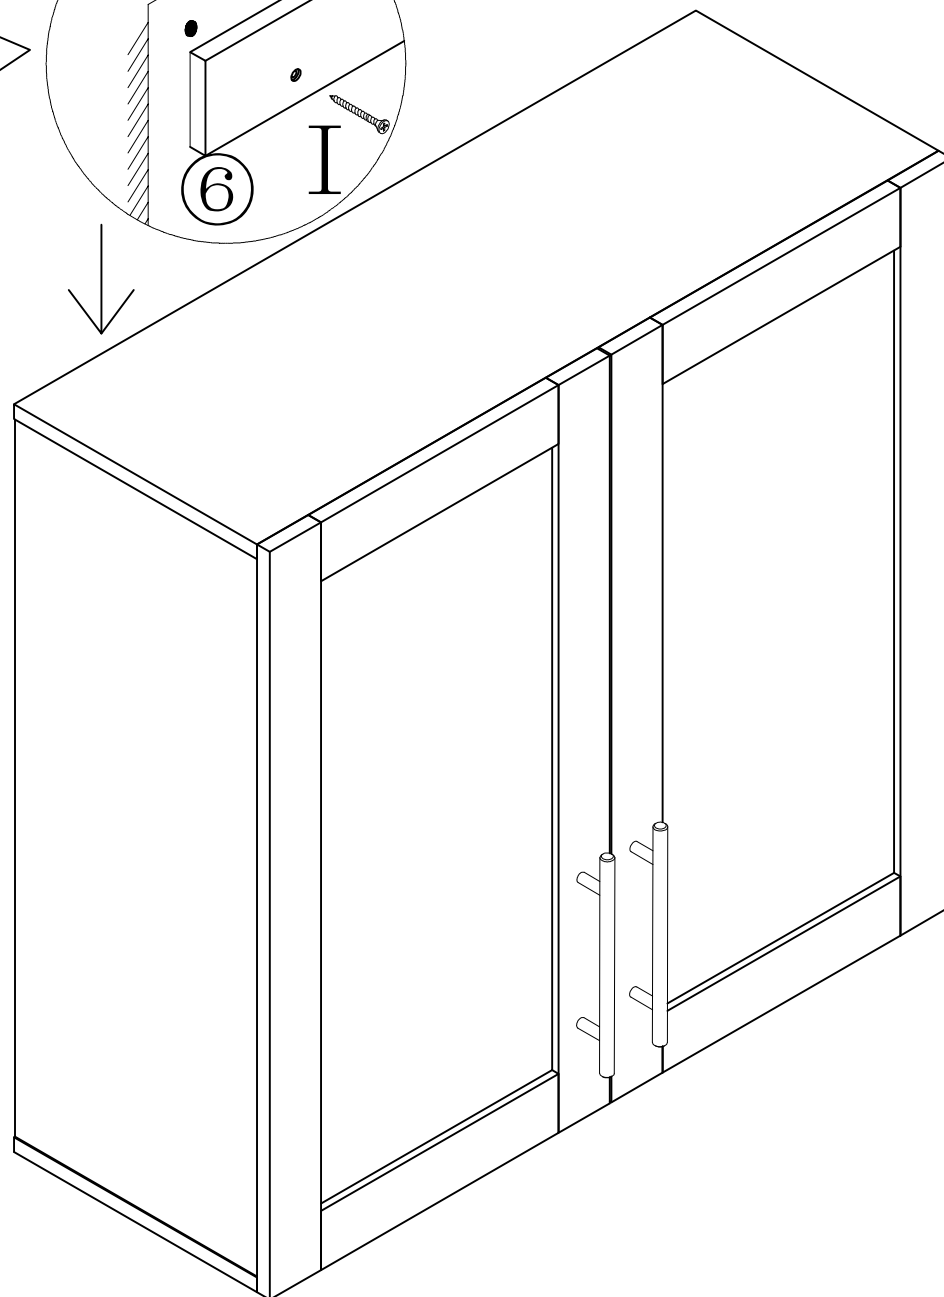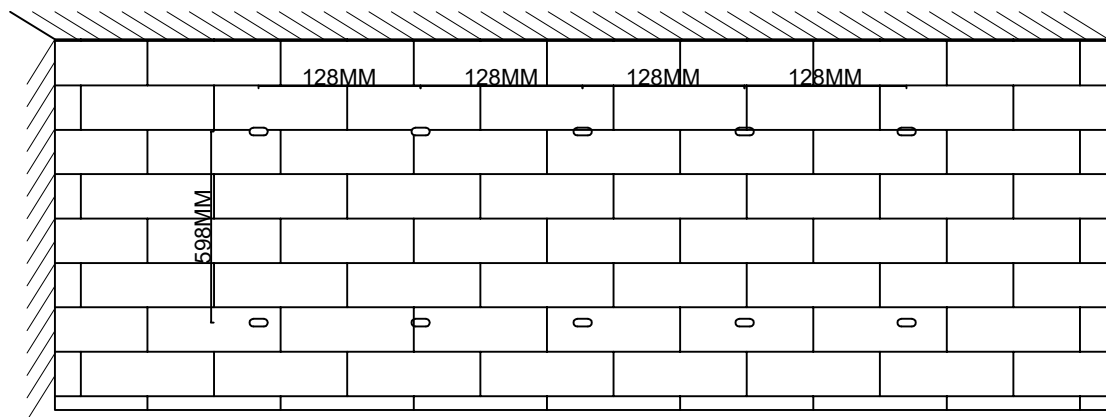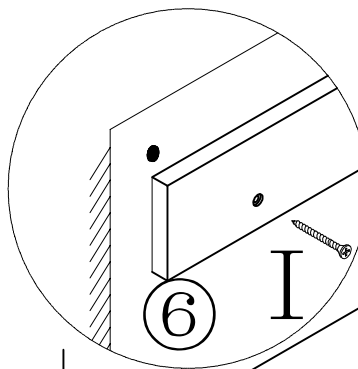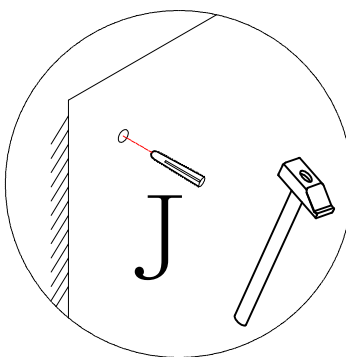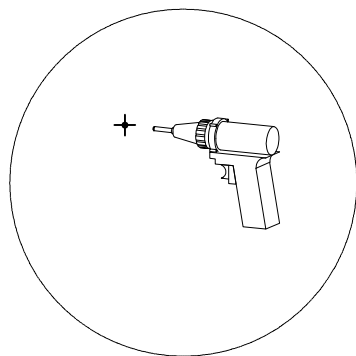

I*10



J*10

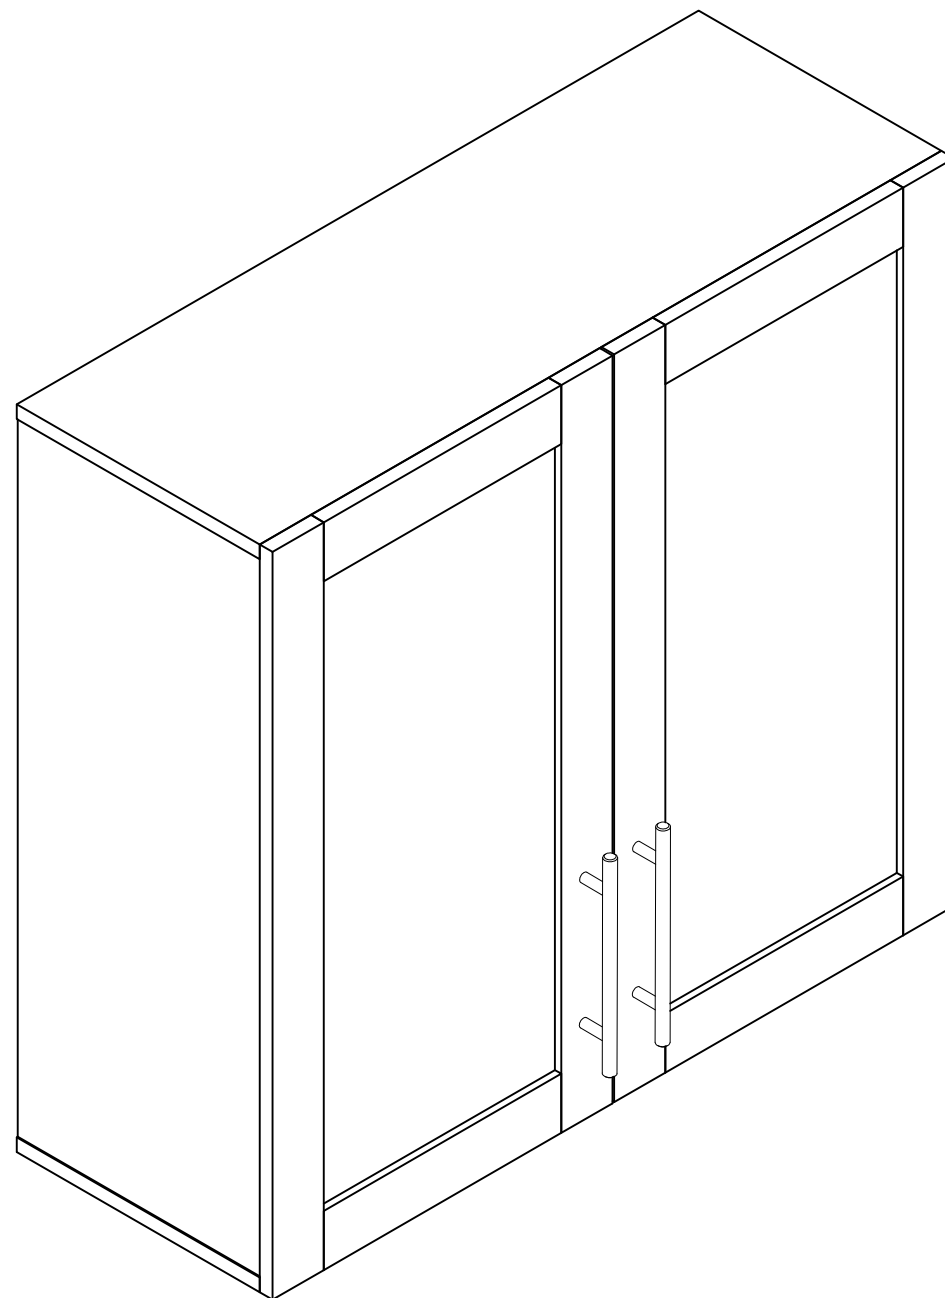

END