
ModernMate

ASSEMBLY INSTRUCTION

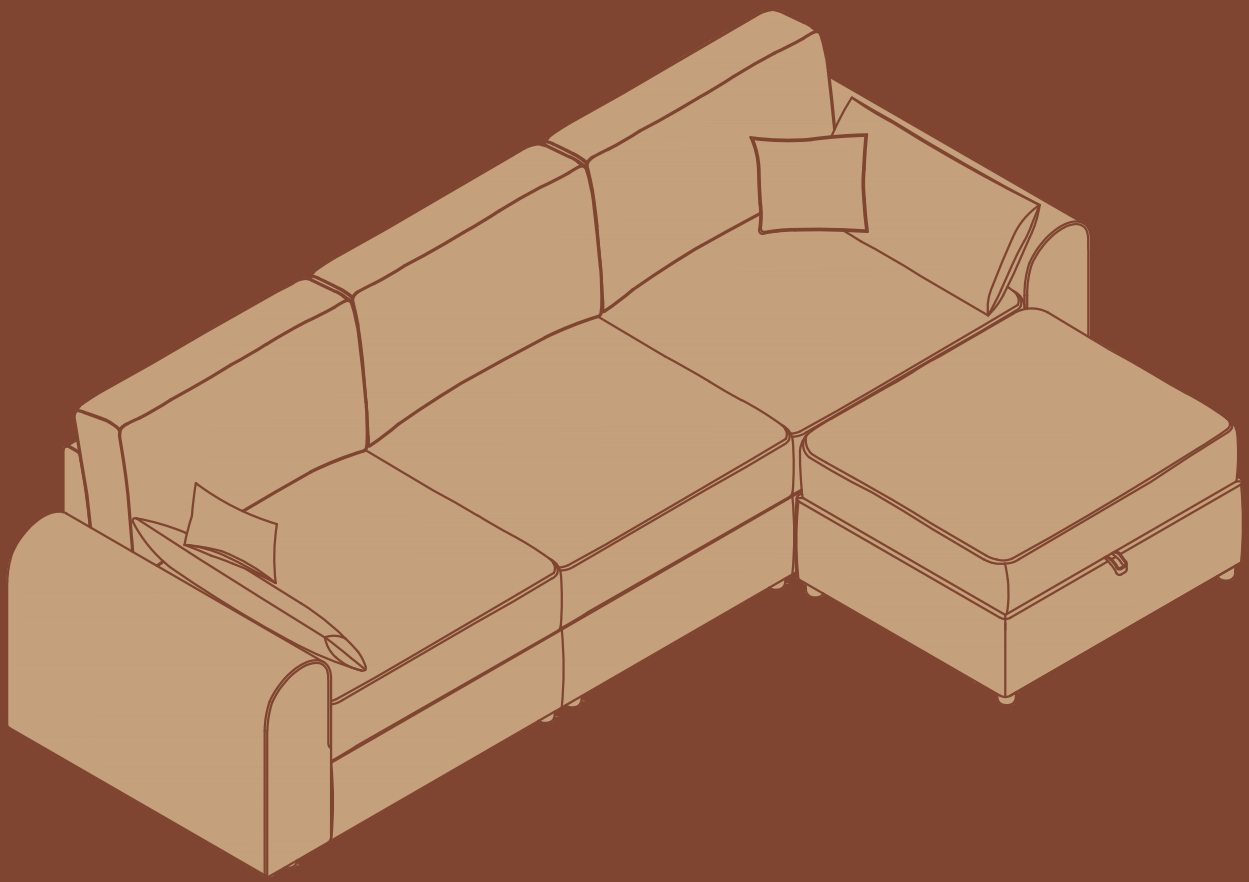

Rialto

CATALOGUE

Precautions 01-04

Parts List 05-07

Assembly Process 08-40

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

This package contains numerous components and hardware pieces. Please identify and verify all parts against the parts list before you begin assembly.

WARNING: Choking Hazard. This product contains small items. Keep all parts and hardware out of the reach of children during assembly.

To prevent scratches, assemble the product on a soft, non-abrasive surface such as a carpet, blanket, or the flattened cardboard packaging.

Some components are heavy. For safety, we recommend this product be assembled by two adults.

The unit may be unstable until assembly is fully complete. Do not move the product until all steps are finished.

If you encounter any issues or have questions, please contact our customer service team for assistance.


* **Please be sure to follow the installation steps in the manual to avoid unnecessary losses caused by improper installation.**

Tip 1

Open the vacuum bag carefully, then take out the seat cushion.


Properly pat all cushions and wait for 72 hours to help them return to their original shape.


To help them regain their shape faster, please try to firmly and evenly pat around each cushion.

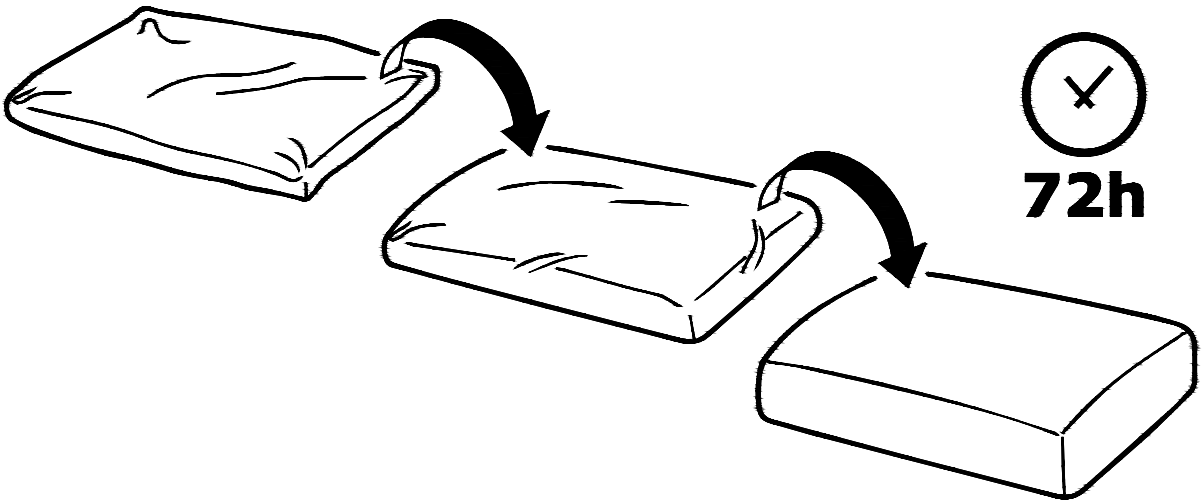

Tip 2

Contained Component

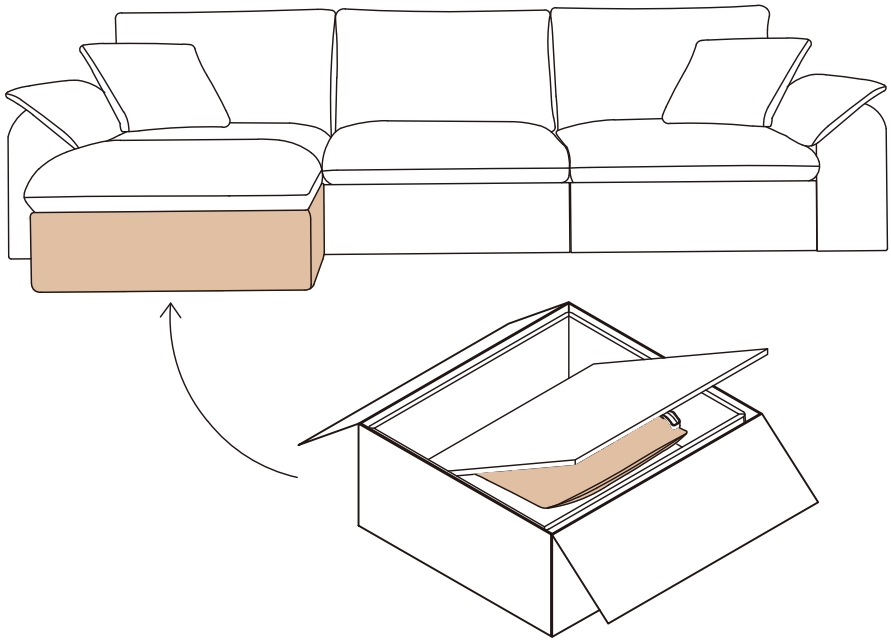

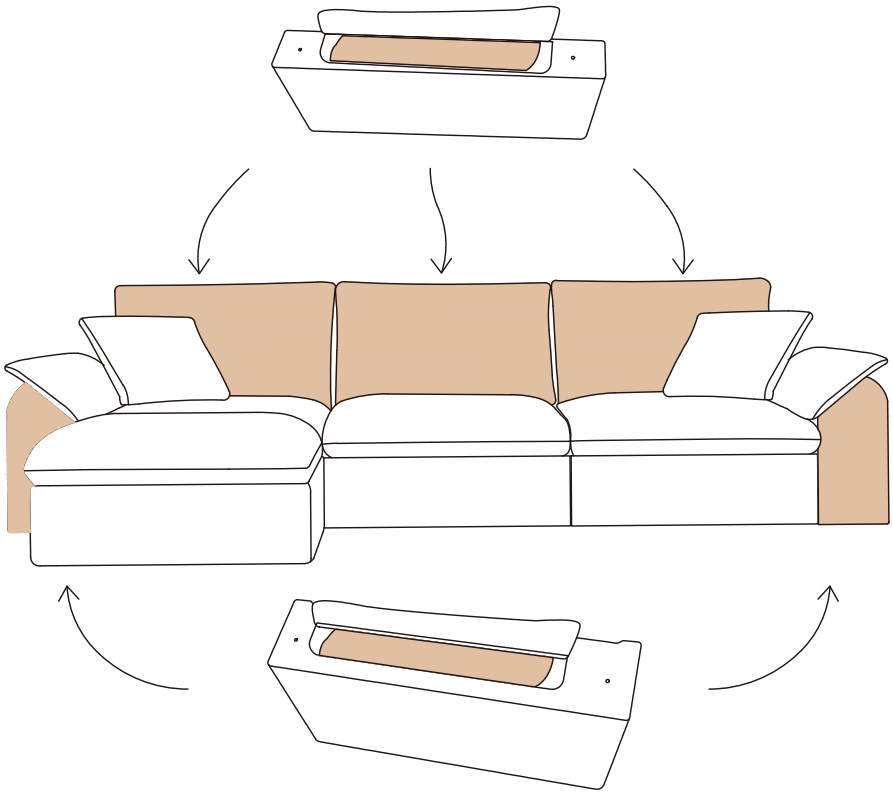


Tip 3

Due to the natural properties of down, it may be slow to bounce back after prolonged sitting. Moderate patting can restore the fluffiness and maintain a comfortable sitting feeling.

To restore fluffiness and maintain comfortable seating, gently pat and fluff the cushions as needed:

· When to fluff: When cushions feel less resilient or appear flat.


· How to fluff: Use a cupped hand to gently pat the sides, front, and back of the cushion with moderate pressure. Repeat as needed. Avoid using excessive force.

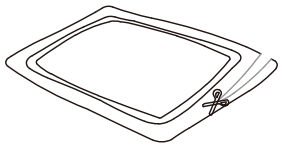


Step 1: Cut and open the package



Step 2: Rotate the cushion multiple times and pat from the sidse

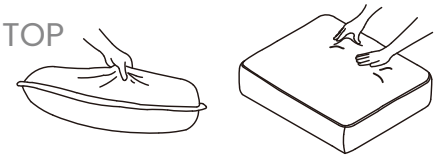


Step 3: Gently pull the fabric cover and cushion filing outward

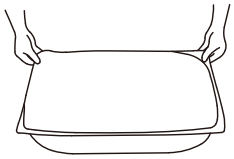

Step 4: Straighten the edges of the fabric cover










Step 4: Lightly pat the surface to smooth wrinkles

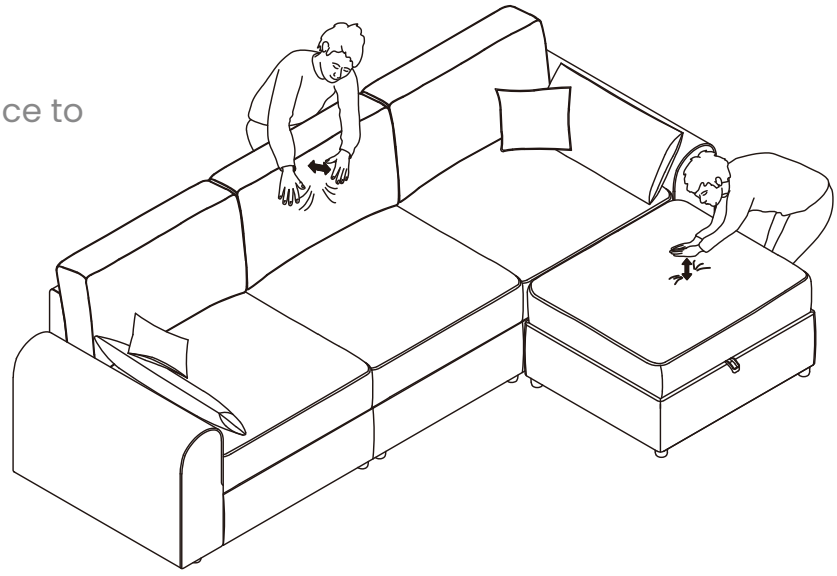

Parts List








BOX A

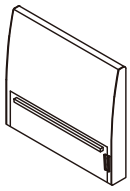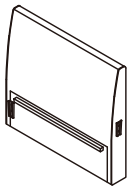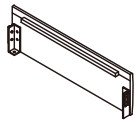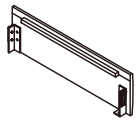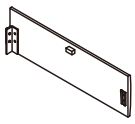
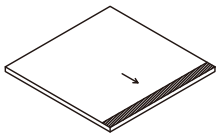
ID	Parts	QTY
A		1
B		1
C		1
D		1
E		1
F		1
G		2

ID	Parts	QTY
M		2
O		8

Parts List





BOX B

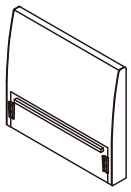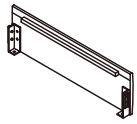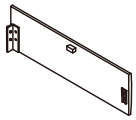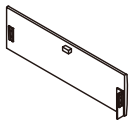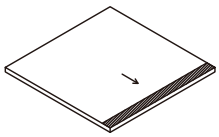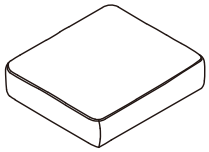ID	Parts	QTY
P		1
Q		1
R		1
S		1
T		1
L		1
M		1

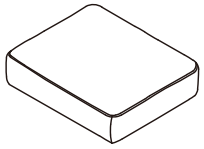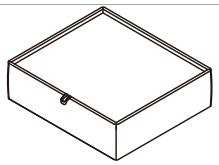ID	Parts	QTY
W		1
X		1
O		8
N		2

Parts List


BOX C

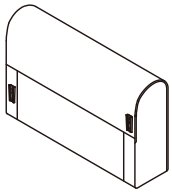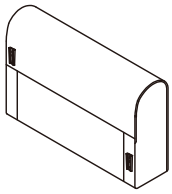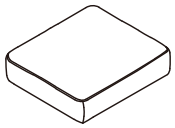
ID	Parts	QTY
J		1
K		1
L		2
N		2
H		2
I		2

STEP 1

BOX A+C

X1

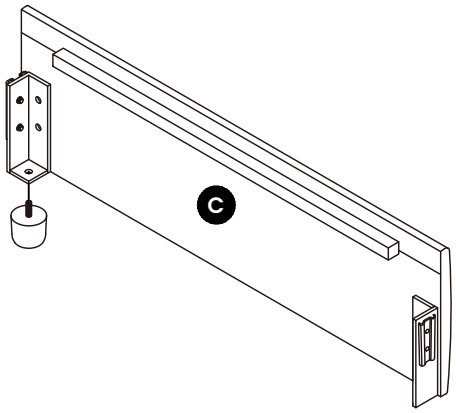


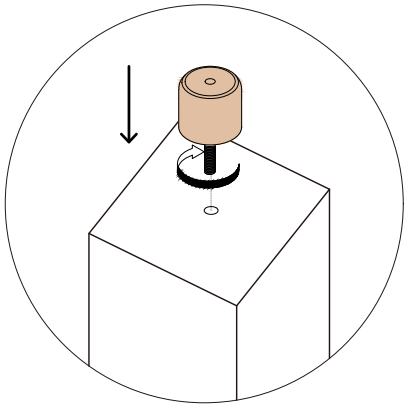


STEP 2

BOX A+C

X2

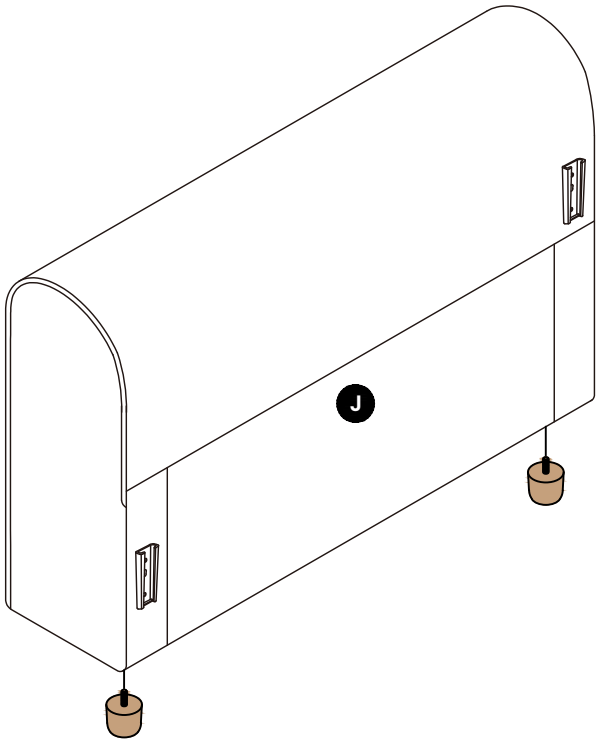


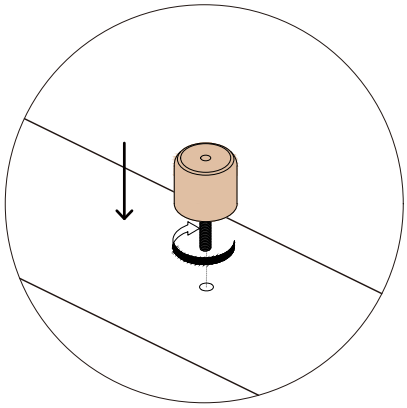


STEP 3

BOX A+C


X1

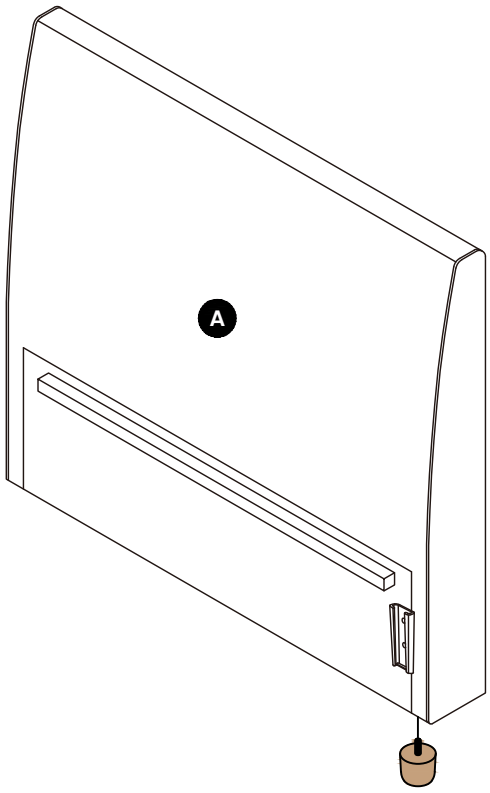


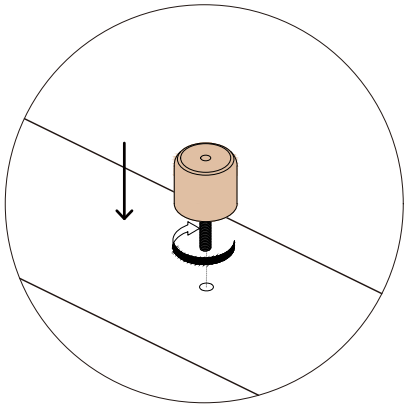

STEP 4


BOX A+C

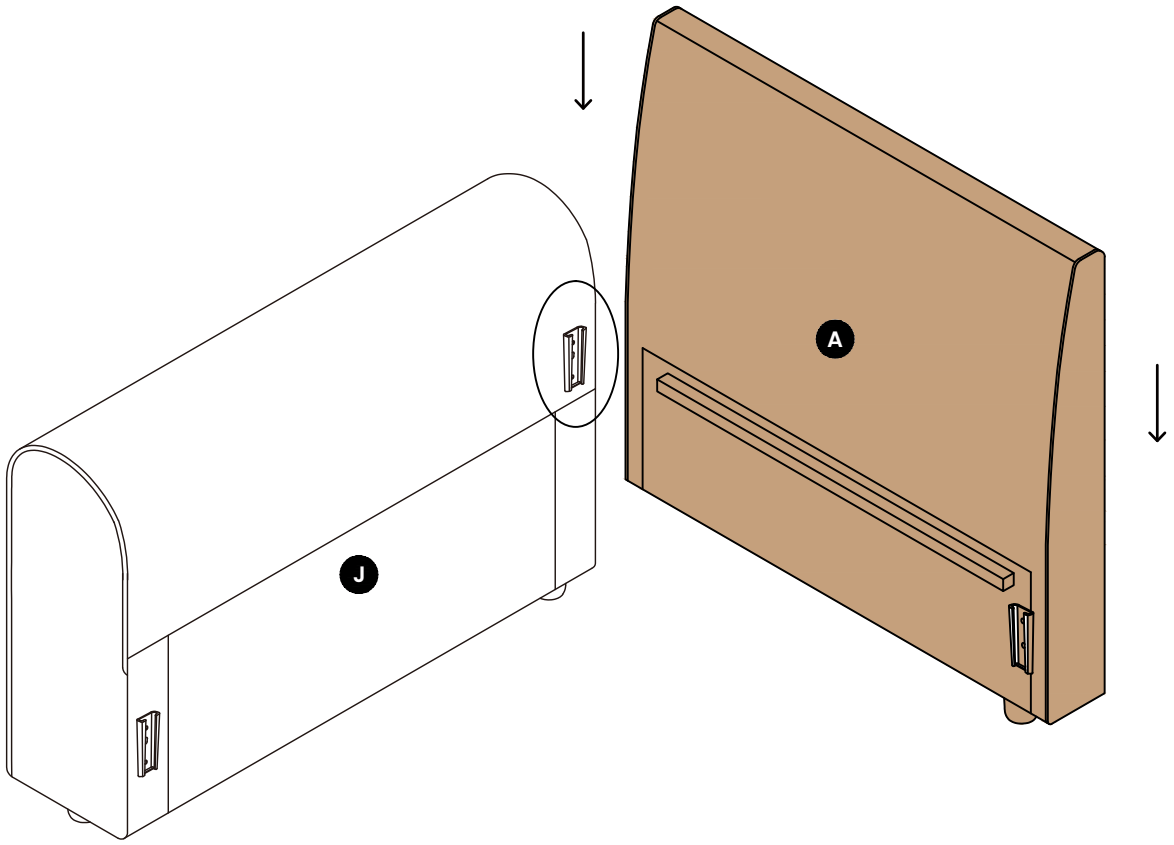


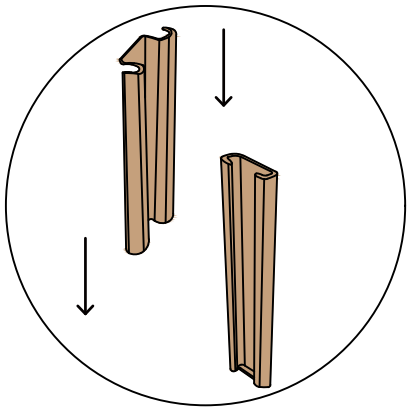

STEP 5


BOX A+C

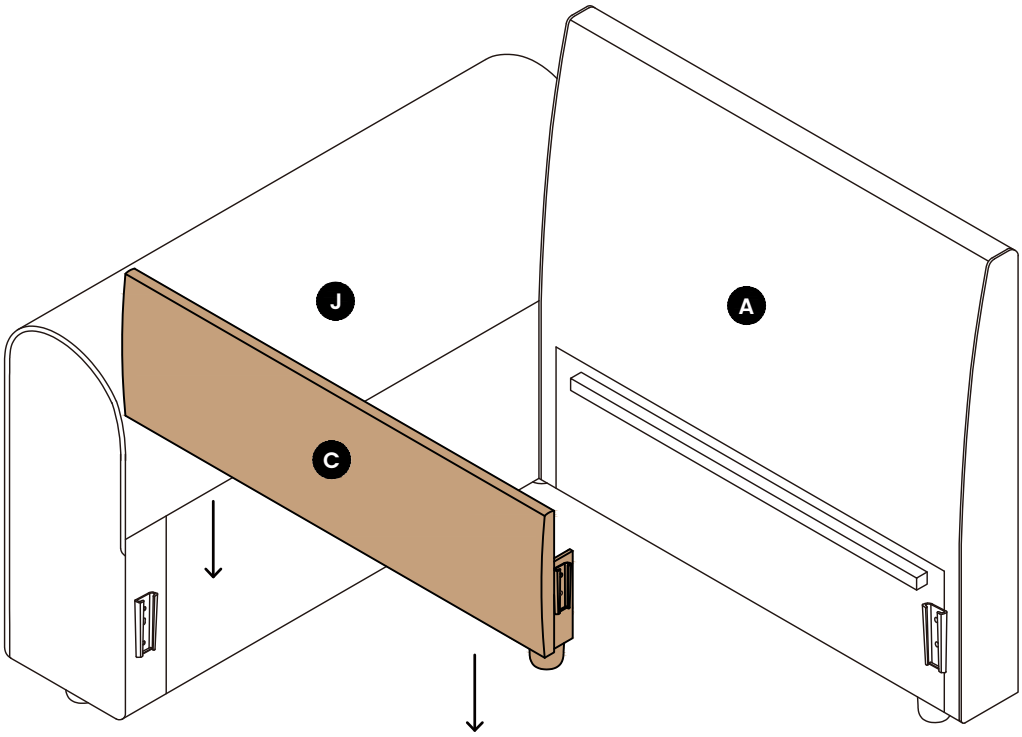


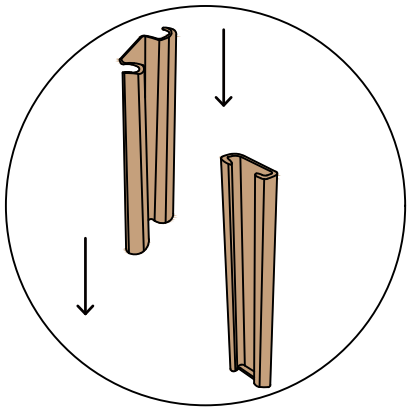

STEP 6

BOX A+C

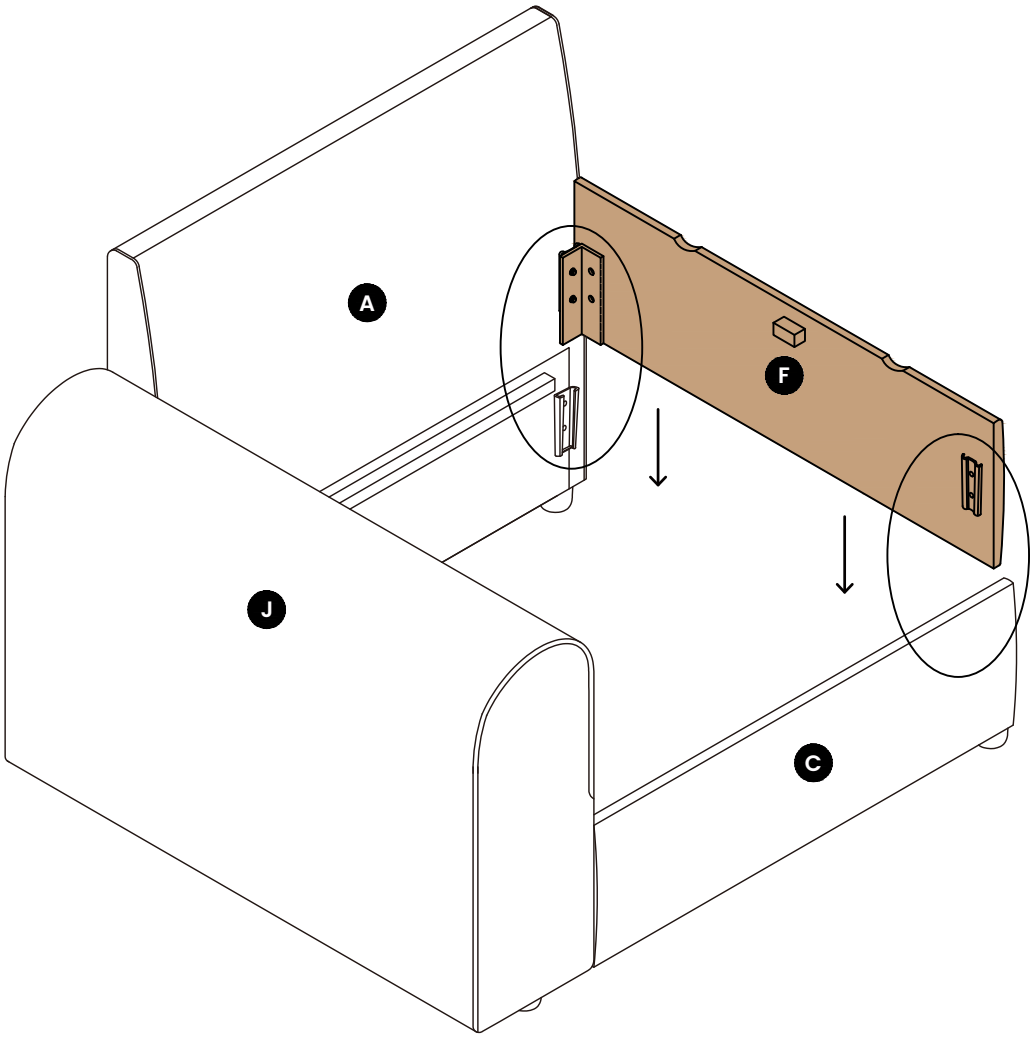


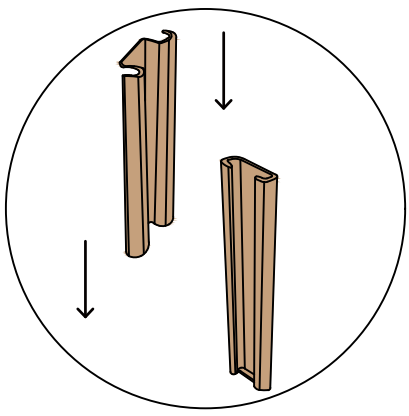


STEP 7

BOX A+C

X1

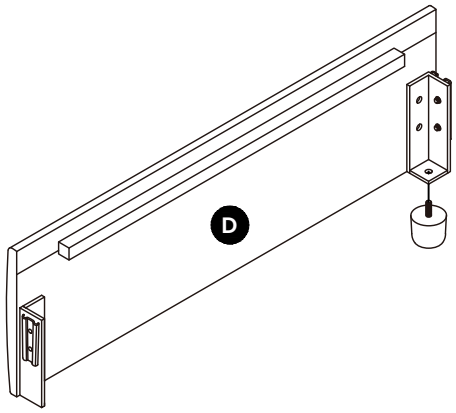


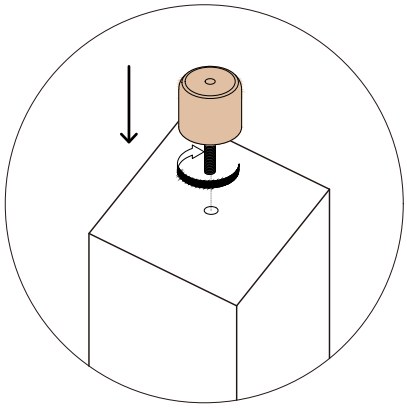


STEP 8

BOX A+C

X2

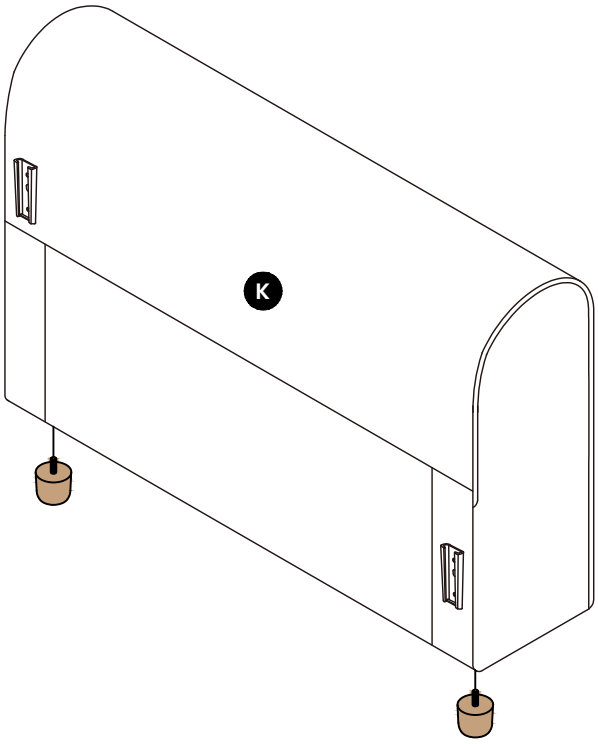


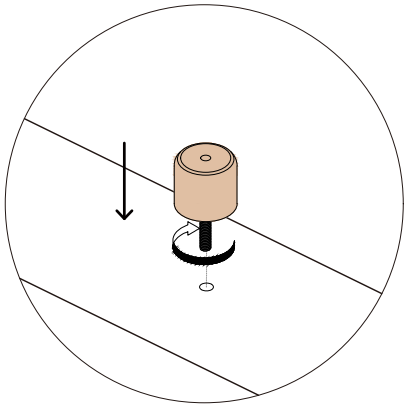


STEP 9

BOX A+C


X1

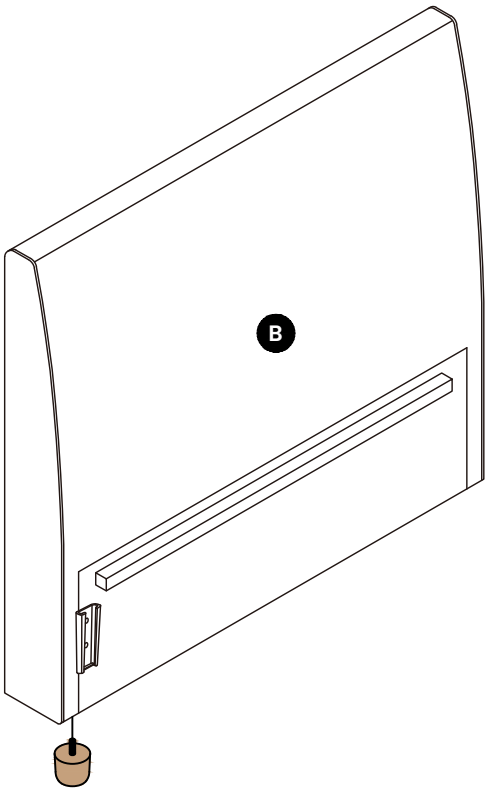


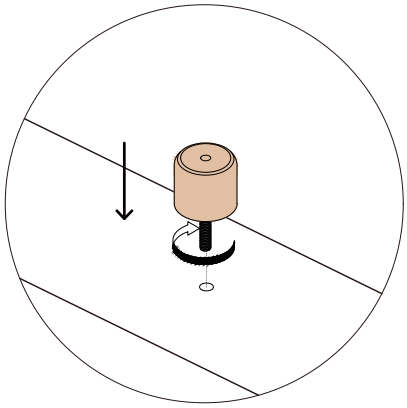

STEP 10


BOX A+C

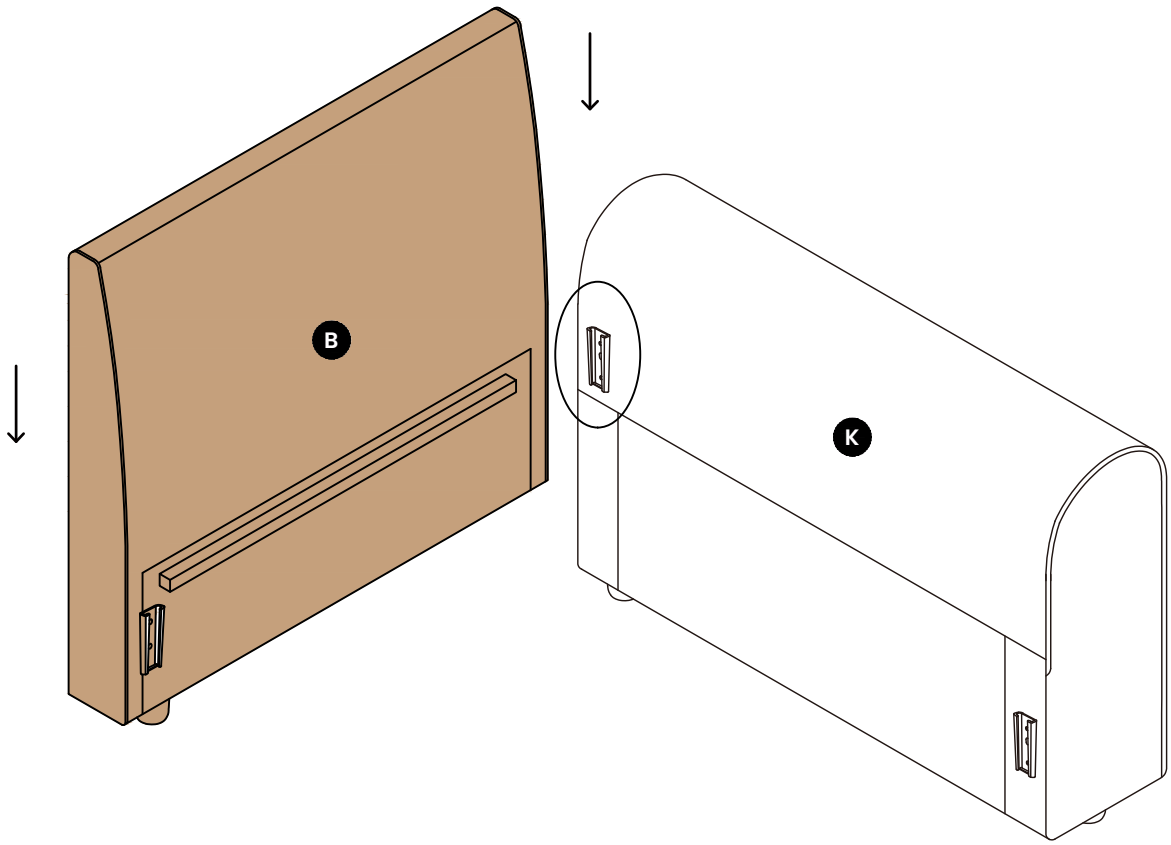


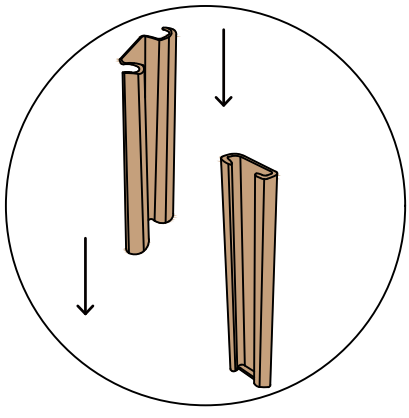

STEP 11


BOX A+C

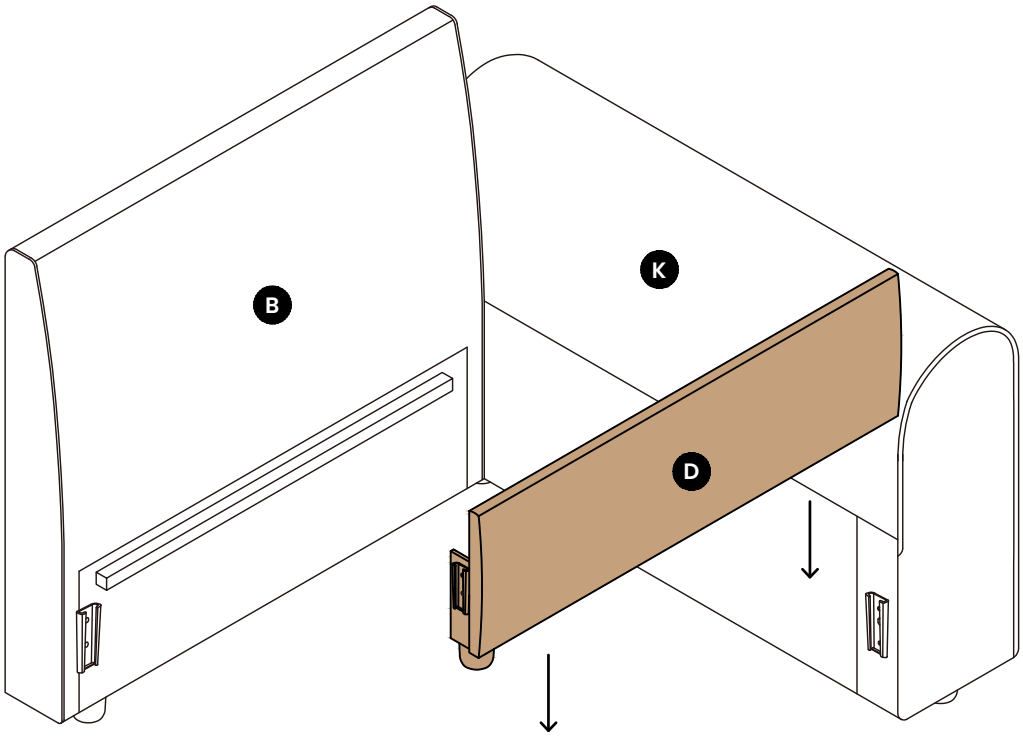


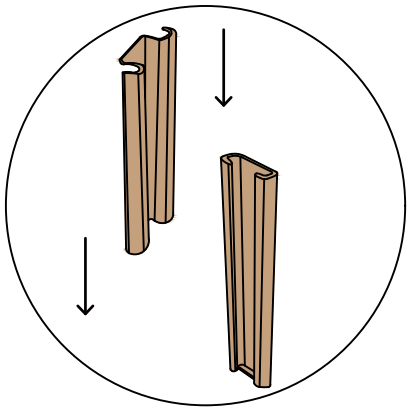

STEP 12

BOX A+C

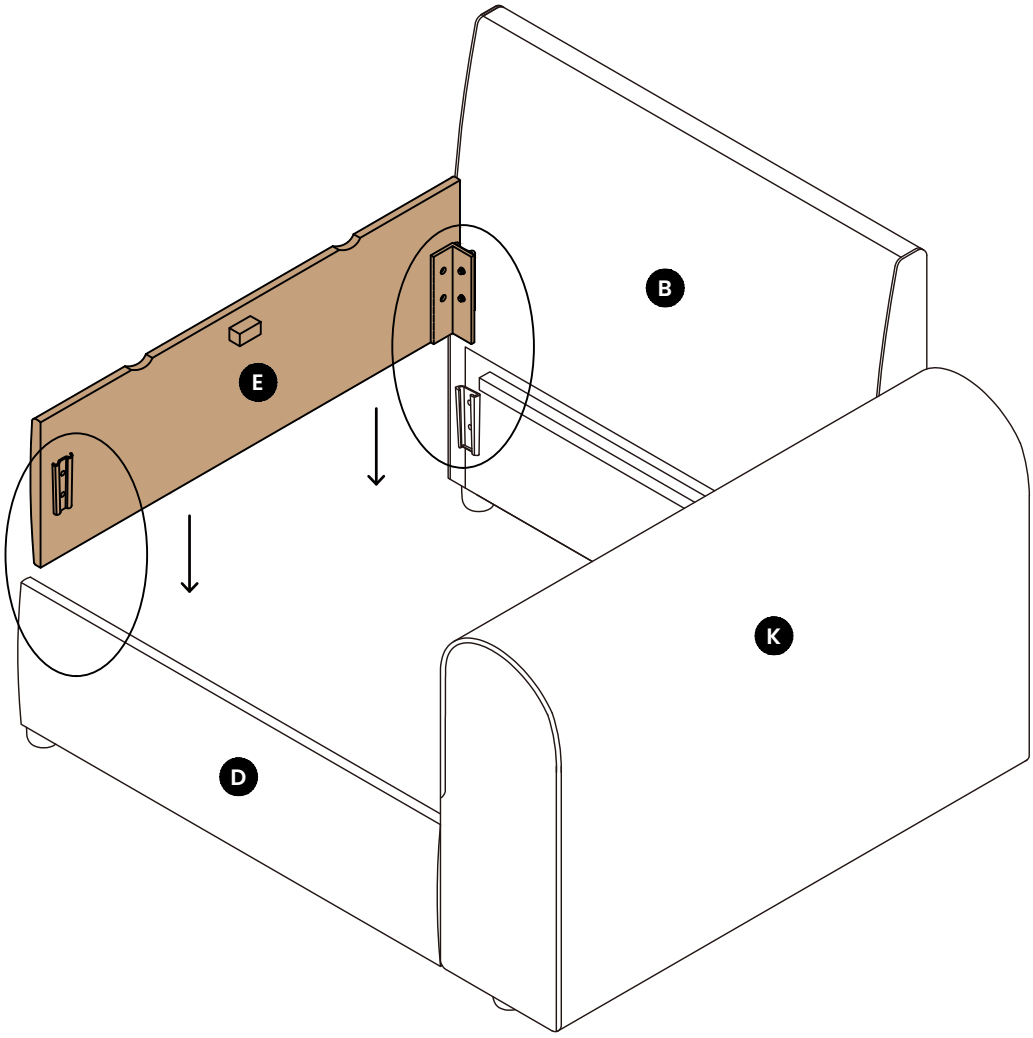

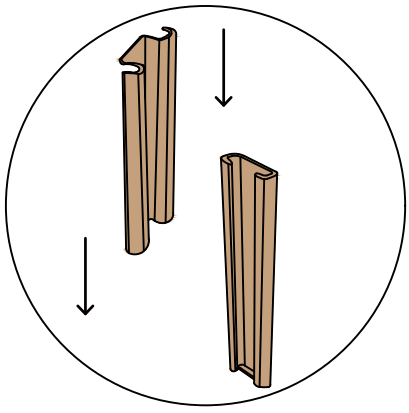



STEP 13

BOX A+C



N X2

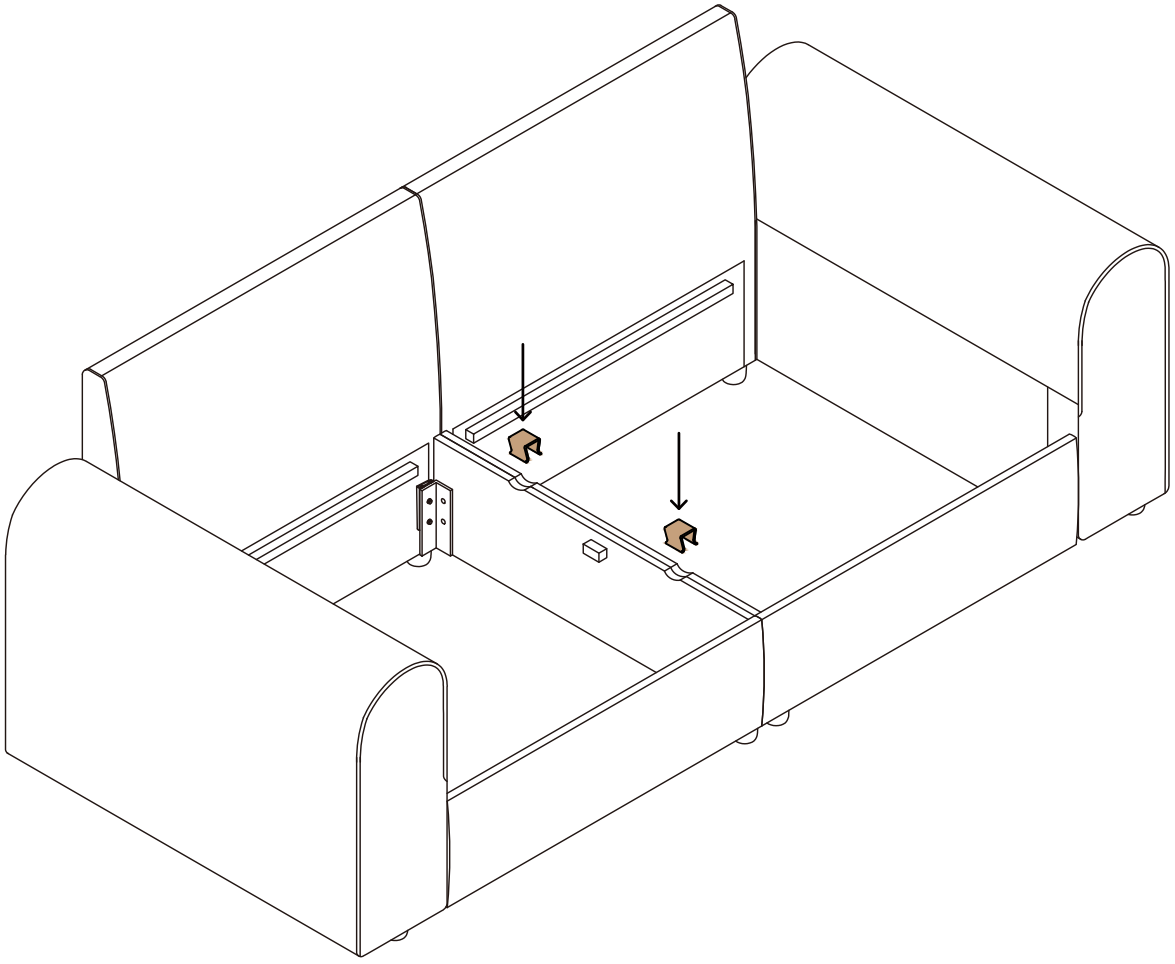


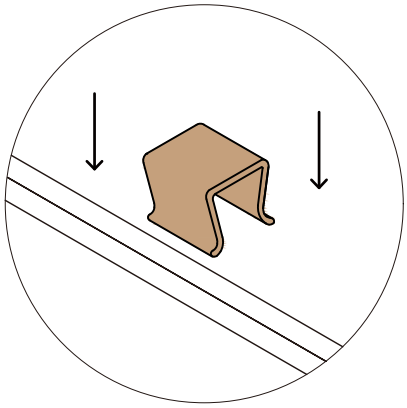


STEP 14

BOX A+C


Note: Follow the correct direction shown in the diagram.

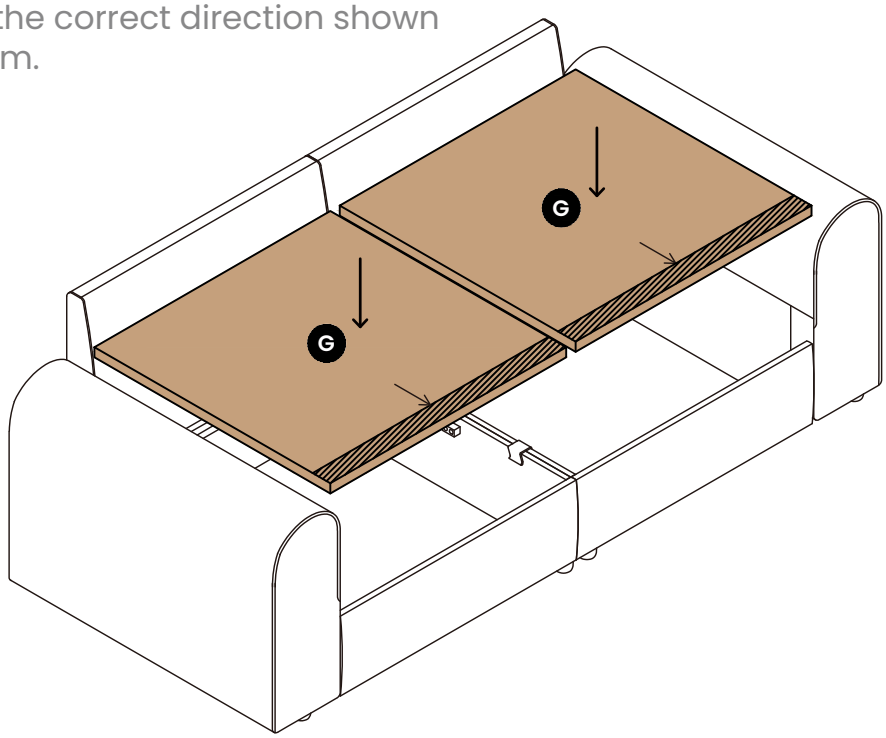

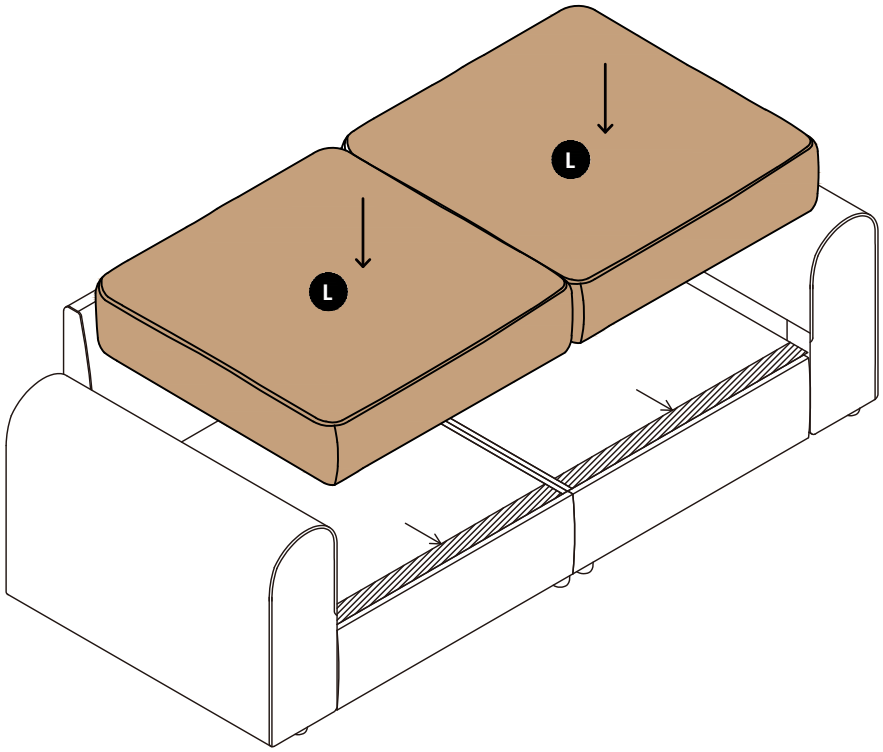


STEP 15

BOX A+C

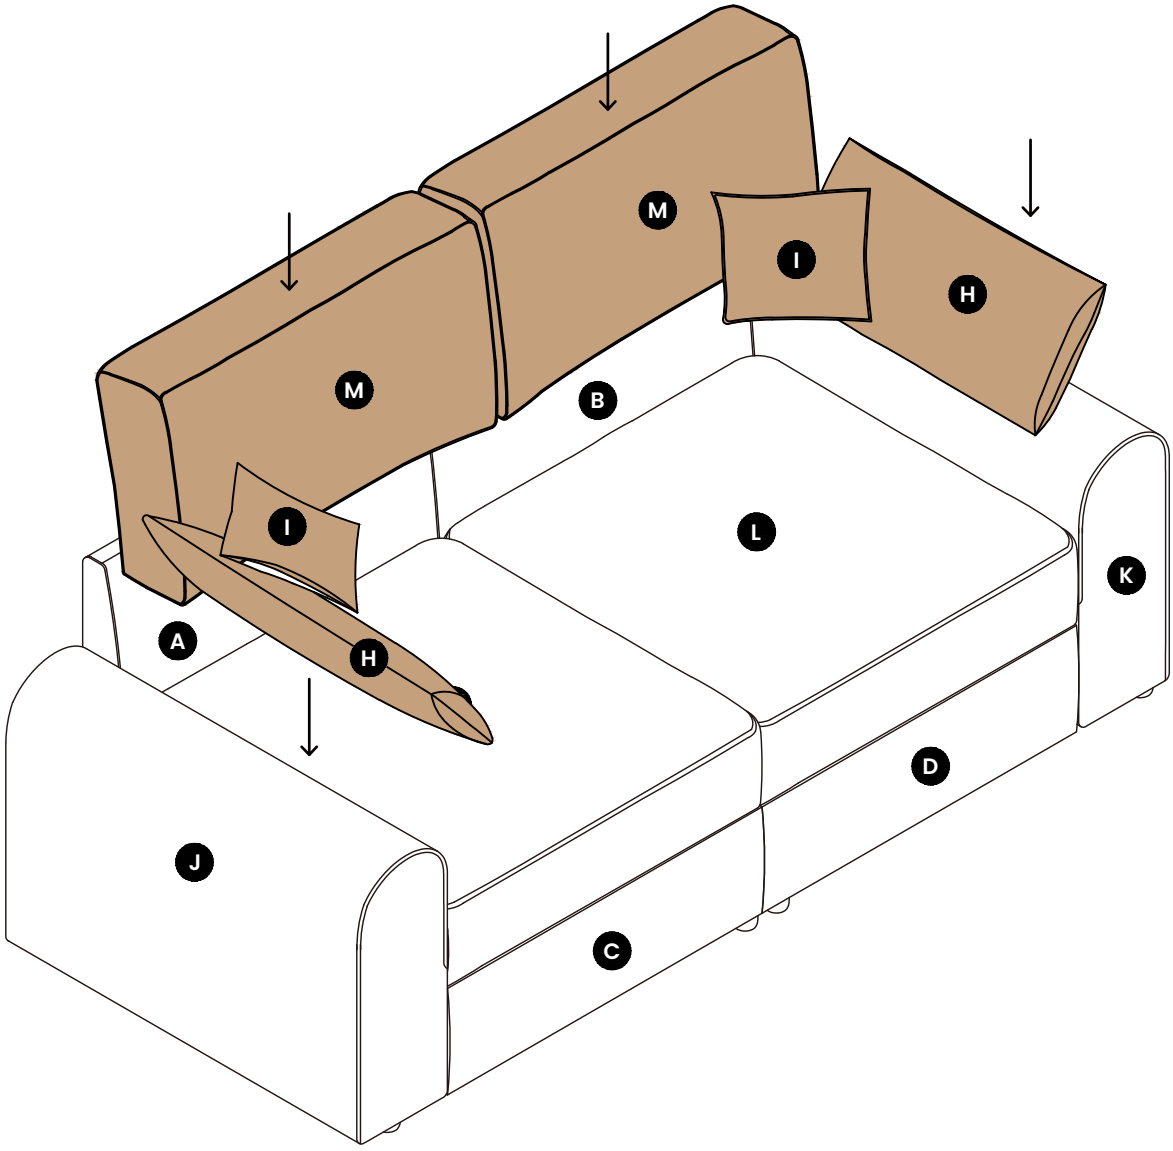


This product is shipped in multiple boxes.
you will receive two boxes of A+C，

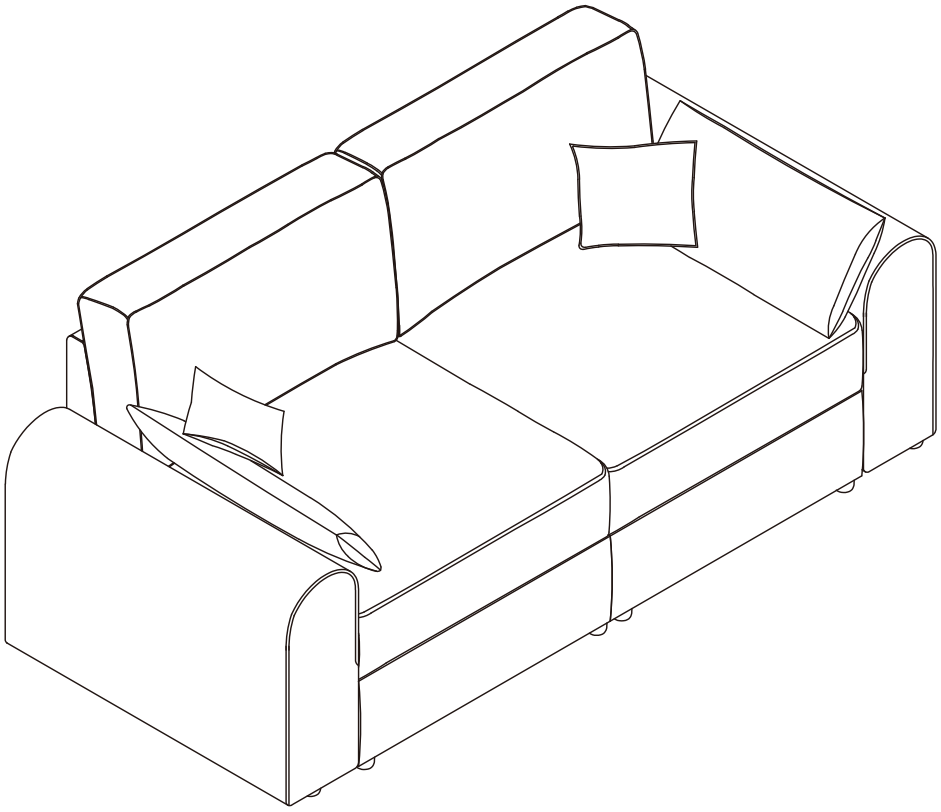


STEP 16

BOX B

X2

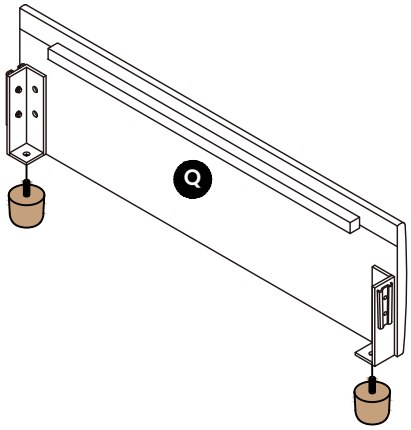


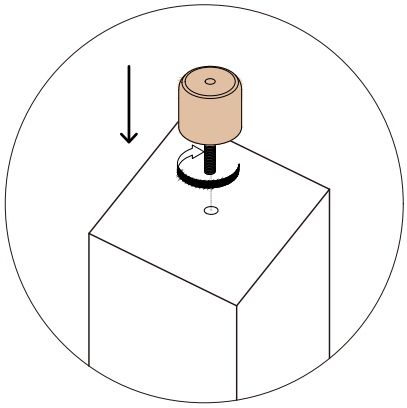


STEP 17

BOX B


X2

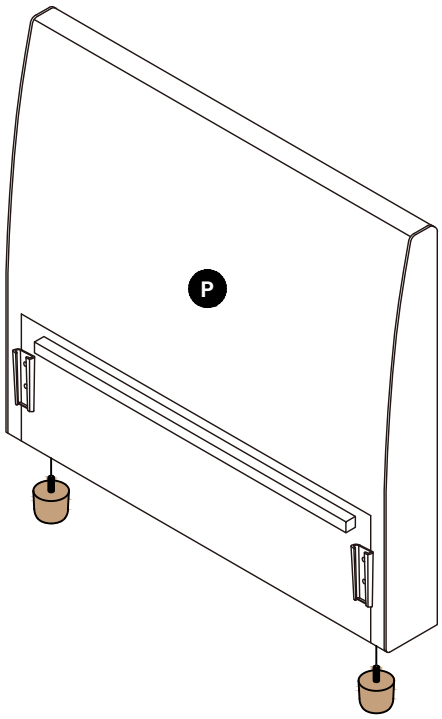


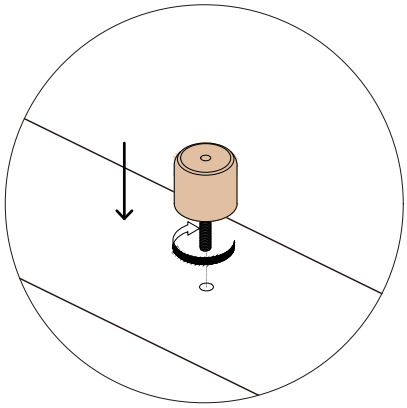

STEP 18


BOX B

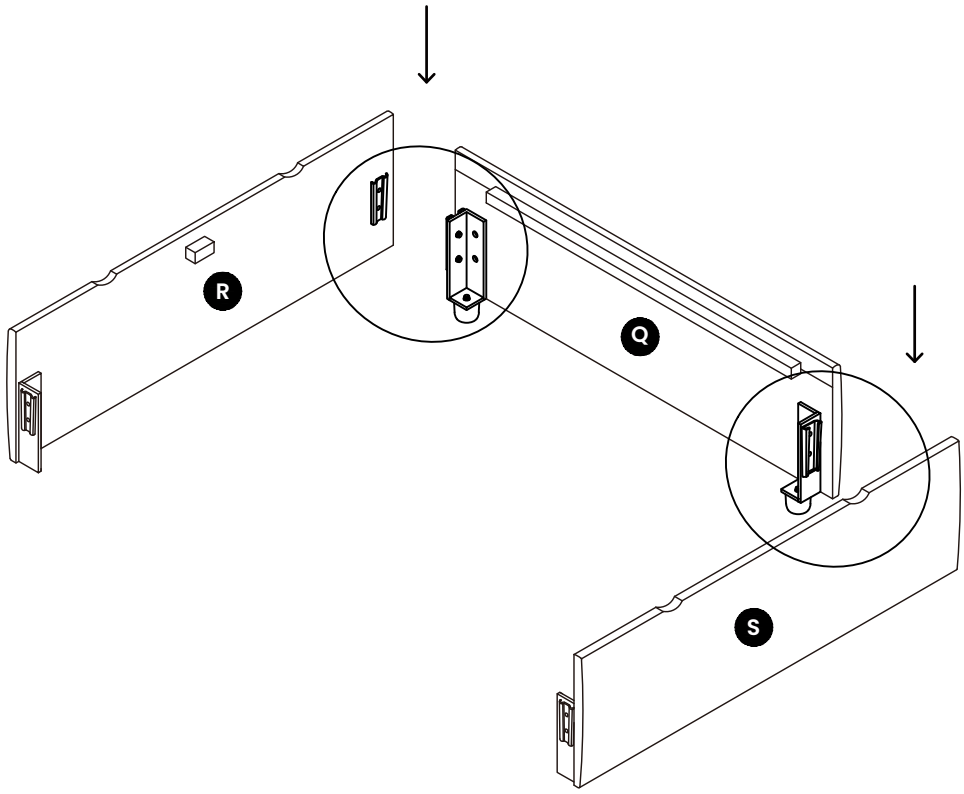


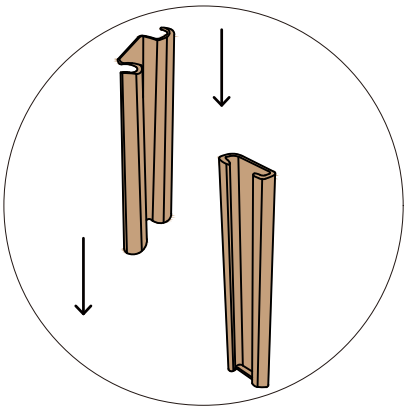

STEP 19


BOX B

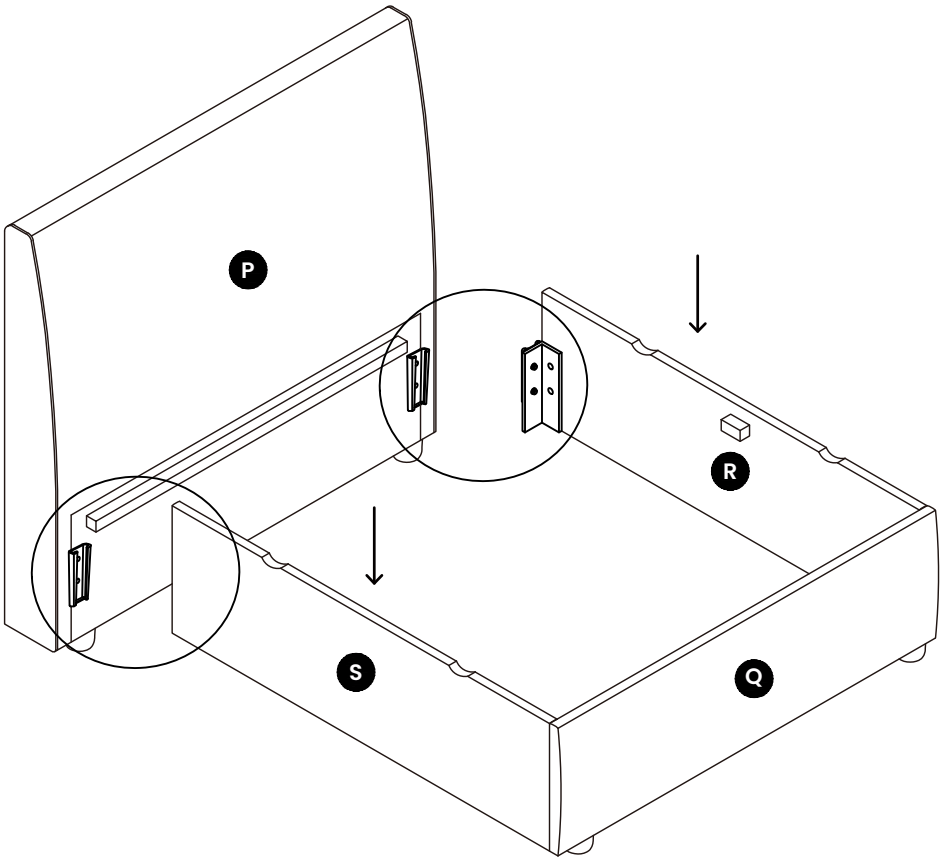


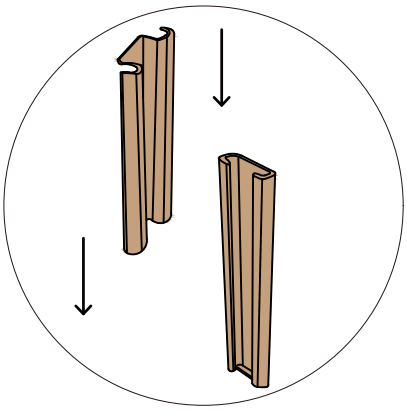

STEP 20


BOX B

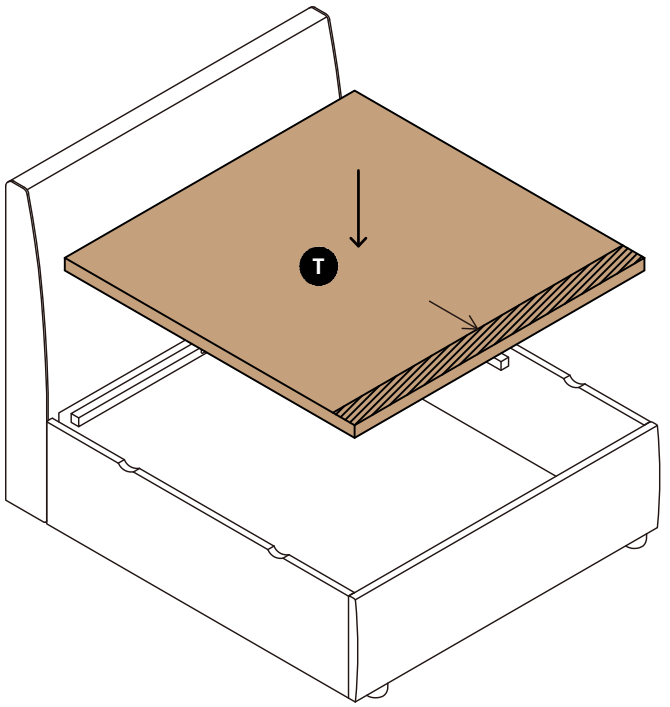

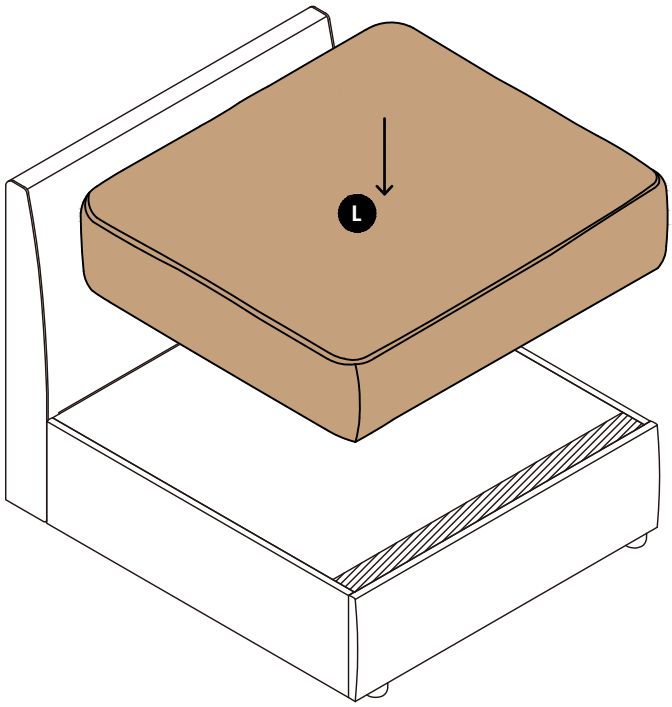

STEP 21


BOX B

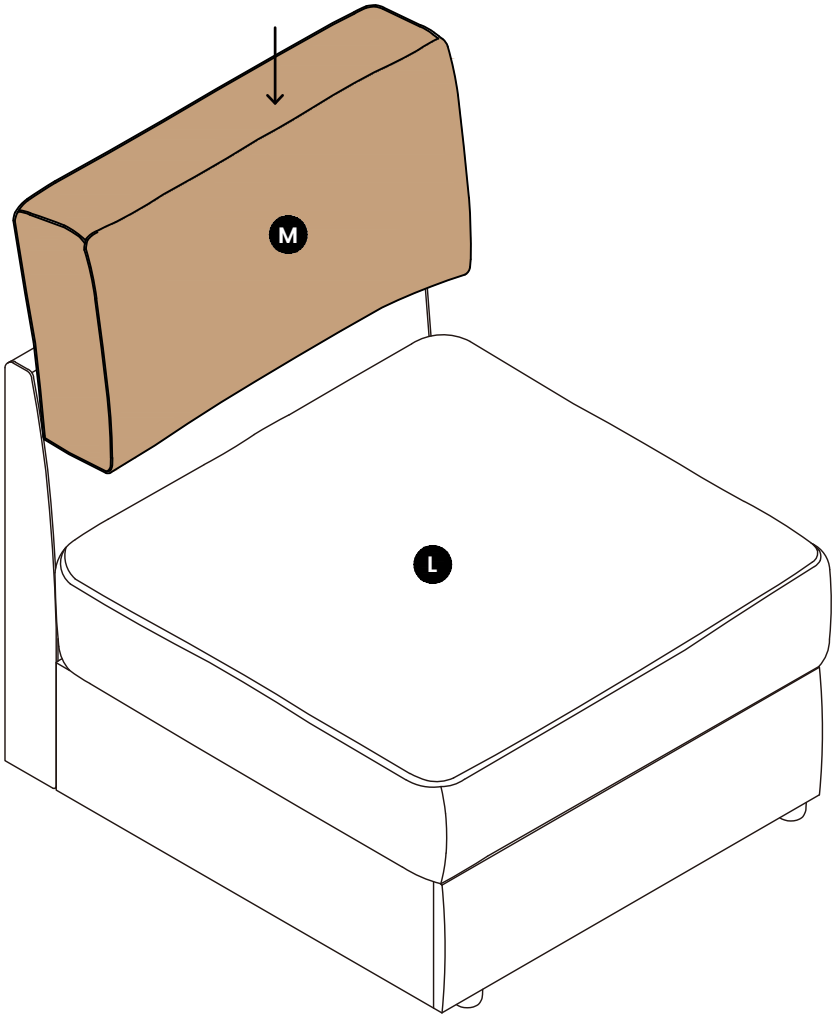


STEP 22

BOX B


X4

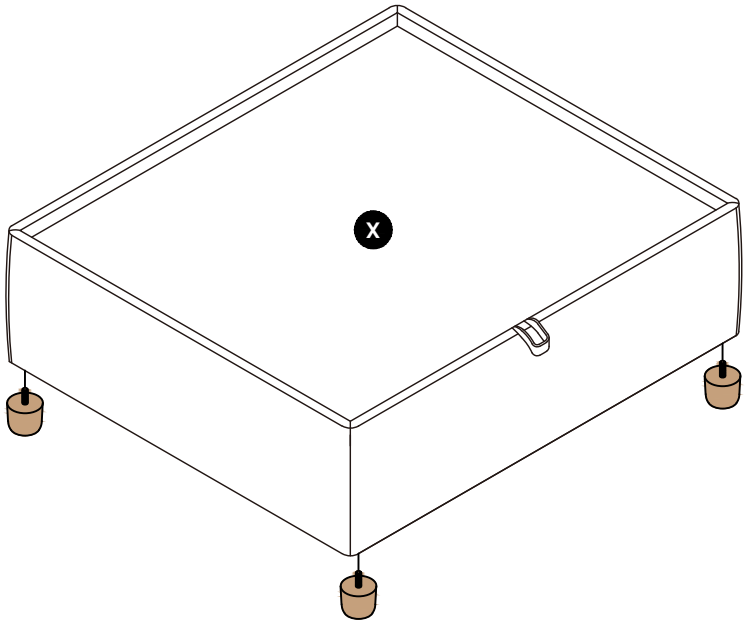

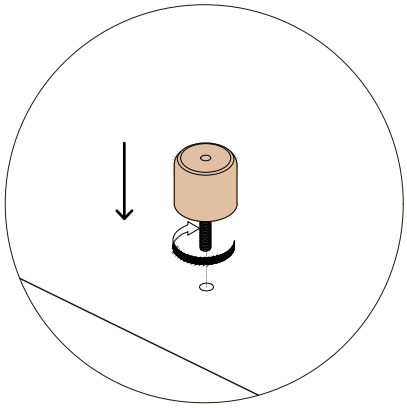


STEP 23

BOX B

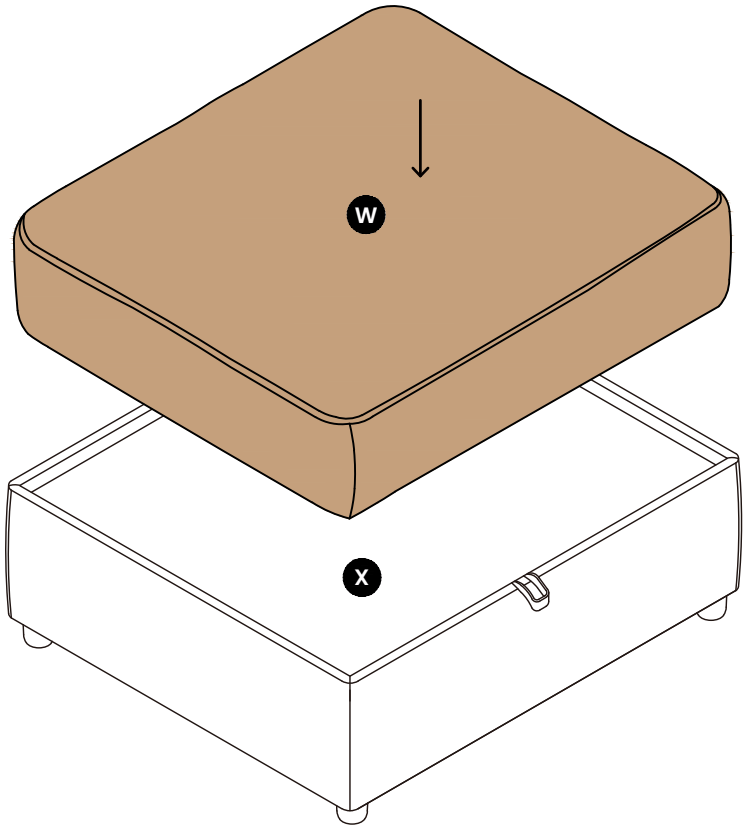

STEP 24


BOX B

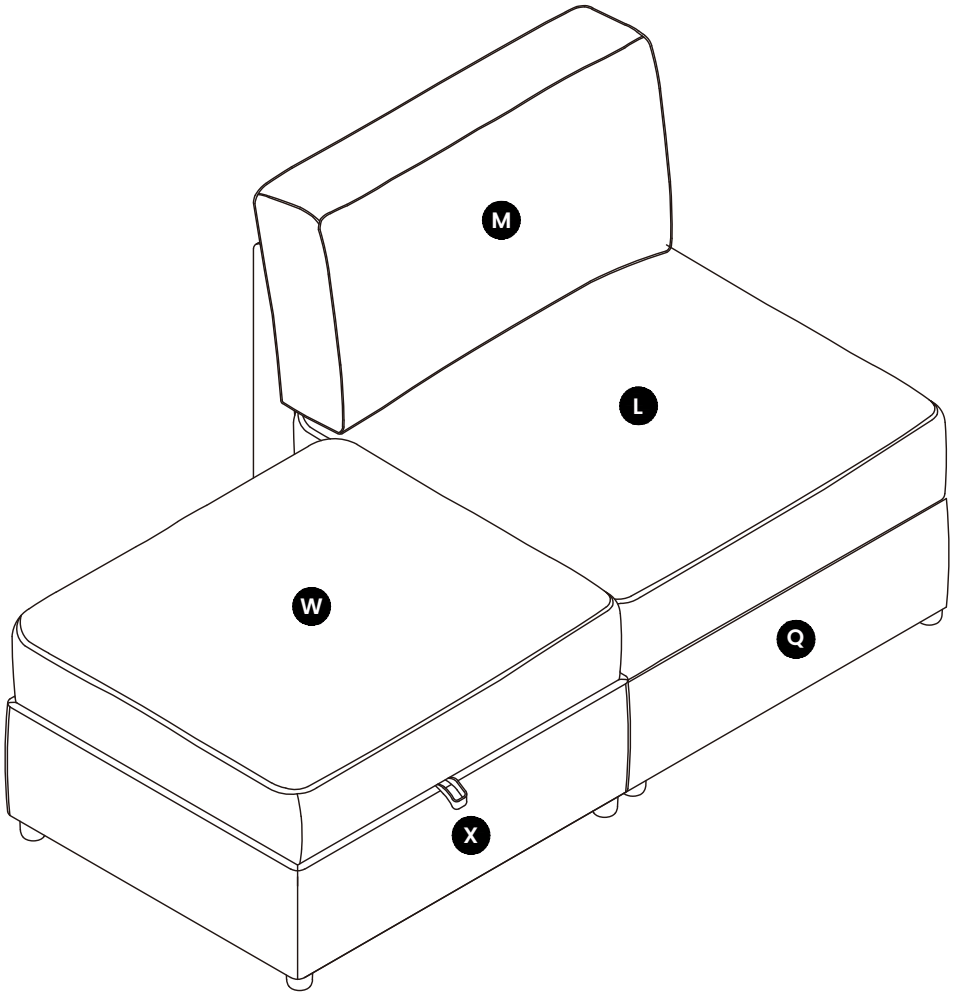


STEP 25

BOX A+B+C

N X4

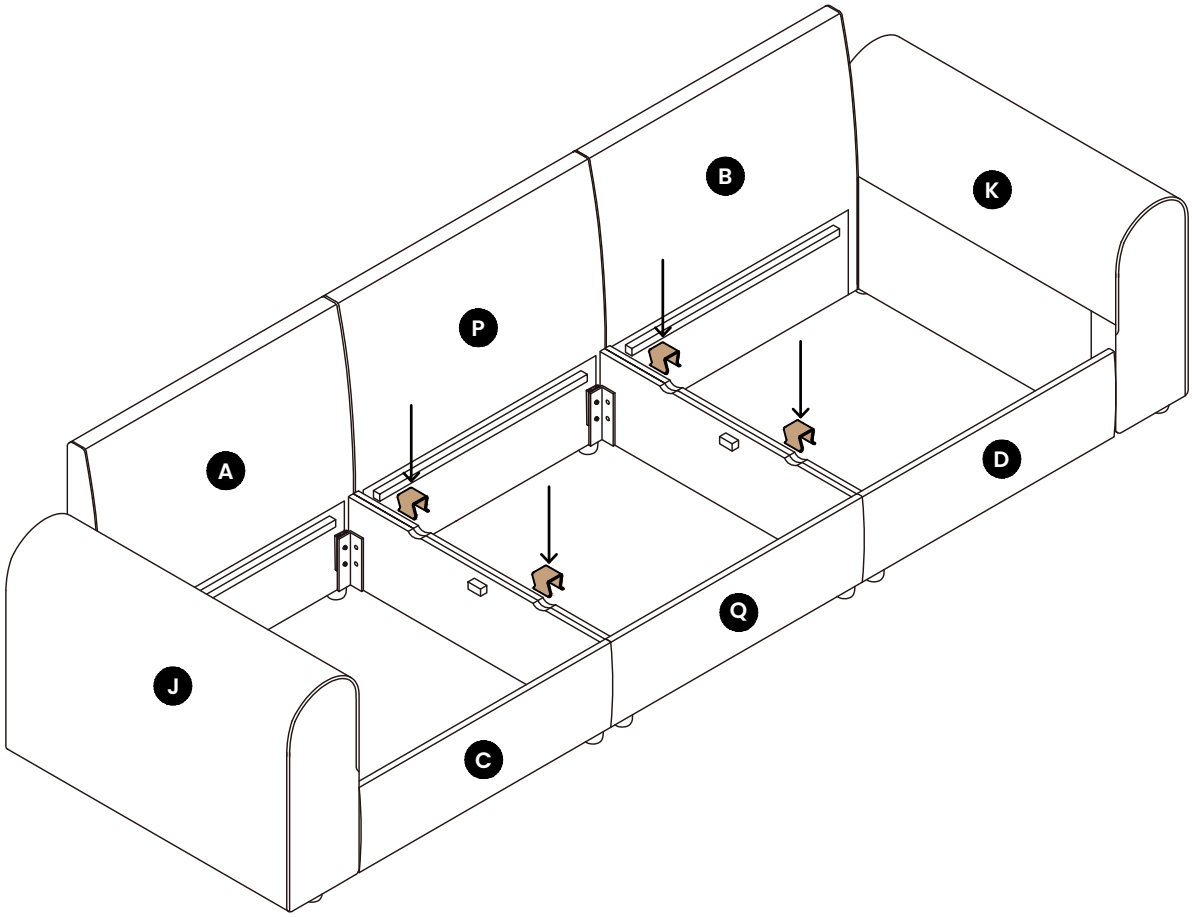


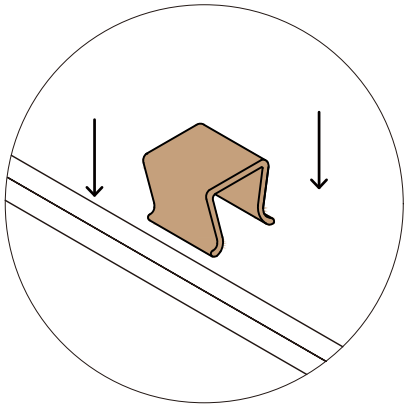


STEP 26

BOX A+B+C


Note: Follow the correct direction shown in the diagram.

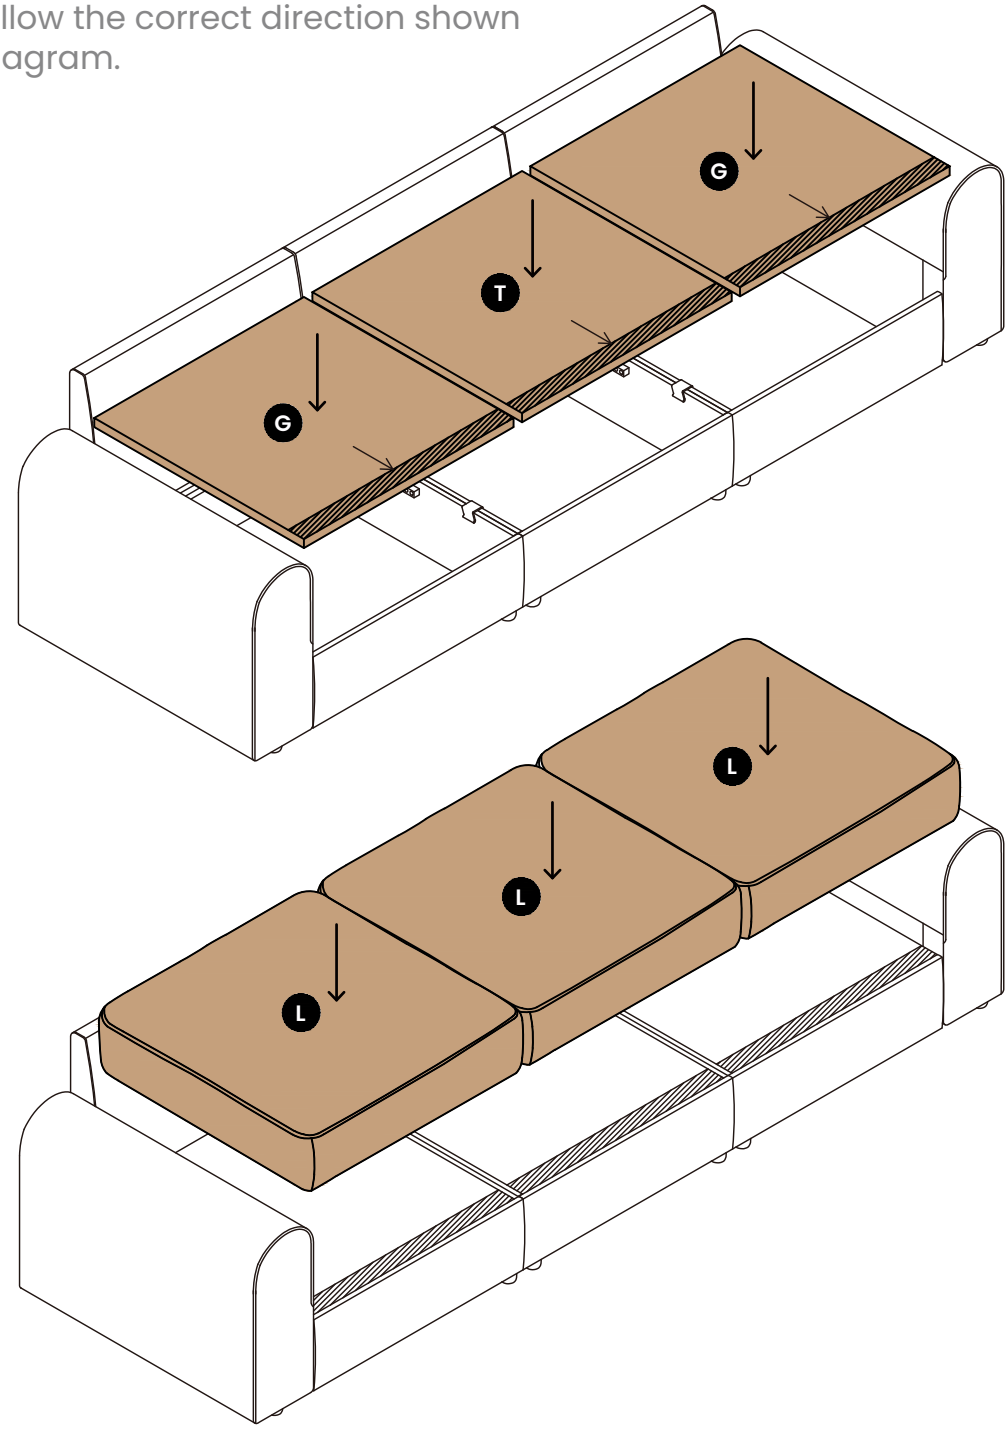

STEP 27

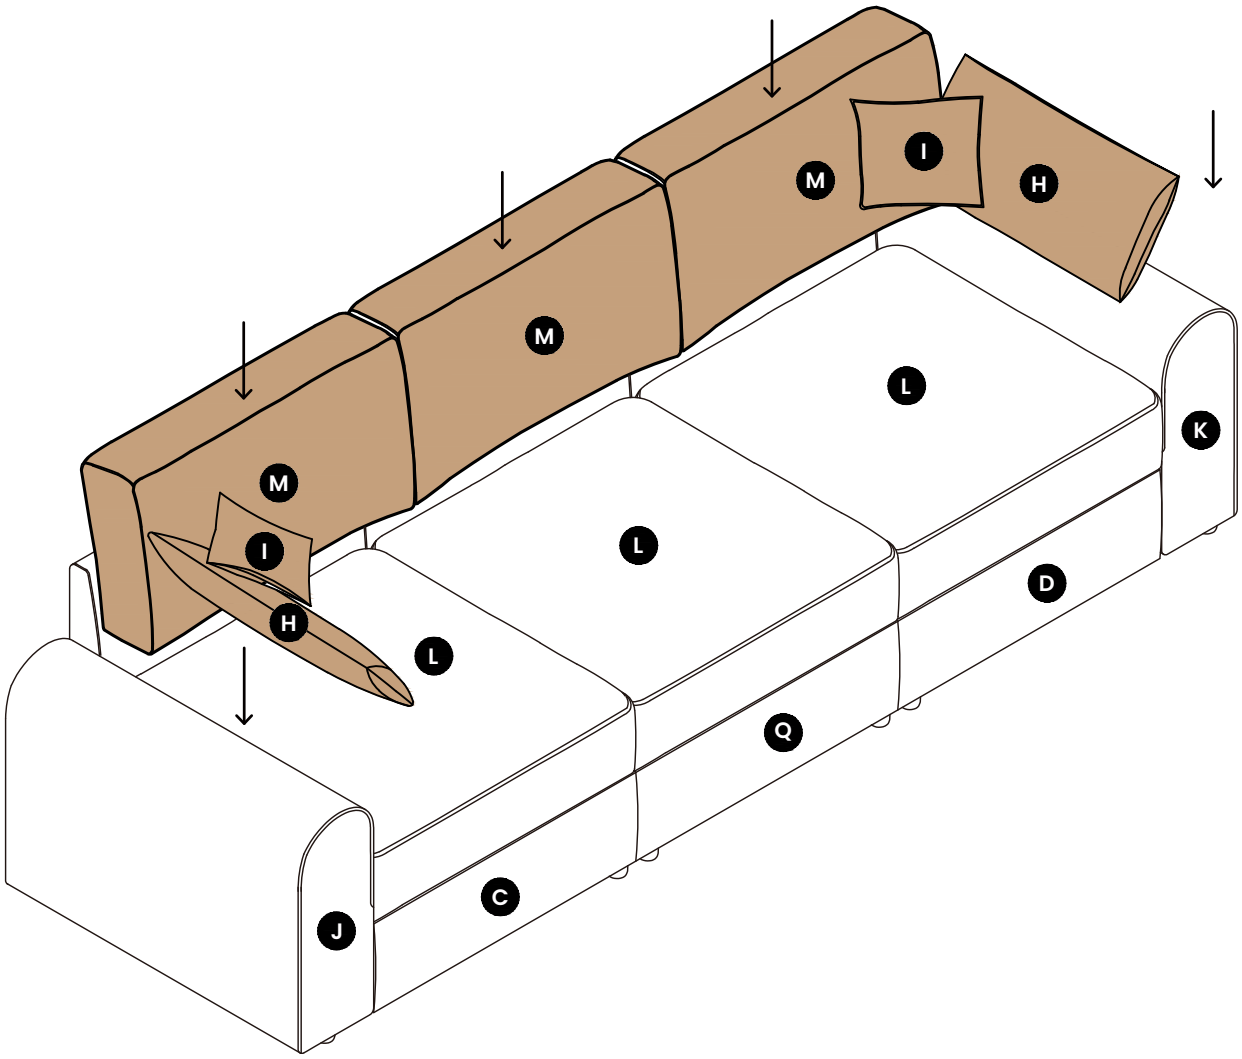

This product is shipped in multiple boxes.
you will receive three boxes of A+B+C，

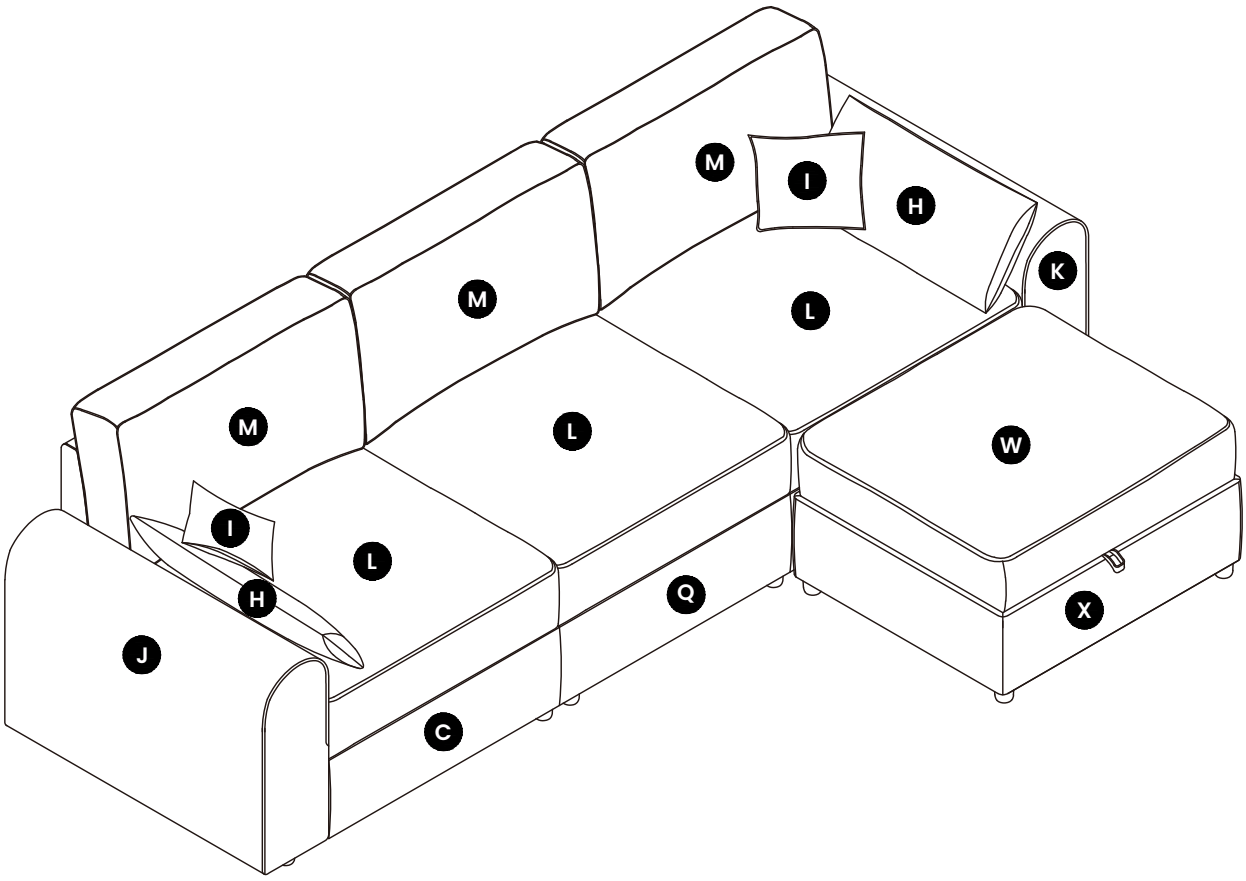



STEP 28

BOX A+B+B+C



N X6

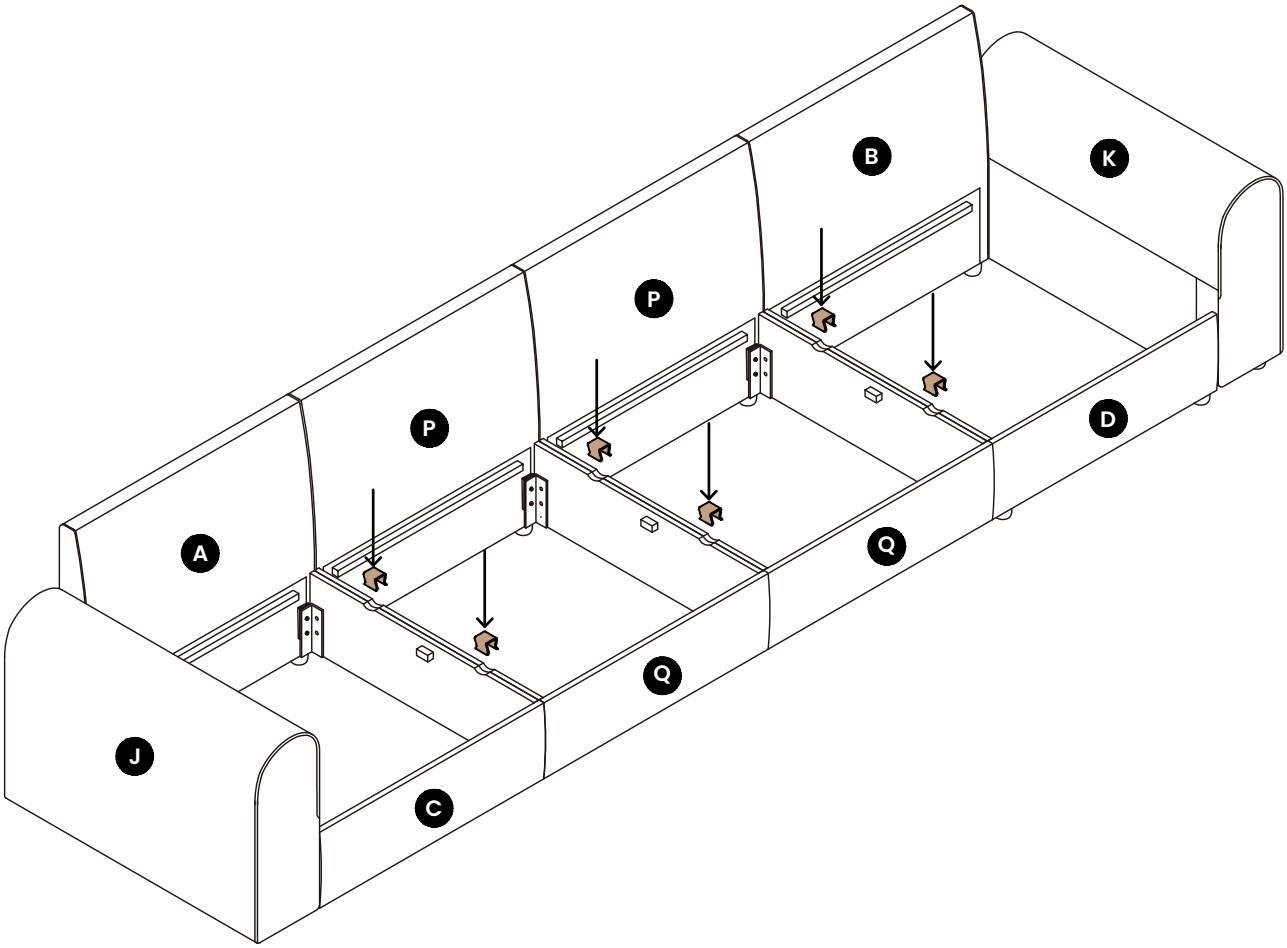


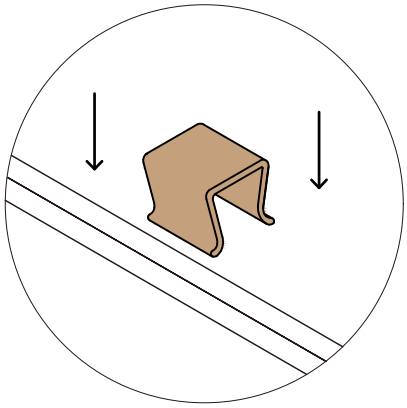

STEP 29


BOX A+B+B+C

Note: Follow the correct direction shown in the diagram.

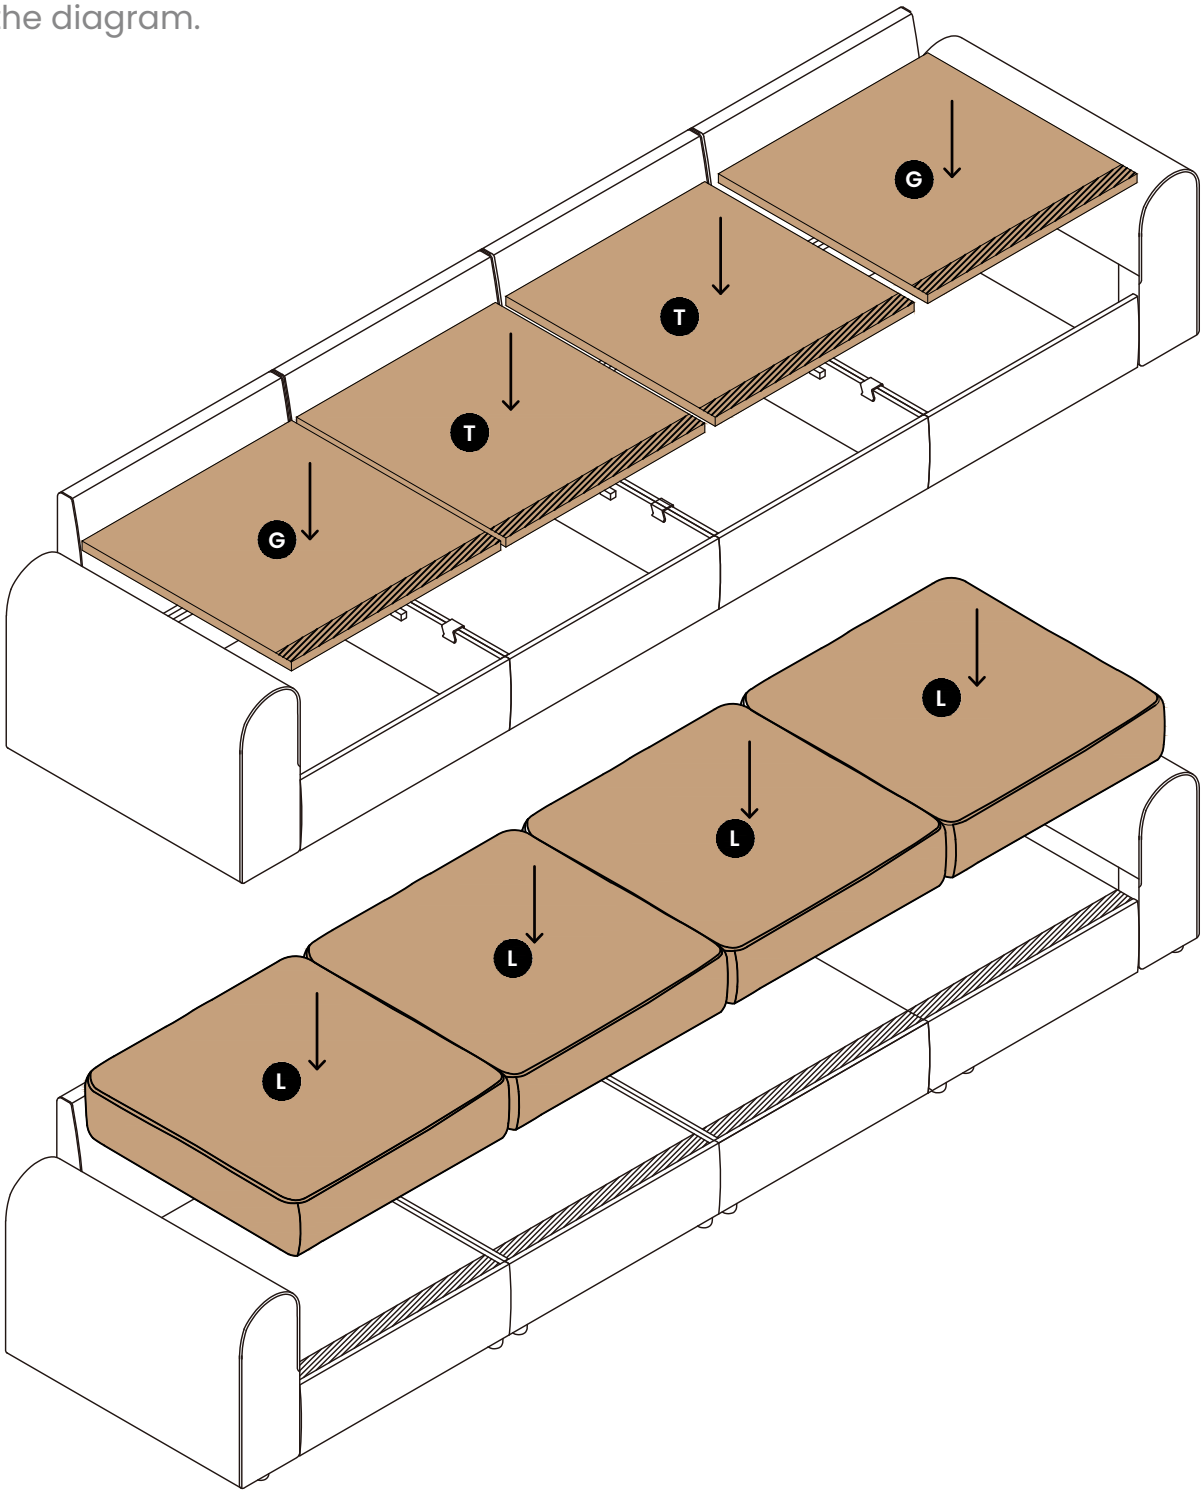


STEP 30

BOX A+B+B+C

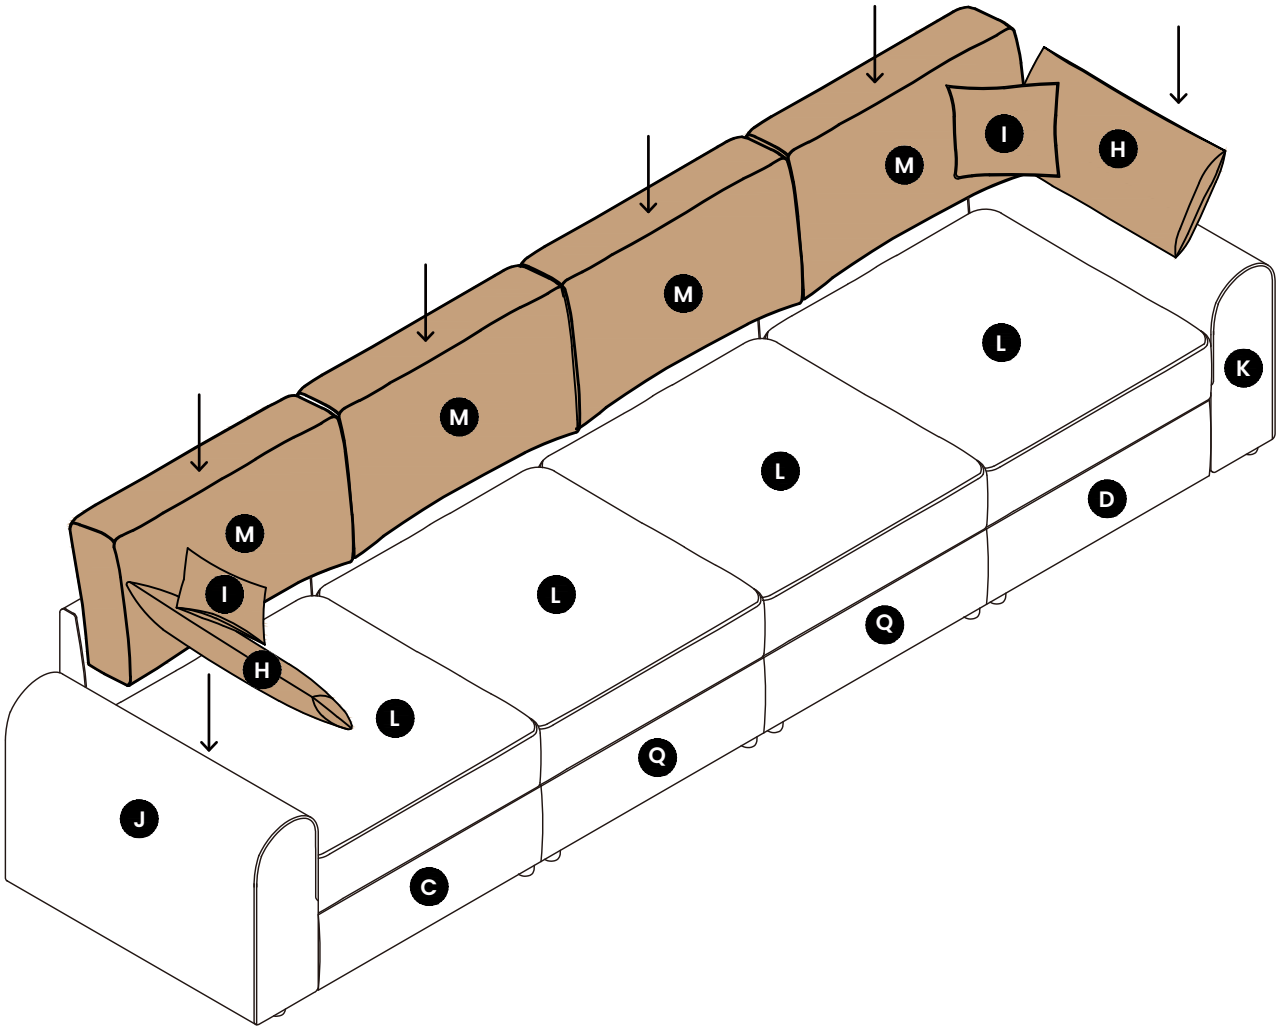

This product is shipped in multiple boxes.
you will receive four boxes of A+B+B+C，

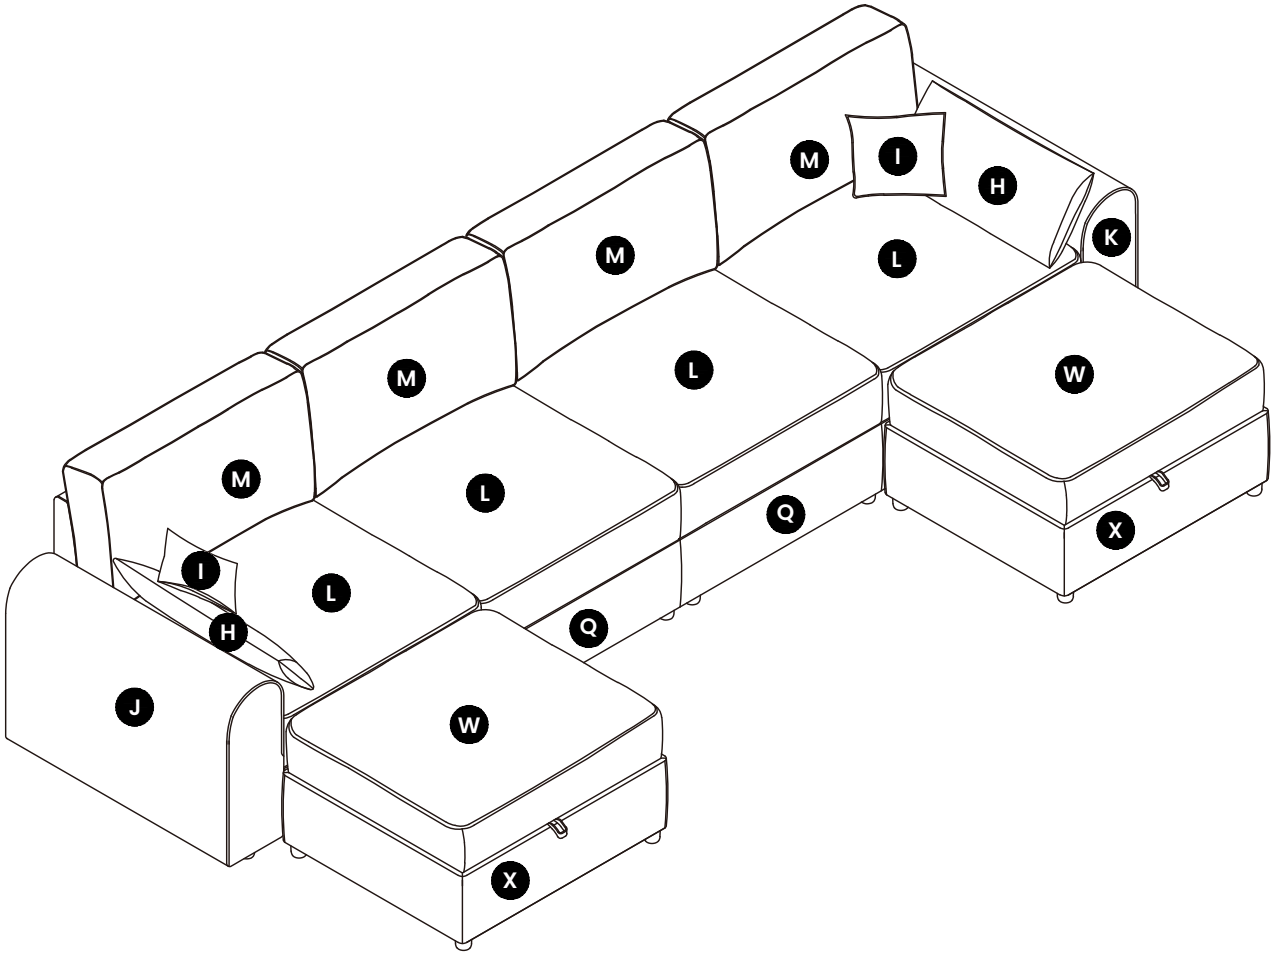

Fabric Down Sofa Care Guide

Air-Drying Care: Refresh with Moderate Sunlight

- If the sofa is consistently exposed to humid conditions, it may develop mold or odors. On sunny days, air-dry it outdoors once a month (or every 2–3 months in dry climates). Avoid excessive sun exposure to prevent fabric fading and down fiber damage.

- Limit sun exposure to 2–3 hours. Gently pat the surface during air-drying to help fluff the down. Avoid prolonged exposure (over 4 hours), which may cause fabric stiffness or down clumping.

Cleaning Care: Keep Your Sofa Fresh

- If the sofa cover is removable (check product specifications—some designs are non-removable), machine wash it on a gentle cycle using a mild detergent in cold water (below 86°F). Do not spin-dry; however, a short dehydration cycle of 1–2 minutes is acceptable. Reattach the cover promptly after drying to prevent fabric shrinkage.

By following these care instructions, your down-filled sofa will remain soft and comfortable for years to come.

If you have any questions, please feel free to reach out to our customer service team!

ModernMate

After-Sales Service Hotline：(800) 661-5928
Support Hours: Mon-Fri, 9:00 am-5:00 pm PST/PDT