
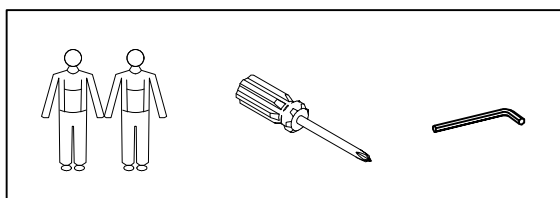


Headboard with Side Fabric Drawer

ASSEMBLY INSTRUCTION

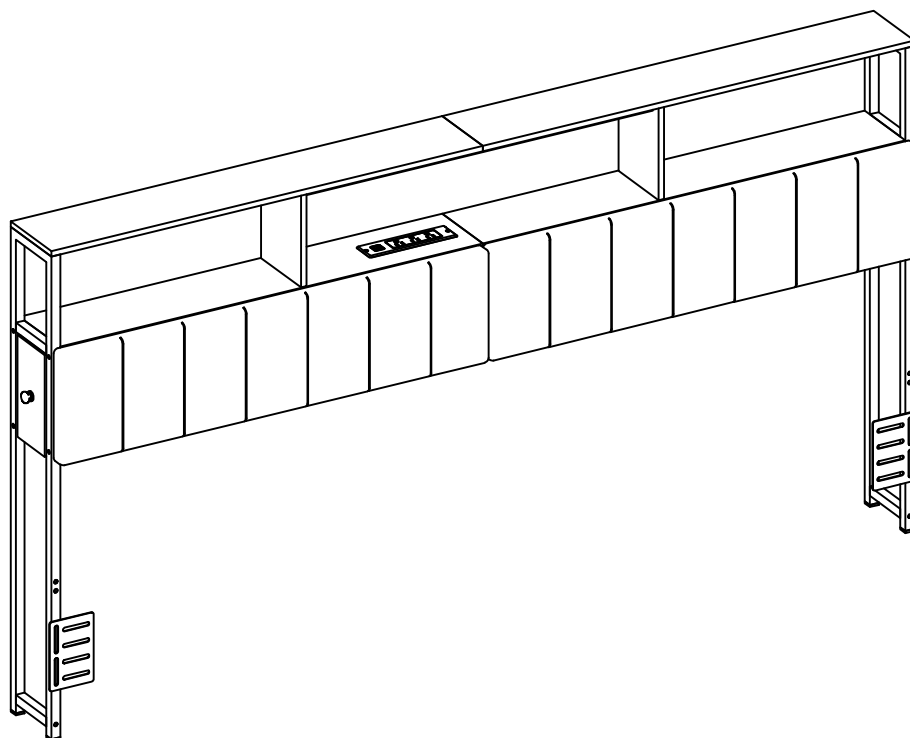

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.


Dear Customers,

Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.


If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.






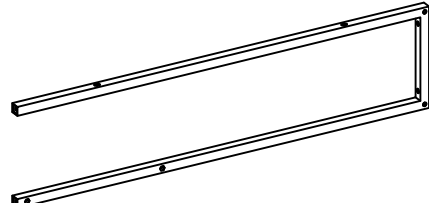
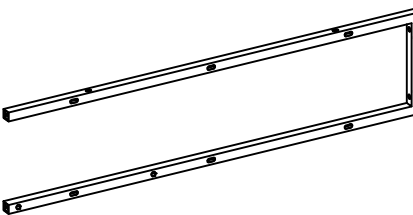
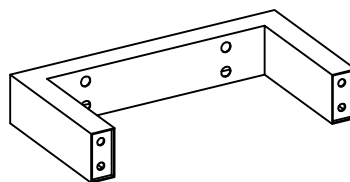
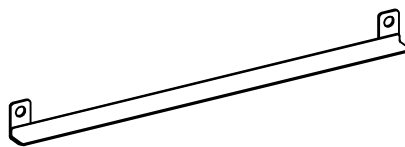
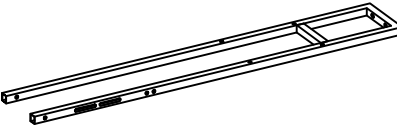
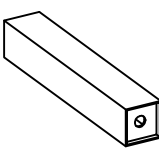
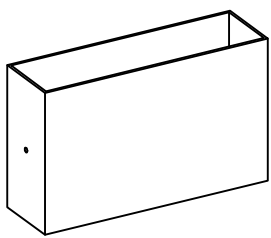

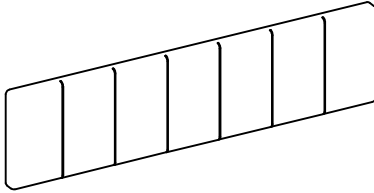
Thanks again for your order. Please feel free to any problem regarding assembling or the product itself. We will do everything we can to resolve it.

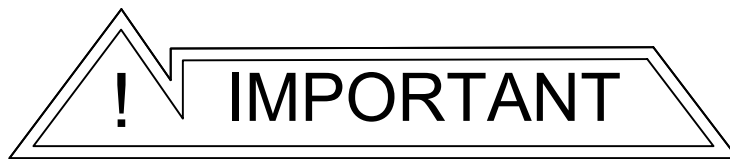








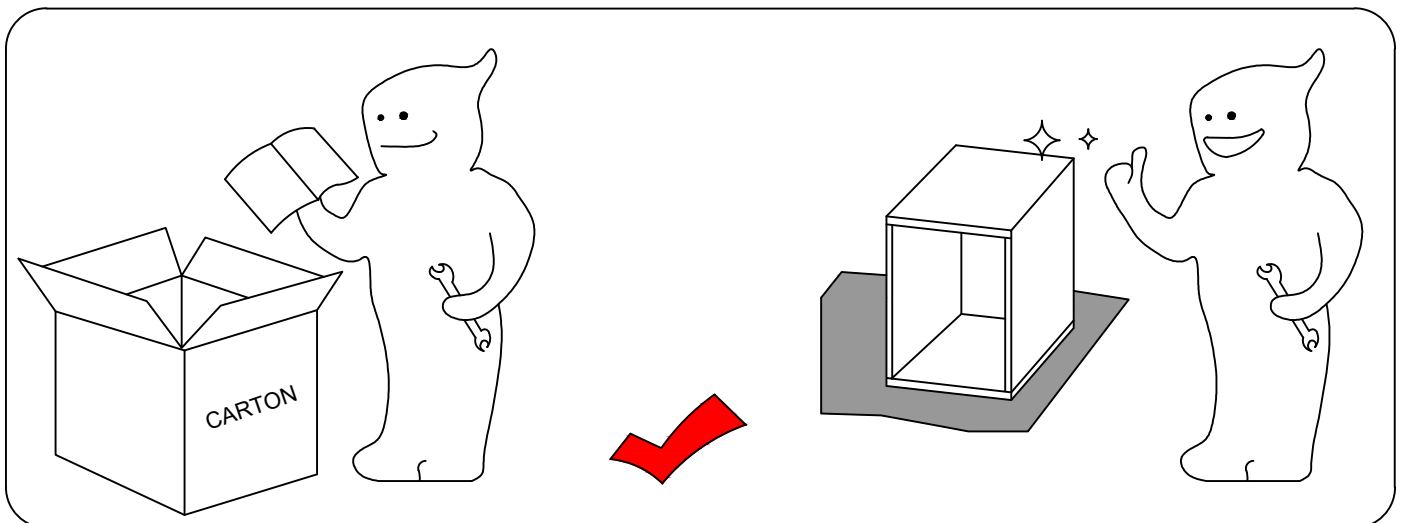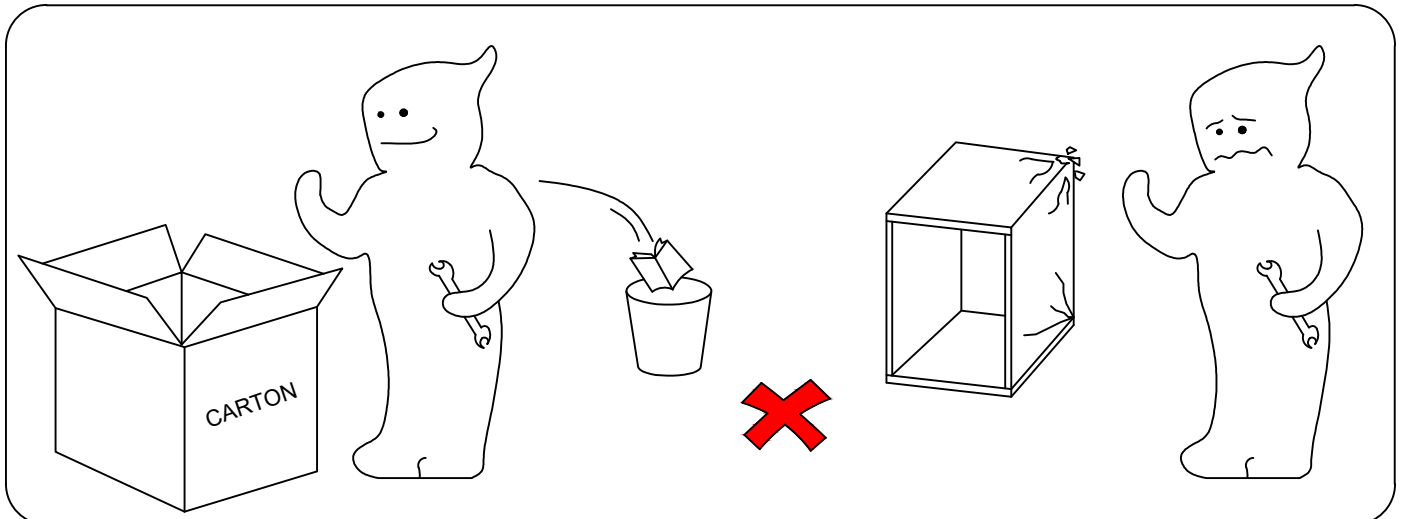

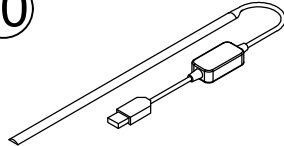


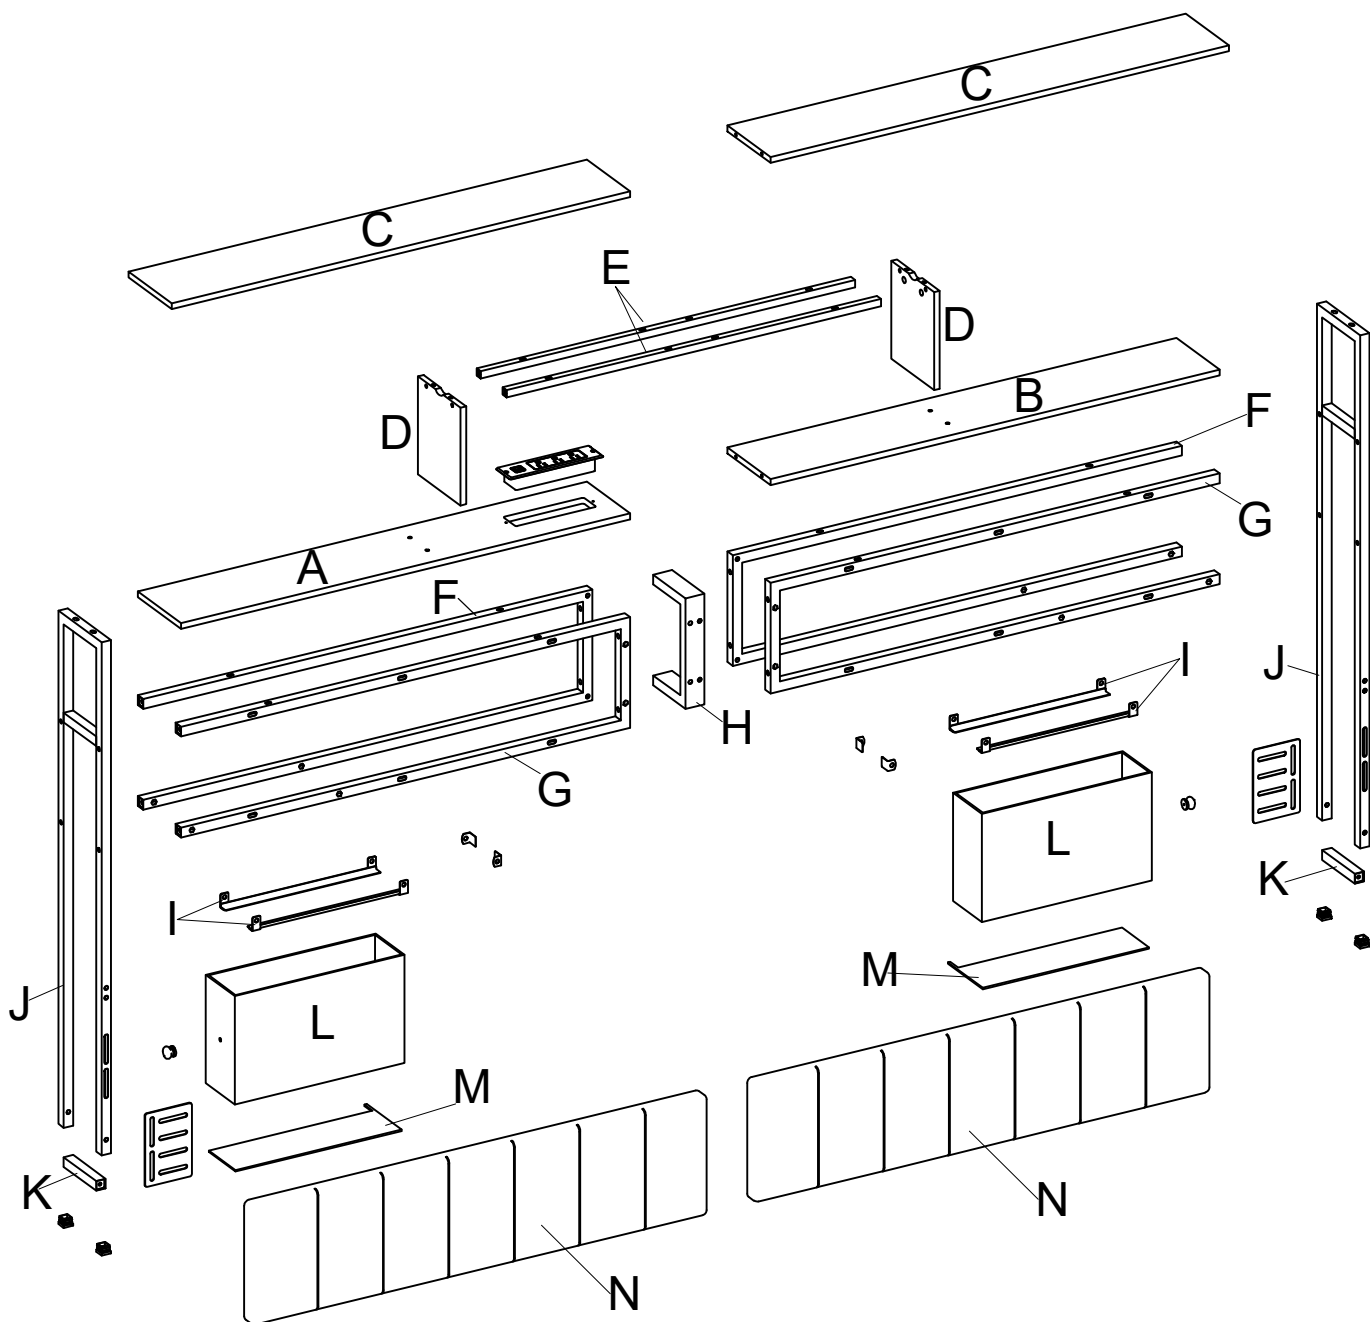







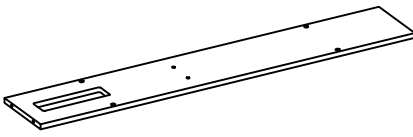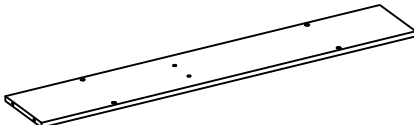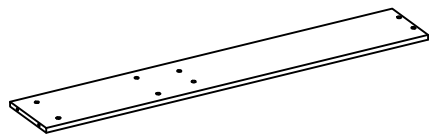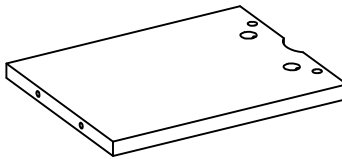






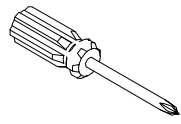
Please follow the instruction manuals and use a pad to protect the product during your assembly.






PART LIST		
A  1 pc	B  1 pc	C  2 pcs
D  2 pcs	E  2 pcs	F  2 pcs
G  2 pcs	H  1 pc	I  L332 4 pcs
J  2 pcs	K  2 pcs	L  363x107x221 2 pcs
M  2 pcs	N  2 pcs	



HARDWARE LIST

<div>①</div> <div></div> <div>M6x3016 pcs</div>	<div>②</div> <div></div> <div>M6x554 pcs</div>	<div>③</div> <div></div> <div>M6x16x1.016 pcs</div>		
<div>④</div> <div></div> <div>8 pcs</div>	<div>⑤</div> <div></div> <div>2 pcs</div>	<div>⑥</div> <div></div> <div>10mm1 pc</div>	<div>⑦</div> <div></div> <div>M3x1219 pcs</div>	
<div>⑧</div> <div></div> <div>1 pc</div>	<div>⑨</div> <div></div> <div>RF Remote Control1 pc</div>	<div>⑩</div> <div></div> <div>King: 180cm Queen: 130cm1 pc</div>	<div>⑪</div> <div></div> <div>3 pcs</div>	
<div>⑫</div> <div></div> <div>11 pcs</div>	<div>⑬</div> <div></div> <div>20x204 pcs</div>	<div>⑭</div> <div></div> <div>M6x3524 pcs</div>	<div>⑮</div> <div></div> <div>M6x2716 pcs</div>	
<div>⑯</div> <div></div> <div>M6x284 pcs</div>	<div>⑰</div> <div></div> <div>Ø124 pcs</div>	<div>⑱</div> <div></div> <div>M612 pcs</div>	<div>⑲</div> <div></div> <div>M6x188 pcs</div>	
<div>⑳</div> <div></div> <div>4 pcs</div>	<div>㉑</div> <div></div> <div>2 pcs</div>	<div>㉒</div> <div></div> <div>M4x102 pcs</div>	<div>㉓</div> <div></div> <div>M6x228 pcs</div>	
<div>㉔</div> <div></div> <div>M6x404 pcs</div>	<div>㉕</div> <div></div> <div>M6x304 pcs</div>	<div>㉖</div> <div></div> <div>M6x154 pcs</div>	<div>㉗</div> <div></div> <div>M42 pcs</div>	<div>㉘</div> <div></div> <div>1 pc</div>

STEP 1

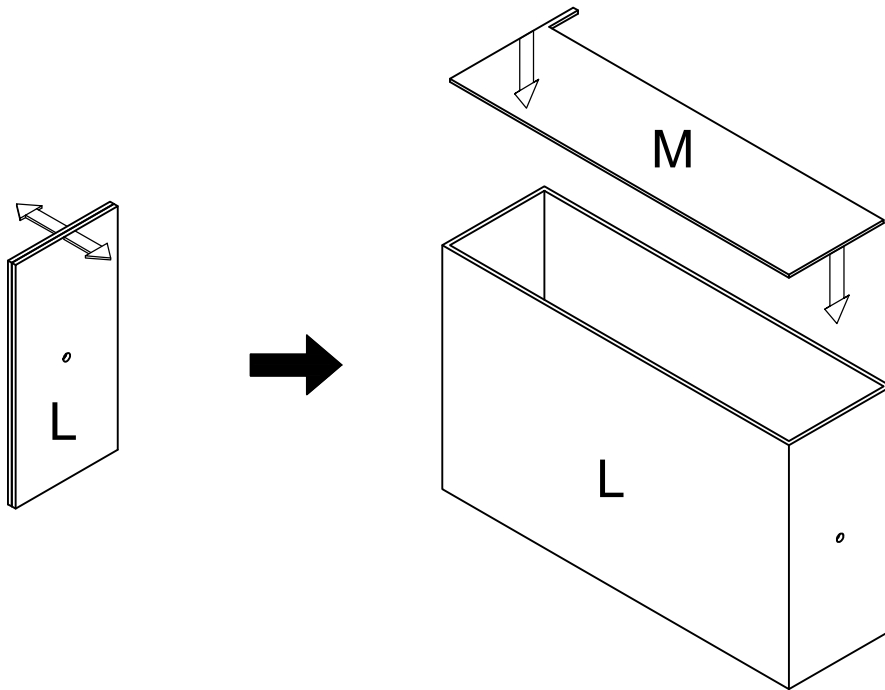



STEP 2

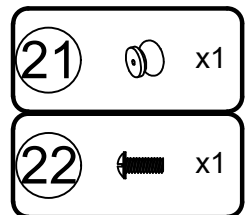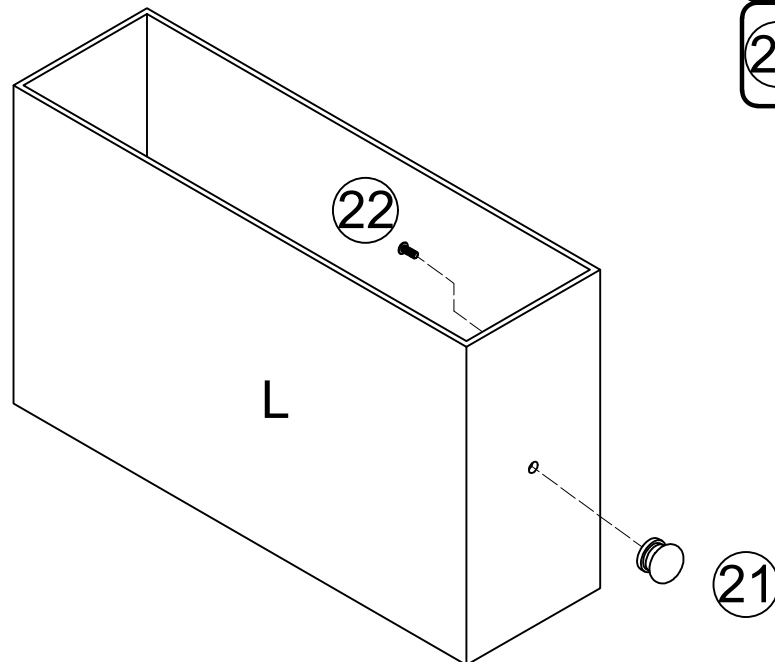

NOTICE:

The installation for all the two fabric drawers is base on the two steps above.



STEP 3

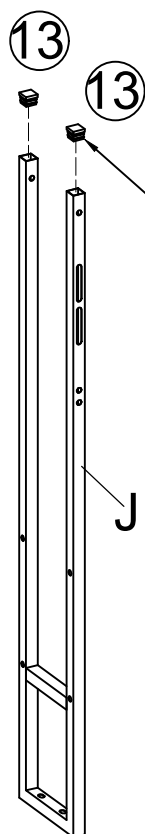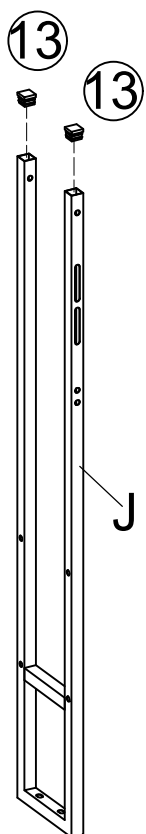

Please use a hammer or solid tools (not included) to knock the footpads into the frame.

13  x4

STEP 4

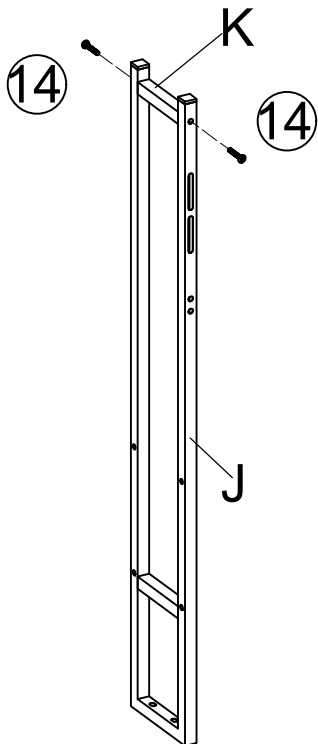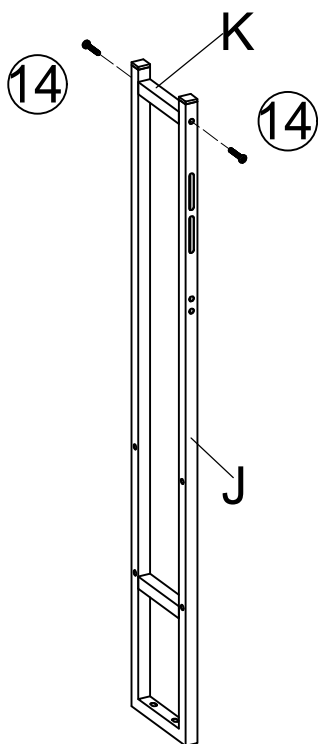


14  x4

STEP 5


15  x4


Keep the holes of the
Part D and Part E toward
this direction as shown

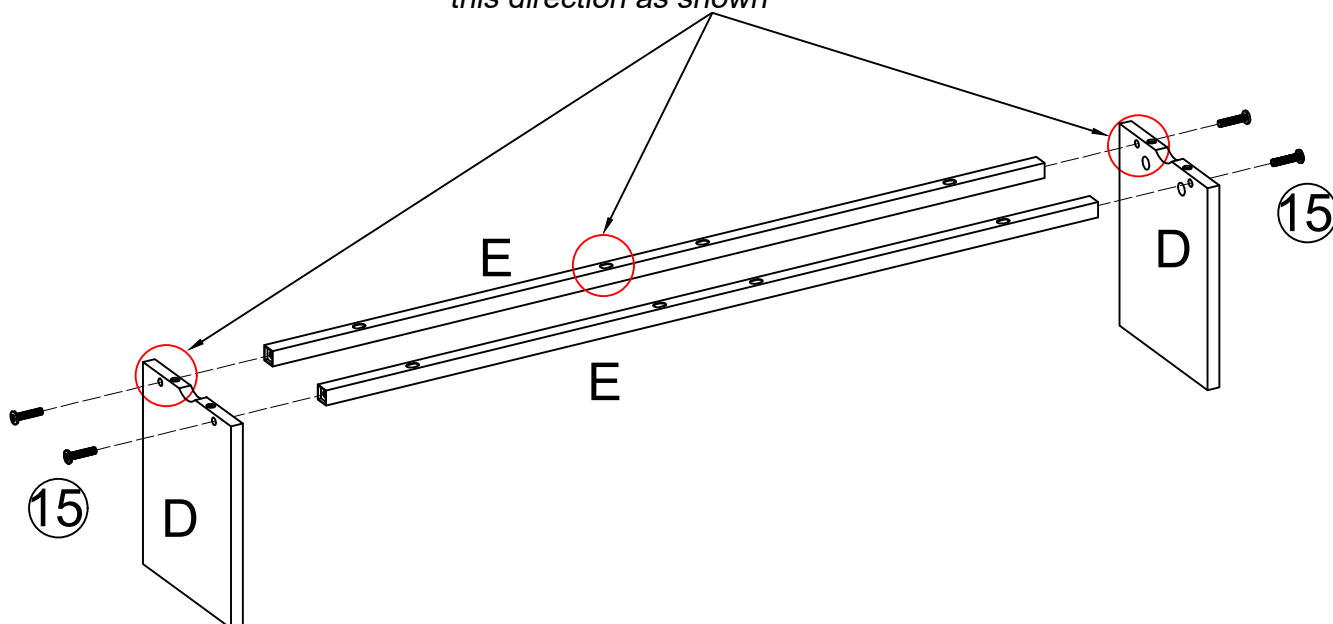



STEP 6

16  x4

25  x2

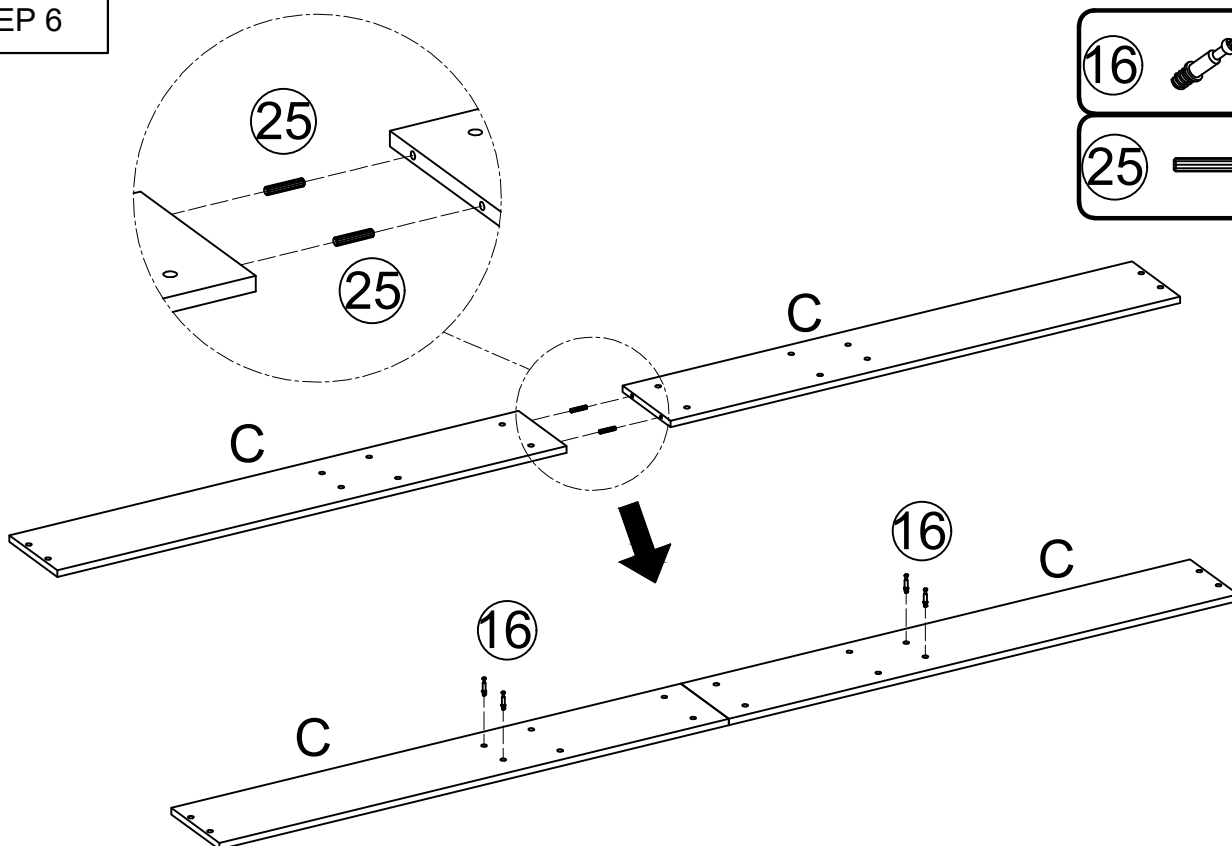

STEP 7

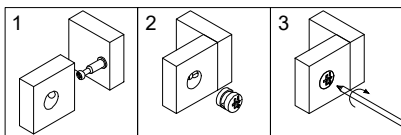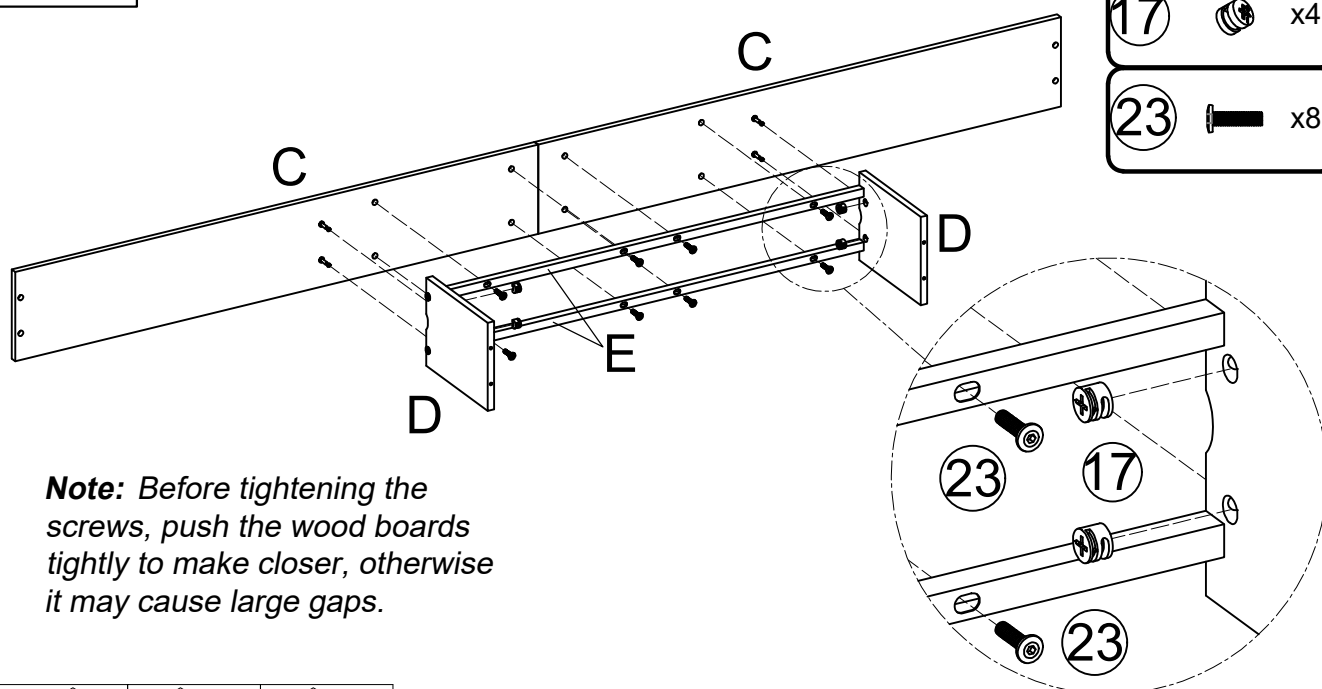


Please point the arrow upward to the mounting hole when installing Part 17, then use screwdriver to tighten it in the "+" direction.




Cam Lock Fastening System


STEP 8

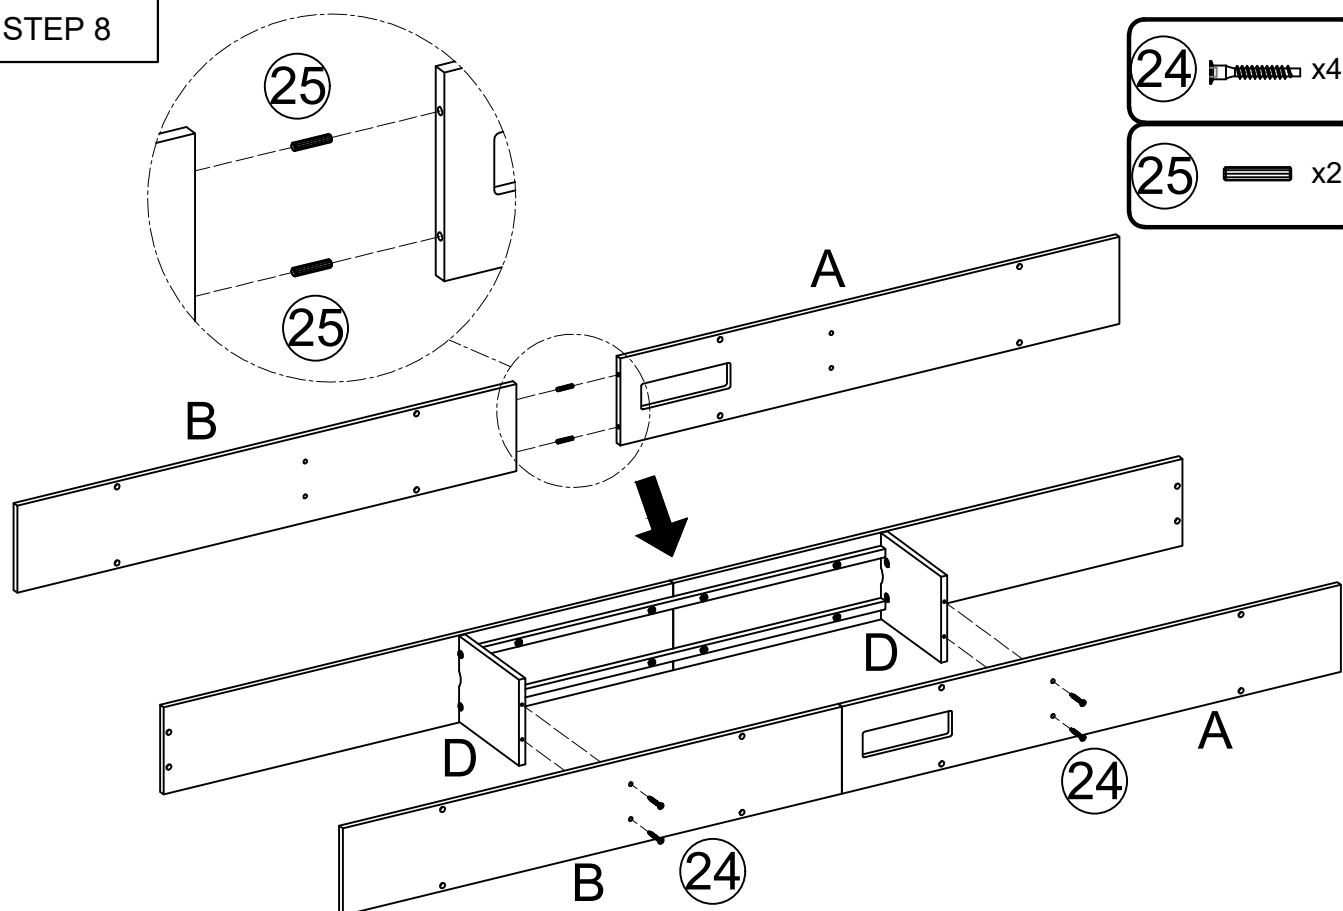

STEP 9

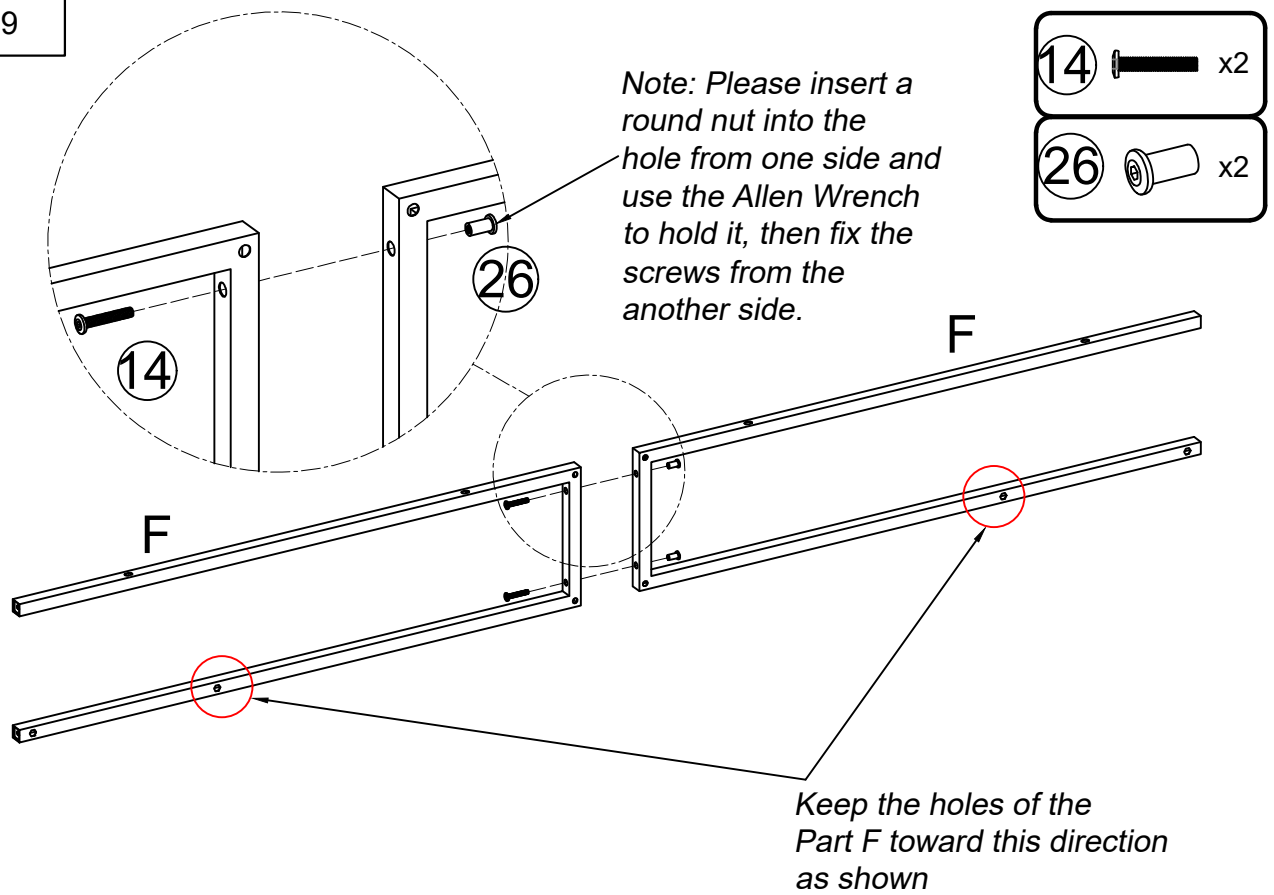


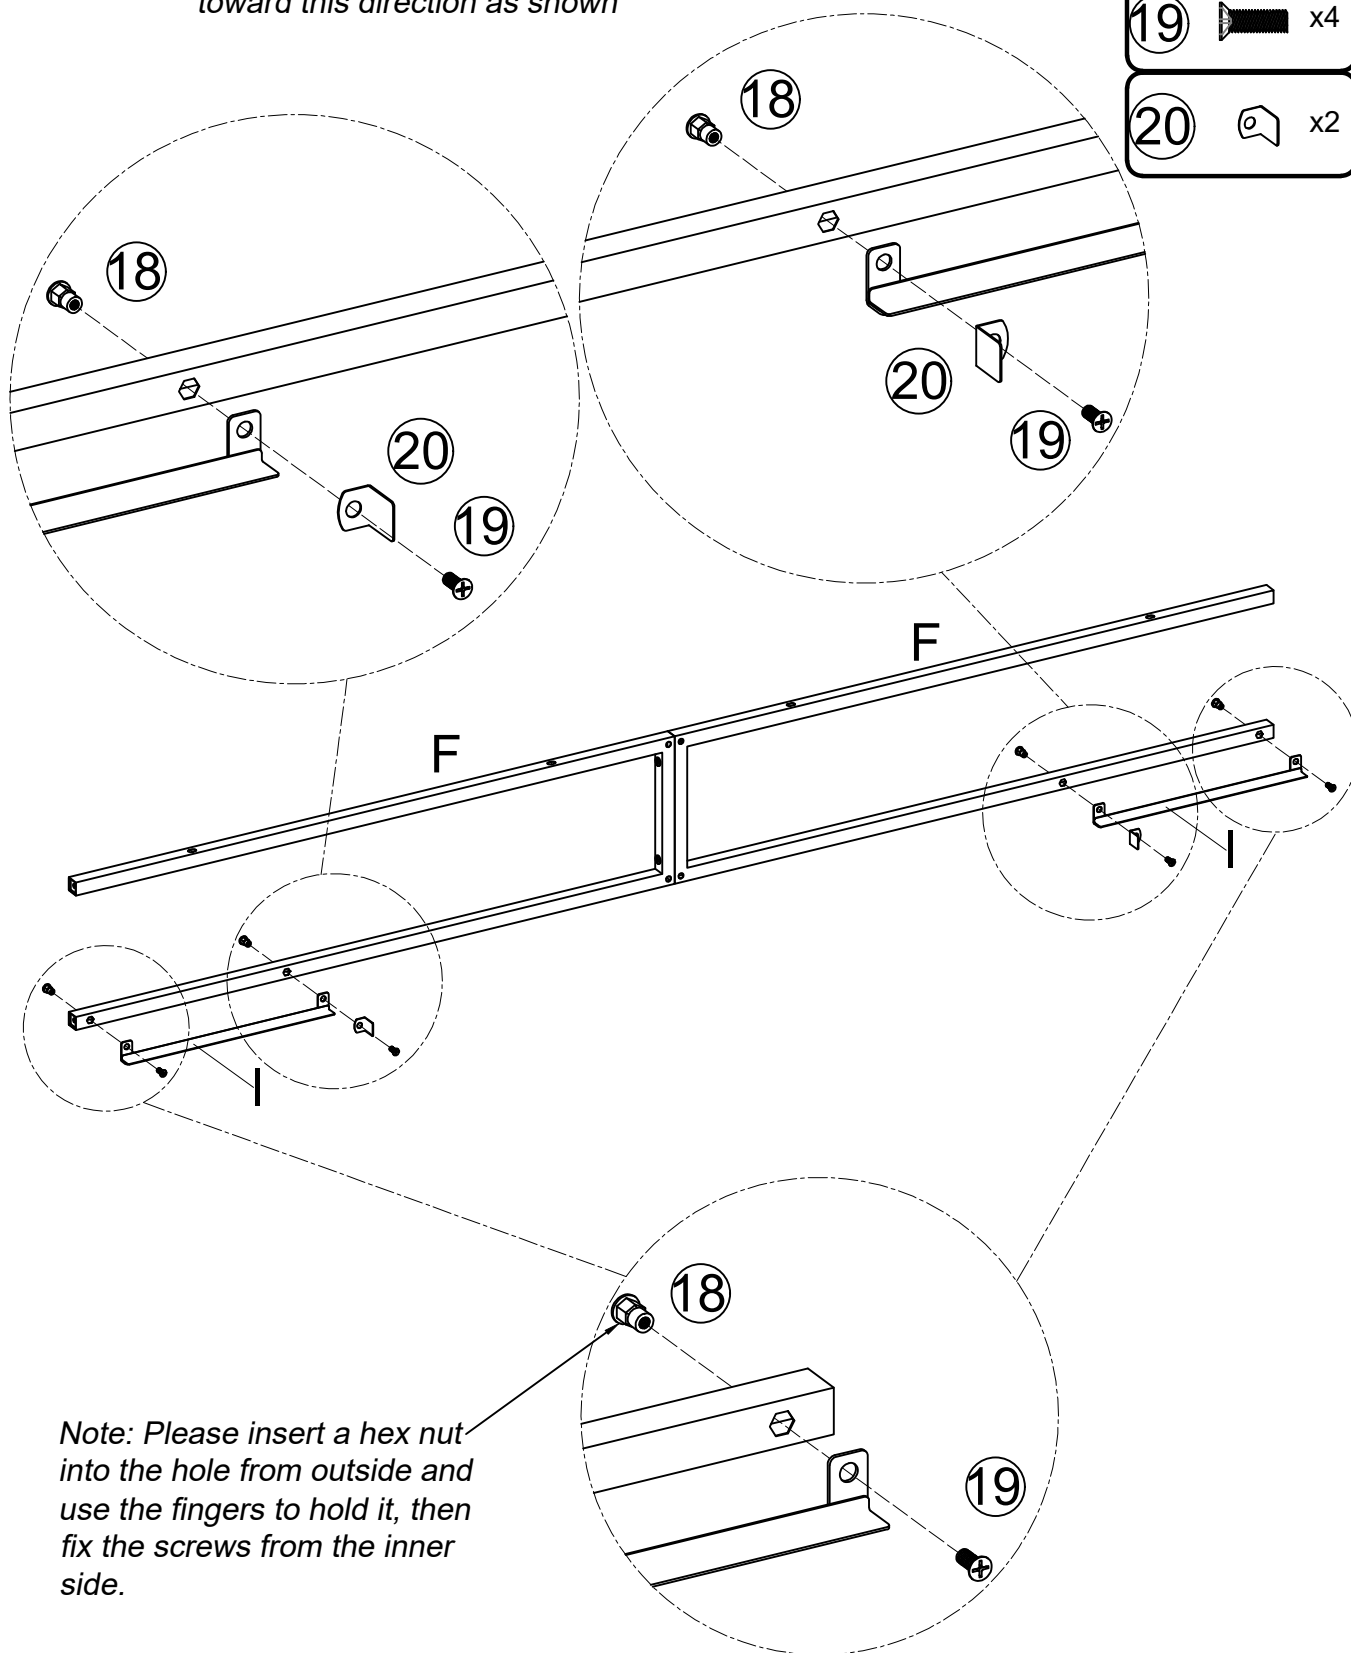
STEP 10

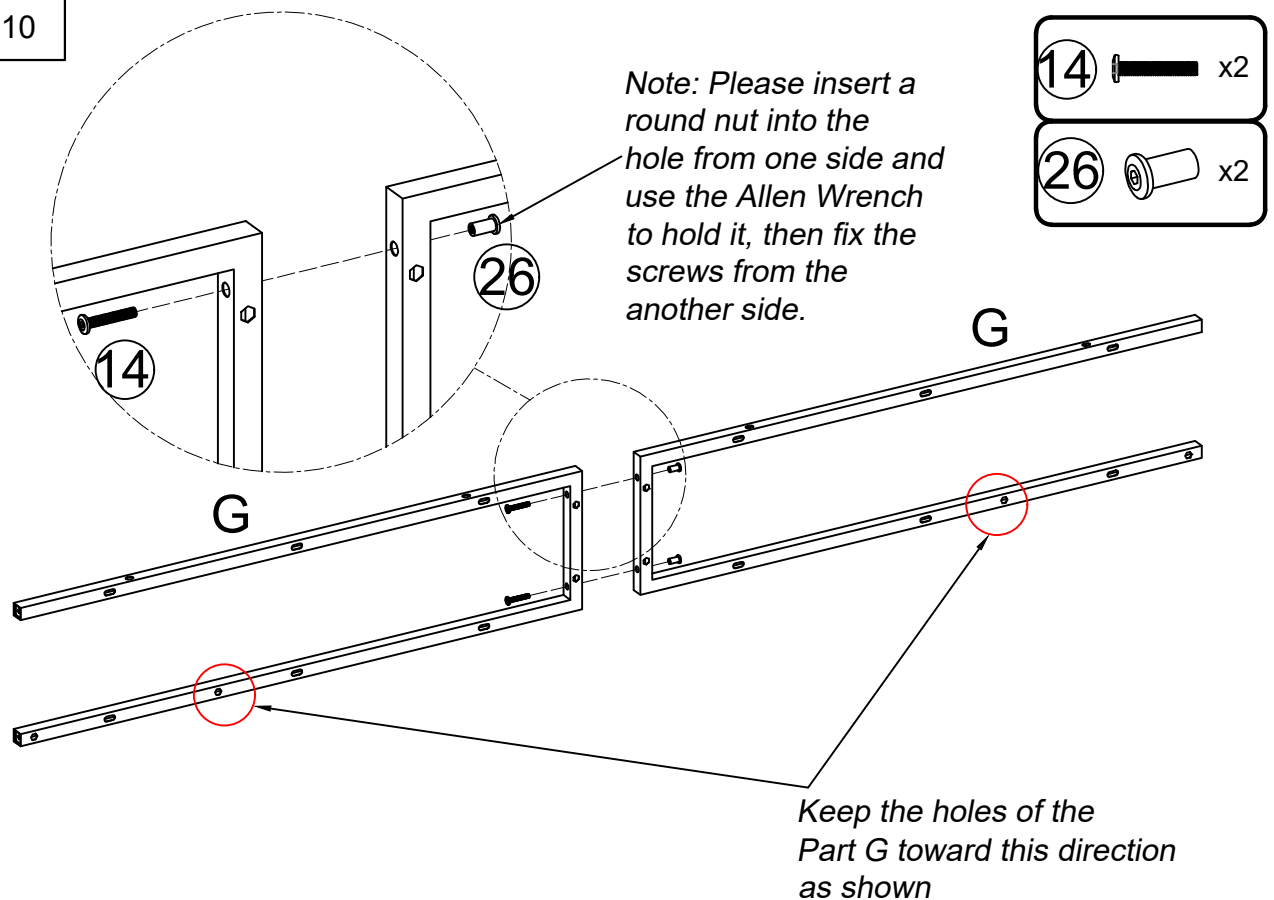

STEP 11

Keep the fabric drawer stopper ②0 toward this direction as shown


- | | | |
|----|---|----|
| ①8 |  | x4 |
| ①9 |  | x4 |
| ②0 |  | x2 |






Note: Please insert a hex nut into the hole from outside and use the fingers to hold it, then fix the screws from the inner side.

STEP 12



Keep the fabric drawer stopper ②0 toward this direction as shown

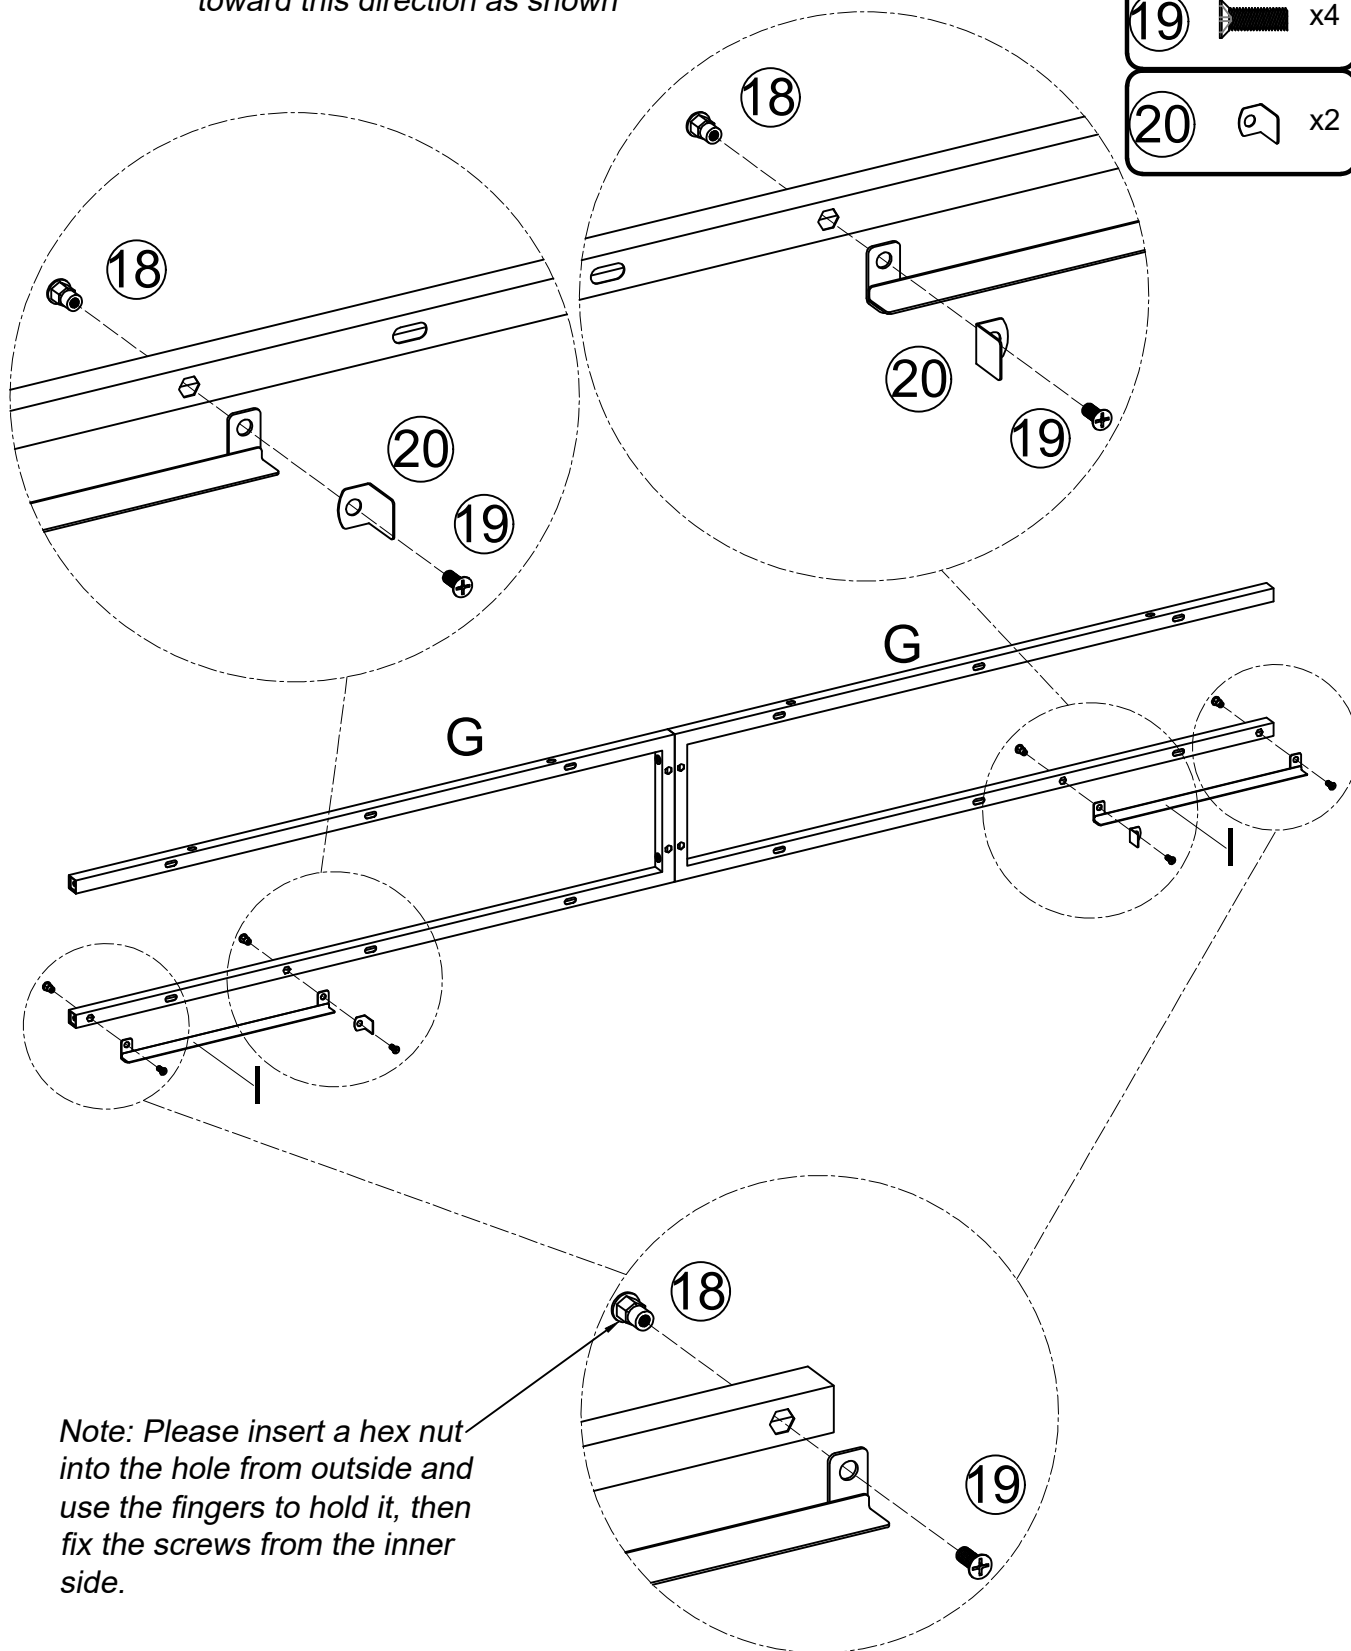


STEP 13

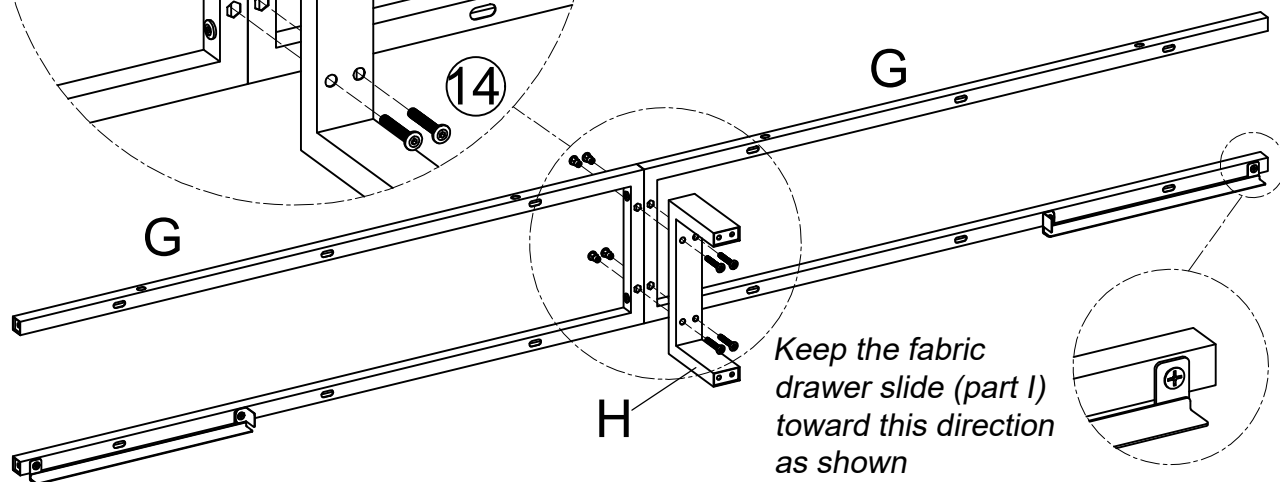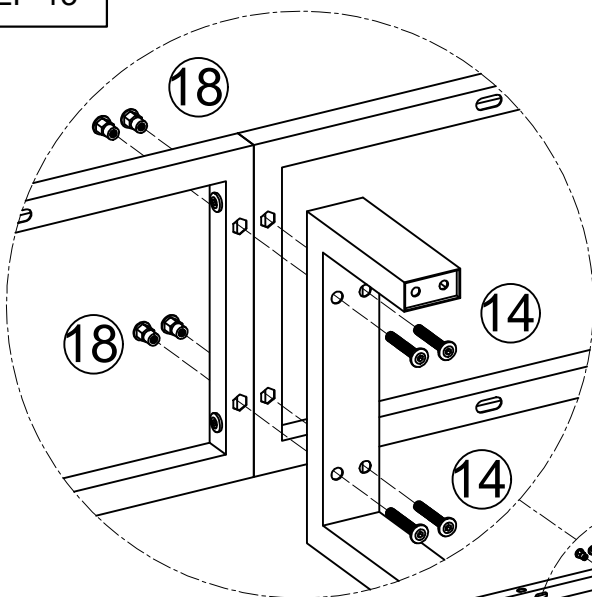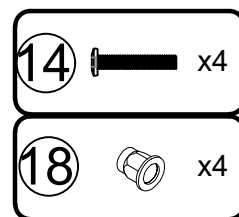

STEP 14

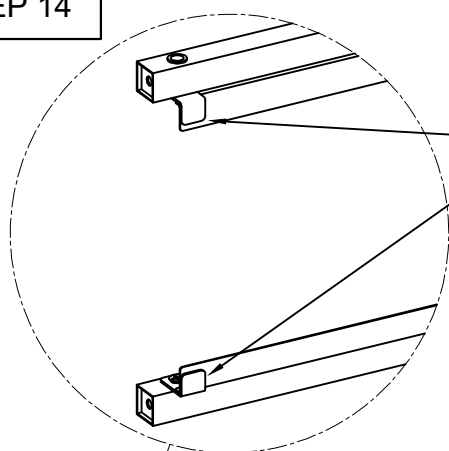


Keep the fabric drawer slide (part I) toward this direction as shown

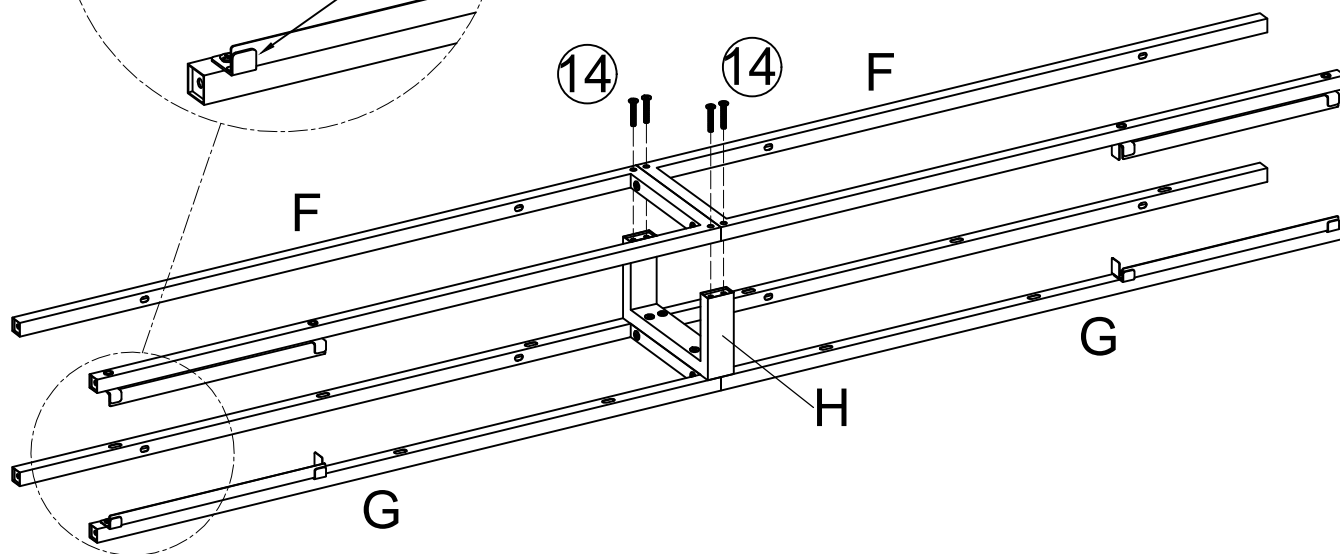

STEP 15

15 x8


Note: Before tightening the screws, push the wood boards tightly to make closer, otherwise it may cause large gaps.

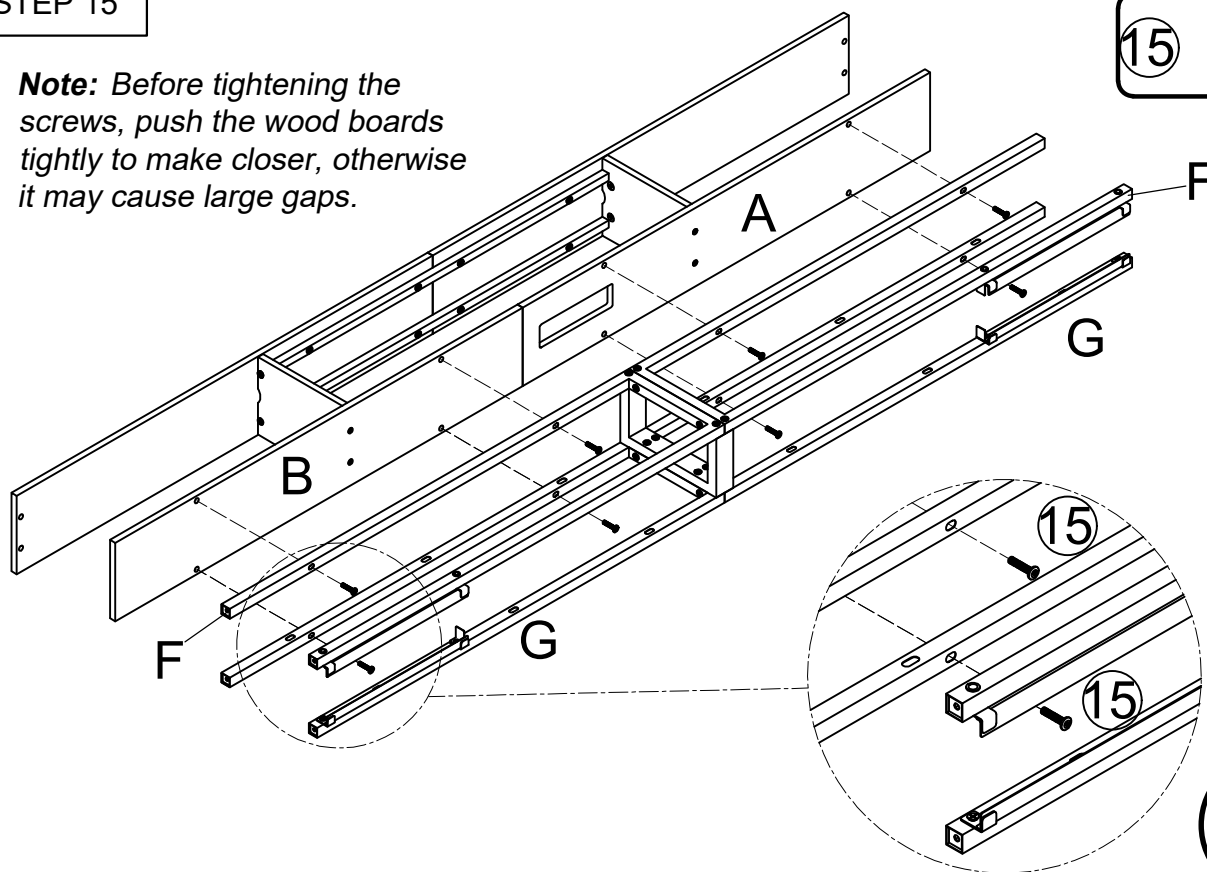


STEP 16

1 x12


The holes of the support bar have flexible space. Don't fully tighten the screws until aligning all the screws to the back cushion.

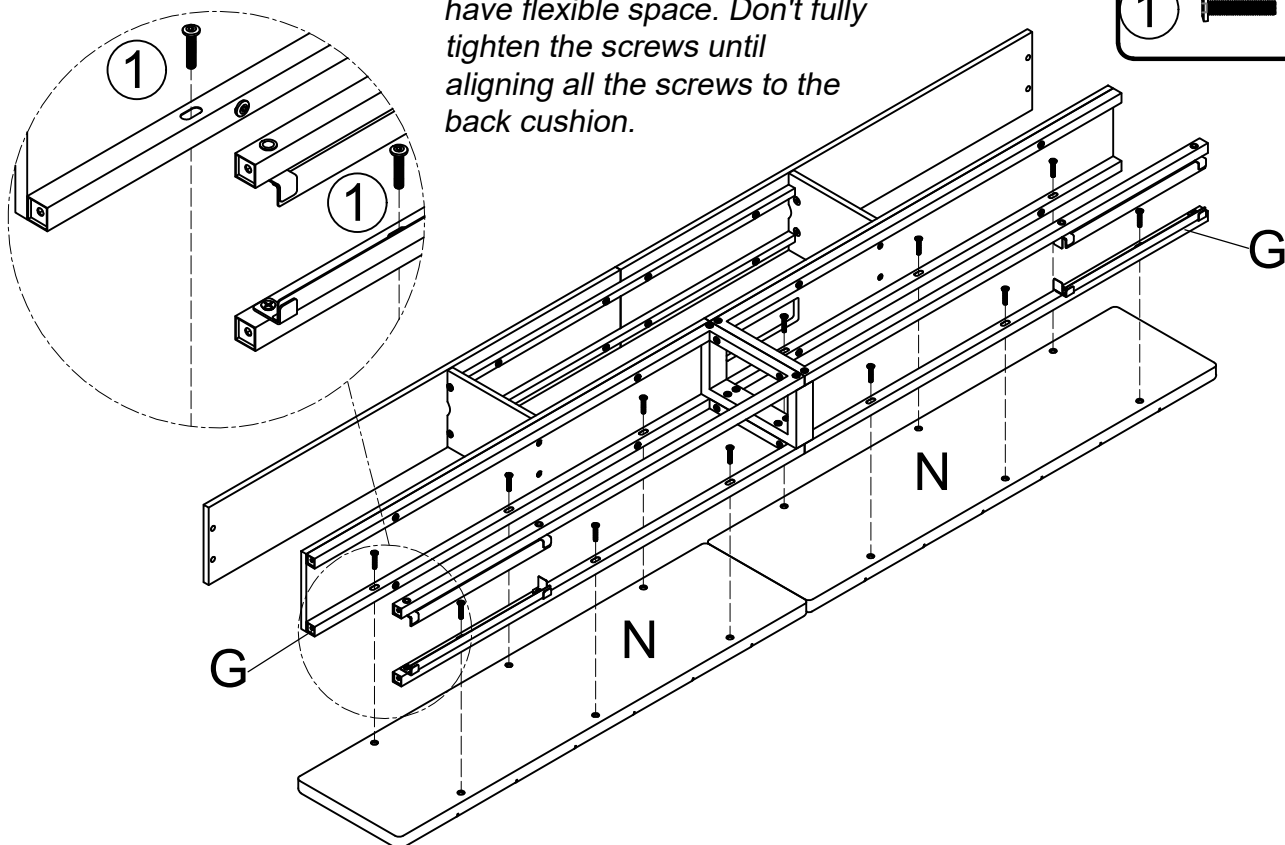


STEP 17

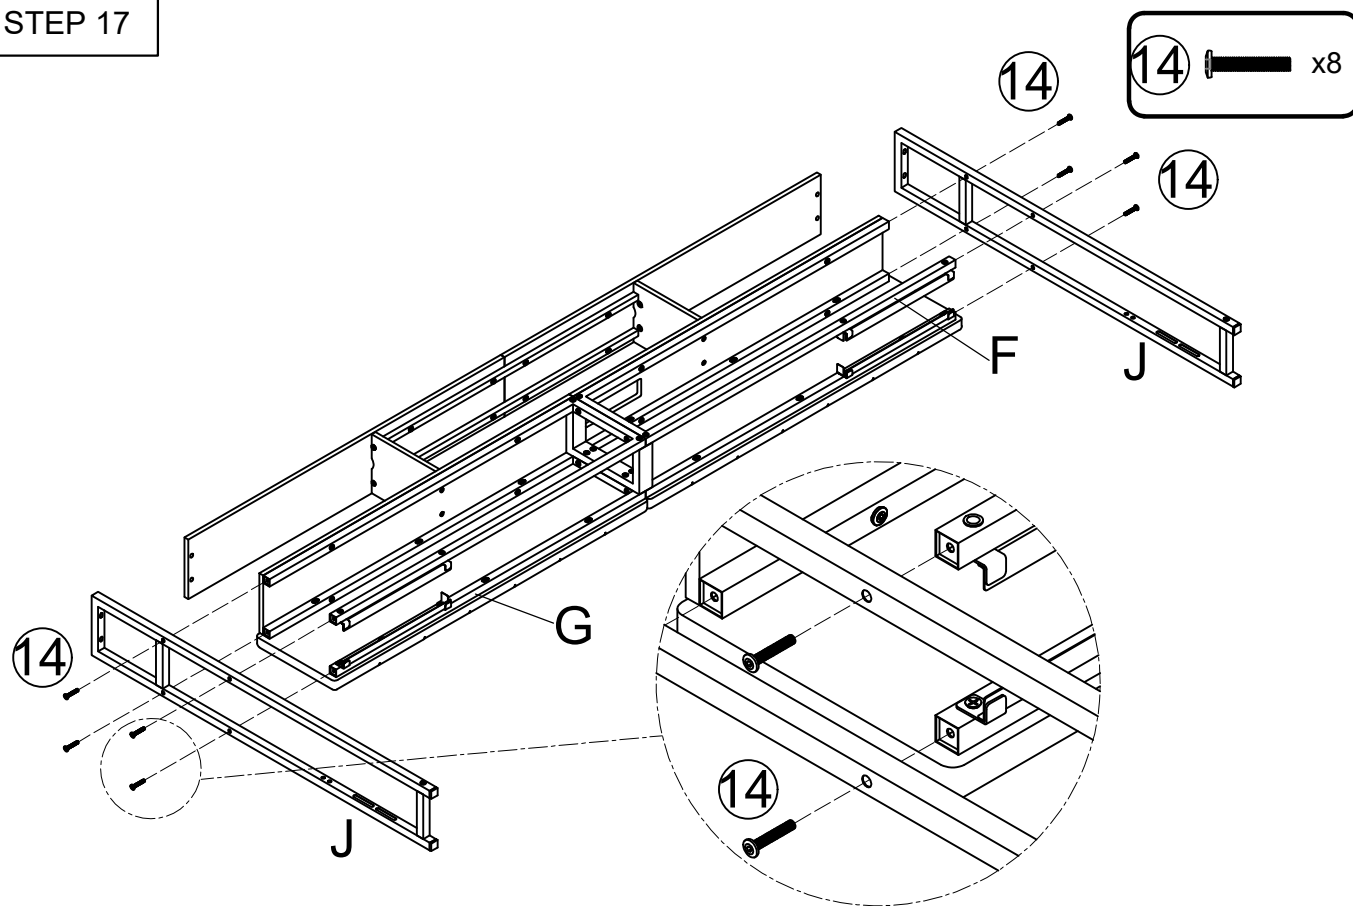


STEP 18

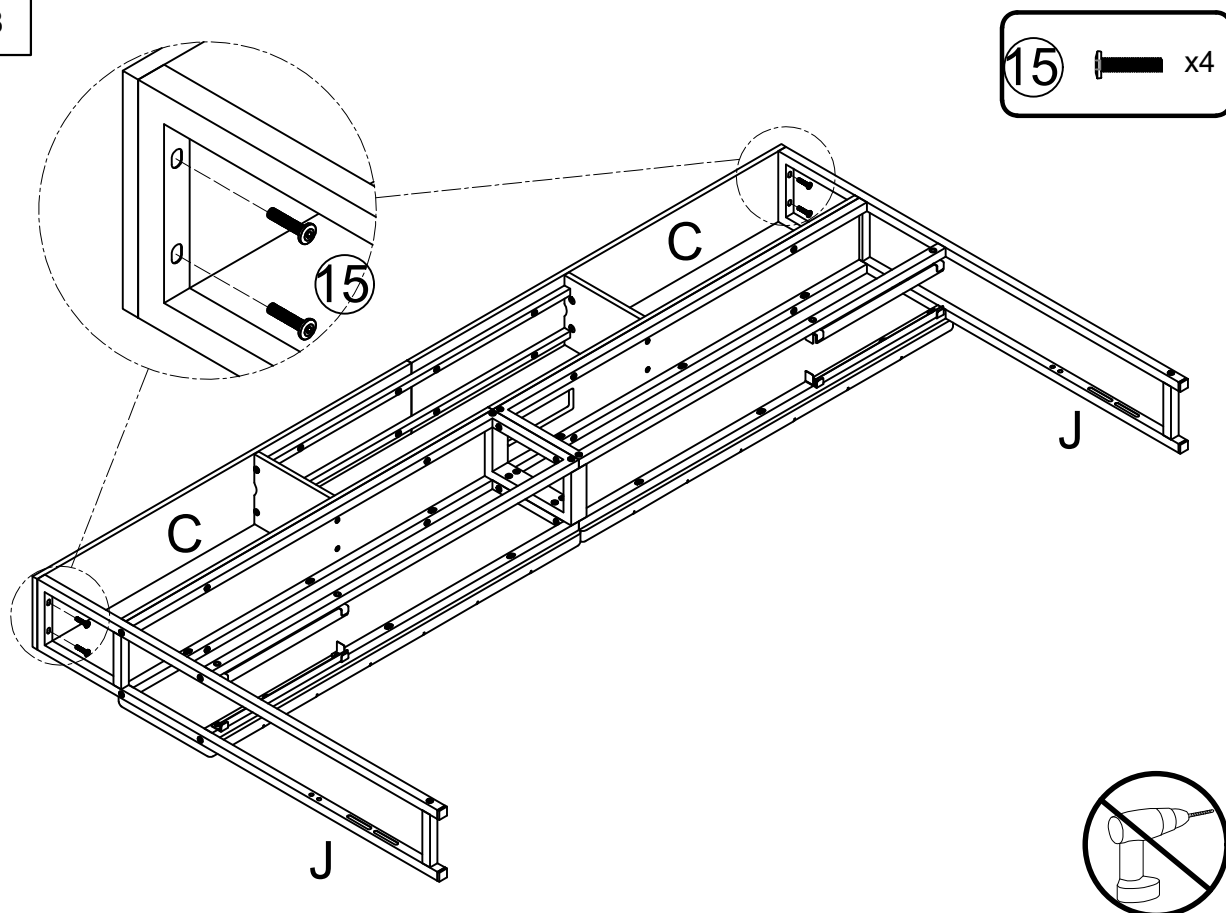

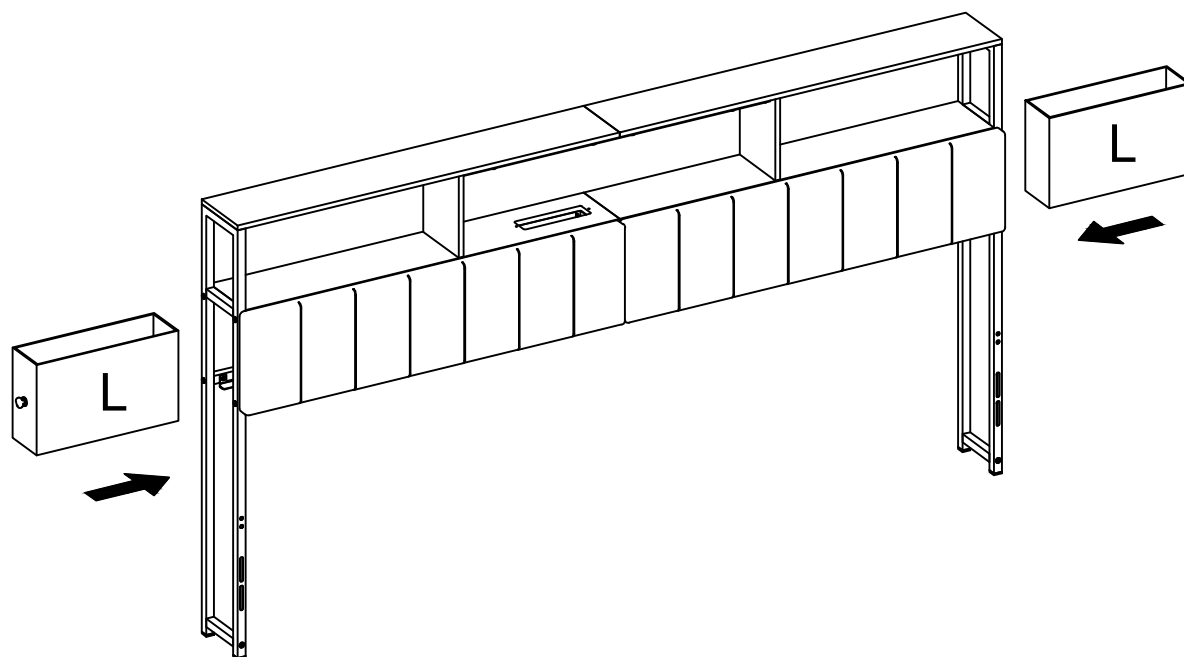

STEP 19

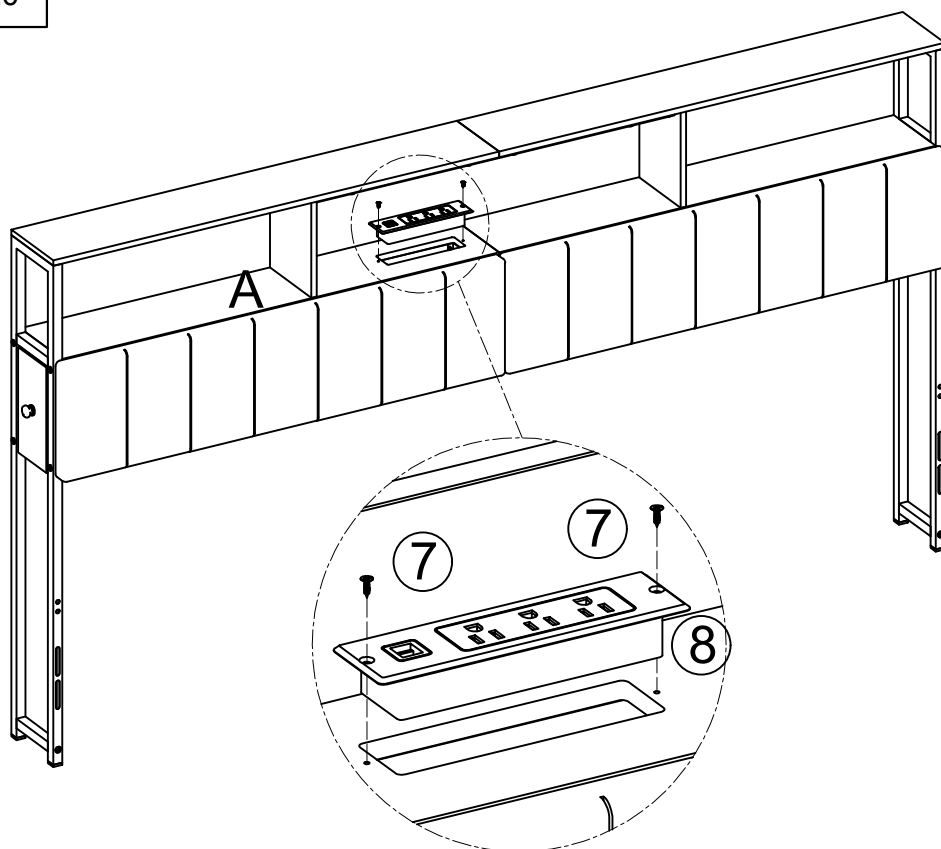

STEP 20








- 7  x2
- 8  x1



STEP 21


Tear off the tape of the LED strip, stick the LED strip to the bottom of top panels(C). Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.



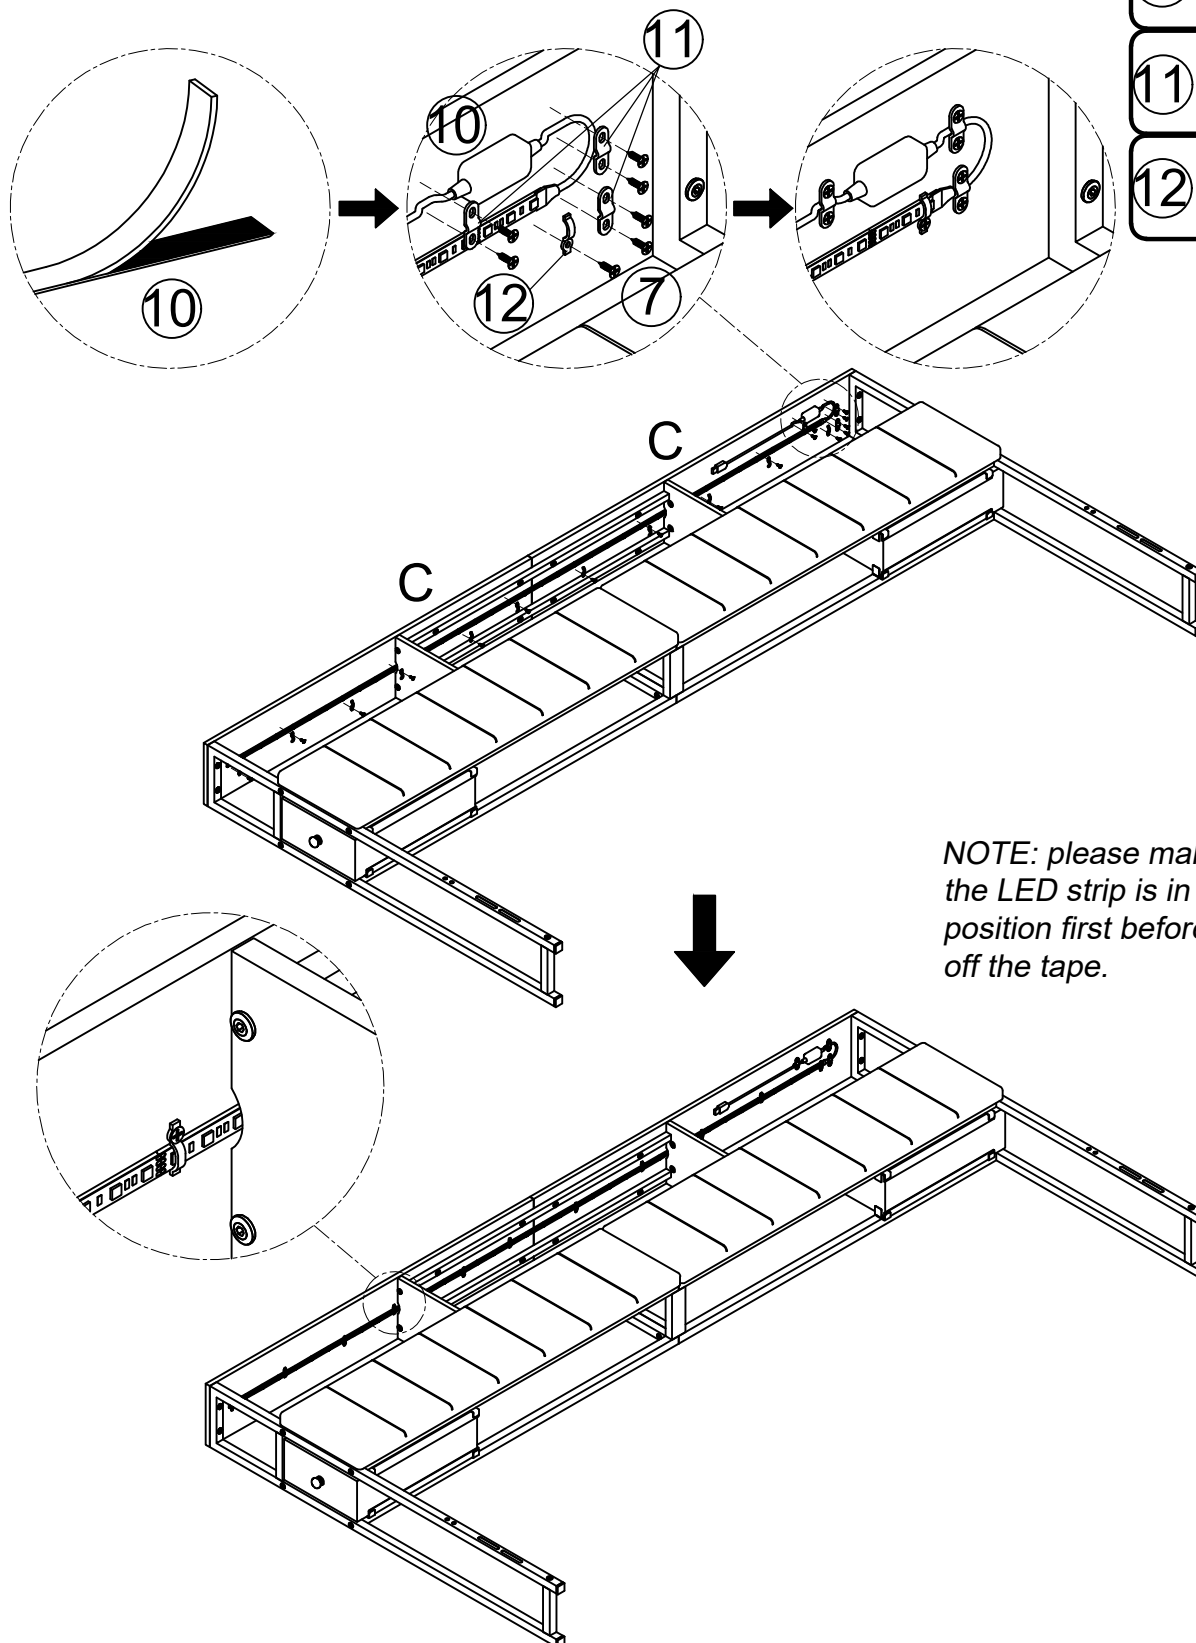



- | | |
|----|---|
| 7 |  x17 |
| 10 |  x1 |
| 11 |  x3 |
| 12 |  x11 |

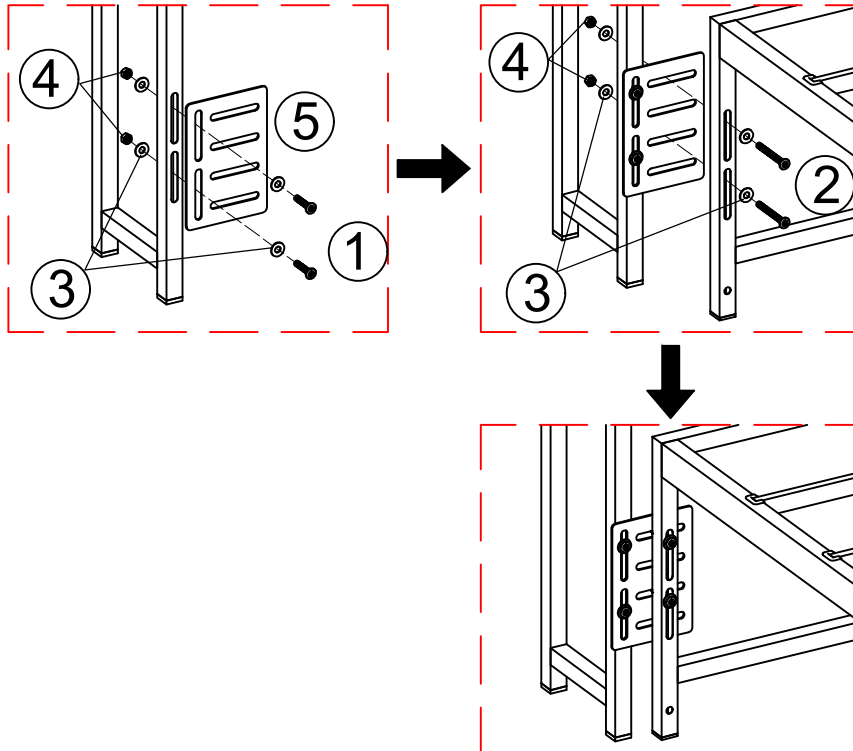


Bed Frame Adapter






When the installation distance between the headboard bracket and the bed frame (not included) is too large or too small, an adjustable board can be used to link.

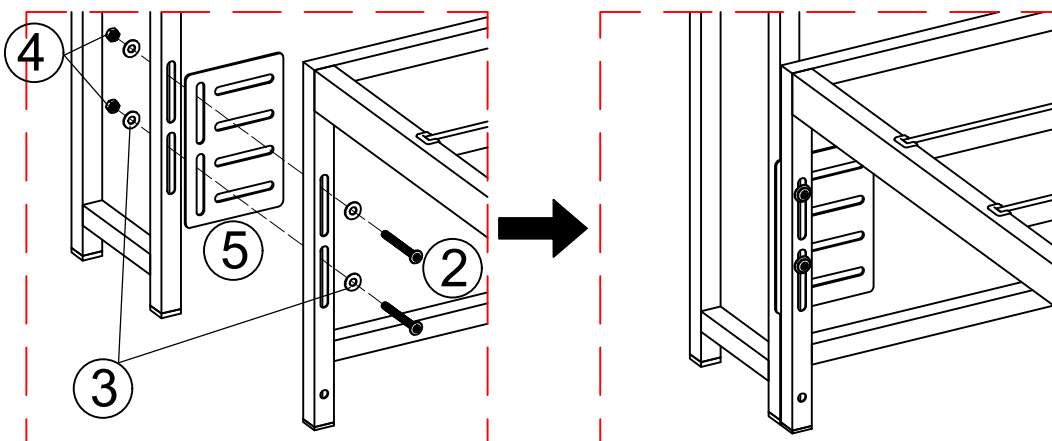

- ①  x4
- ②  x4
- ③  x16
- ④  x8
- ⑤  x2
- ⑥  x1

When the installation distance between the headboard bracket and the bed frame (not included) is just fine, an adjustable board can also be used to link.



- ②  x4
- ③  x8
- ④  x4
- ⑤  x2
- ⑥  x1