

Bathroom Vanity

Notice:

- 1.Follow the installation instructions. Please confrm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.








Put a carpet on the floor before unpacking





Estimate installation time: 30 minutes

Item no.	Reference Image	Qty
A		x1
В		x1
1		x2
2	Ø12	x2
3		x2


Item no.	Reference Image	Qty
4		x2 Sets
5	Ø8	x4
6	Ø3.5x14mm	x4
7	Barrangan O	x4 Sets
8		x1

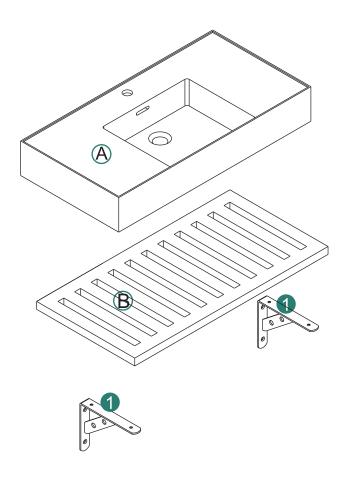

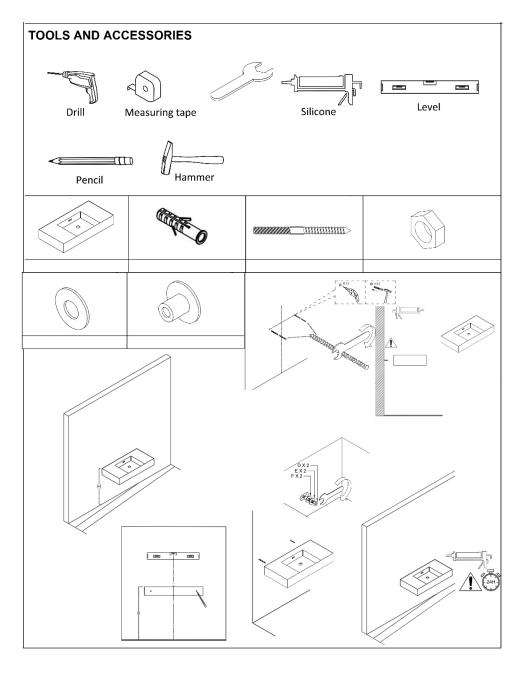





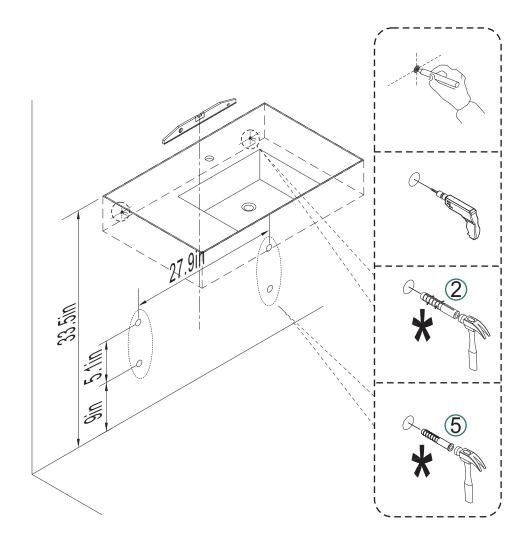

2pc 2pc 4pc

(A) 1 pc **B** 1 pc **4**2pcs 64pcs 4 **(A)** 6

