
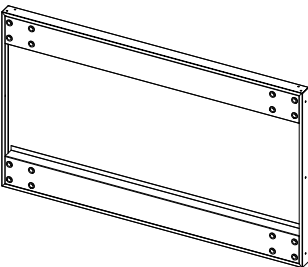
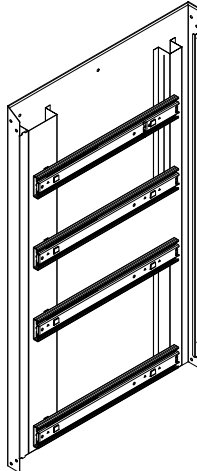
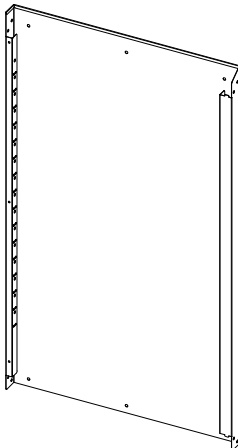
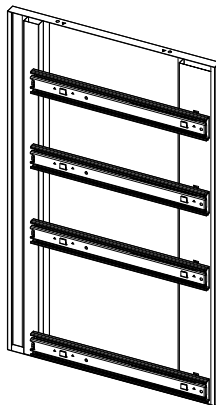
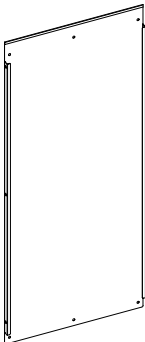
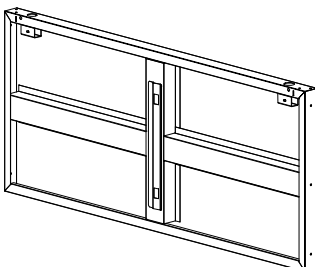
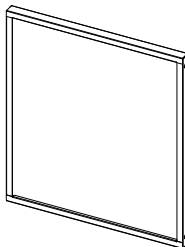
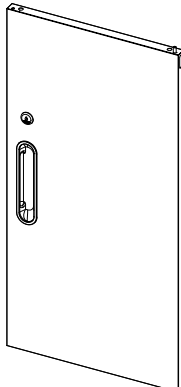

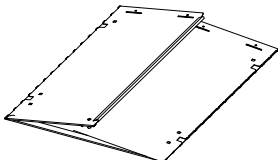
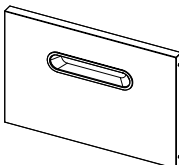
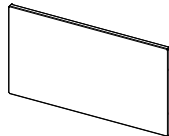
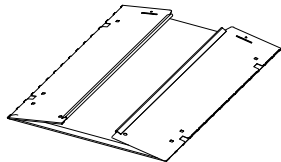


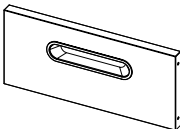









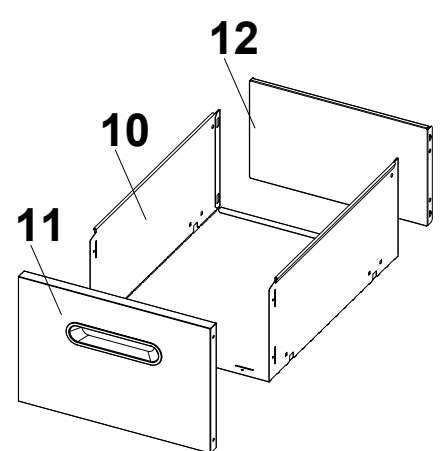
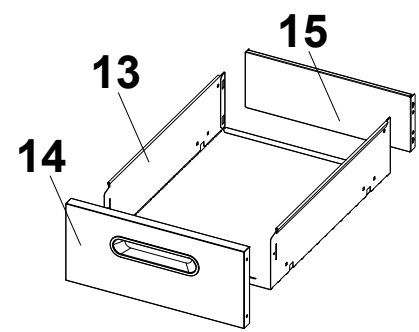
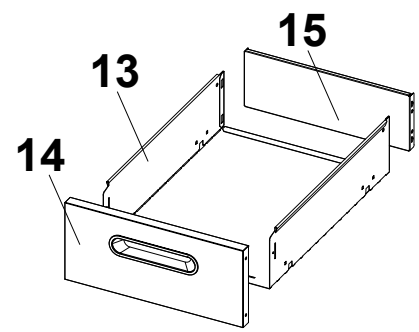
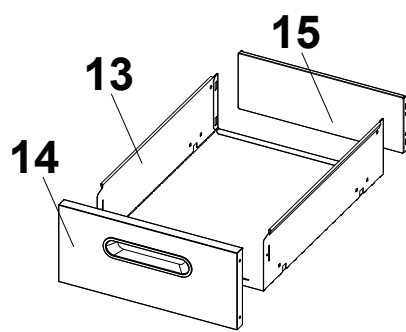
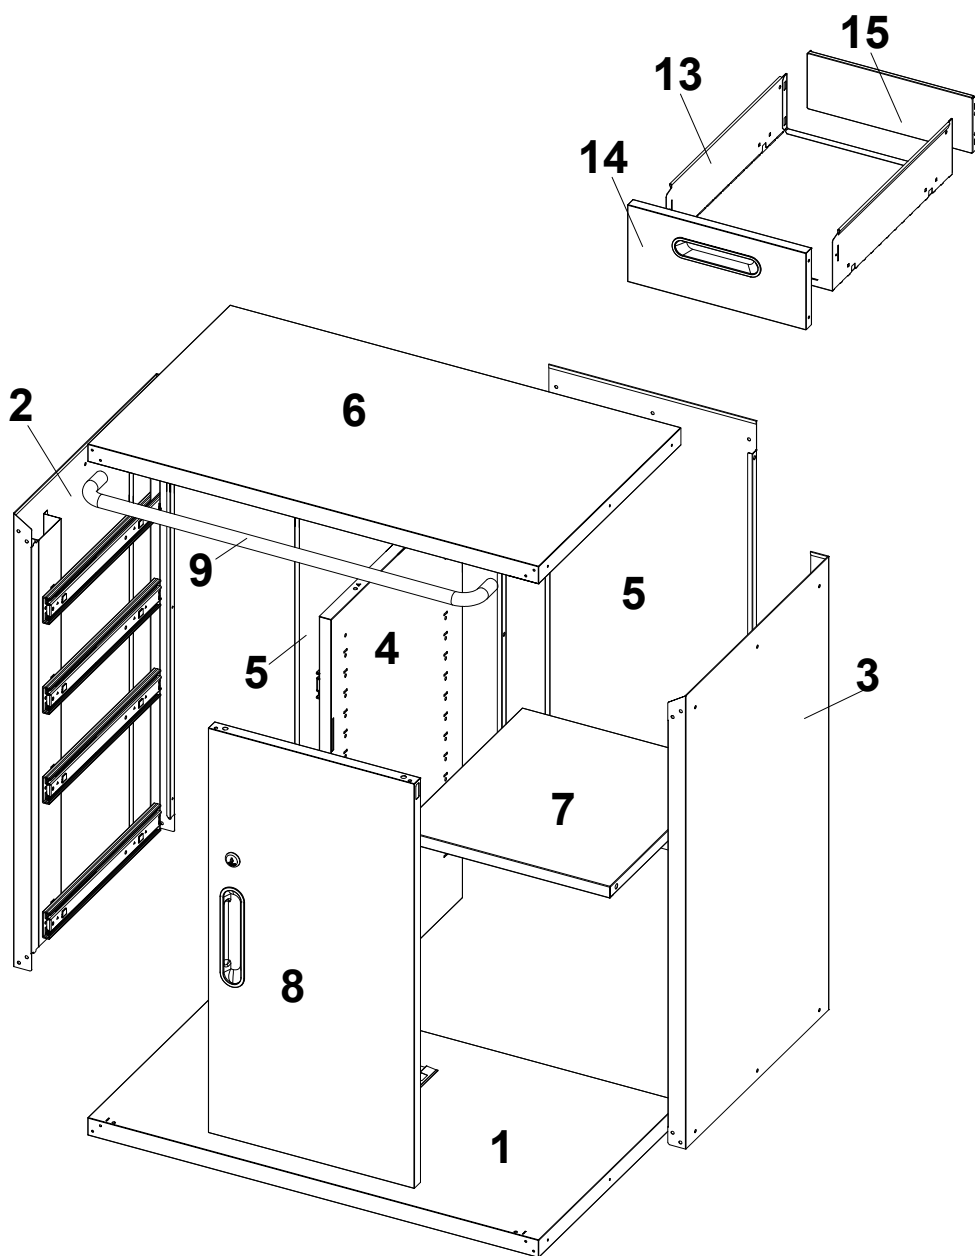
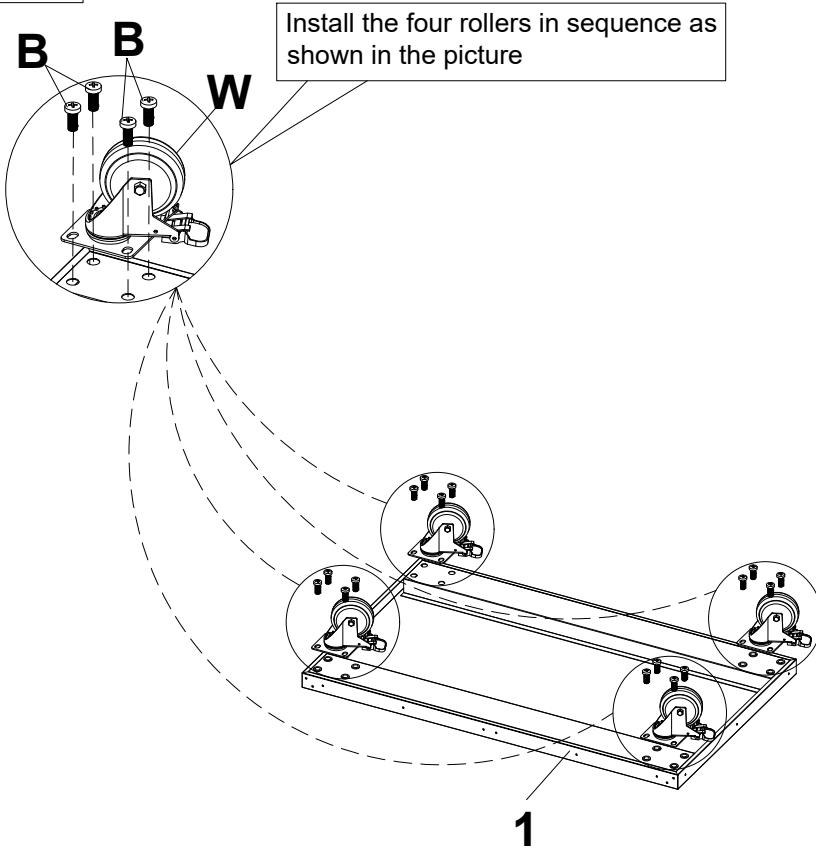


<b>1×1pc</b> 	<b>2×1pc</b> 	<b>3×1pc</b> 	<b>4×1pc</b> 			
<b>5×2pcs</b> 	<b>6×1pc</b> 	<b>7×1pc</b> 	<b>8×1pc</b> 			
		<b>9×1pc</b> 				
<b>10×1pc</b> 	<b>11×1pc</b> 	<b>12×1pc</b> 	<b>13×3pcs</b> 			
<b>14×3pcs</b> 	<b>15×3pcs</b> 	<b>A×64pcs</b>  M4× 8mm 0.3inch	<b>B×16pcs</b>  M8× 20mm 0.79inch	<b>C×3pcs</b>  M5× 12mm 0.47inch	<b>D×2pcs</b>  M4× 12mm 0.47inch	

<b>F×4pcs</b>	<b>Q×4pcs</b>	<b>R×1pc</b>	<b>U×2pcs</b>	<b>W×4pcs</b>		
						



# 1

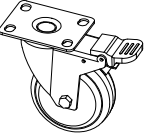


After completing the installation of the four rollers, please step on the rear locking part to prevent the cabinet from sliding during subsequent installation



Unlocking




locked





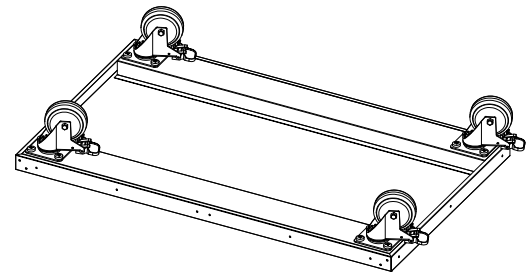


B×16

# 2

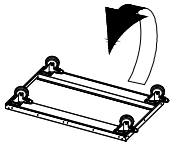


Align the lower buckle of side panel 2 with the slot at the top of the toolbox bottom plate, and then lower it down so that side panel 2 is stuck at the top of the toolbox floor

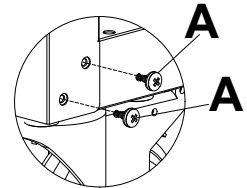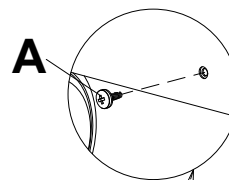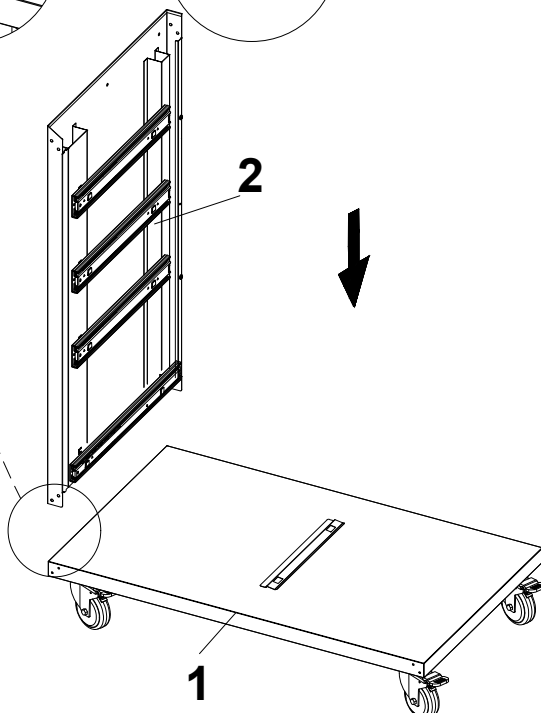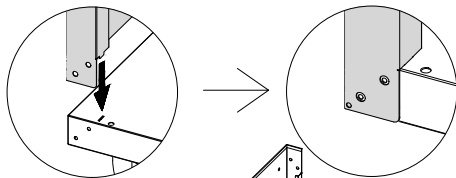
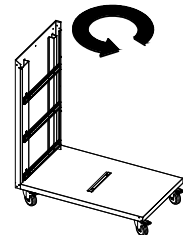


A×5

Align the lower buckle of side panel 2 with the slot at the top of the toolbox bottom plate, and then lower it down so that side panel 2 is stuck at the top of the toolbox floor

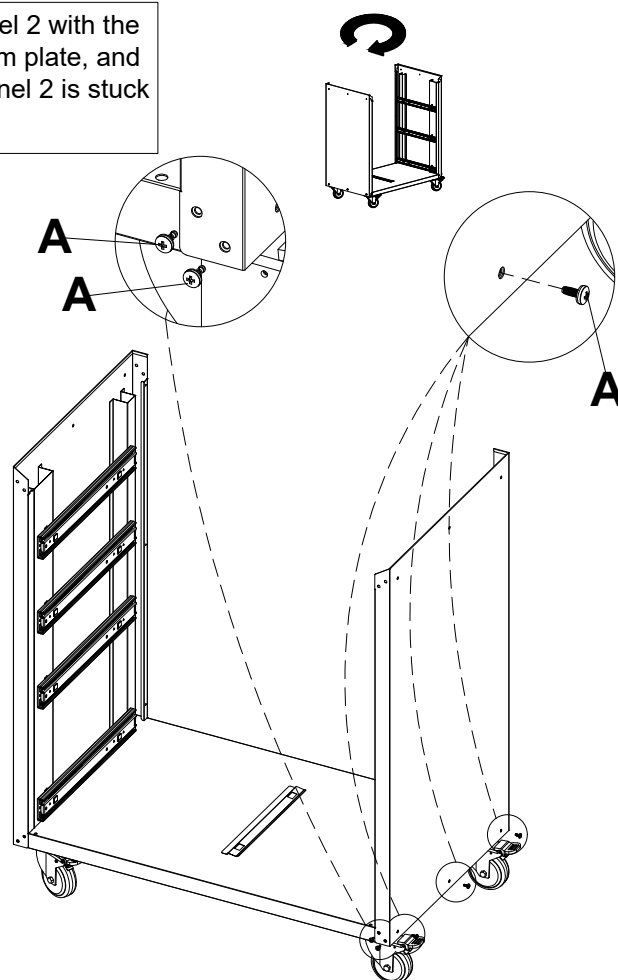


Align the card slots on both sides of the lower end of panel 4 with the buckles on the top of side panels 2 and 3, then lower it down so that panel 4 is stuck on the top of both sides of the toolbox

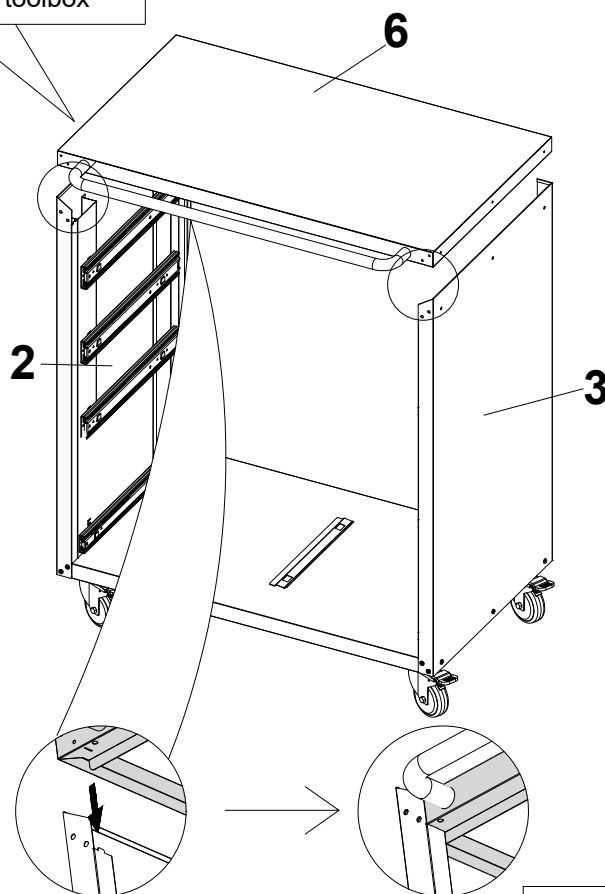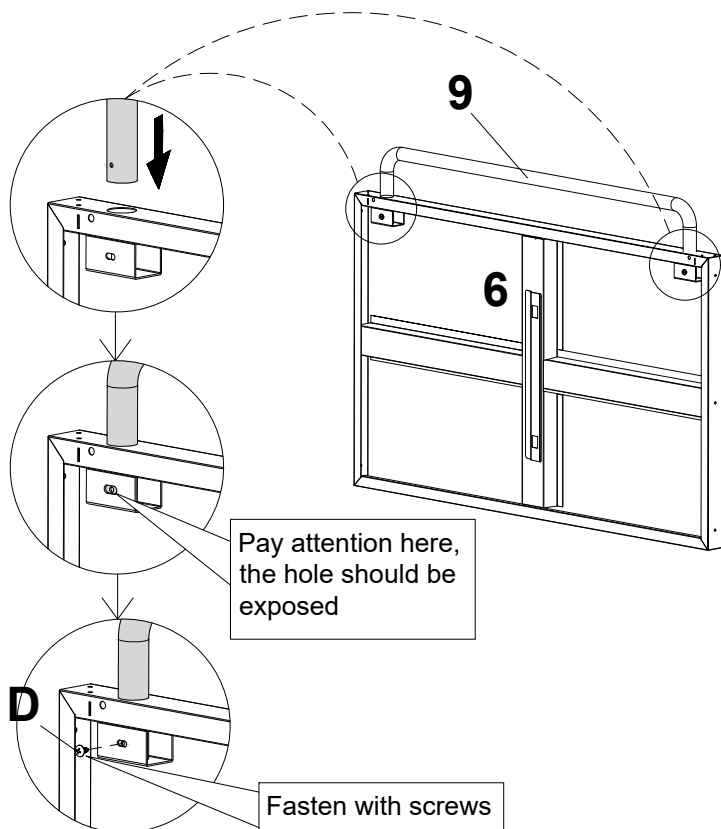


# 5

Fix component 4 with screws A according to the diagram

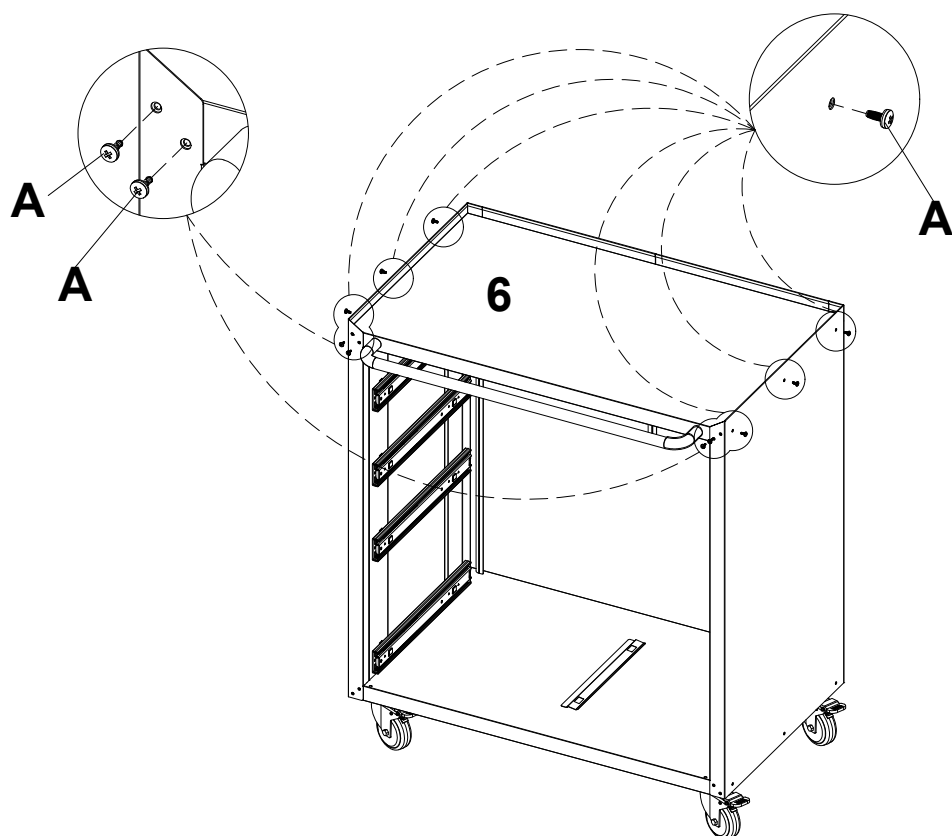


# 6

put three bolts and nuts to hold them in place

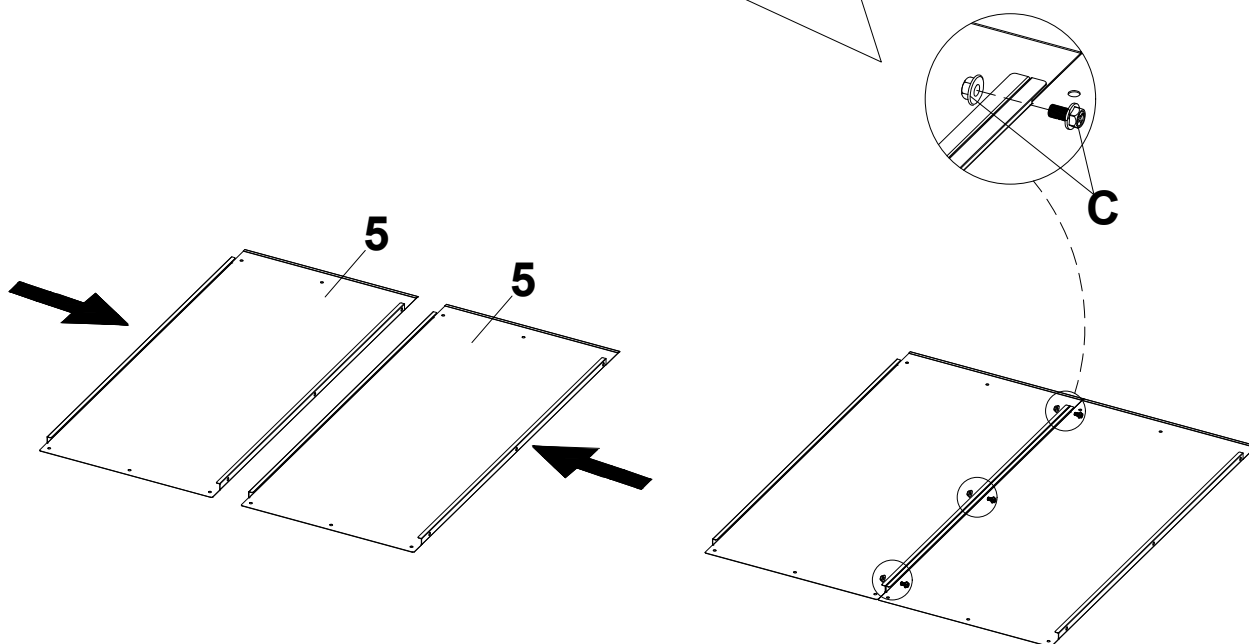


7


Place component 5 in place according to the diagram

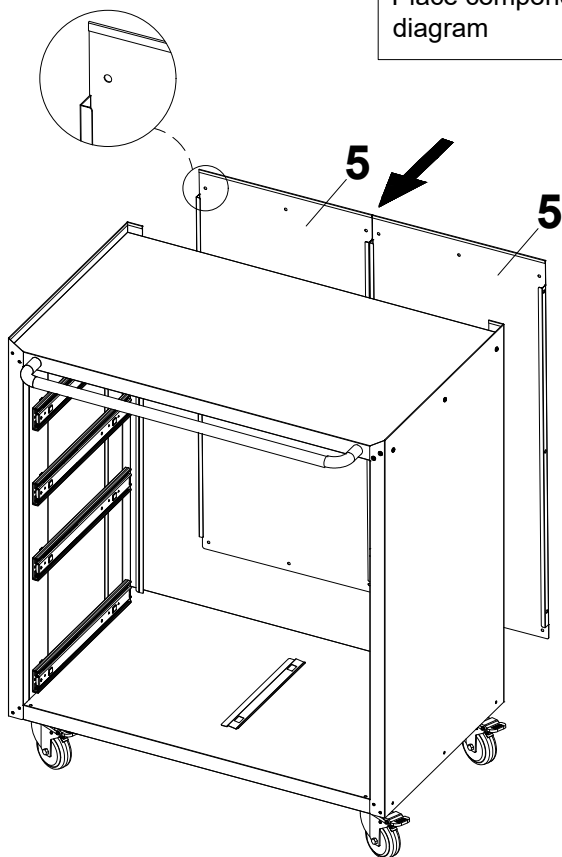

8

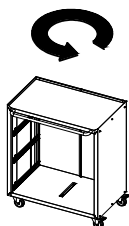


As shown in the picture, there are four positions, each position needs to install three screws, there are eight positions, each position needs to install one screw

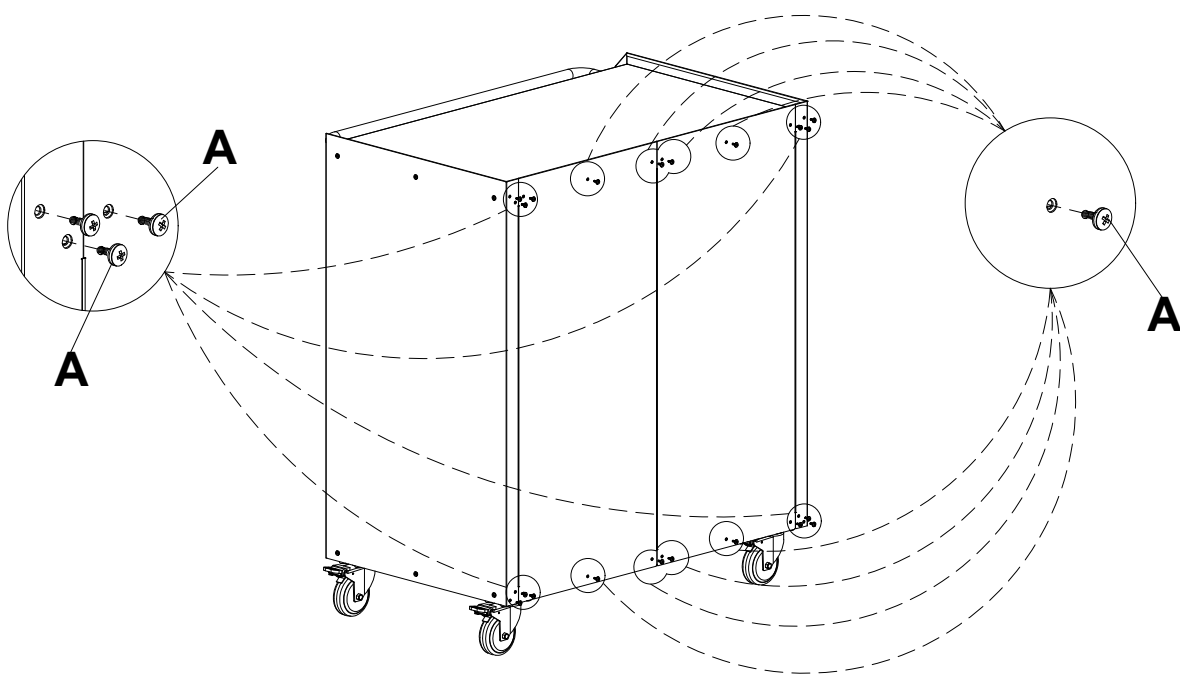




9


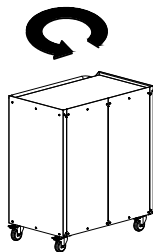


Fix with screws A according to the diagram

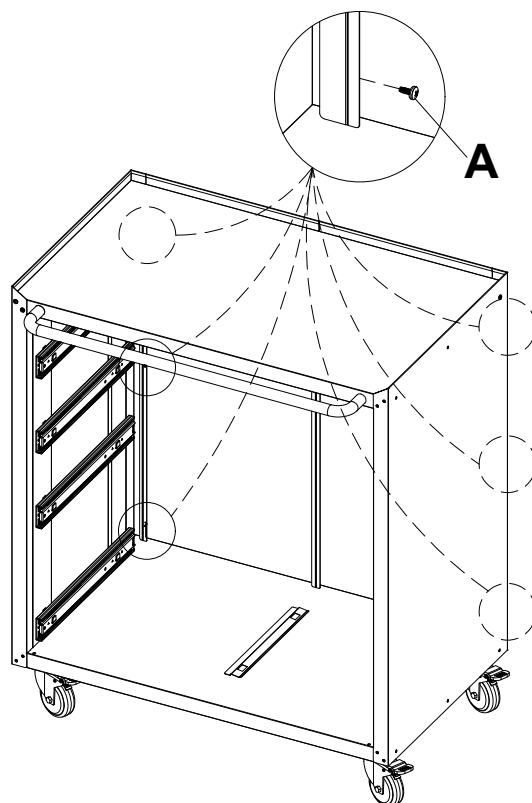







10

After inserting part 4 into the cabinet, please ensure that it is perpendicular to top of part 1. Then, horizontally tap the four snap positions in the picture to fully engage it.

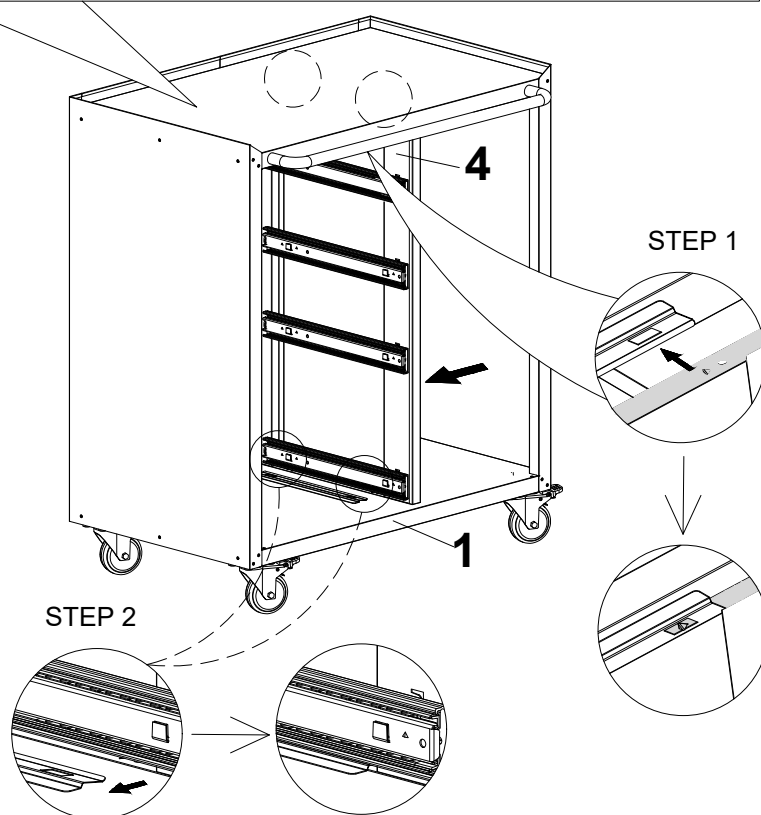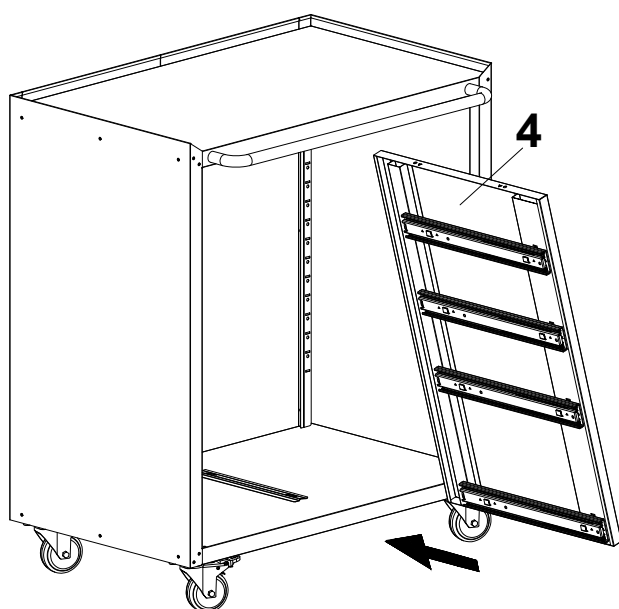





# 11

Insert the tabs at the bottom of the drawer faces 11 into the drawer body 10 and bend the tabs

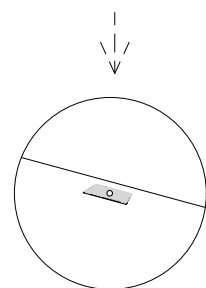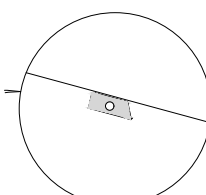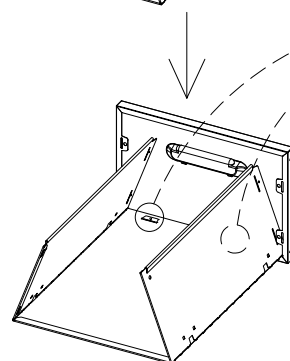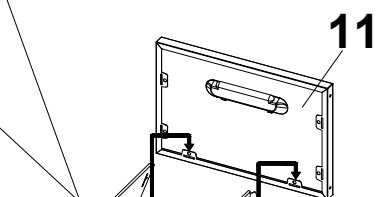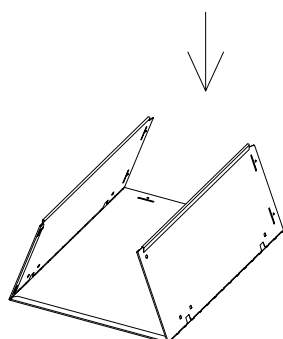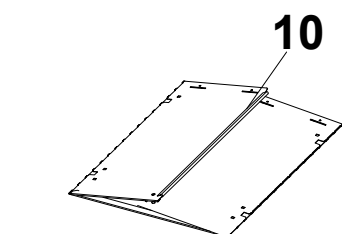



# 12

Put six screws to hold them in place

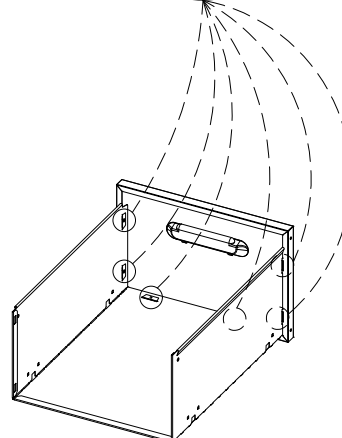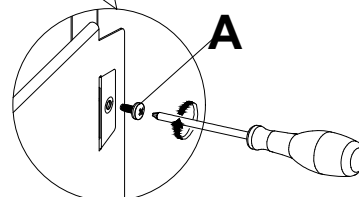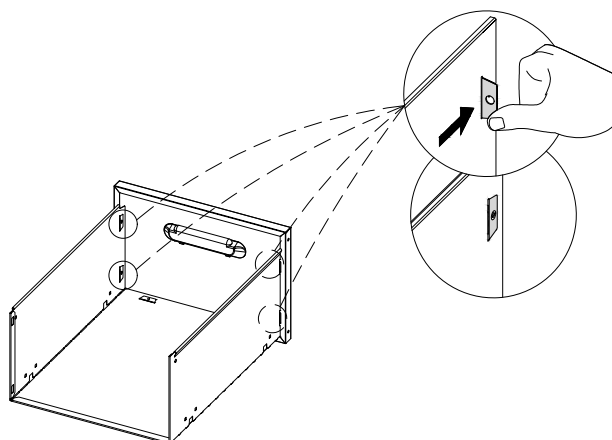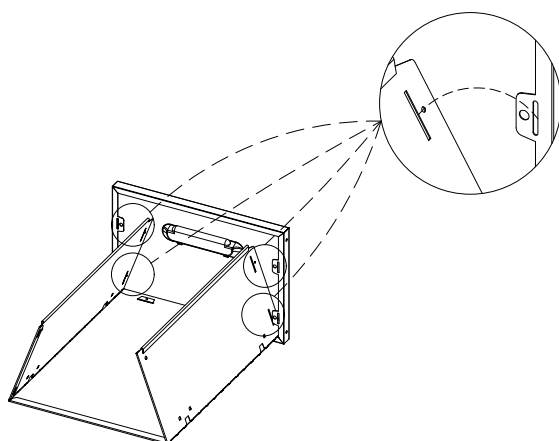


# 13


Make sure that the little bits protruding from part 12 are all inserted.  
Note that the slots on the back wall of the drawer should face up.

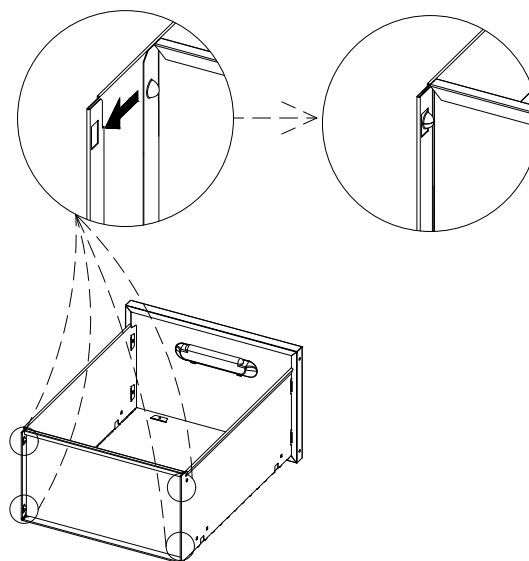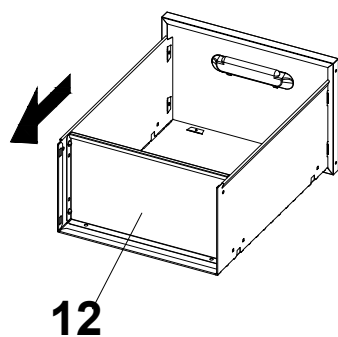


# 14

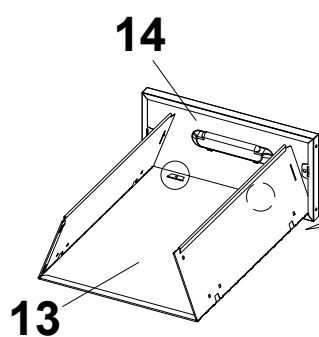

The installation steps are consistent with Figure 11

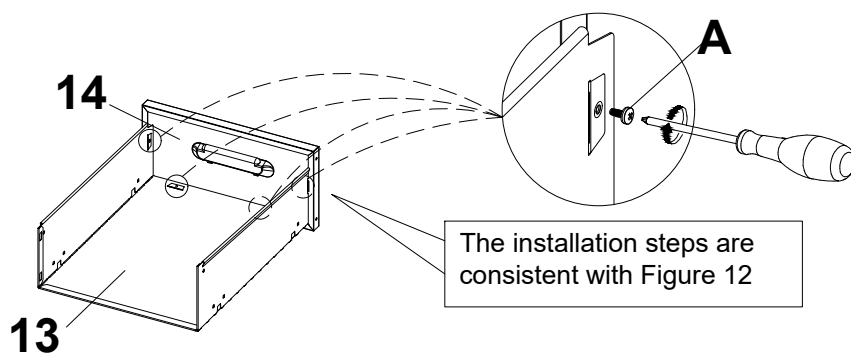

The installation steps are consistent with Figure 12


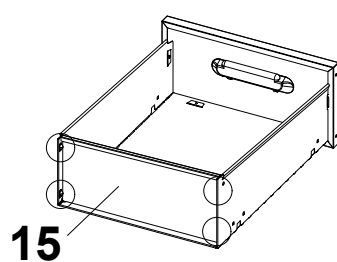


The installation steps are consistent with Figure 13




# 15

1. pull out the small rails in the slide rails on the side walls completely.  
with two people lifting each side of the drawer, align the four divots on the bottom with the two rail clips on the rails on each side and insert them into the rail clips.

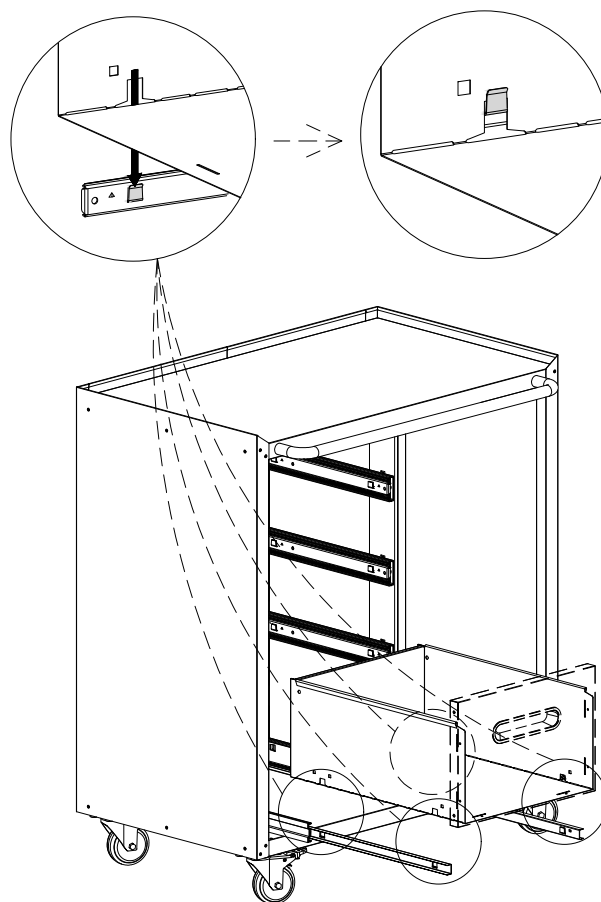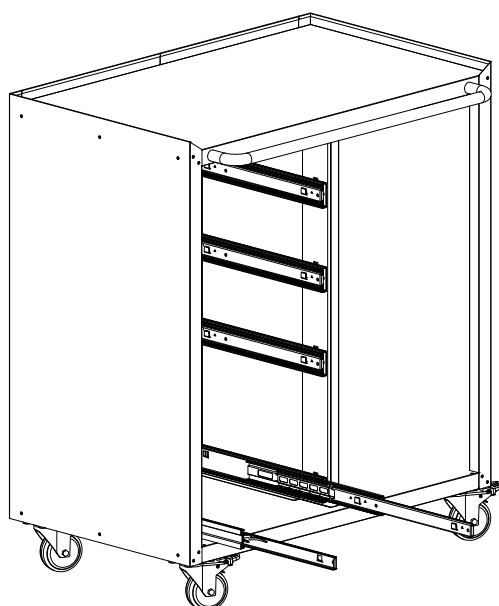


# 16

2. After placing the drawer on the rail, press the drawer base down hard enough, paying attention to check the position of the four clips inside until you hear a click four times, which means the drawer is in place

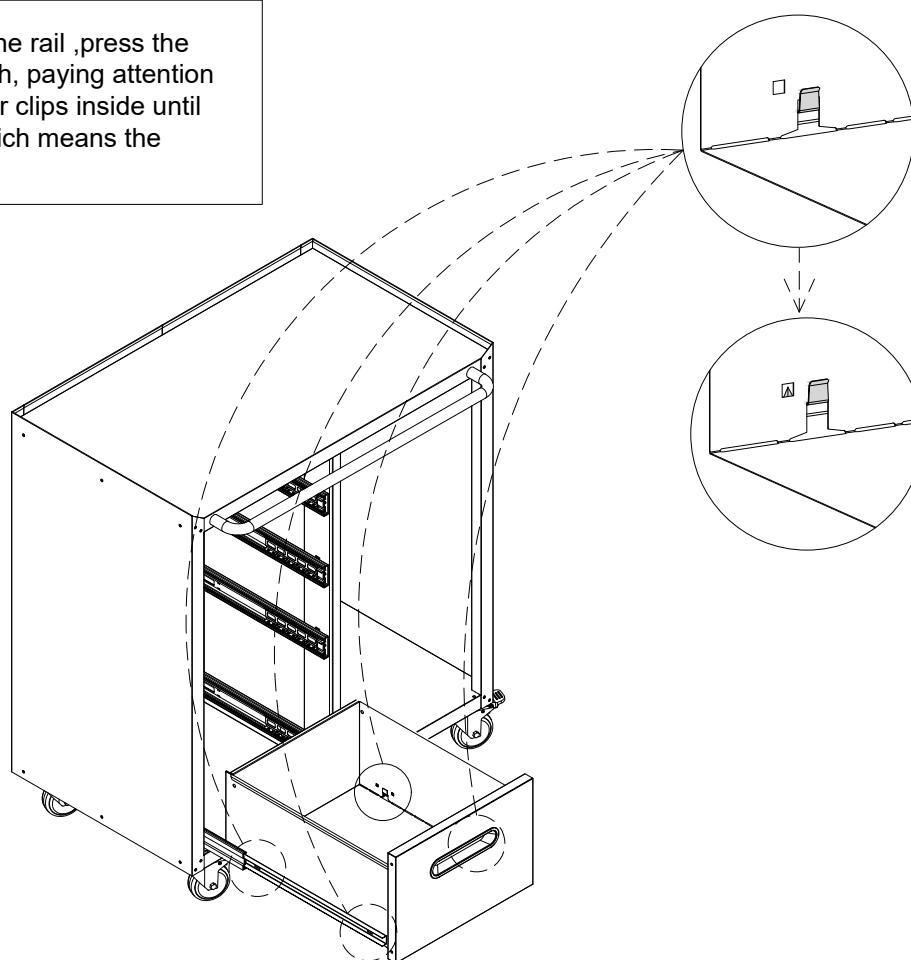


# 17

Please follow steps 15-16 to sequentially assemble the three drawers onto the cabinet body

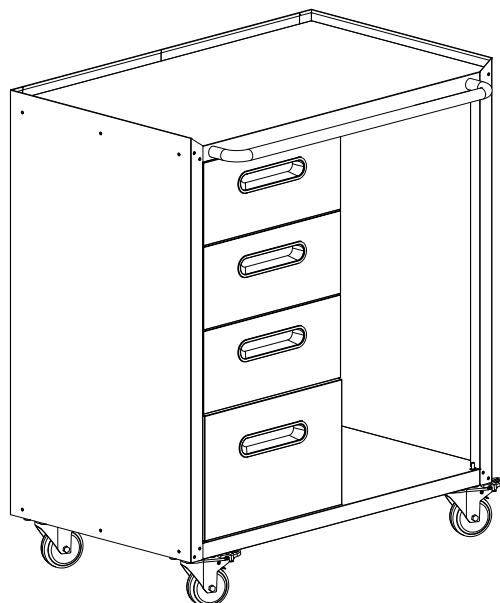


# 18

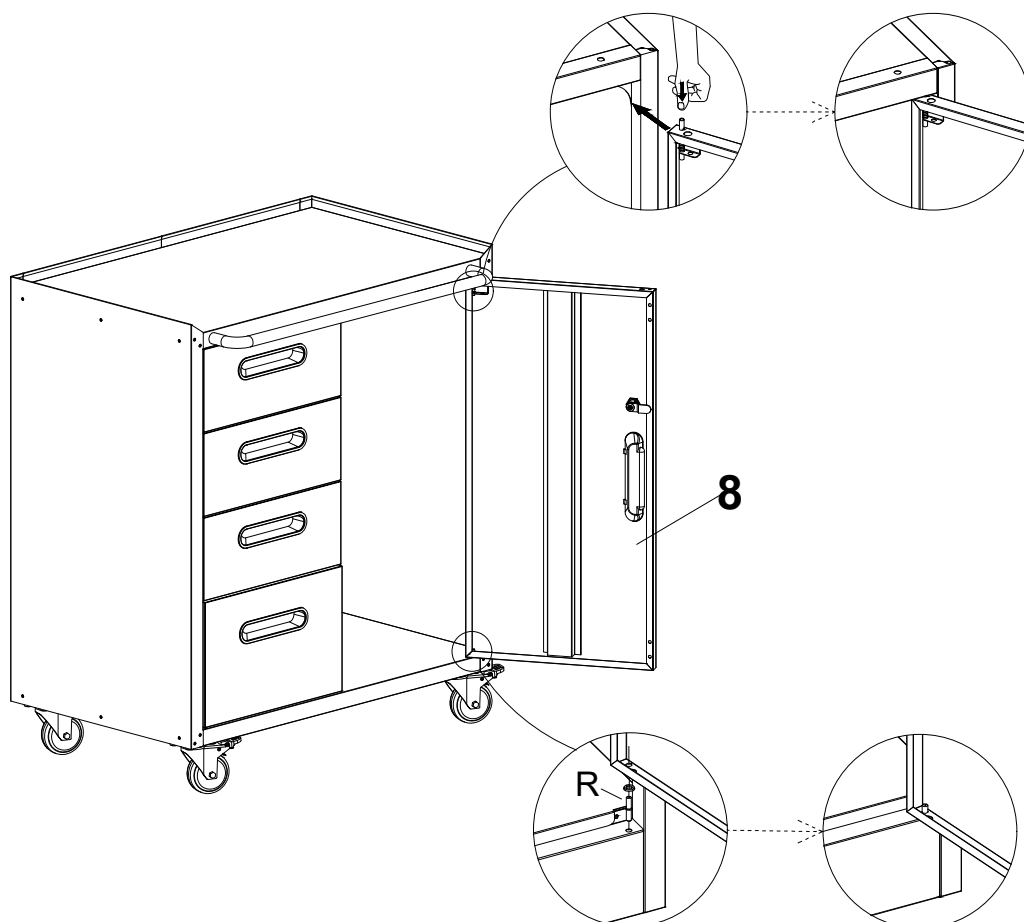

**R×1**


# 19

Install accessory U onto components 8 as shown in the diagram


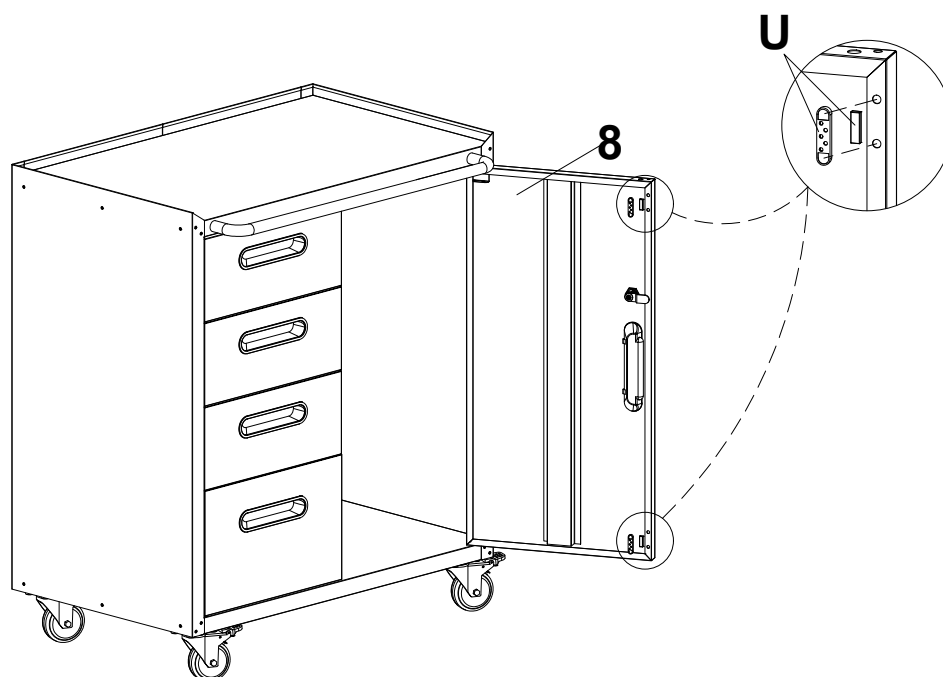


 **U×2**

# 20

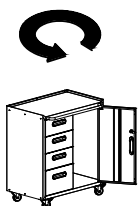


Install accessory Q in place according to the steps in the diagram

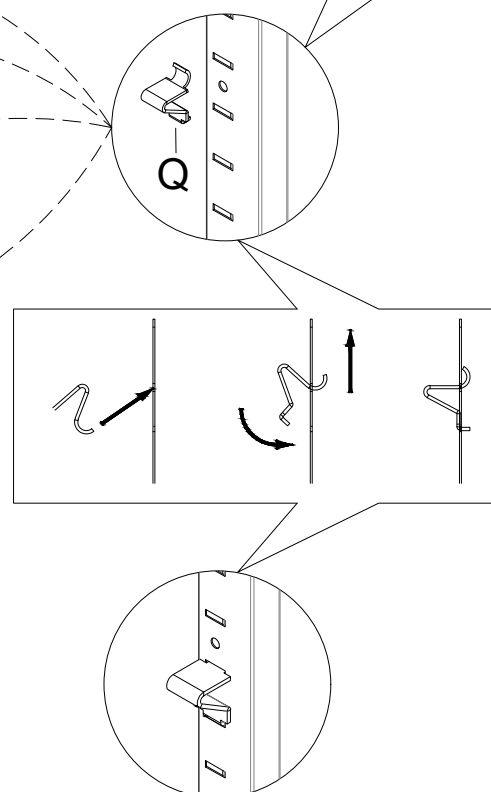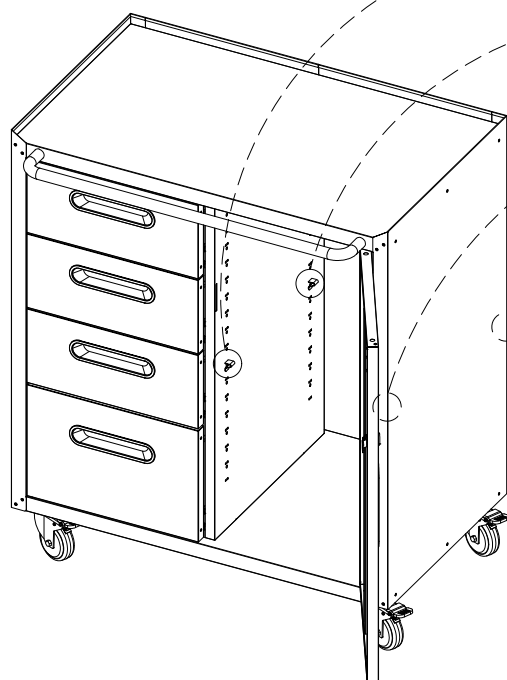


 **Q×4**

# 21

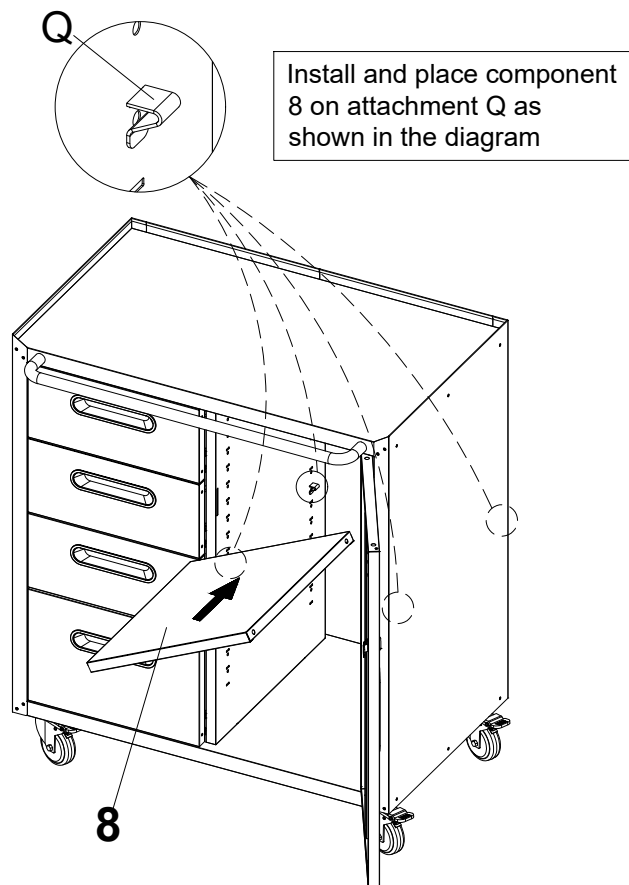

# 22

Install accessory F into position as shown in the diagram

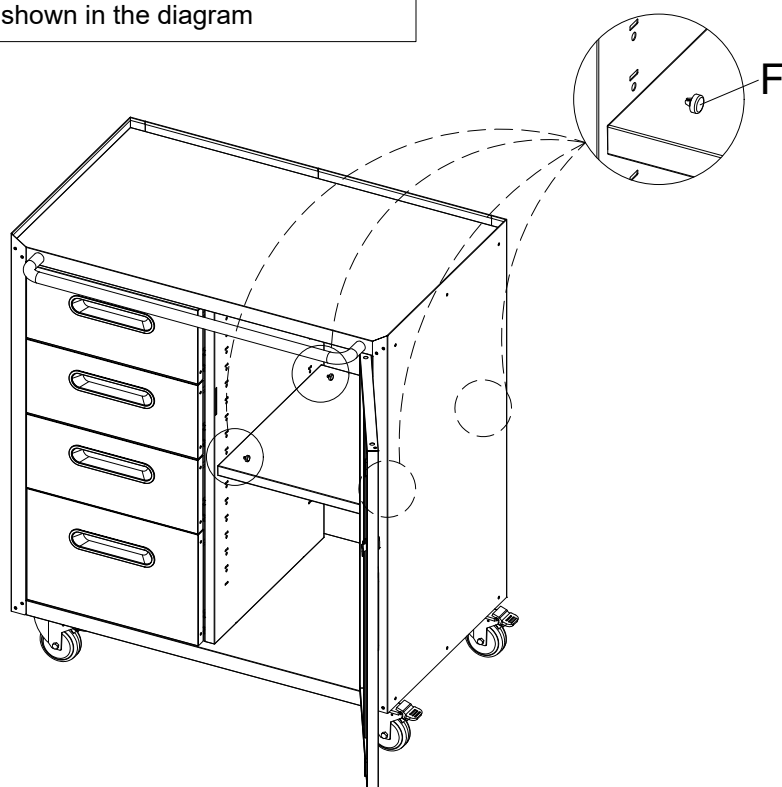

23



24

If you need to link another cabinet, you need to follow the following steps

First remove the 12 screws on the contact surface, then put the two cabinets together and fix them with 6 screws

