




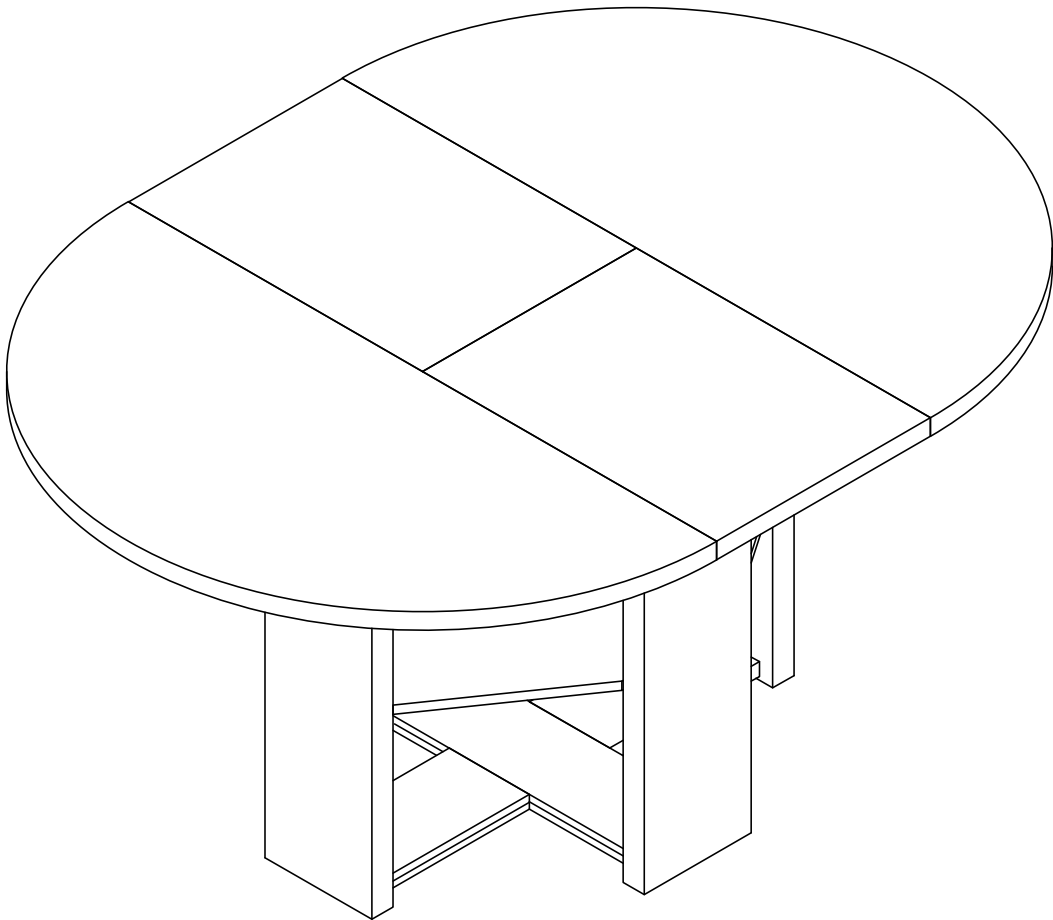


Please note: Items cannot be returned once assembled.


Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

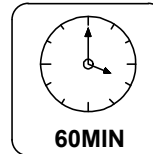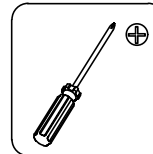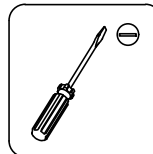


60MIN

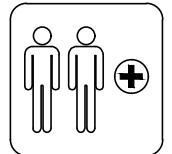


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

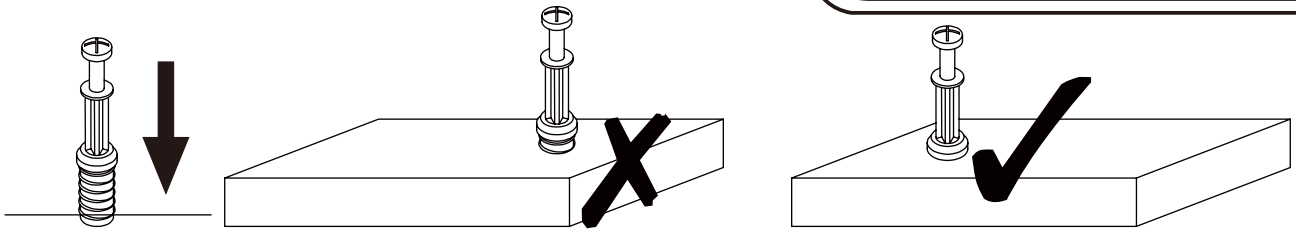


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

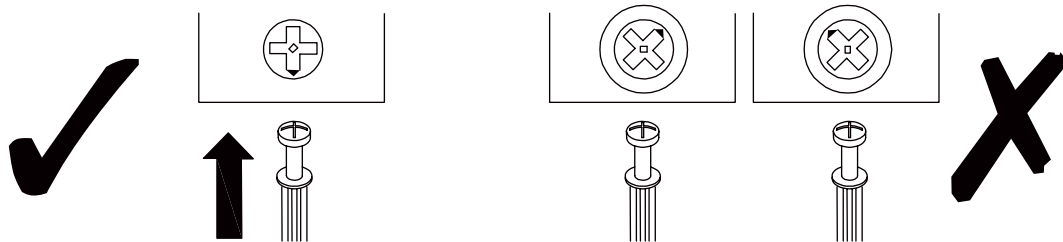











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

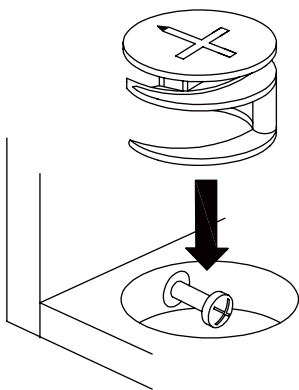


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

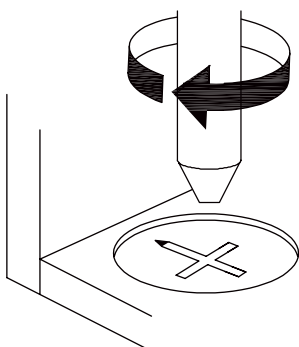

EN_Turn cam lock clockwise to tighten.

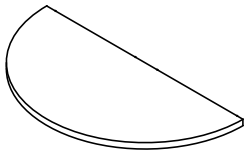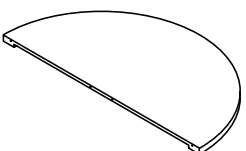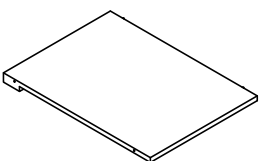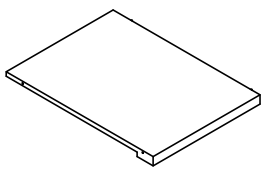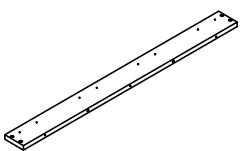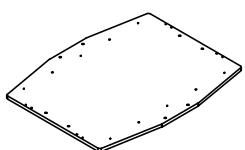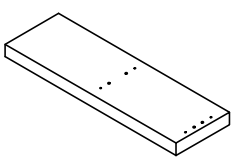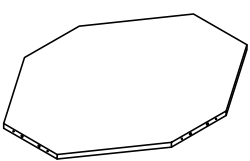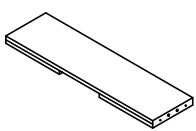NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x2	
6		x2	
7		x1	
8		x4	
9		x1	
10		x1	

[illegible]

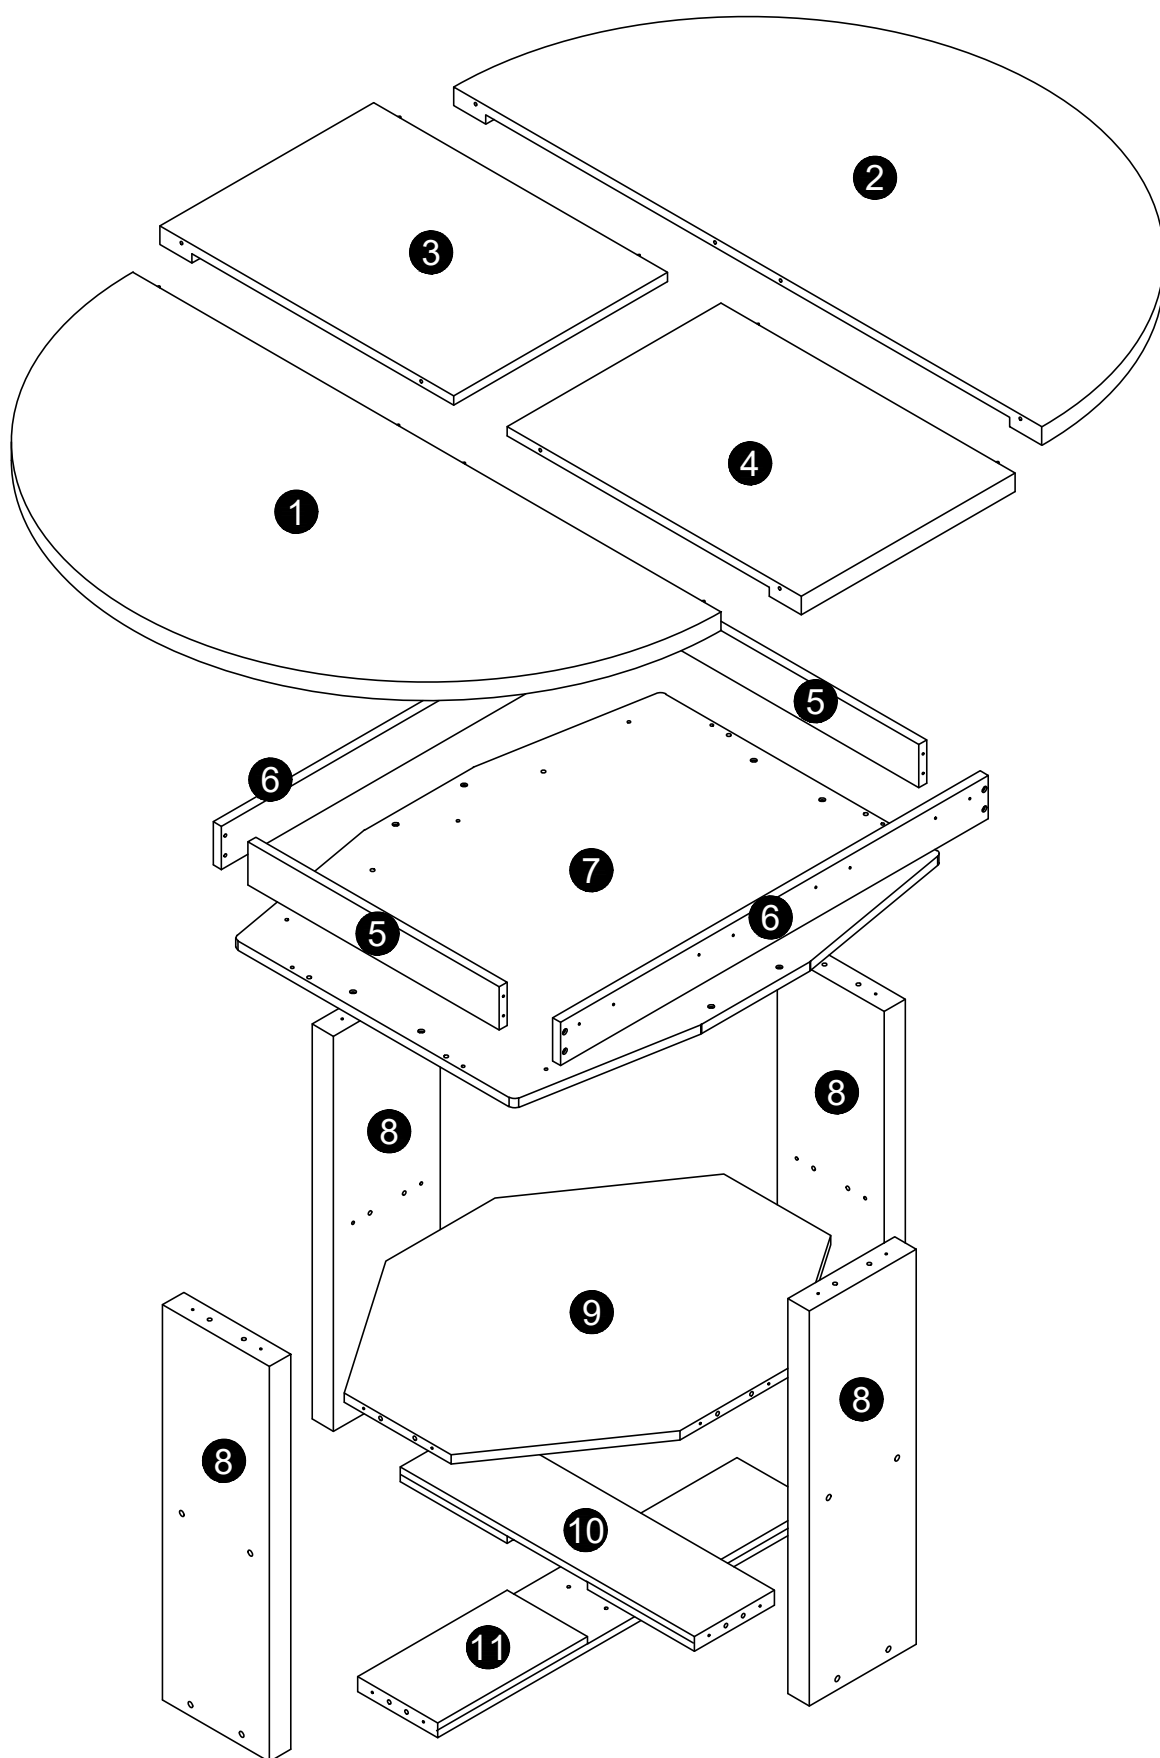


A x16 Ø4x50mm +1(spare)	B x40 +4(spare)	C x32 Ø6x30mm +3(spare)	D x26 Ø4x35mm +2(spare)	E x12 Ø3.5x12mm +1(spare)	F x2 Ø4x20mm
G x2	H x2	I x16 +4(spare)	J x4	K x8 +1(spare)	K-1 K-2

F x2






01

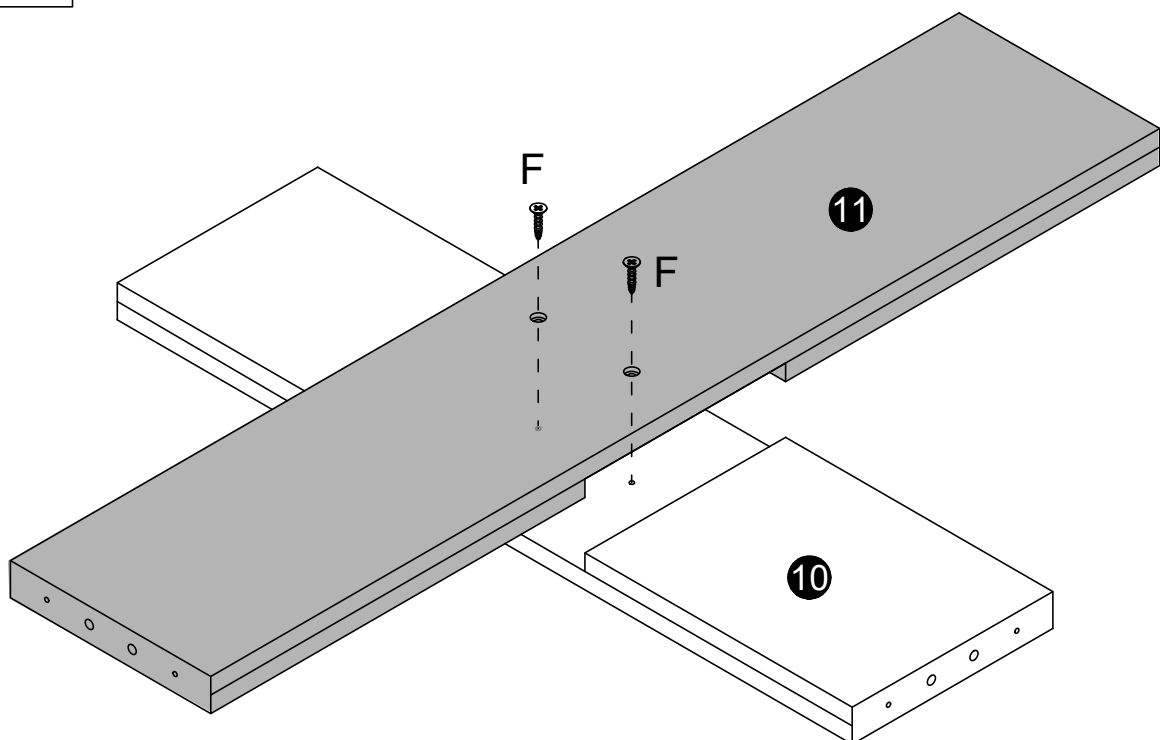



A x4

C x4

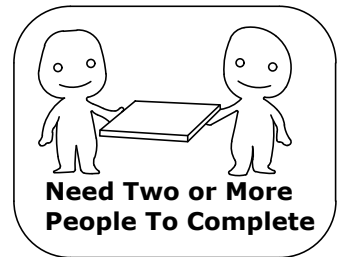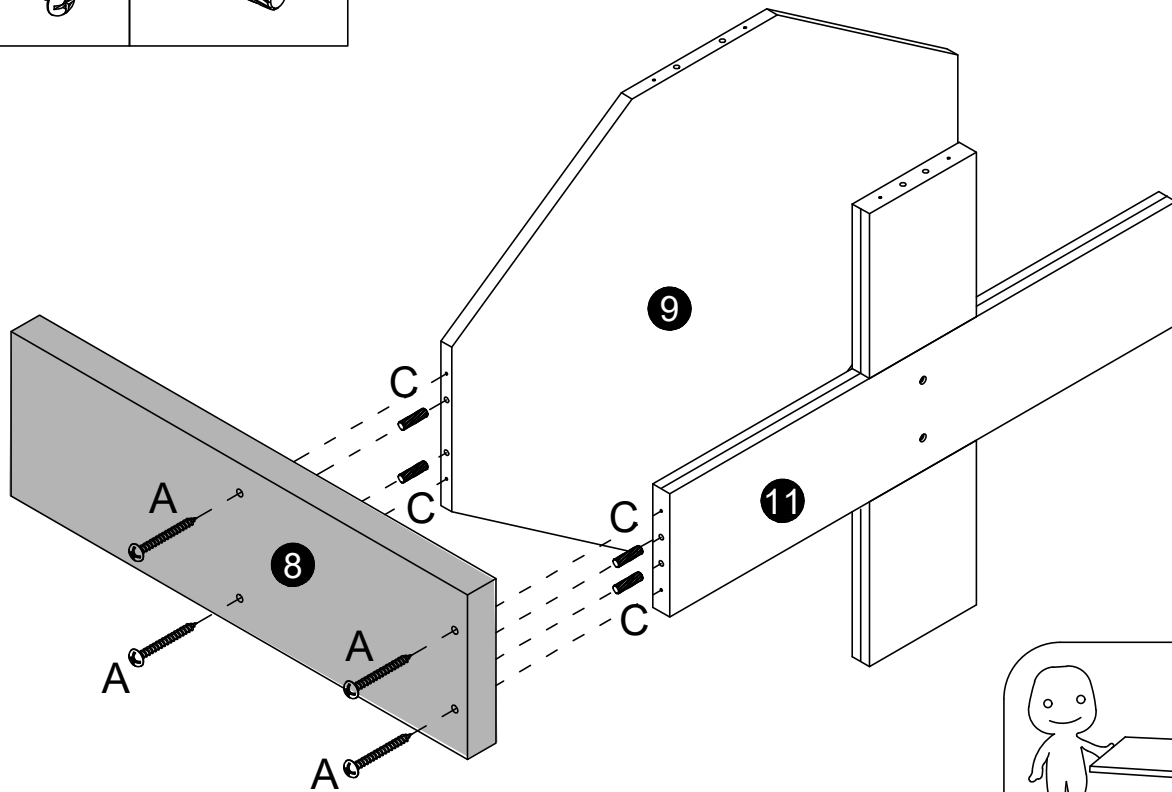

A x4



C x4

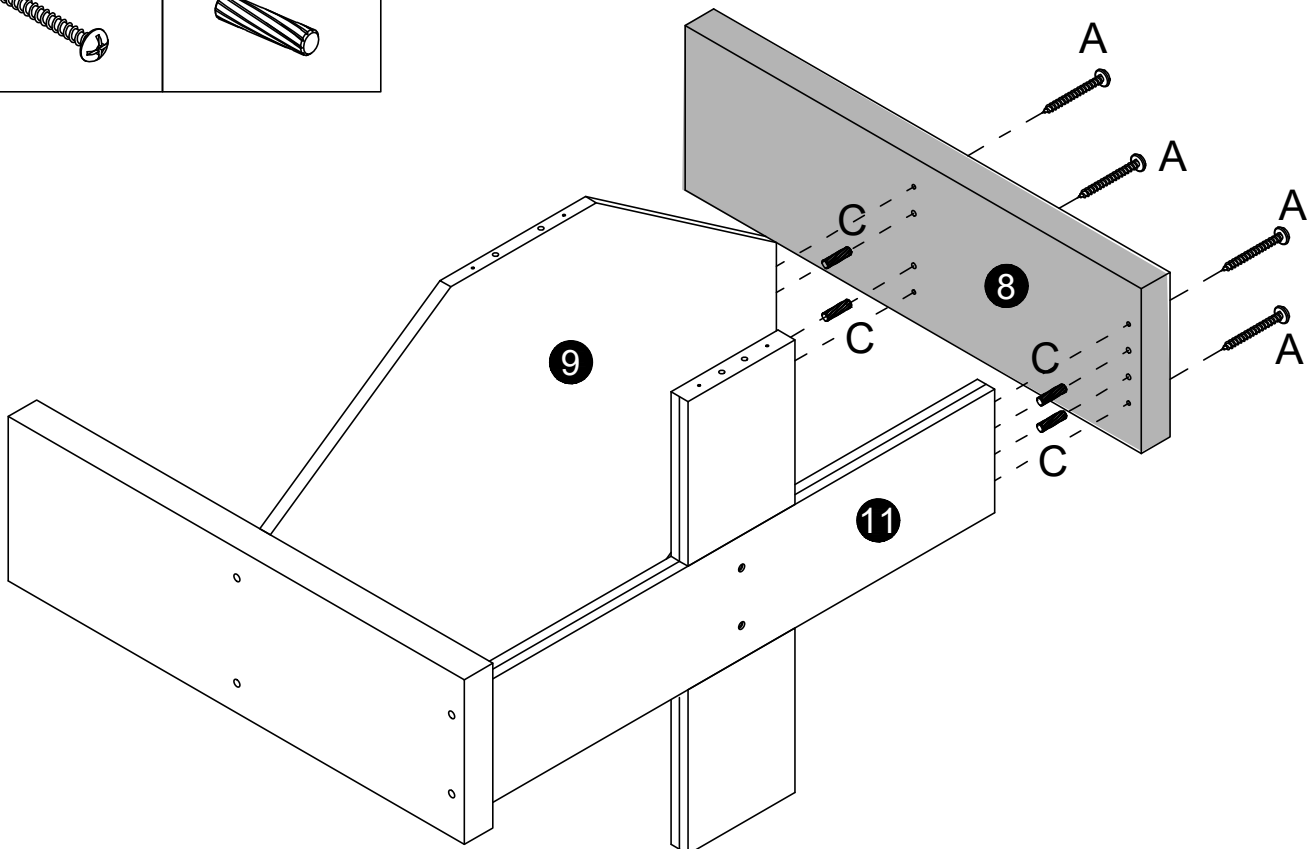

04

A x4



C x4

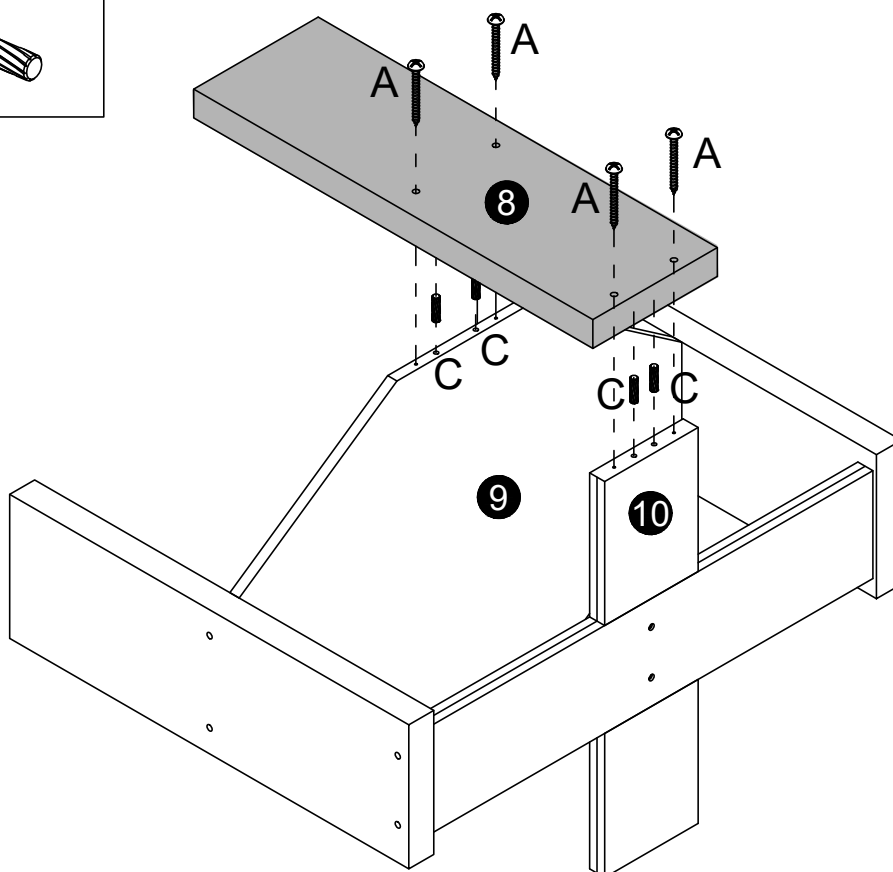

05

A x4



C x4

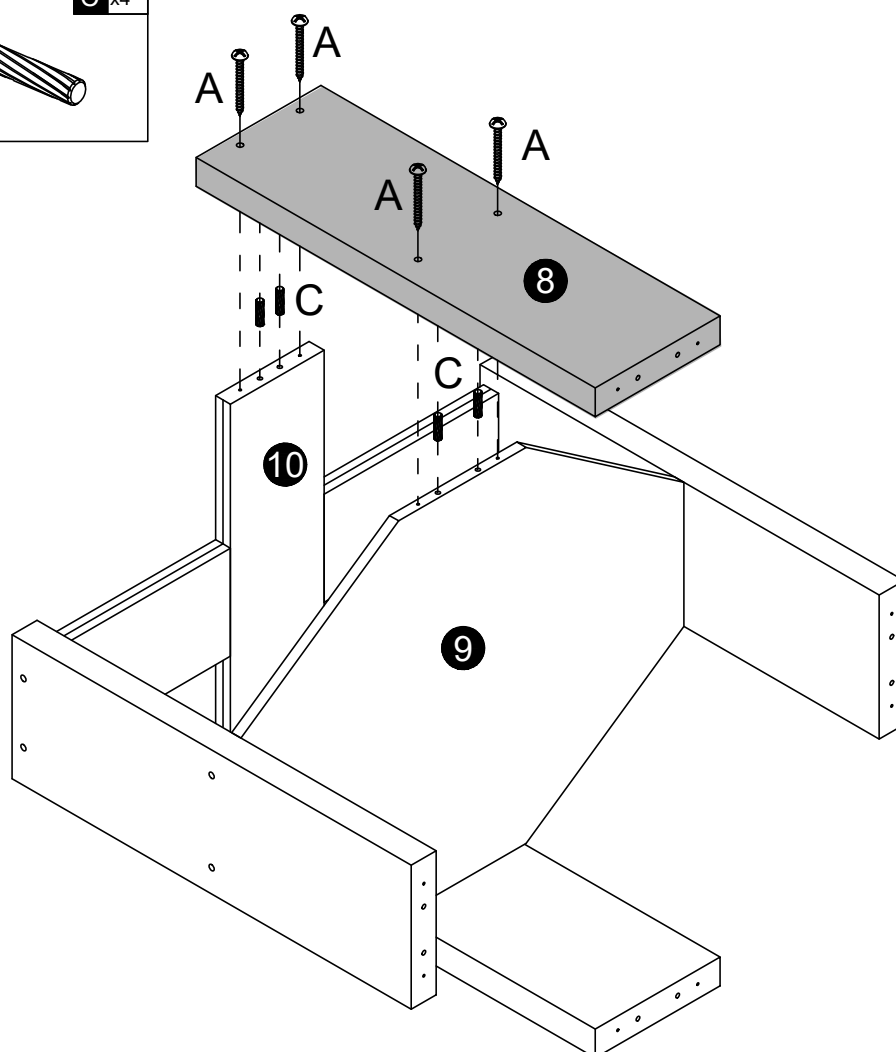



C x8



D x8

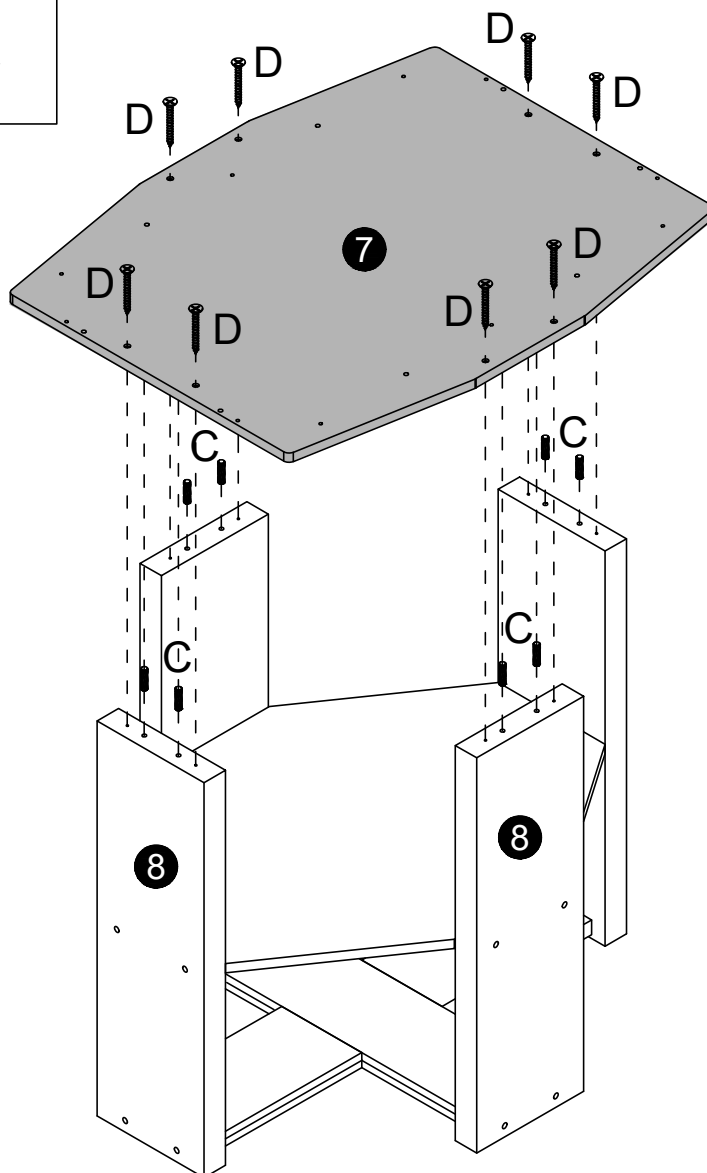


D x8

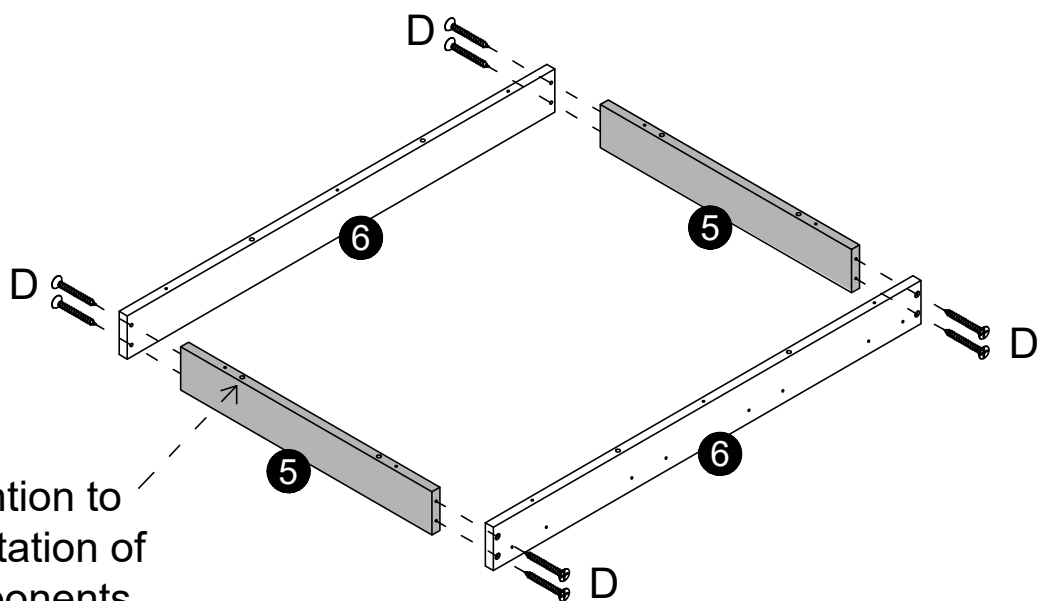


Pay attention to
the orientation of
the components.

B x16


G x2

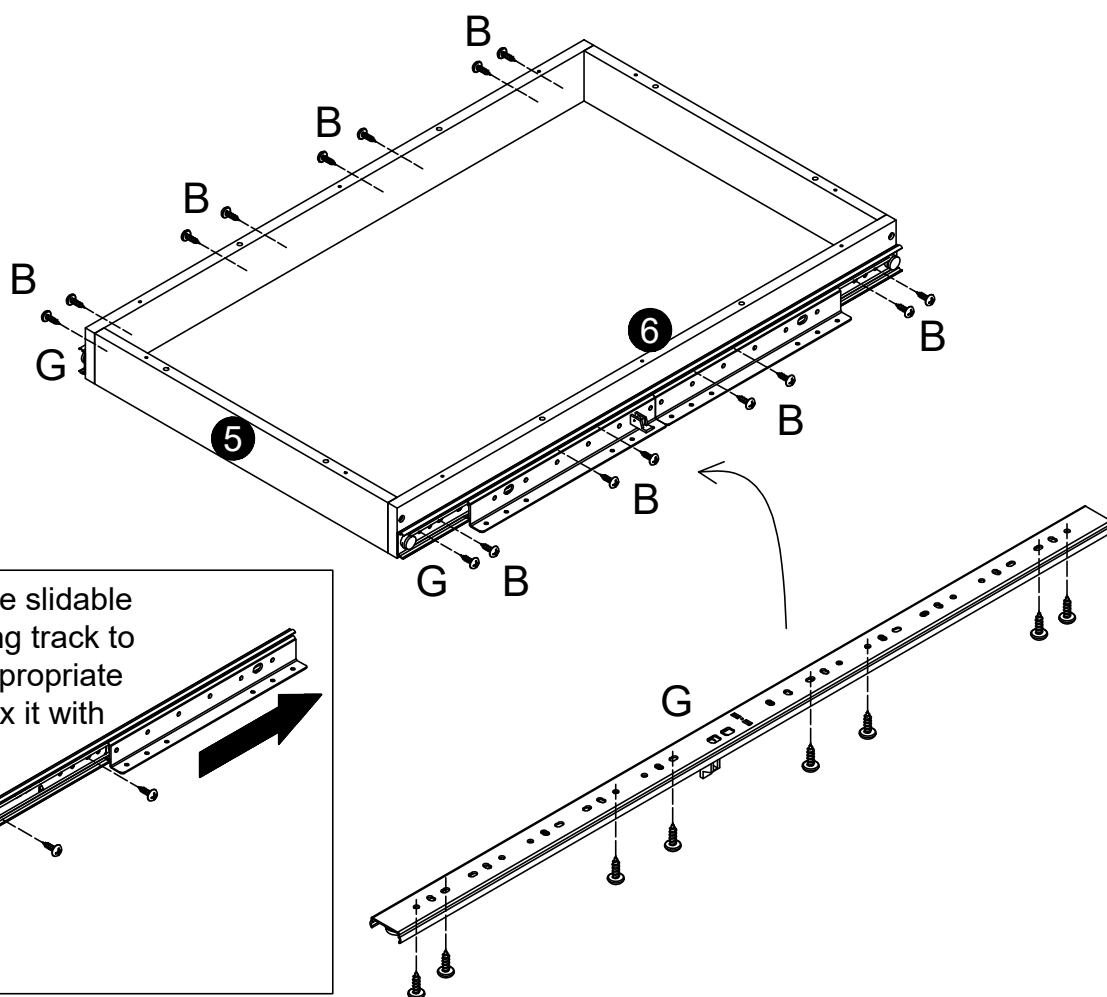


Please move the slidable part of the sliding track to adjust to the appropriate path and then fix it with screws.

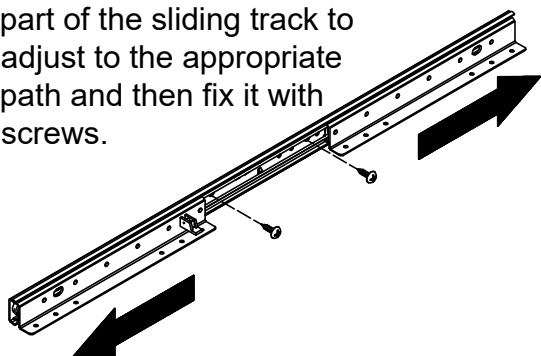


Mobilizable

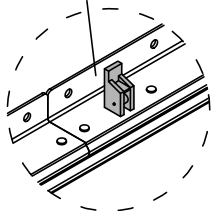

Not movable

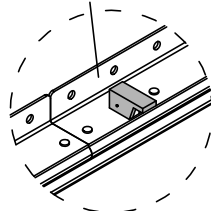



Note: If the black handle is pressed down, the sliding track will no longer be able to slide.

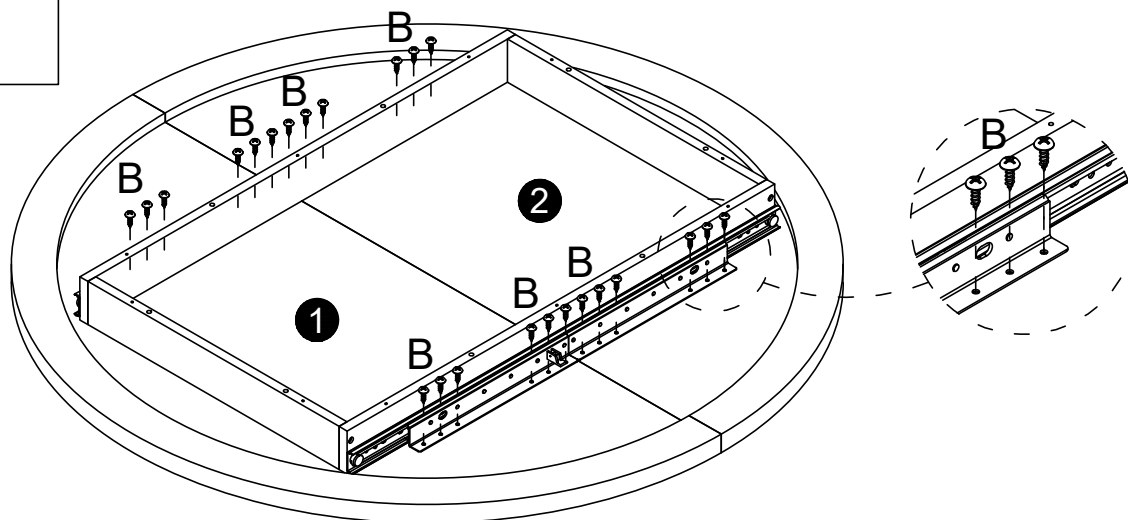

C x8




D x10

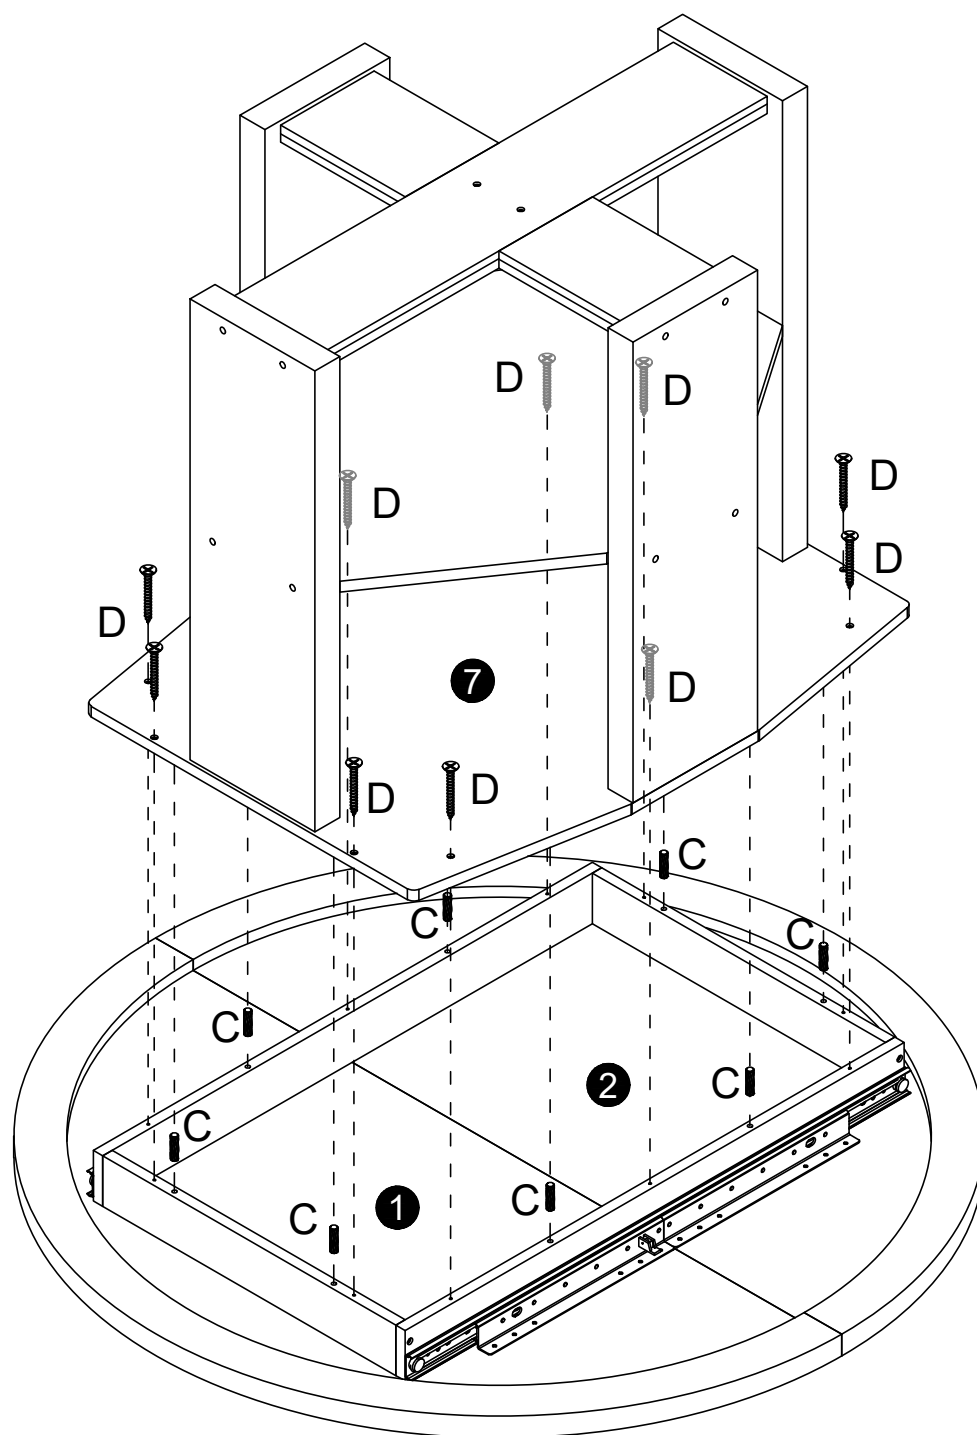

I x16



J x4

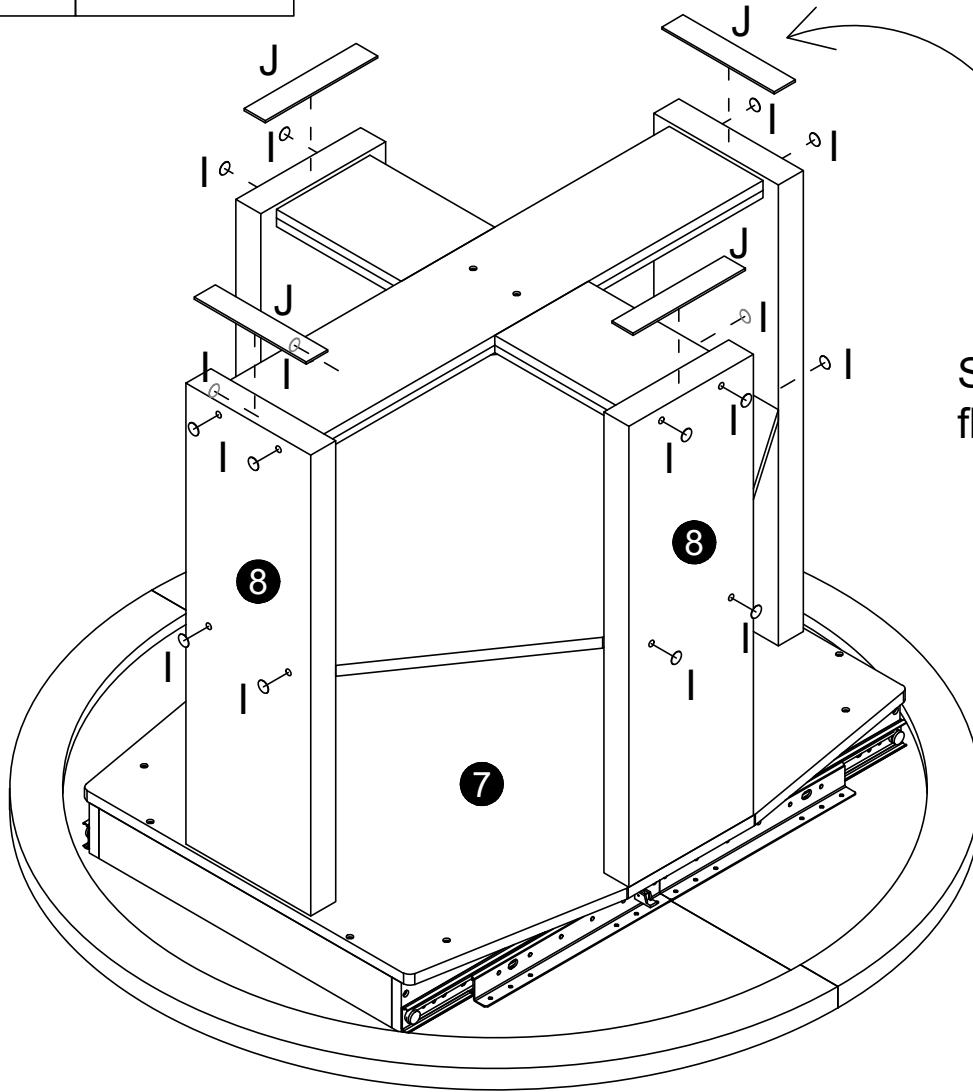


Self-cutting of
floor mats

E x12

H x2


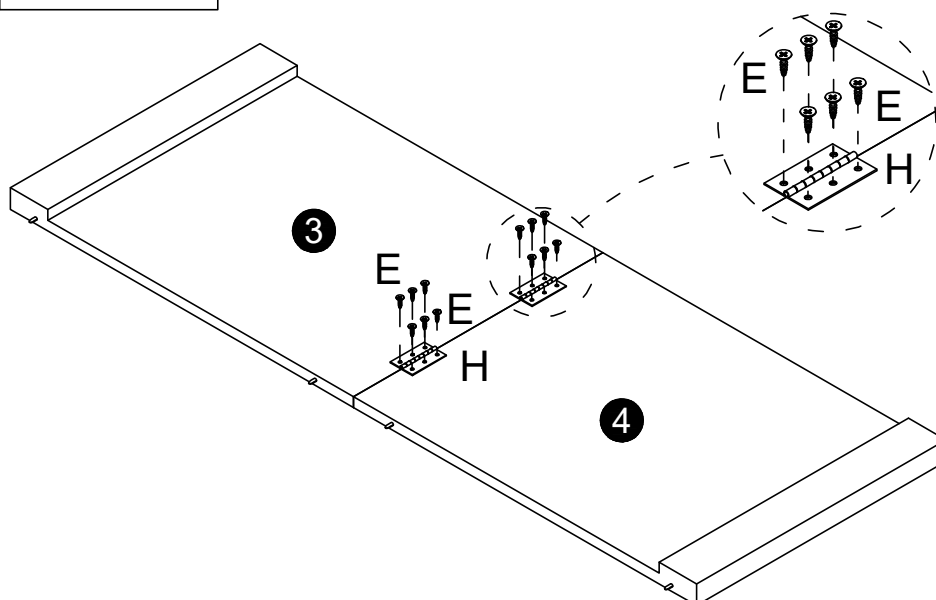



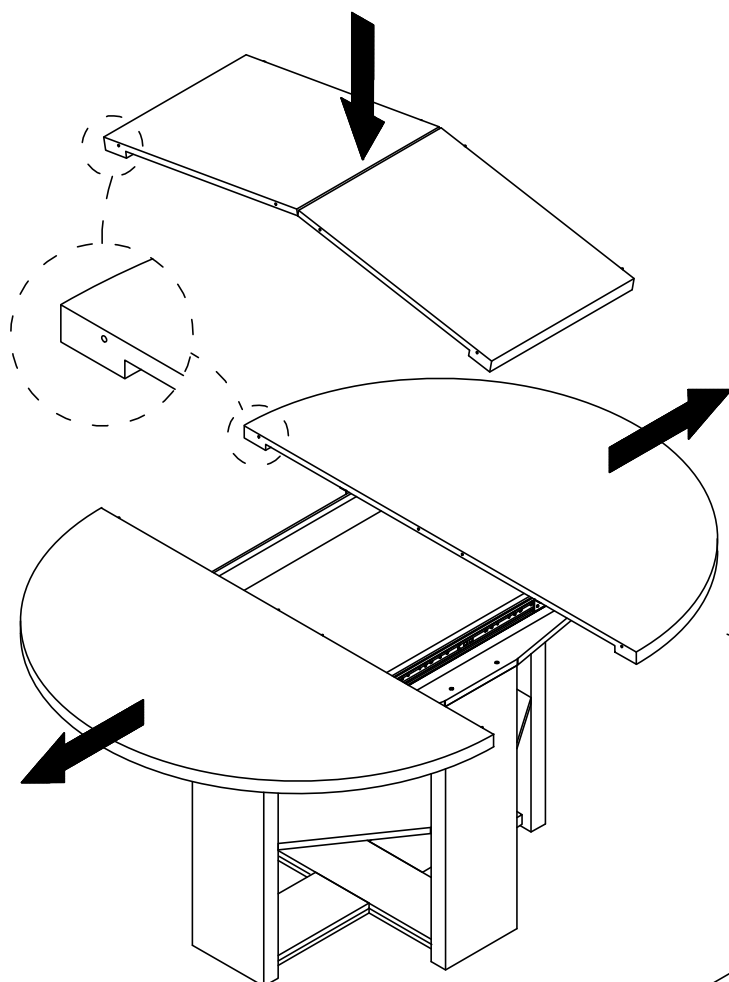

Please note that you can freely choose the shape of the desktop as needed. In steps 13 and 14, you can select either one of them.




Caution
Prevent hand injury
from being pinched

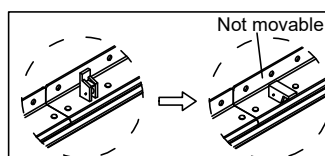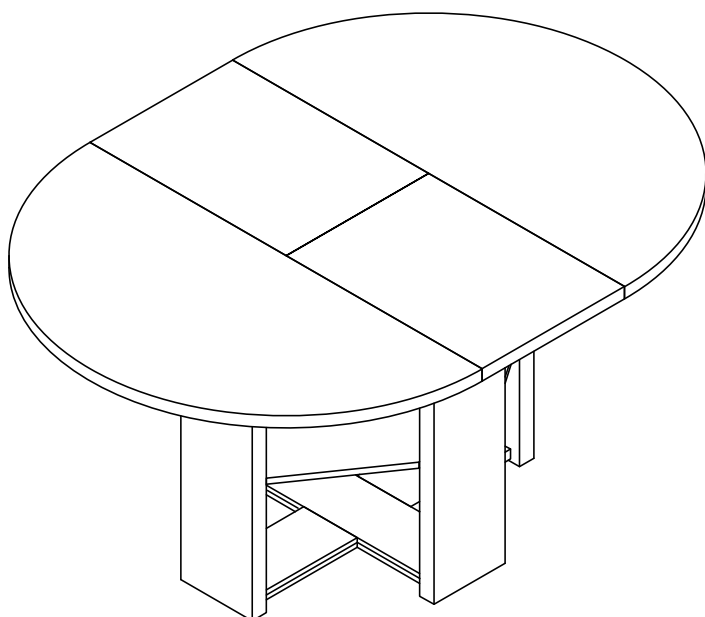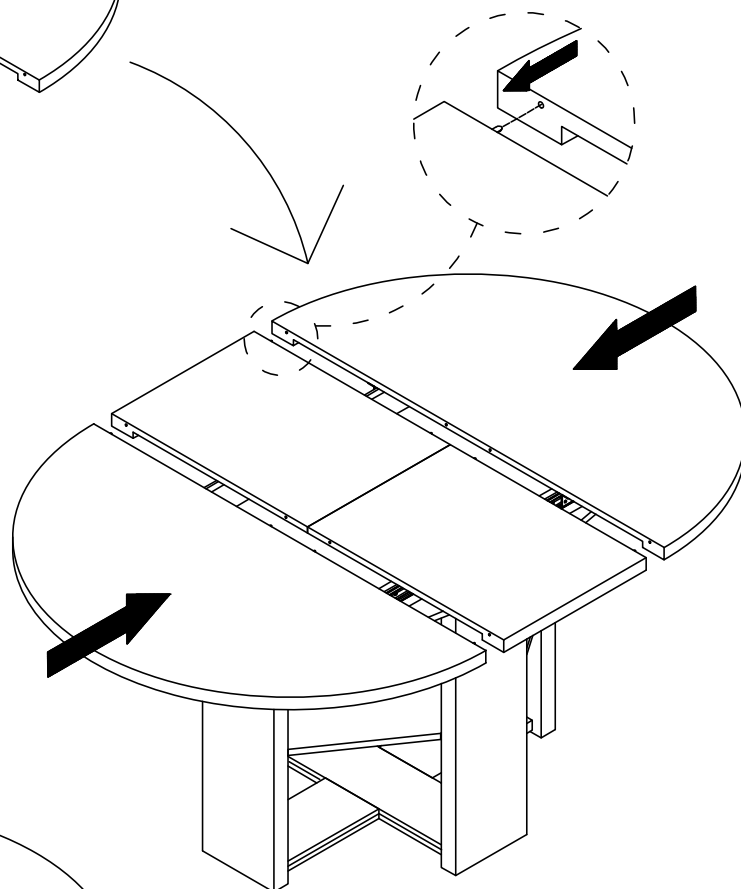




Note: If the black handle is pressed down, the sliding track will no longer be able to slide.

Note that only when the narrow end of the component enters the internal space first can the illustrated steps be completed.

Please note that you can freely choose the shape of the desktop as needed. In steps 13 and 14, you can select either one of them.

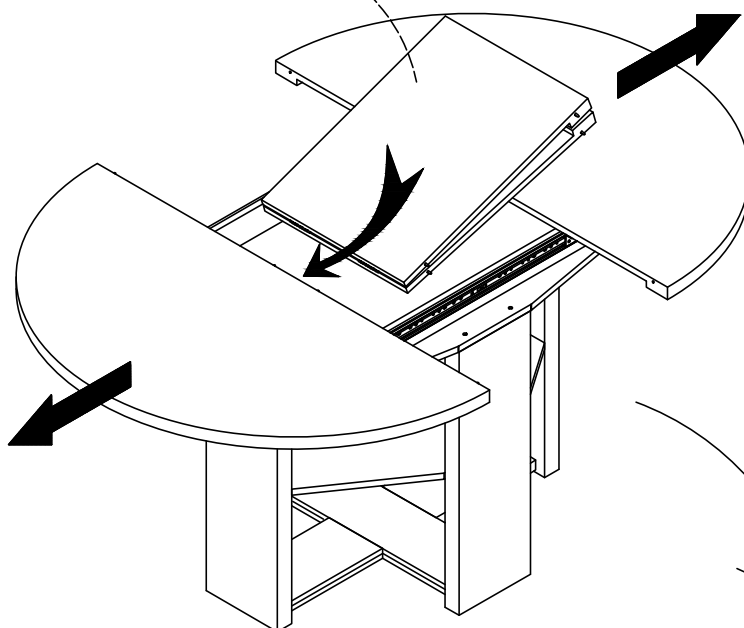

Caution
Prevent hand injury
from being pinched

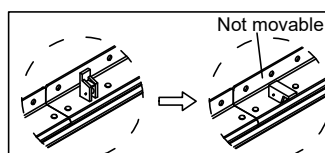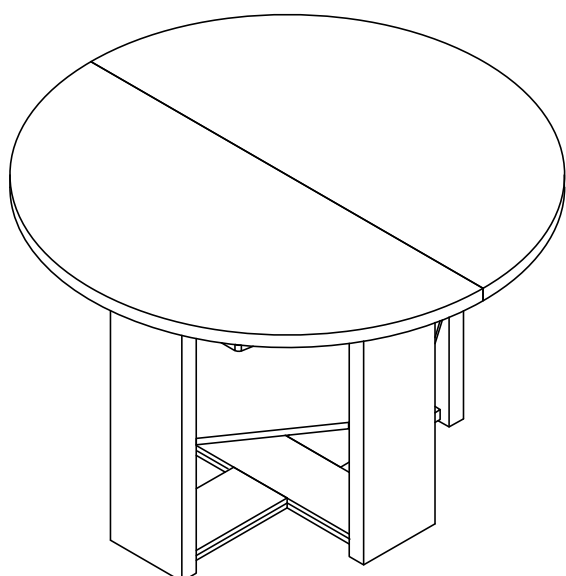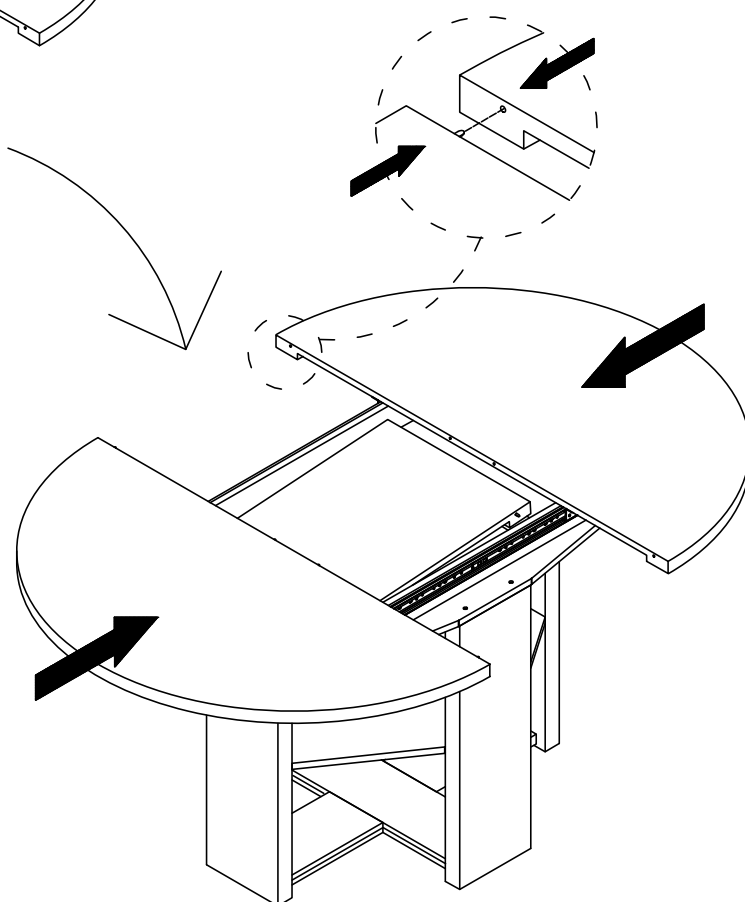

Note: If the black handle is pressed down, the sliding track will no longer be able to slide.