


Series Number: SDP12-22 (36)
R1.0

Shower Door Installation Instructions

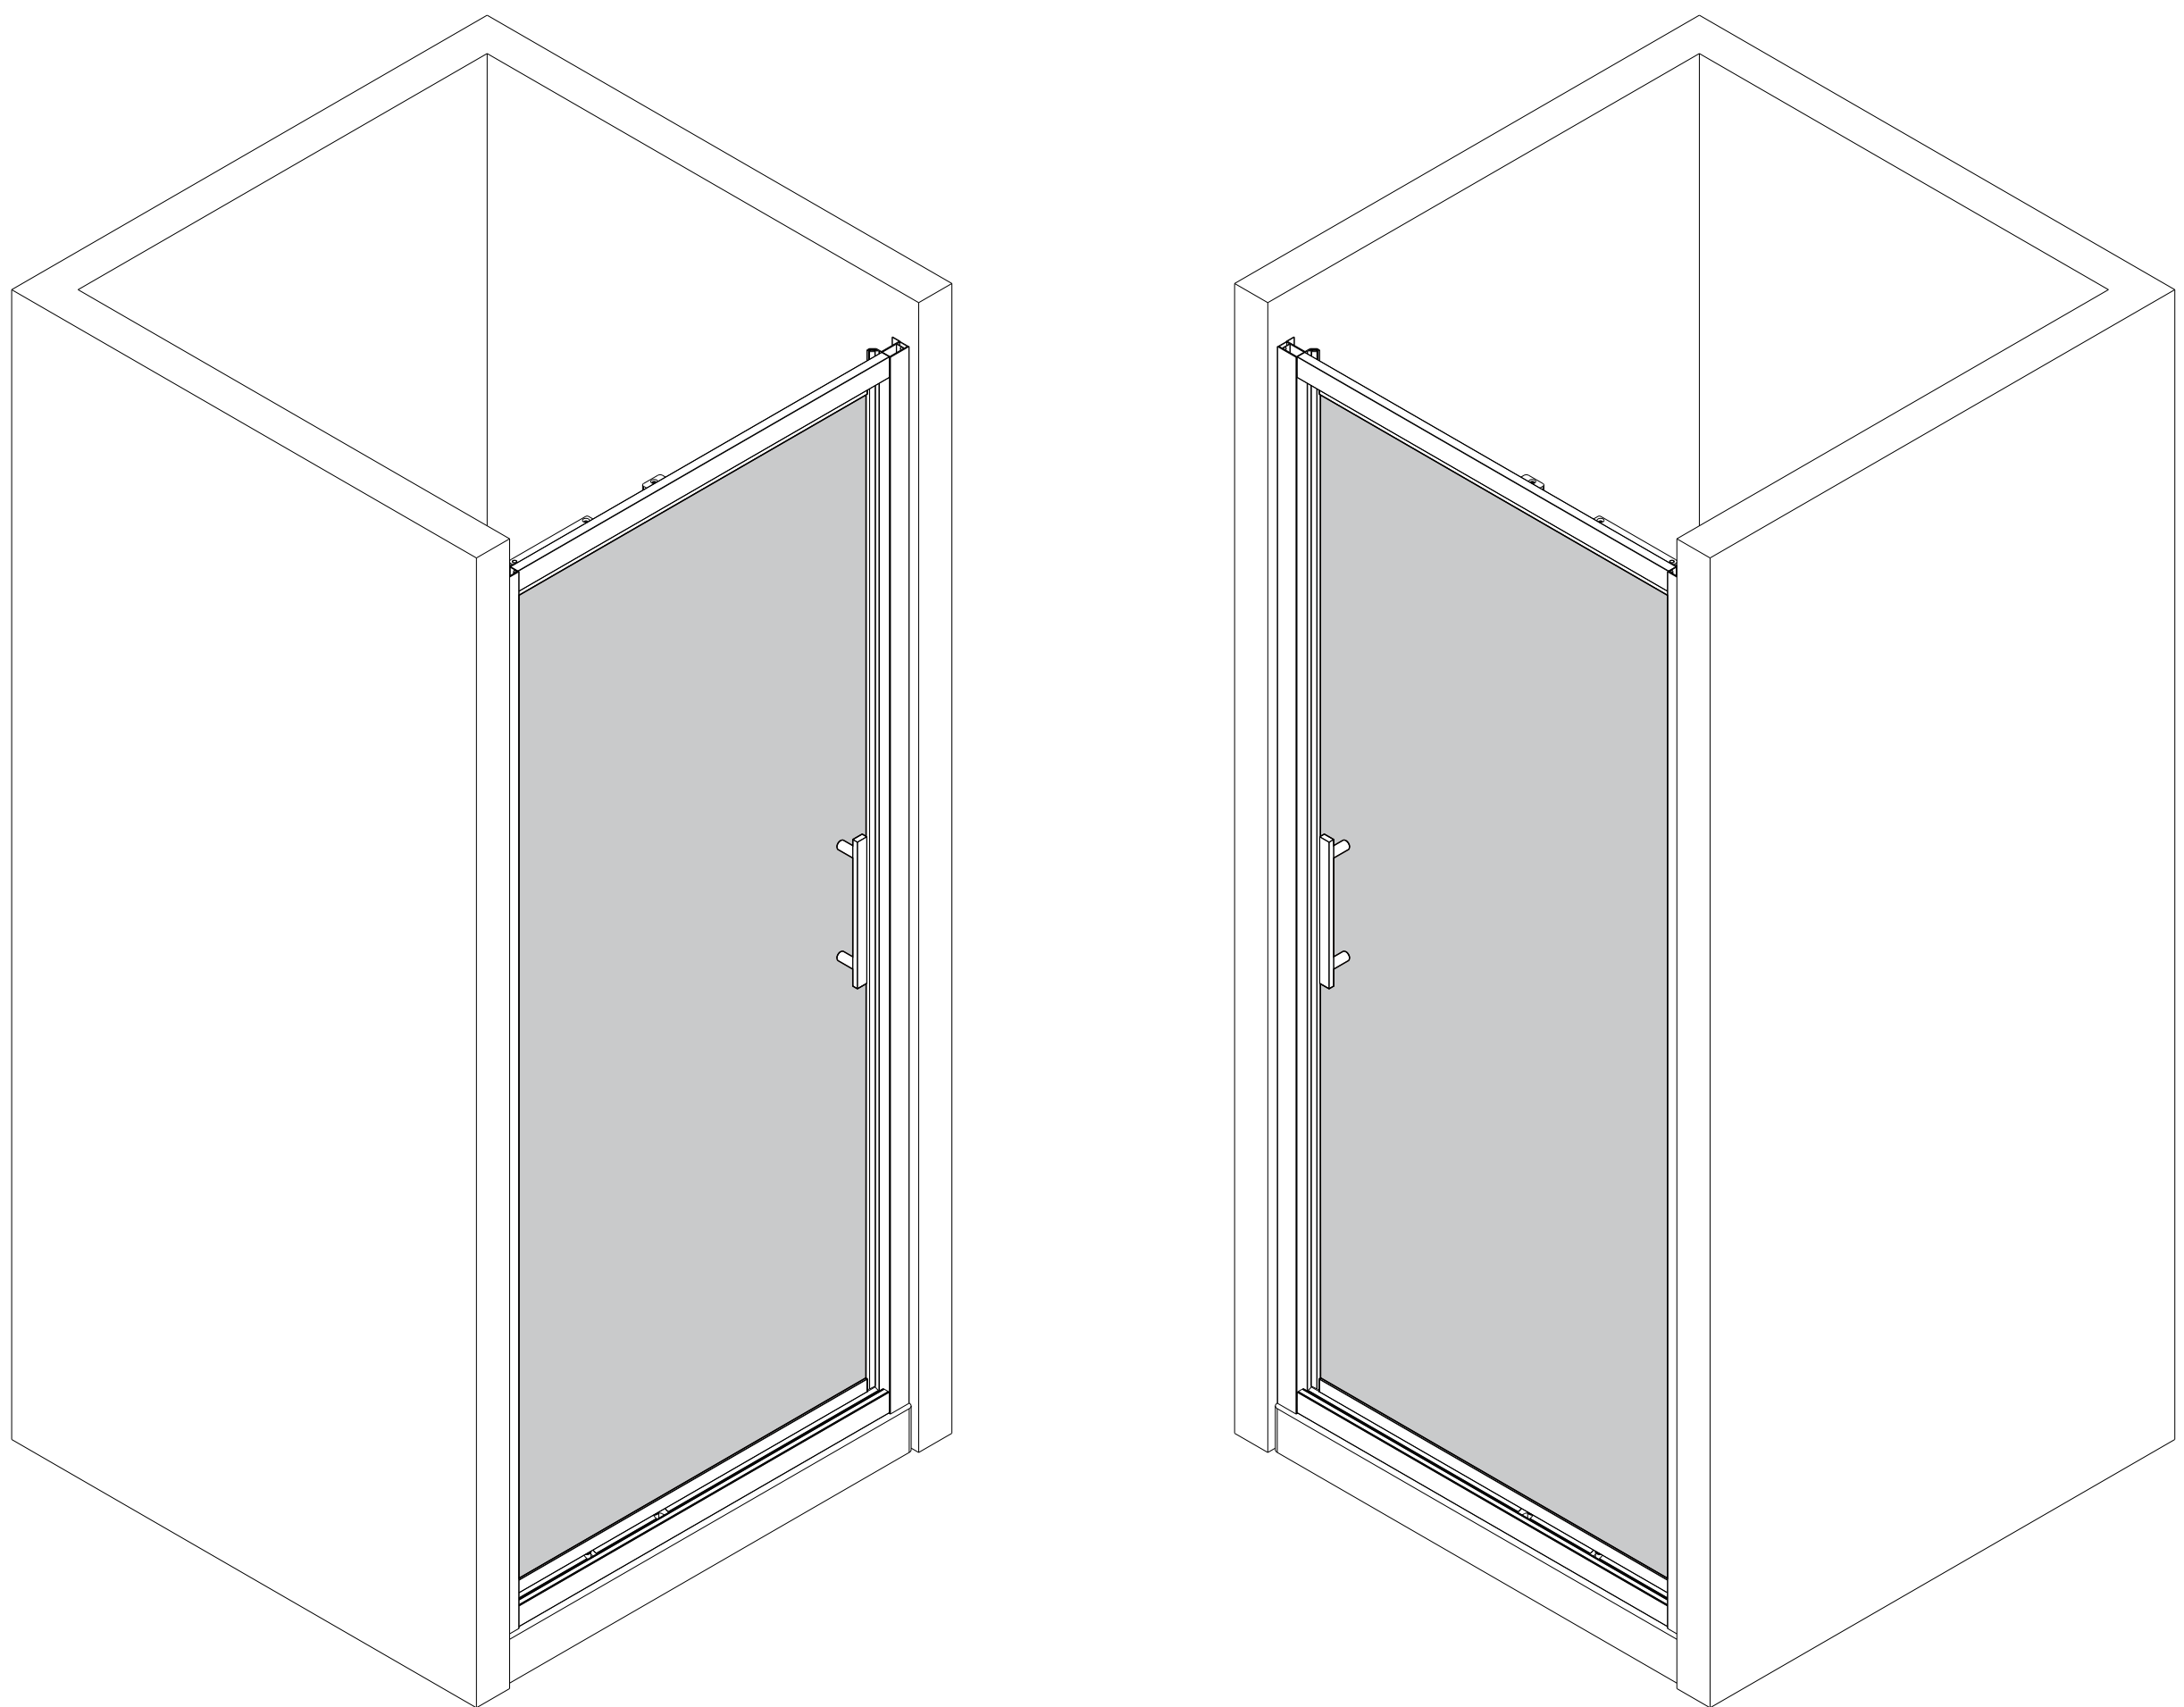

**Please do not return the product to the store.
Contact us with any questions.**

Model Specific Preparation







REQUIRED:


Verify threshold and wall with a level.

1/4"(6mm) Maximum out of plumb adjustment from top to bottom

Threshold must be level.

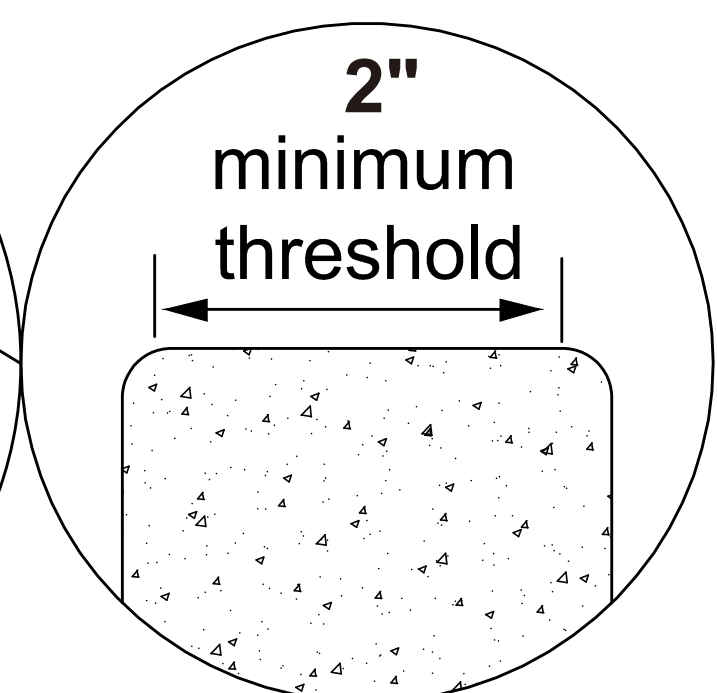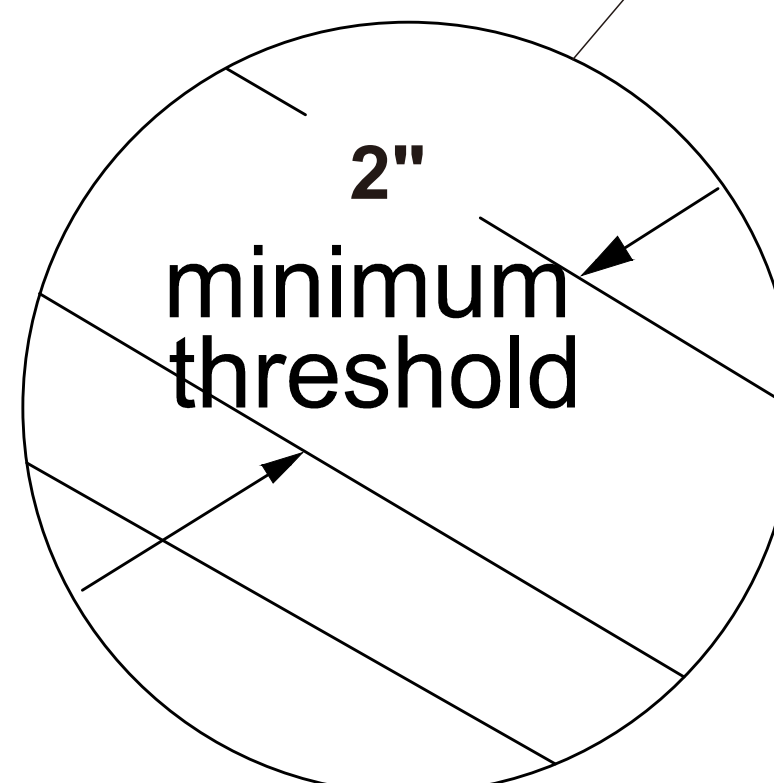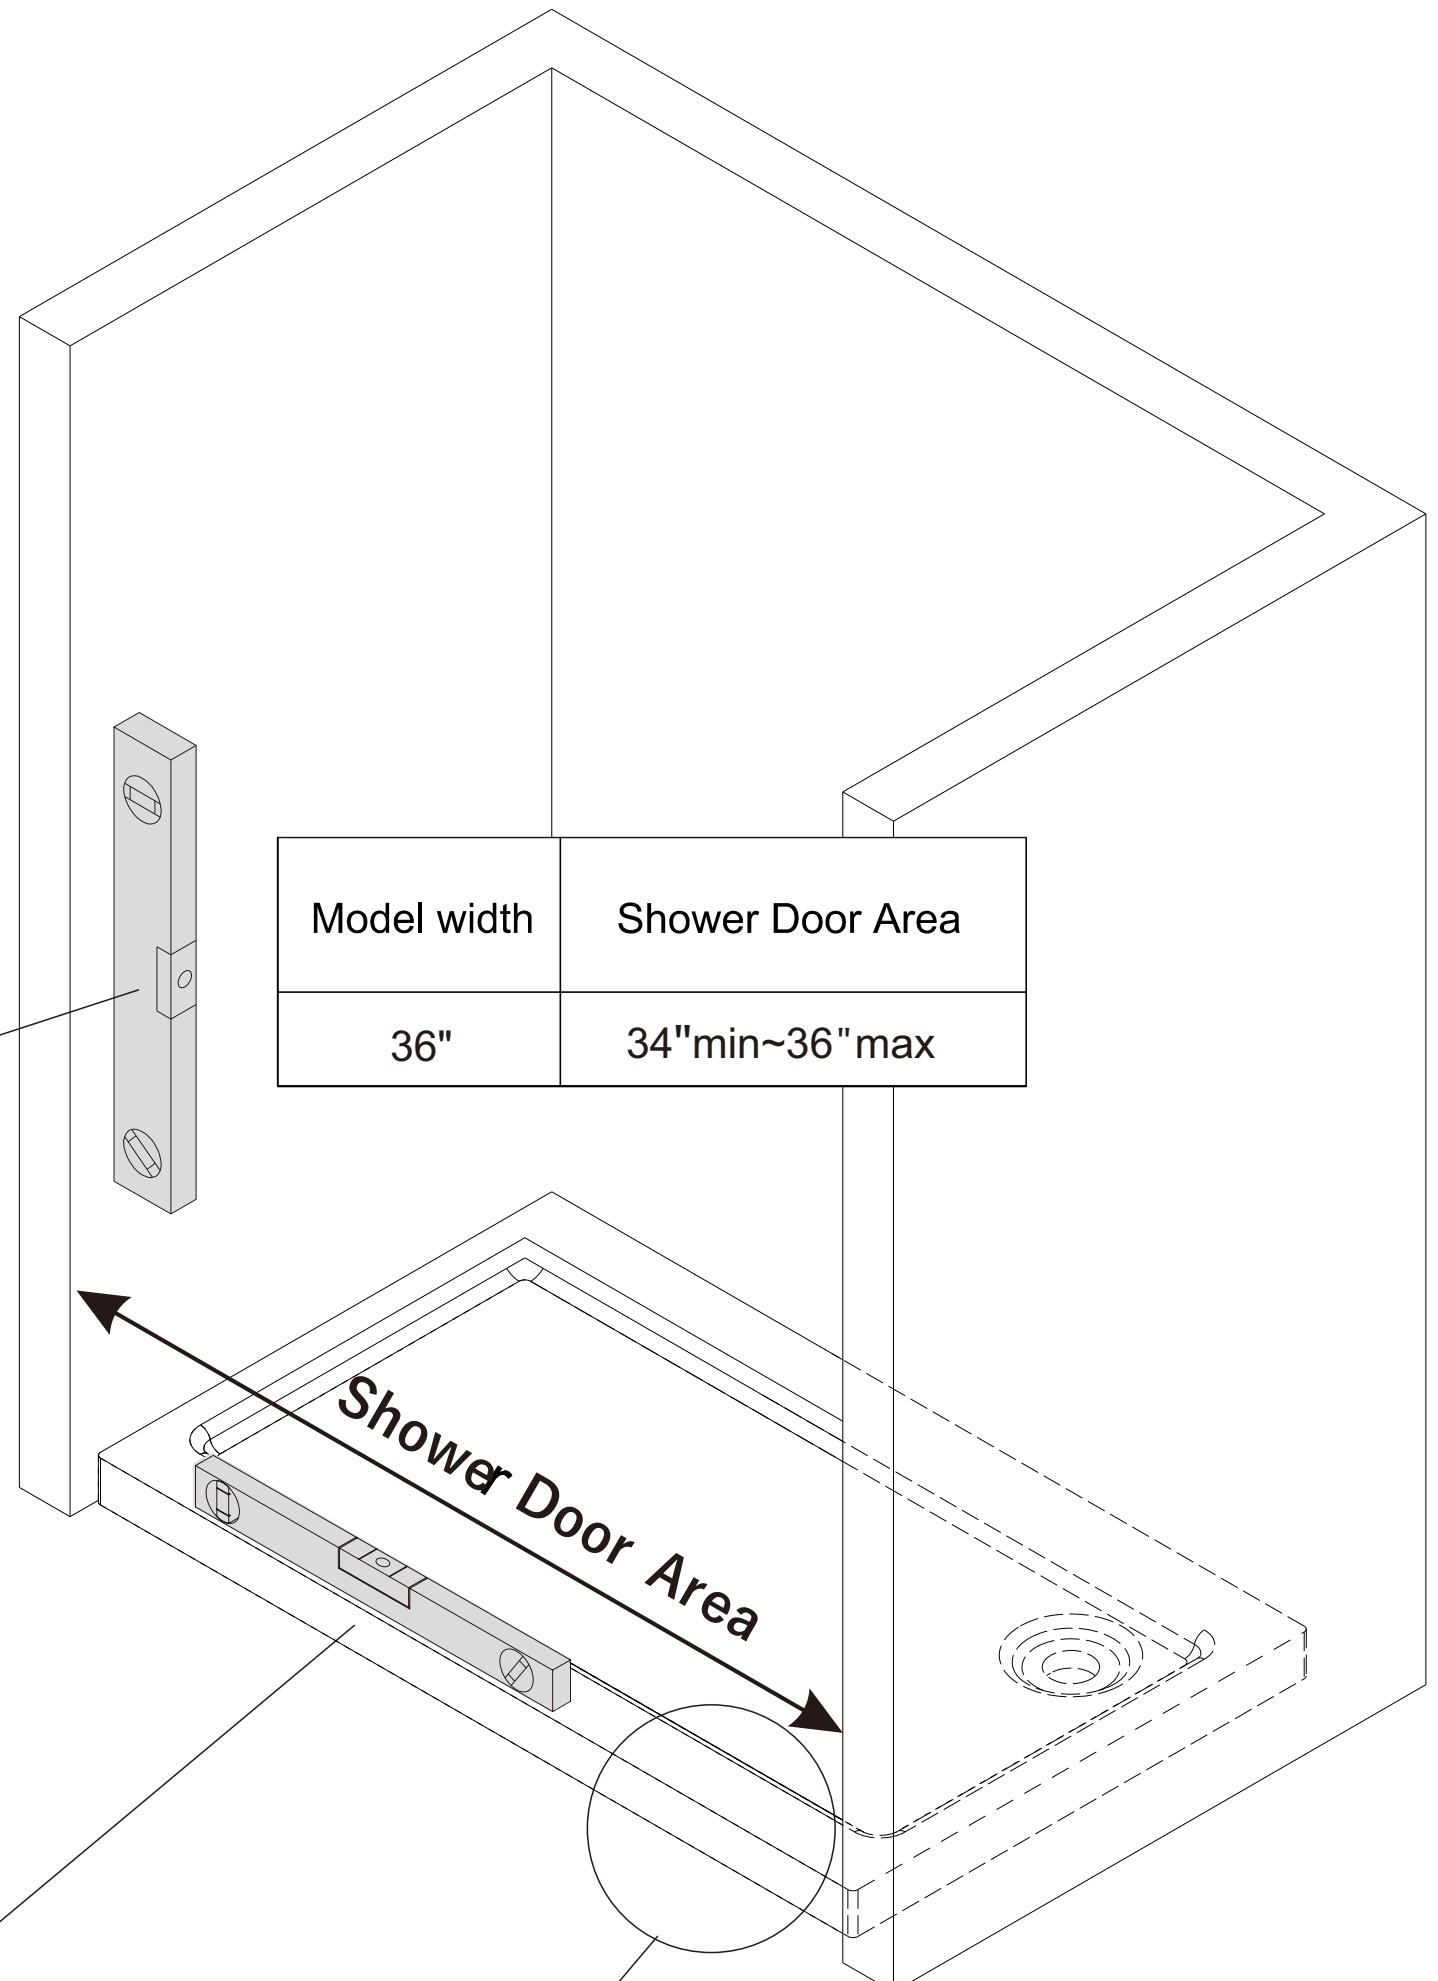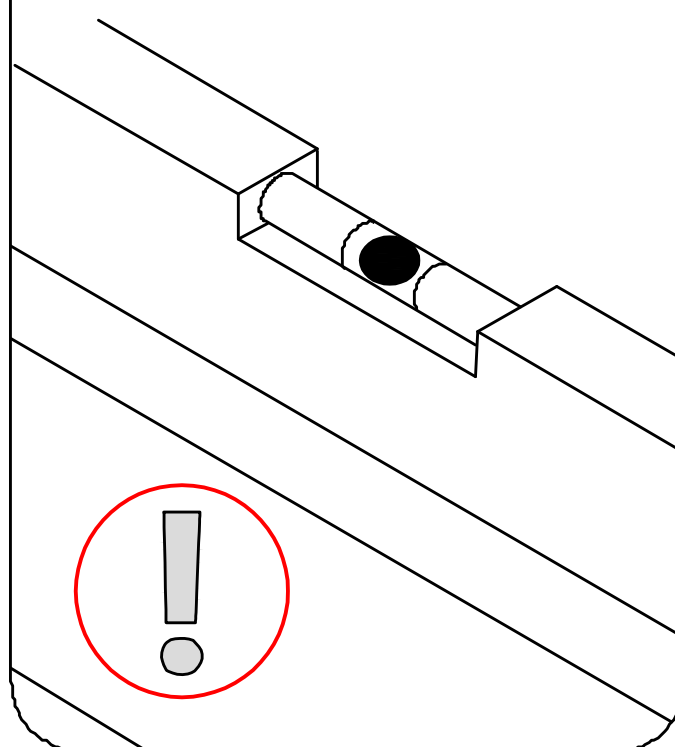

PACKAGE CONTENT

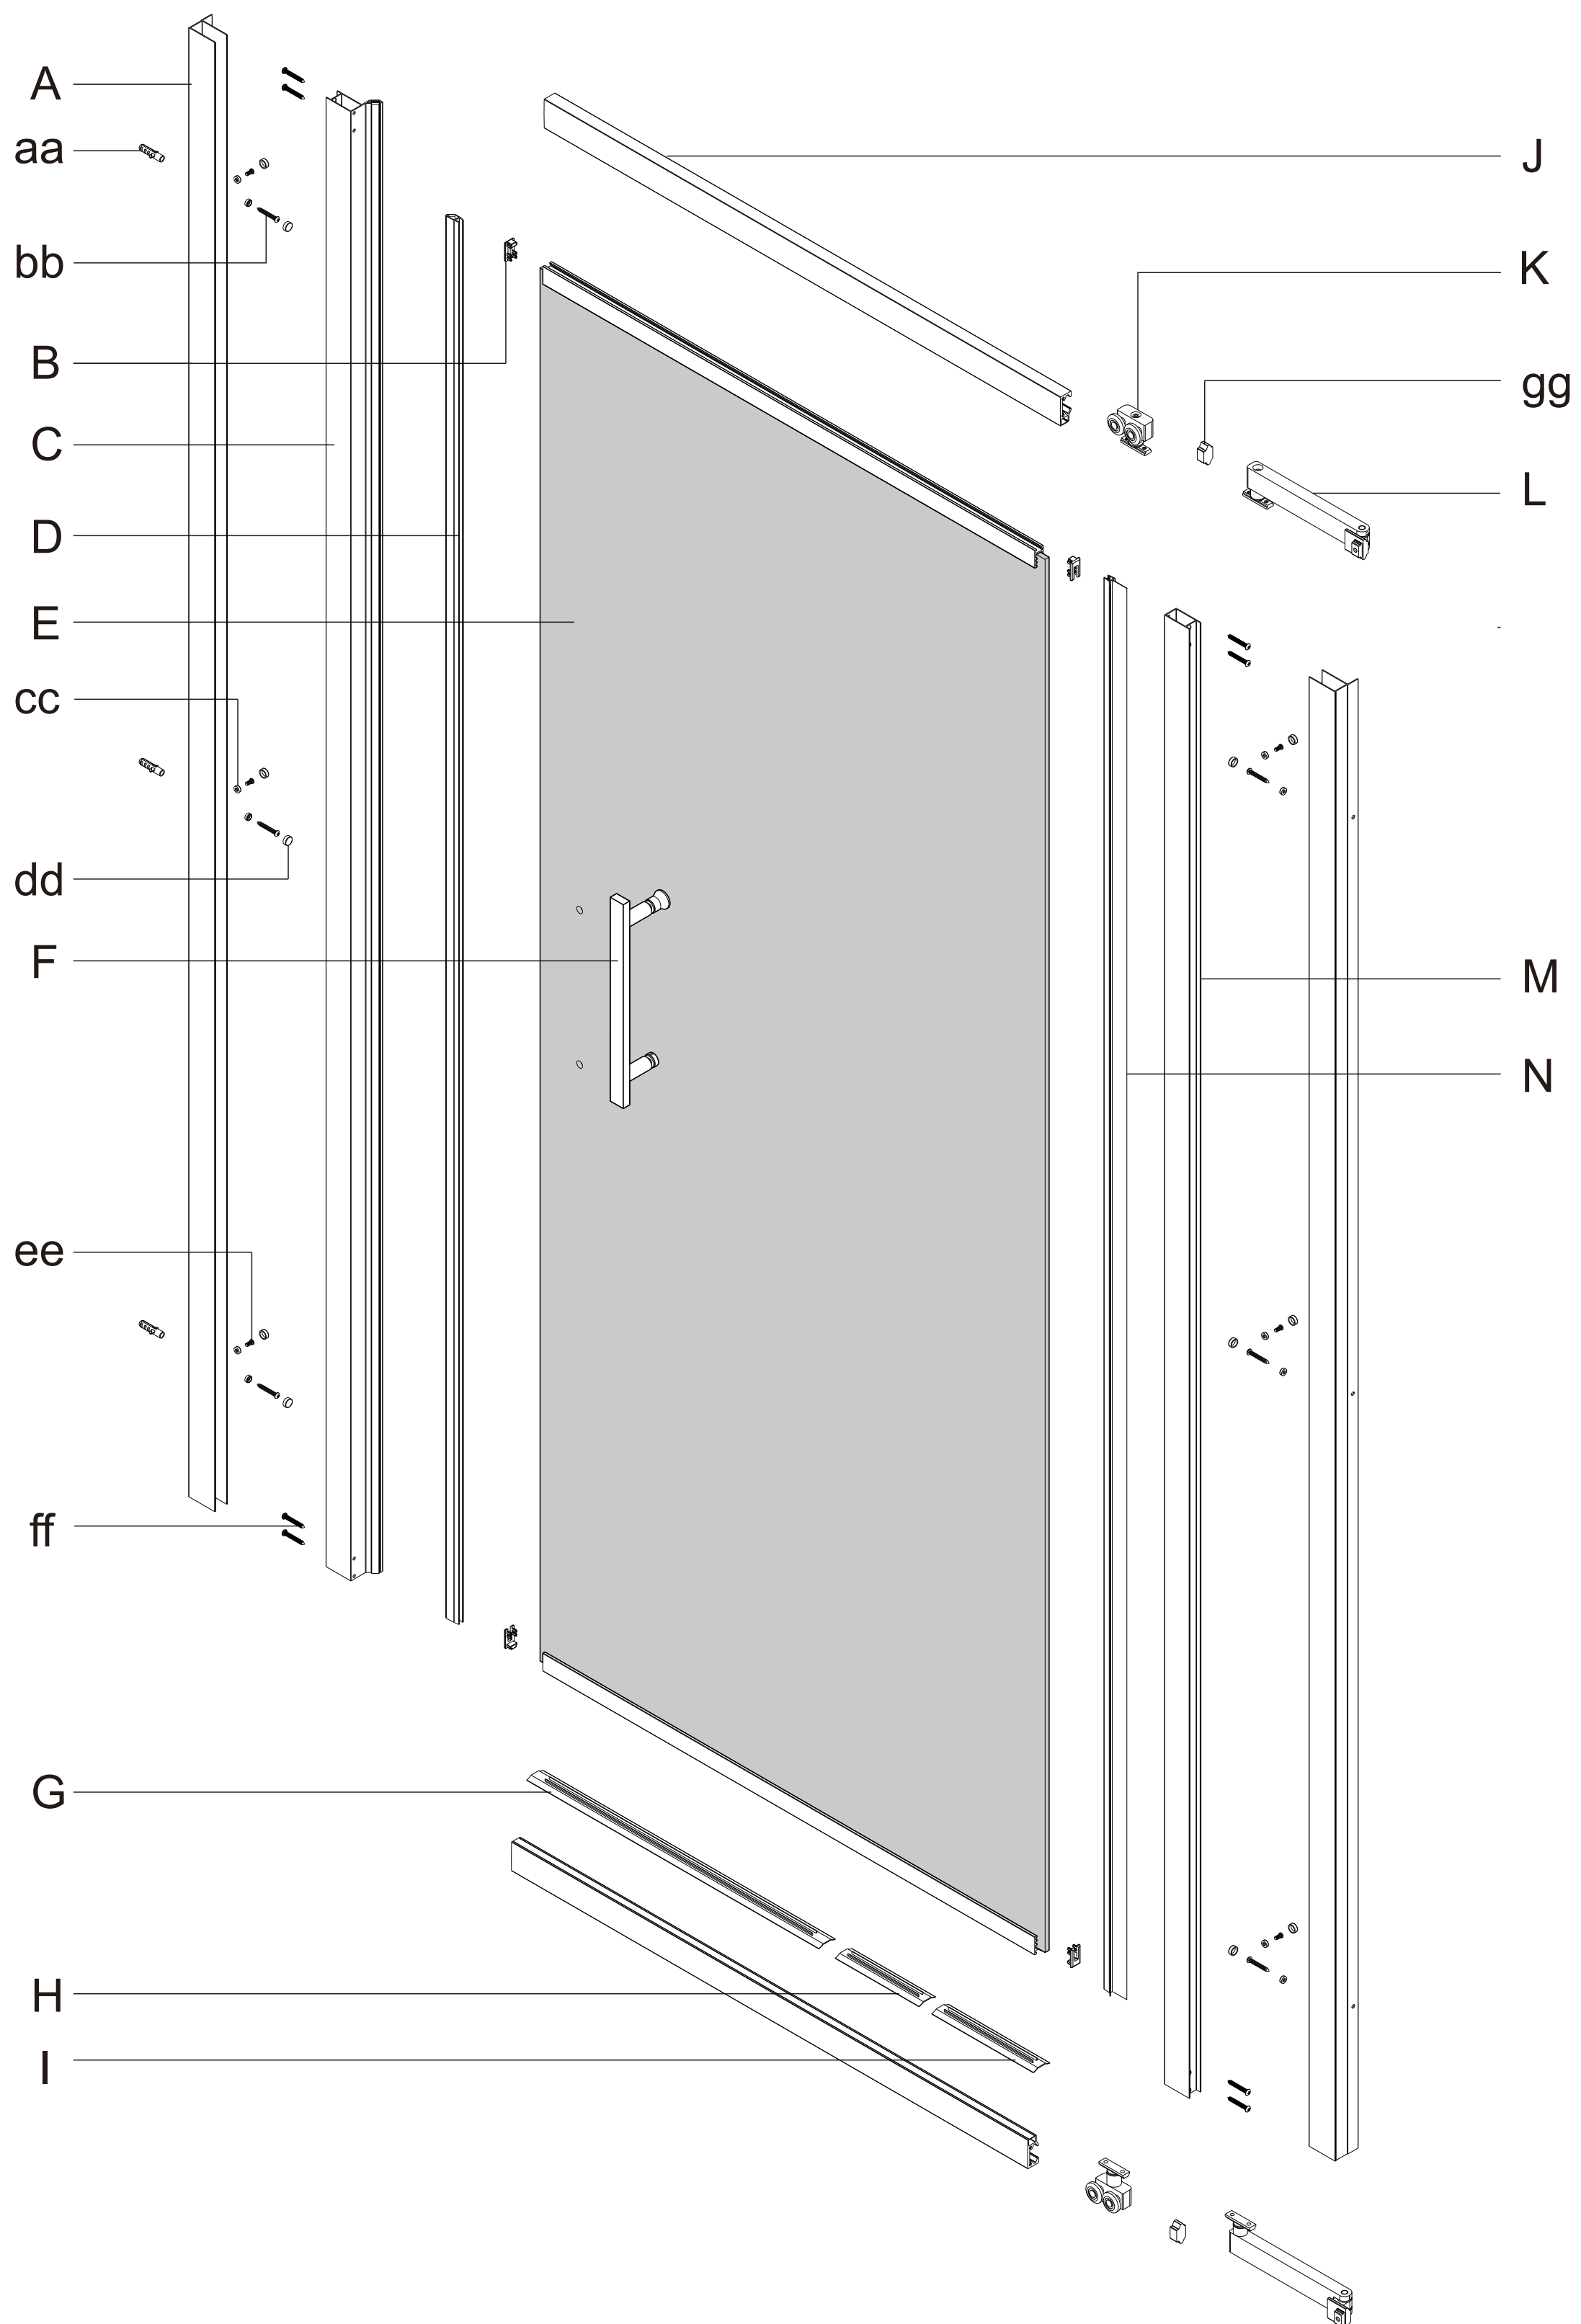

SHOWER DOOR

PACKAGE CONTENT















PART#	DESCRIPTION	QTY
A	Wall Jamb	2
B	Decorative Cover	4
C	Magnetic Vertical Material	1
D	Magnetic Strip	1
E	Glass Door	1
F	Handle	1
G	Bottom Anti-Water Strip	1

PART#	DESCRIPTION	QTY
H	Bottom Anti-Water Strip	1
I	Bottom Anti-Water Strip	1
J	Guide Rail	2
K	Roller	2
L	Rotating Shaft Component	2
M	Upright Profile	1
N	Anti-Water Strip	1

NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.

PACKAGE CONTENT

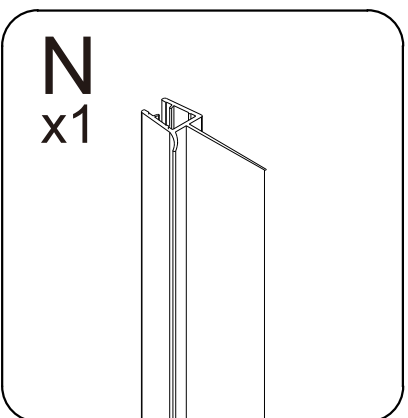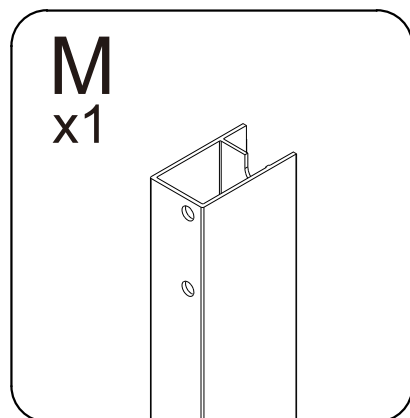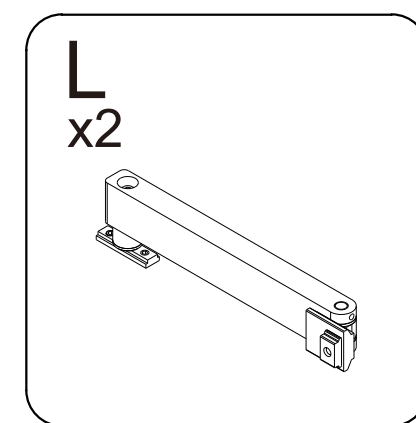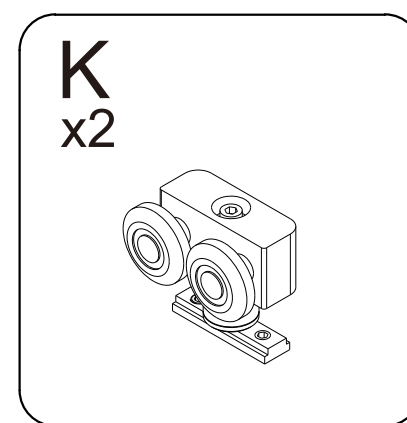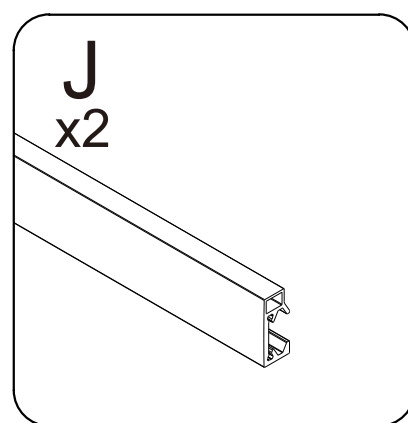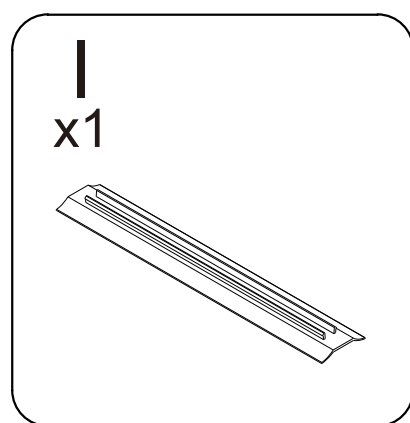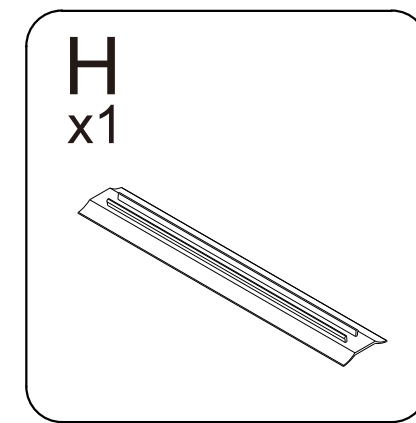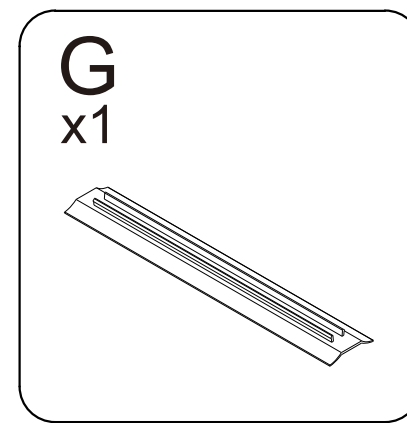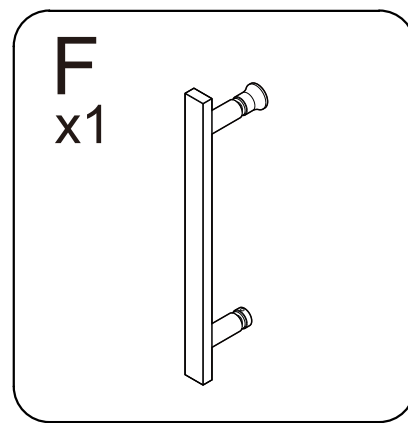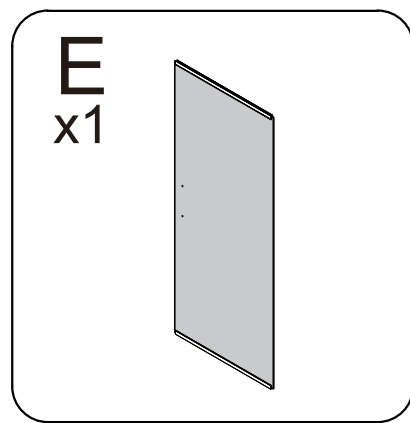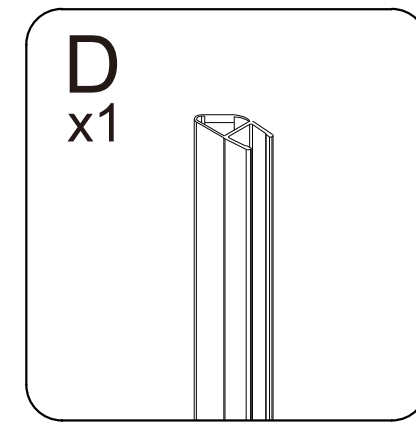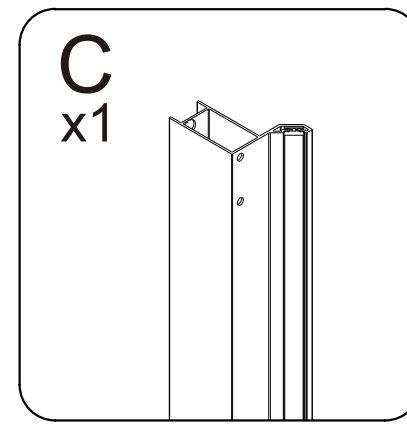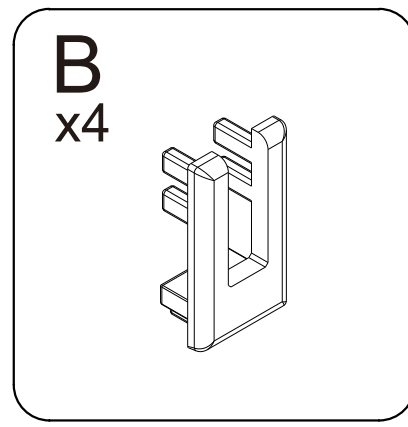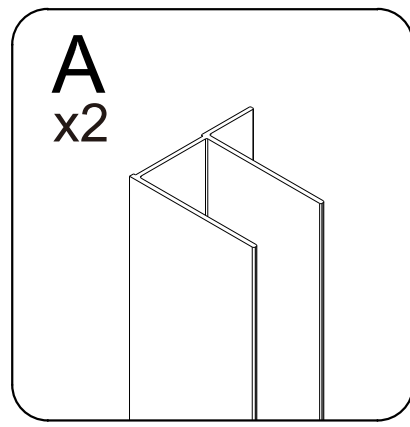


HARDWARE CONTENT




Additional spare parts are included.

aa

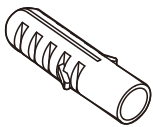


Wall anchor
Ø6x28mm
7 pcs

bb

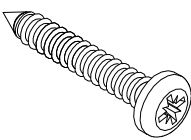


Screw
ST4X40mm
7 pcs

cc




Washer
12 pcs

dd

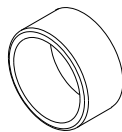


Screw cap
12 pcs

ee




Metric Screw
ST4X16mm
6 pcs

ff

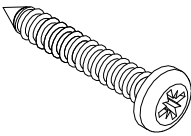

Metric Screw
ST3.5X35mm
8 pcs

gg




Bumper
rubber
2 pcs

NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.


TOOLS REQUIRED

Drill Bits

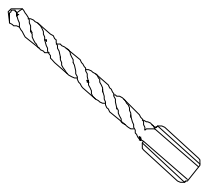


Ø1/8" & Ø1/4" (3&6mm) dia.
HSS


Phillips screw driver

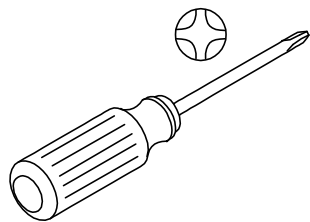


Electric hand drill

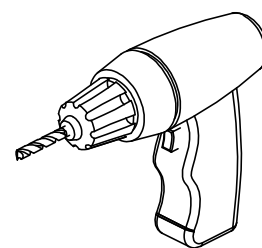


Level

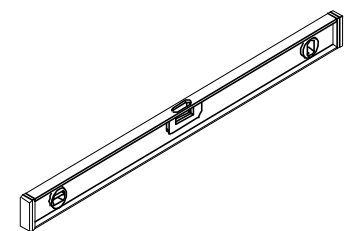


Caulking gun

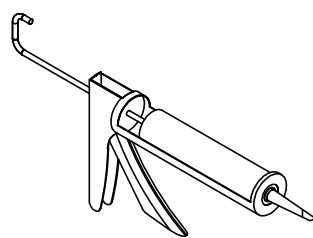


Measuring Tape

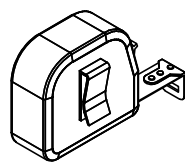


Soft Head Hammer

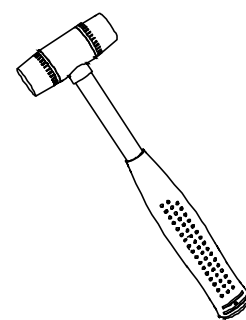


Marking Pencil

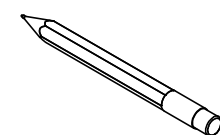

Utility Knife

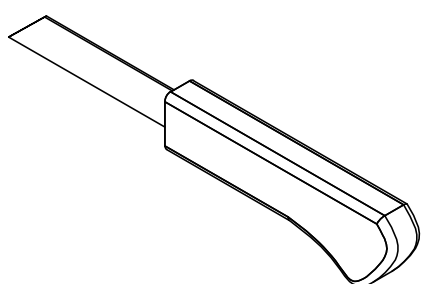


Sealant

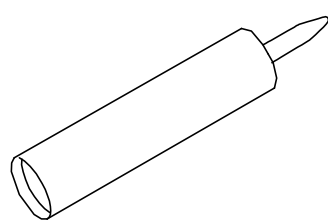

MASONRY DRILL BIT FOR TILE Ø6mm




Safety Glasses

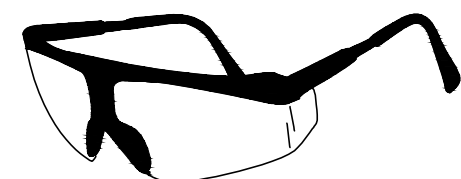


Gloves




Carpenter's Squarer

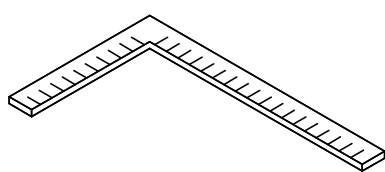


Masking or painter's tape

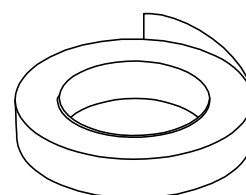


Hack Saw

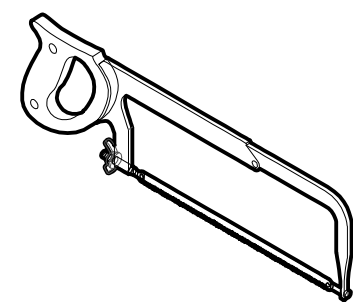

Metal File

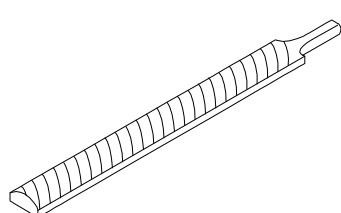

Glass suction Handle

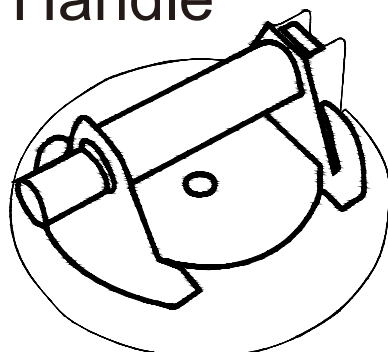

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower door . There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation,protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements.Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installaton.

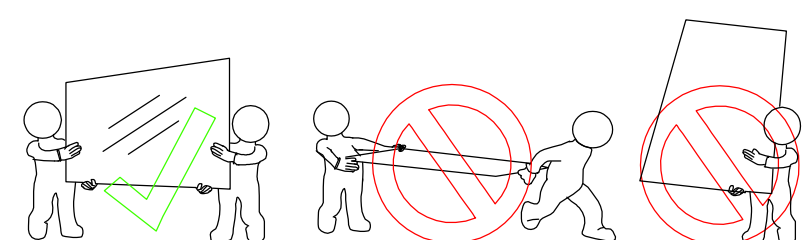



1

Measure the finished opening width.

NOTE

1. Measure the finished opening width at the bottom and at the model height. Use these dimensions as "W1" (top) and "W2" (bottom) in step #2.
2. Also check the threshold for level and the walls for plumb.

1/4" (6mm) Maximum out of plumb adjustment from top to bottom

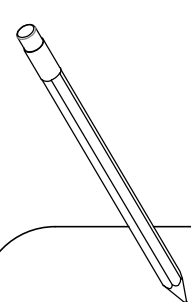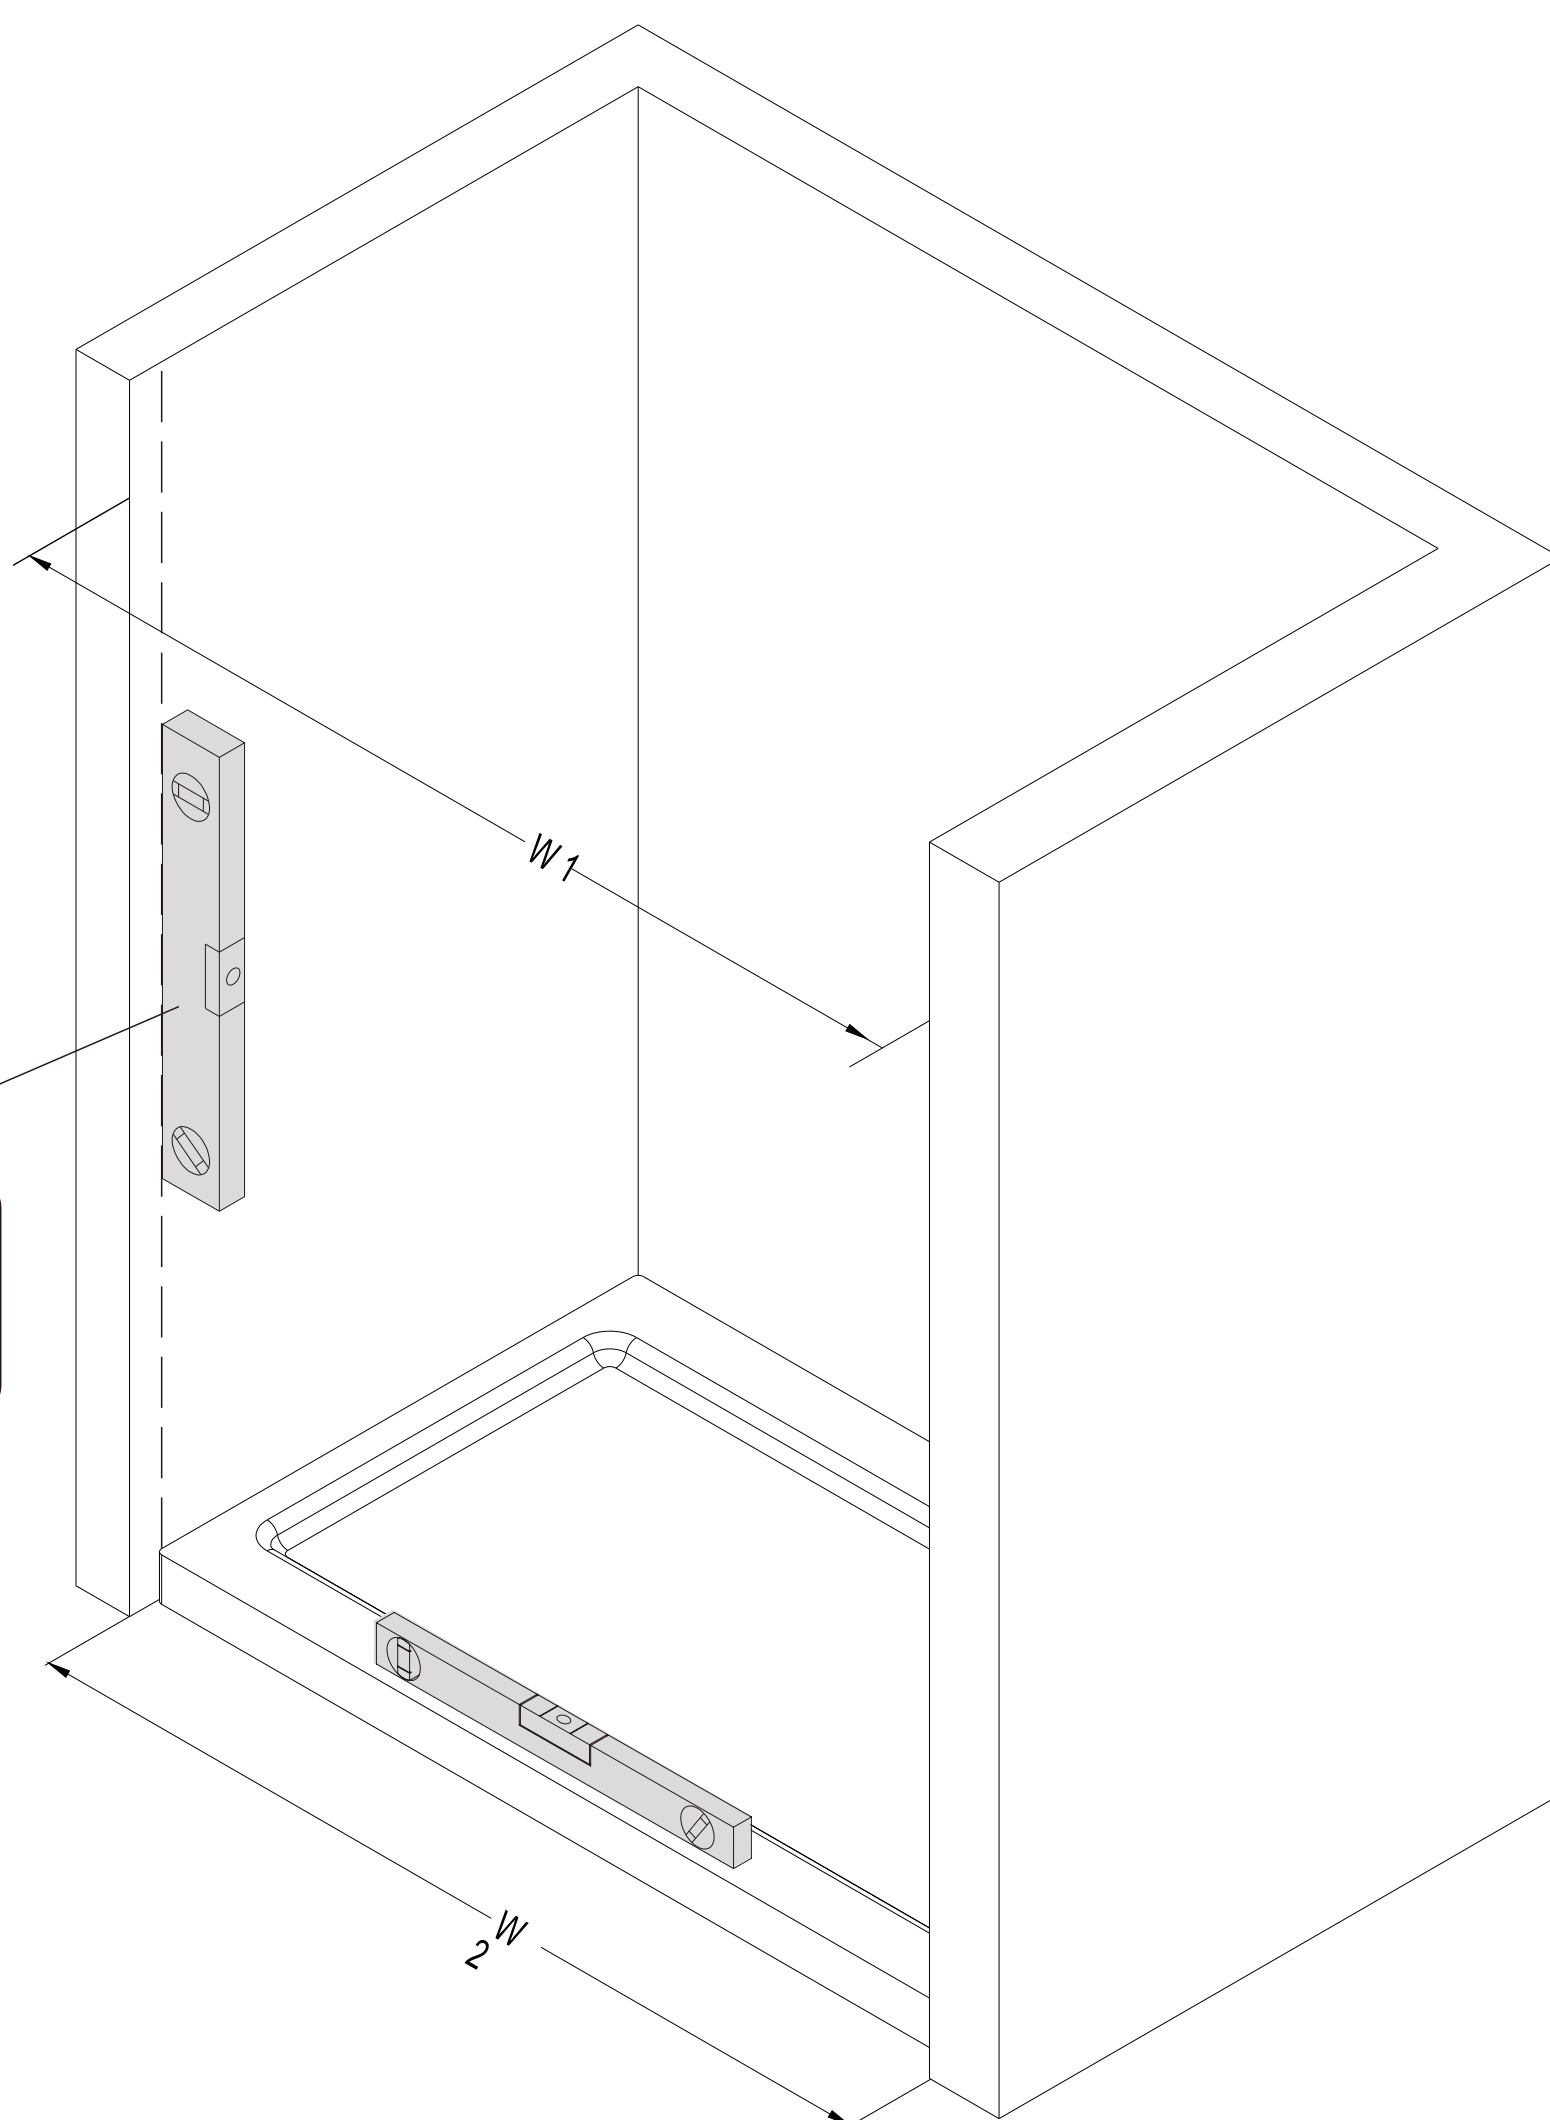

Finished opening top (W1)

Finished opening bottom (W2)

2

Determine your step in from the edge of tray and plumb your **Wall Jamb(A)**.

NOTE

1. Determine your starting point from the edge of tray (3/8" (10mm) is recommended) and mark the position as Fig.a .
2. Plumb your **Wall Jamb(A)** on each side and then mark screw holes position as Fig.b .

Fig.a




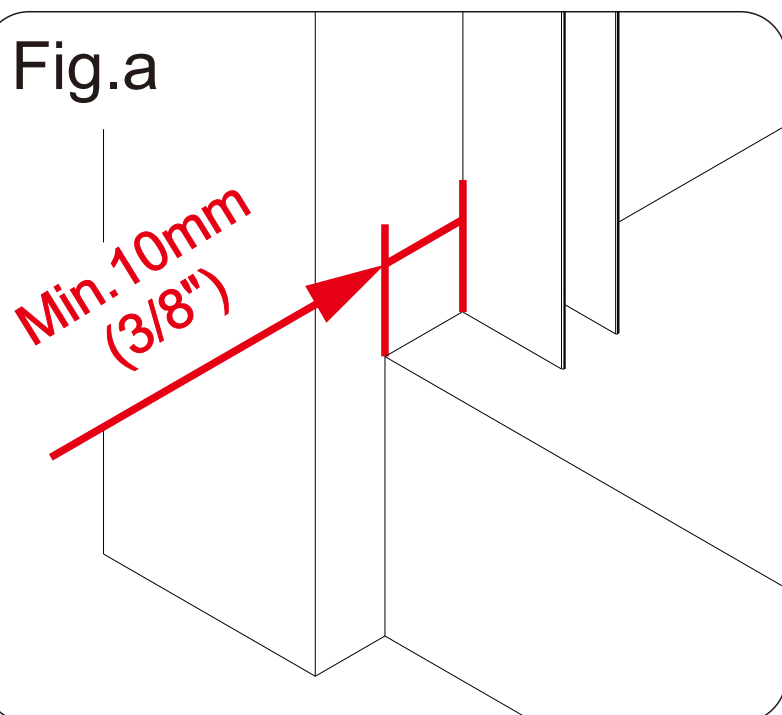


Fig.b

Inside

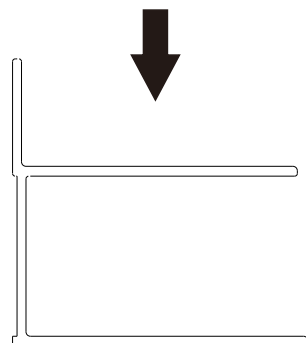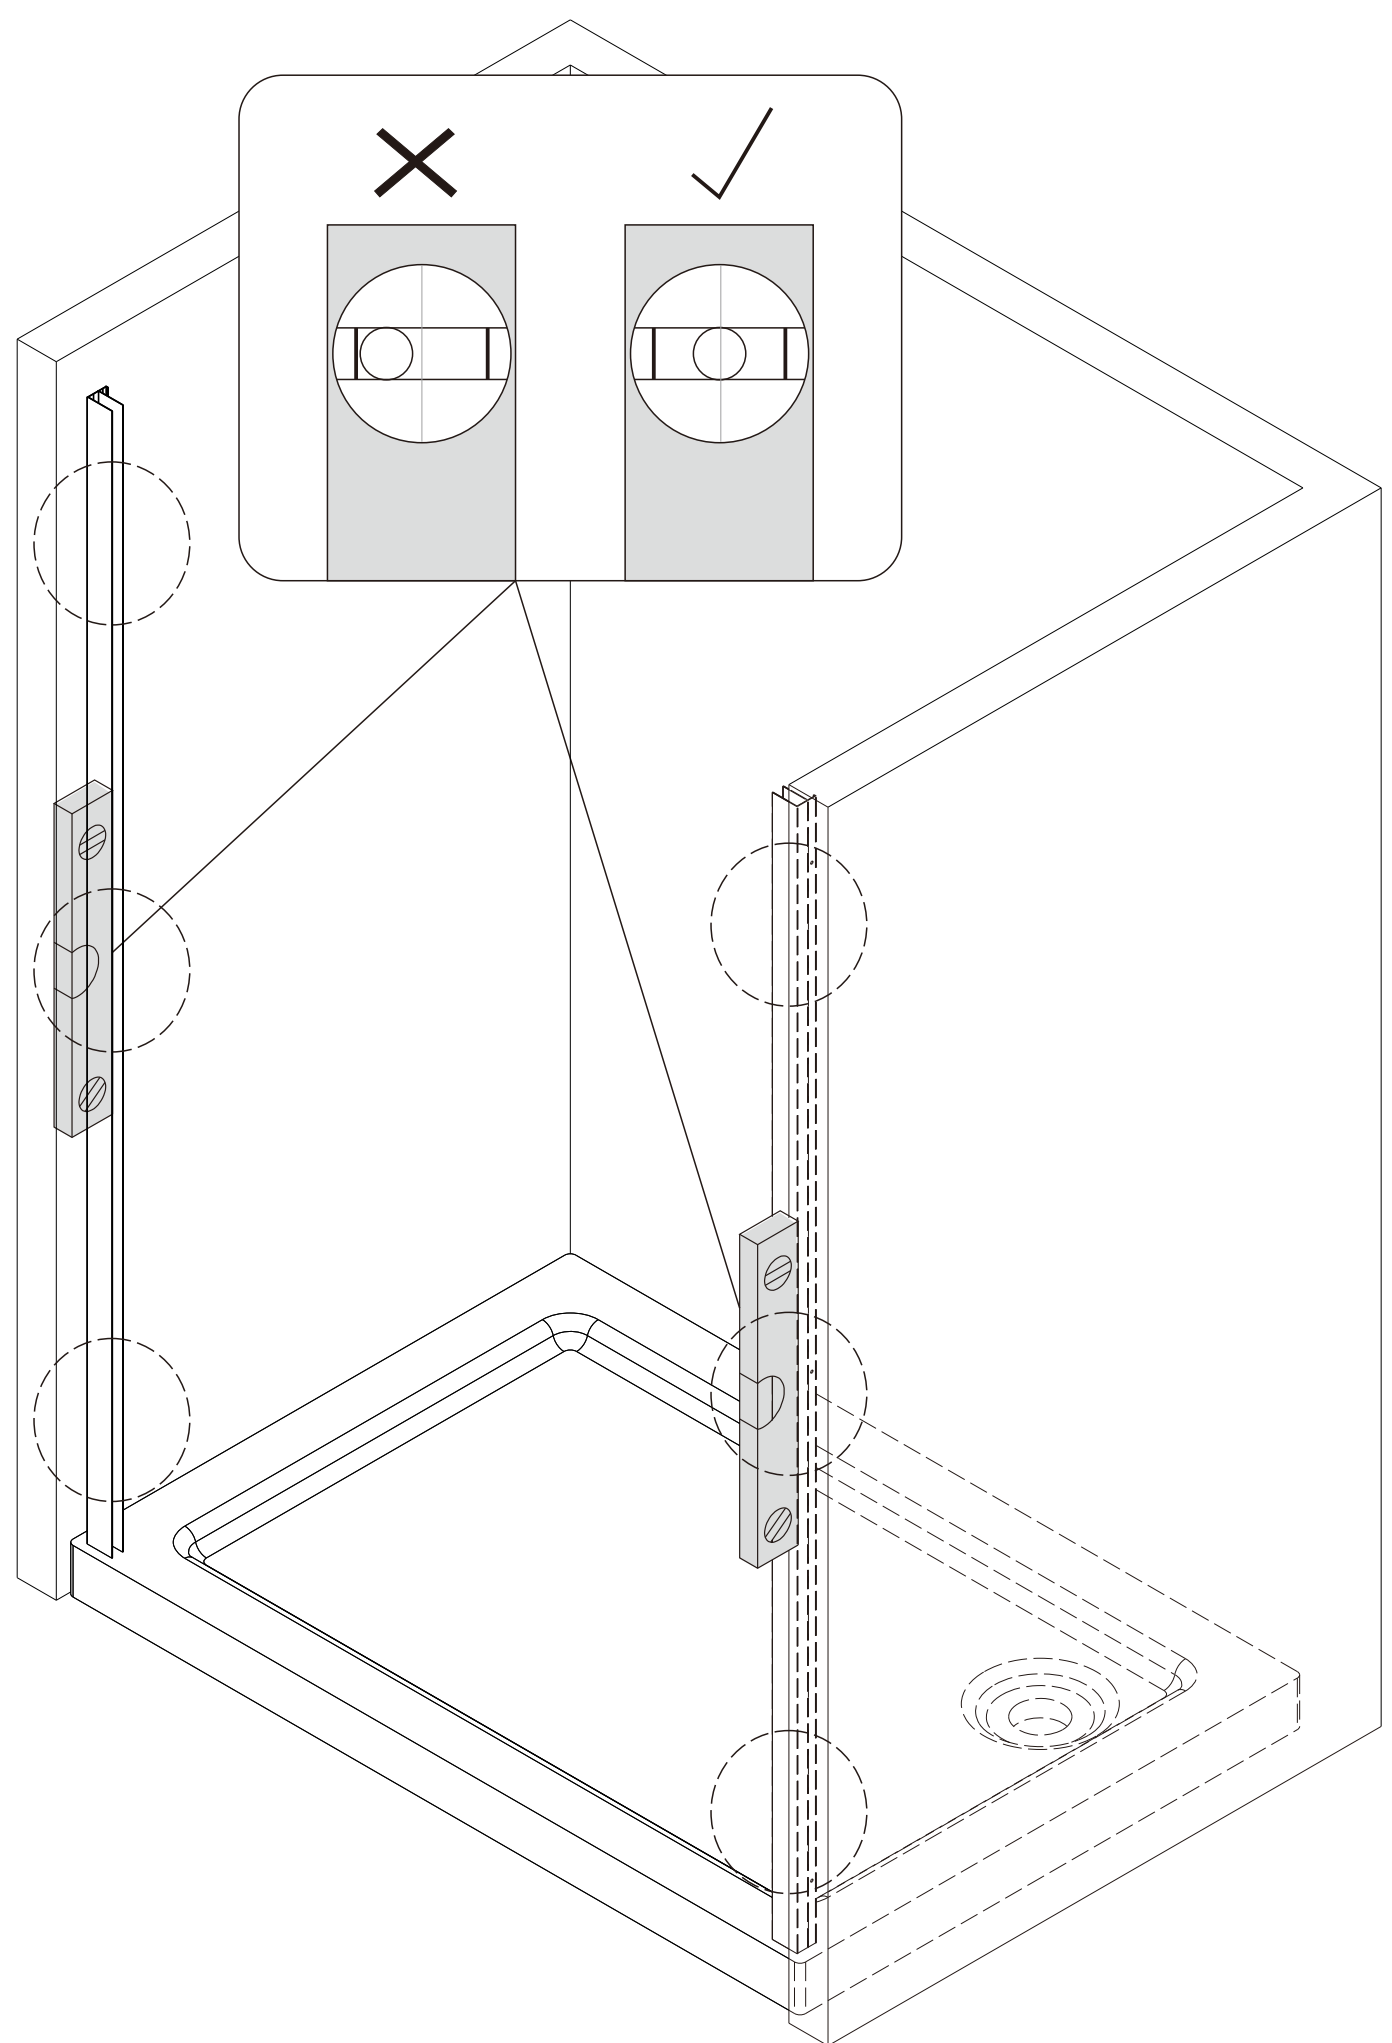

A

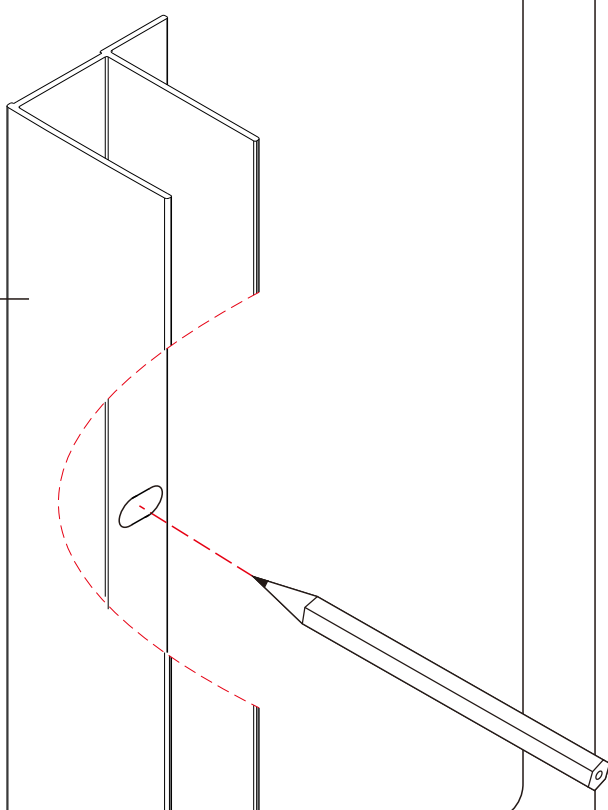

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

3 Drill screw holes for **Wall Jamb(A)** and insert in the **Wall Anchor(aa)**.

NOTE

1. Drill holes with $\Phi 6\text{mm}$ (1/4") drill bit as Fig.a .
2. Insert **Wall Anchors(aa)** as Fig.b .

Fig.a (1/4")
 $\Phi 6\text{mm}$



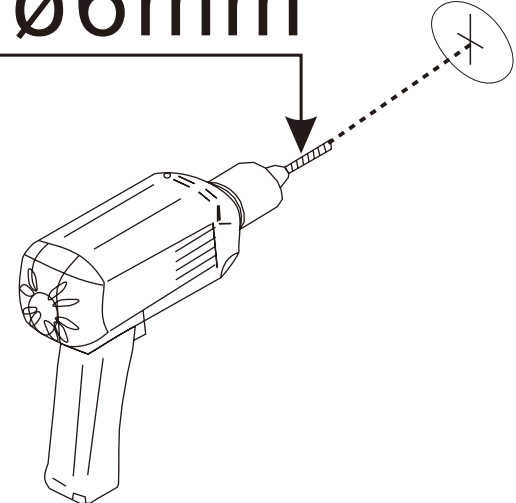


Fig.b

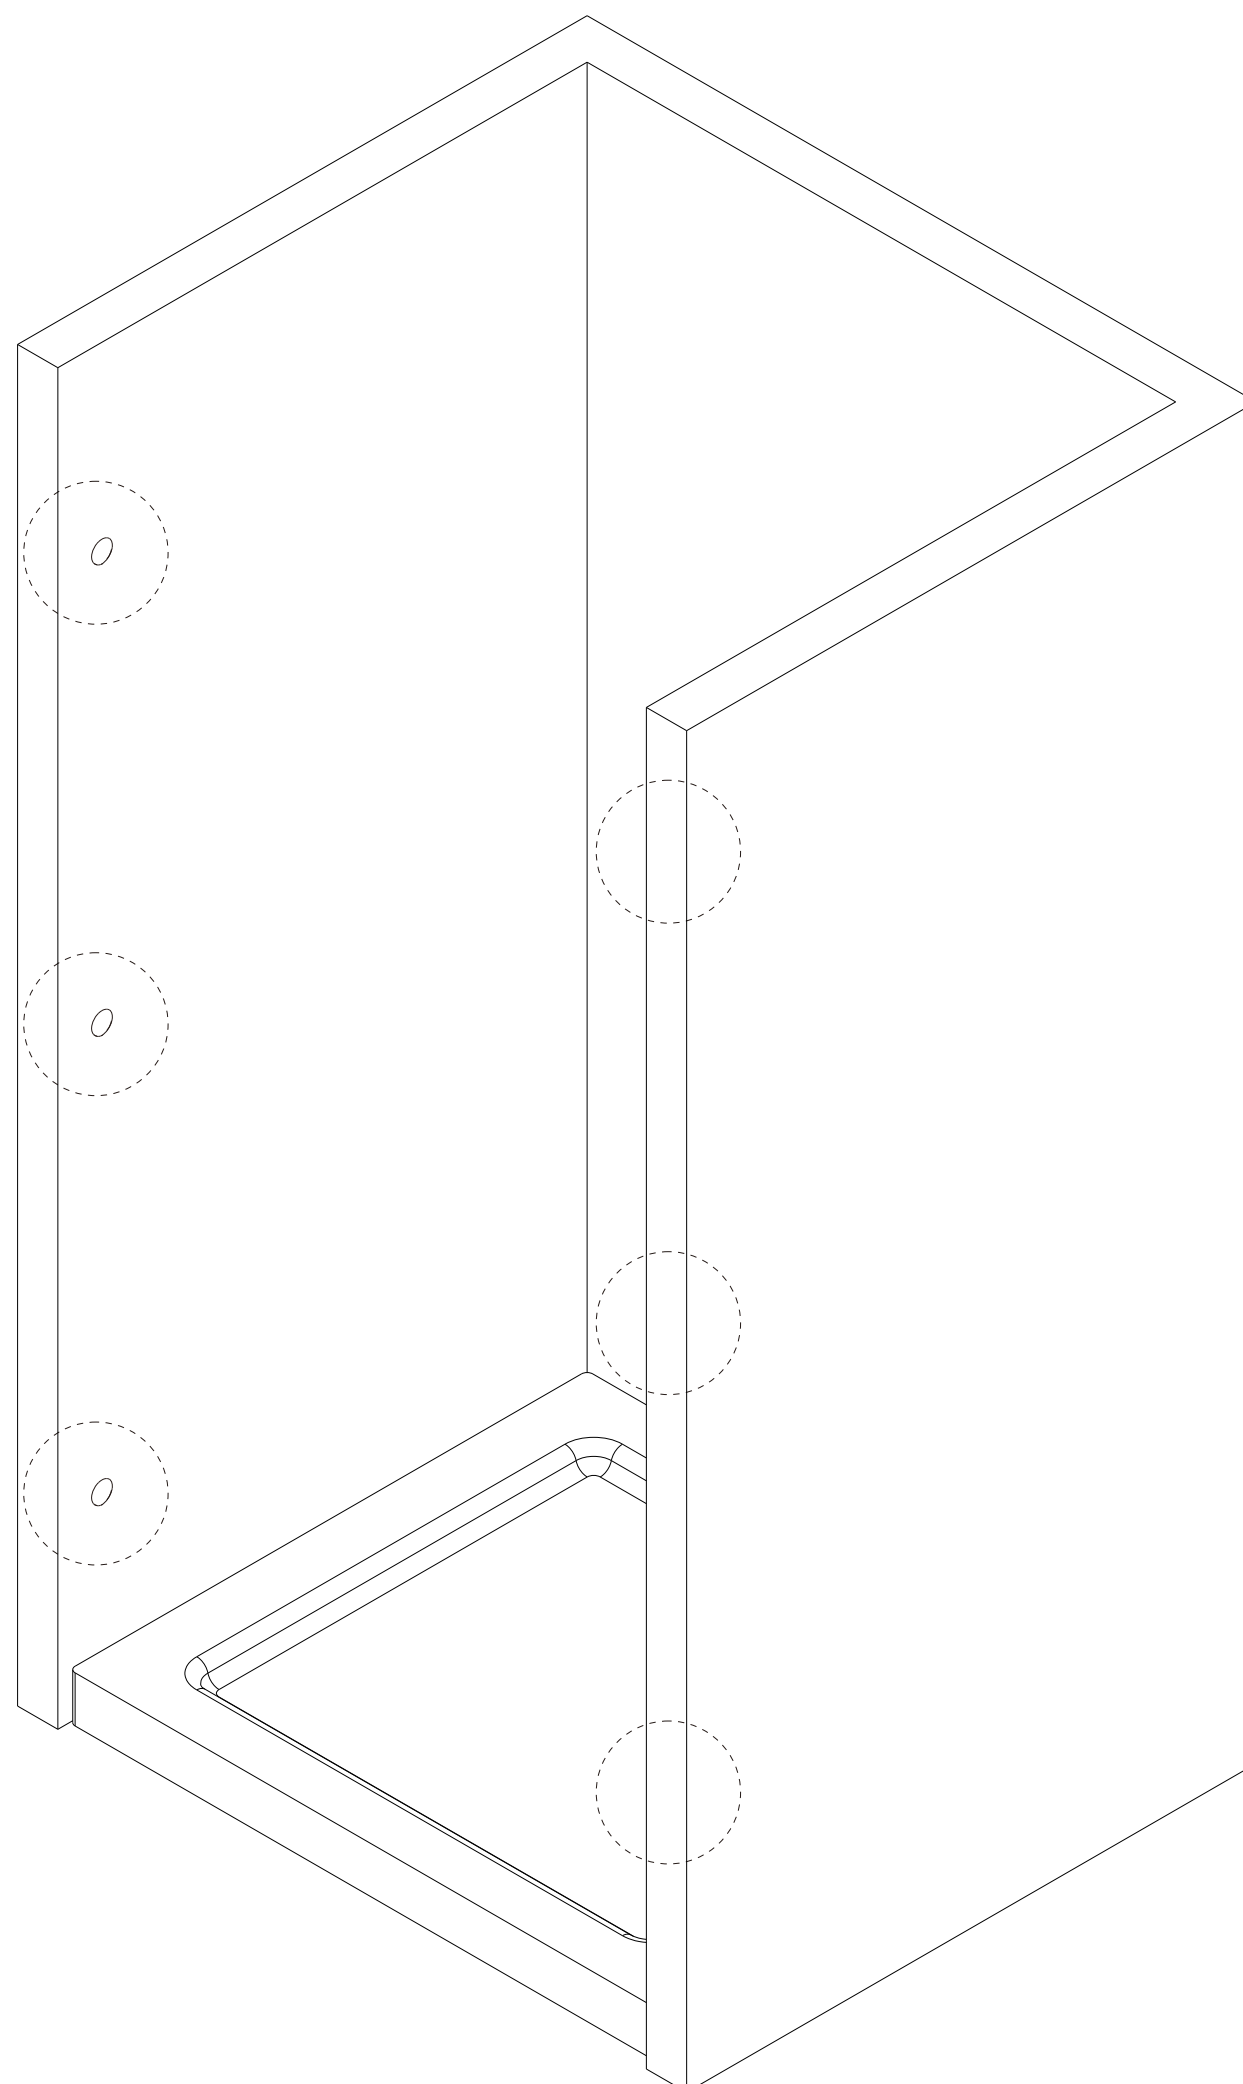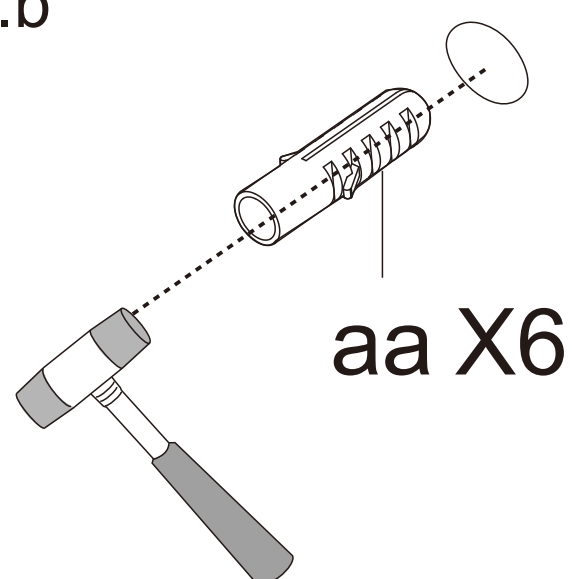

NOTE

- If a Stud is present behind the wall:
drill $\phi 1/8"$ (3mm) pilot holes into the stud and use the ST4.0x30mm **Screws(bb)**
OR
- If NO Stud is present behind the wall:
drill $\phi 1/4"$ (6mm) holes and insert the **Wall Anchors(aa)** and use the ST4.0x30mm **Screws(bb)**.

4




Install the **Wall Jamb(A)**.

NOTE

1.Use **Screws (bb)** and **Washers (cc)** to secure the **Wall Jamb (A)** as Fig.a .

2.Install **Screw caps(dd)** as Fig.b.

NOTE:First install the **Wall Jamb(A)** on the side next to the **Glass Door(G)**, and please confirm the opening direction of the **Glass Door(G)** before installing the **Wall Jamb(A)**.

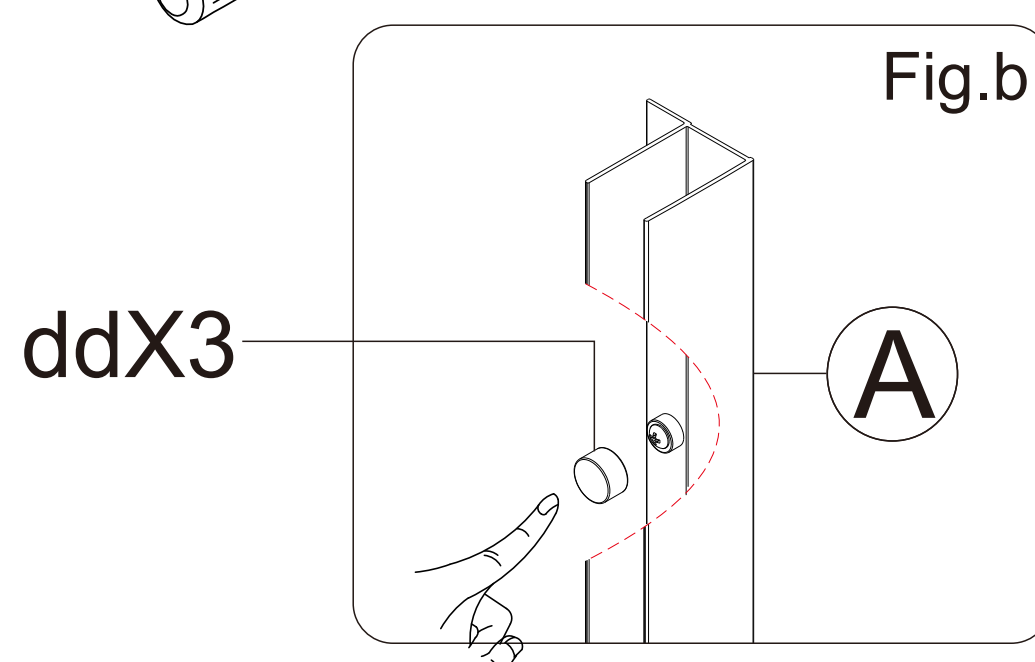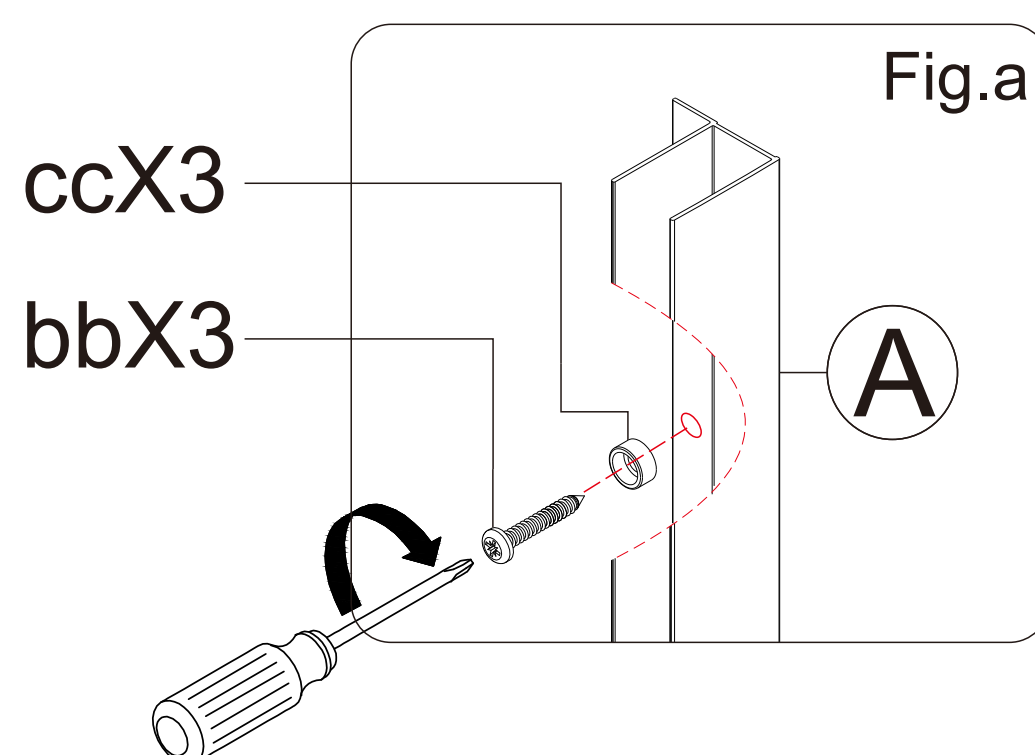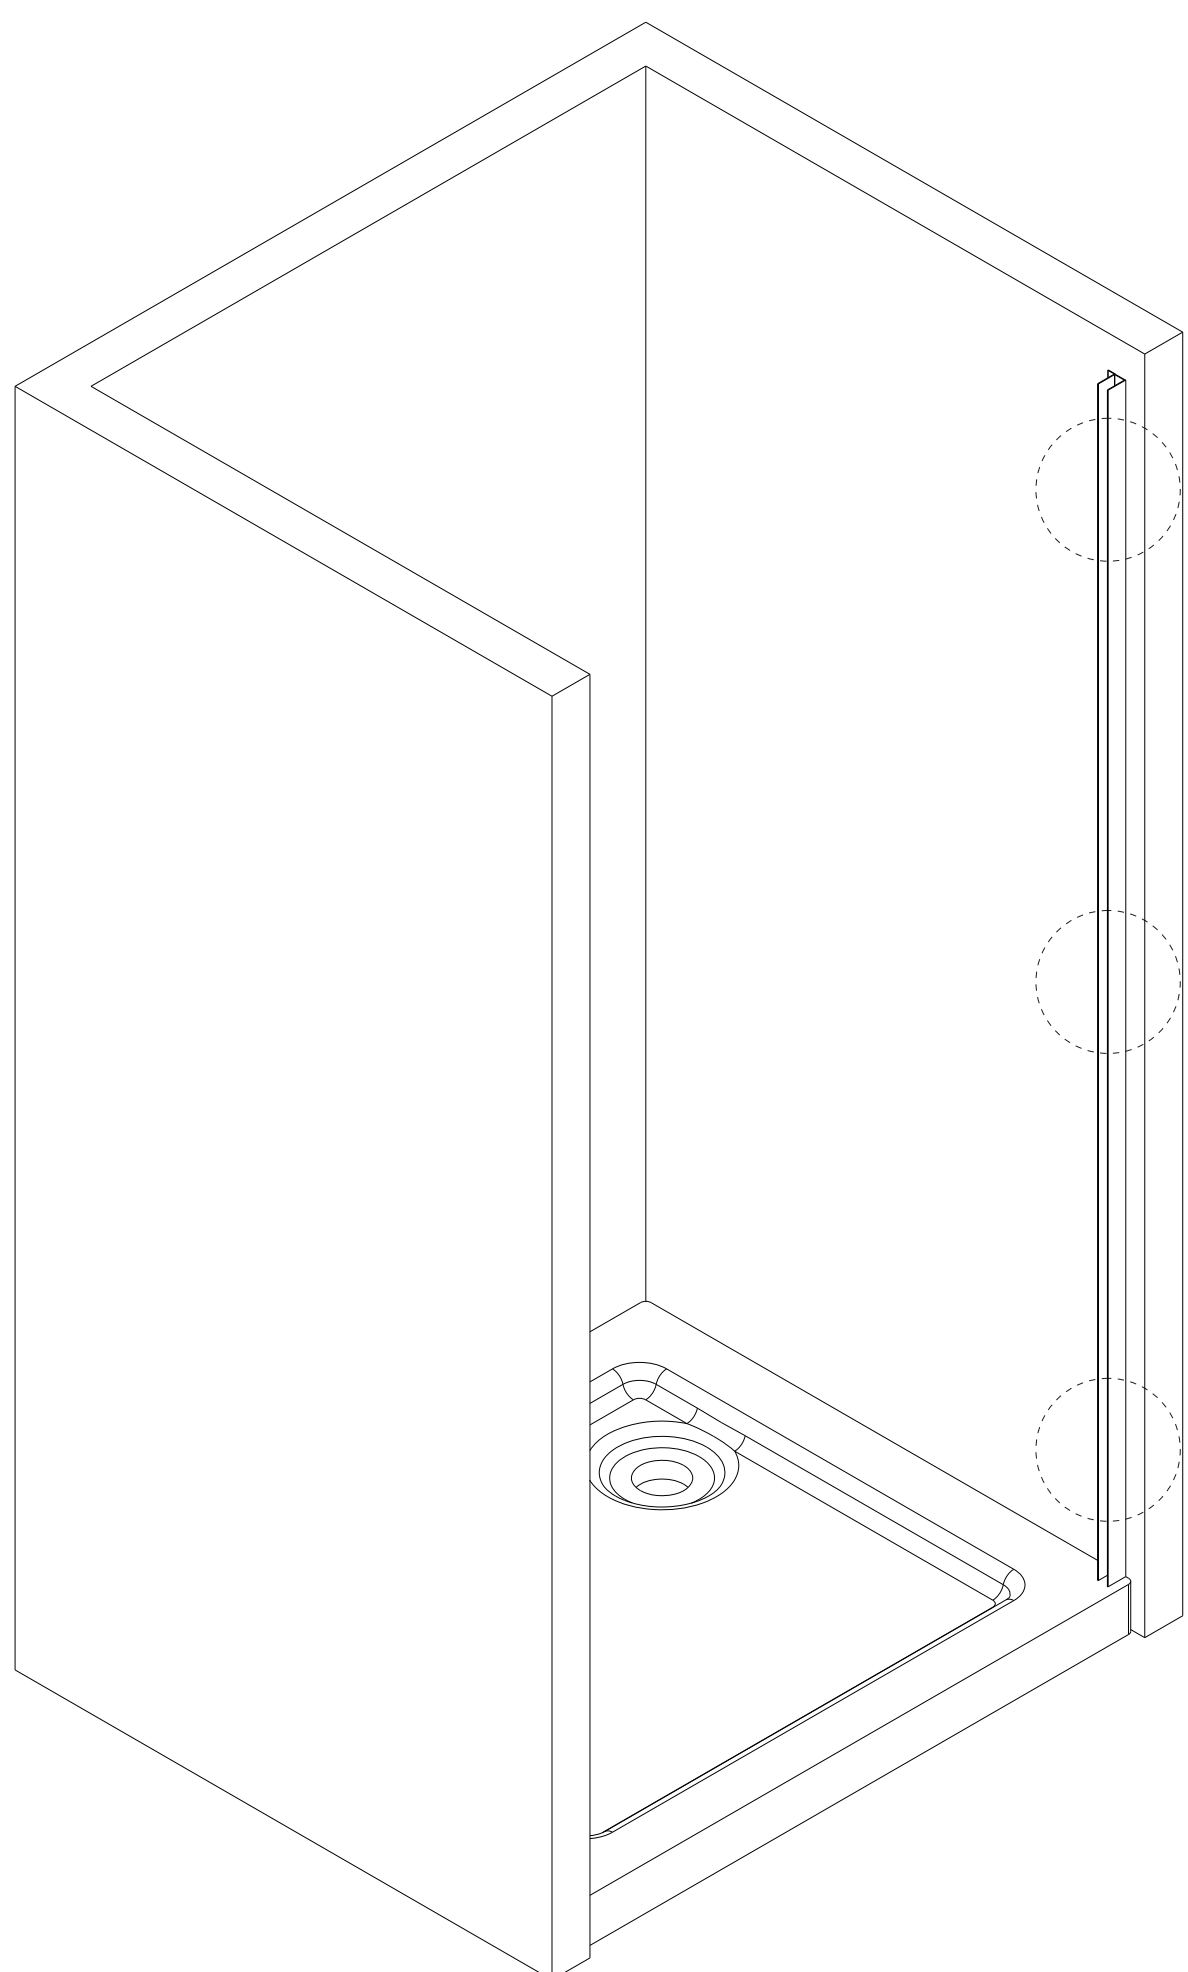


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

5 Install **Roller(K)**

NOTE

1. Install the **Roller(K)** according to the drawing dimensions, and secure them with a hex wrench.

Fig.a

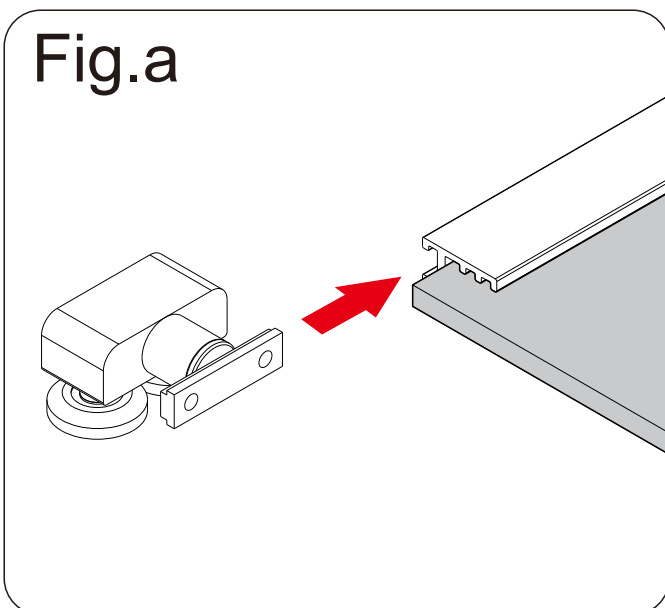

The center of the **Roller(N)**

Fig.b

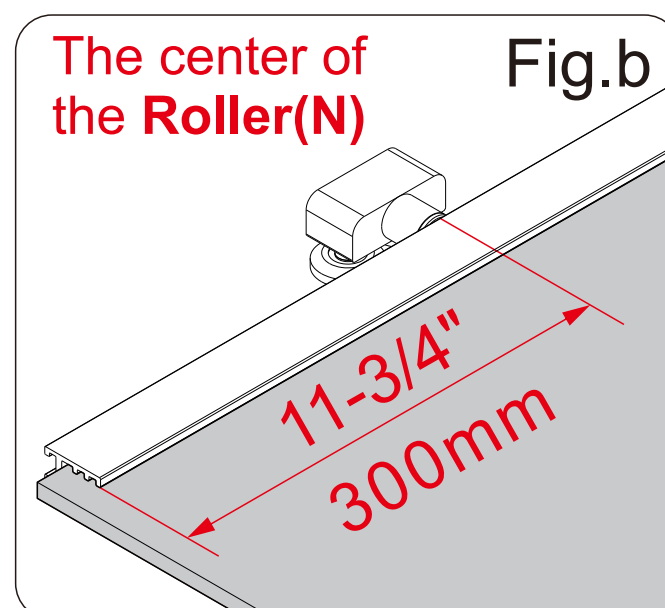


Fig.c

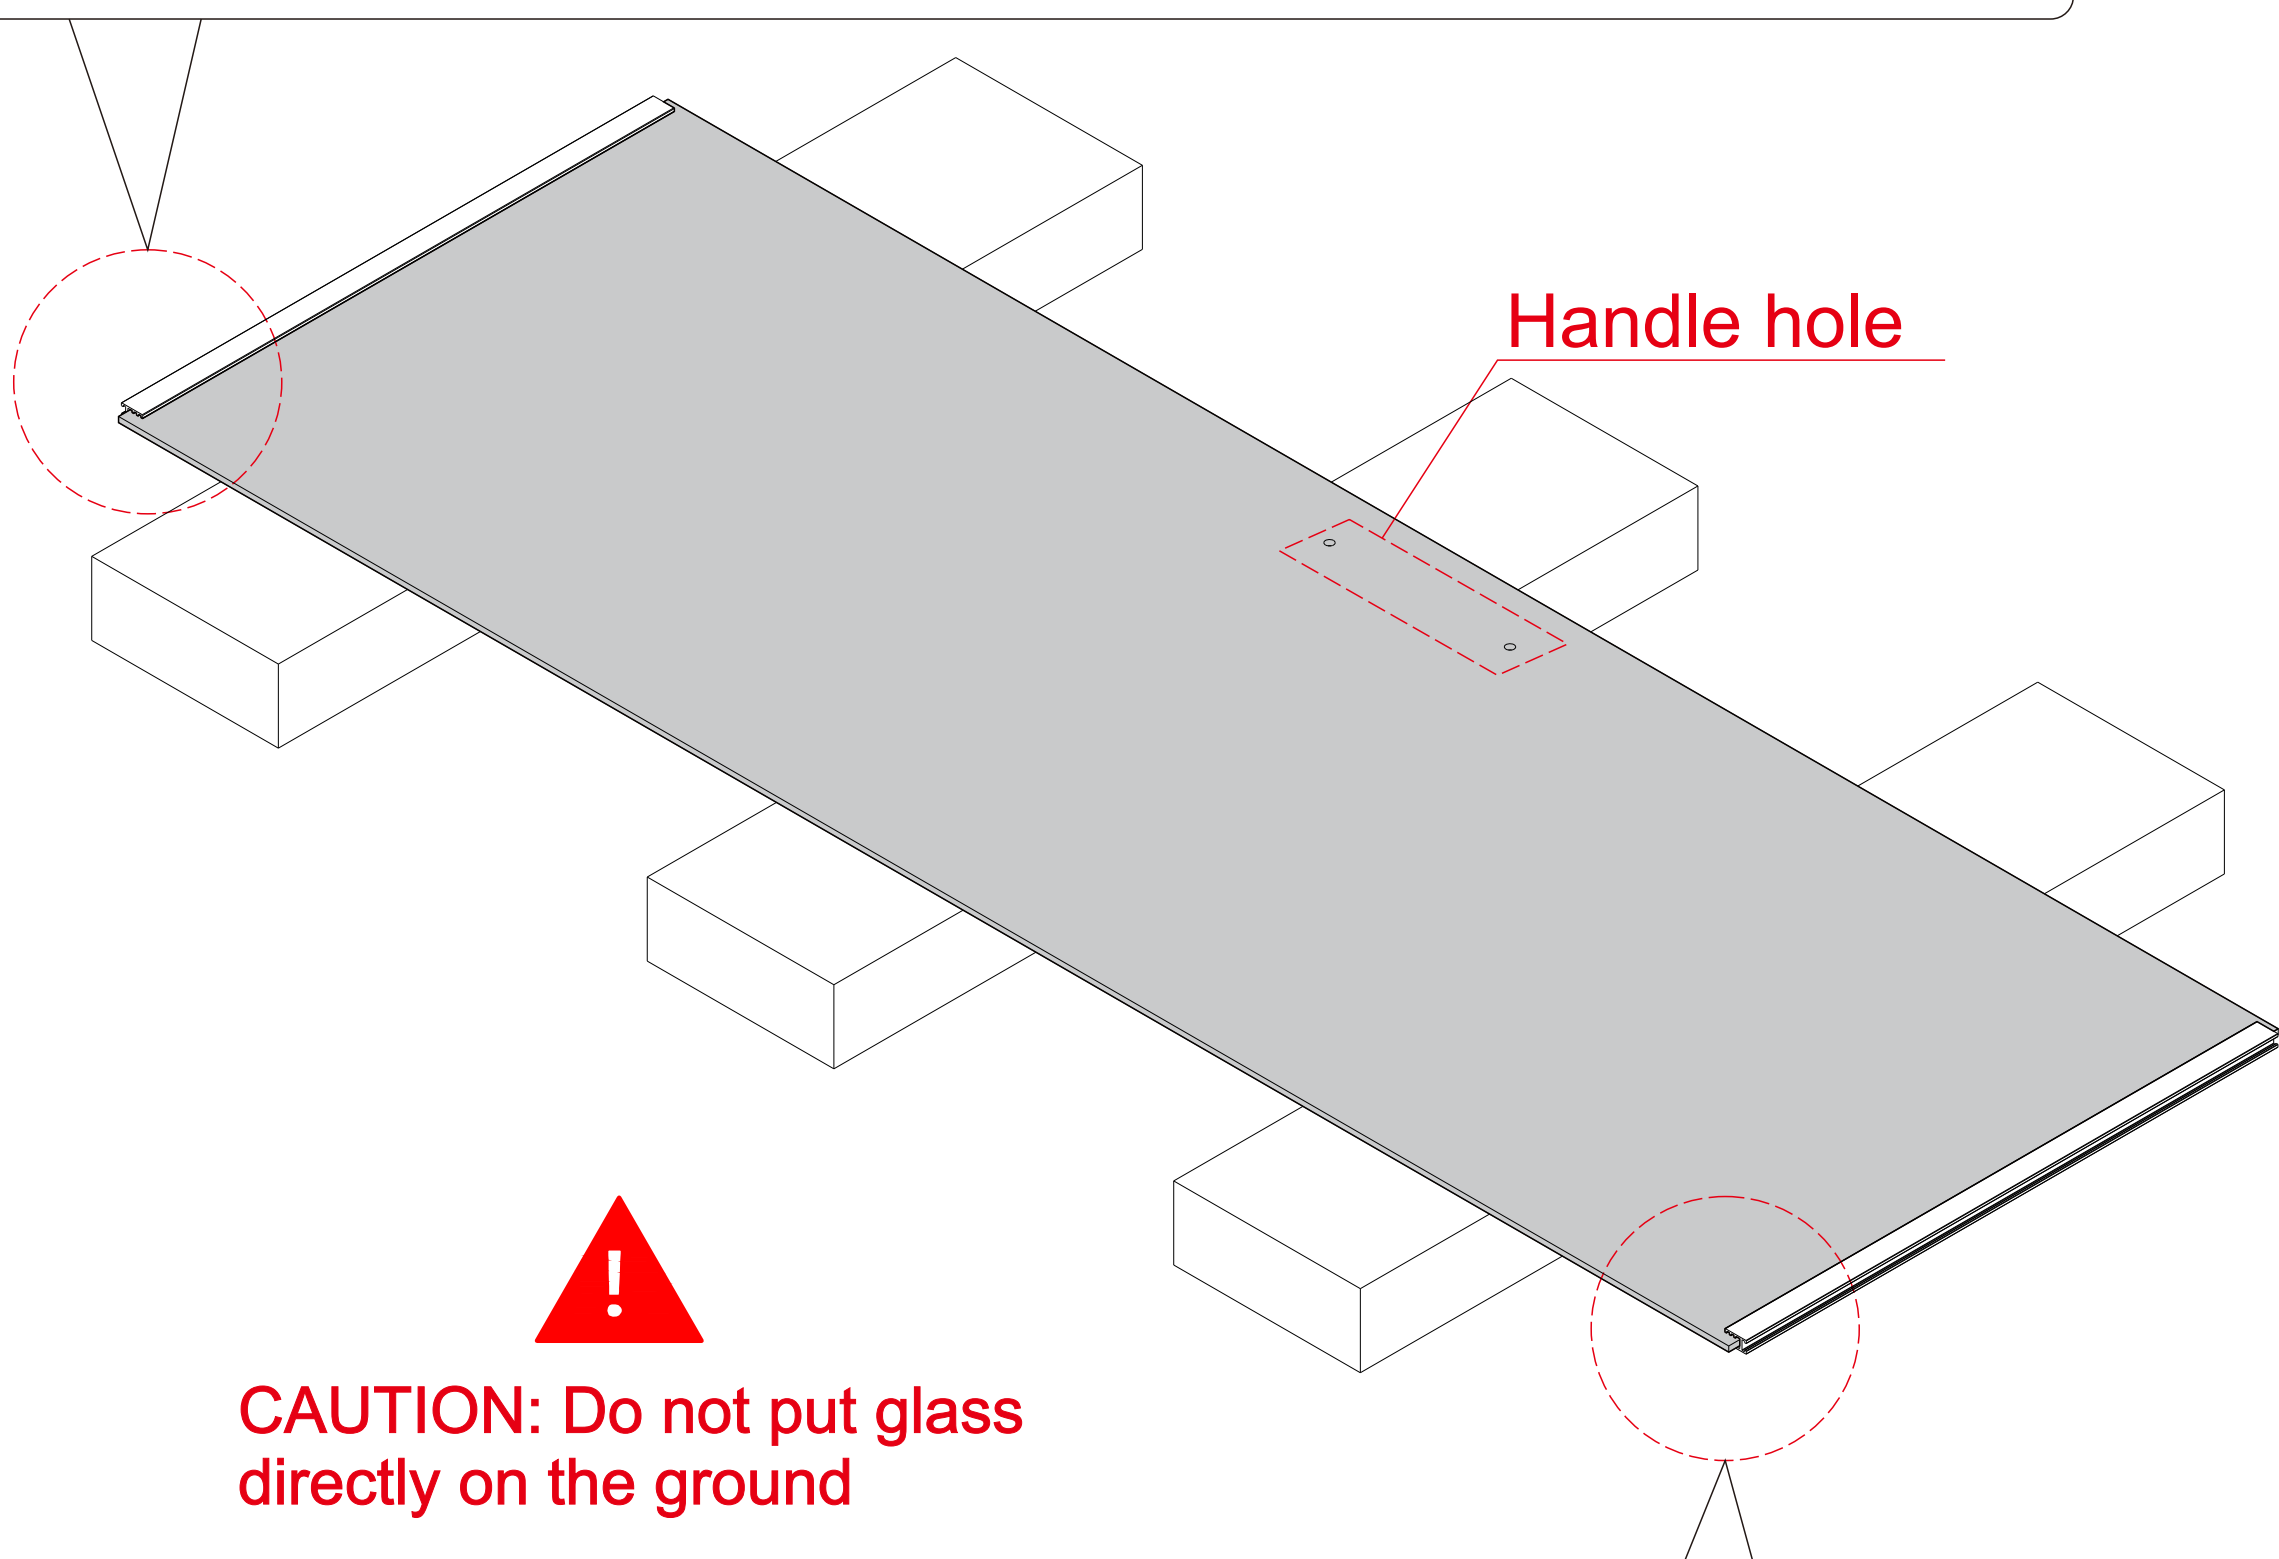
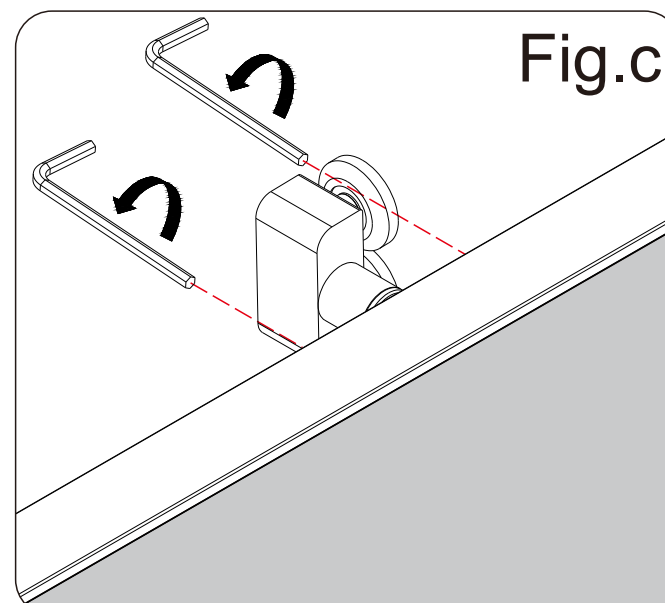


Fig.d

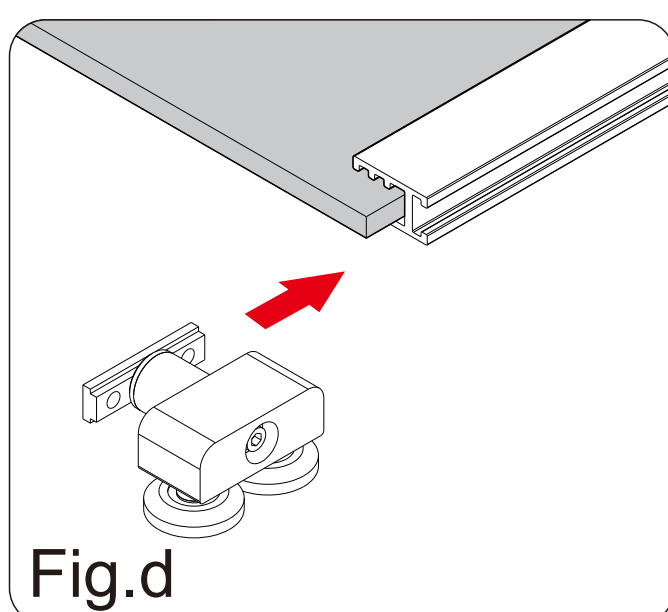


Fig.e


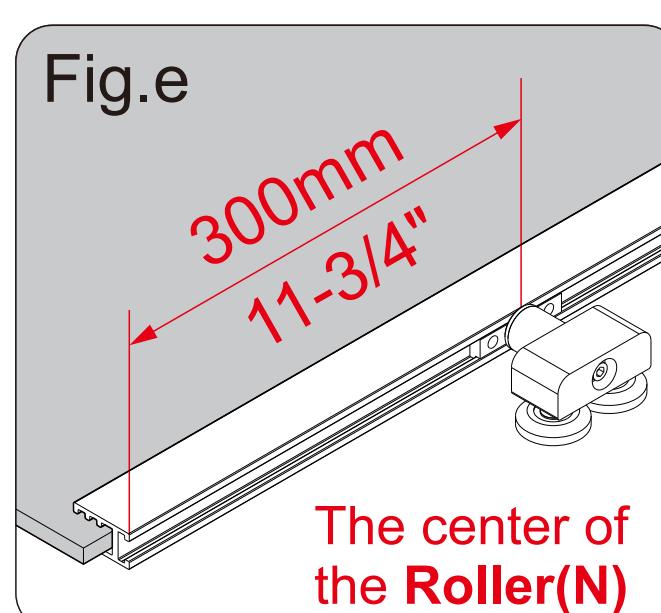


Fig.f

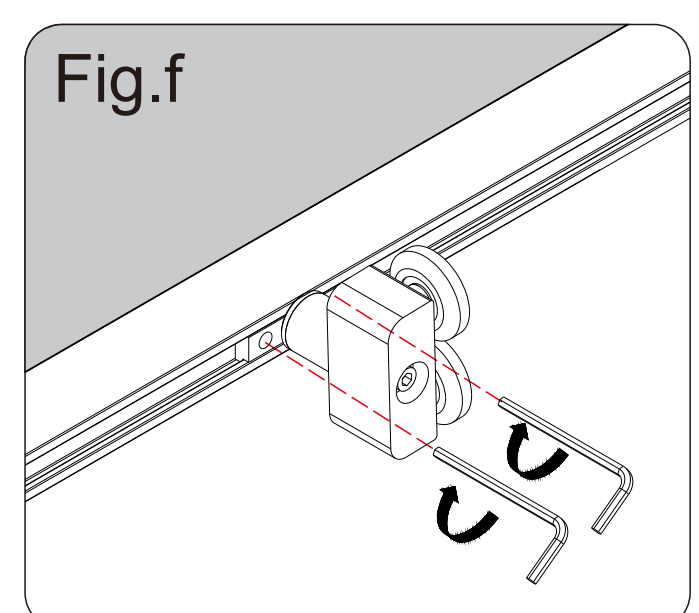

6

Install Rotating Shaft Component(L)

NOTE

1. Install the **Rotating Shaft Component(L)** according to the drawing dimensions, and secure them with a hex wrench.

Fig.a

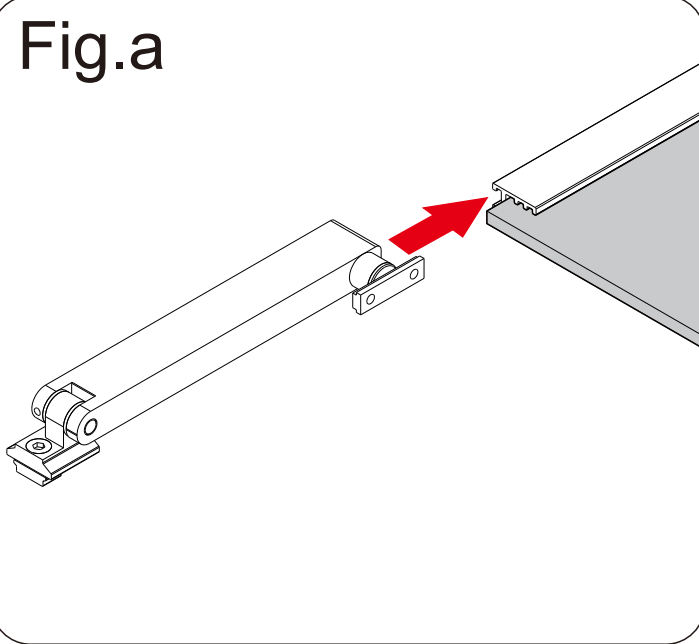


Fig.b

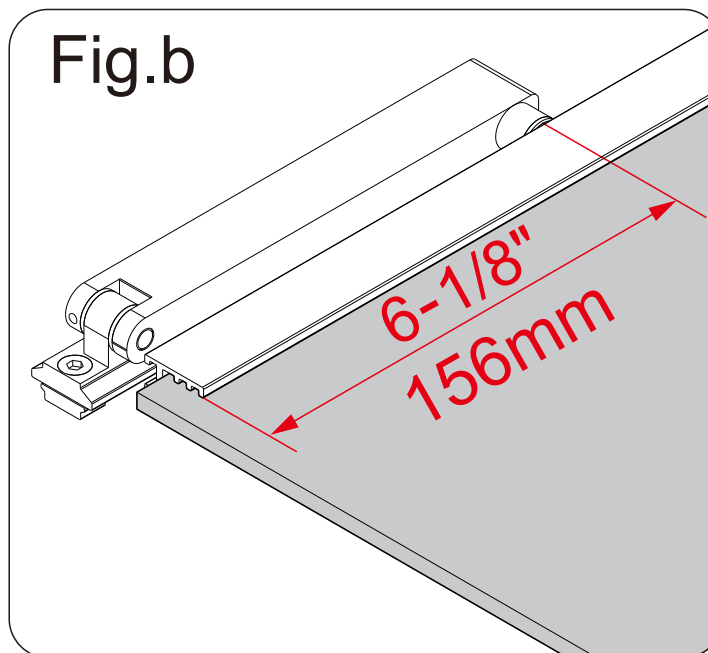


Fig.c

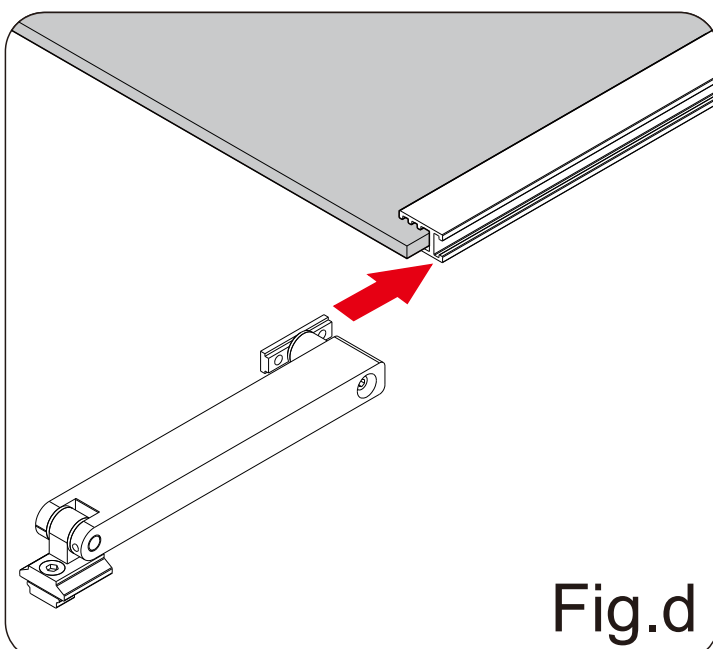
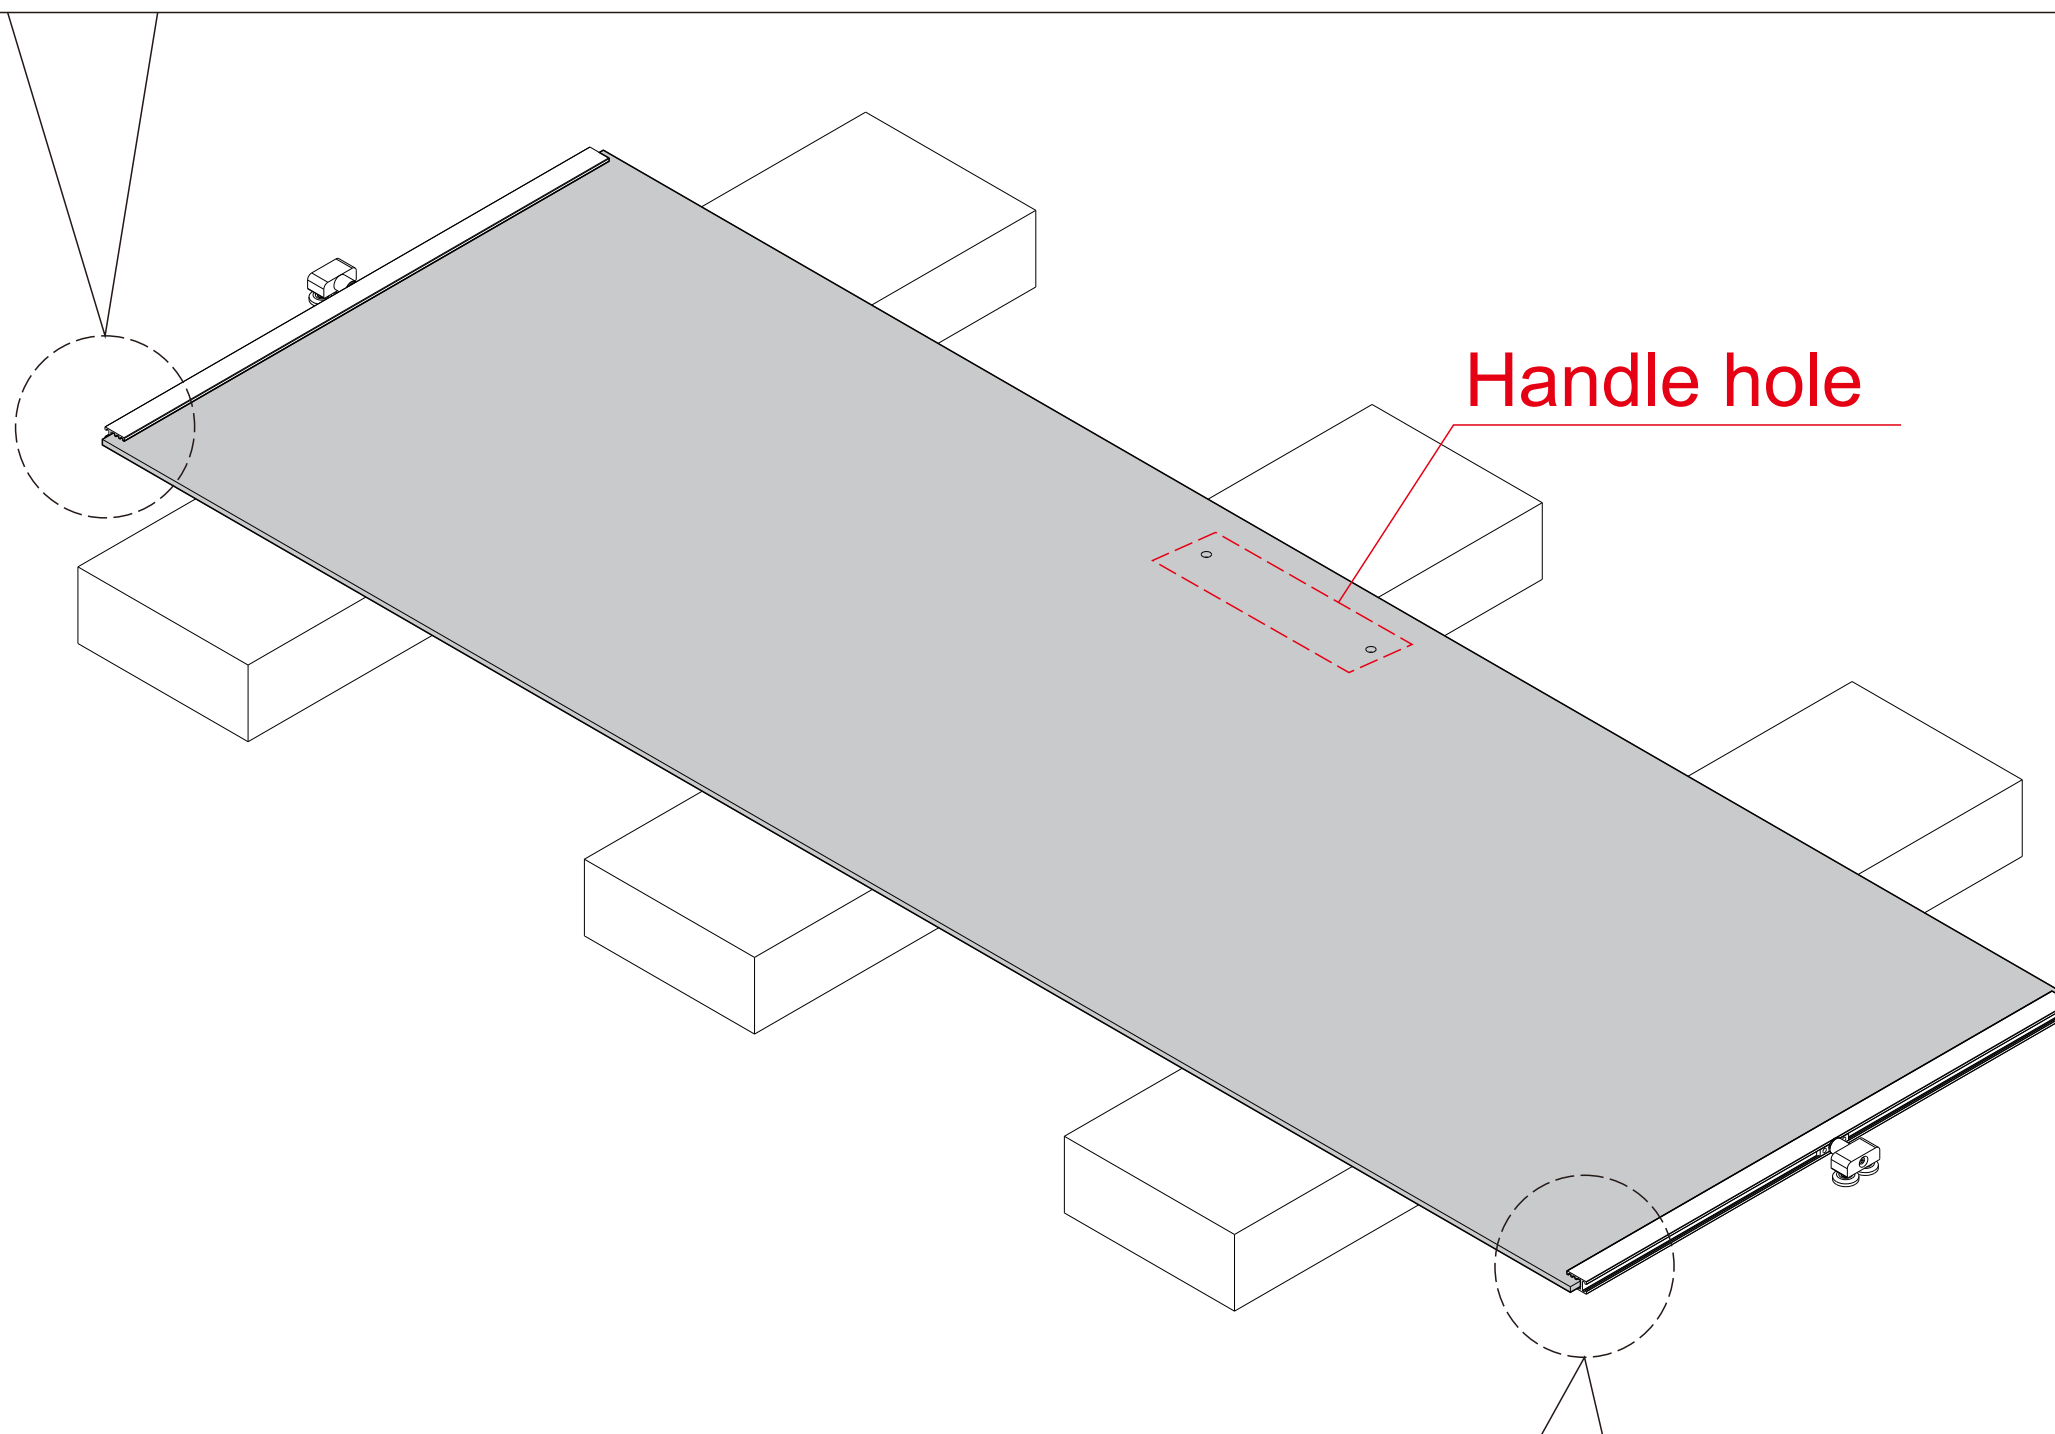
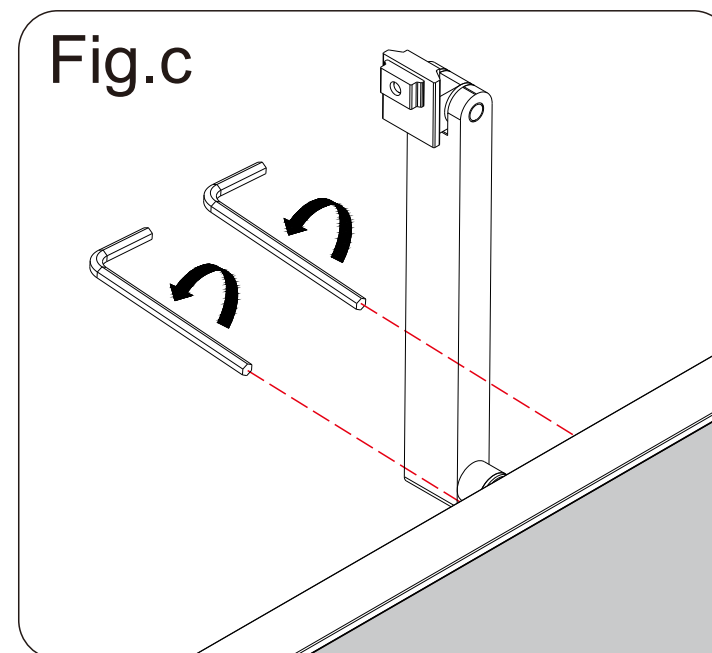


Fig.d

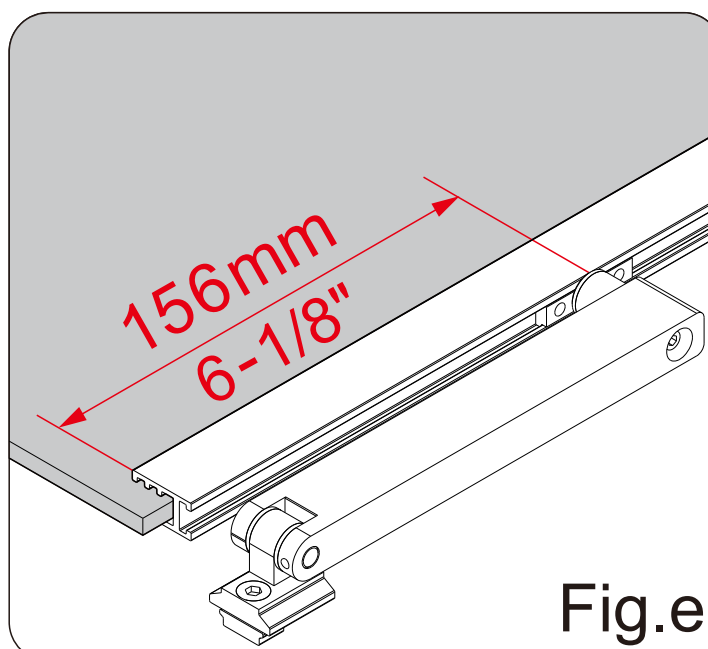


Fig.e

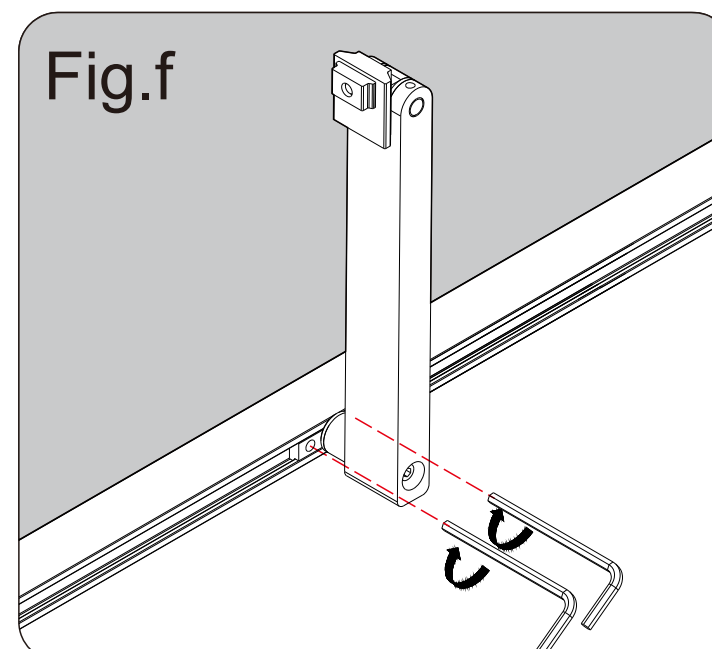


Fig.f

7 Install Decorative Cover(B)

Fig.a

B


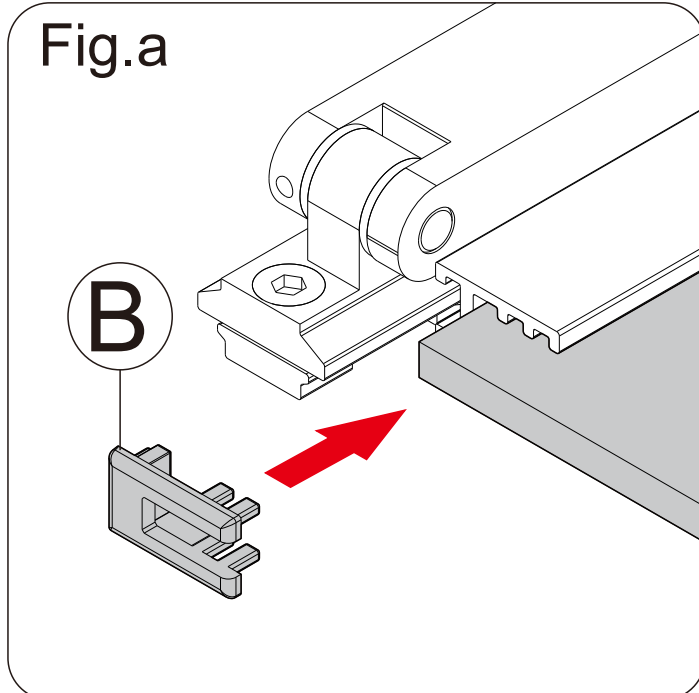



Fig.b

B

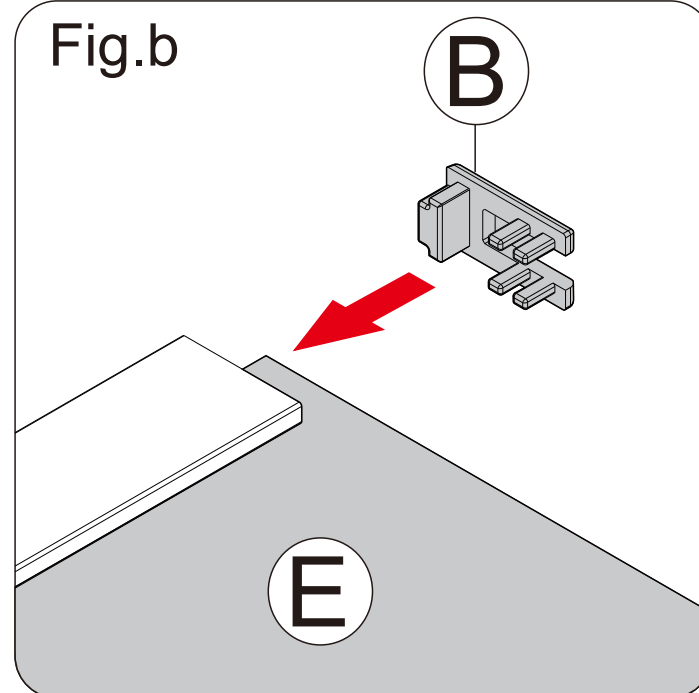

NOTE

1.Install the **Decorative cover(C)** on the **Glass Door(G)**.

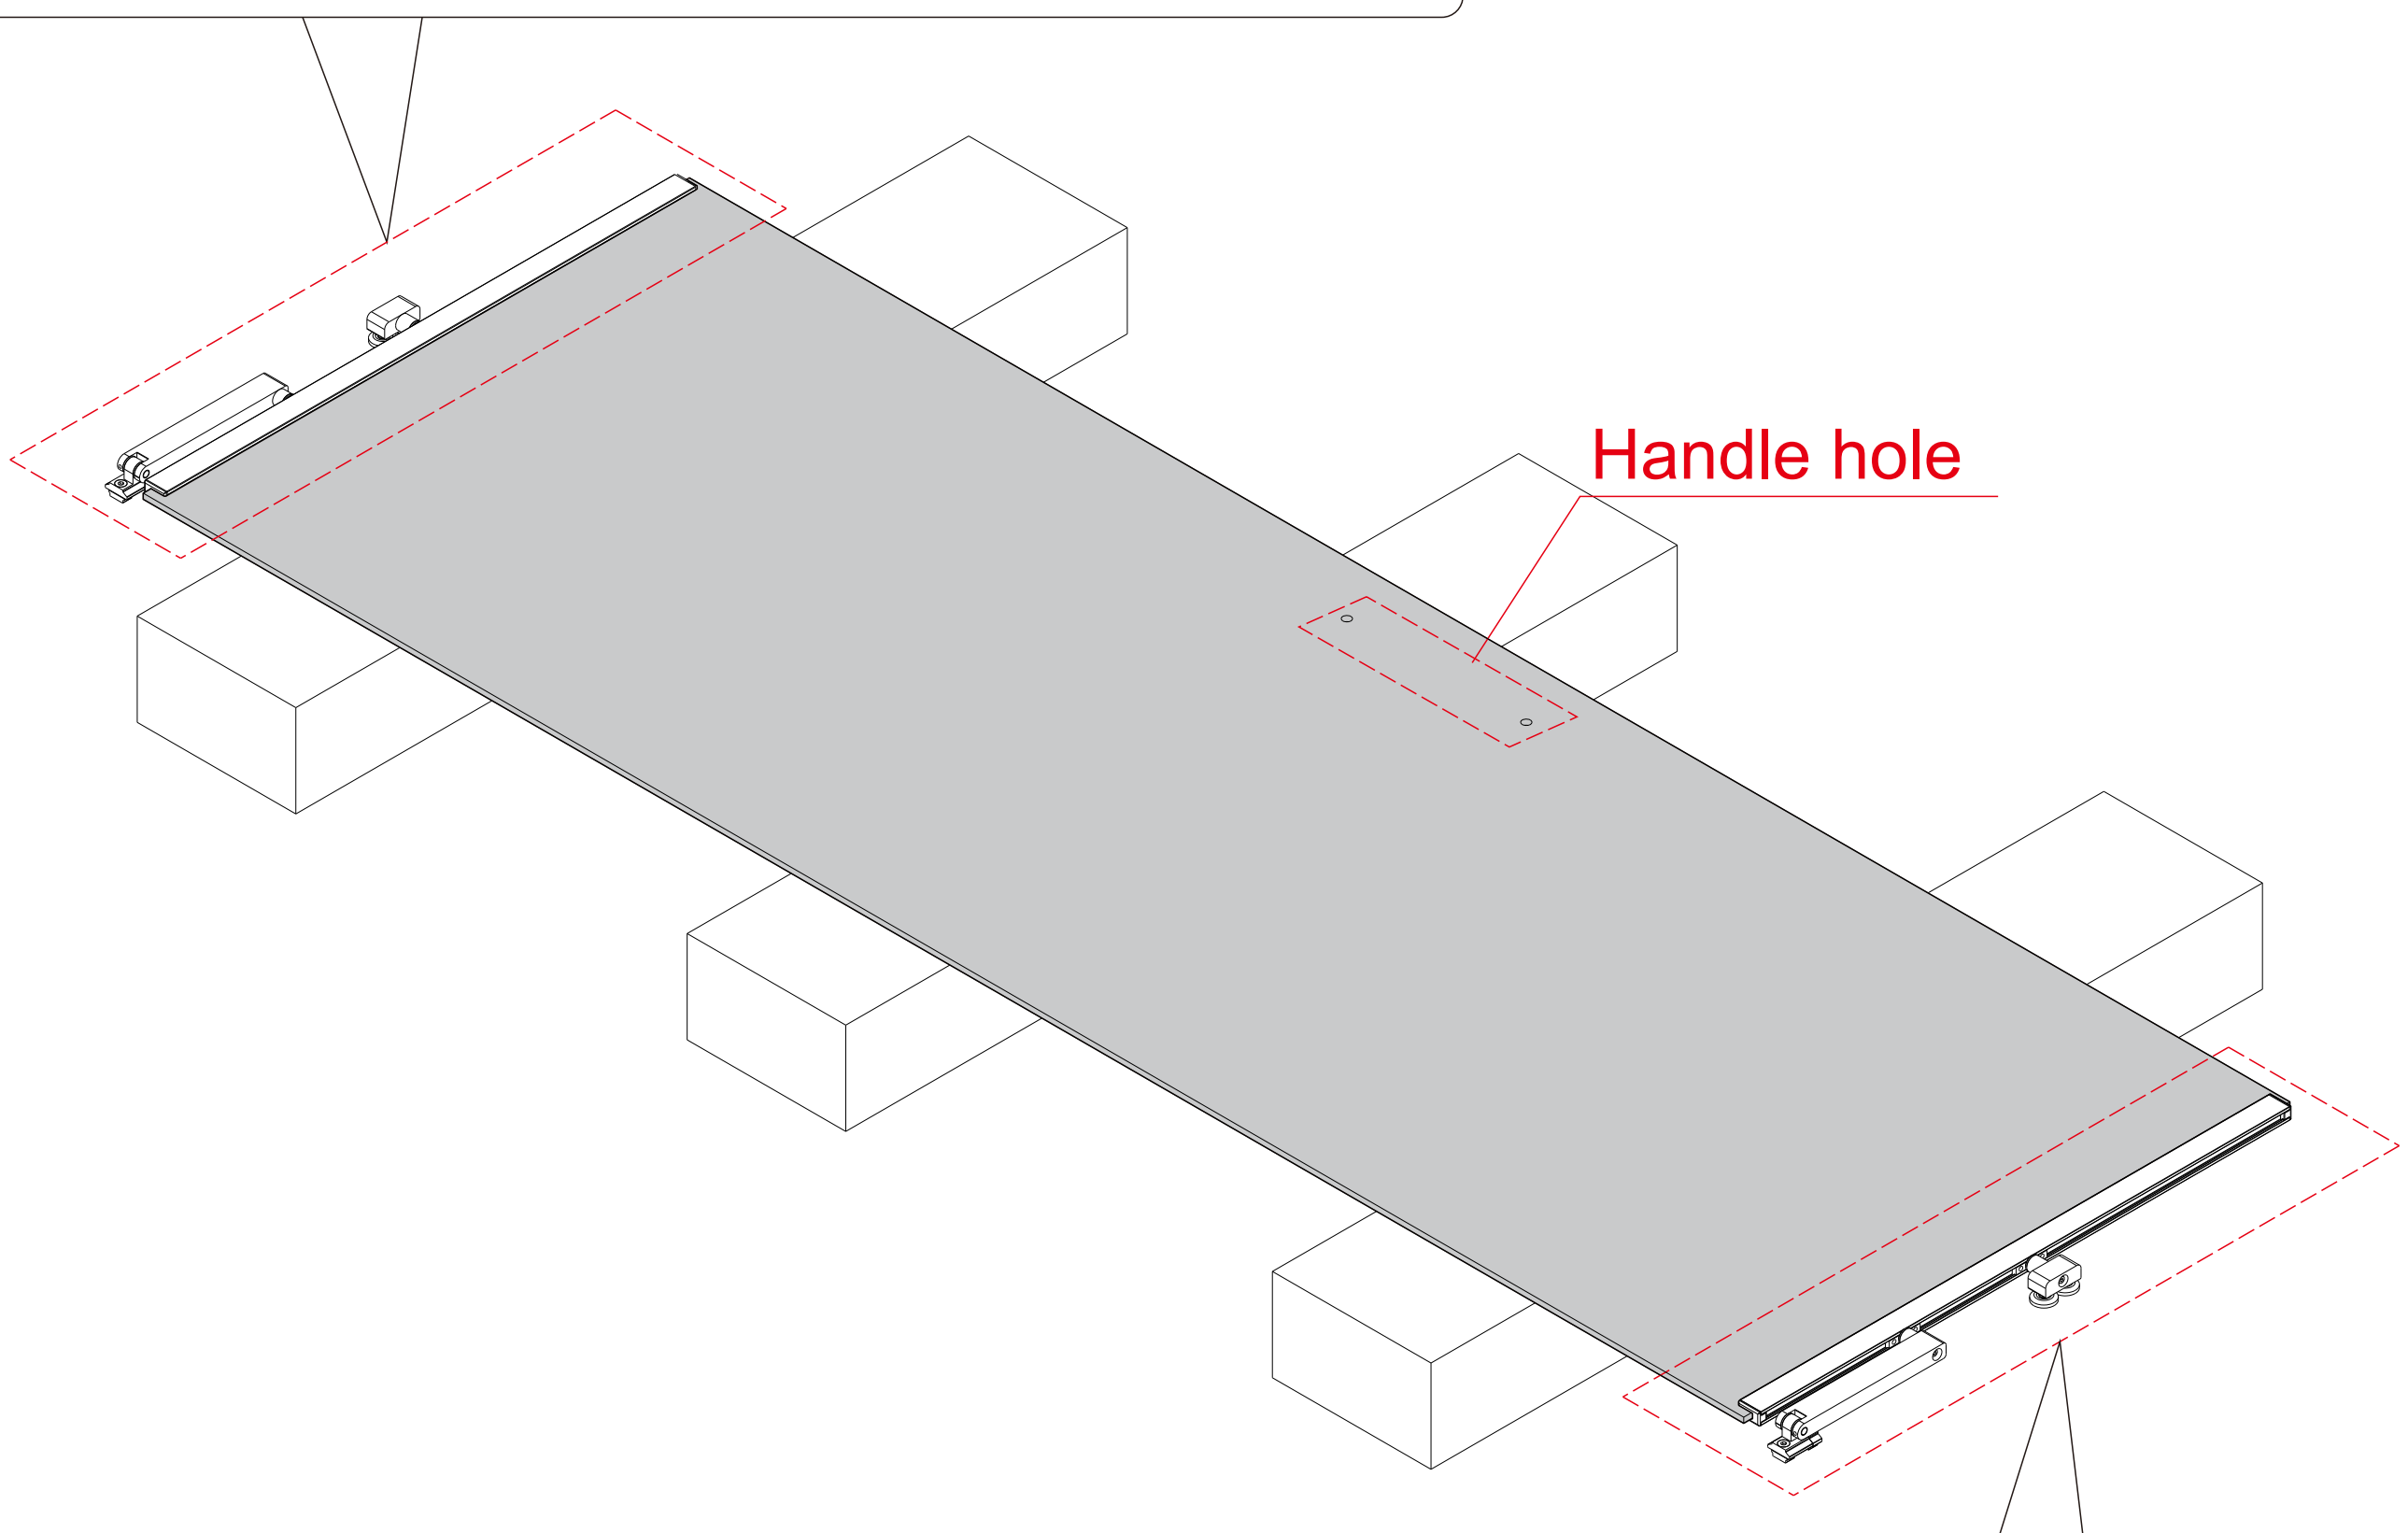

CAUTION: Do not put glass directly on the ground

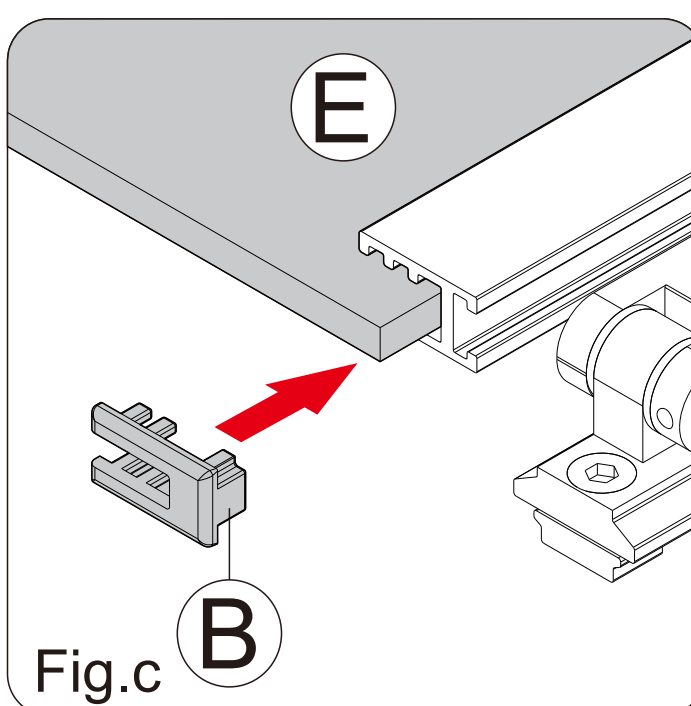


Fig.c






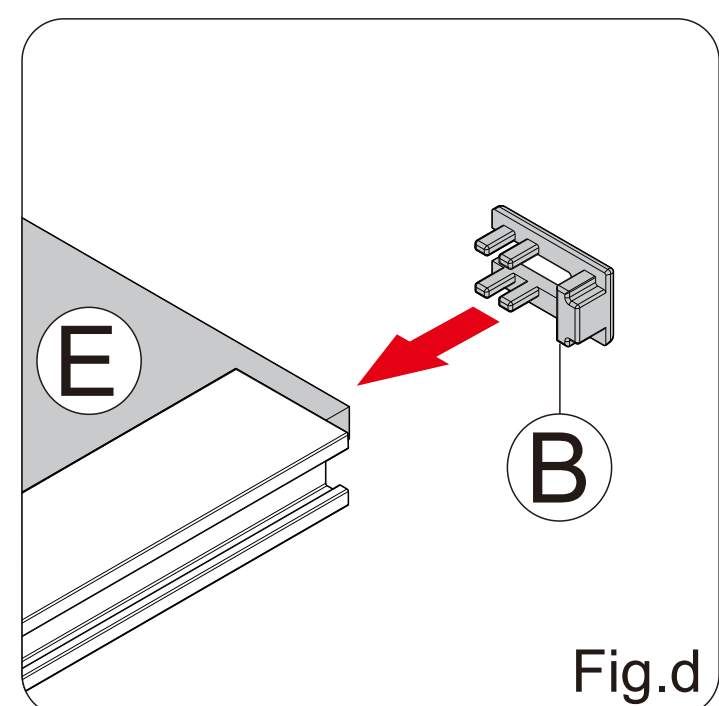


Fig.d


8-1 Assembly

NOTE

1.Pass the **Guide Rail(J)** through the **Roller(K)**, install the **Bumper Rubber(B)** at the other end of the **Guide Rail(J)**, align the **Rotating Shaft Component (L)** with the **Guide Rail(J)**, and secure it with a wrench.

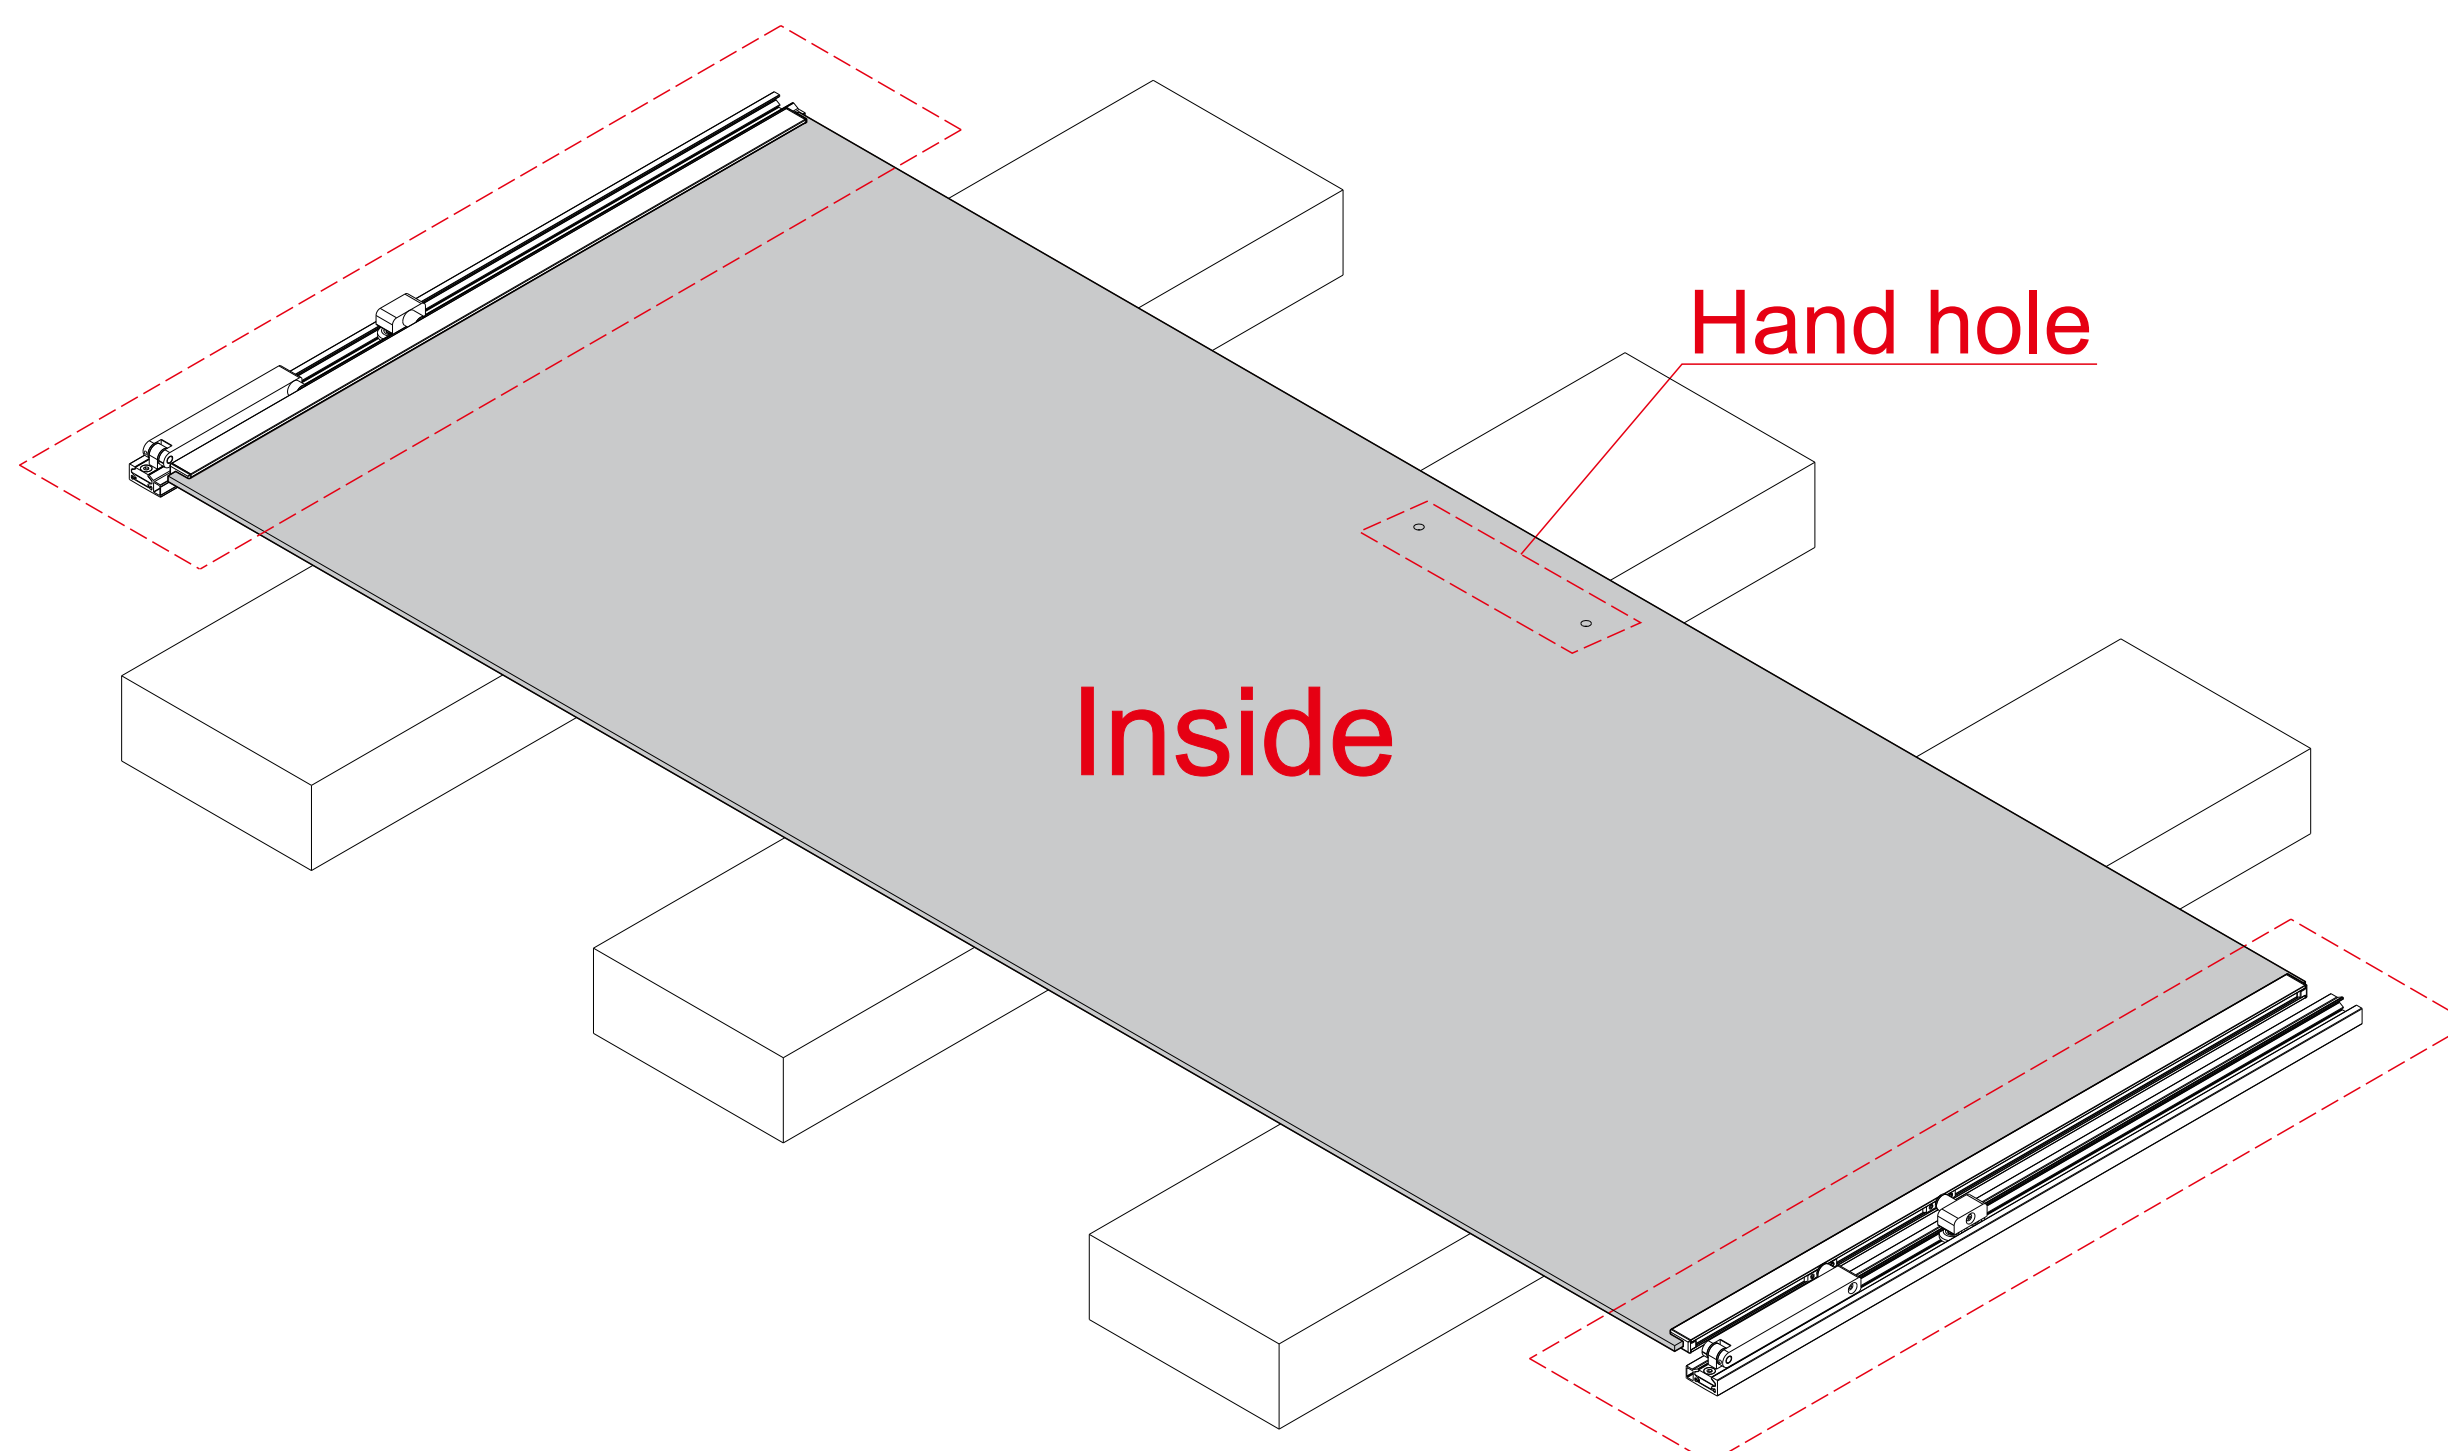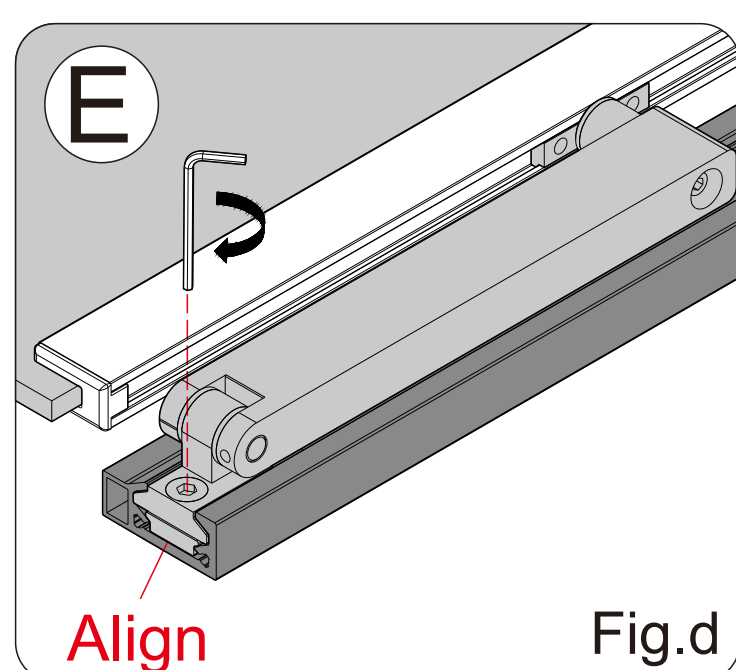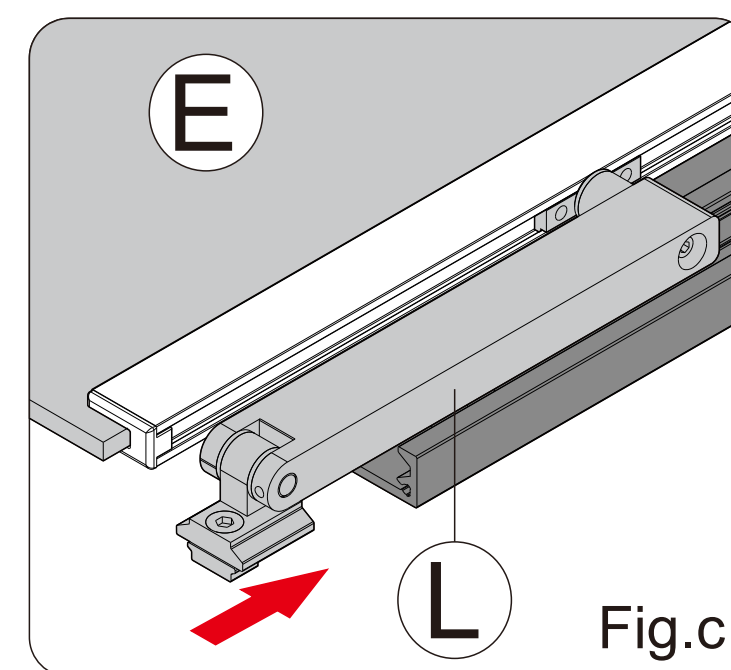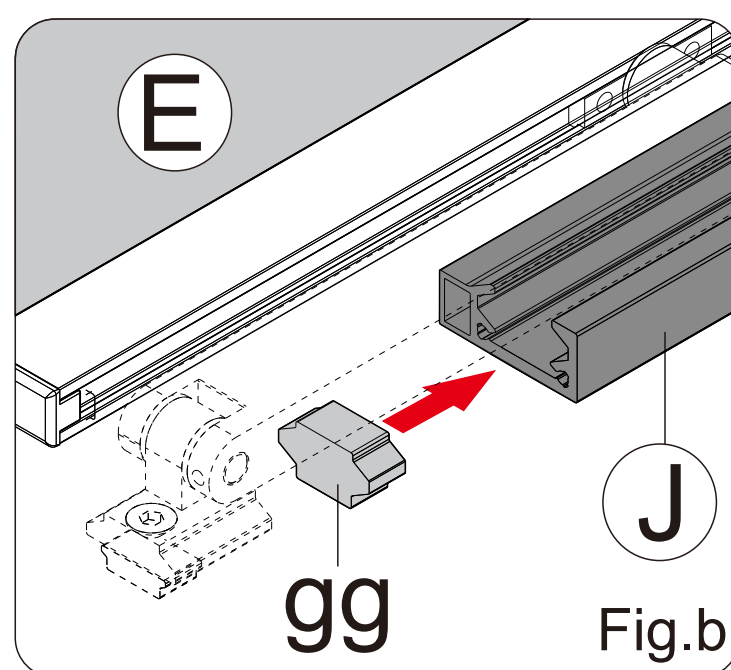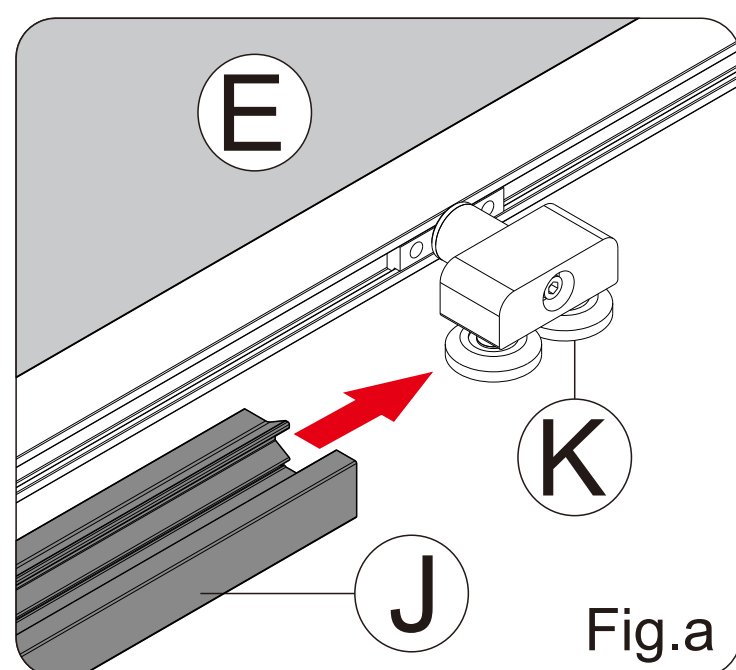


8-2 Assembly

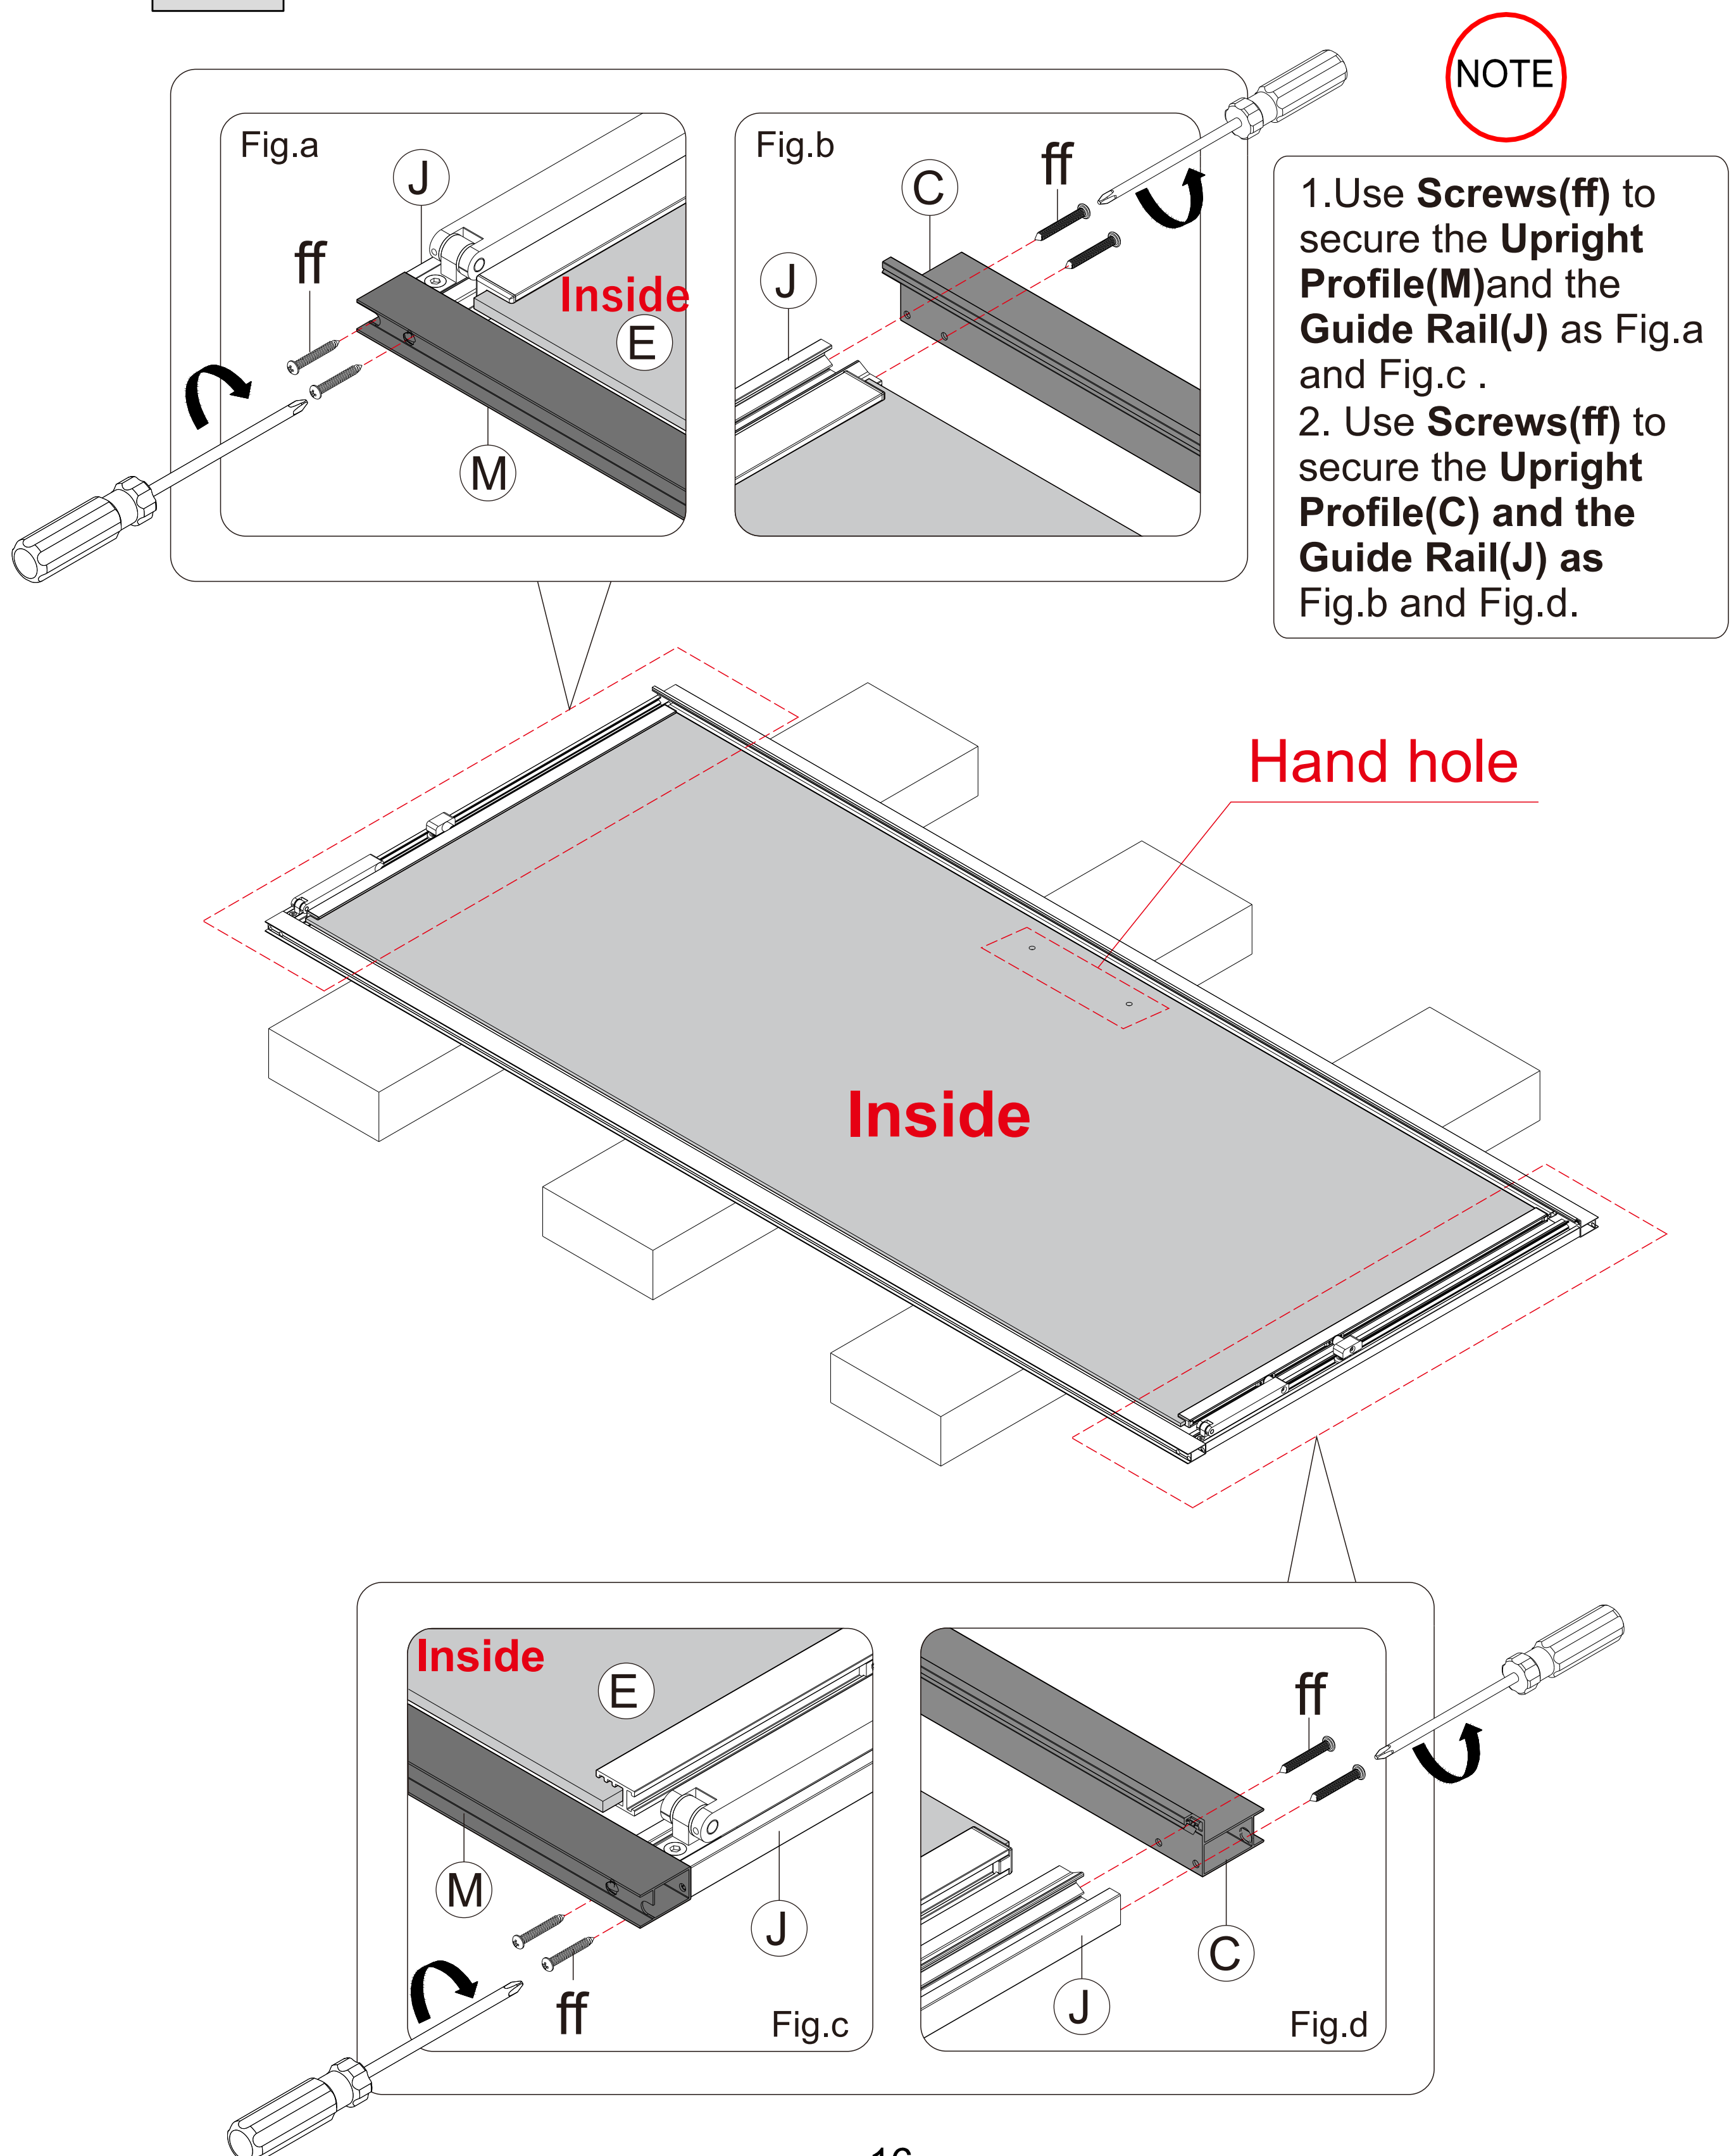

9-1 Install a shower door

NOTE

1. Install the **Wall Jamb(A)** on the shower door.

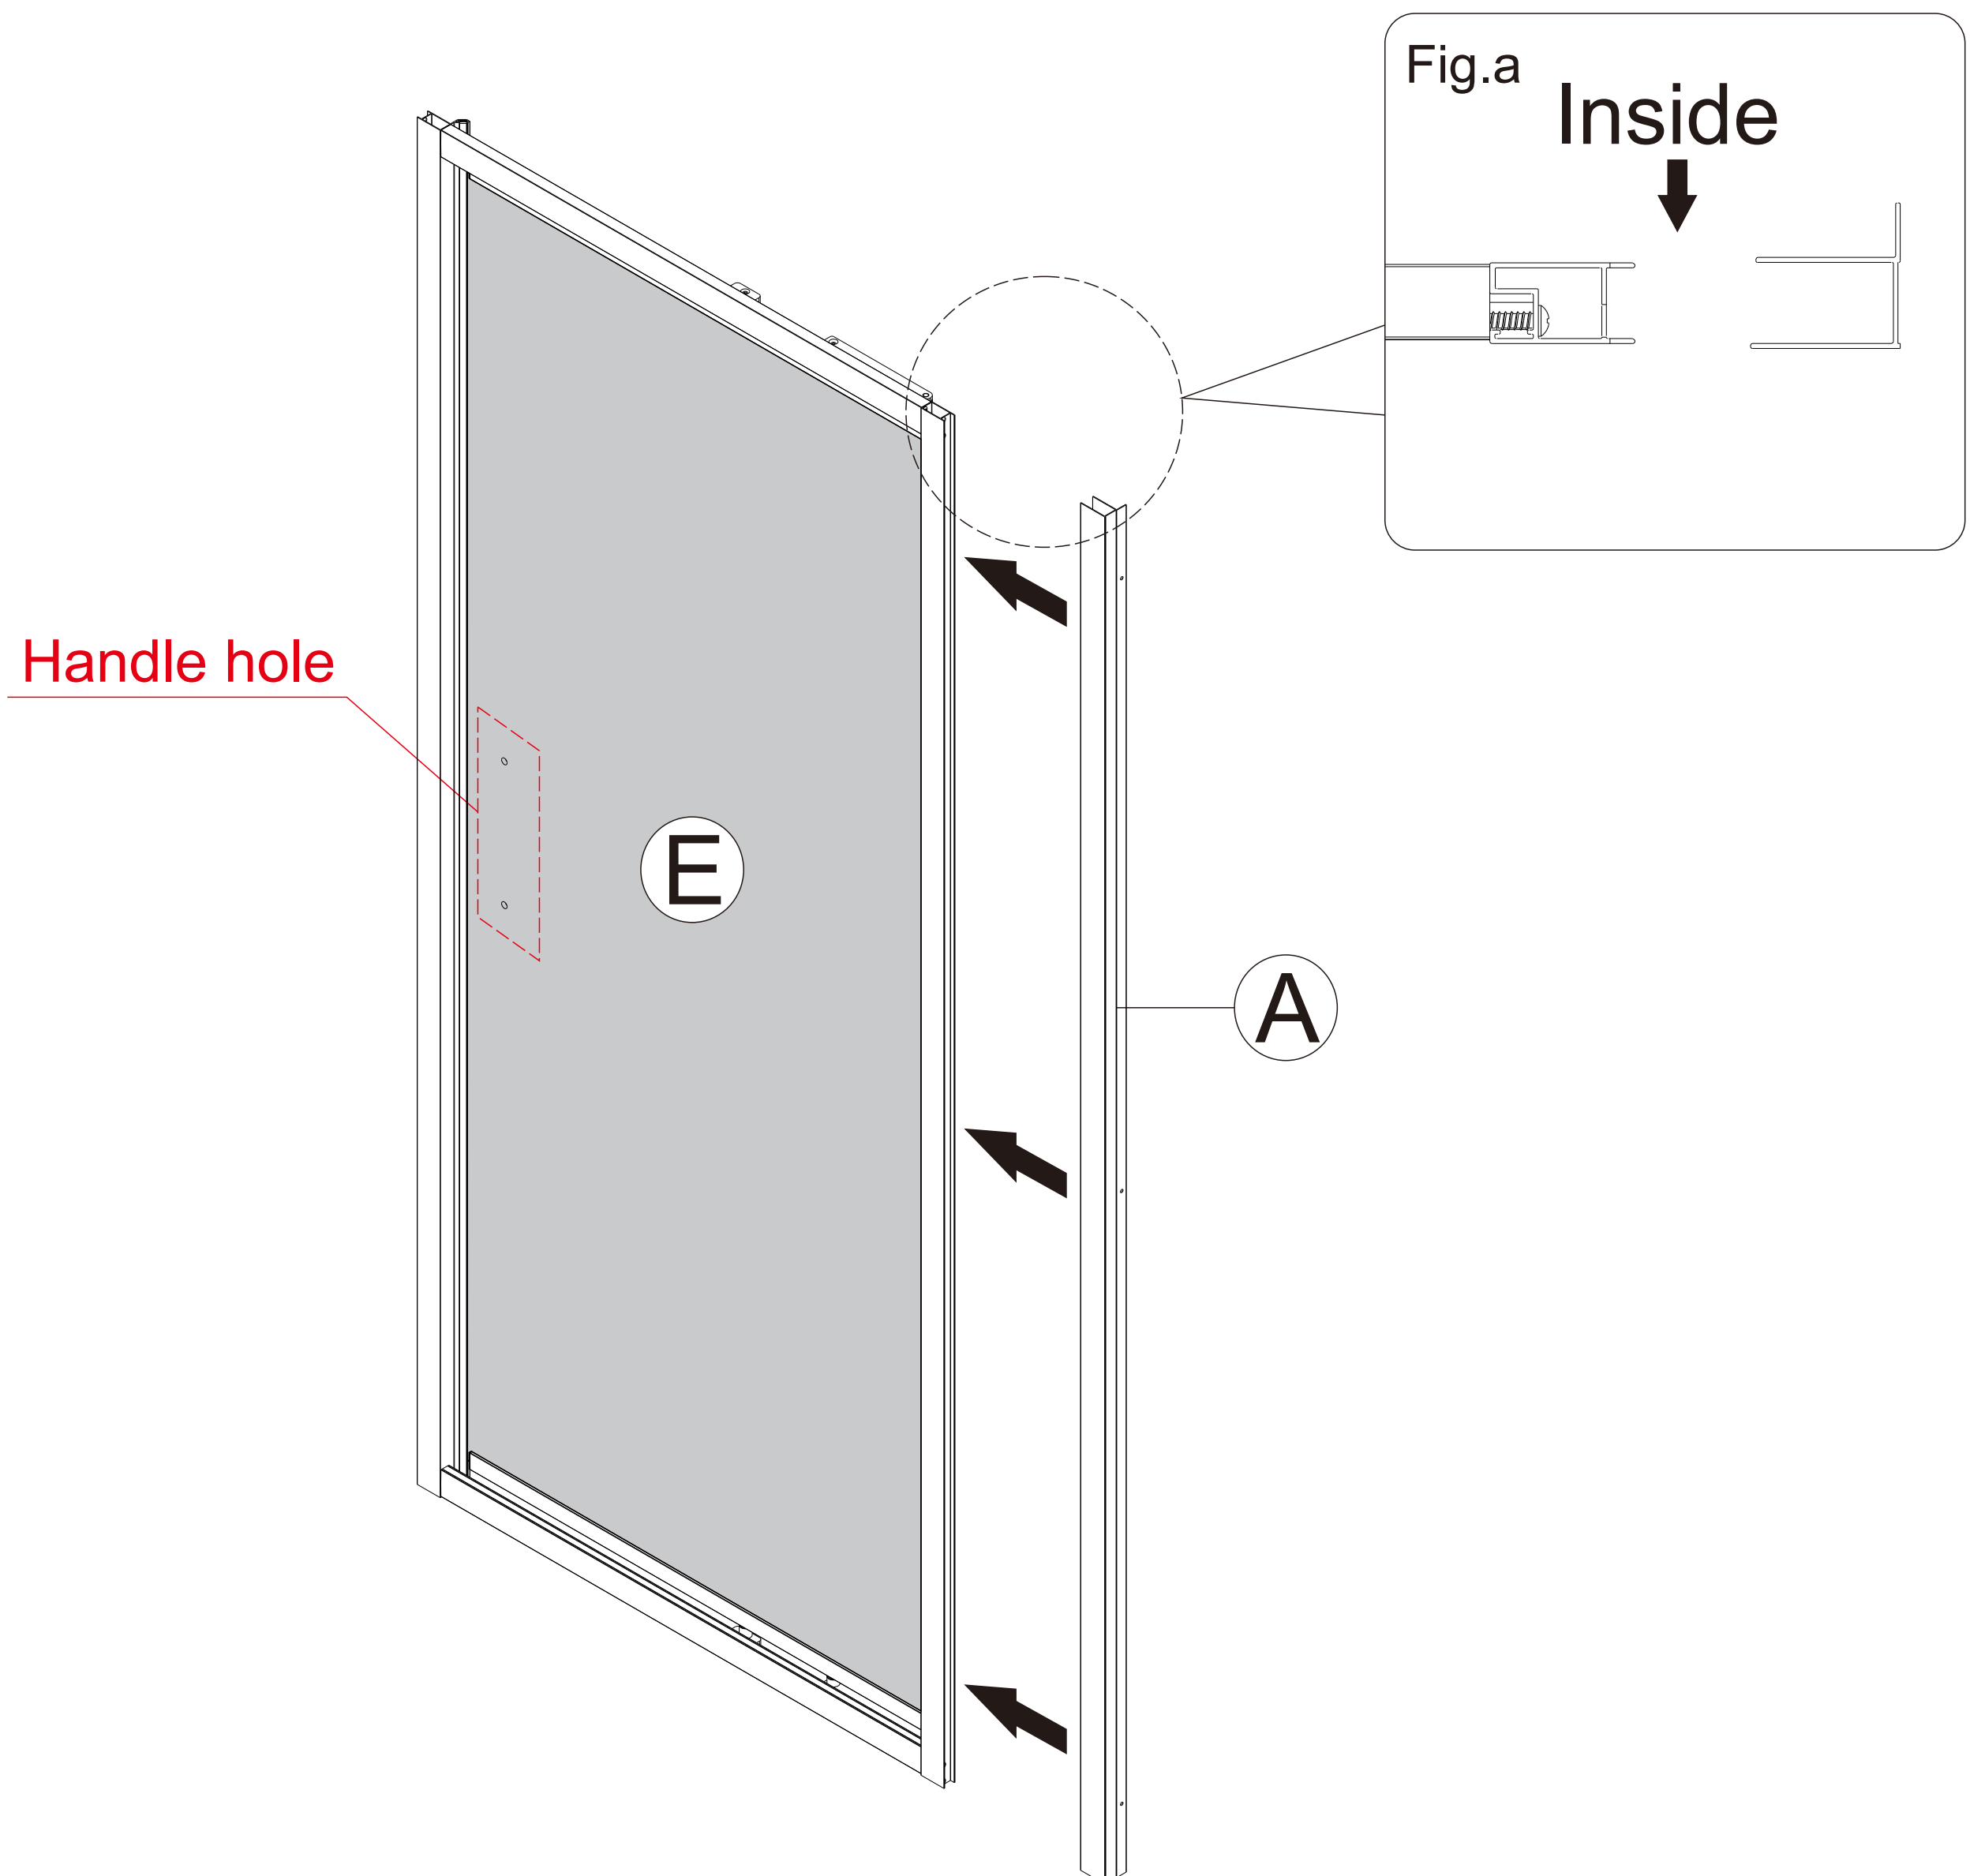

Note: The shower door can be installed left or right, according to the need to determine the installation direction.




CAUTION: Do not put glass directly on the ground

9-2 Install a shower door

NOTE

1. Install the shower room on the wall jamb on the other side
2. Move the shower door inward.

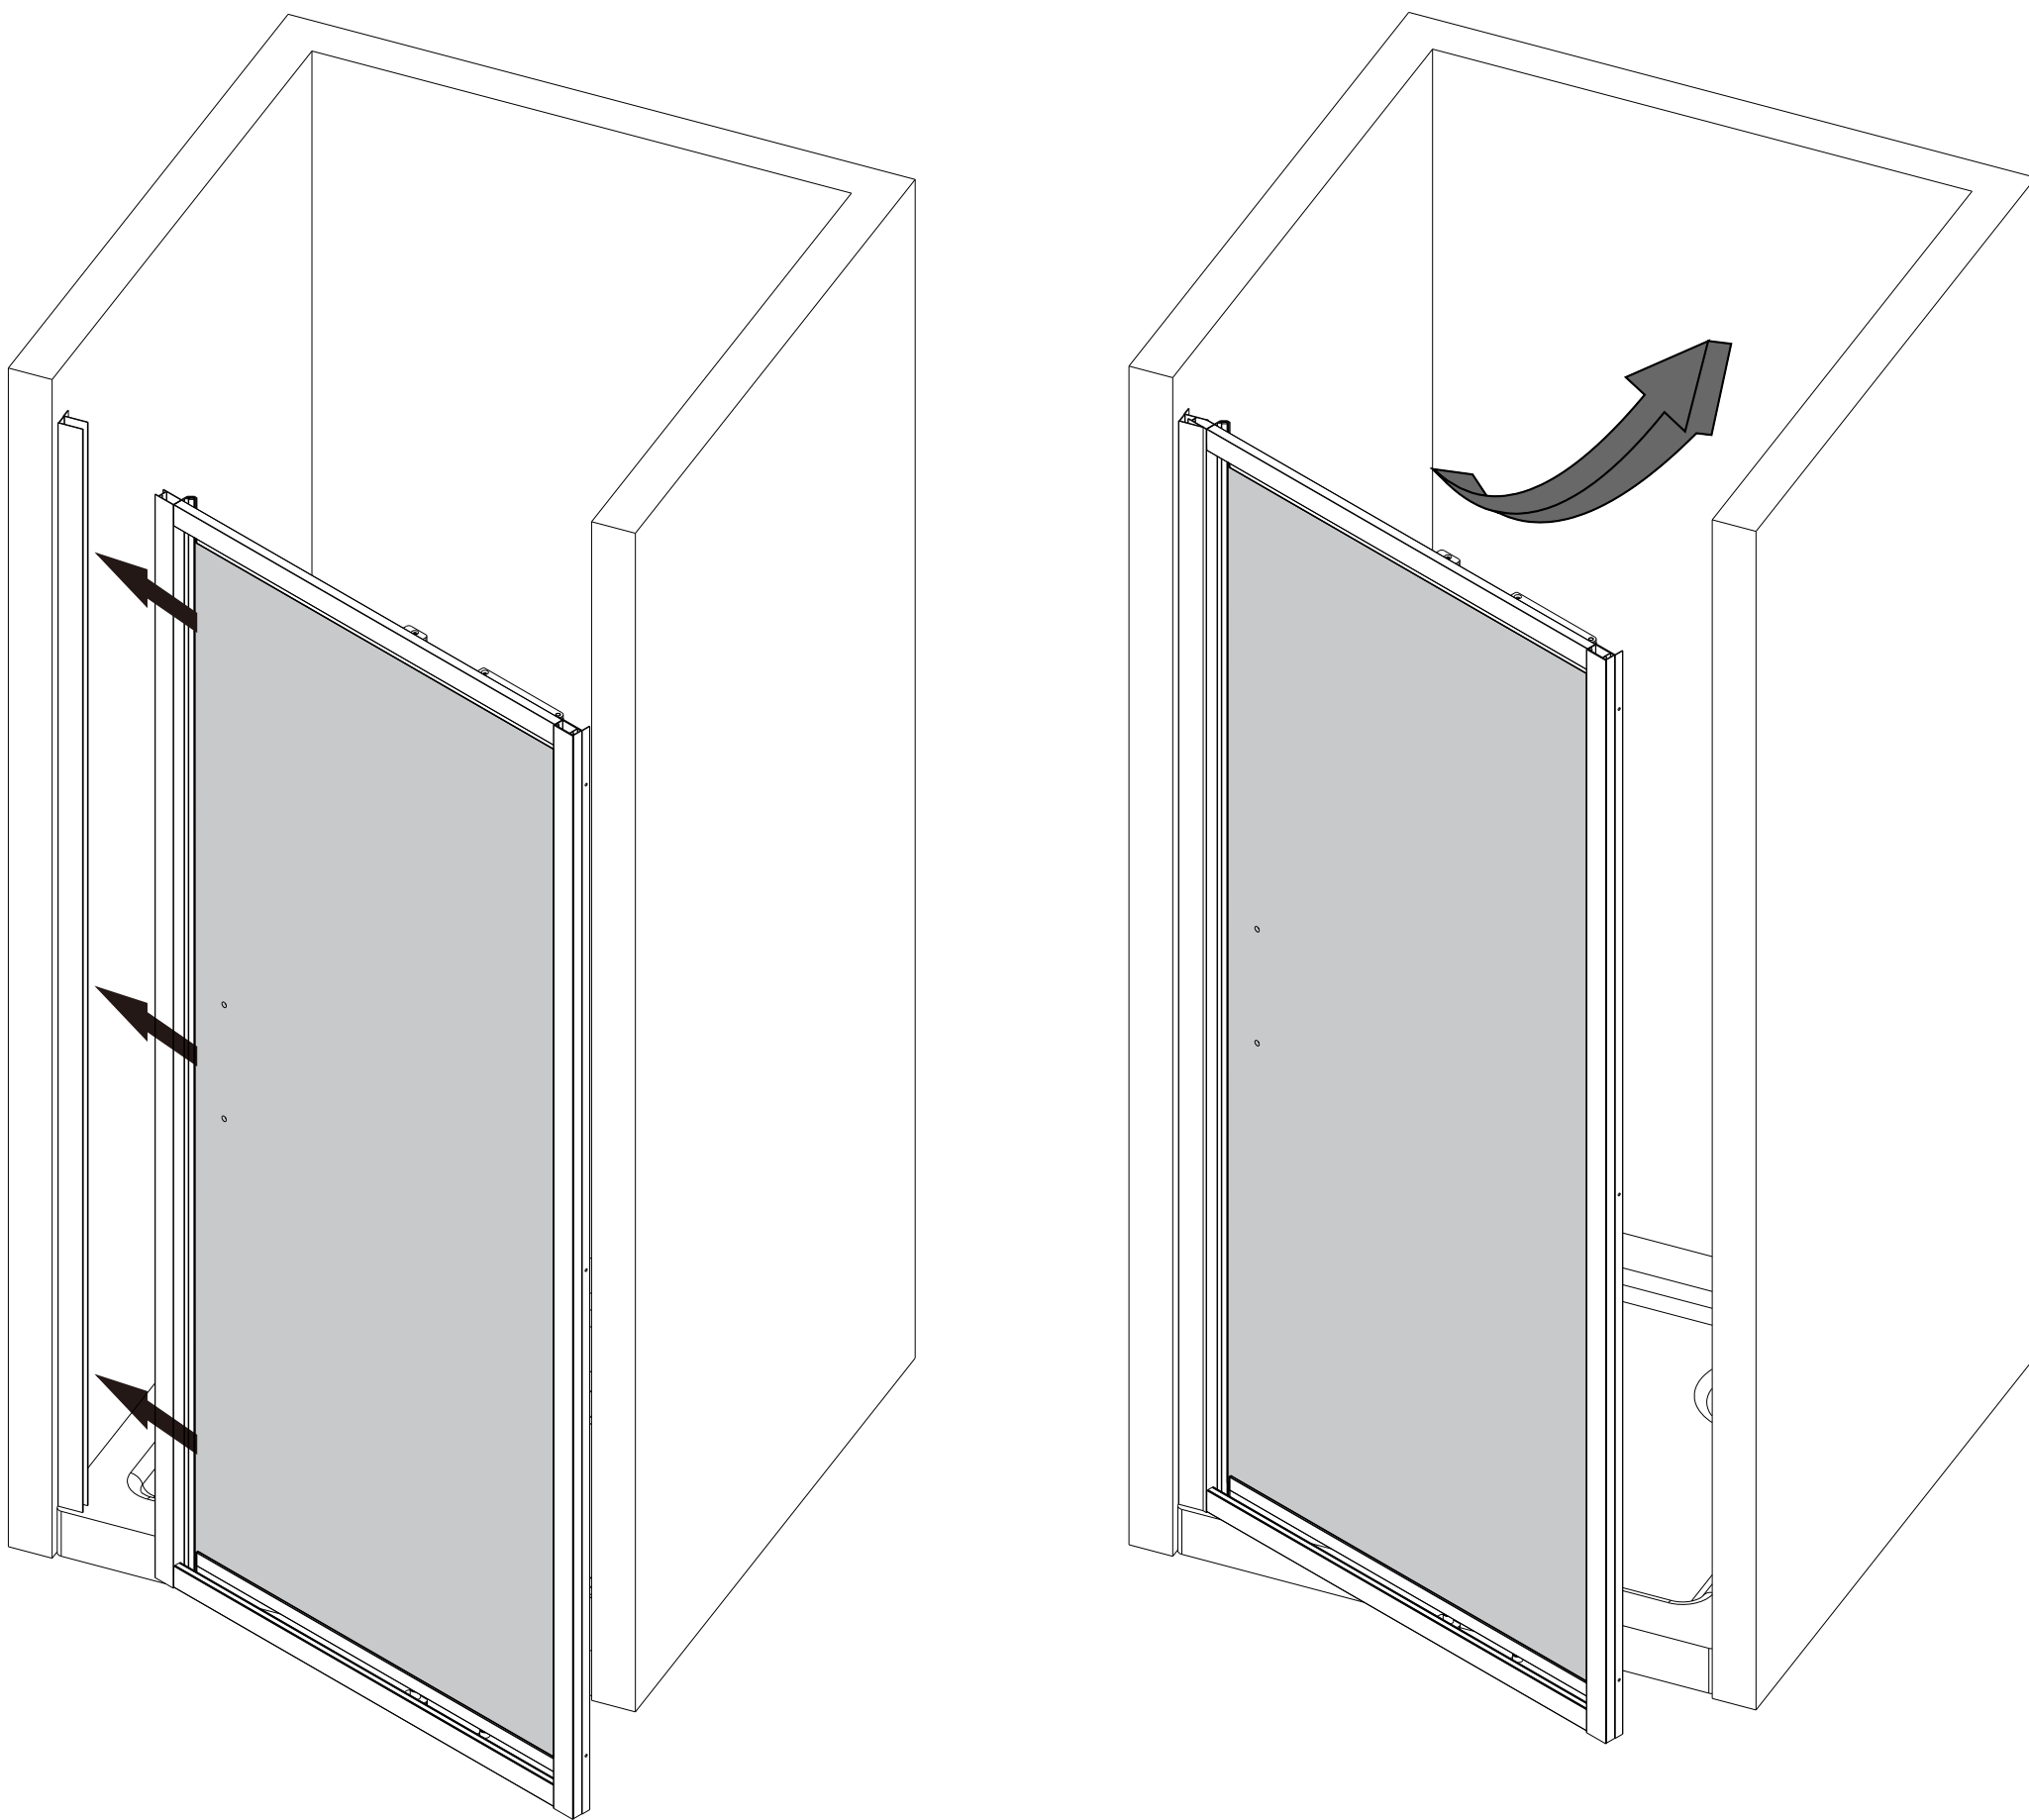

Note: The shower door can be installed left or right, according to the need to determine the installation direction.





CAUTION: Do not put glass directly on the ground

9-3 Install a shower door

NOTE

1. Use level to make Sure wall Jamb (A) is plumb, Secure the other side of the **Wall Jamb(A)** with **Screws(bb)** and **Washers(cc)** as Fig.a .
2. Fit the Screw Cap as Fig.b .

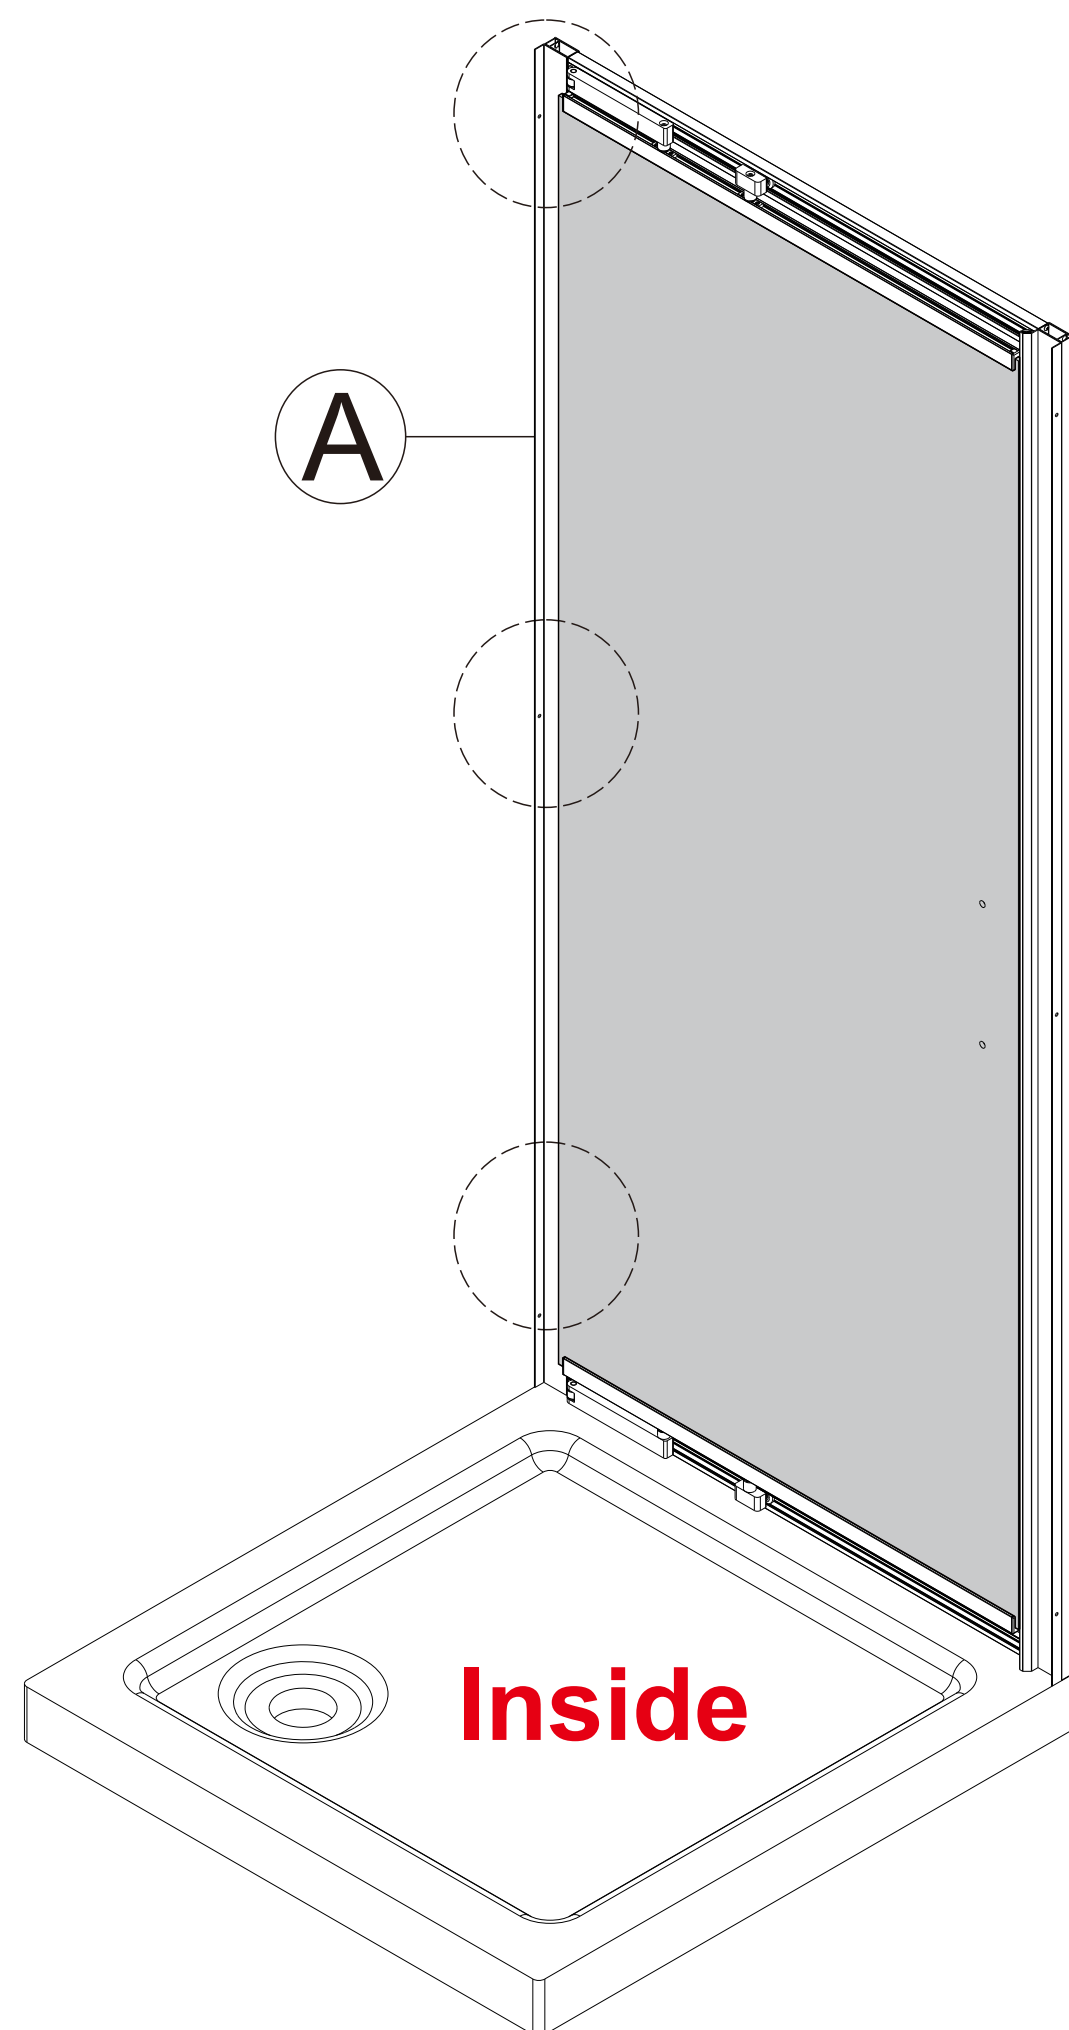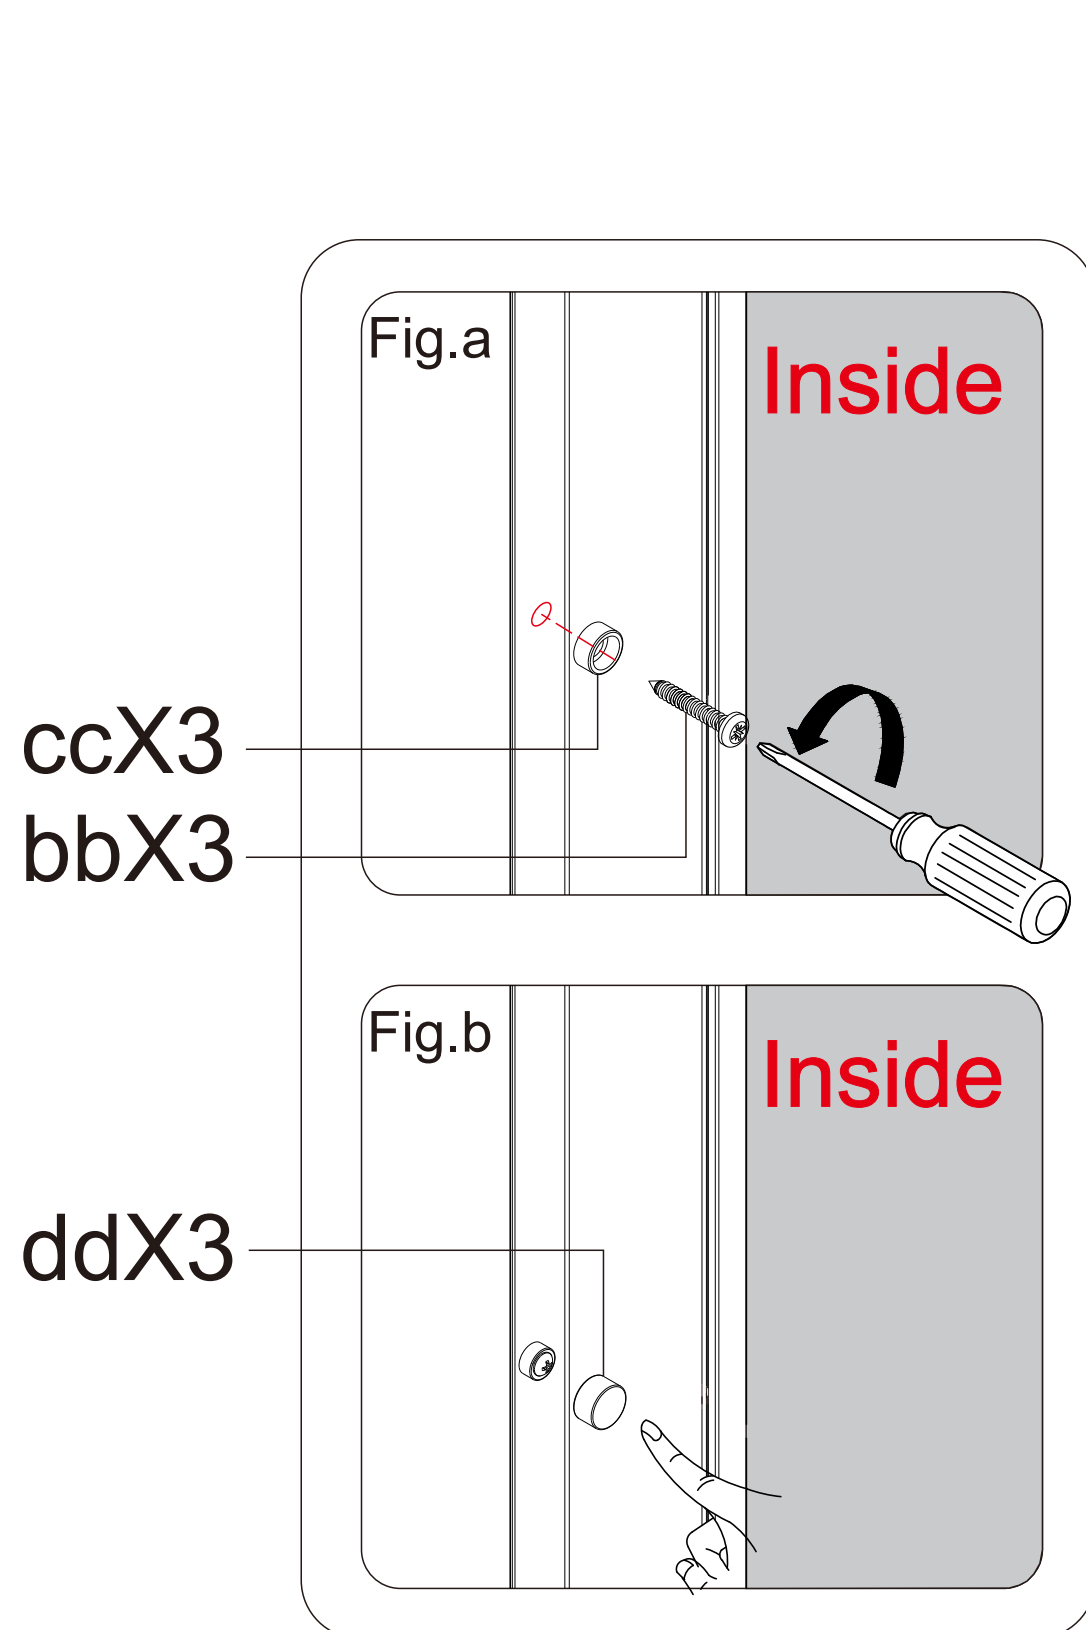



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

10

Adjust & Secure Shower door Frame

NOTE

1. Make sure shower door frame is level and centered, drill three holes in the Wall Jamb as Fig.a.
2. Fix the Glass Door with Screws as Fig.b .
3. Fit the Screw Cap Fig.c .

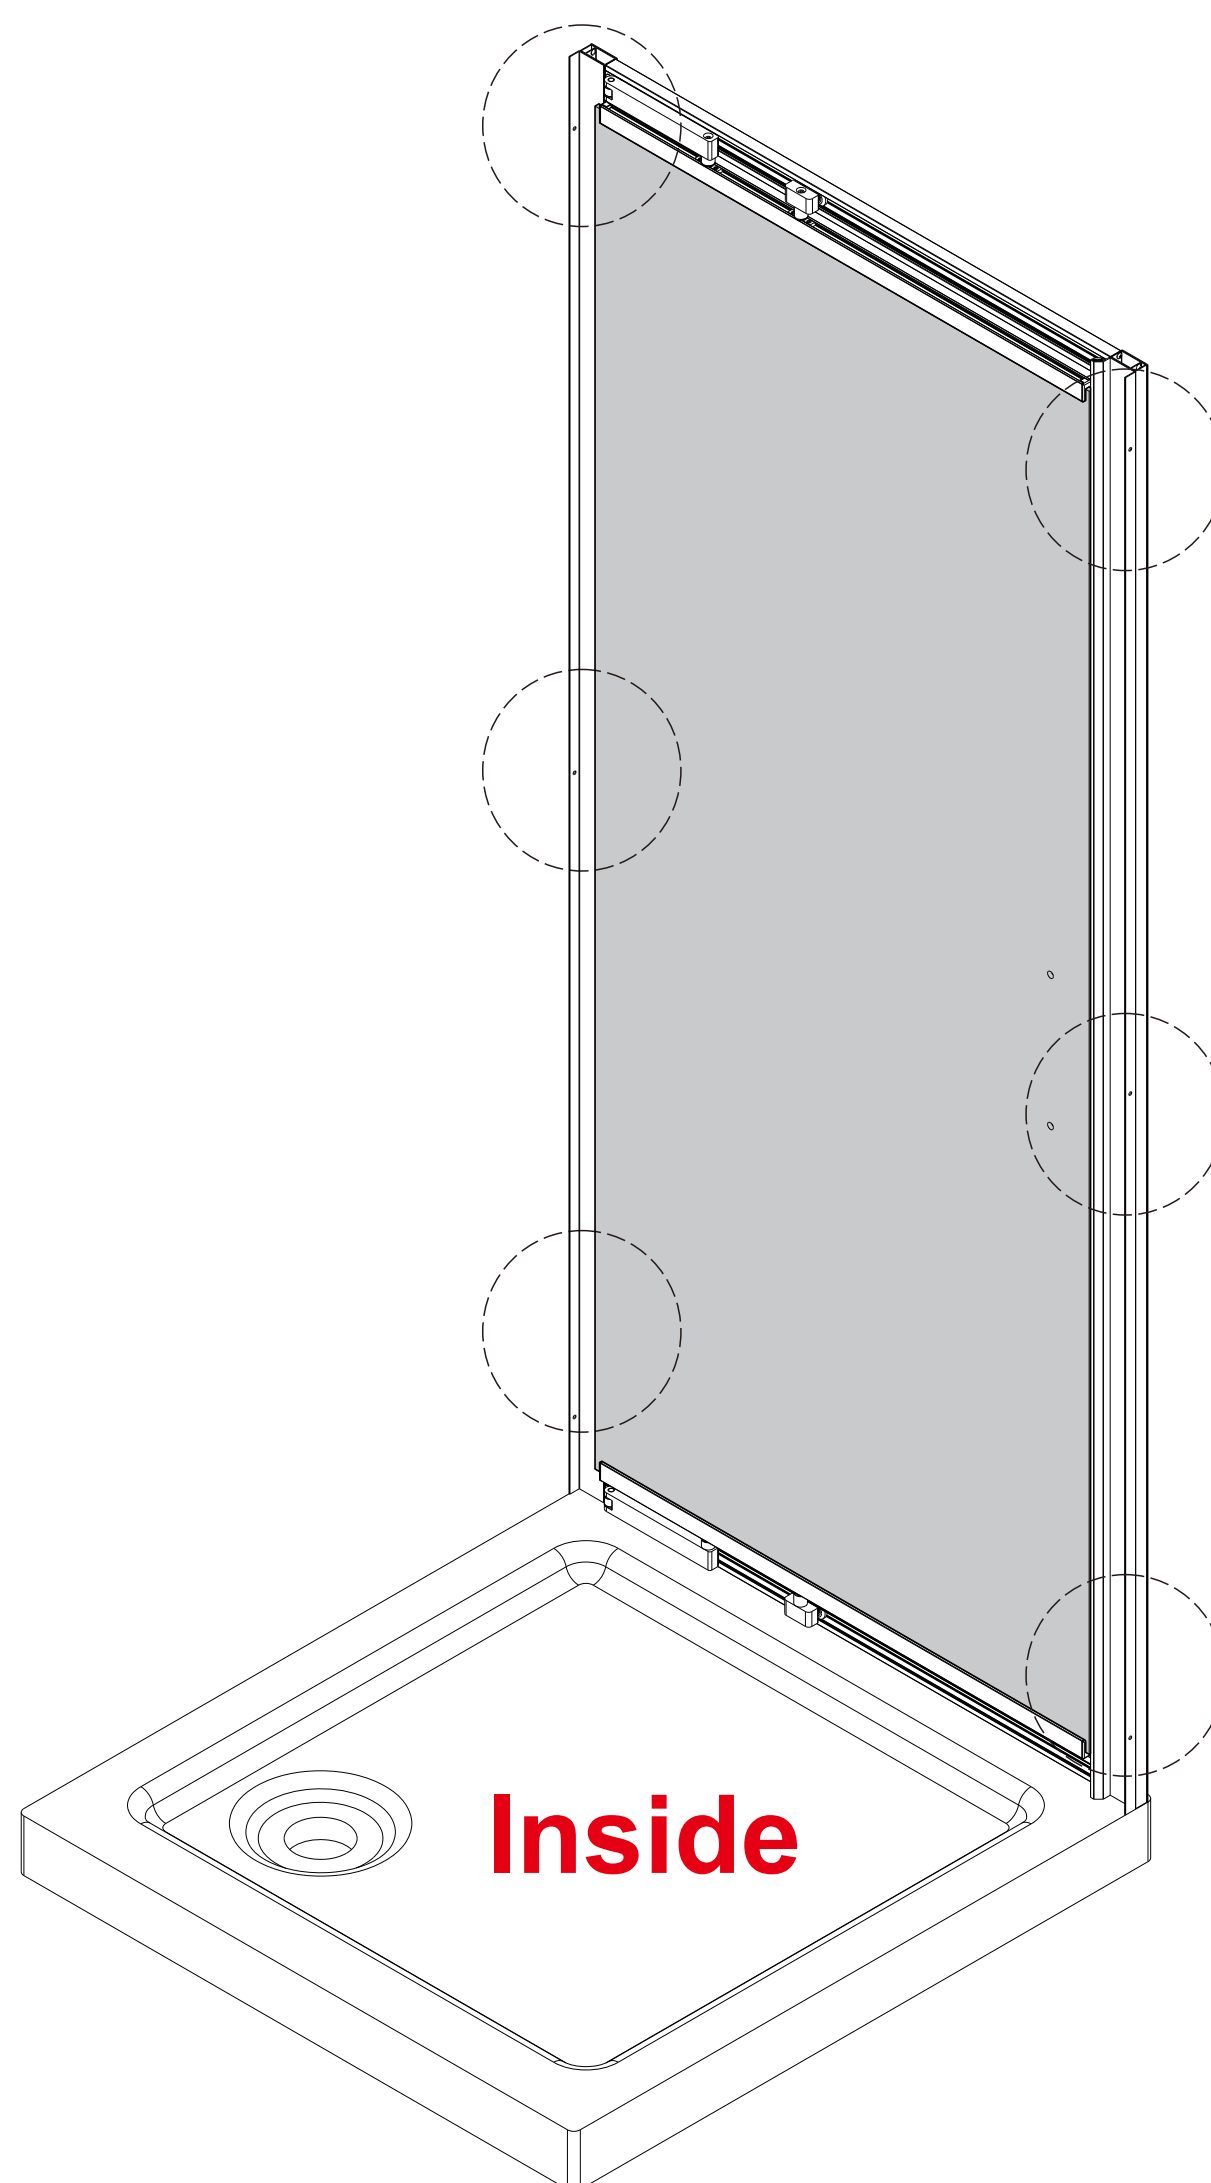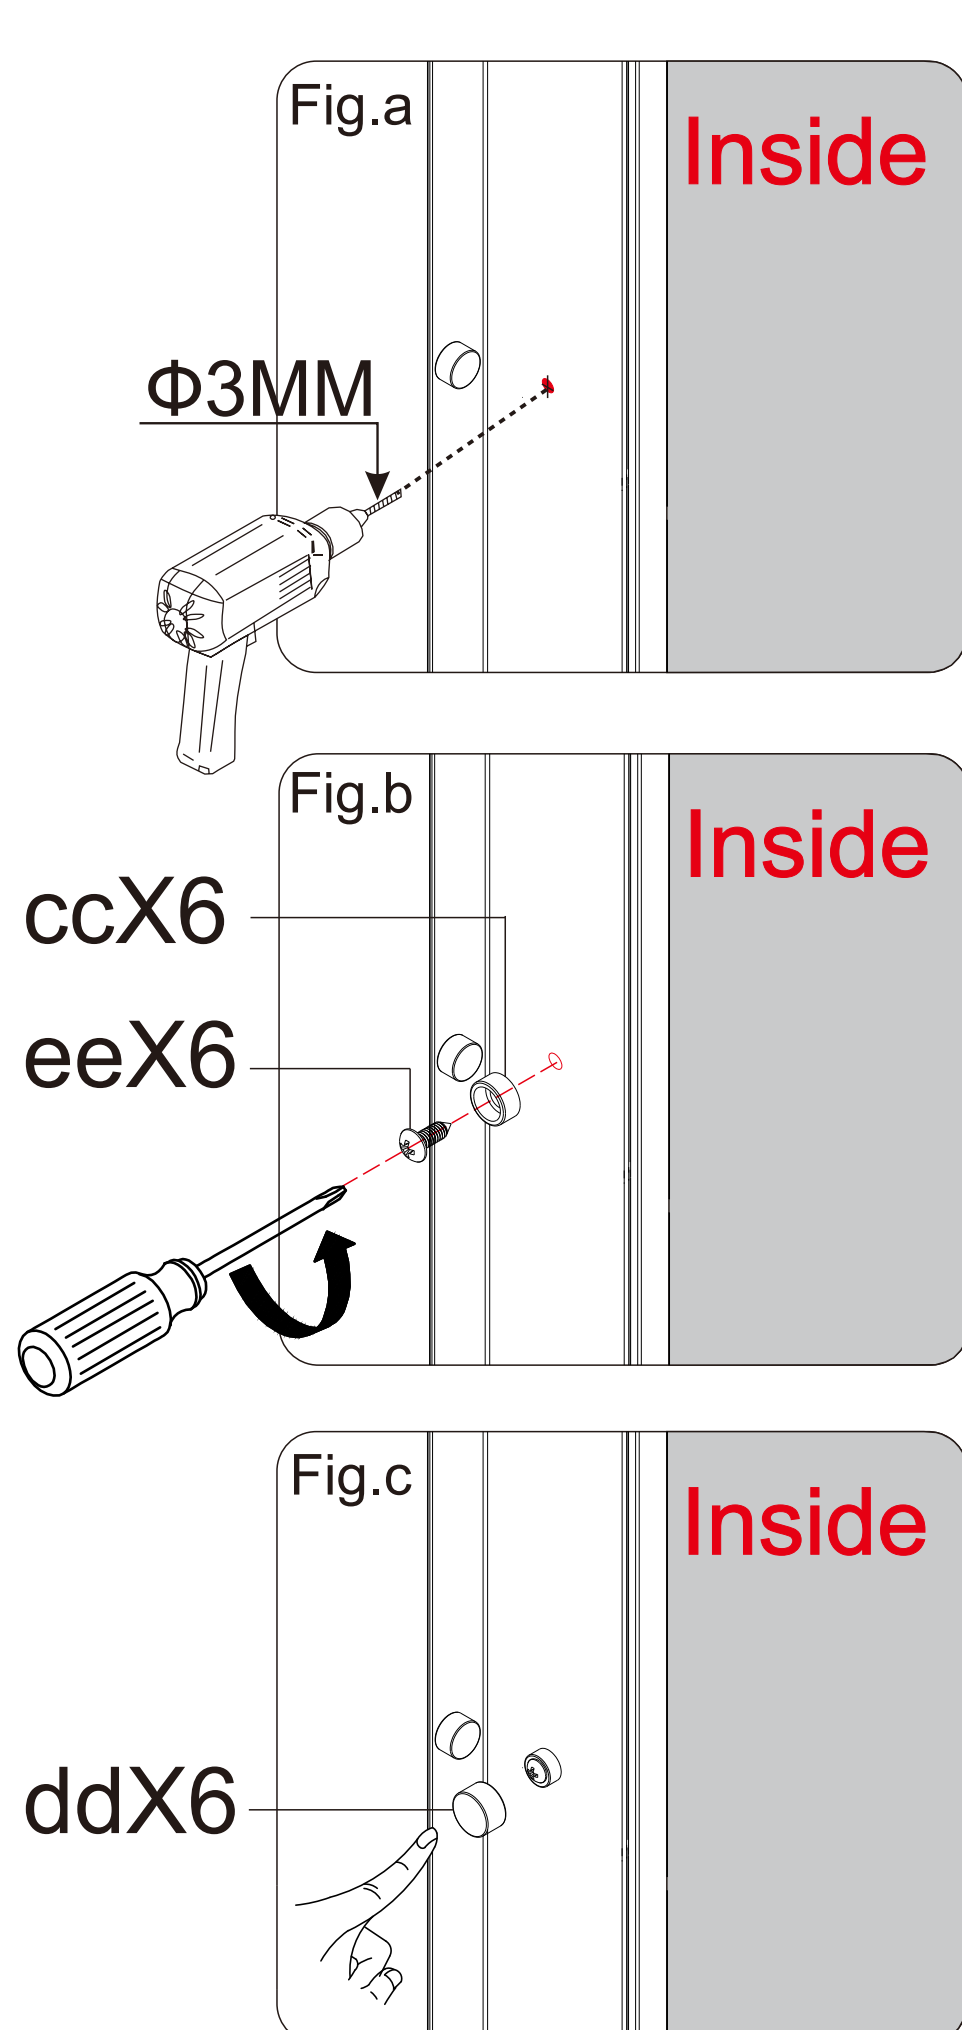


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

11 Install the **Anti-Water Strip(N)** and **Magnetic Stripe(D)**

NOTE

1. Install the **Anti-Water Strip(N)** on the **Glass Door(E)** as Fig.a .
2. Install the **Magnetic Stripe(D)** on the **Glass Door(E)** as Fig.b .

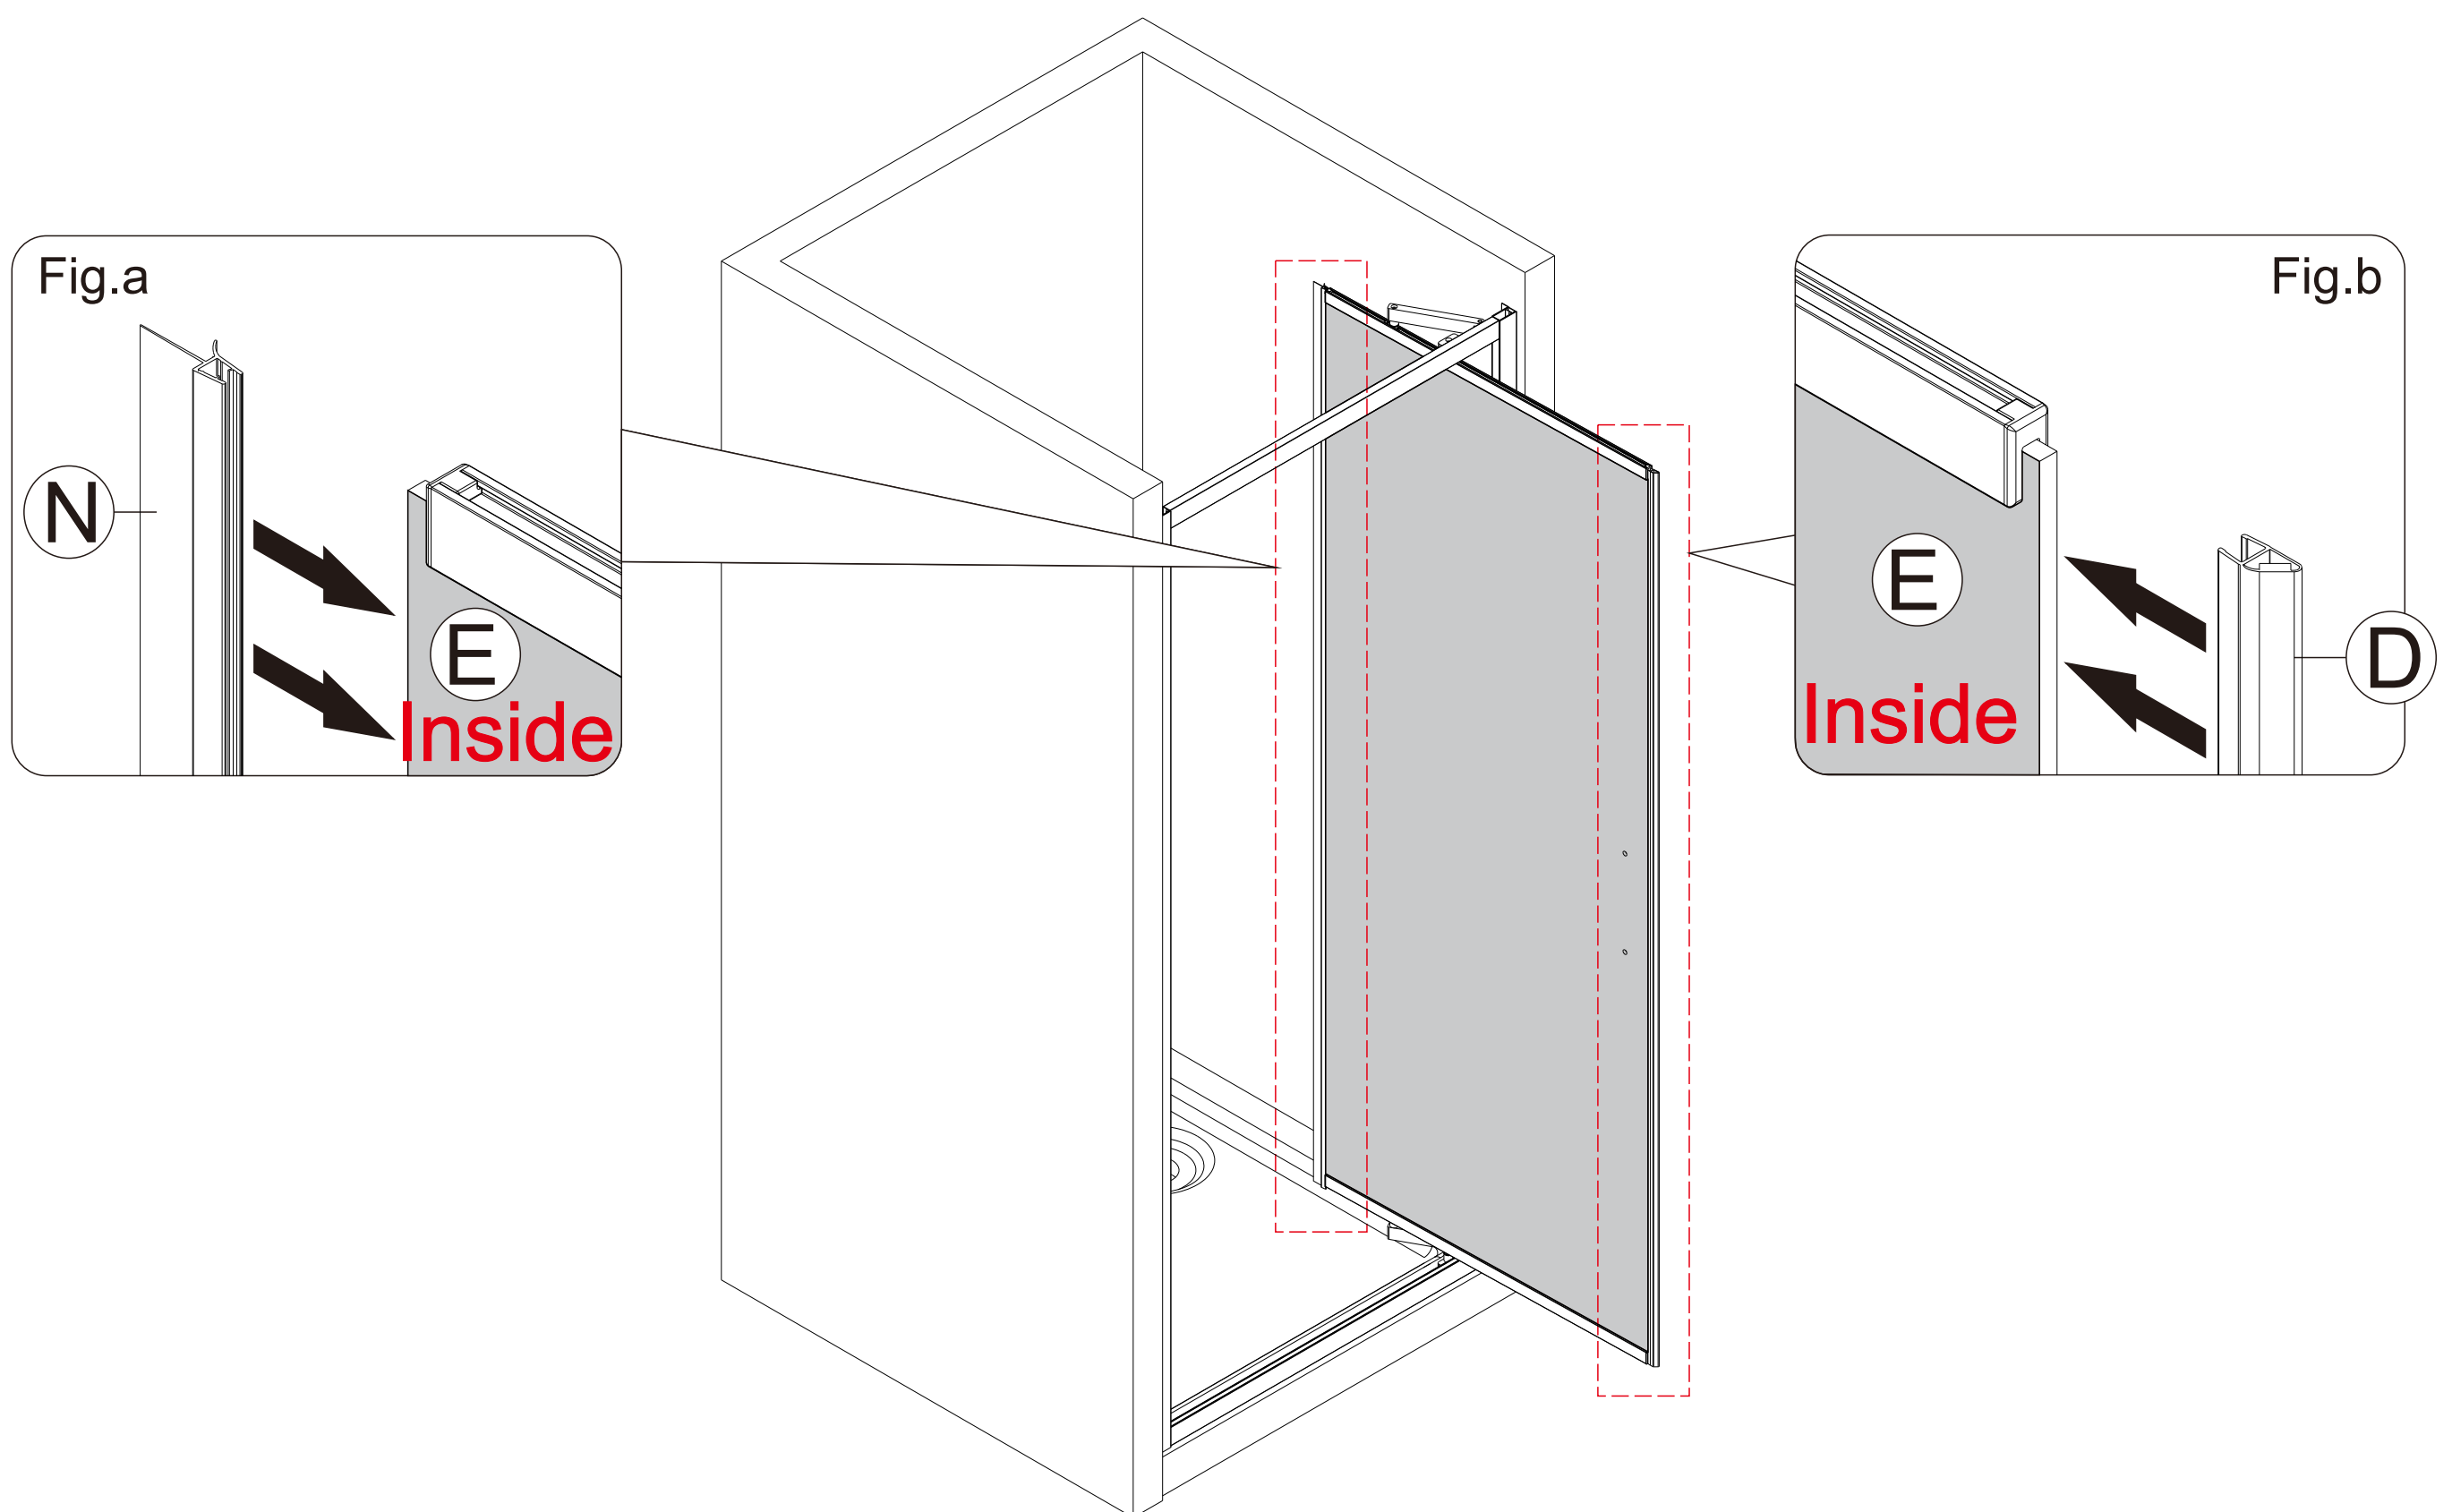


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

12 Install the **Bottom Anti-Water Strip(G&H&I)**

NOTE

1. Install the **Bottom Anti-Water Strip(G&H&I)** on the **Glass Door(G)** as Fig.a .

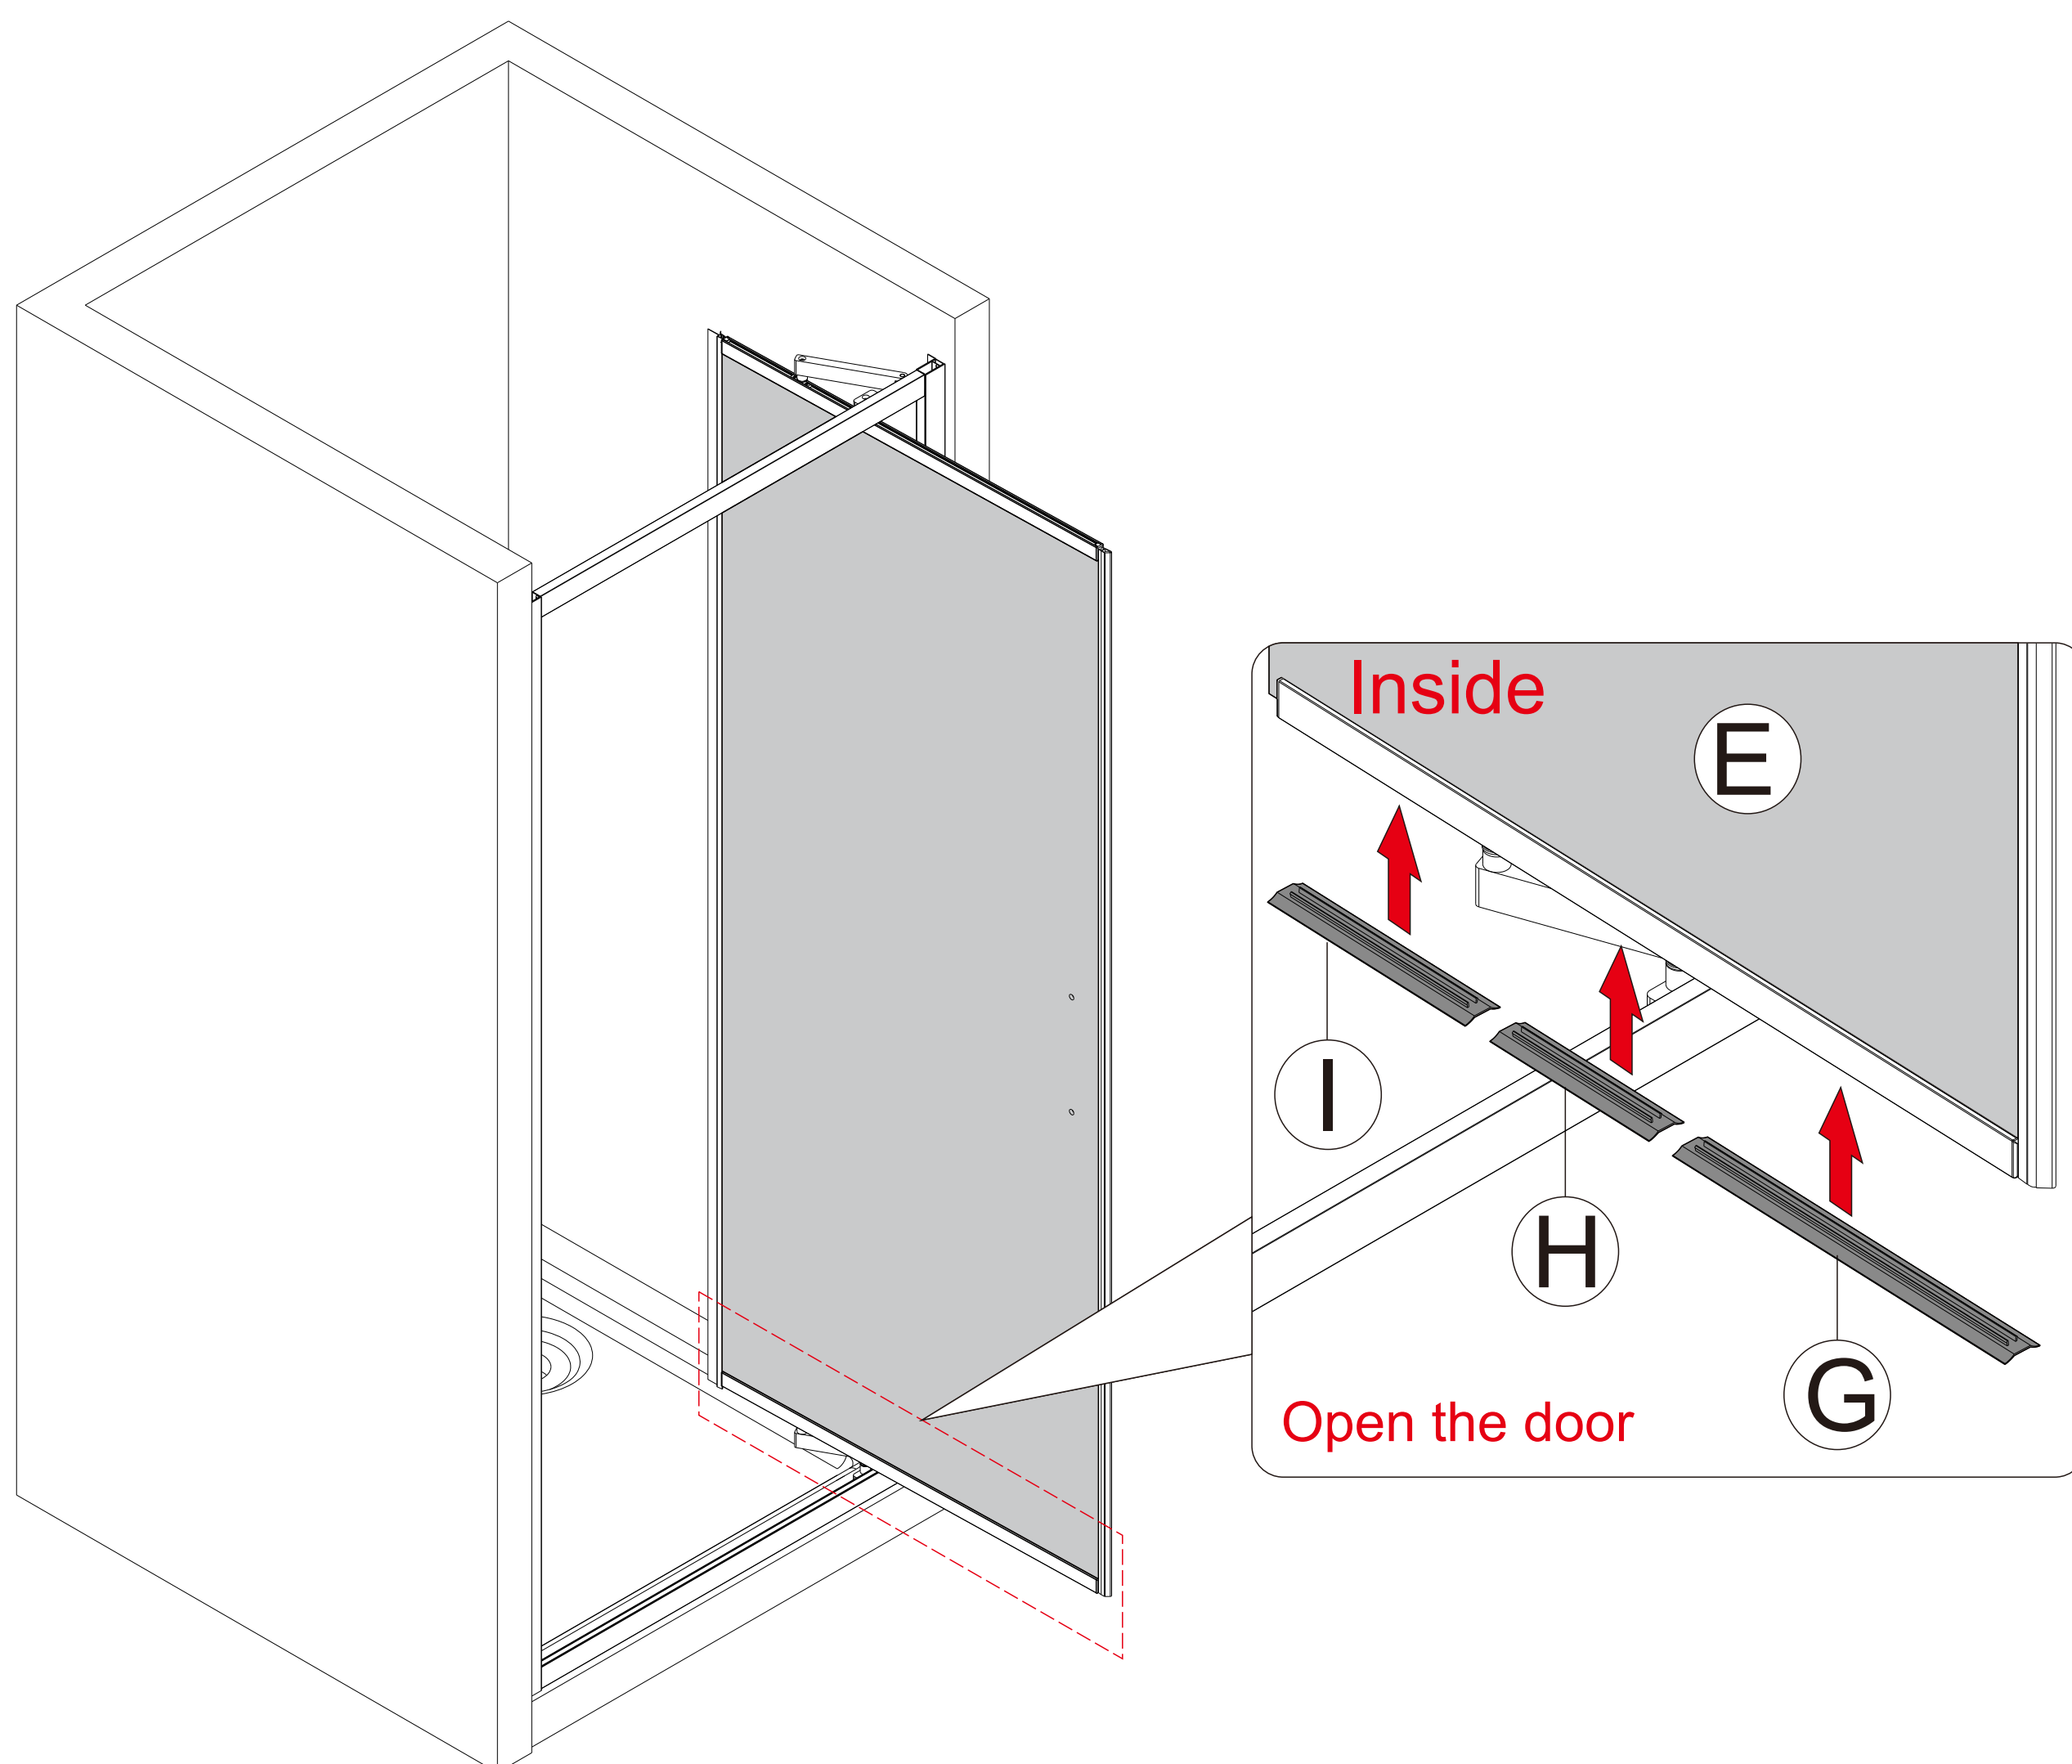


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

13 Install Handle(F)

NOTE

1.Install the **Handle(F)** on the **Glass Door(E)** as Fig.a .

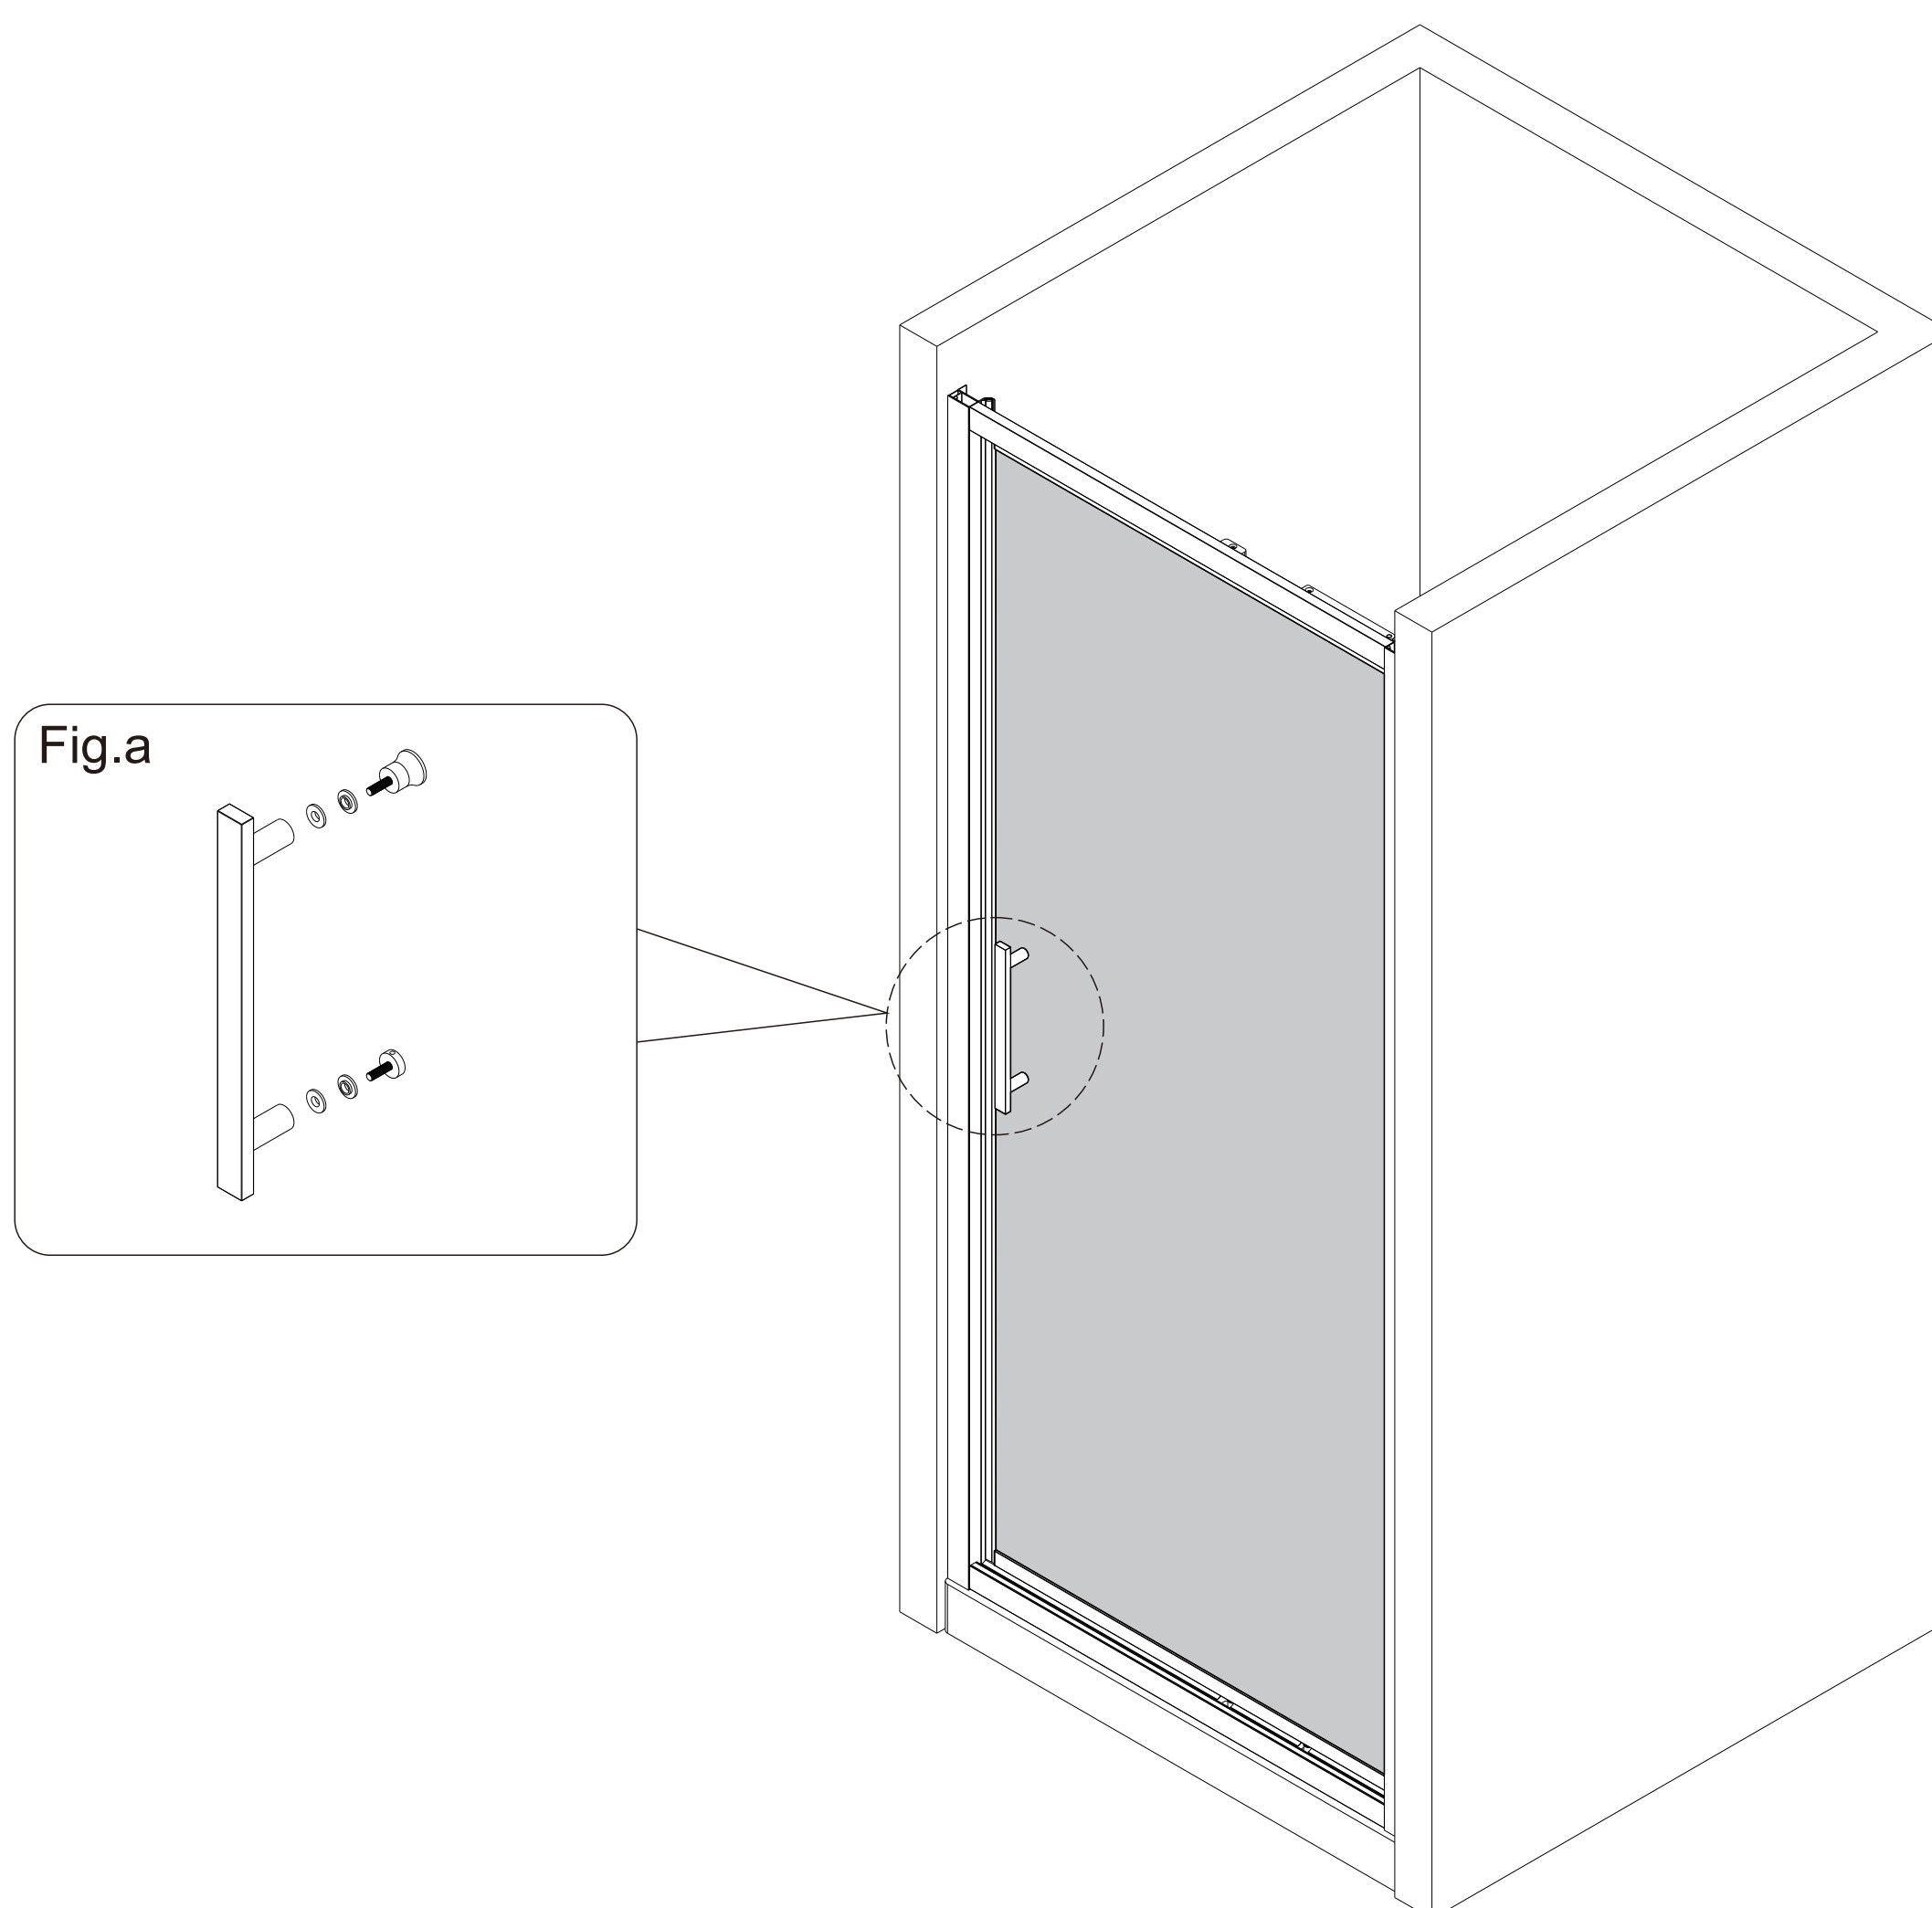


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

14 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the **Wall Jamb(A)** and **Bottom Guide Rail(J)**.

! Allow 24 hours for the silicone to cure before using the shower.


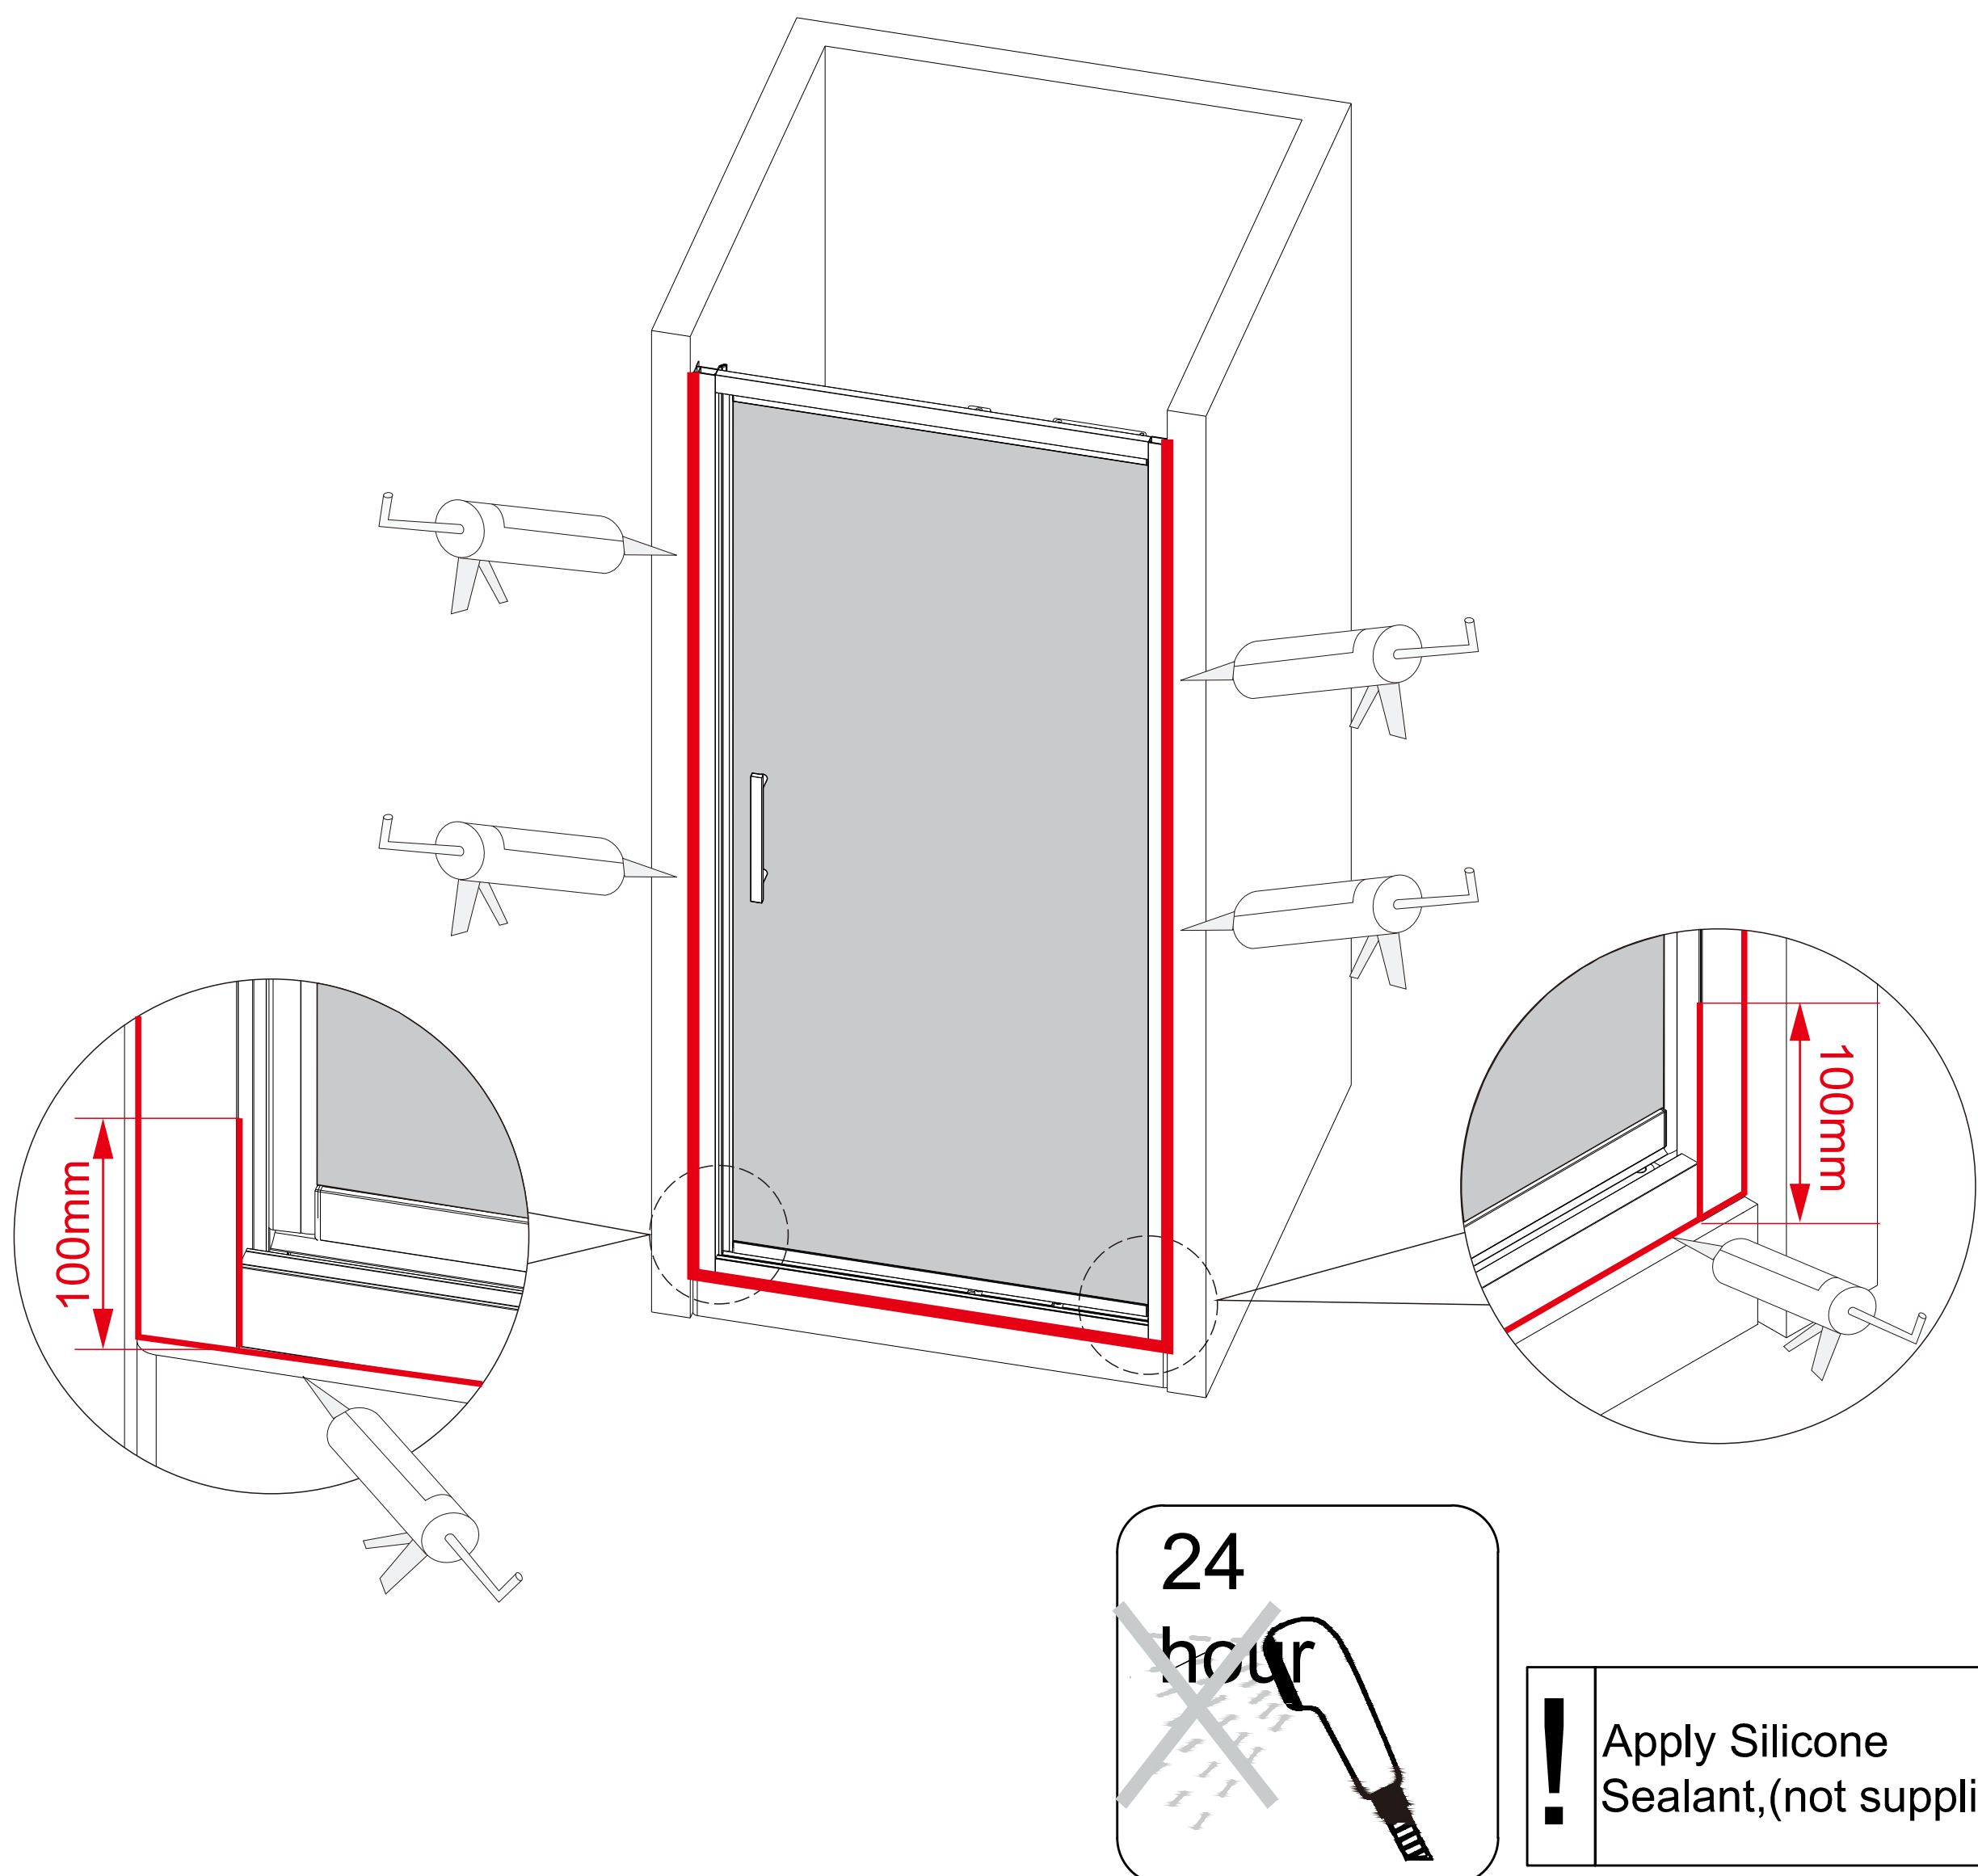


15 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the **Wall Jamb(A)** and **Bottom Guide Rail(J)**.

! Allow 24 hours for the silicone to cure before using the shower.

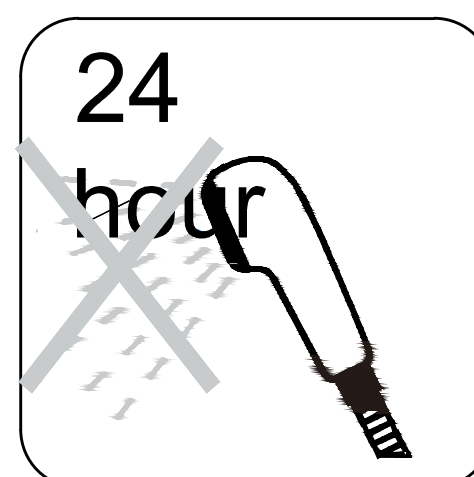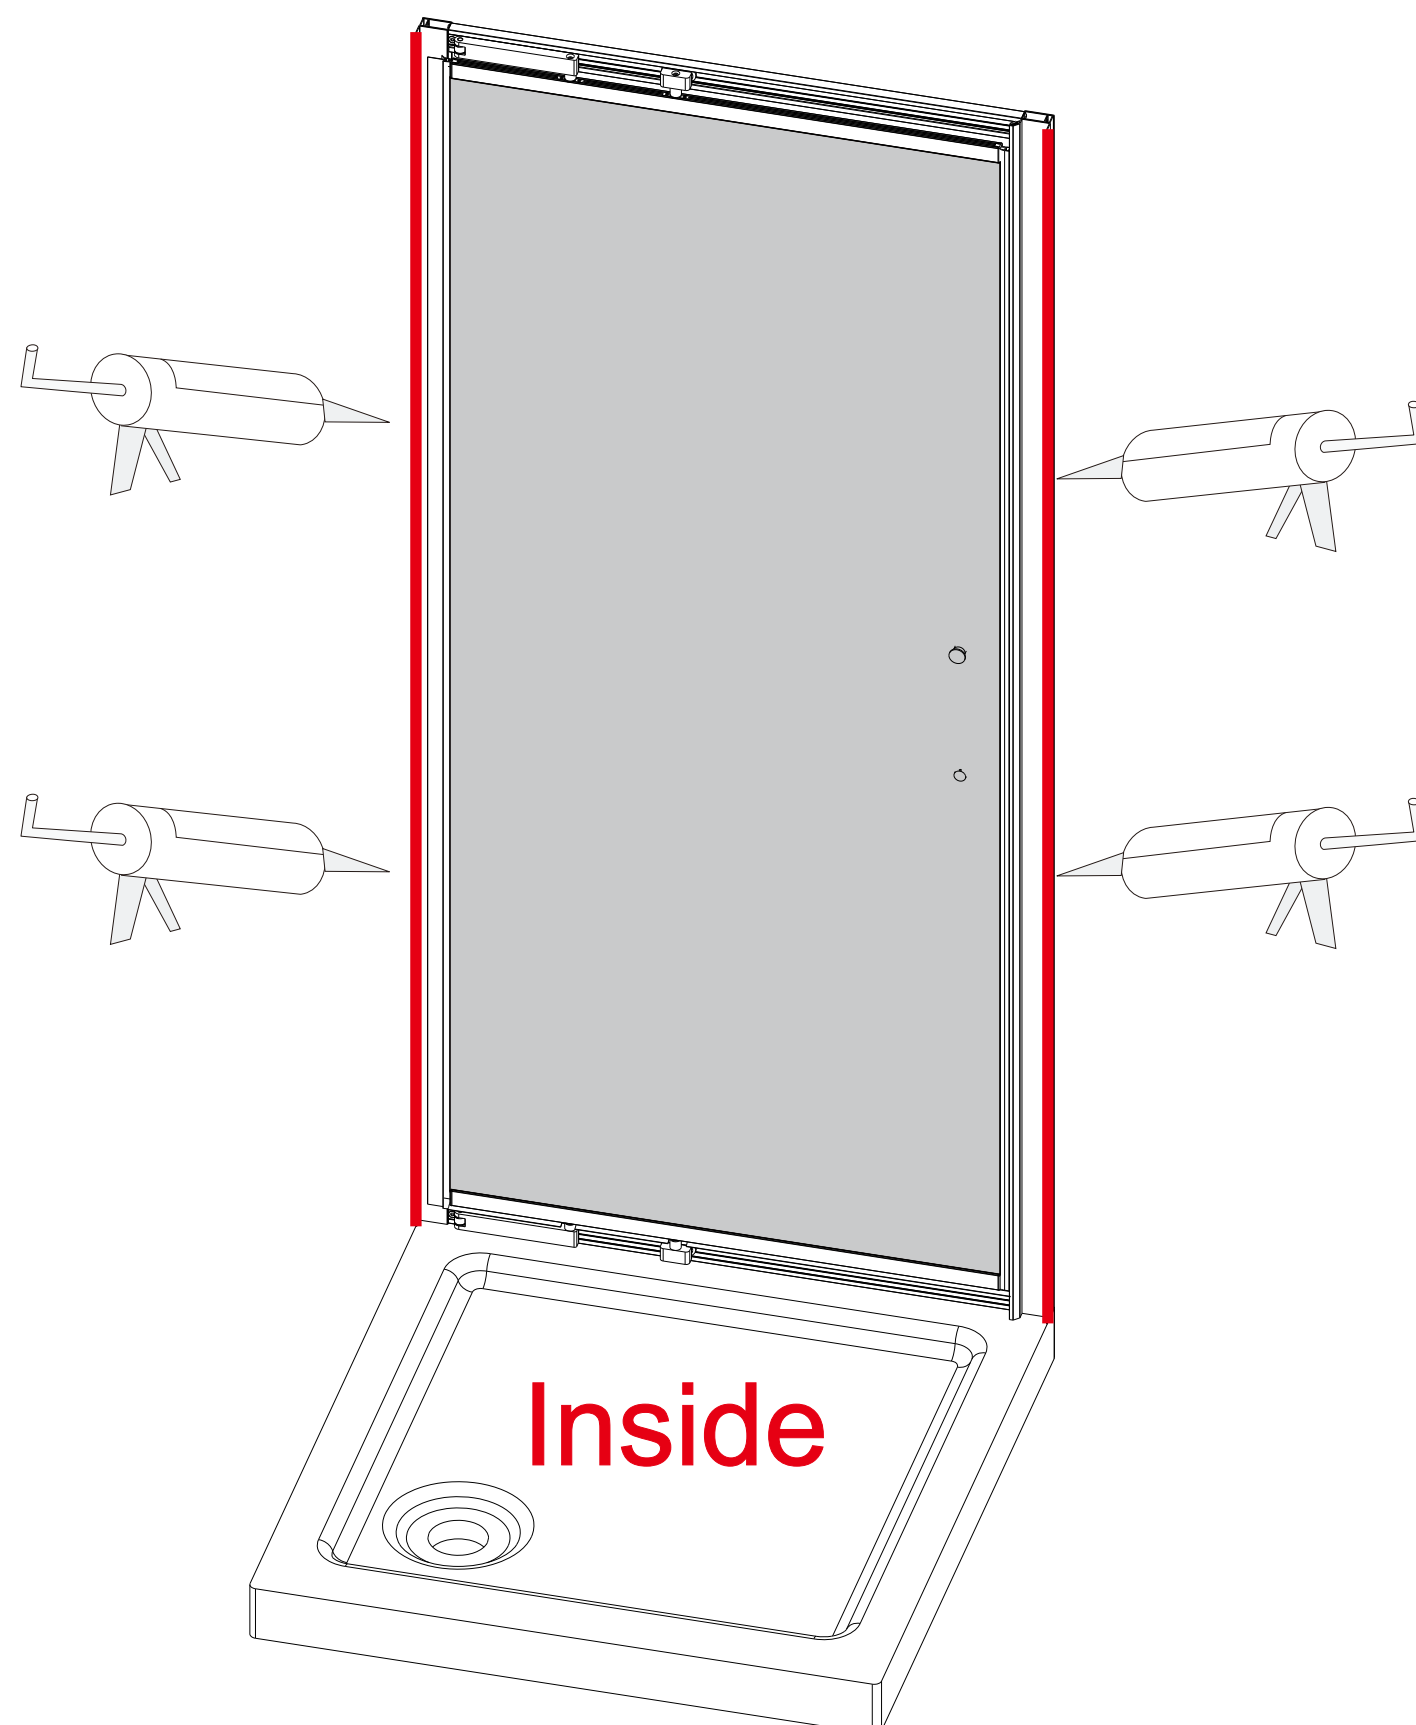

! Apply Silicone Sealant, (not supplied).