


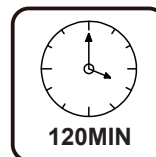
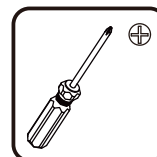


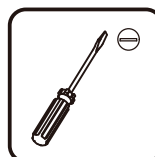


Please note: Items cannot be returned once assembled.

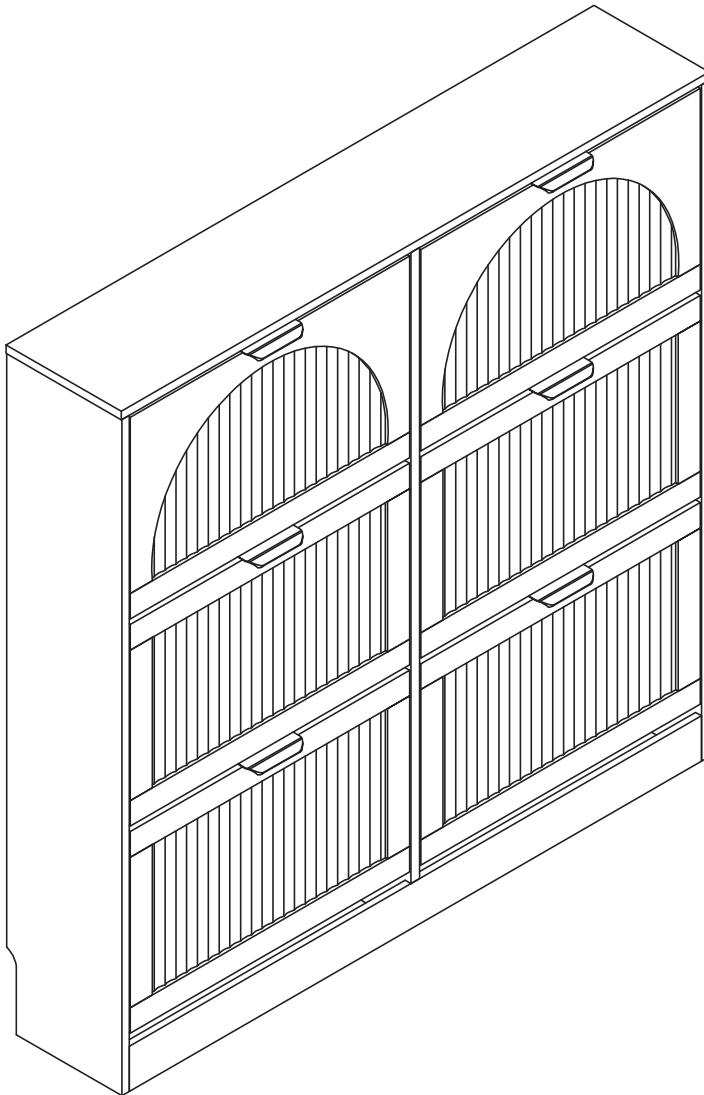


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

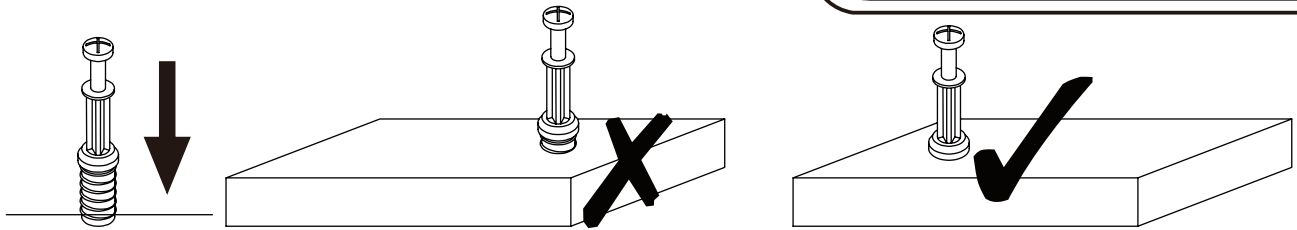


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

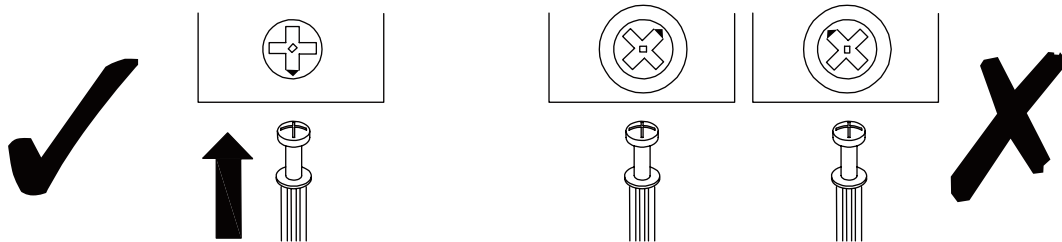











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

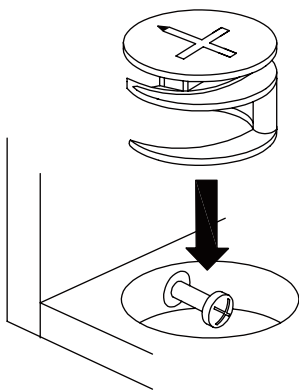





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.






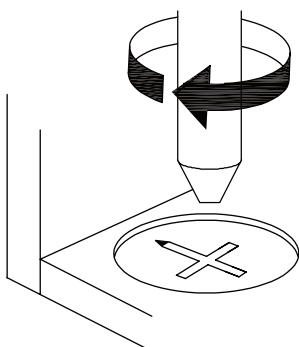




EN_Turn cam lock clockwise to tighten.

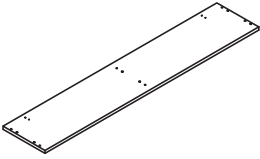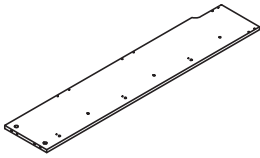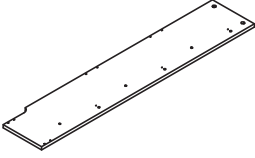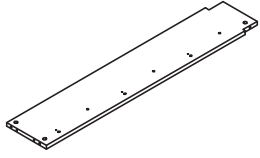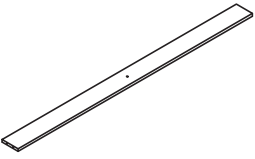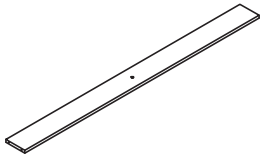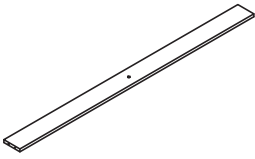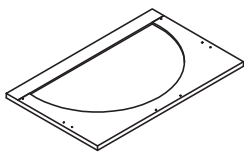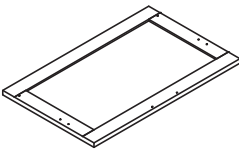NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x4	
⑩		x12	


NO.	PARTS	QTY	SPARE
⑪		x6	
	 Hardware Kit	x1	

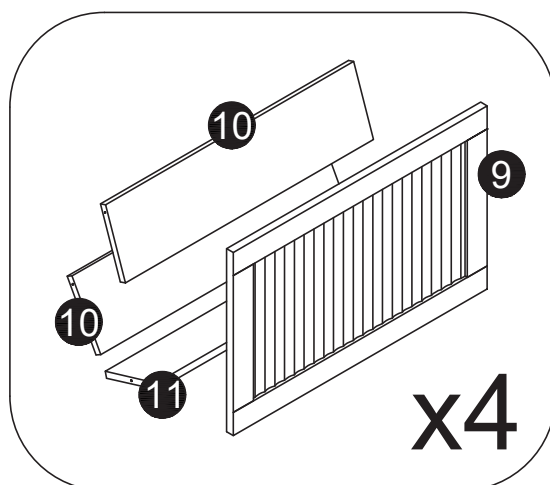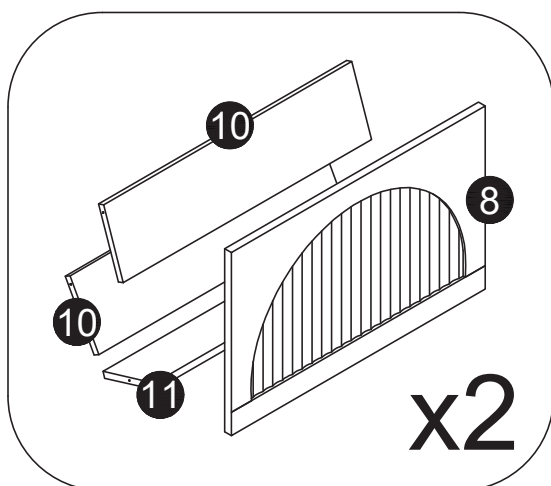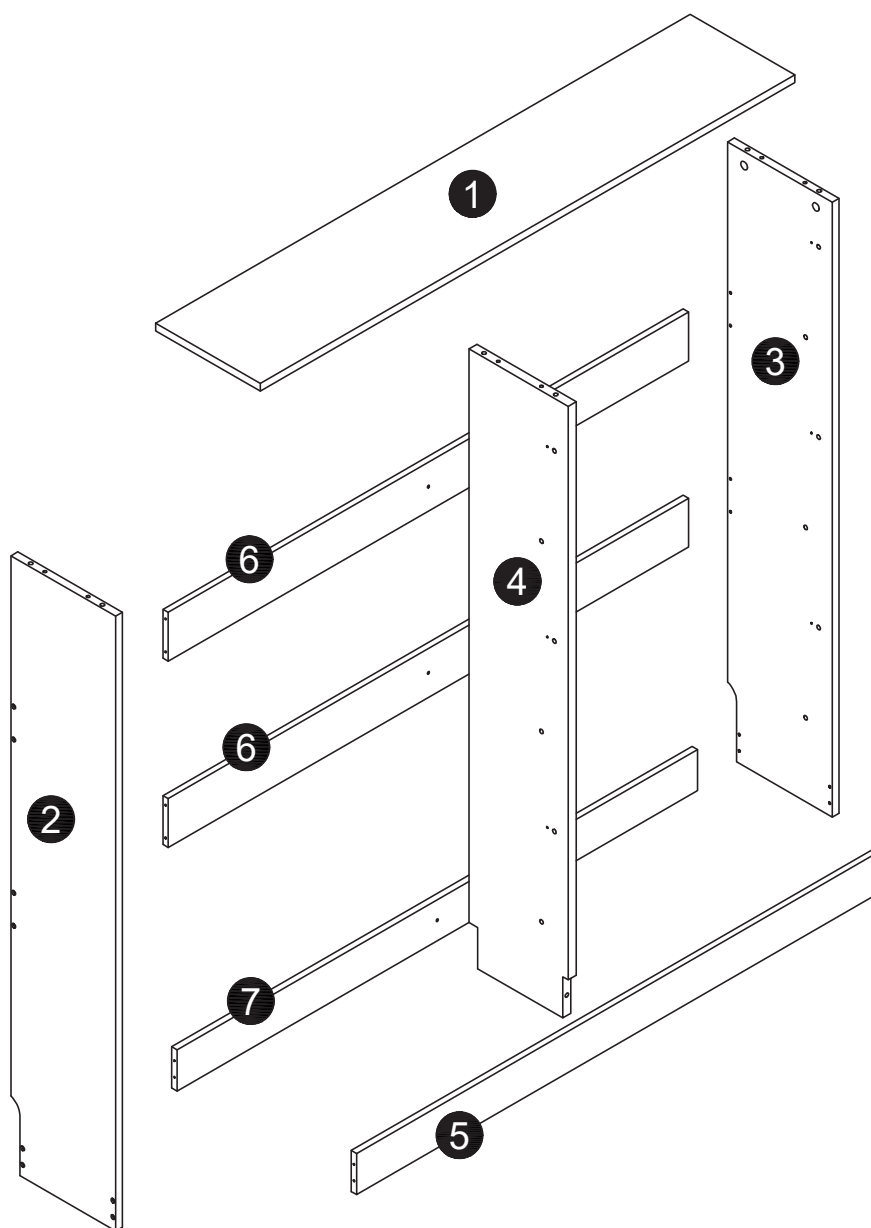

A x7 Ø6x35mm 	B x7 Ø15x10mm 	C x6 Ø6x30mm 	D x21 Ø4x35mm +2(spare) 	E x96 Ø3.5x12mm +5(spare) 	F x12 +1(spare) 
G x12 +1(spare) 	H x6 +1(spare) 	I x2 	J x16 +2(spare) 	K x6 	L x6 
M x2 M-1 M-2  	N x6 +1(spare) 	R x6 			

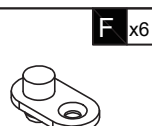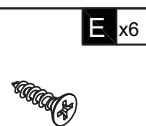


01

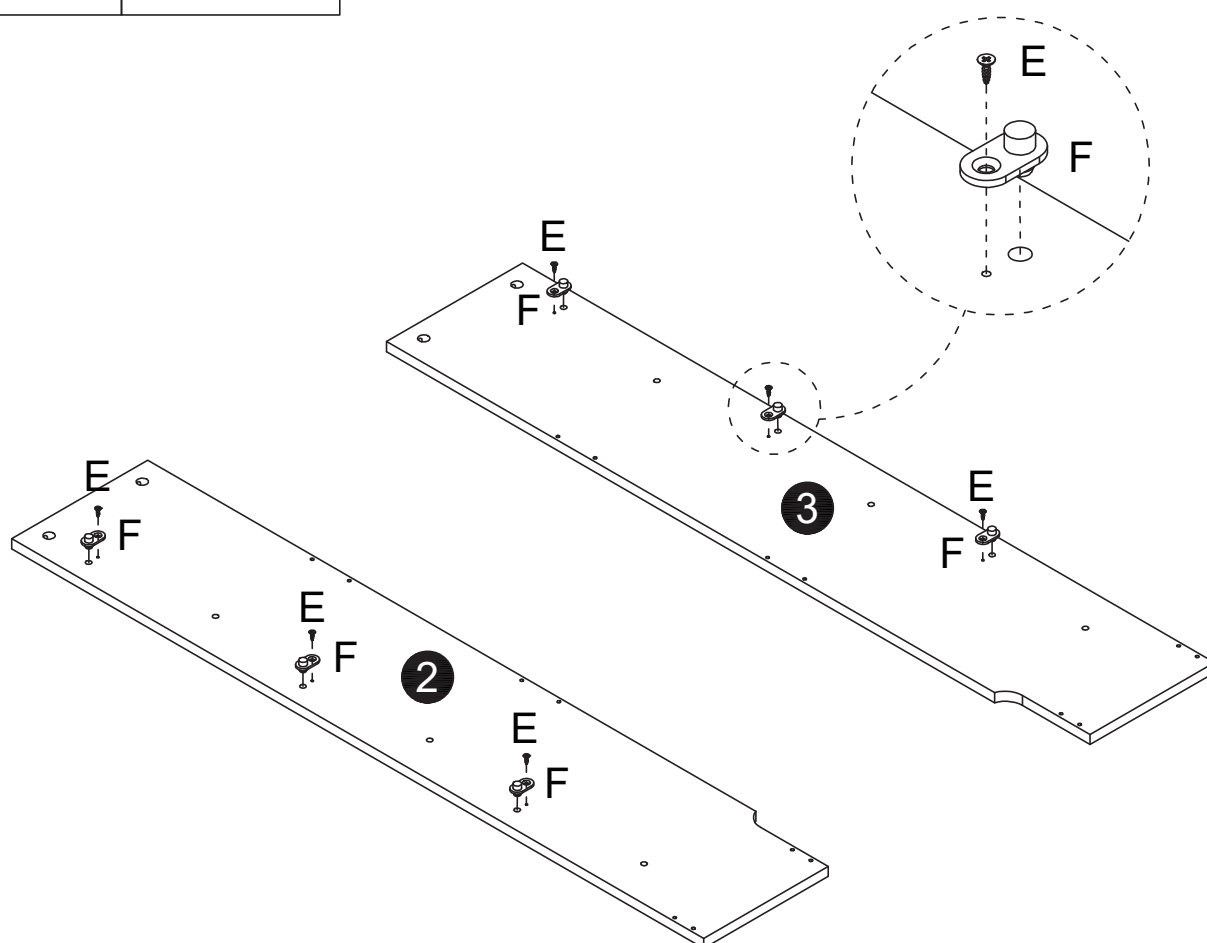



E x6



F x6

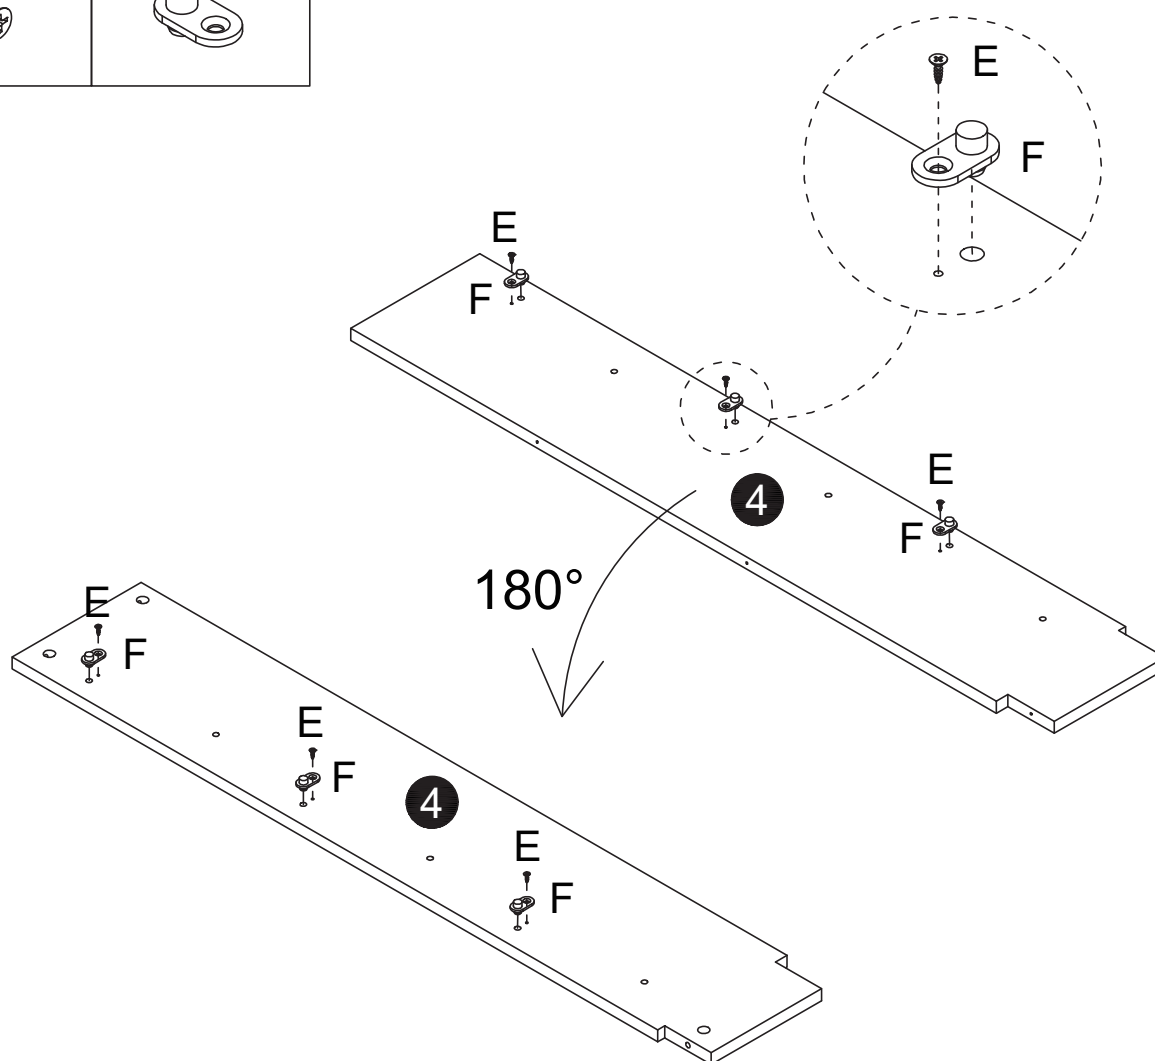


A x1

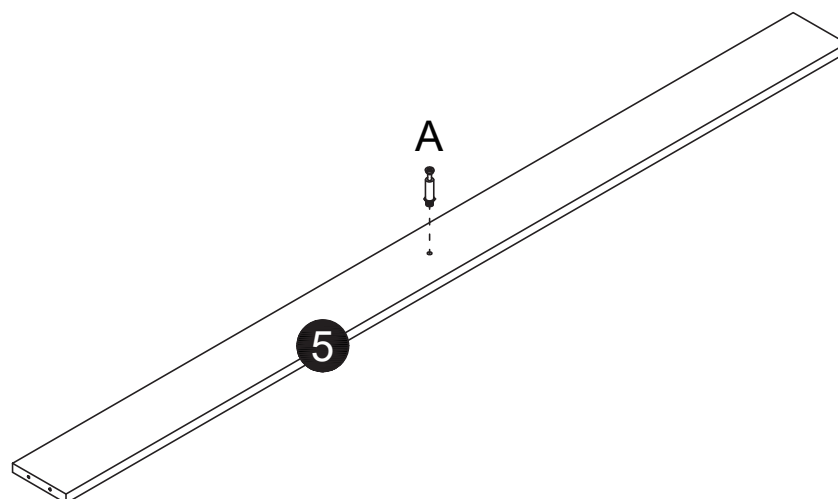



B x1

04

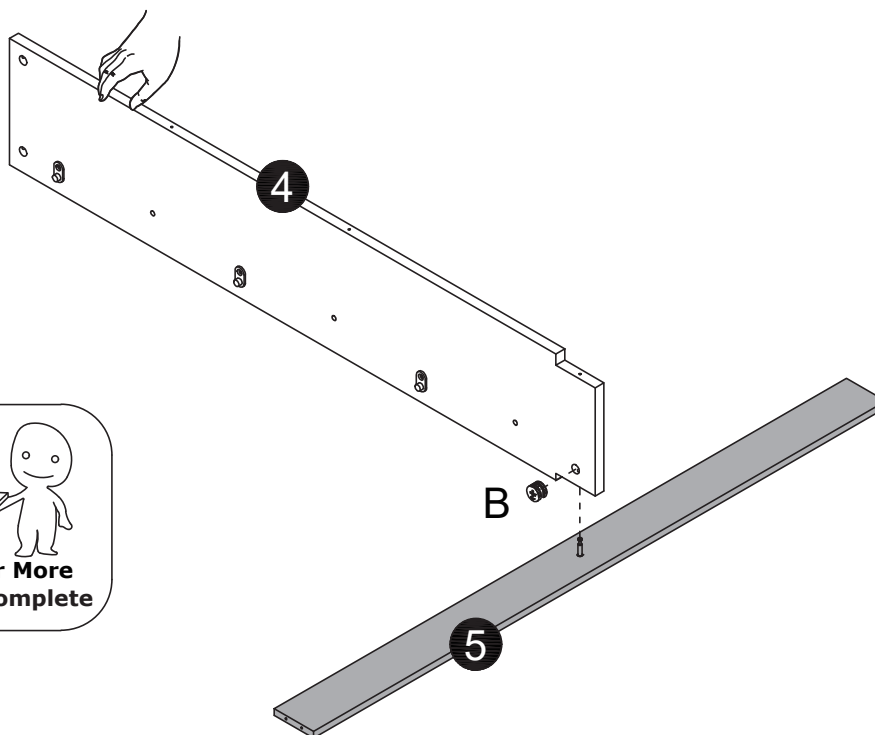


D x2


05

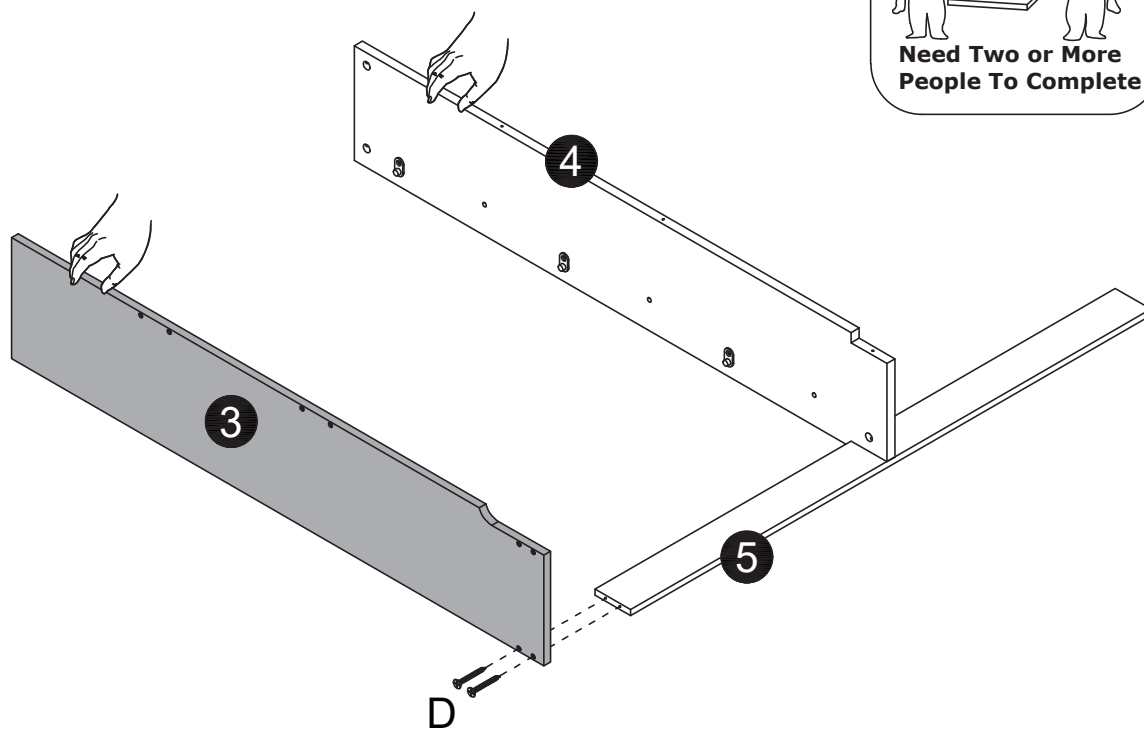


D x9




06

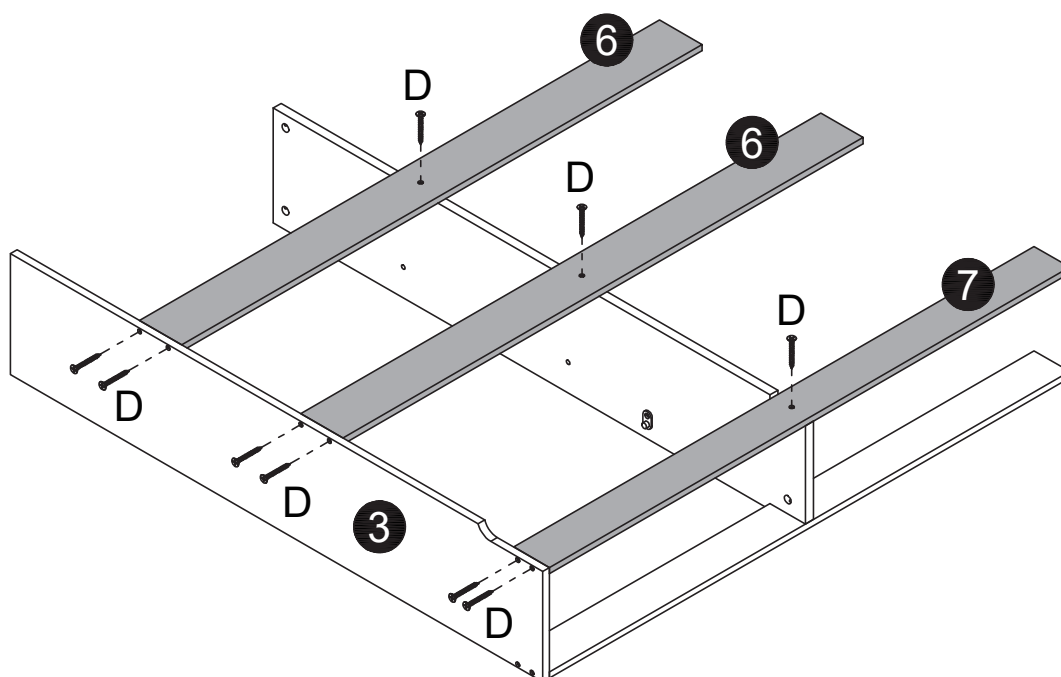


D x8




07

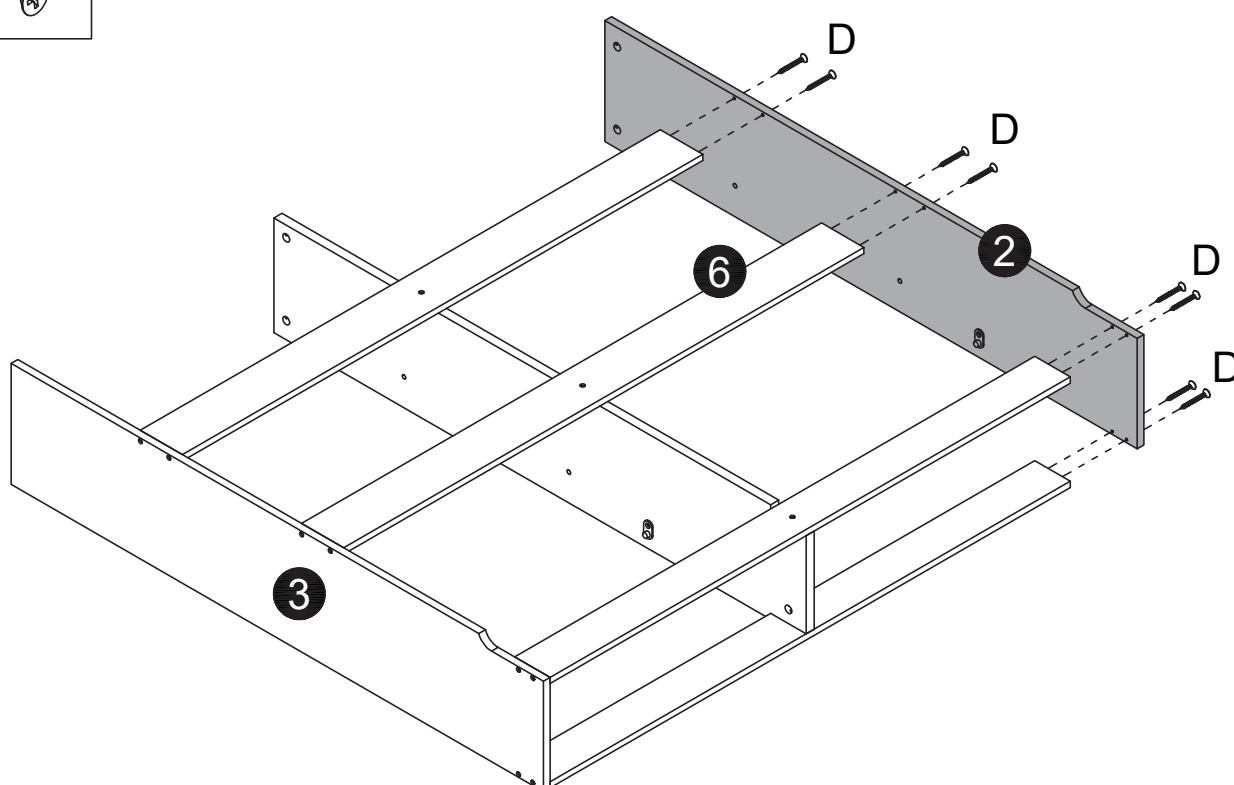

A x6




M x2



M-1


M-2

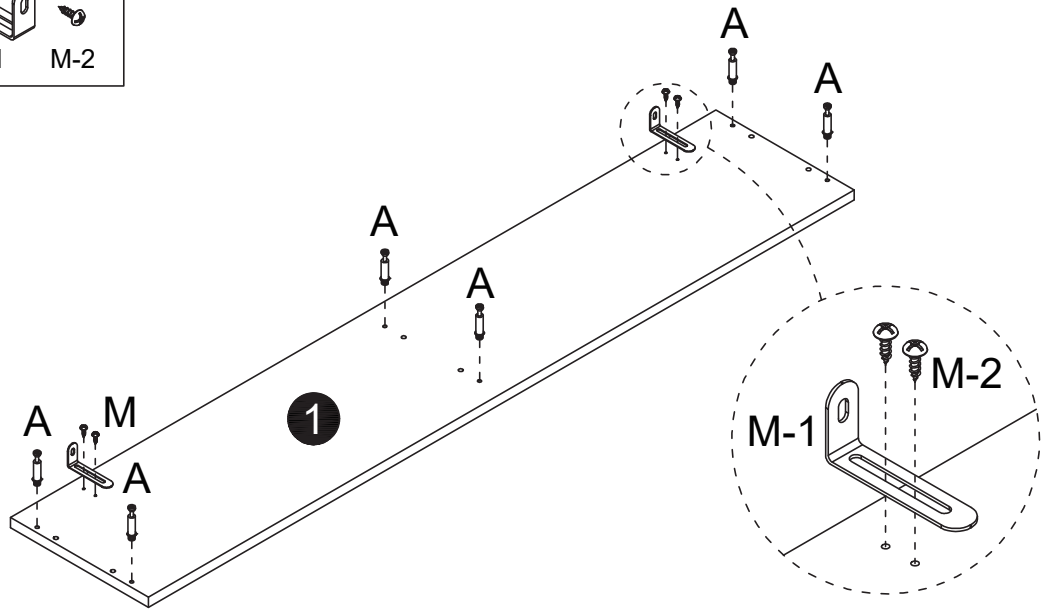


B x6




C x6

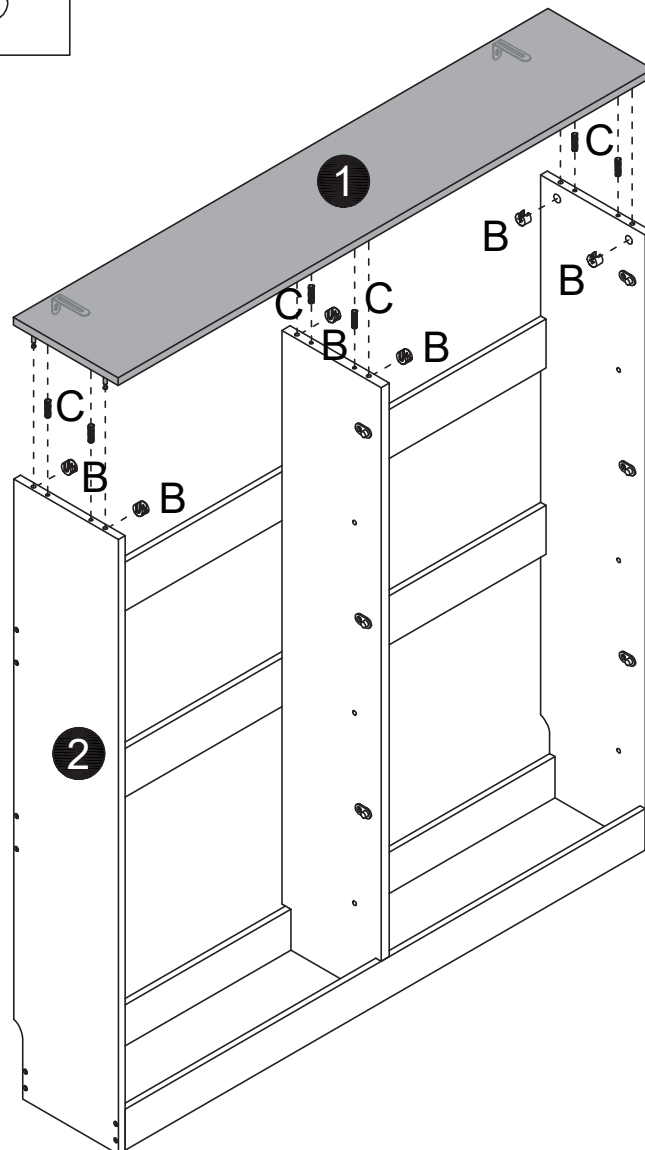


D x2



I x2




WALL

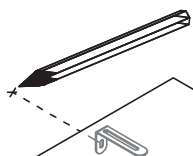

(1)x2

First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.


WALL

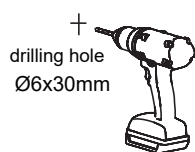

(2)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

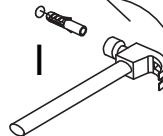

(3)x2


Then, put the expansion bolt into the hole



WALL

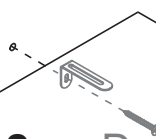

(4)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

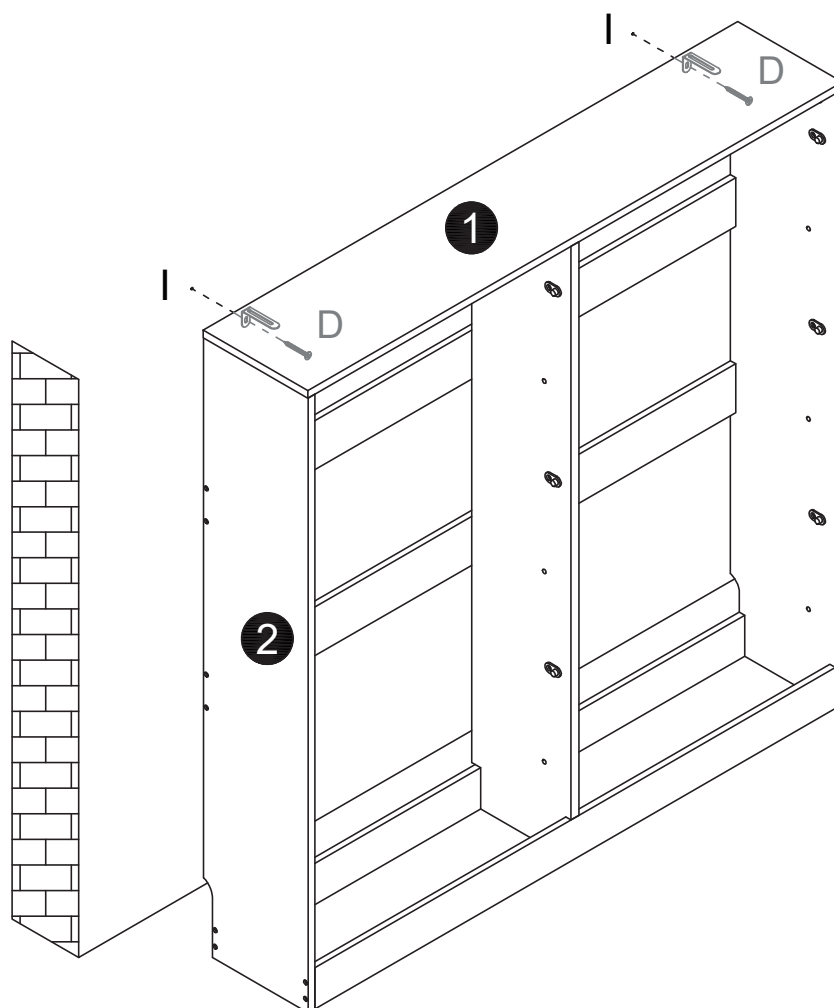




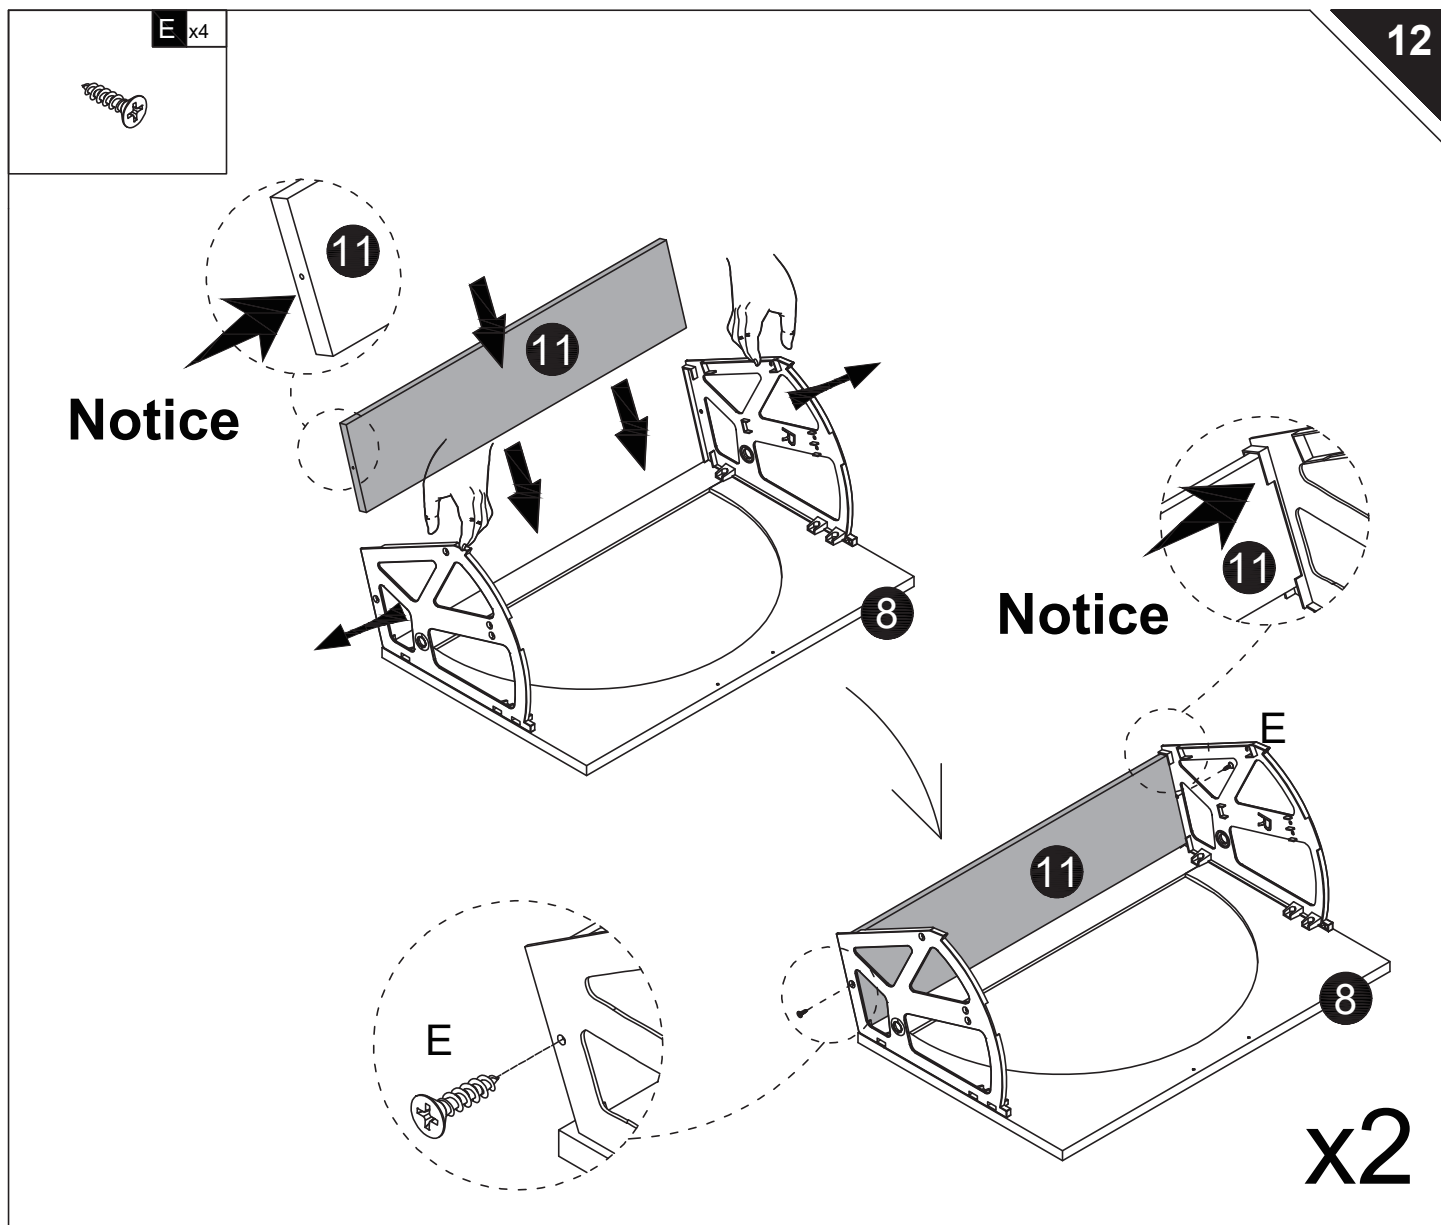
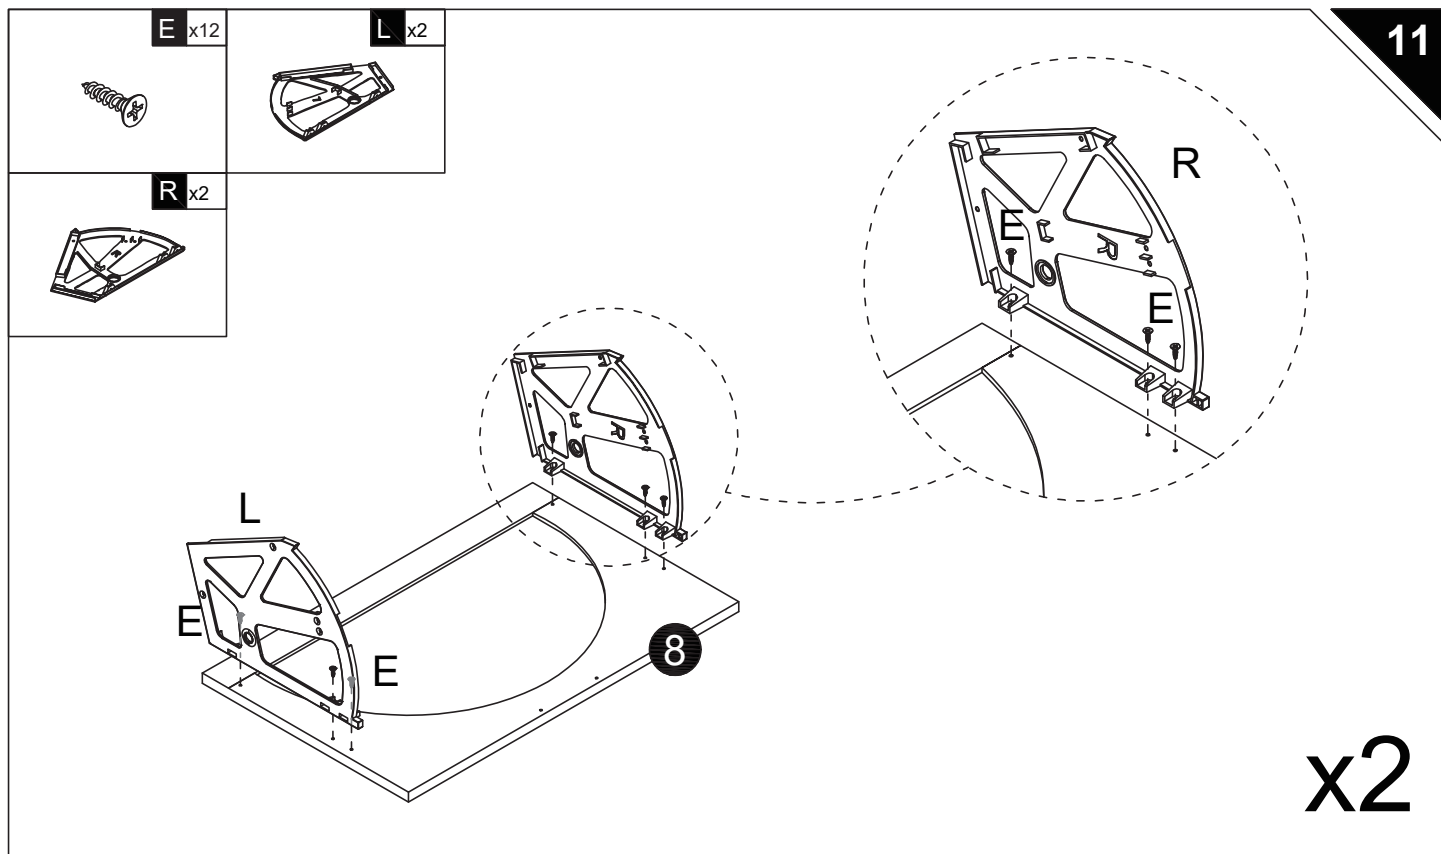


E x4

13



Notice

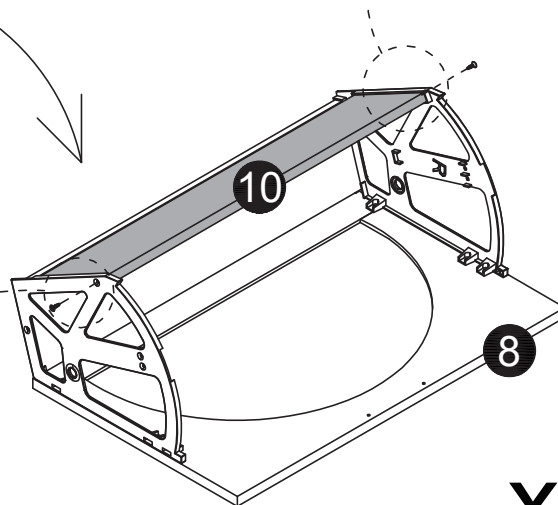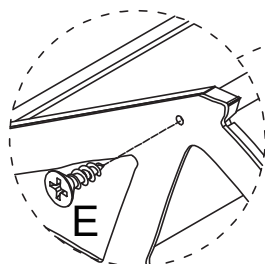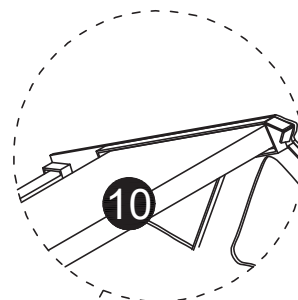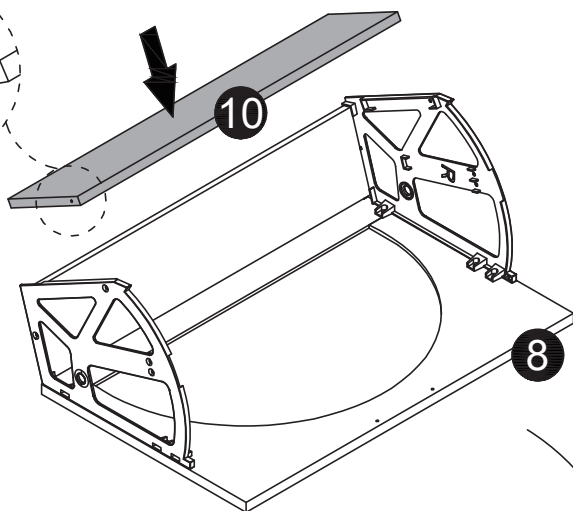
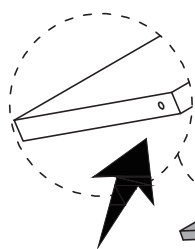


x2



E x4

K x2

14

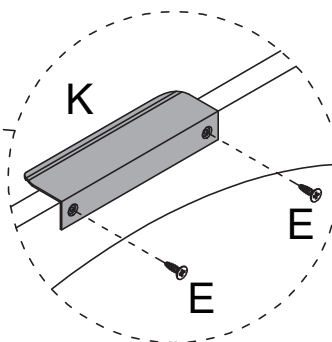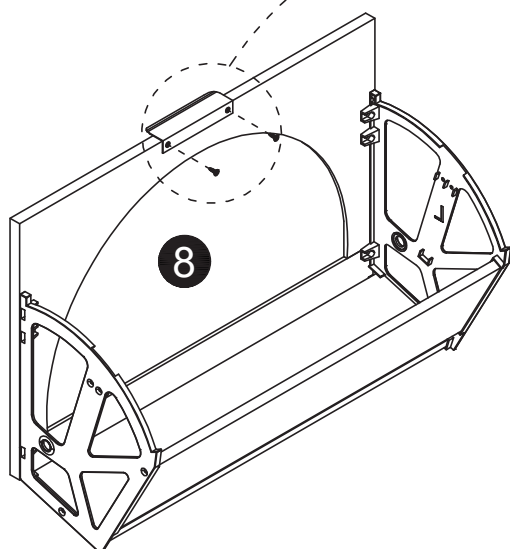

x2



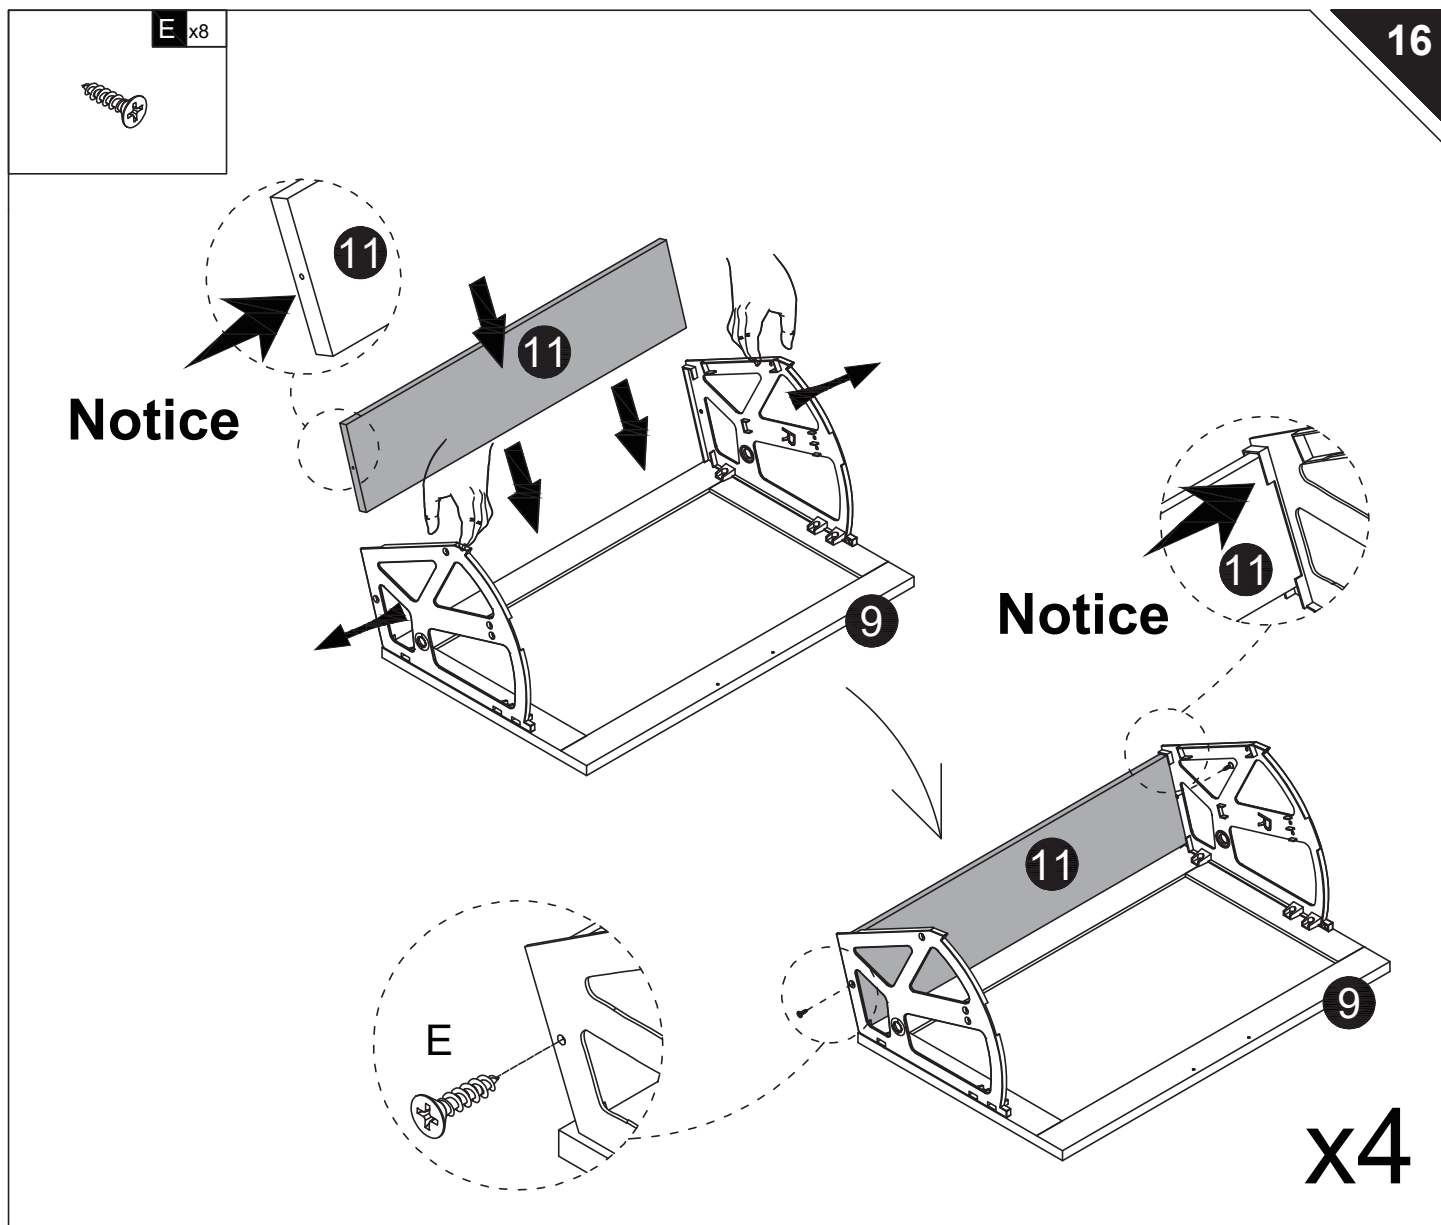
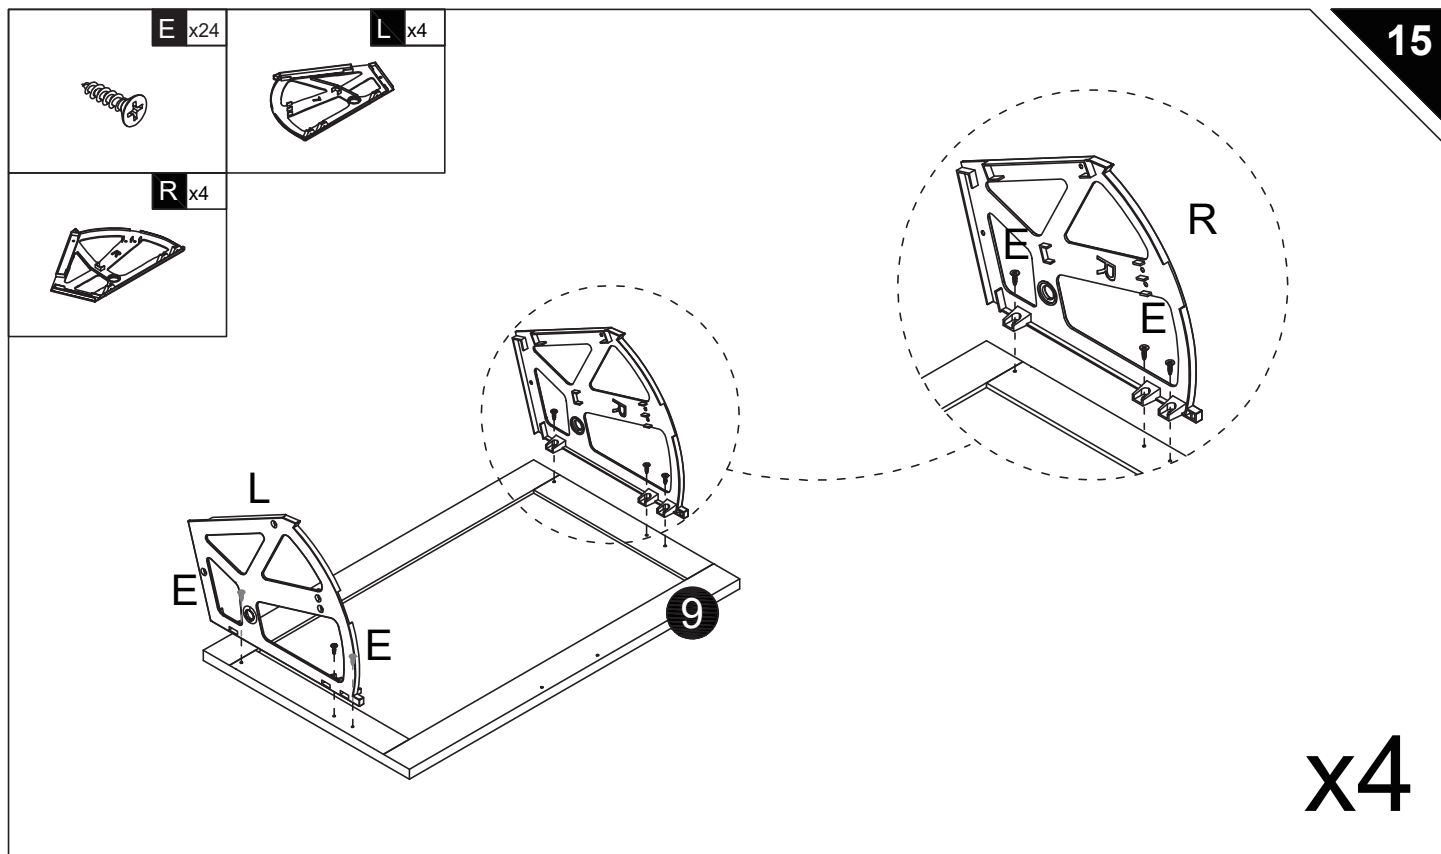


E x8

17



Notice

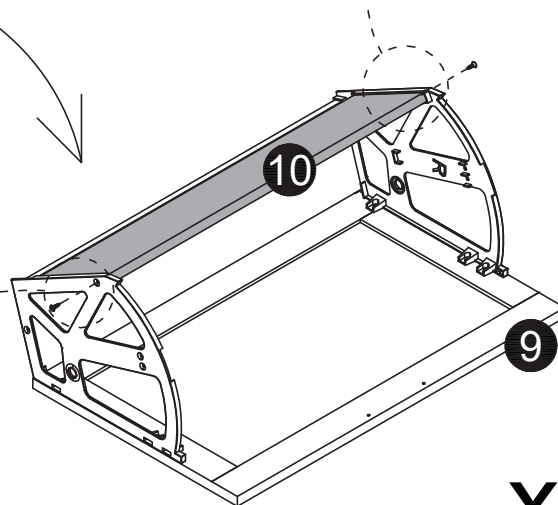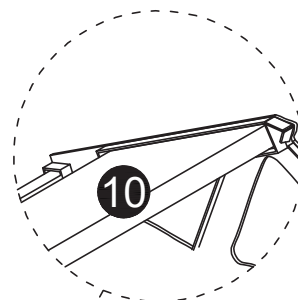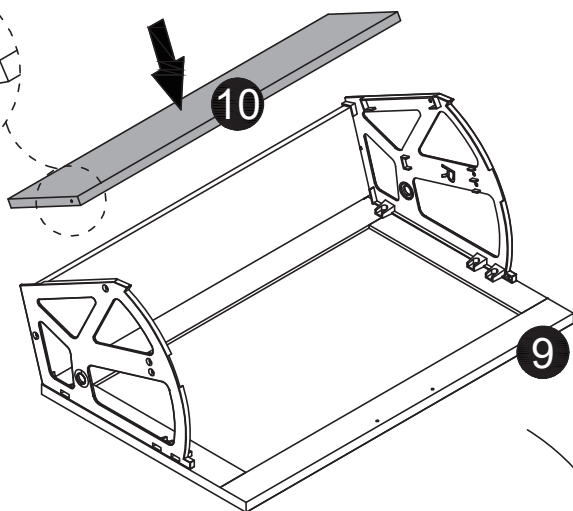
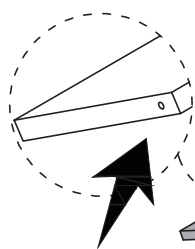


x4

E x8

K x4

18

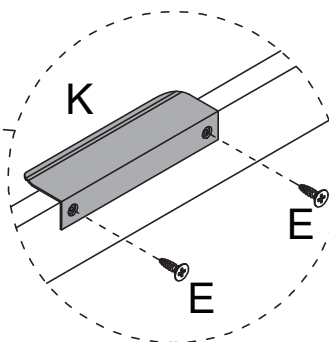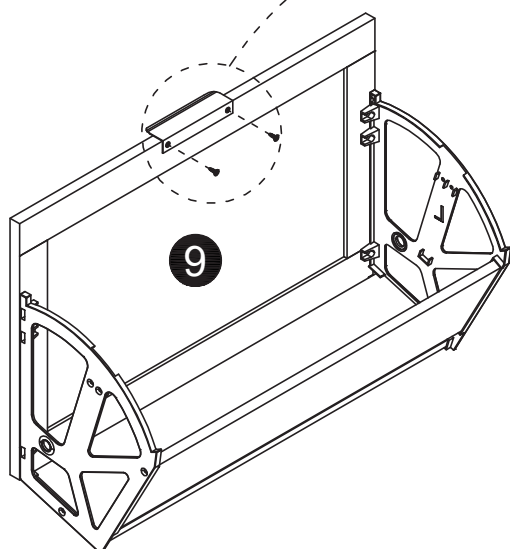

x4

G x6



H x3







N x3






Notice 8


Note: When installing H、N, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

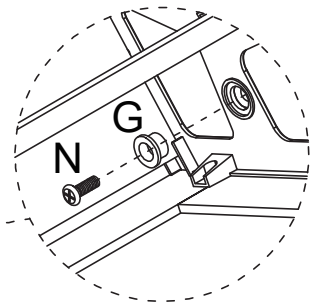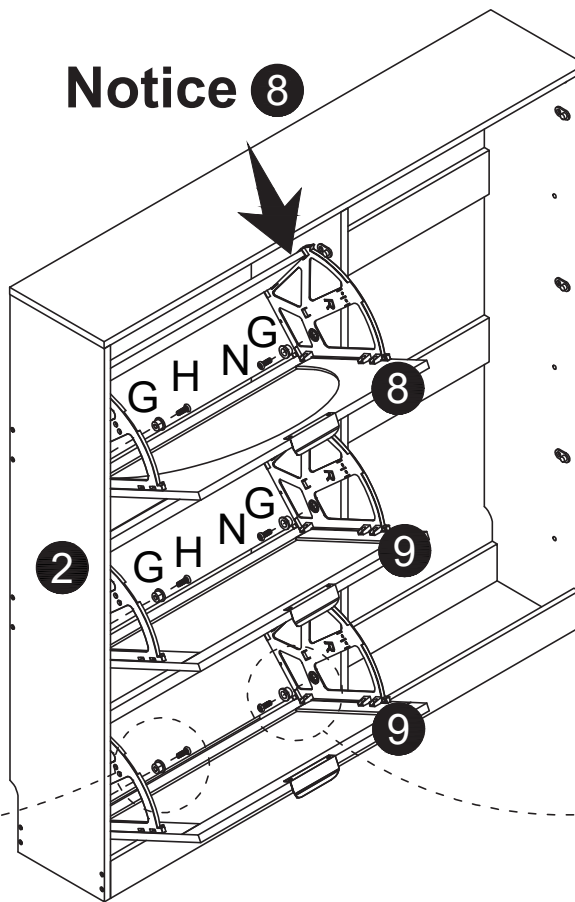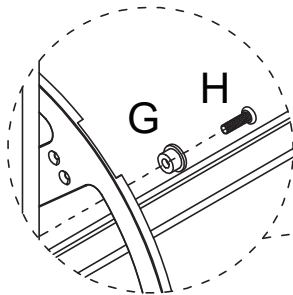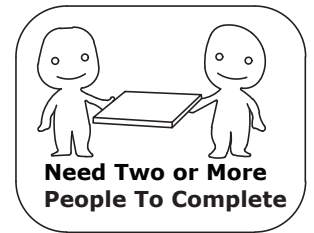

E x6

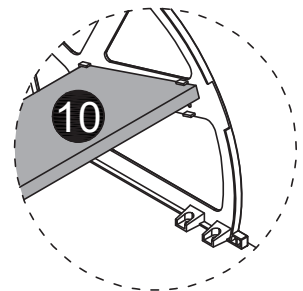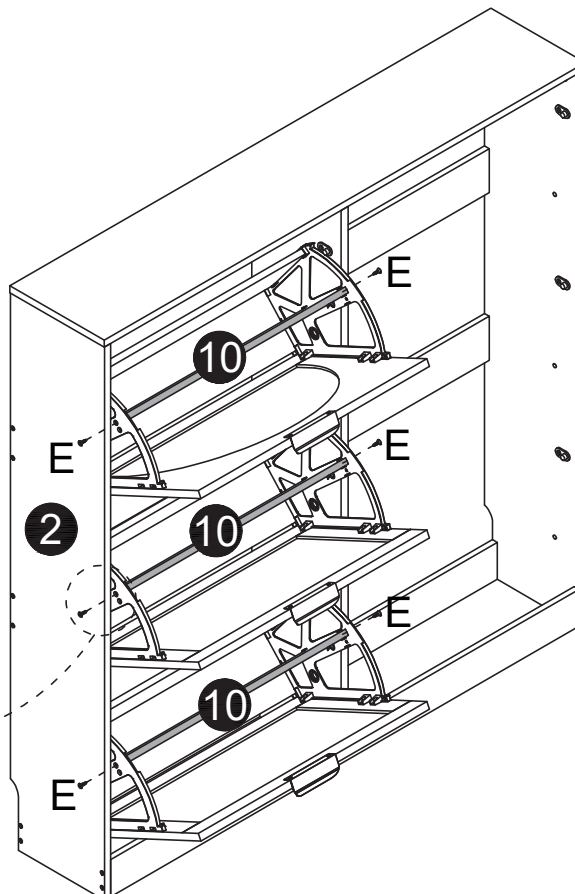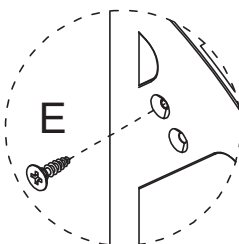

OR

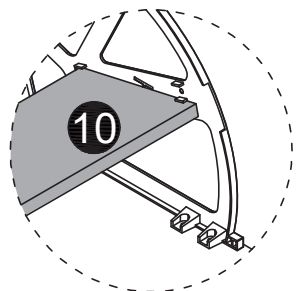




G x6

H x3



N x3

Note: When installing H、N, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

← **Notice 8**

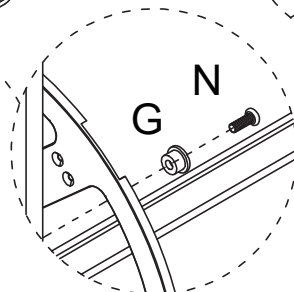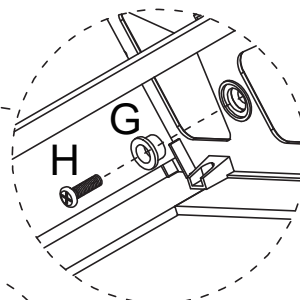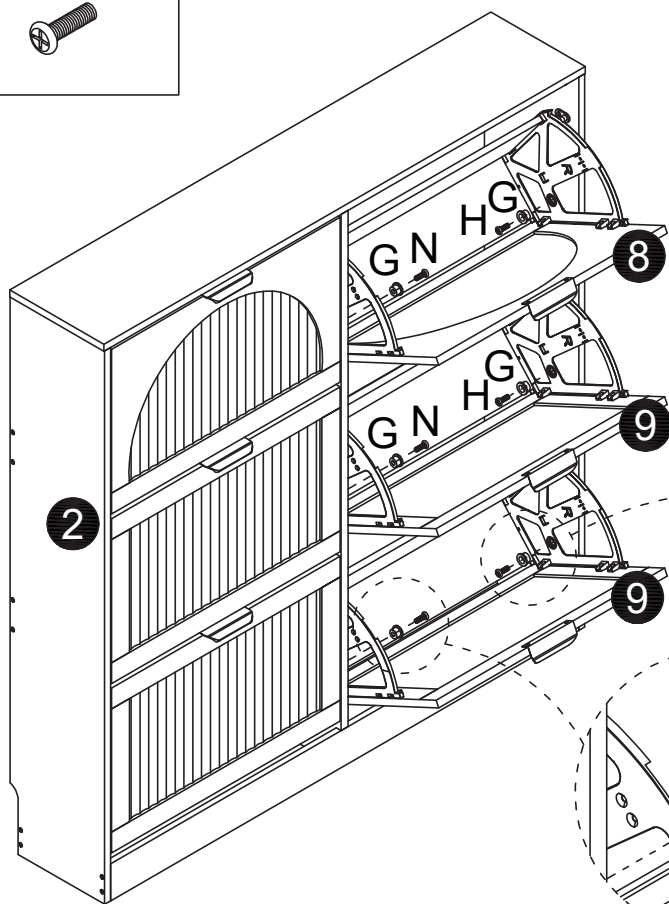

E x6

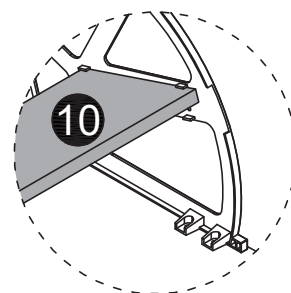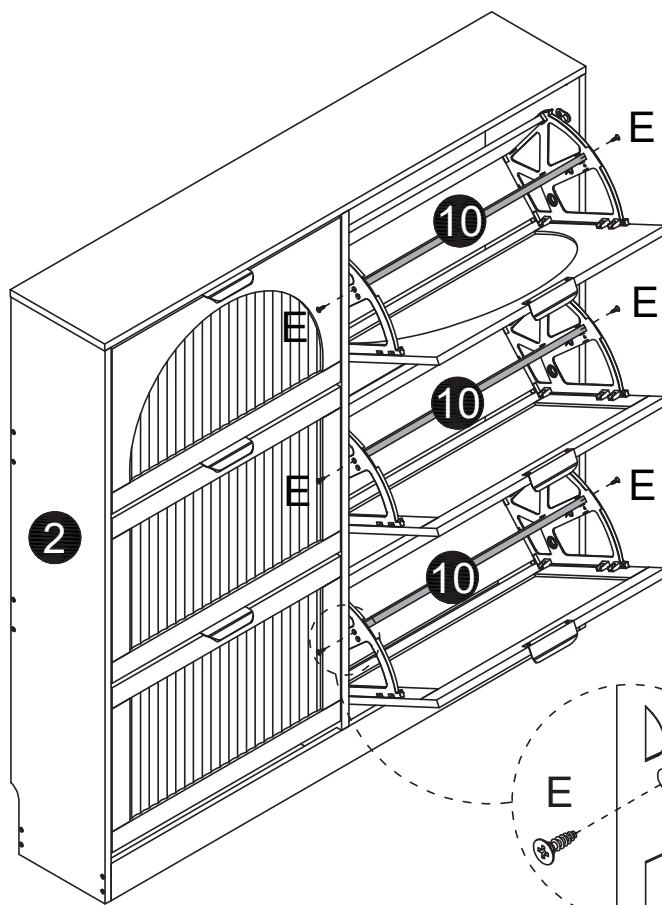

OR

