



SE-07.10A

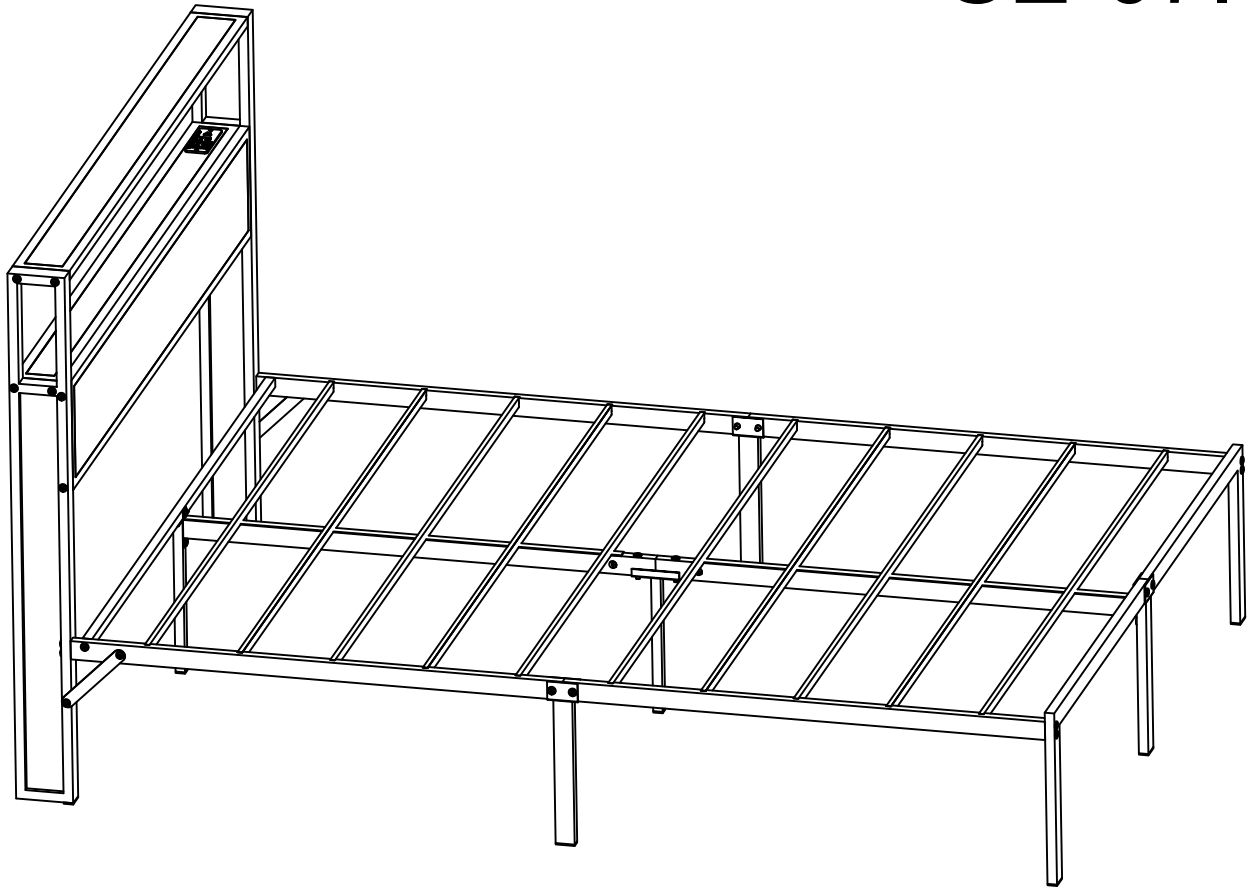

Model: T3963P483788

Please Scan the QR code to watch the tutorial video




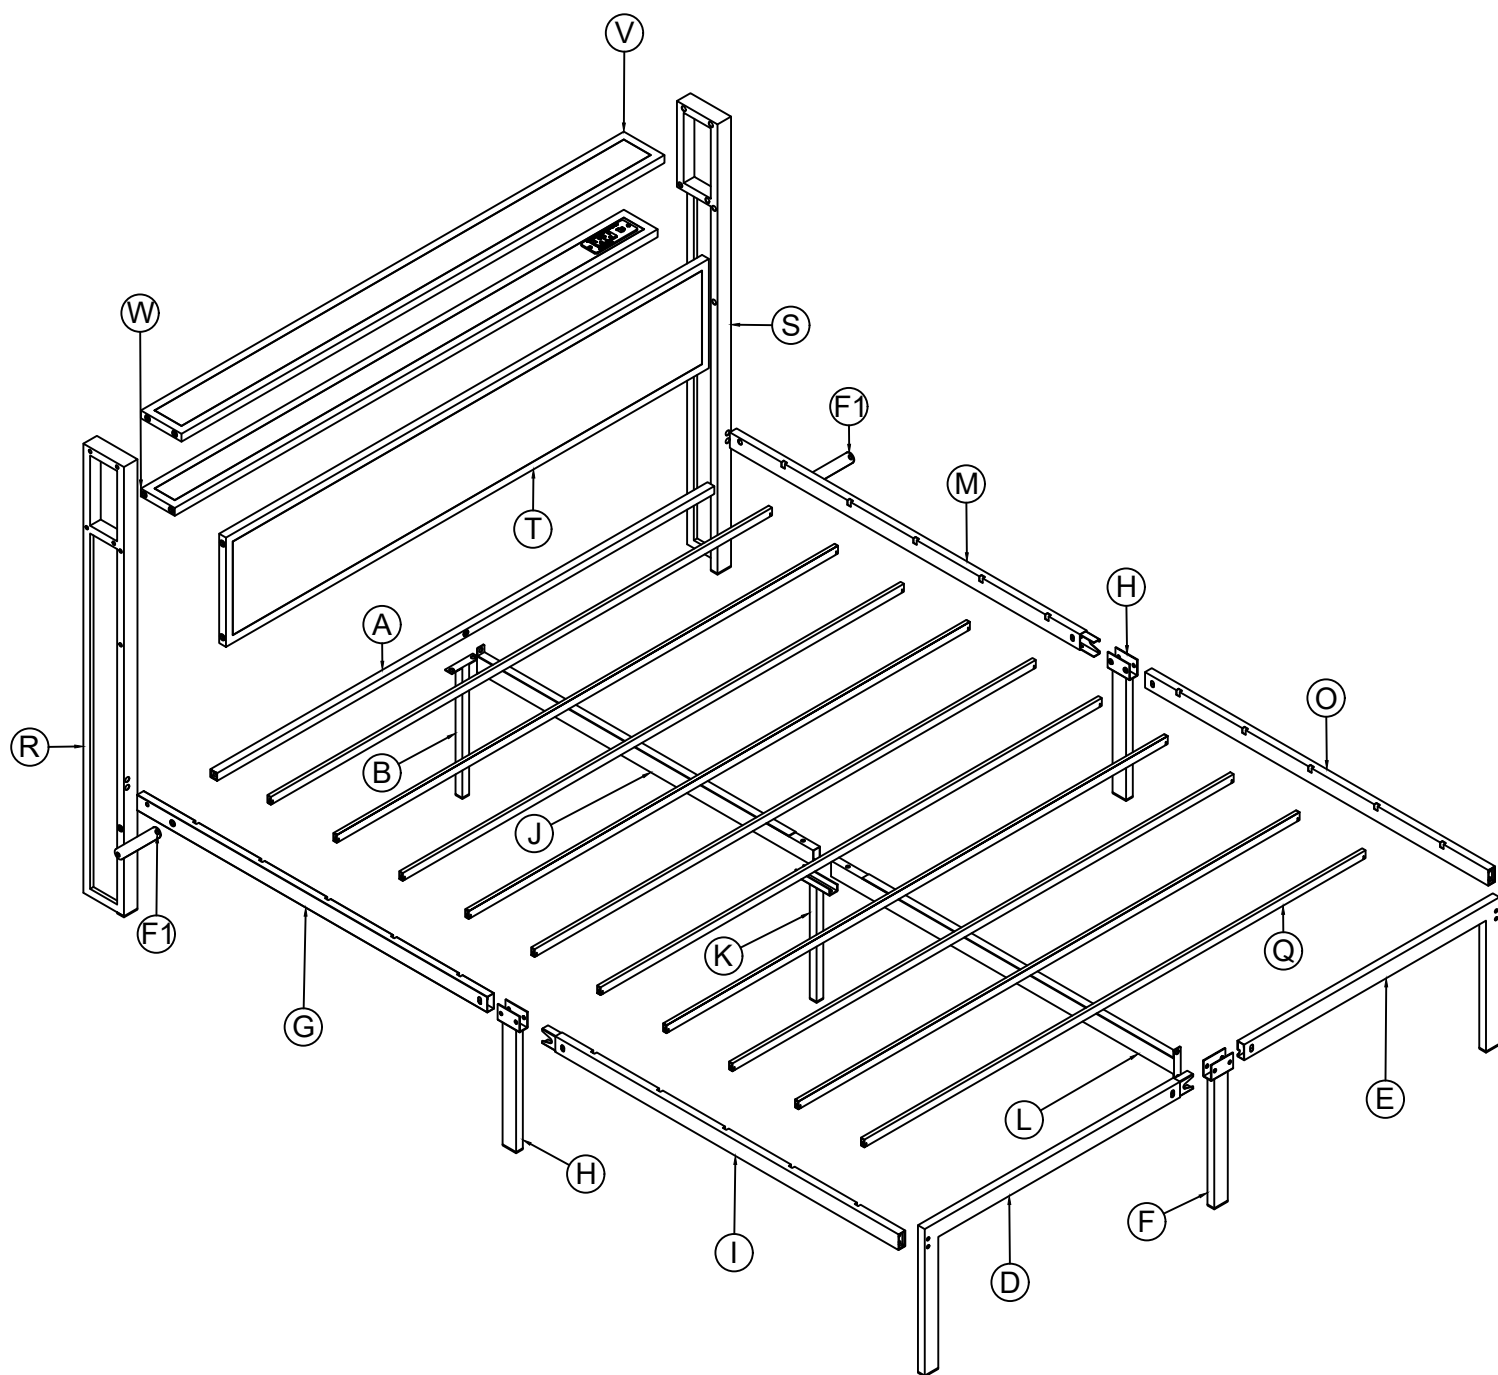


Parts List:




Ⓐ
1pcs




Ⓑ
1pcs

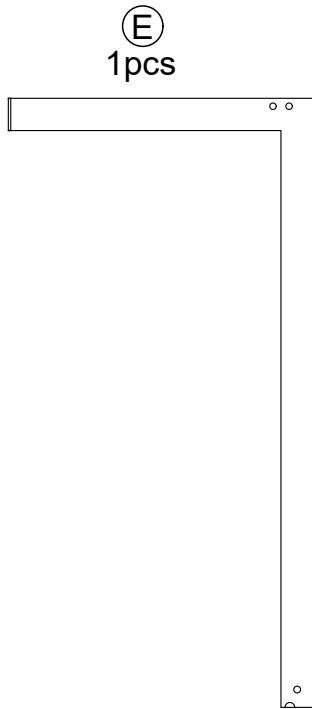


Ⓔ
1pcs




Ⓕ
1pcs

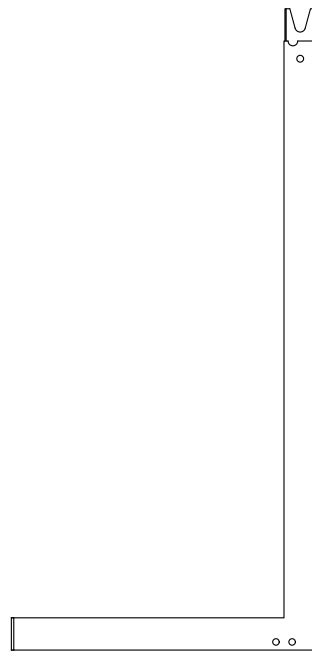

Ⓖ
1pcs



Ⓖ
1pcs



Ⓜ
1pcs



ⓓ
2pcs




Ⓞ
1pcs




Ⓢ
1pcs



Ⓜ
1pcs



Ⓚ
1pcs





Ⓛ
1pcs


EVA

EVA


Parts List:

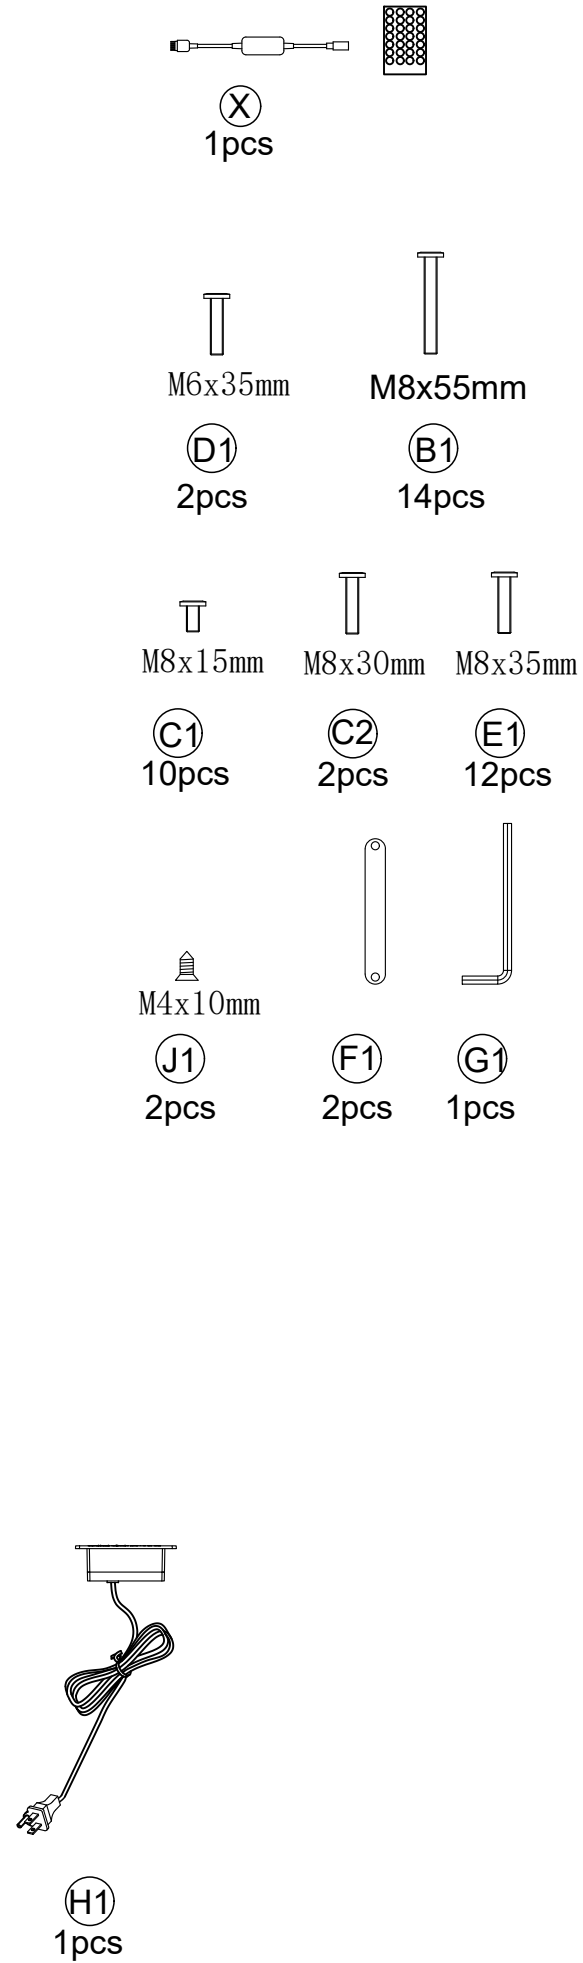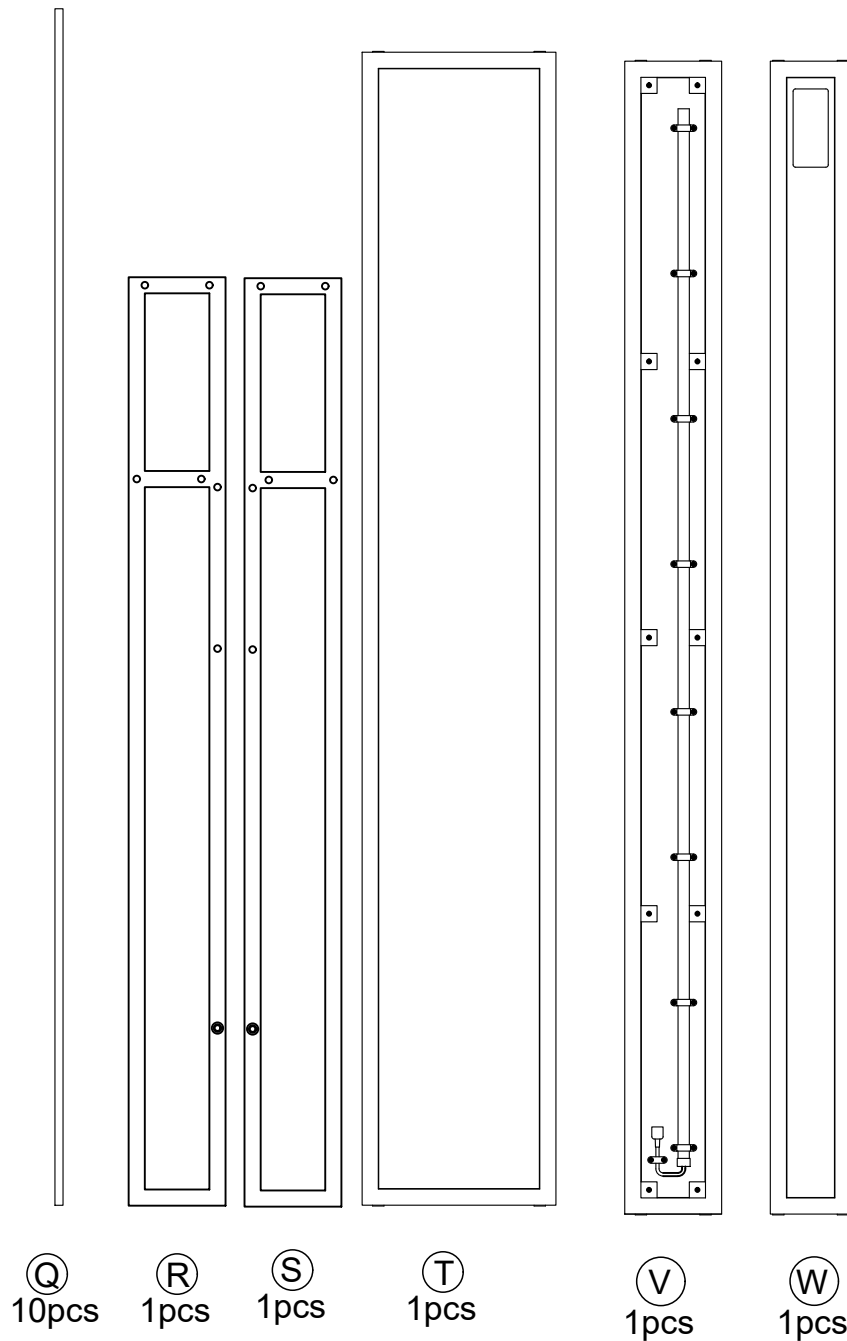


STEP 1

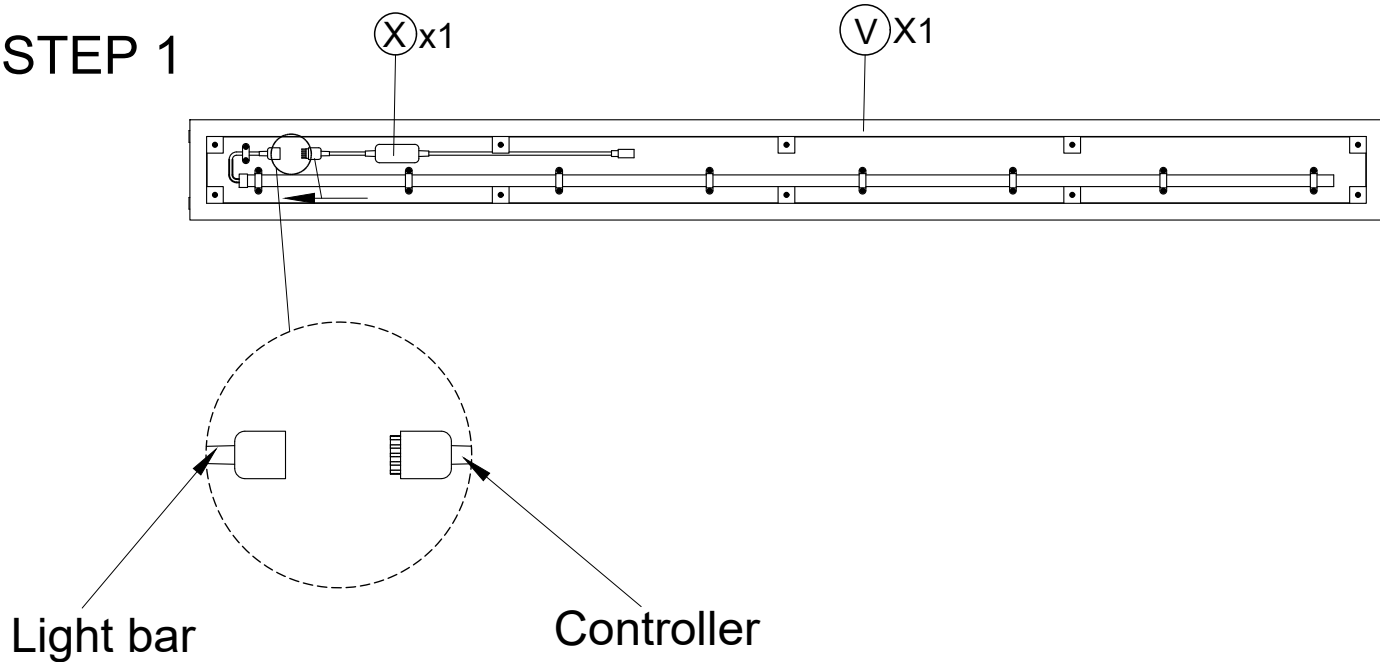

STEP 2

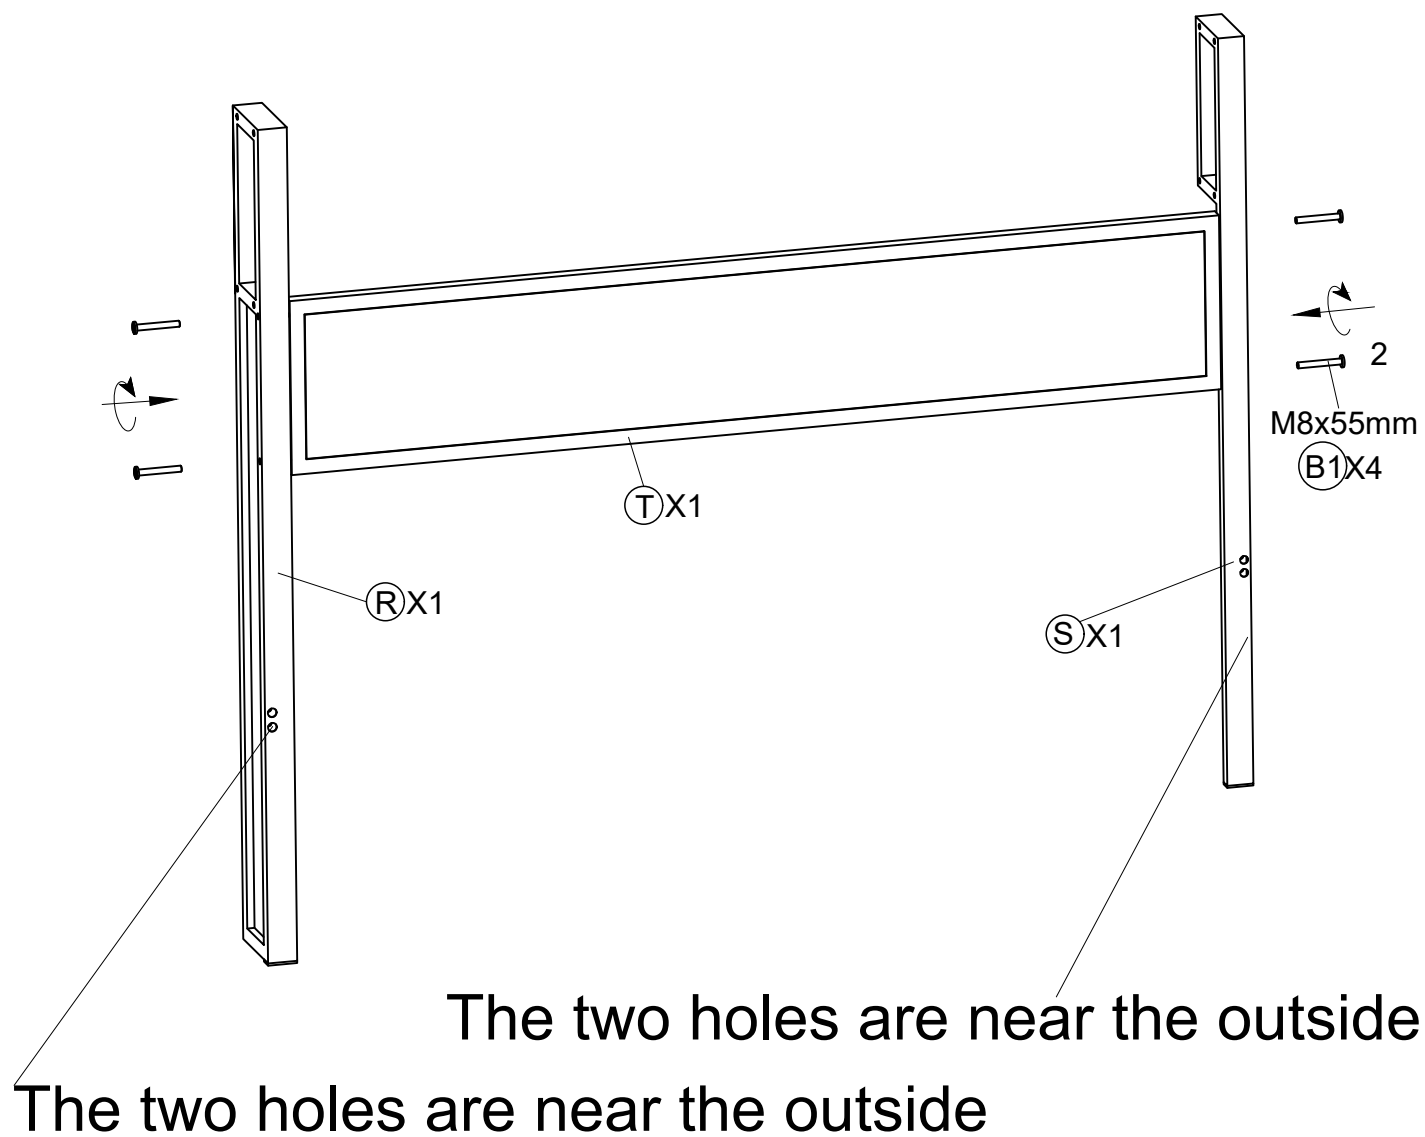


STEP3

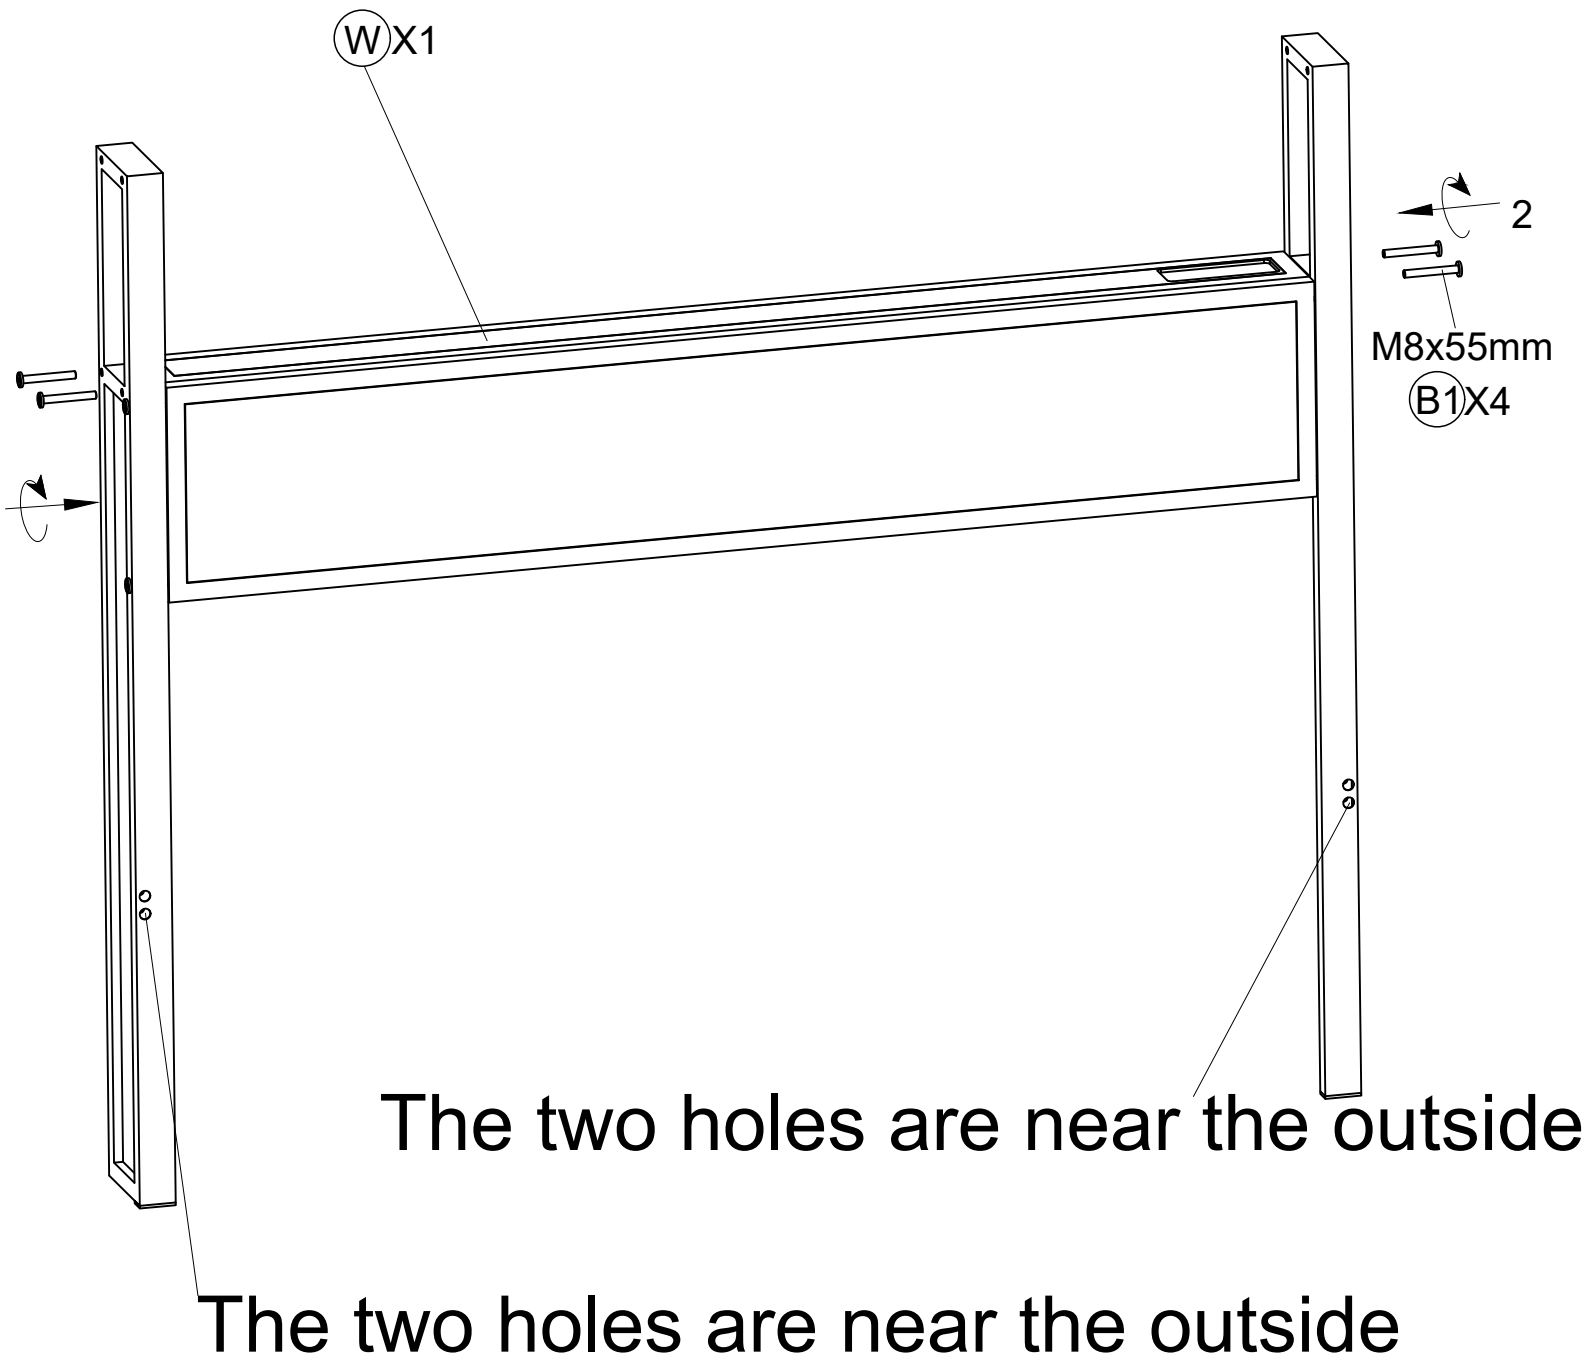

STEP 4


We suggest using drill machine to install "J1" screws

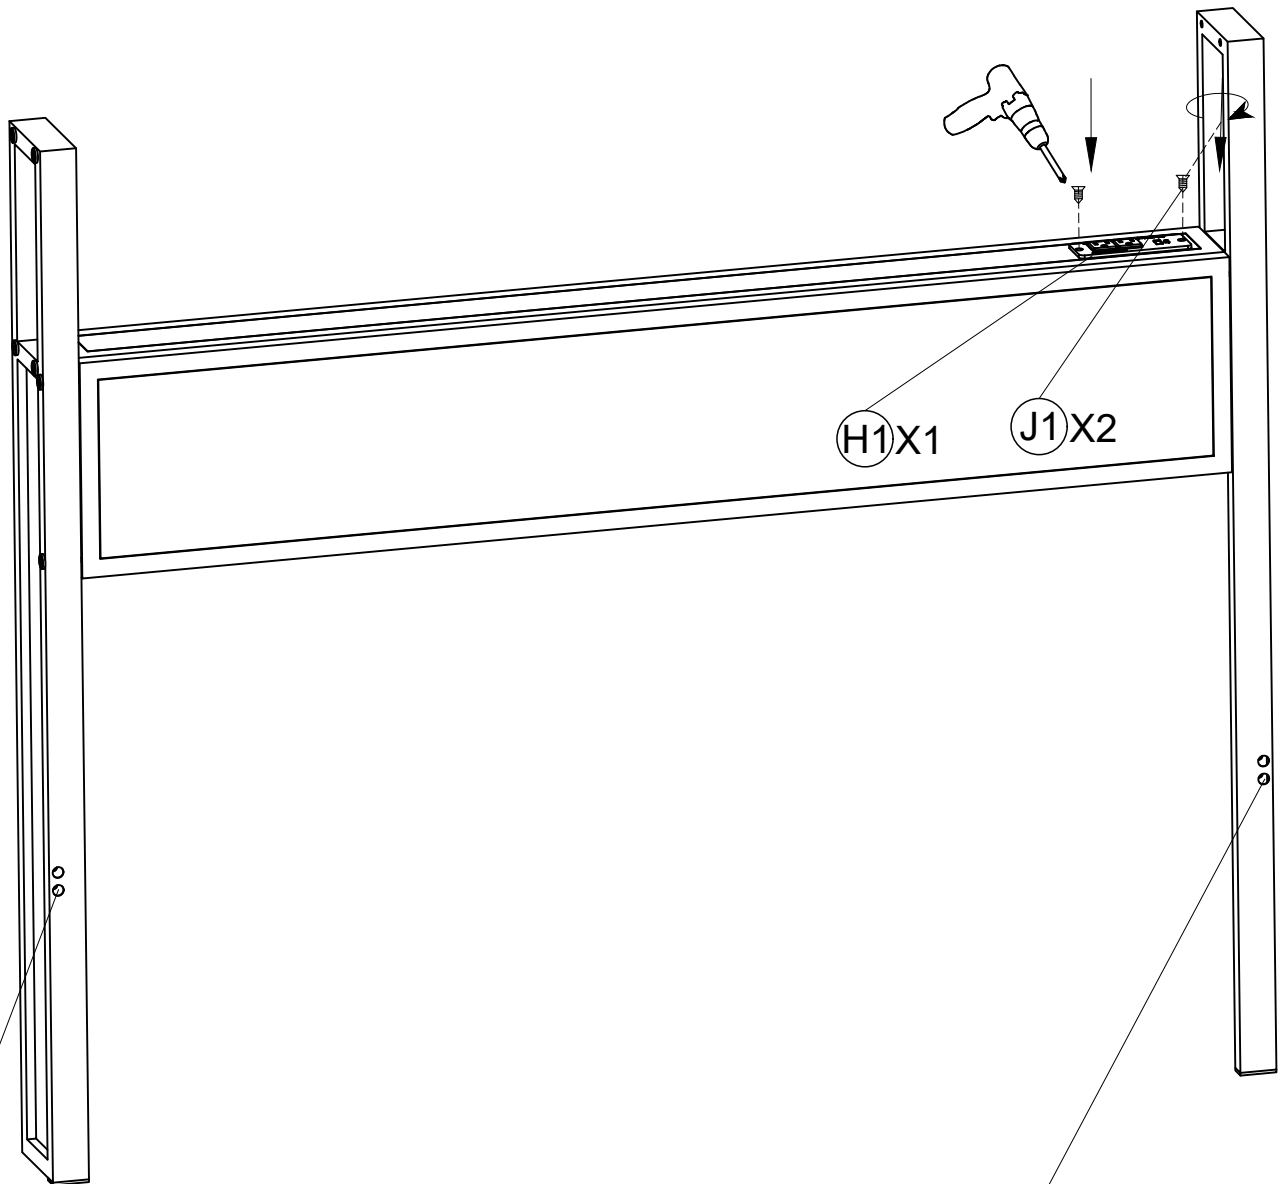

The two holes are near the outside

The two holes are near the outside


STEP 5

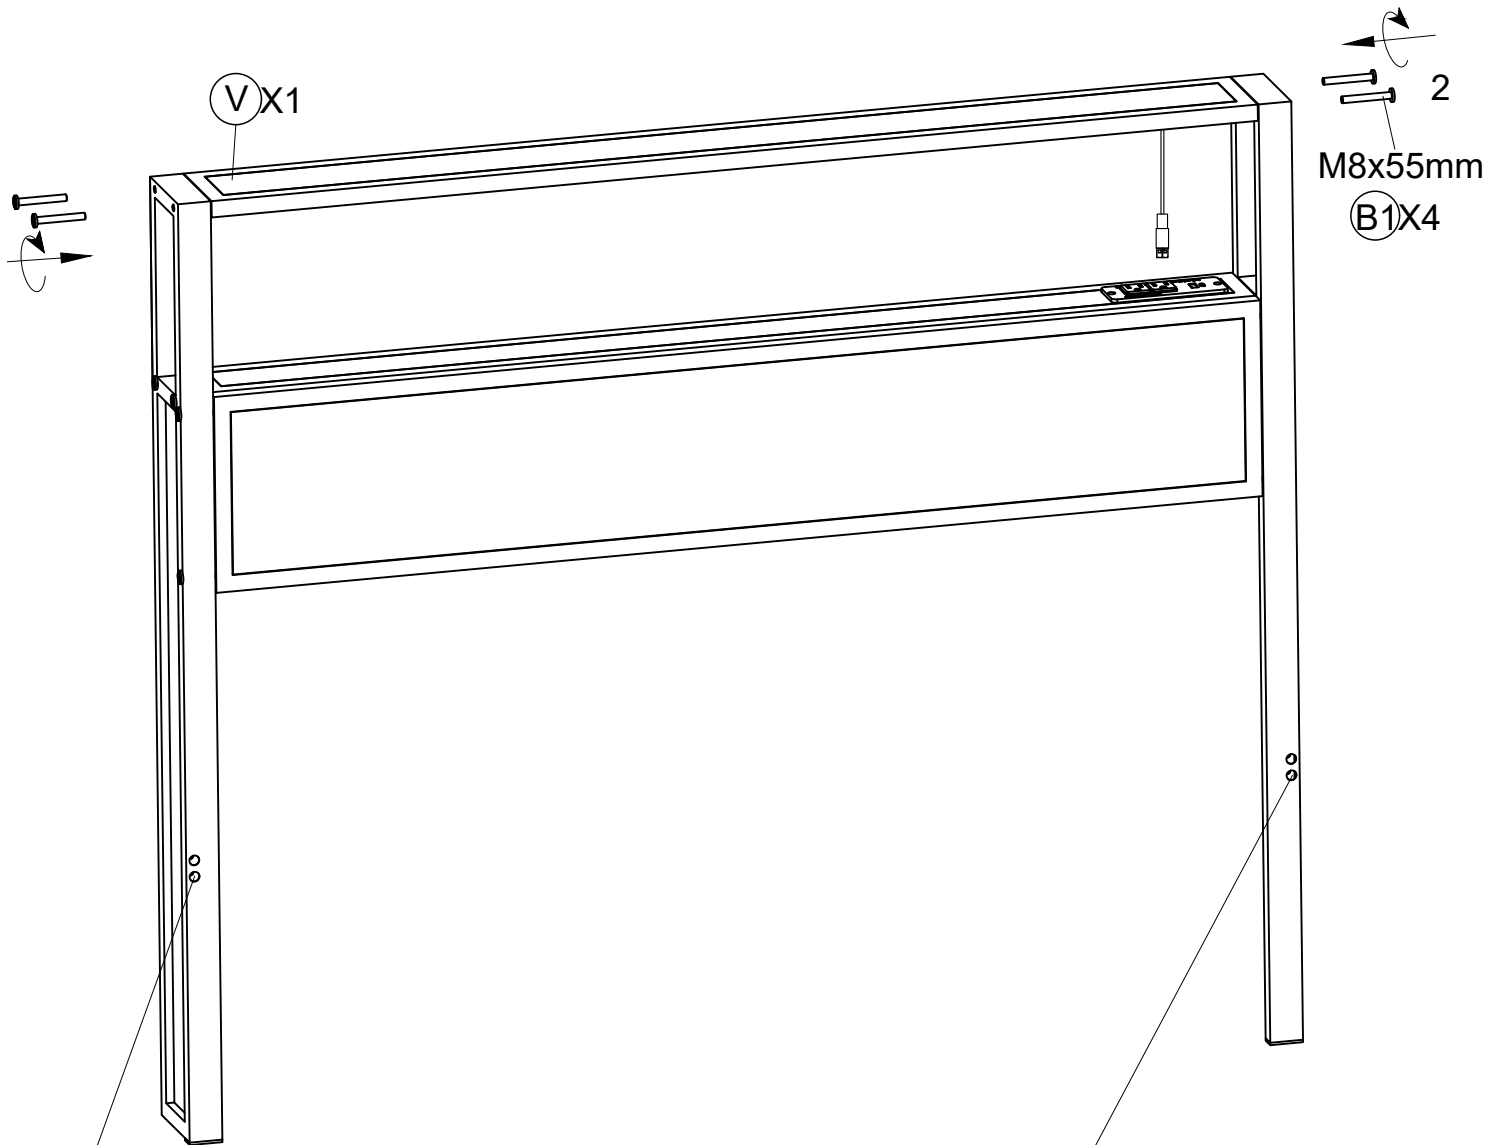


The two holes are near the outside

The two holes are near the outside


STEP 6

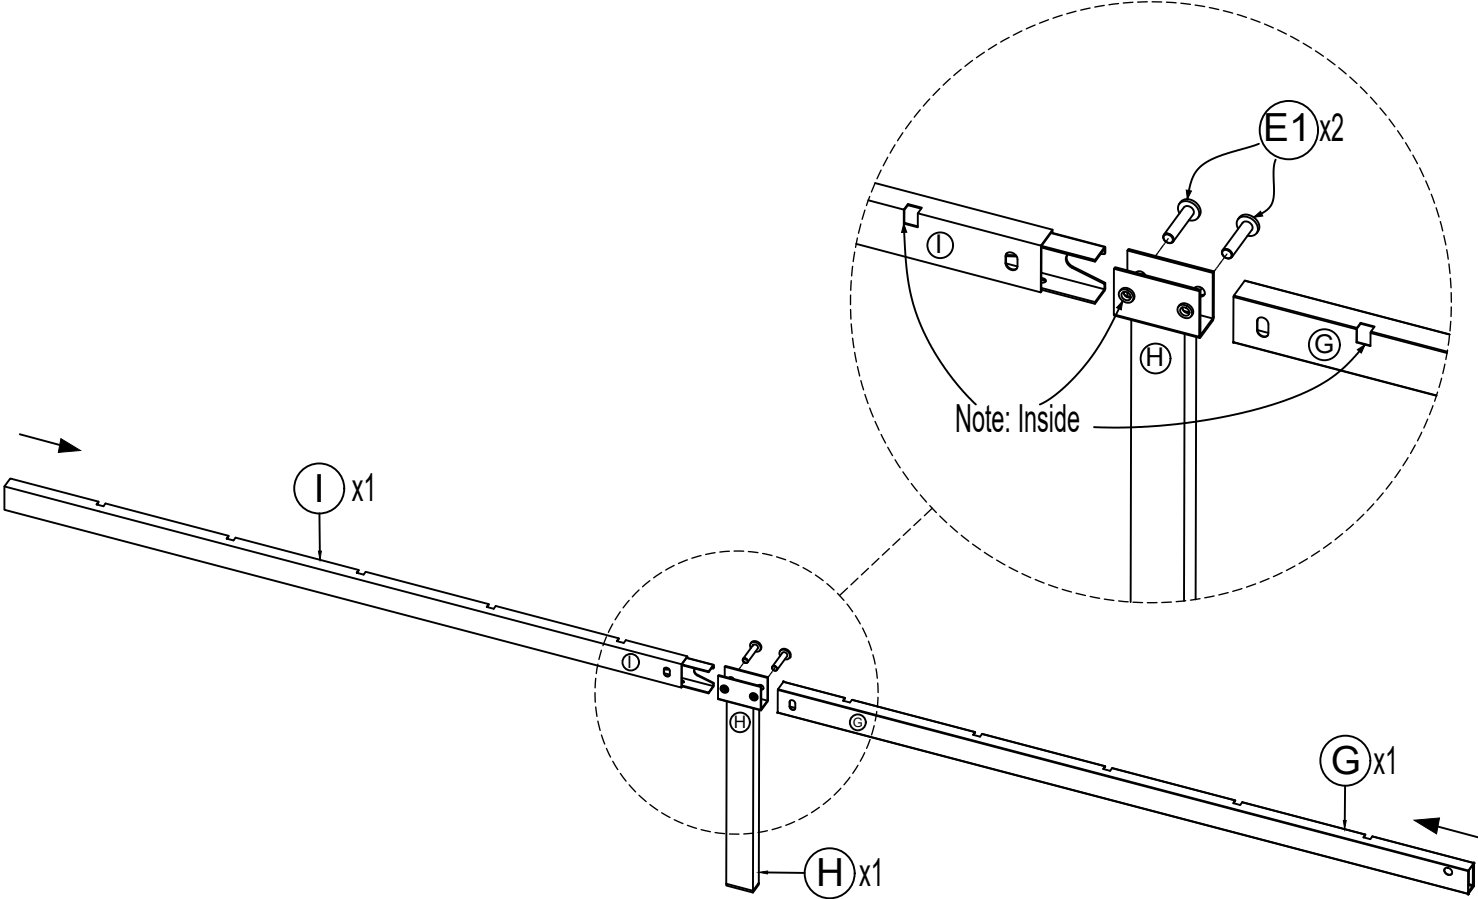


STEP 7

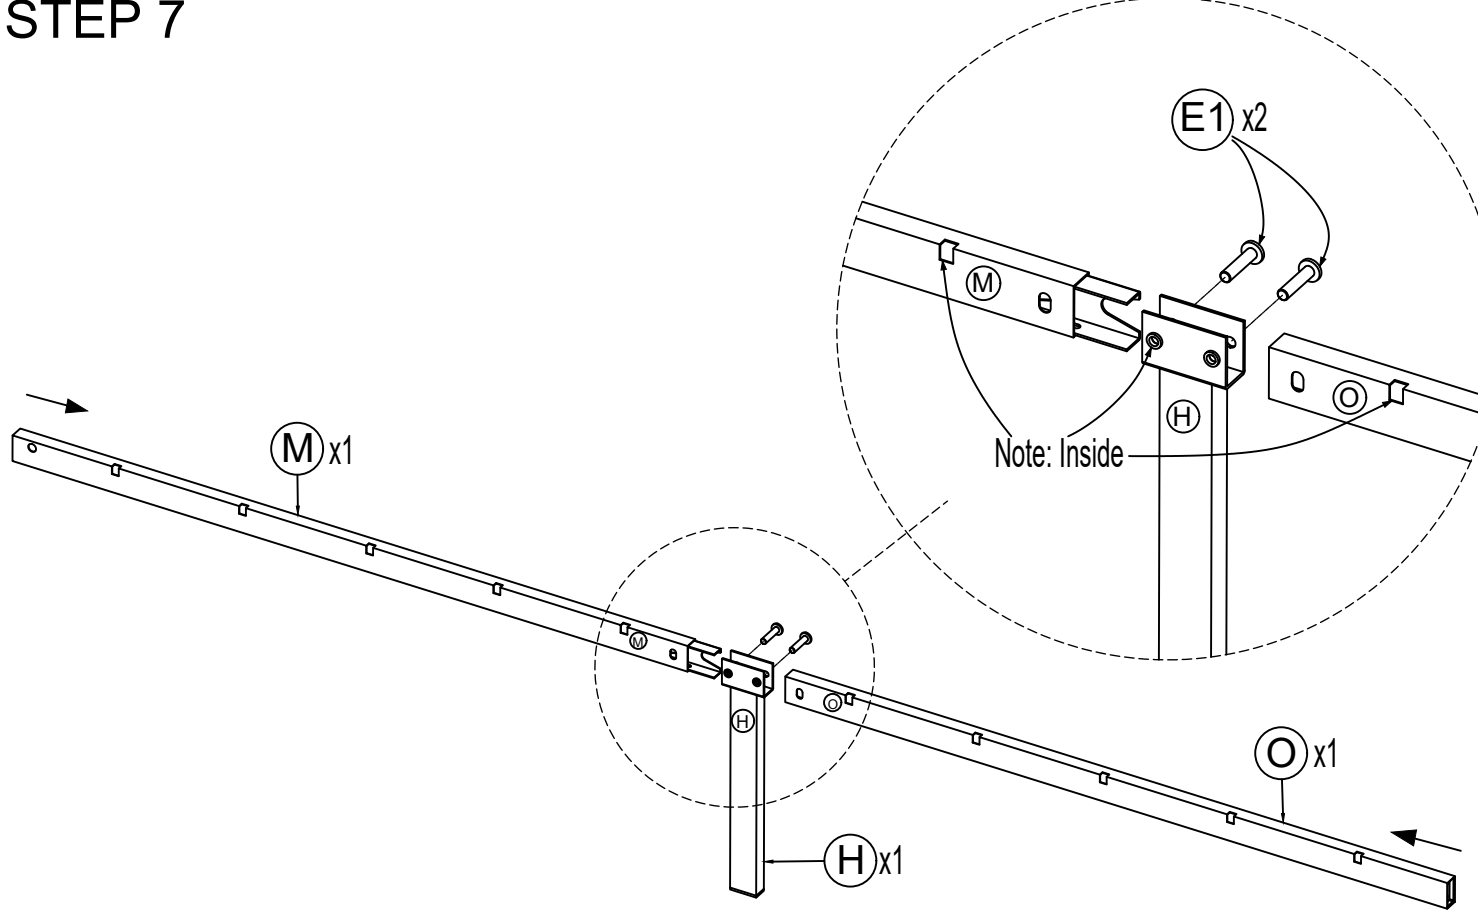


STEP 8

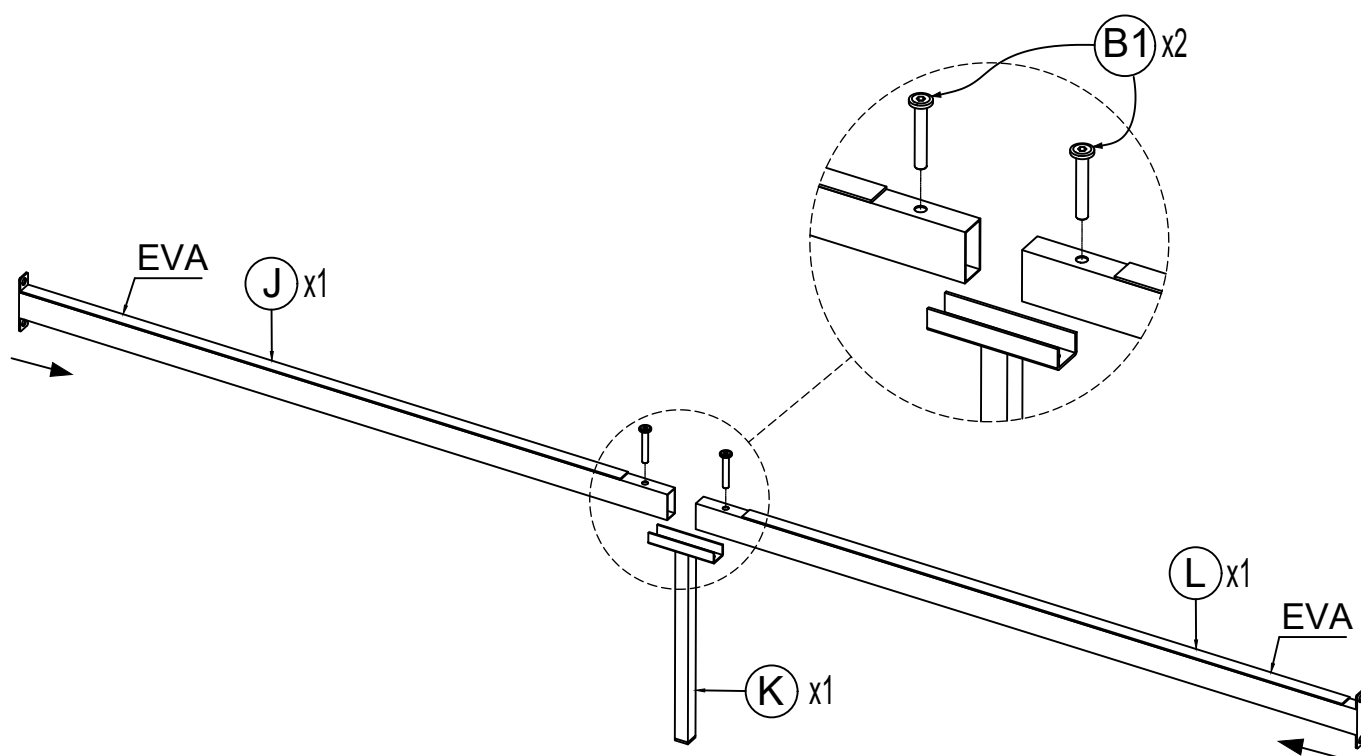


STEP 9

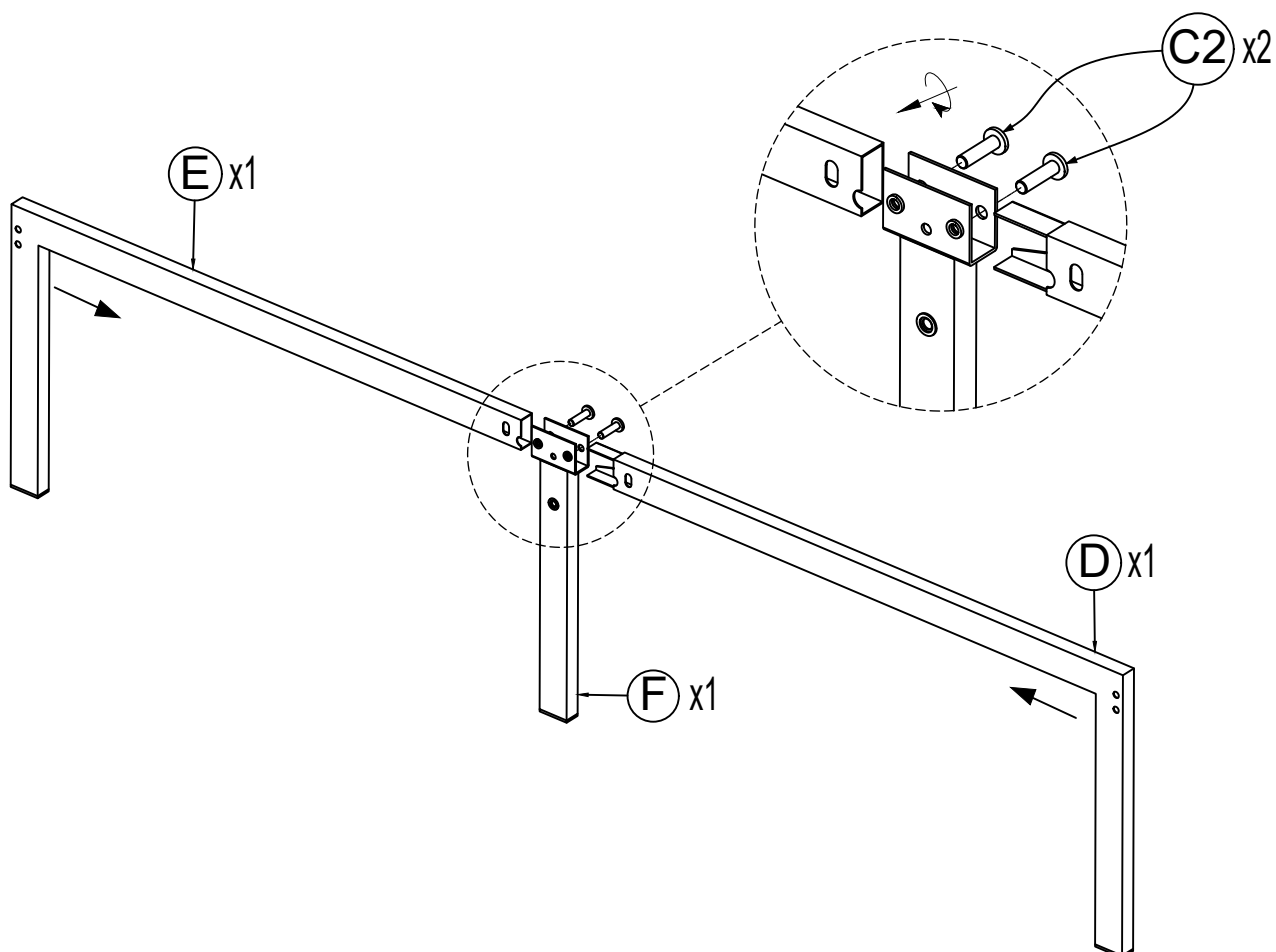


STEP 10

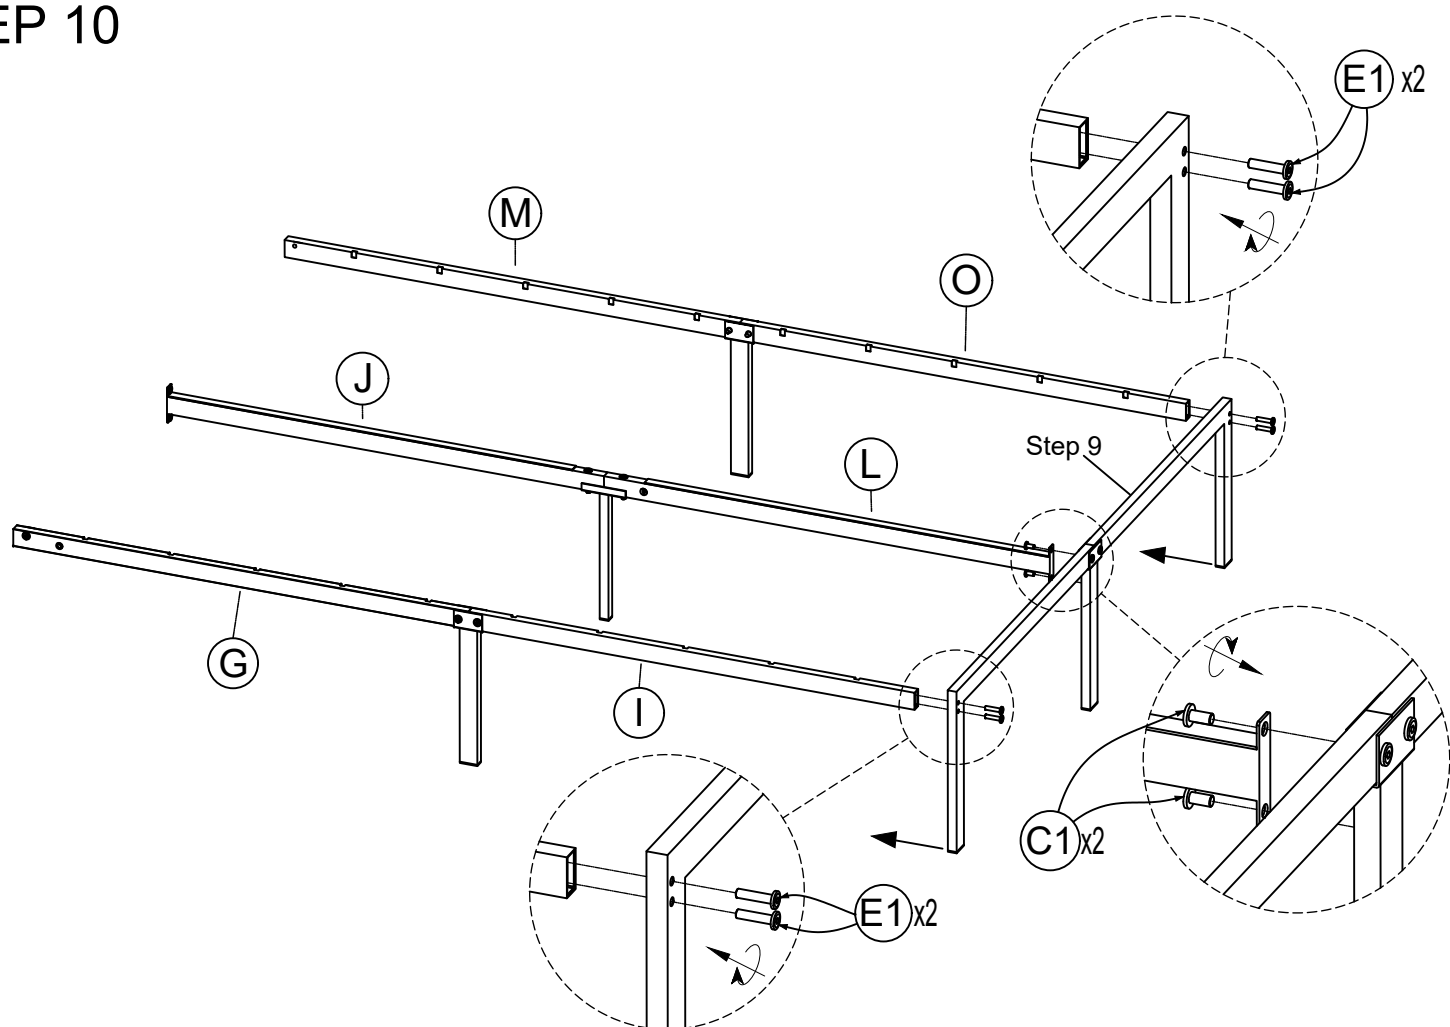


STEP 11

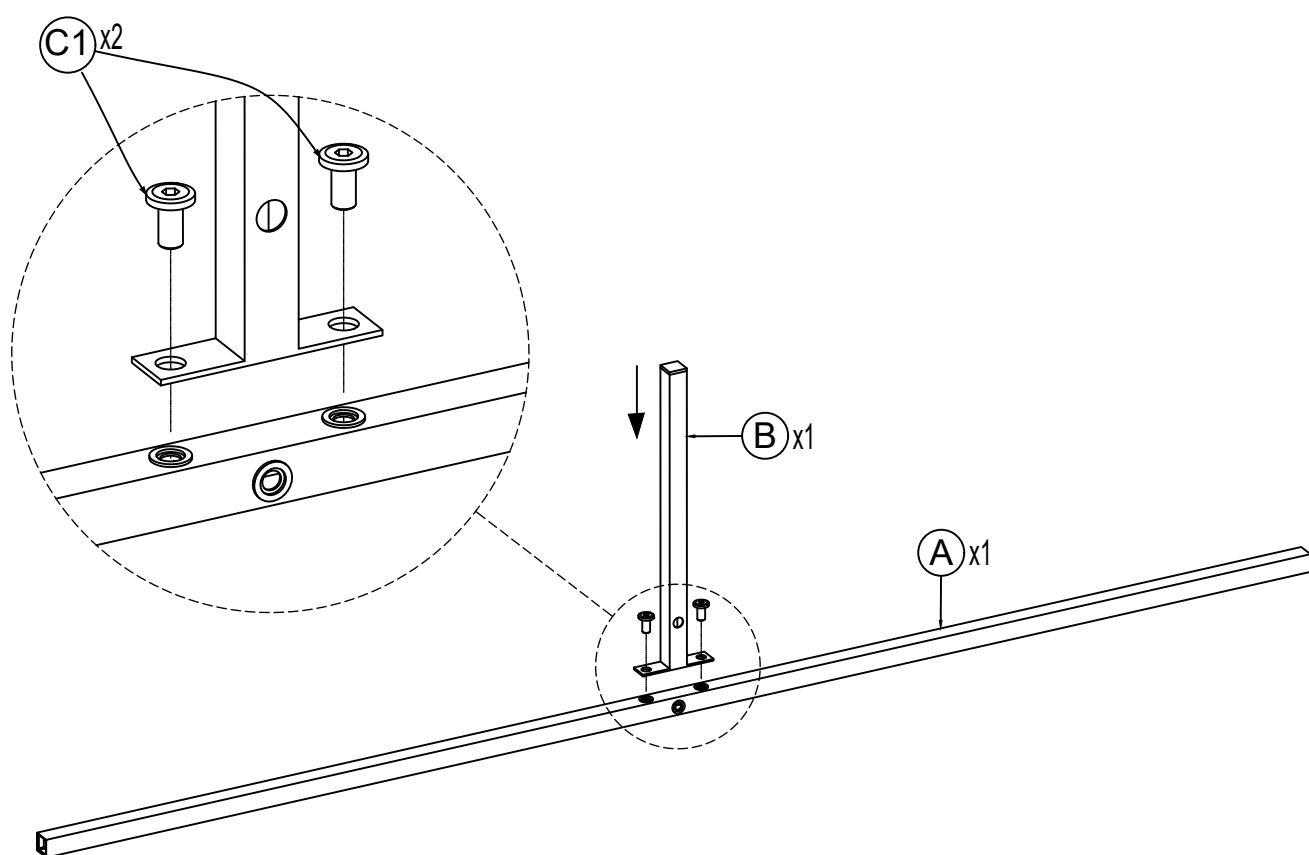

STEP 12

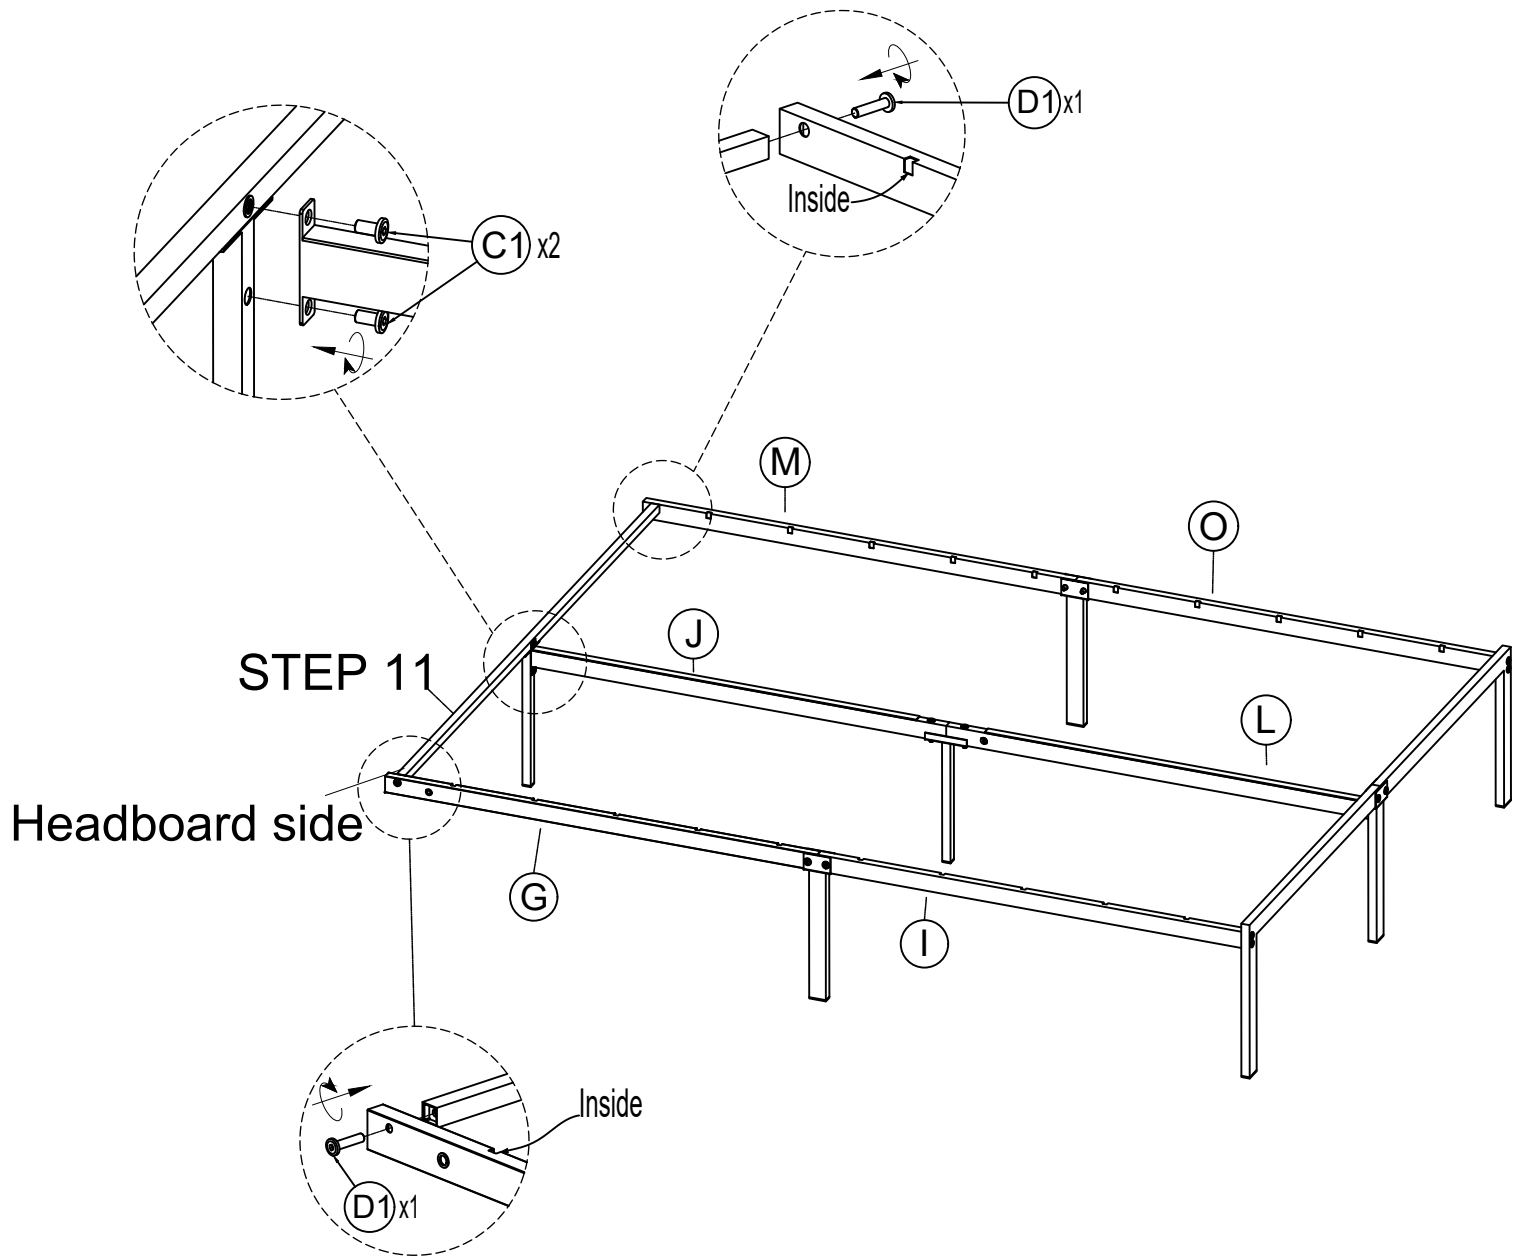

STEP 13

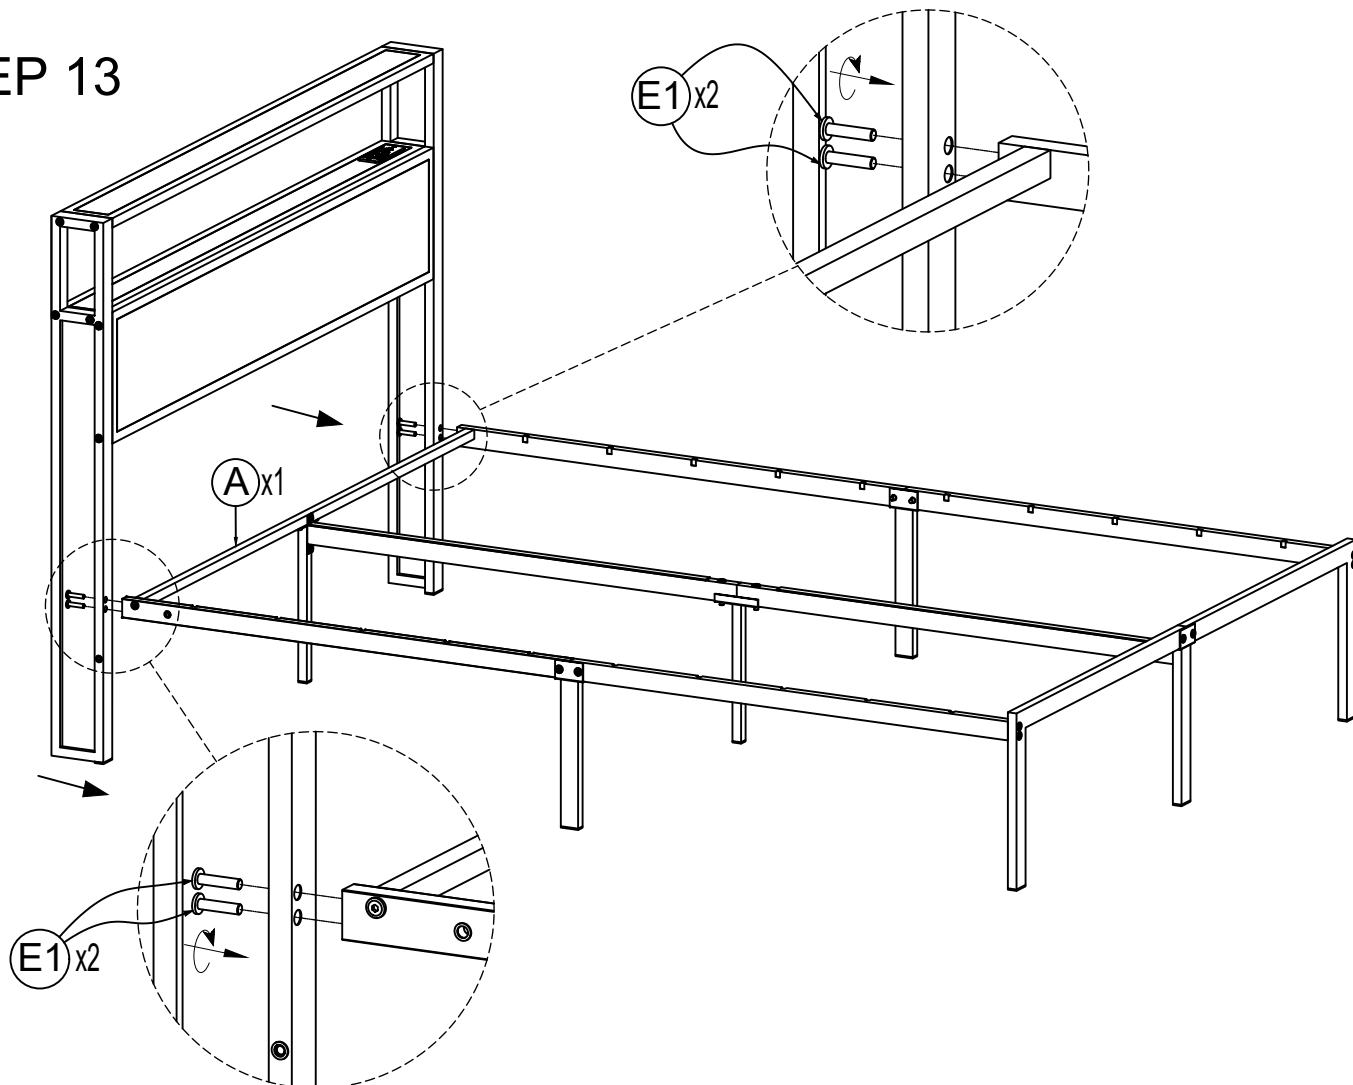

STEP 14

