










ASSEMBLY INSTRUCTIONS

BARSTOOL

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

| HARDWARE LIST | | |
|---------------|---|------|
| A | JCBC SCREW M6 x 25mm  | 4PCS |
| B | JCBC SCREW M6 x 45mm  | 4PCS |
| C | SPRING WASHER M6  | 8PCS |
| D | FLAT WASHER M6  | 8PCS |
| E | ALLEN KEY M4  | 1PC |
| F | L BRACKET  | 4PCS |
| G | CSK SCREW M3.5 x 12mm  | 8PCS |
| H | WOOD DOWEL M8 x 25mm  | 2PCS |
| I | FH SCREW #8 X 32mm  | 4PCS |

| PART LIST | | |
|-----------|------------------|-----|
| 1 | RIGHT SIDE FRAME | 1PC |
| 2 | LEFT SIDE FRAME | 1PC |
| 3 | FRONT STRETCHER | 1PC |
| 4 | BACK STRETCHER | 1PC |
| 5 | FRONT RAIL | 1PC |
| 6 | BACK RAIL | 1PC |
| 7 | TOP REST | 1PC |
| 8 | CUSHION SEAT | 1PC |


CAUTIONS :

(1) DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.


(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)

(2) KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.


STEP 1

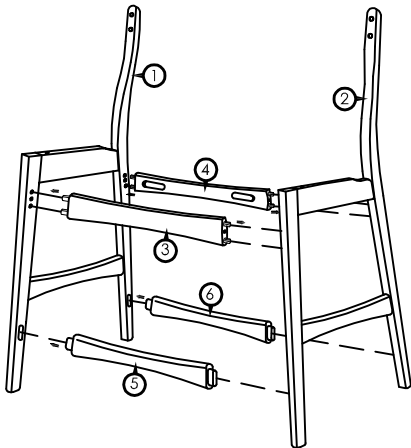


STEP 2

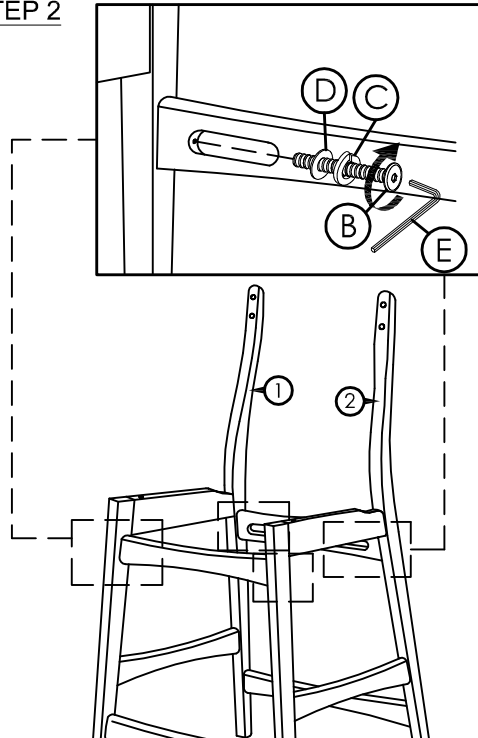


STEP 3

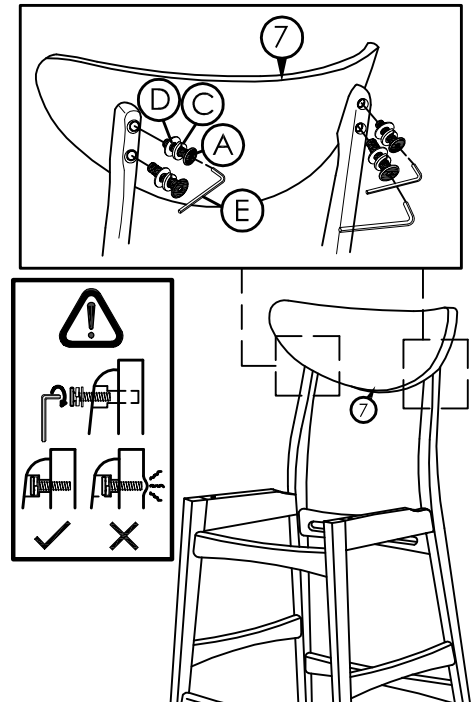


STEP 4

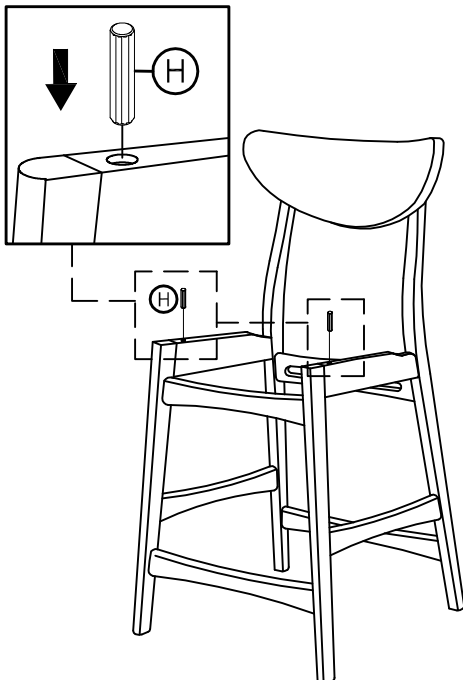

STEP 5

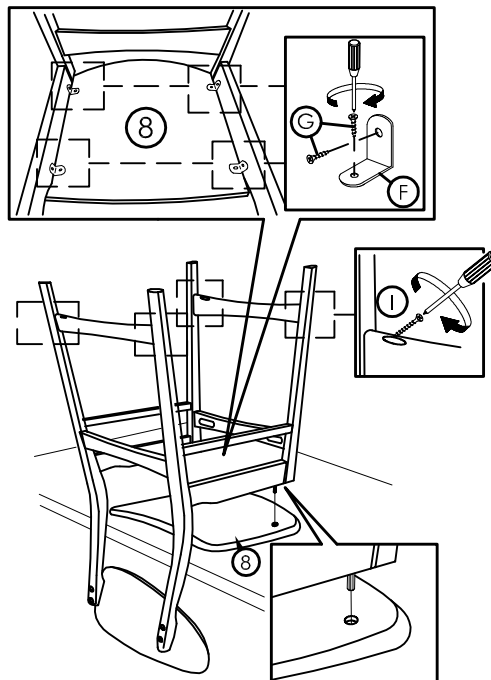

STEP 6

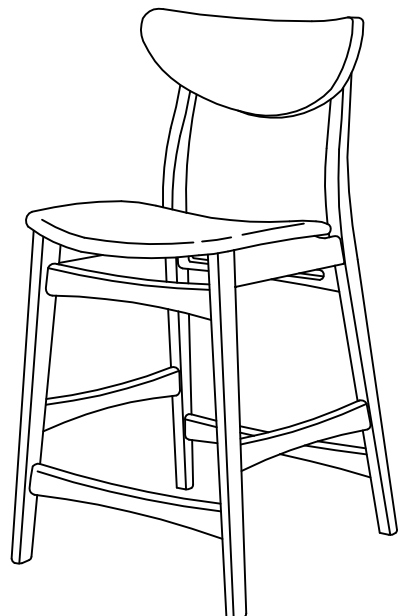

COMPLETED
CHAIR ASSEMBLY.