


Assembly Instructions

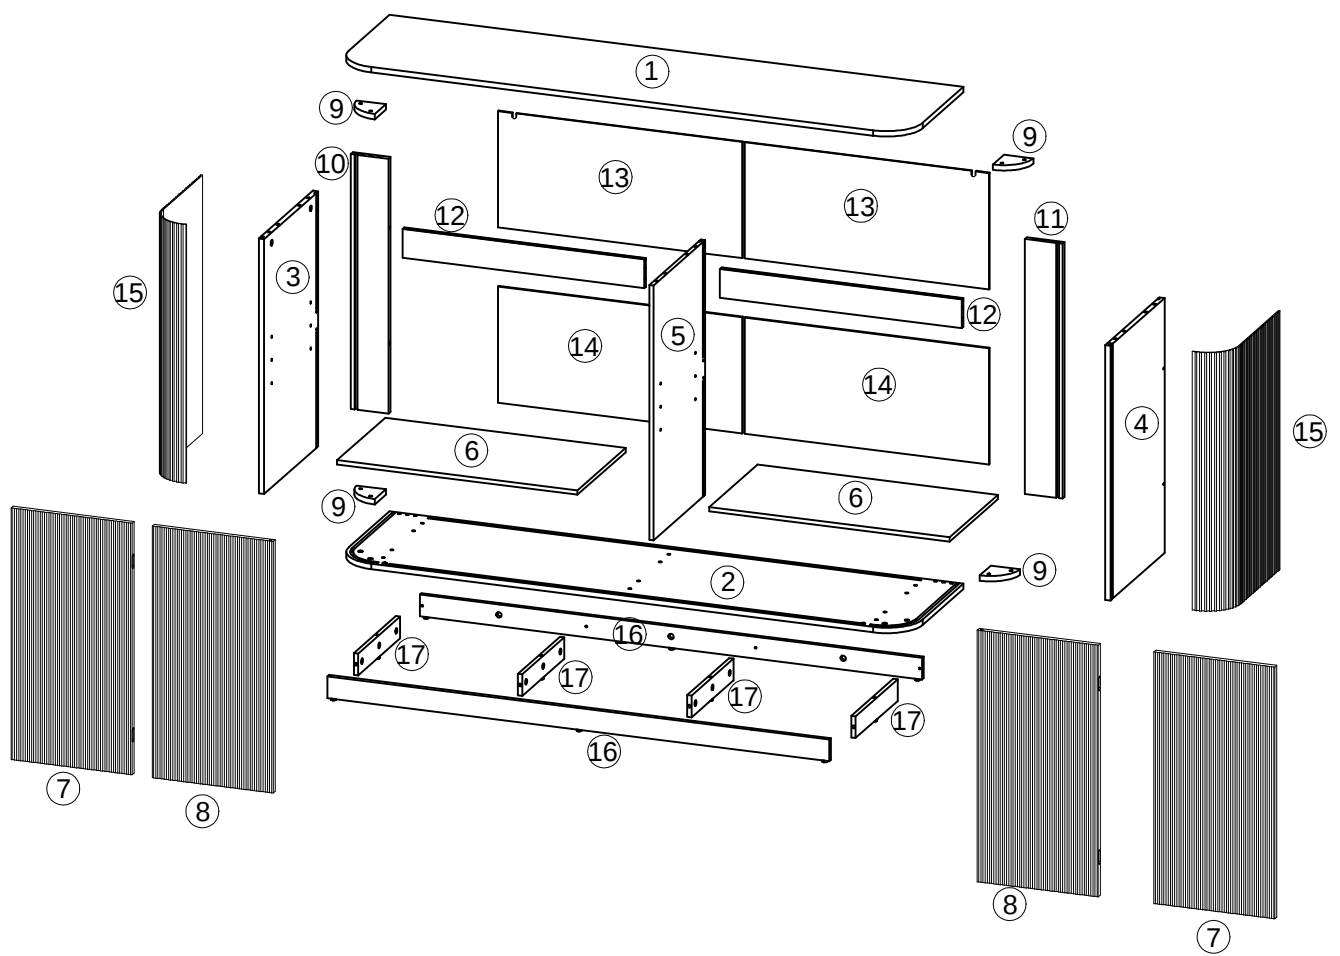




1




1PC

2



1PC

3



1PC

4



1PC

5




1PC

6



2PCS

7

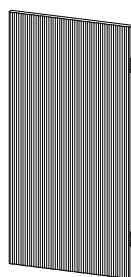

2PCS

8



2PCS

9



4PCS

10




1PC

11




1PC

12




2PCS

13

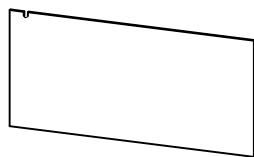


2PCS

14

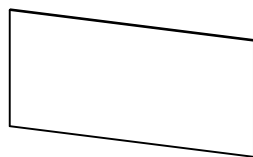


2PCS

15




2PCS

16




2PCS

17




4PCS

A

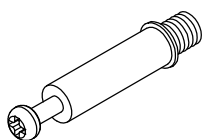


Ø6.3×35mm
40PCS

B




Ø15×10mm
40PCS

C




Ø8×30mm
20PCS

D



Ø7×48mm
10PCS

E




Ø3.5×14mm
6PCS

F



6PCS

G












2PCS


H





M6×12mm
2PCS

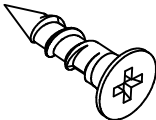I  2PCS	J  Ø4×35mm 2PCS	K  6PCS	L  8PCS
M  2PCS	N  Ø4×12mm 12PCS	O  4PCS	P  2PCS
Q  2PCS	R  4PCS	S  Ø3.5×16mm 16PCS	T  4mm 1PC
U  M6×25mm 8PCS			



1

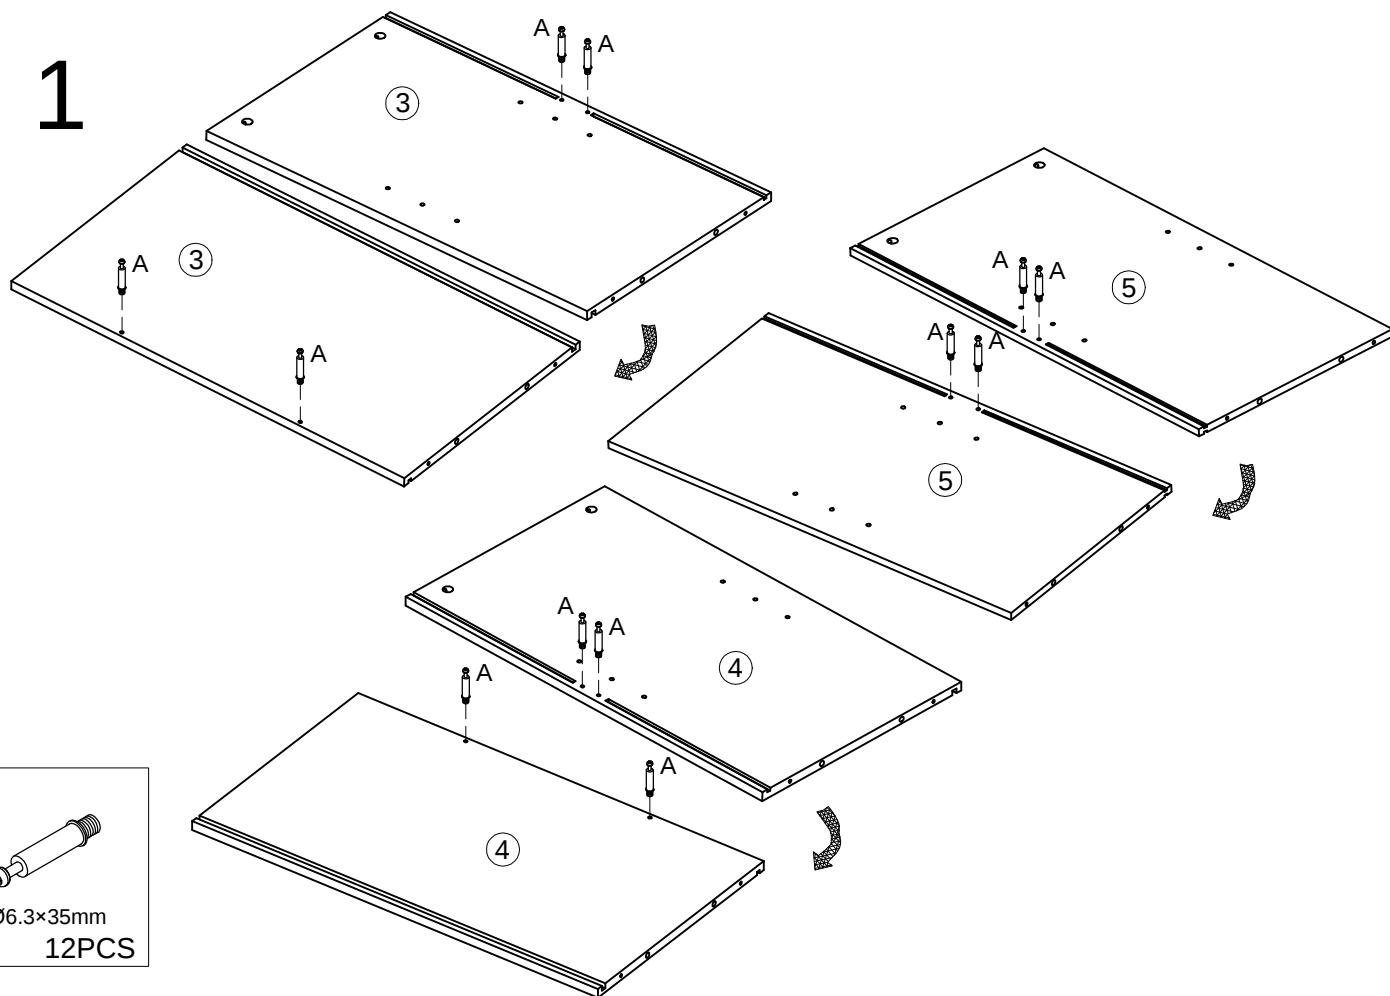



2

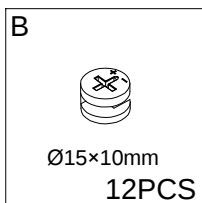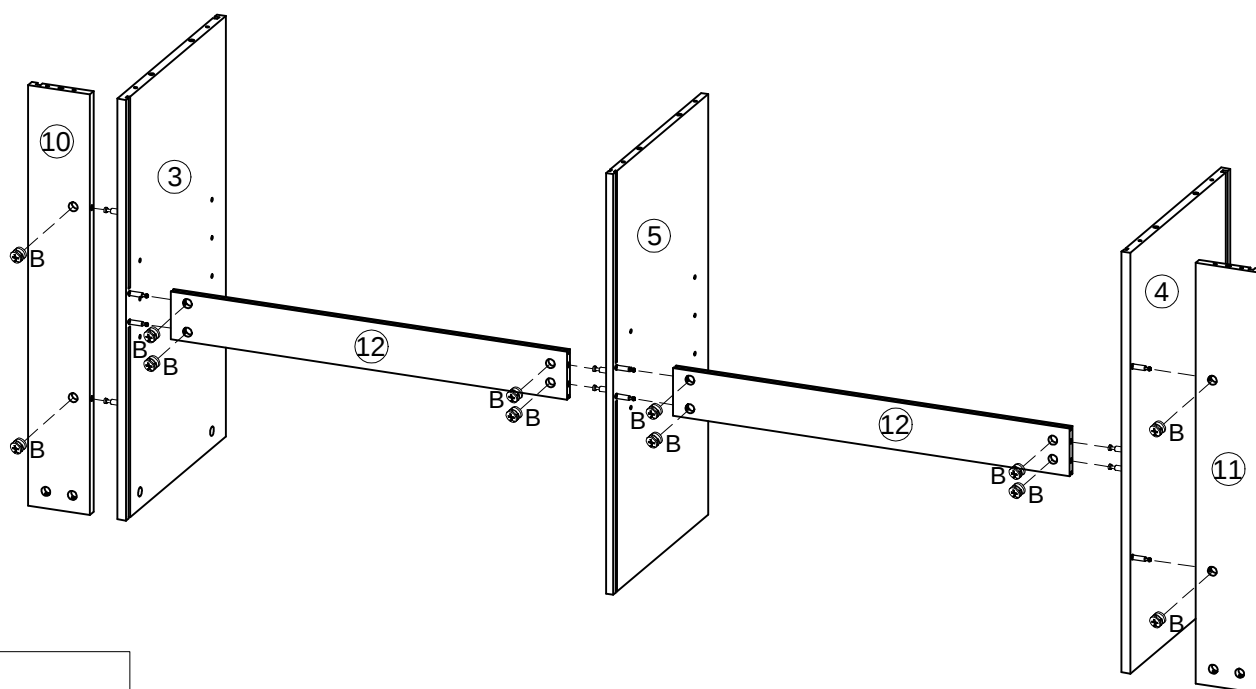



3

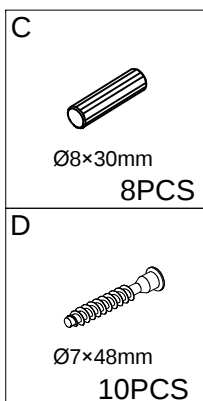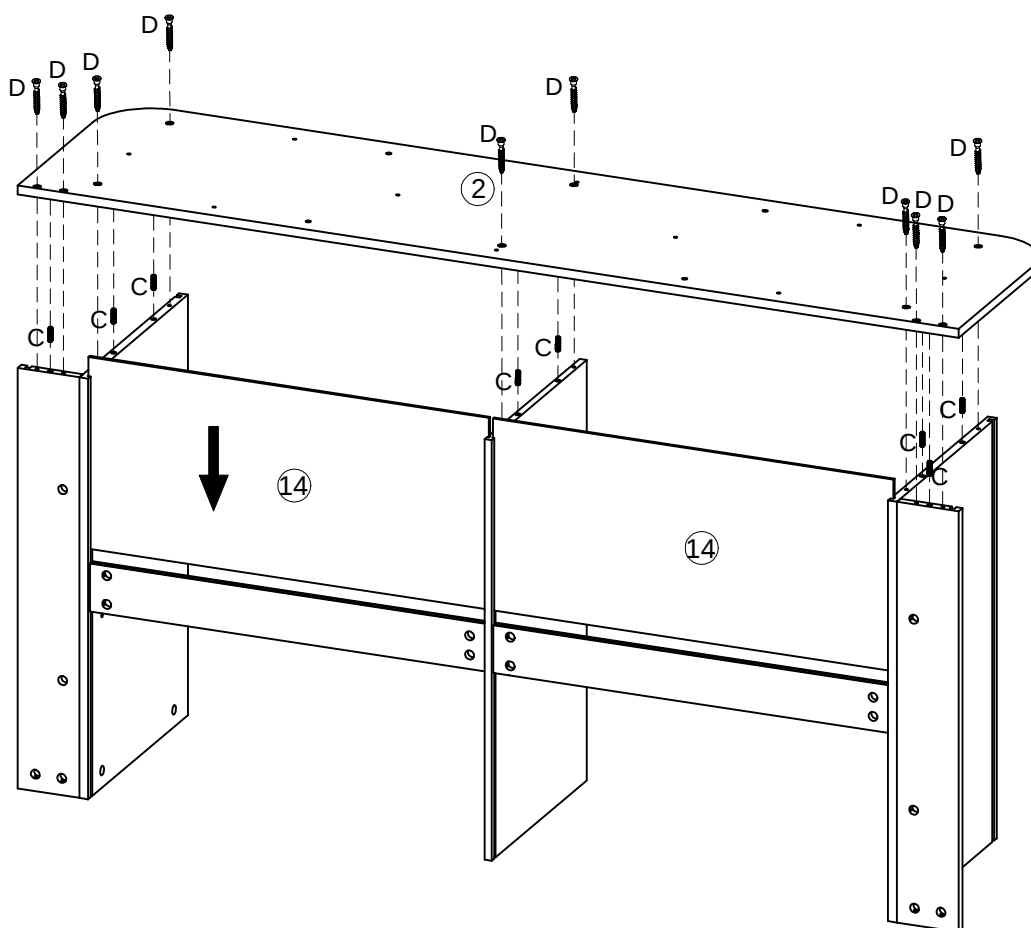



4

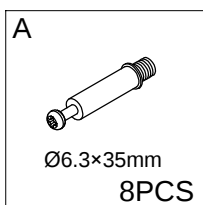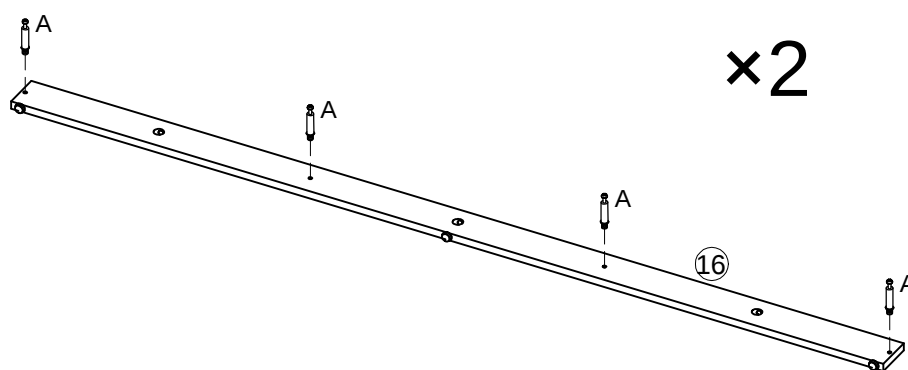



5

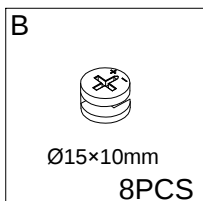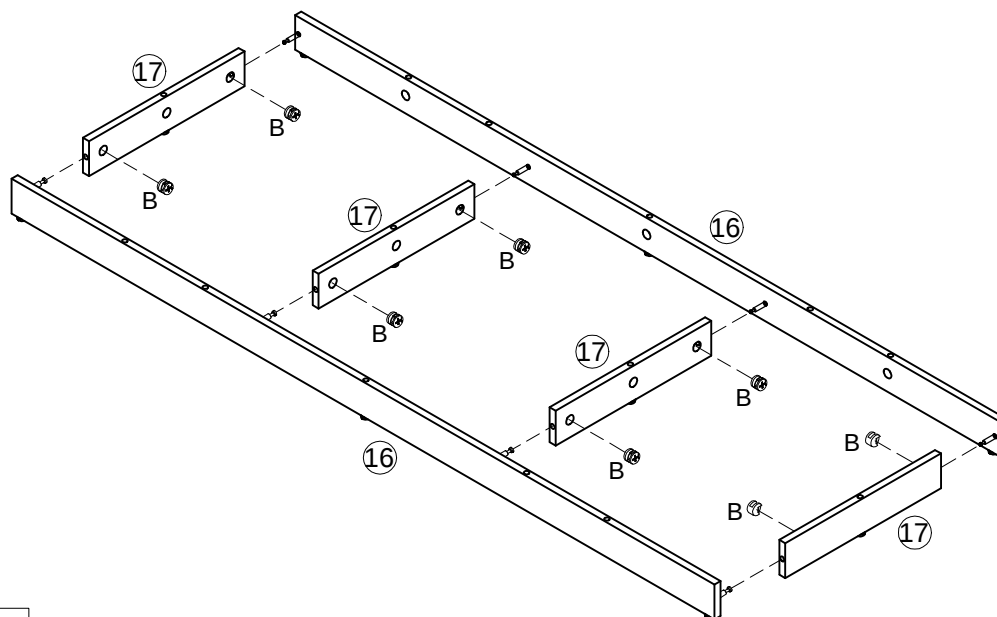



6

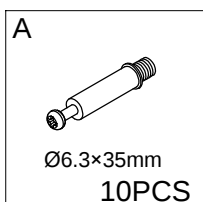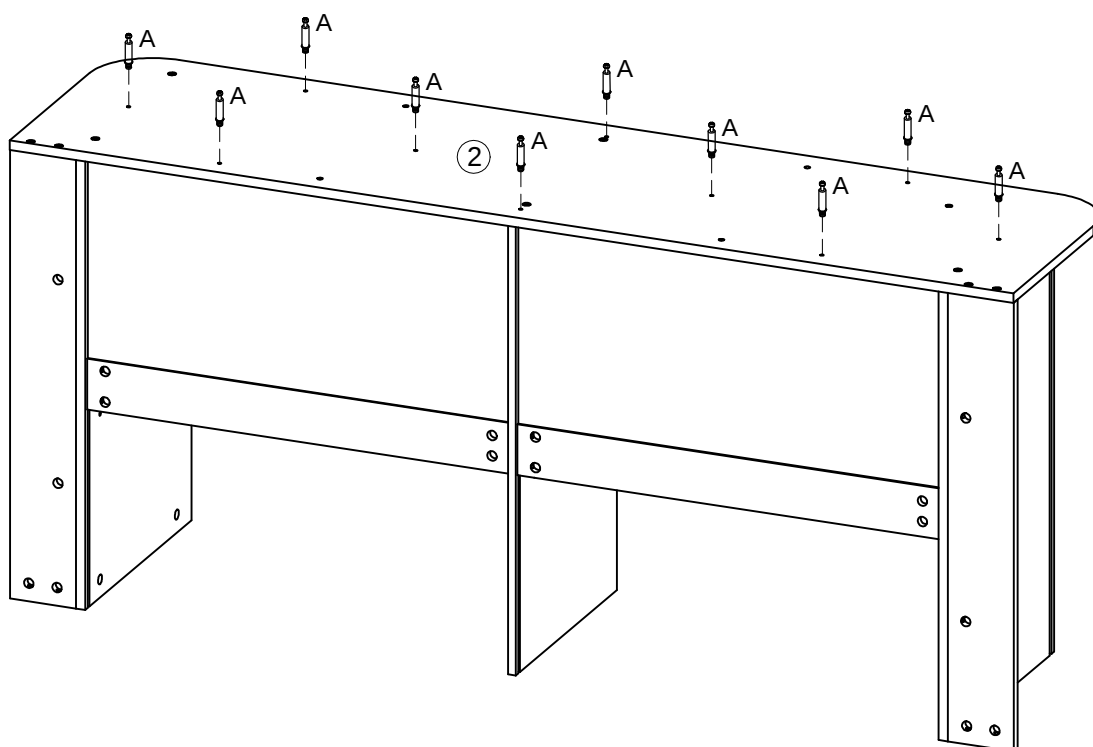


7

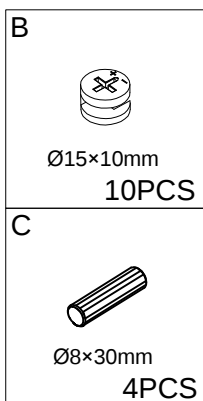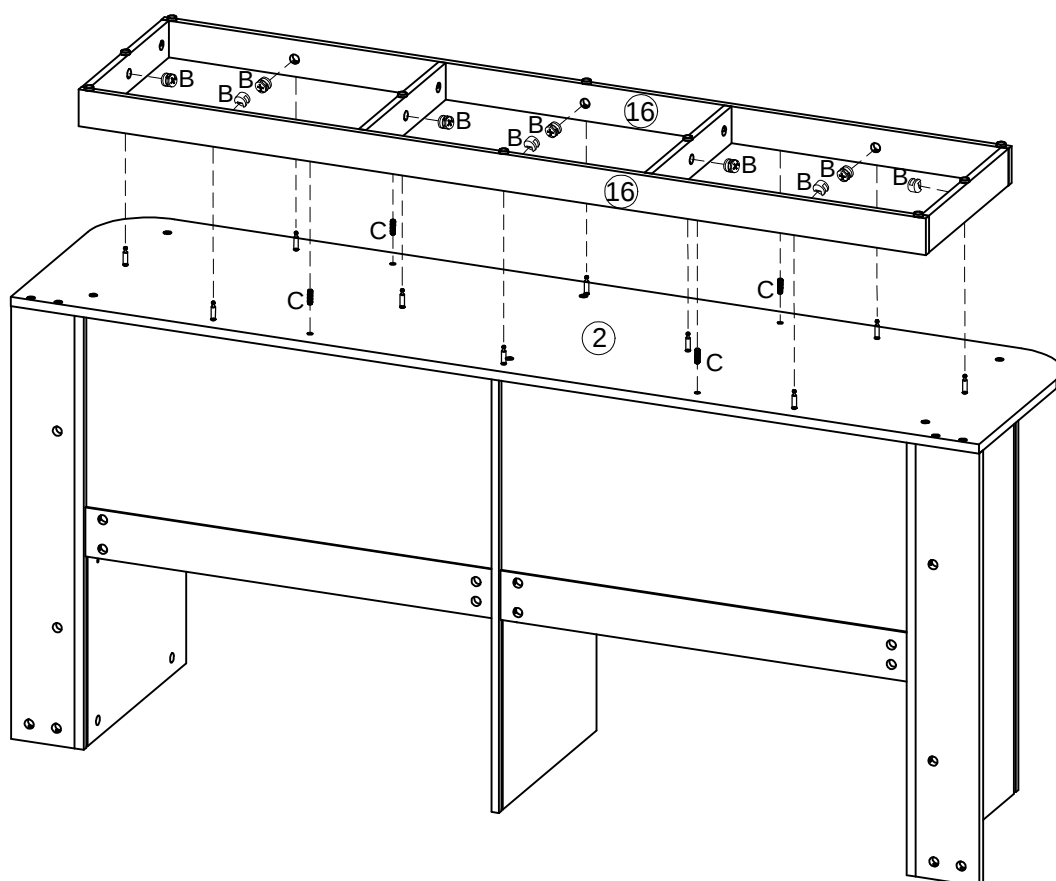


8

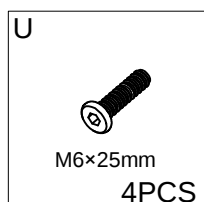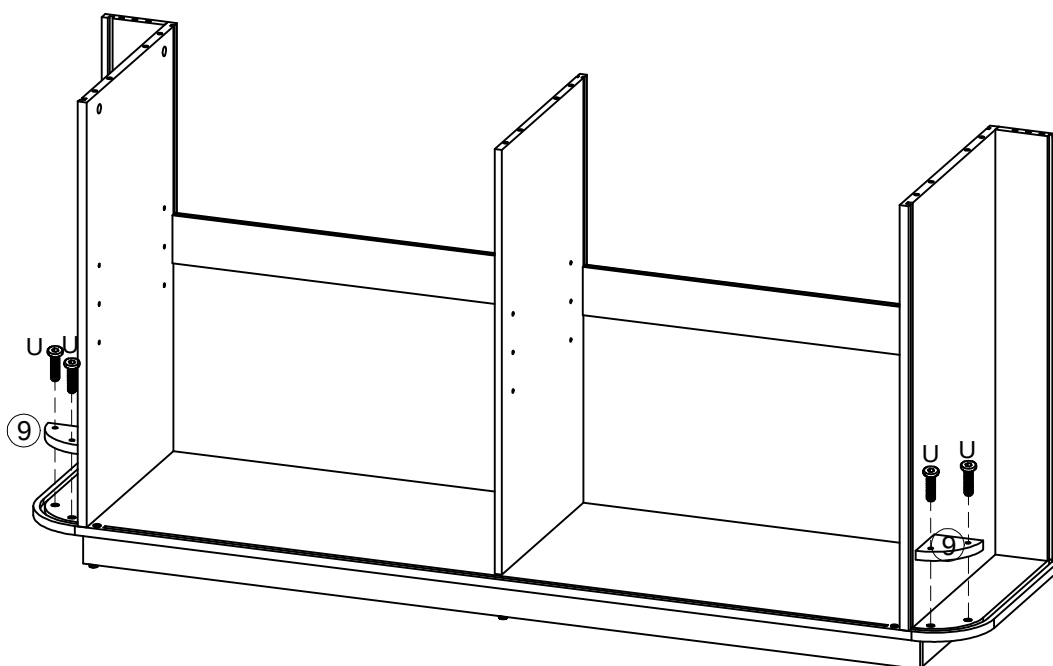

Component No. 9 here is used to assist Component No. 15 in precisely fitting into the groove.

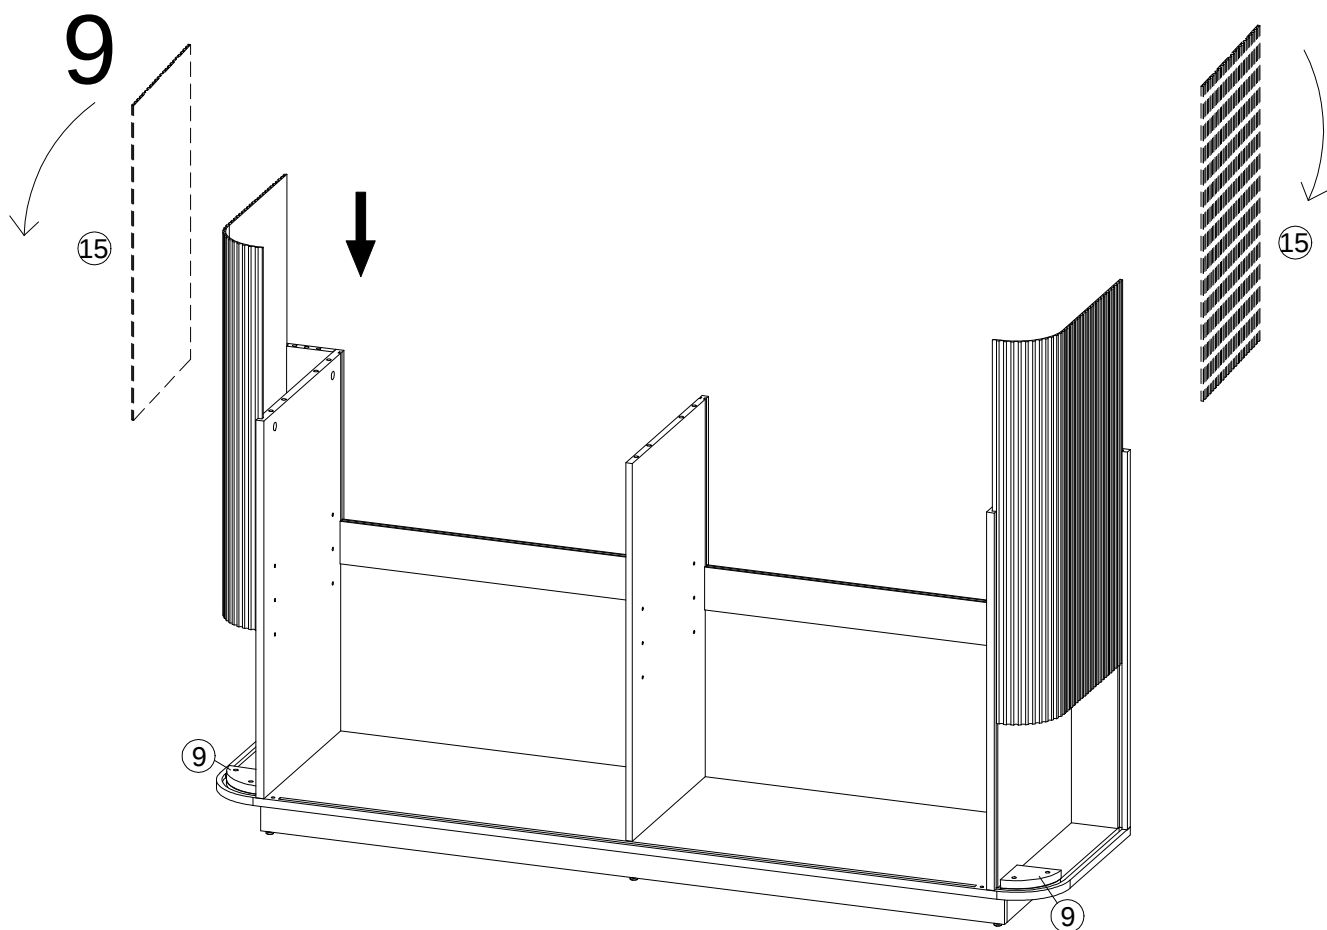



10

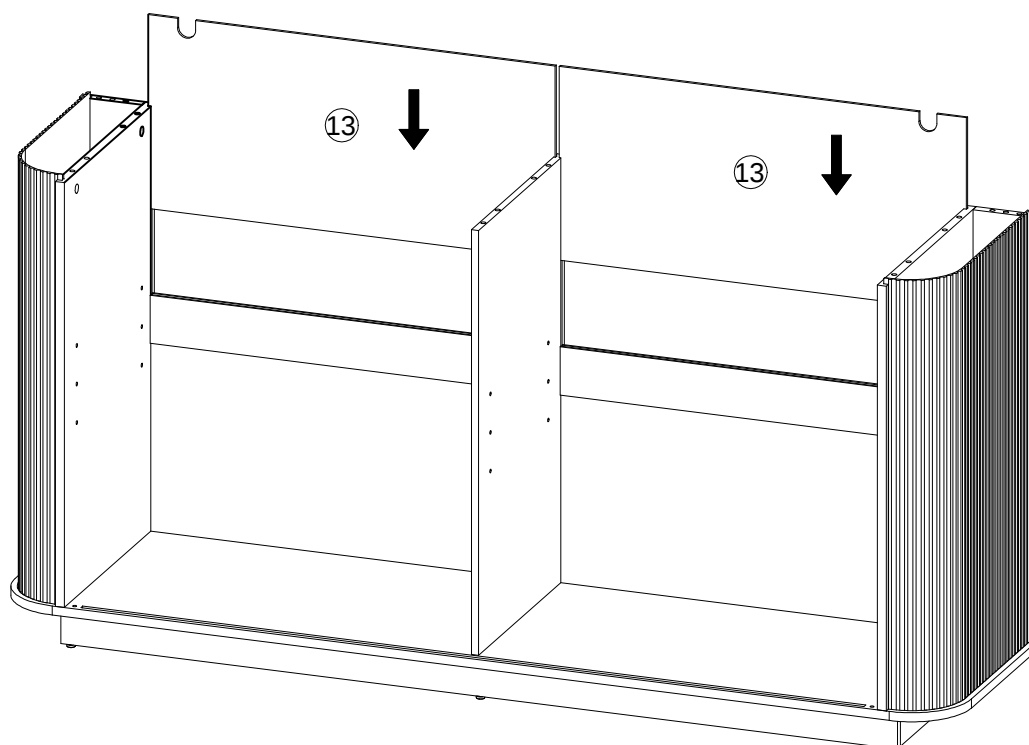

11


The installation of Component 9 is to make the assembly of Component 1 in step 12 smoother. So please do not lock Component No. 9 fully. If the assembly of the step 12 does not go smoothly, it can be adjusted by changing the position of component No. 9. Component No. 9 here is used to assist Component No. 15 in precisely fitting into the groove.

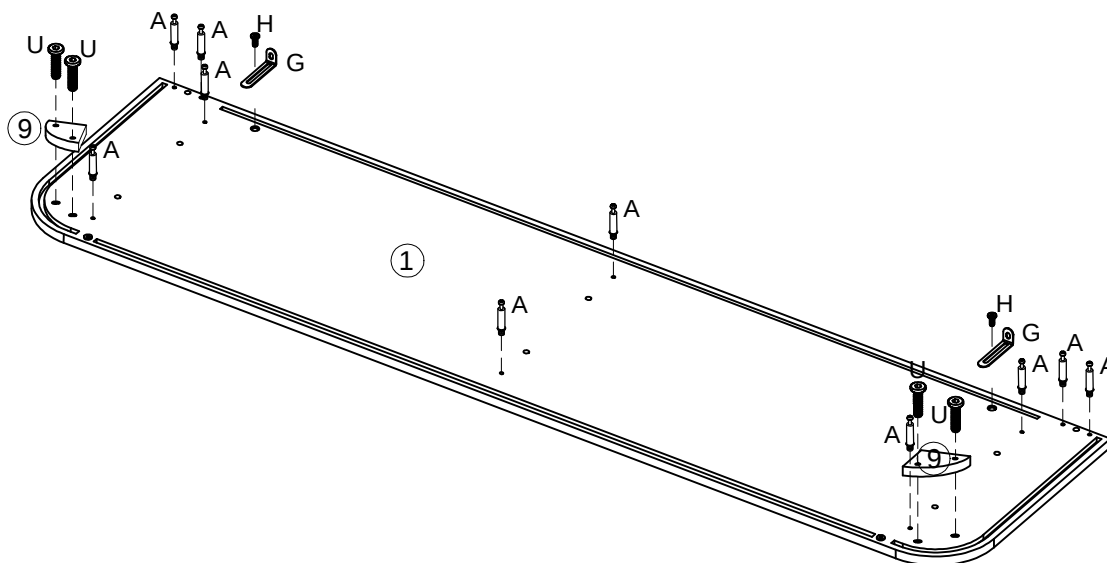

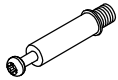A  Ø6.3×35mm 10PCS	G  2PCS	H  M6×12mm 2PCS	U  M6×25mm 4PCS
--	---	---	---



12

Component No. 9 here is used to assist Component No. 15 and No. 1 in precisely fitting into the groove.


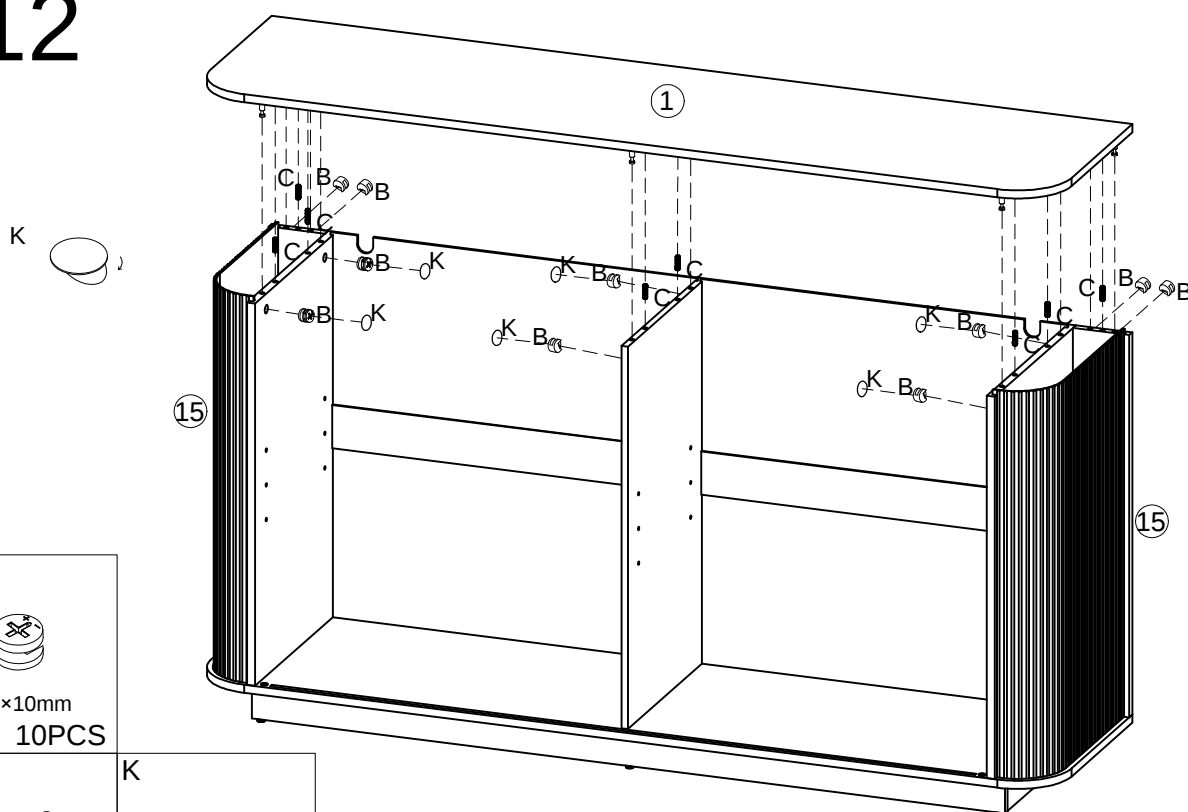


B  Ø15×10mm 10PCS	K  6PCS
C  Ø8×30mm 8PCS	


13

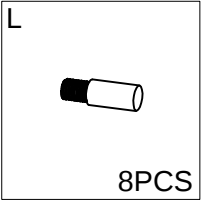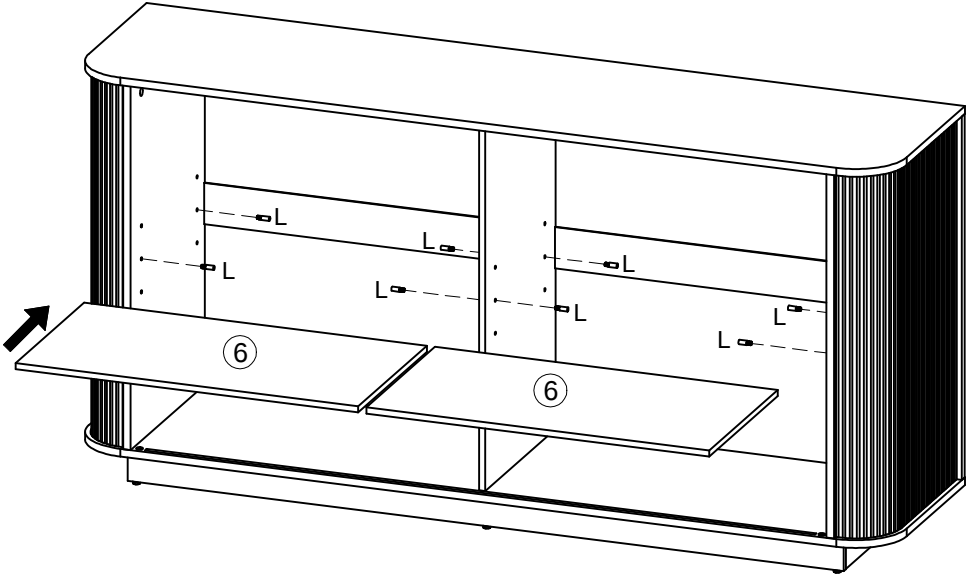

14

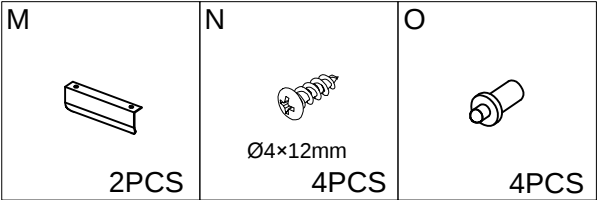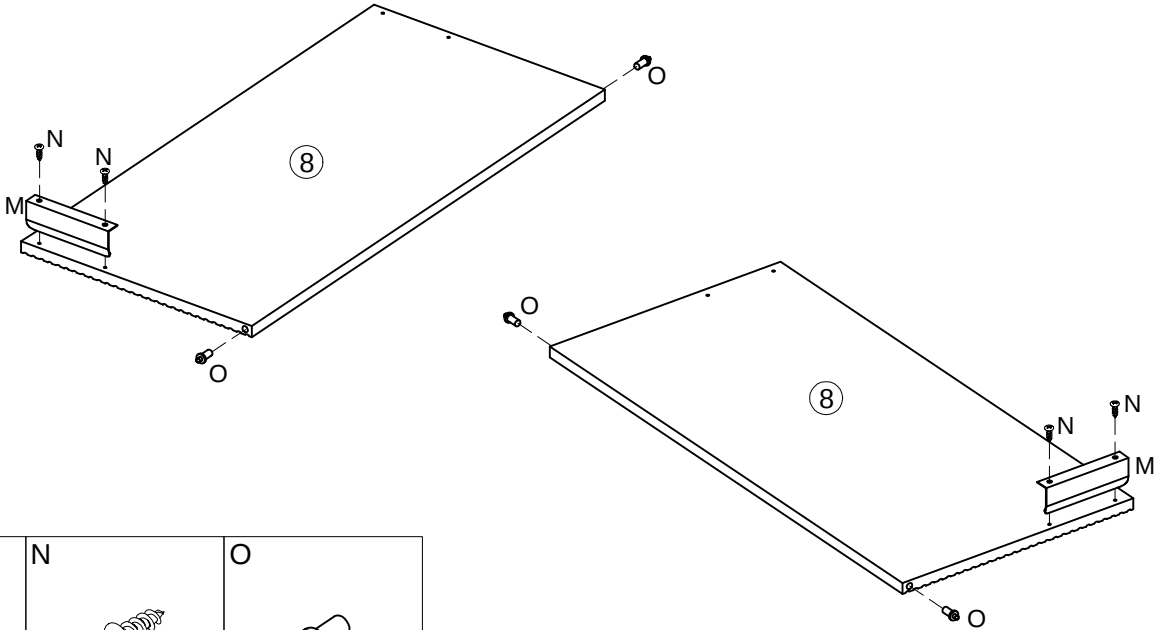


15

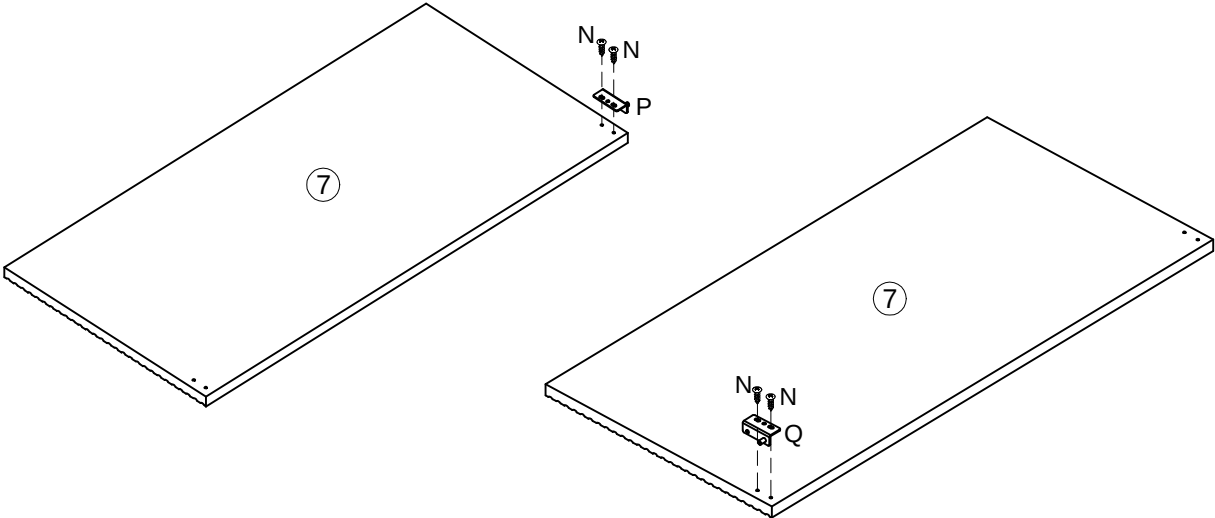





P	Q	N
		
1PC	1PC	Ø4×12mm 4PCS

16





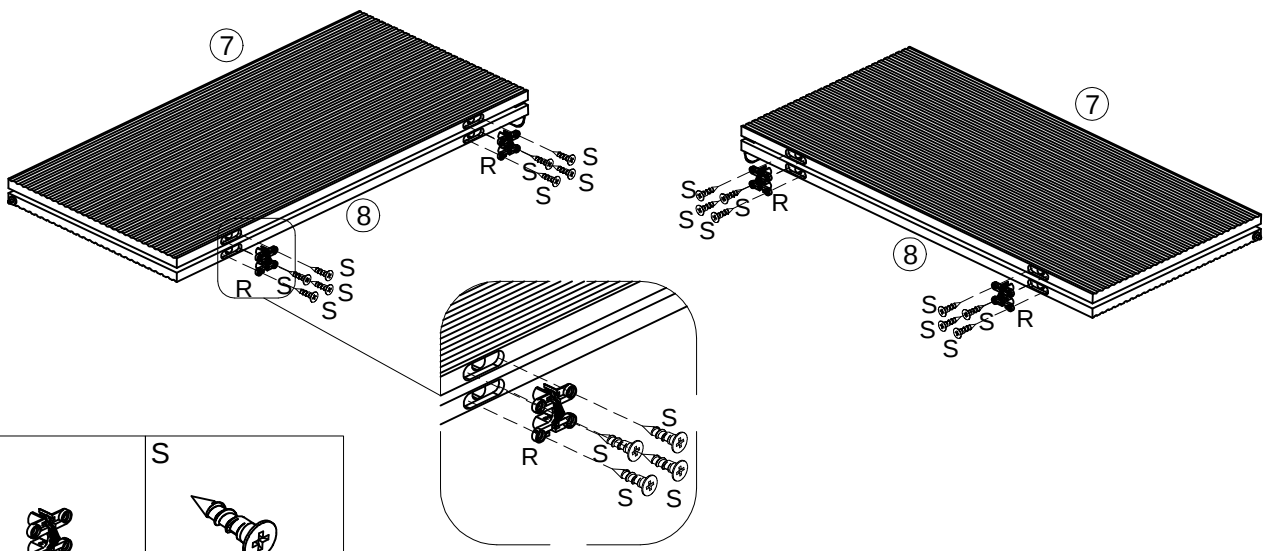


R	S
	
4PCS	Ø3.5×16mm 16PCS




17

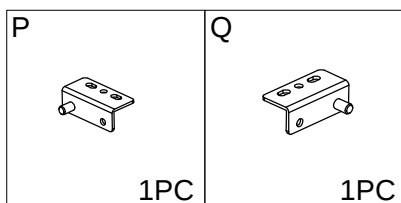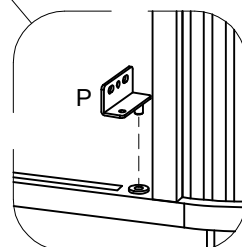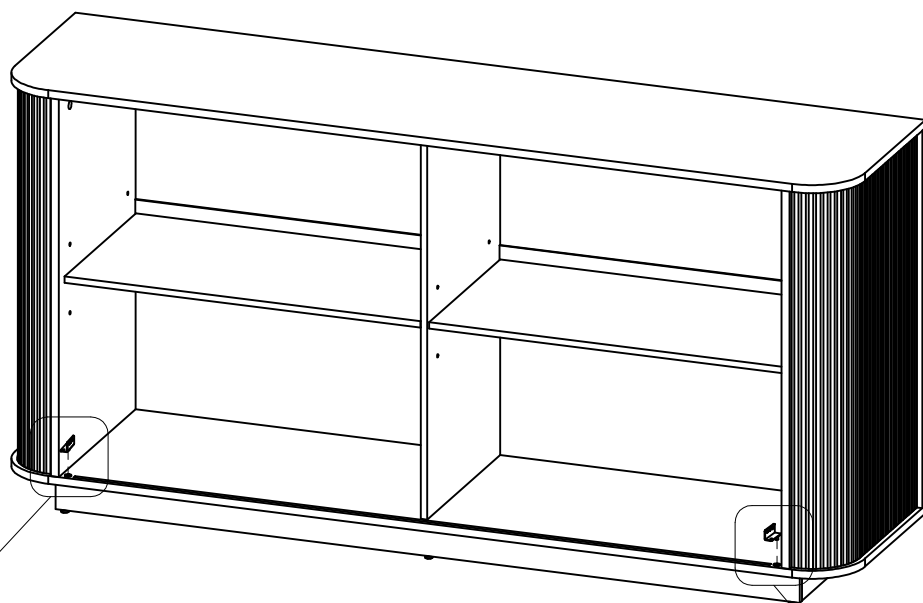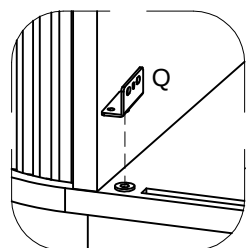




18

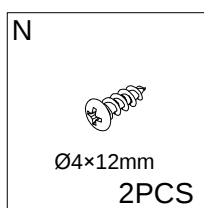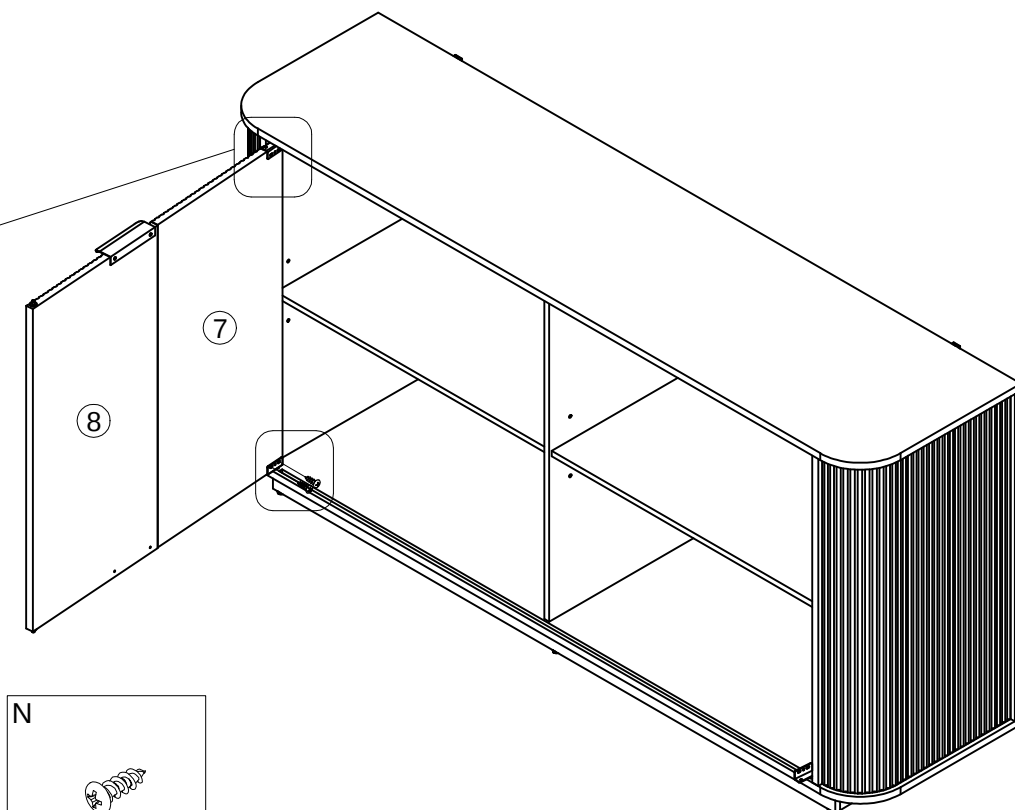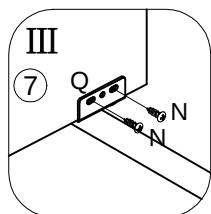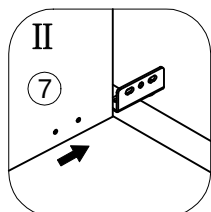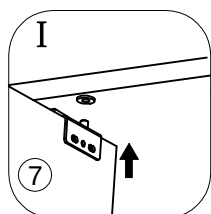



19

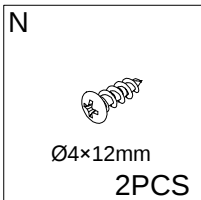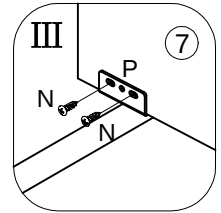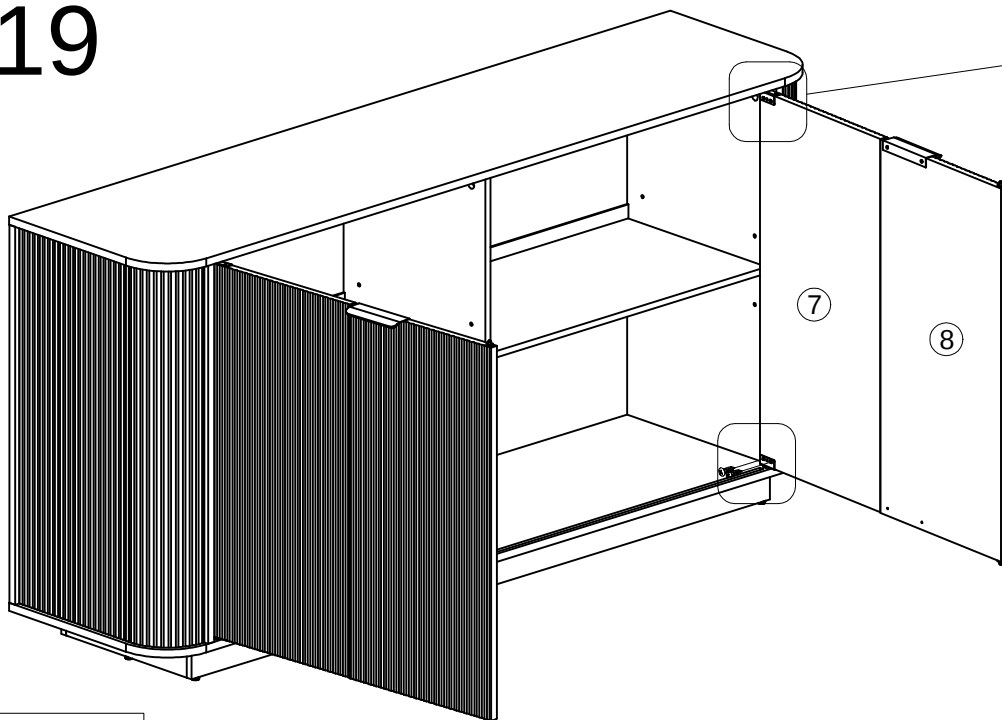




20

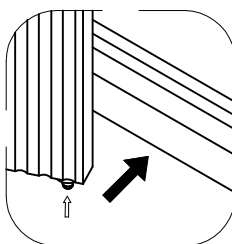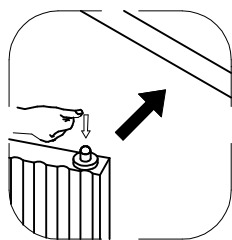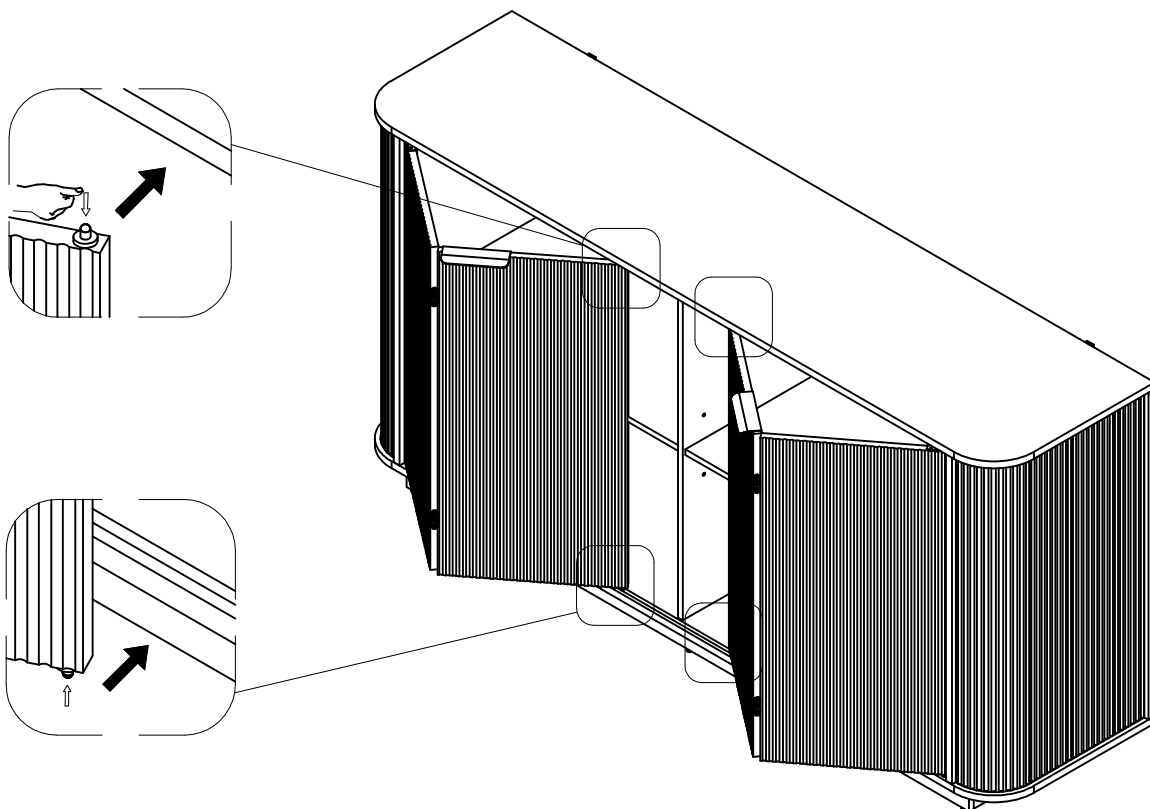


21

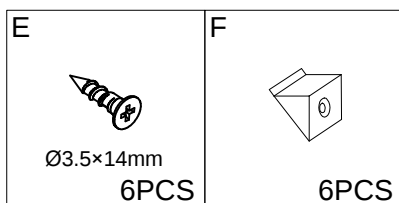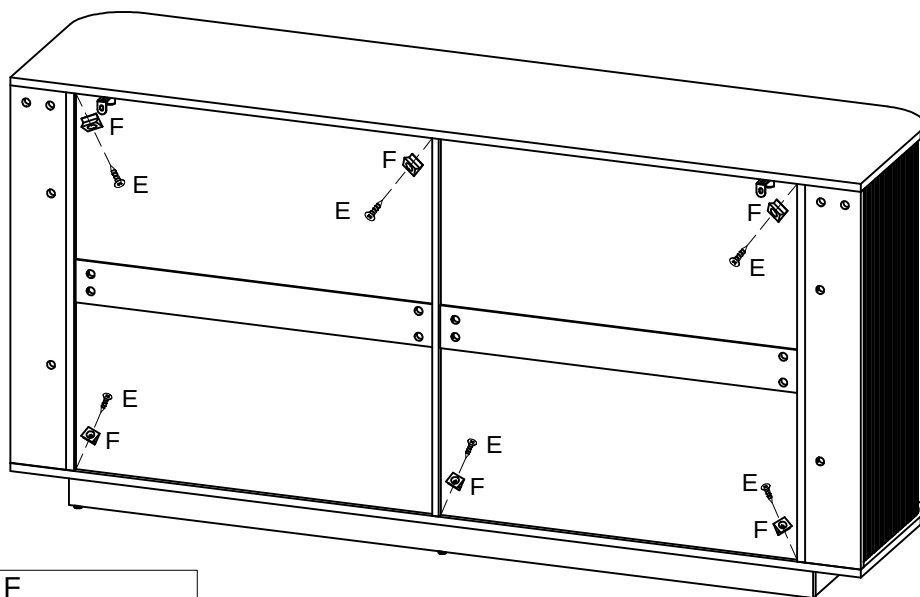

22

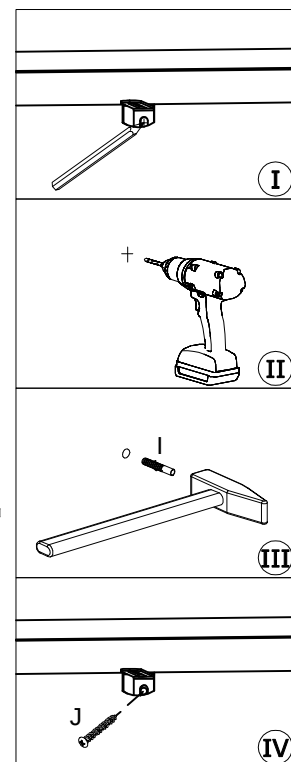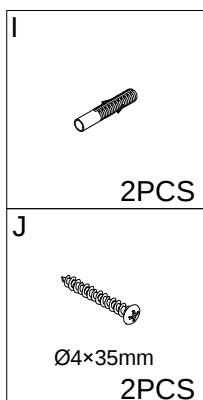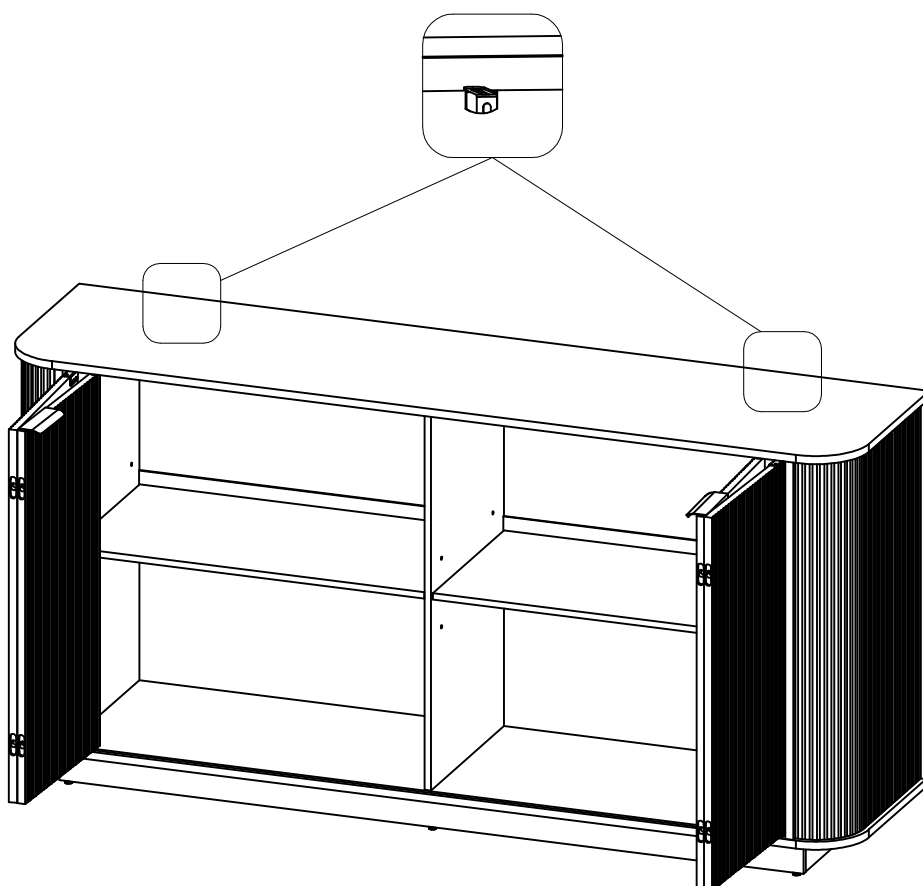


23

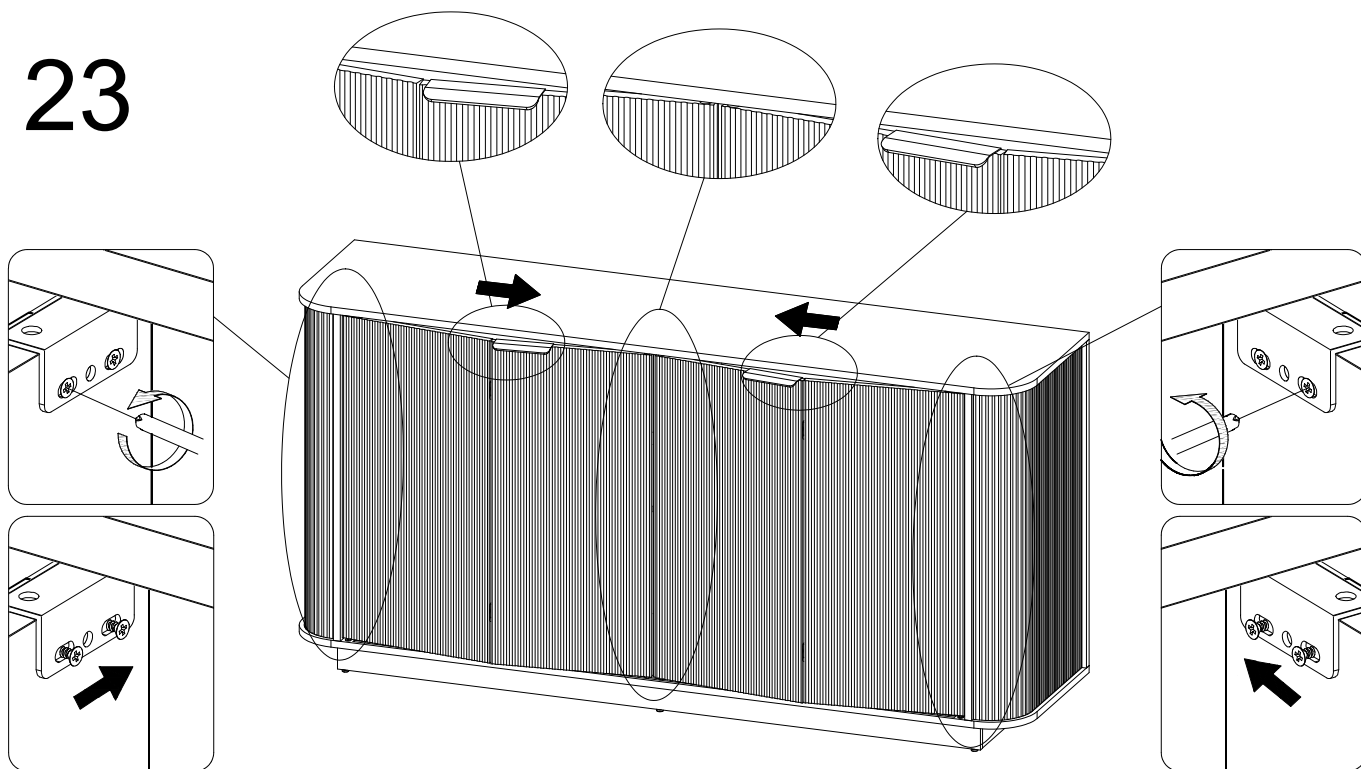

If the two doors cannot be closed well and will squeeze each other.

Please adjust the screws of part P and Q.

- 1. Loosen the screws**
- 2. move the part P and Q inward**
- 3. Tighten the screws to fix the part P and Q on the doors**

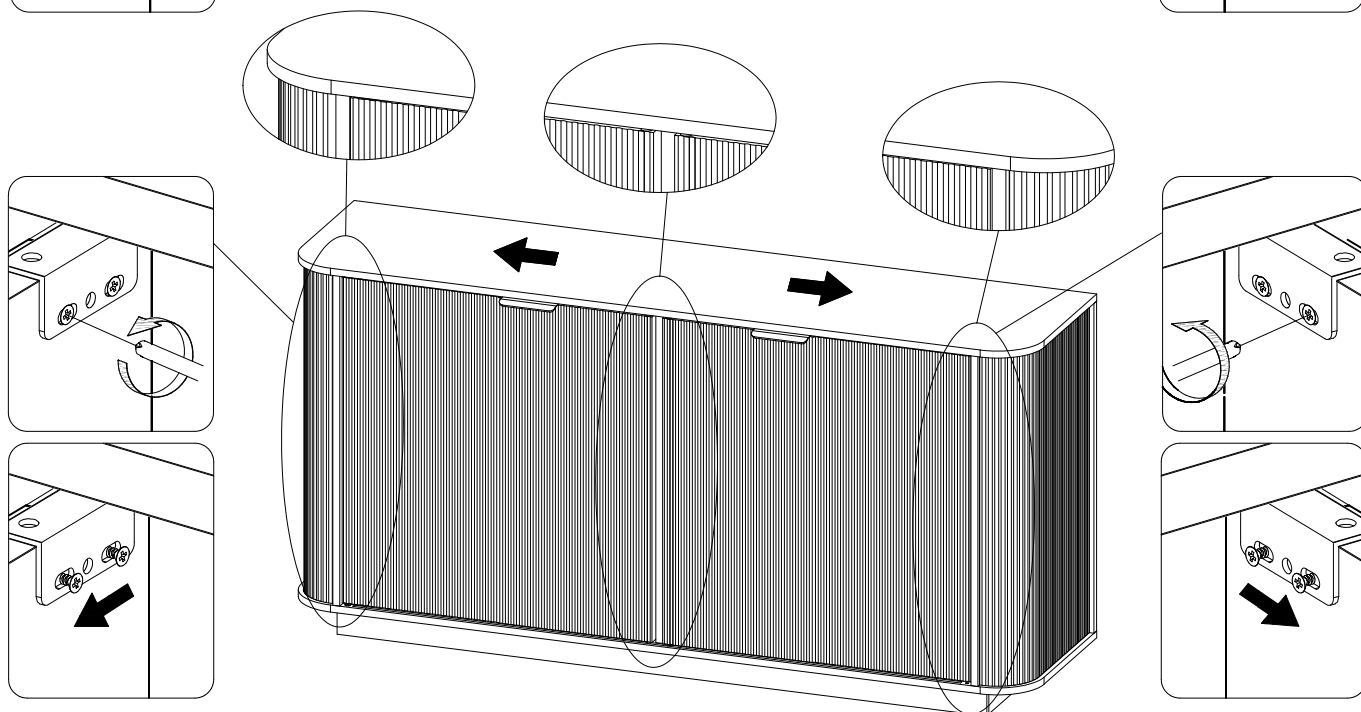

If the gap between the door panels becomes too obvious after installation. Please adjust the screws of part P and Q.

- 1. Loosen the screws**
- 2. move the part P and Q outward**
- 3. Tighten the screws to fix the part P and Q on the doors**