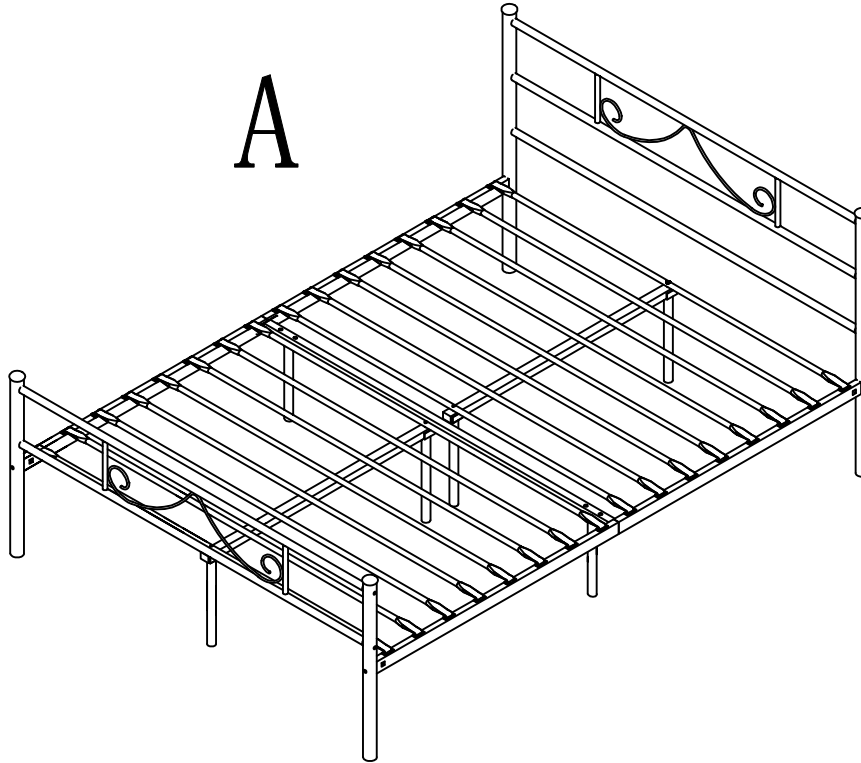
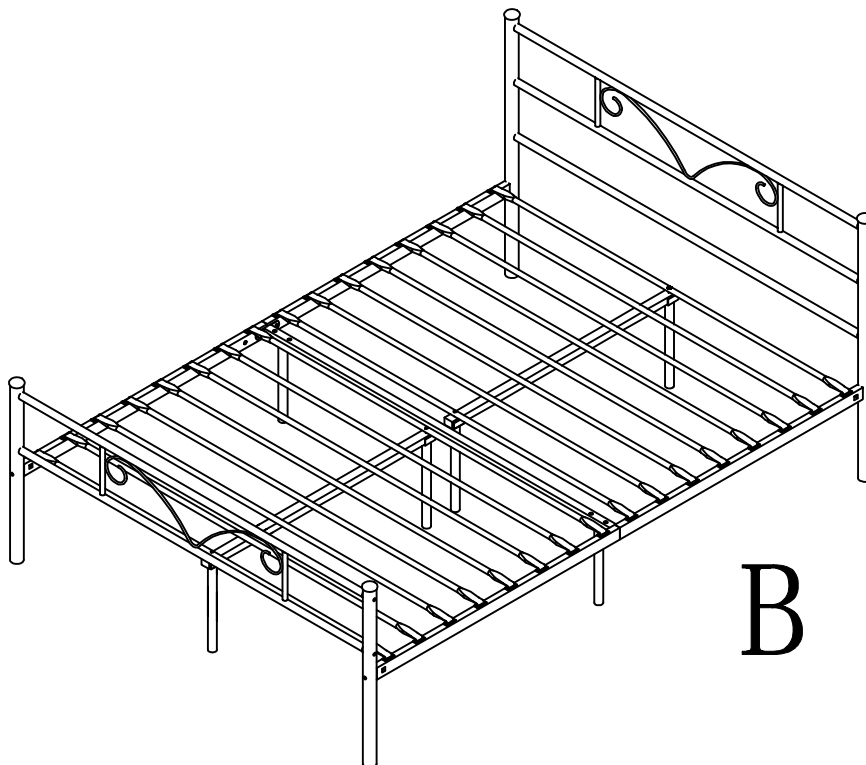


BEARD DO

A















B




Remark: The beard on the headboard and footboard could turn 180 degree, it depends on your taste.

A		M6x70mm	x10
B		M8x70mm	x4
C		M6	x10
D		M6x60mm	x4
E		M6x15mm	x8
F			x4
G		M6x35mm	x4
H		M6	x4
I			x1
J			x1

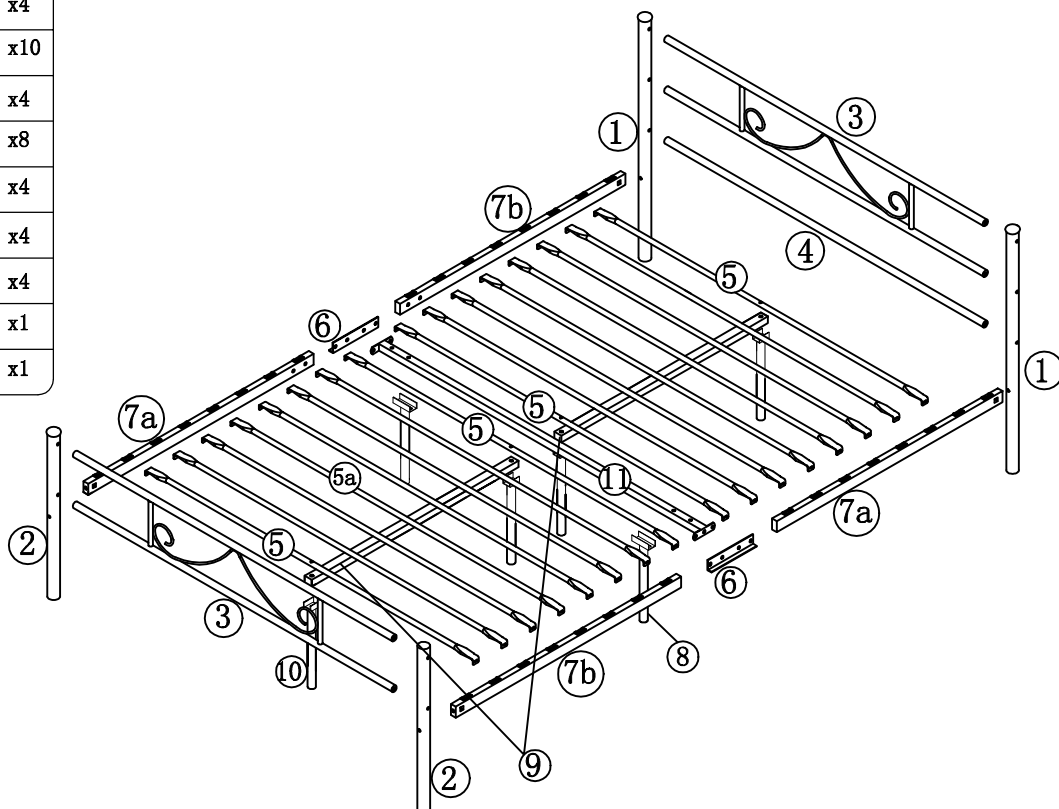

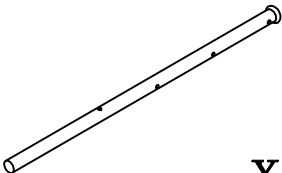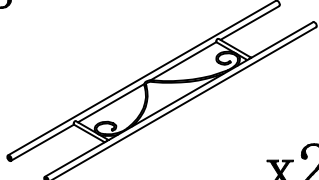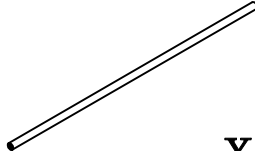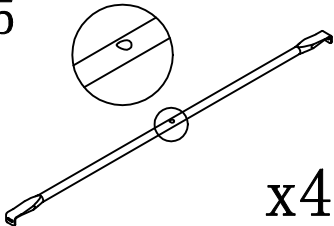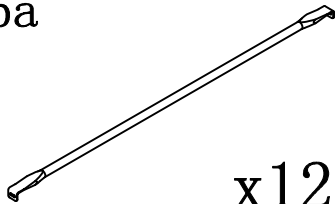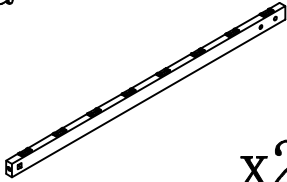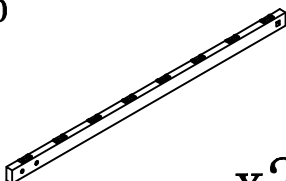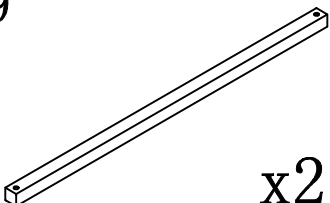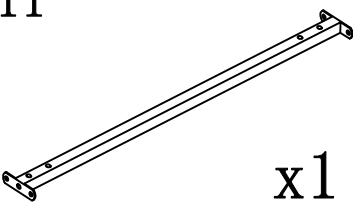
1  x2	2  x2	3  x2	4  x1
5  x4	5a  x12	6  x2	7a  x2
7b  x2	8  x2	9  x2	10  x4
11  x1			

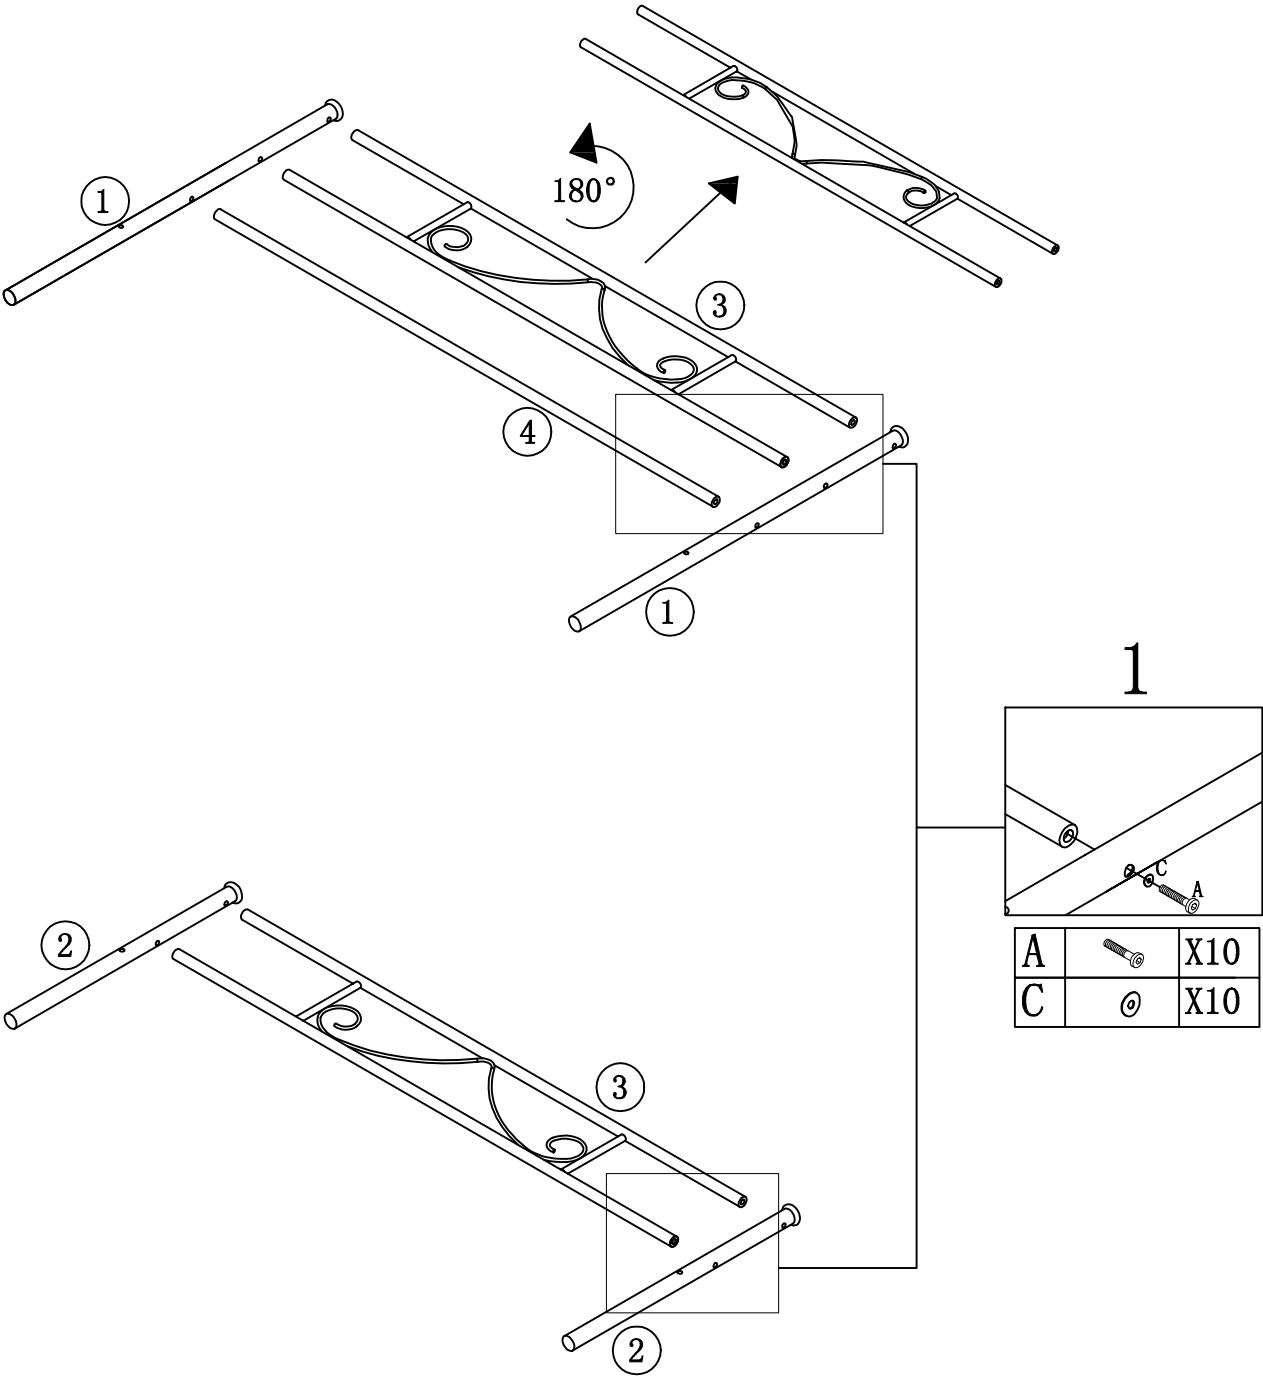STEP 1




STEP 2

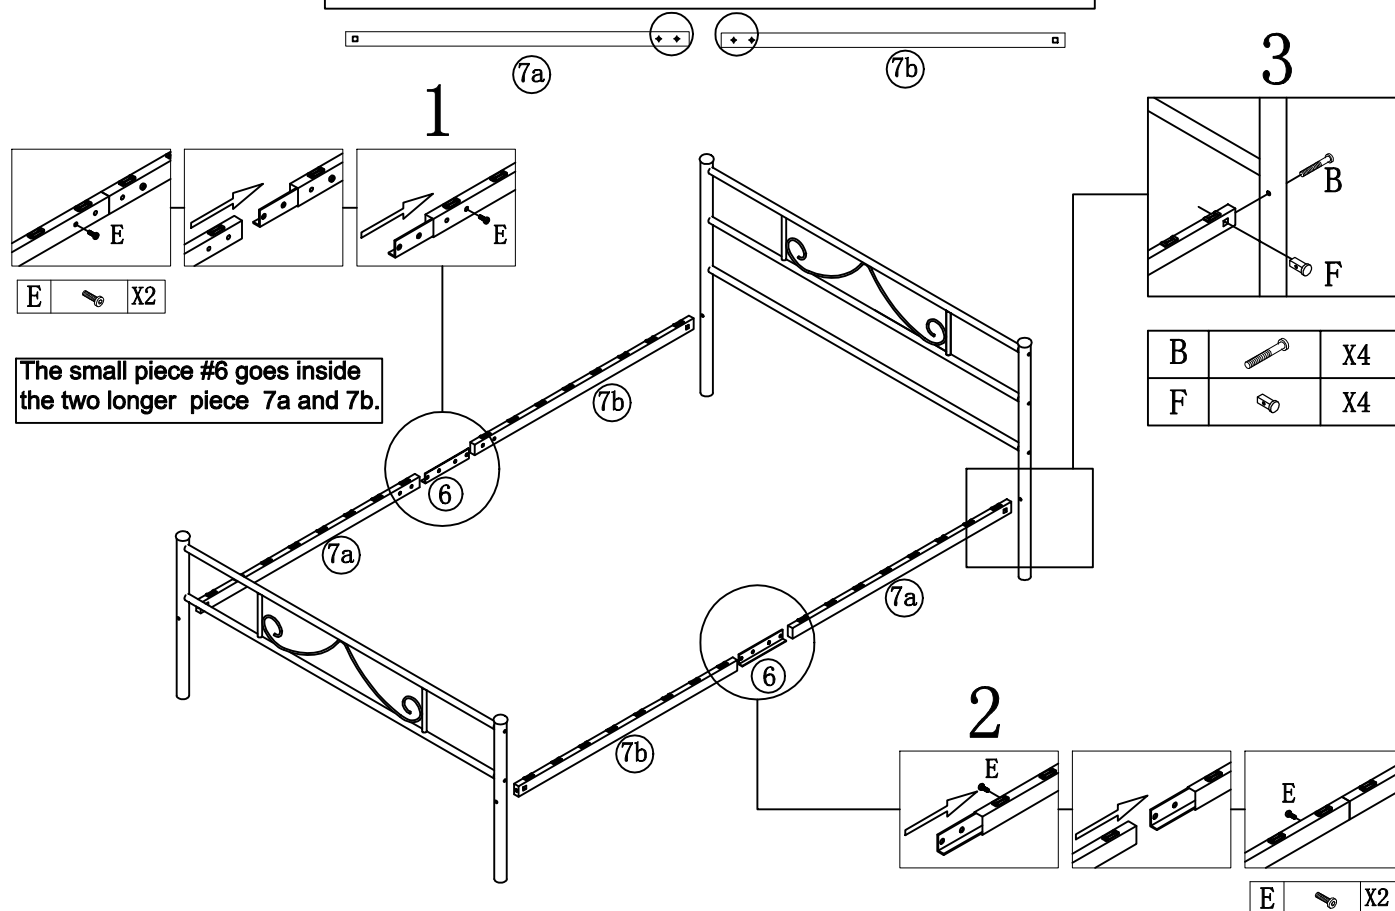
Please separate the parts 7a and 7b before beginning the assembly.



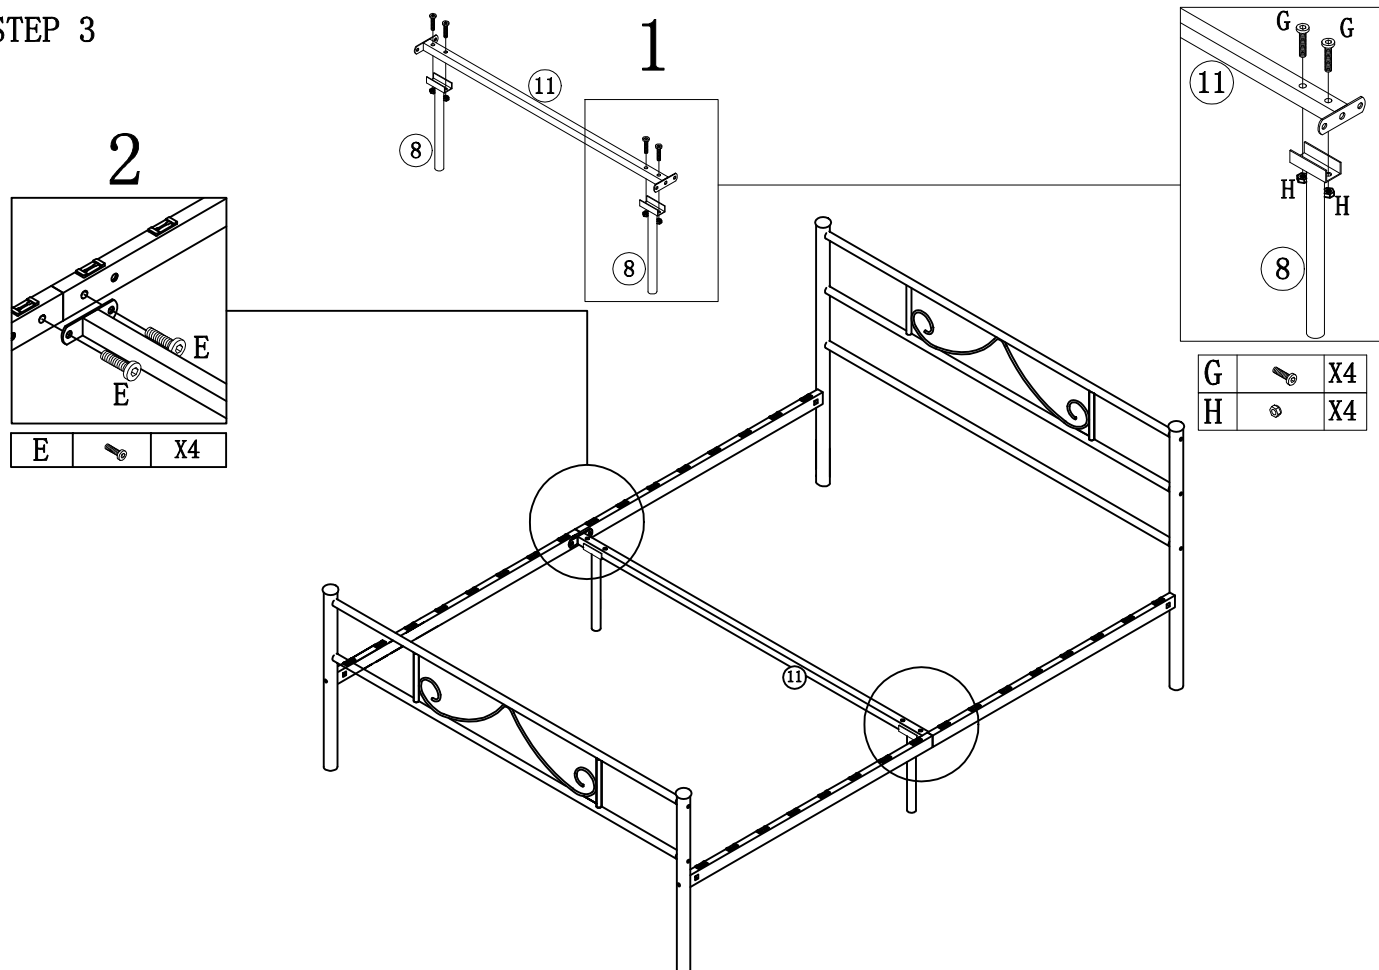STEP 3



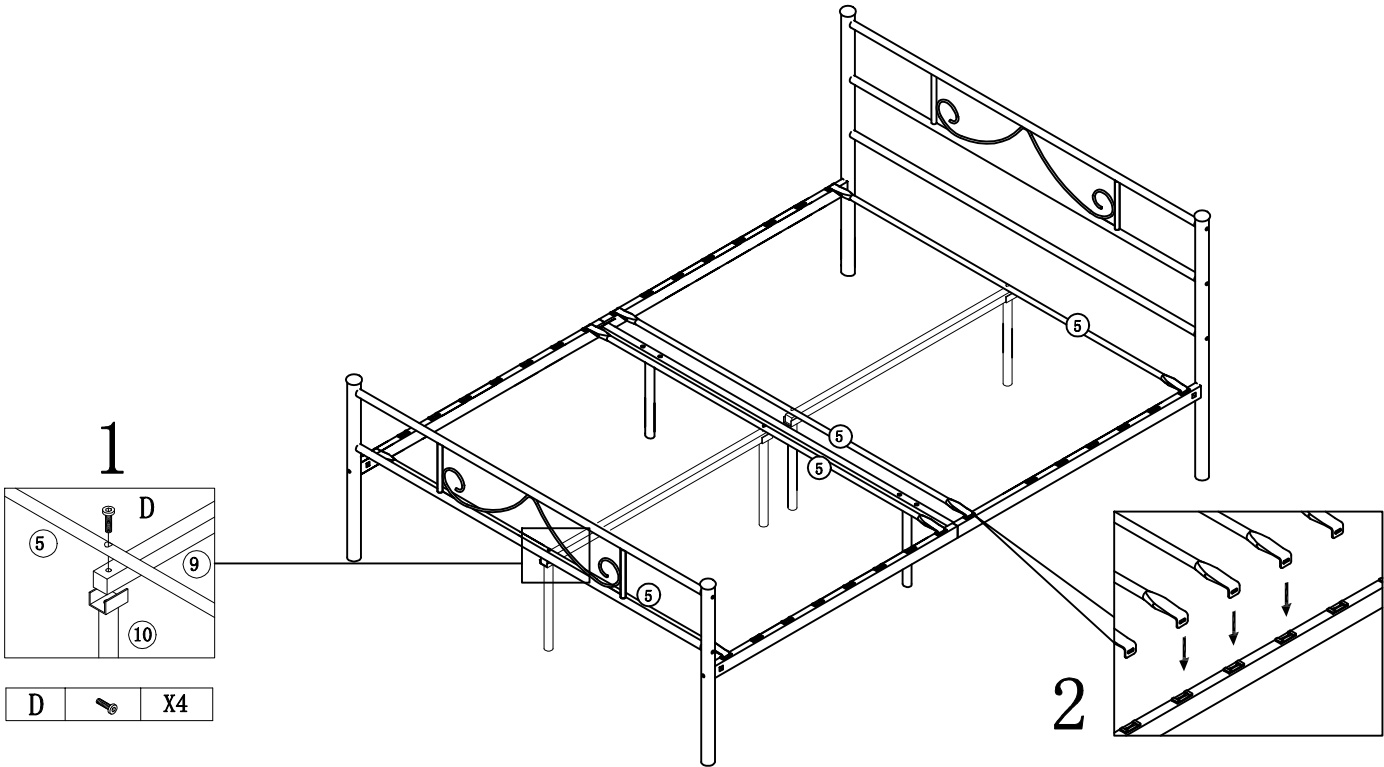STEP 4



STEP 5

