



2 DRAWER FILING CABINET

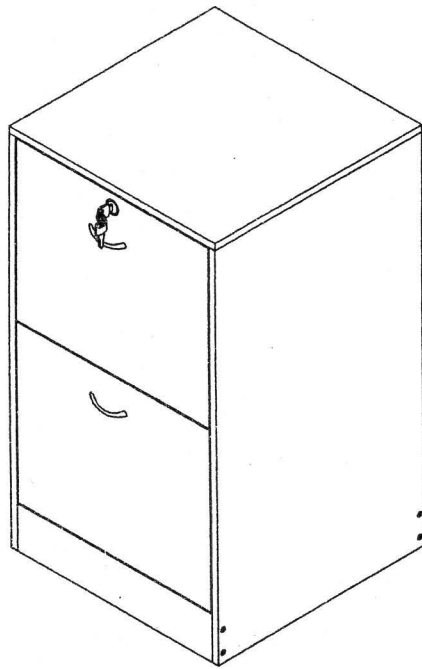


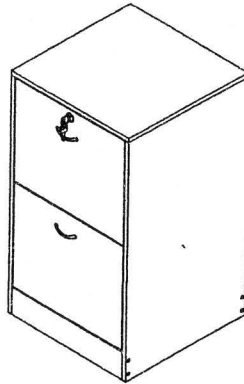













Thank you for purchasing this wonderful product from us.














2 DRAWER FILING CABINET



Hardware List


ITEM	DESCRIPTION	PART	QTY
(A)	Mini Fix		12PCS
(B)	Camlock		12PCS
(C)	Wooden Dowel 6x30 mm		4PCS
(D)	Screw 4x40 mm		8PCS
(E)	Screw 4x30 mm		8PCS
(F)	Runner		4PCS
(G)	Screw 3.5x12mm		16PCS
(H)	Lock		1PC
(I)	Wooden Partical		1PC
(J)	Key		1PC
(K)	Handle		2PCS
(L)	Handel Bolt 4x16 mm		4PCS
(M)	Runner Bolt 4x10 mm		4PCS
(N)	Screw 3x20 mm		4PCS
(O)	Plastic Clip		4PCS

PART List

ITEM	DESCRIPTION	PART	QTY
①	Top Panel		1PC
②	Right Side Panel		1PC
③	Left Side Panel		1PC
④	Cross Bar		1PC
⑤	Bottom Back Cross Bar		1PC
⑥	Drawer Front Panel		1PC
⑦	Drawer Front Panel		1PC
⑧	Drawer Left Panel		2PCS
⑨	Drawer Right Panel		2PCS
⑩	Drawer Back Panel		2PCS
⑪	Drawer Bottom Panel		2PCS
⑫	Back Panel		1PC
⑬	Iron Rail		4PCS


2 Drawer Filing Cabinet

STEP 1

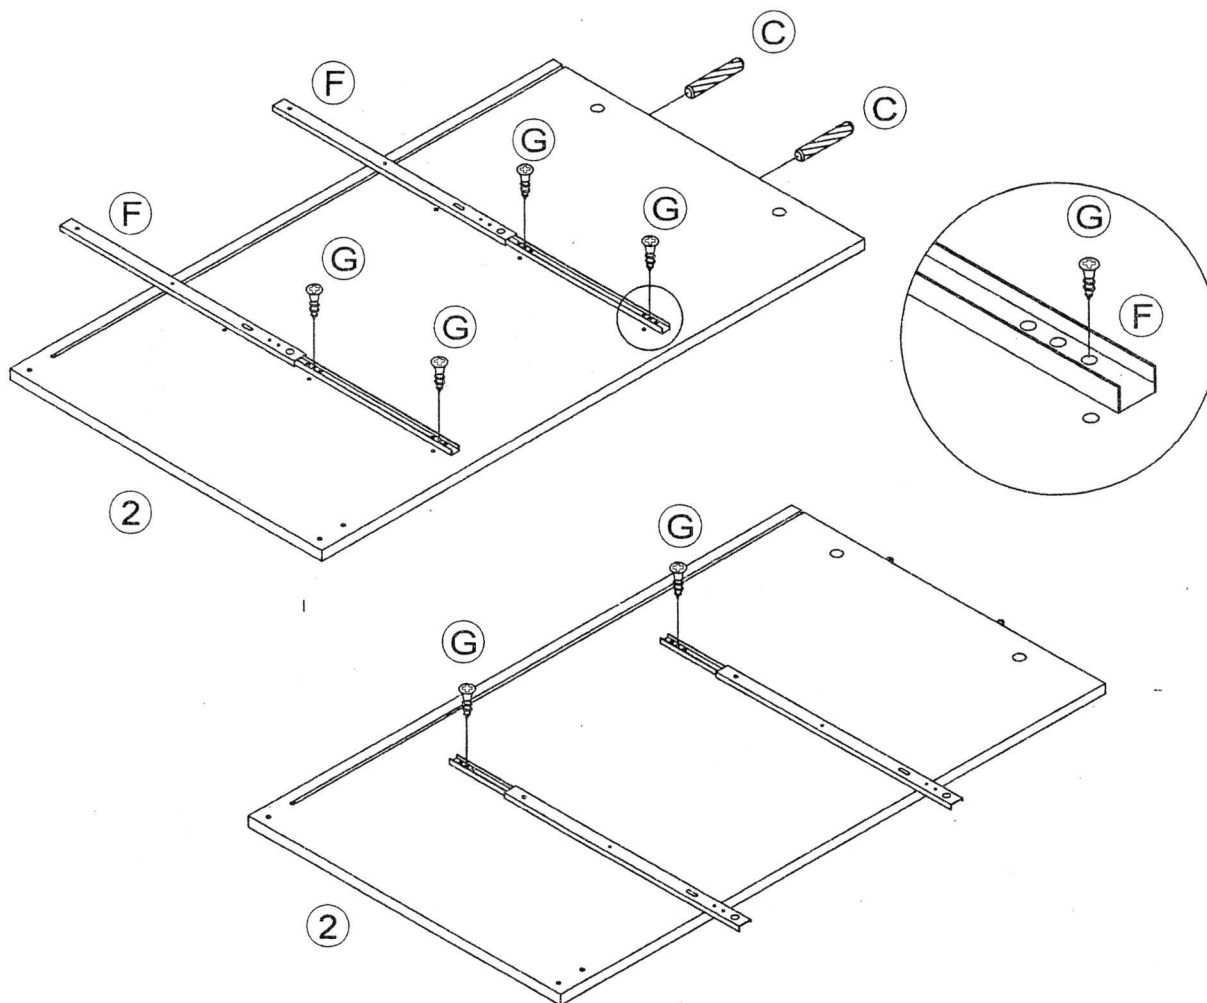


Assemble Runner (F) to the right Panel (2) by using Wooden Dowel (C), Screw (G) as shown.

STEP 2

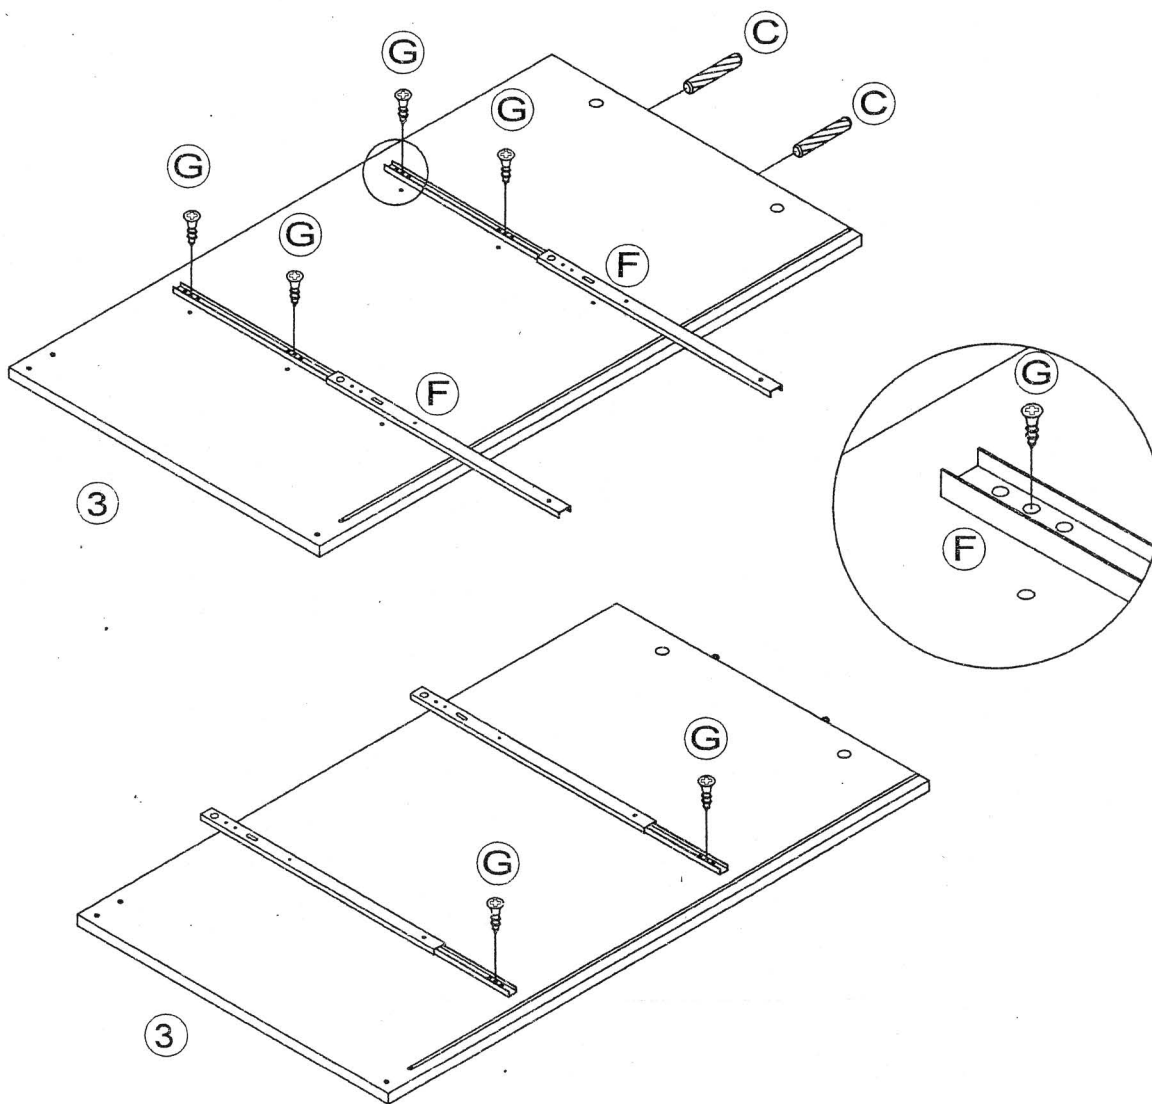


Assemble Rail (F) to the left Panel (3) by using Wooden Dowel (C), Screw (G) as shown.
Assemble Runner (F) to the left Panel (3) by using Wooden Dowel (C), Screw (G) as shown.

STEP 3

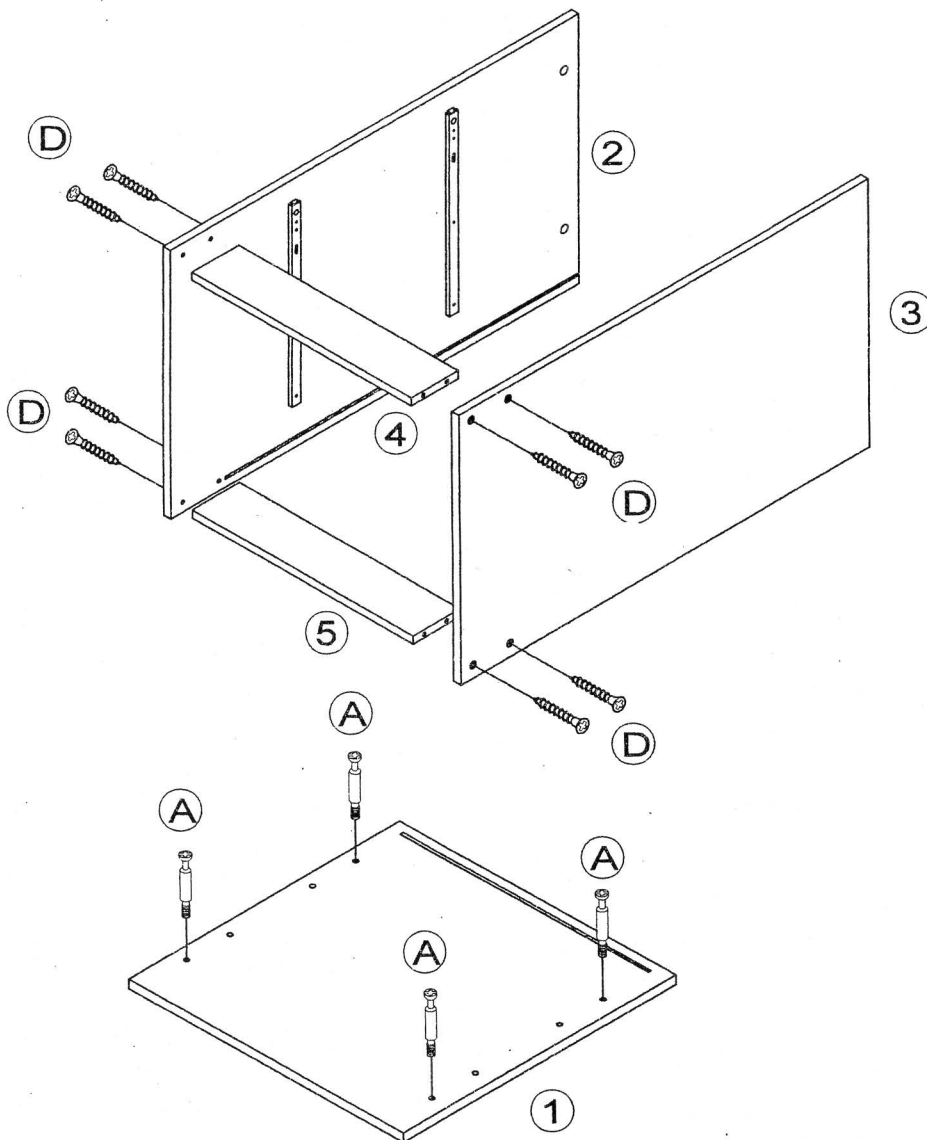


Assemble Bottom Back Cross Bar(5), Cross Bar(4) to Right Side Panel(2) and Left Side Panel(3). Assemble Panel (2) and Panel (3) to connect with Panel (4) by using the Screw (D), and then install the top Panel (1) by using Screw (A) as shown. by using Screw(D) as shown, then install the Mini Fix(A) to the top Panel (1) as shown.

STEP 4

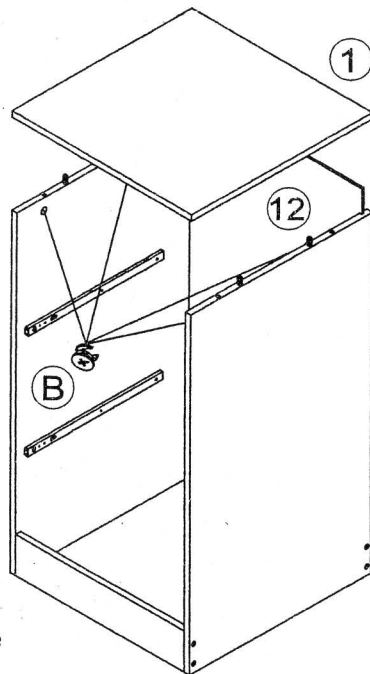


Insert the Back Panel(12) to the assembled unit, then assemble the top Panel(1) to assembled unit by using Cam Lock(B) as shown.

STEP 5

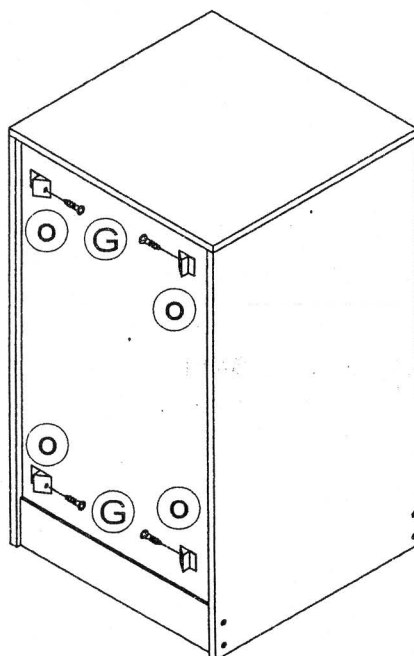


Using the Plastic Clip (O) and Screw(G) to tighten the Back Panel as shown.


STEP 6

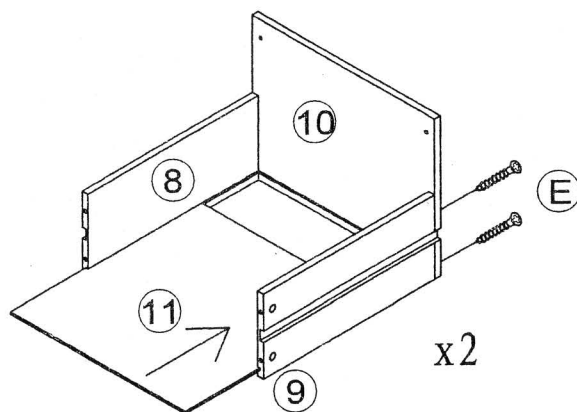

Assemble Drawer Left Side Panel(8),Drawer Right Side Panel(9) to the Drawer Back Panel(10) by using Screw(E) as shown, then insert the Bottom Panel(11) it's position as shown.

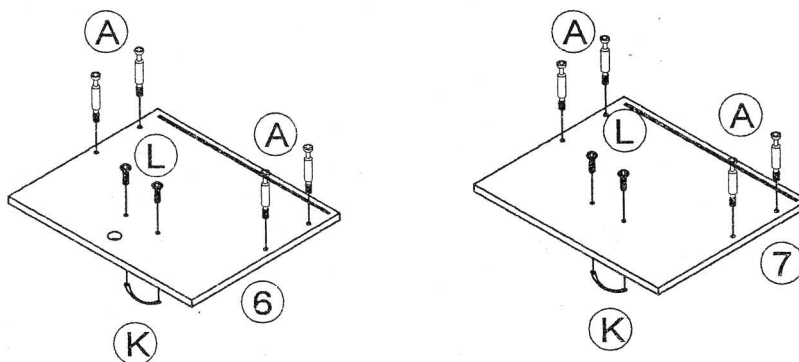


Assemble the Mini Fix(A) to the Drawer Front Panel(6)(7),then install the Handle(K) to the Drawer Front Panel(6),(7)by using Handle Bolt(L) as shown.

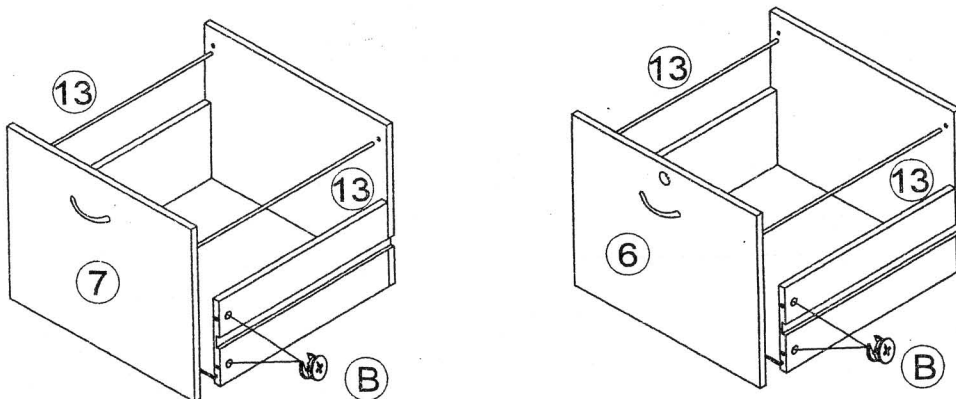

Insert the Iron Rail(13)to the Drawer Back Panel(10), then install the Drawer Front Panel(6),(7) to assemble unit by using Camlock(B).

STEP 7

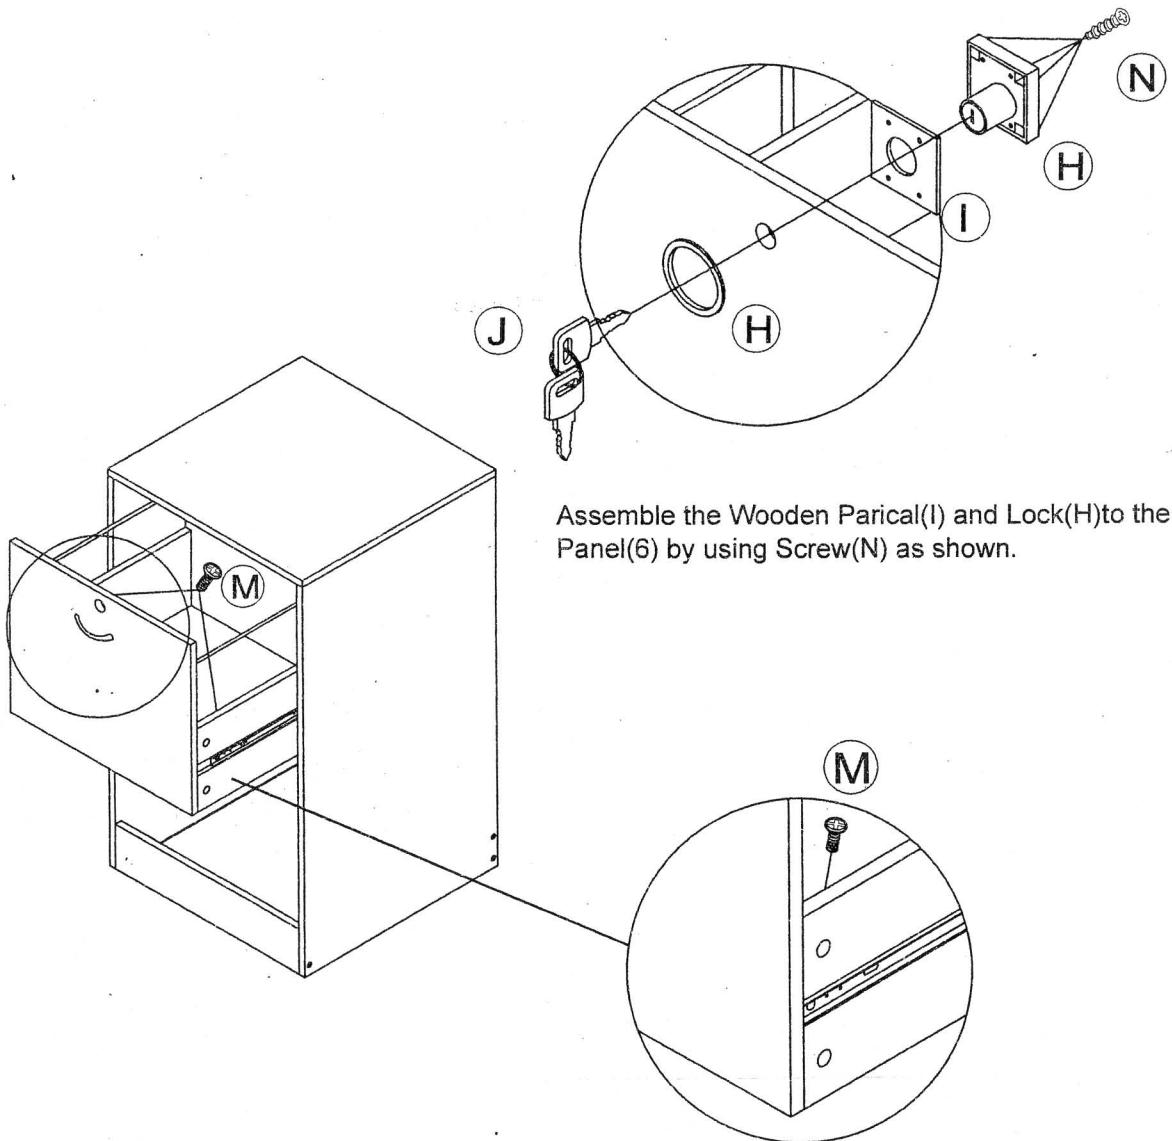

Assemble the Wooden Parical(I) and Lock(H)to the Panel(6) by using Screw(N) as shown.

Assemble the drawer to the Runner(F) by using Screw(M) as shown.