

INSTALLATION INSTRUCTIONS

Read these instructions carefully.
Ensure that all parts are complete
before assembling.

(A)  Allen Key x1

(B)  Flat Washer x10

(C)  Spring Washer x10

(D)  M6*50 Bolt x6

(E)  M6*80 Bolt x4

(F)  Chair Back x1


(G)  Chair Seat x1

(H)  Front Leg x2

Lay a clean cloth before
assembly to prevent
scratches, dents and
stains on the bar stool.




Always install flat washer
and spring washers with
all screws.

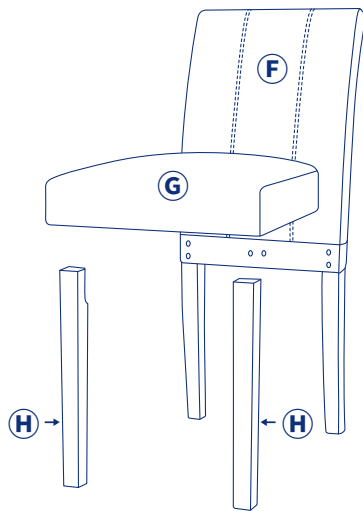

Step 1



Tighten to 50%

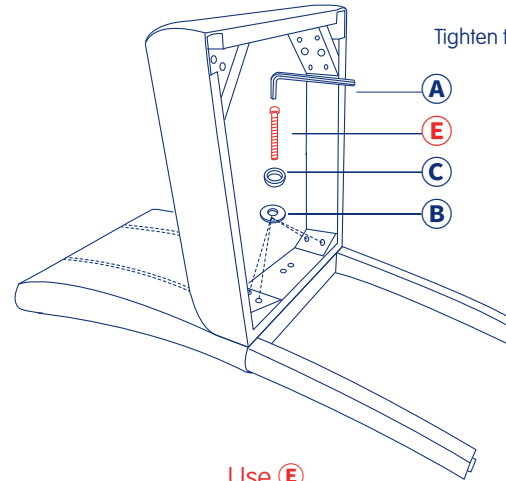


Use **(E)**
The longest screw


Step 2



Tighten to 50%

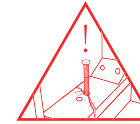


Warning: Do not use
the longest screw,
Risk of cracking or breaking
the backrest crossbar.

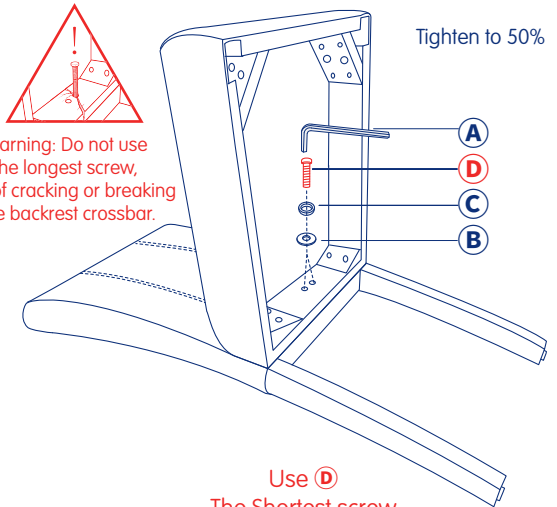


Use **(D)**
The Shortest screw

Step 3



Tighten to 50%

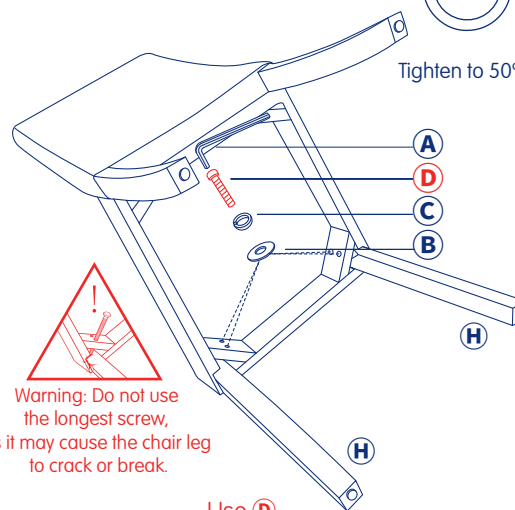

Warning: Do not use
the longest screw,
as it may cause the chair leg
to crack or break.

Use **(D)**
The Shortest screw

Step 4



Tighten to 100%

