



Assembly Instructions

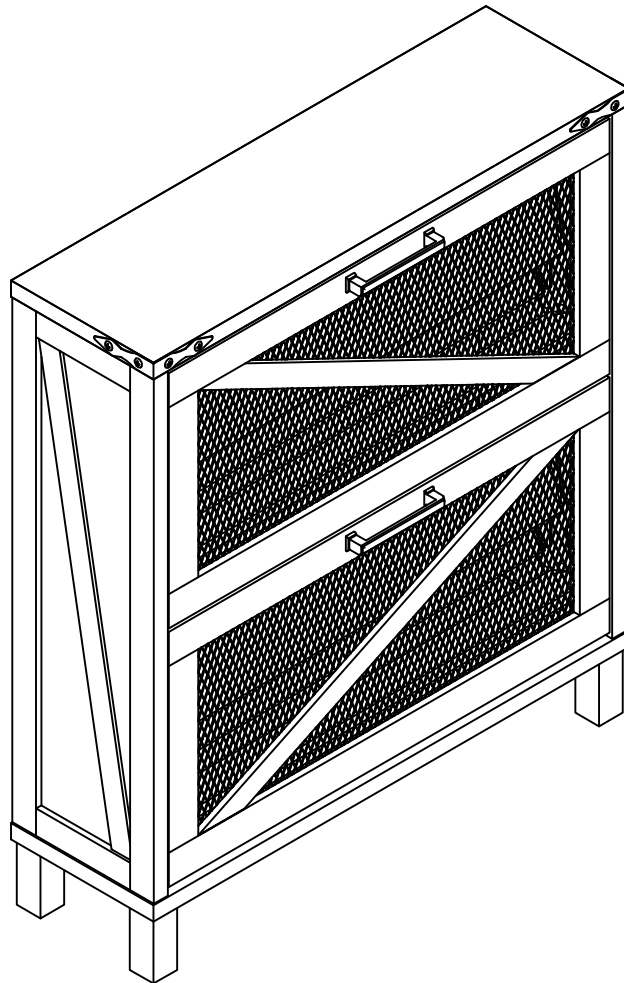


If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

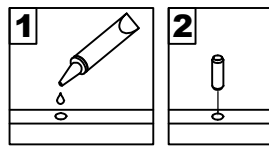


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

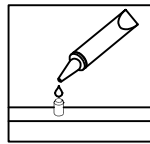


- VI. A Phillips head screwdriver is required for the assembly of this product .

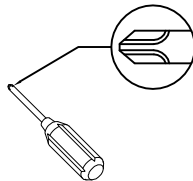





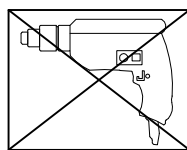





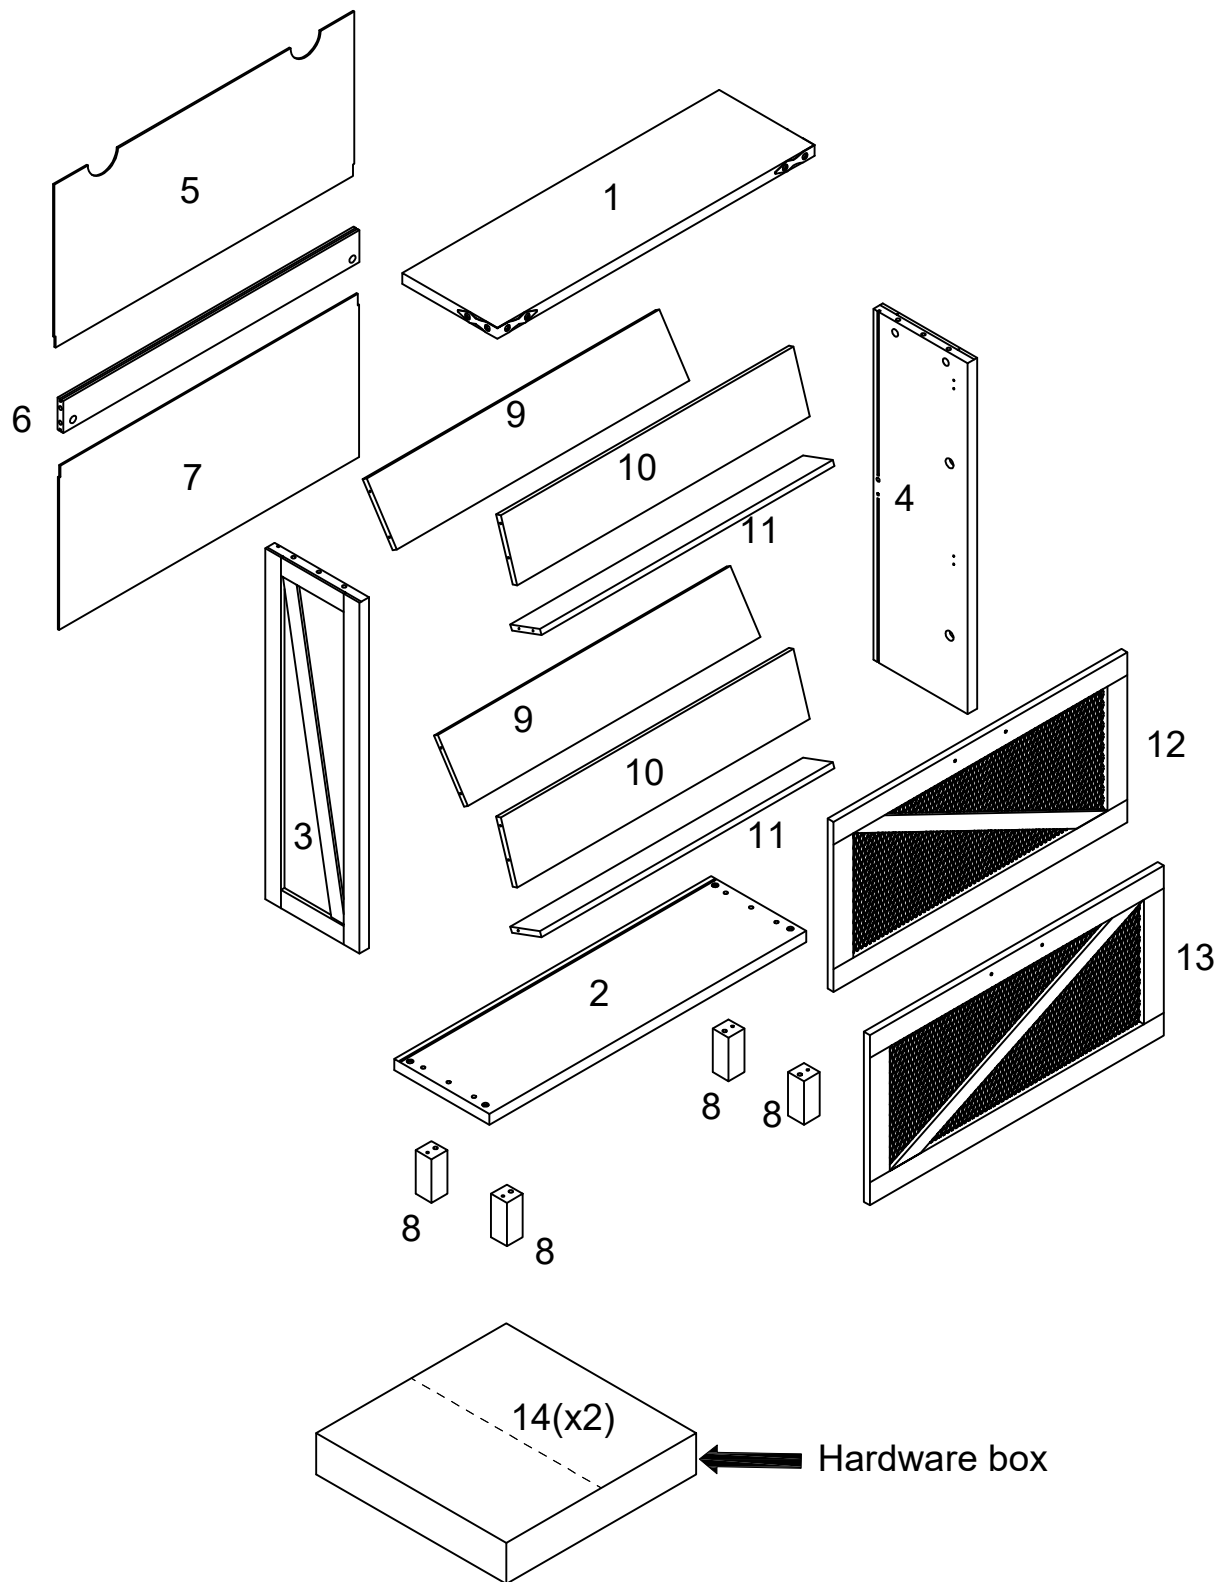








- VII. Power tools should not be used to assemble this product .




Parts List



Hardware List


A		Ø8x30mm	Wooden dowel	10	pcs
B		Ø6x35mm	Cam bolt	6	pcs
C		Ø15x11mm	Cam lock	6	pcs
D		Ø30mm	Sticker	6	pcs
E		M 4	Hex Key	1	pc
F		Ø6x50mm	Screw	8	pcs
G		M6*12mm	Bolt	2	pcs
H			Anti-tipping iron sheet	2	pcs
I			Gasket	2	pcs
J			house lizard	2	pcs
K		Ø4x25mm	Screw	2	pcs
L			Handle	2	pcs
M		Ø4x19mm	Bolt	4	pcs
U		Ø4x25mm	Screw	20	pcs
V		Ø3x12mm	Screw	12	pcs
W			Plastic wedge	12	pcs
X		Ø3x17mm	Screw	12	pcs
R		Ø3x15mm	Screw	8	pcs
S			Glue tube	1	pc

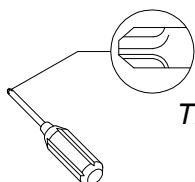


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

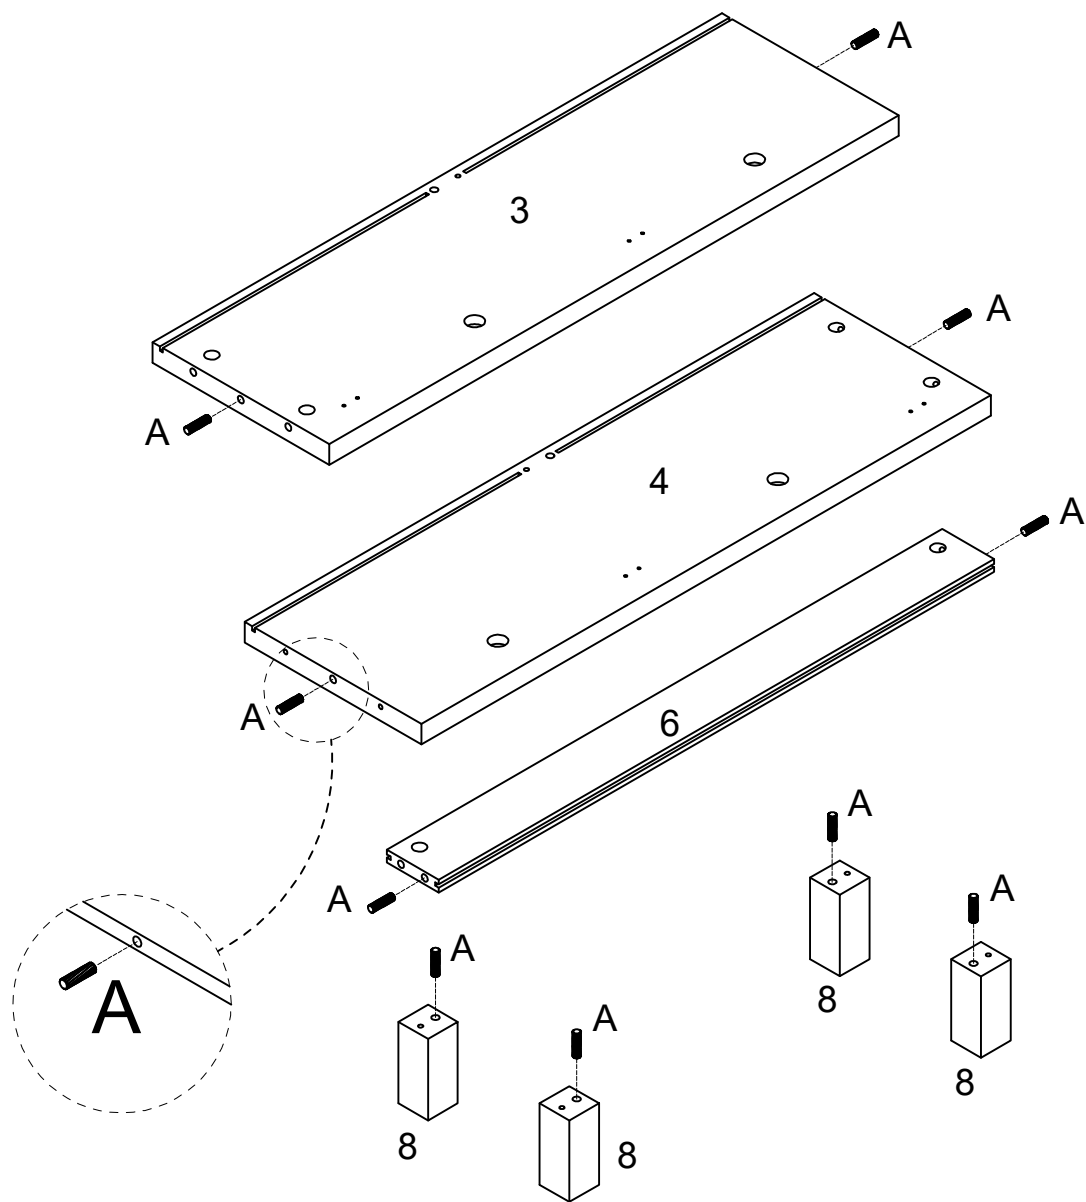


A

X10

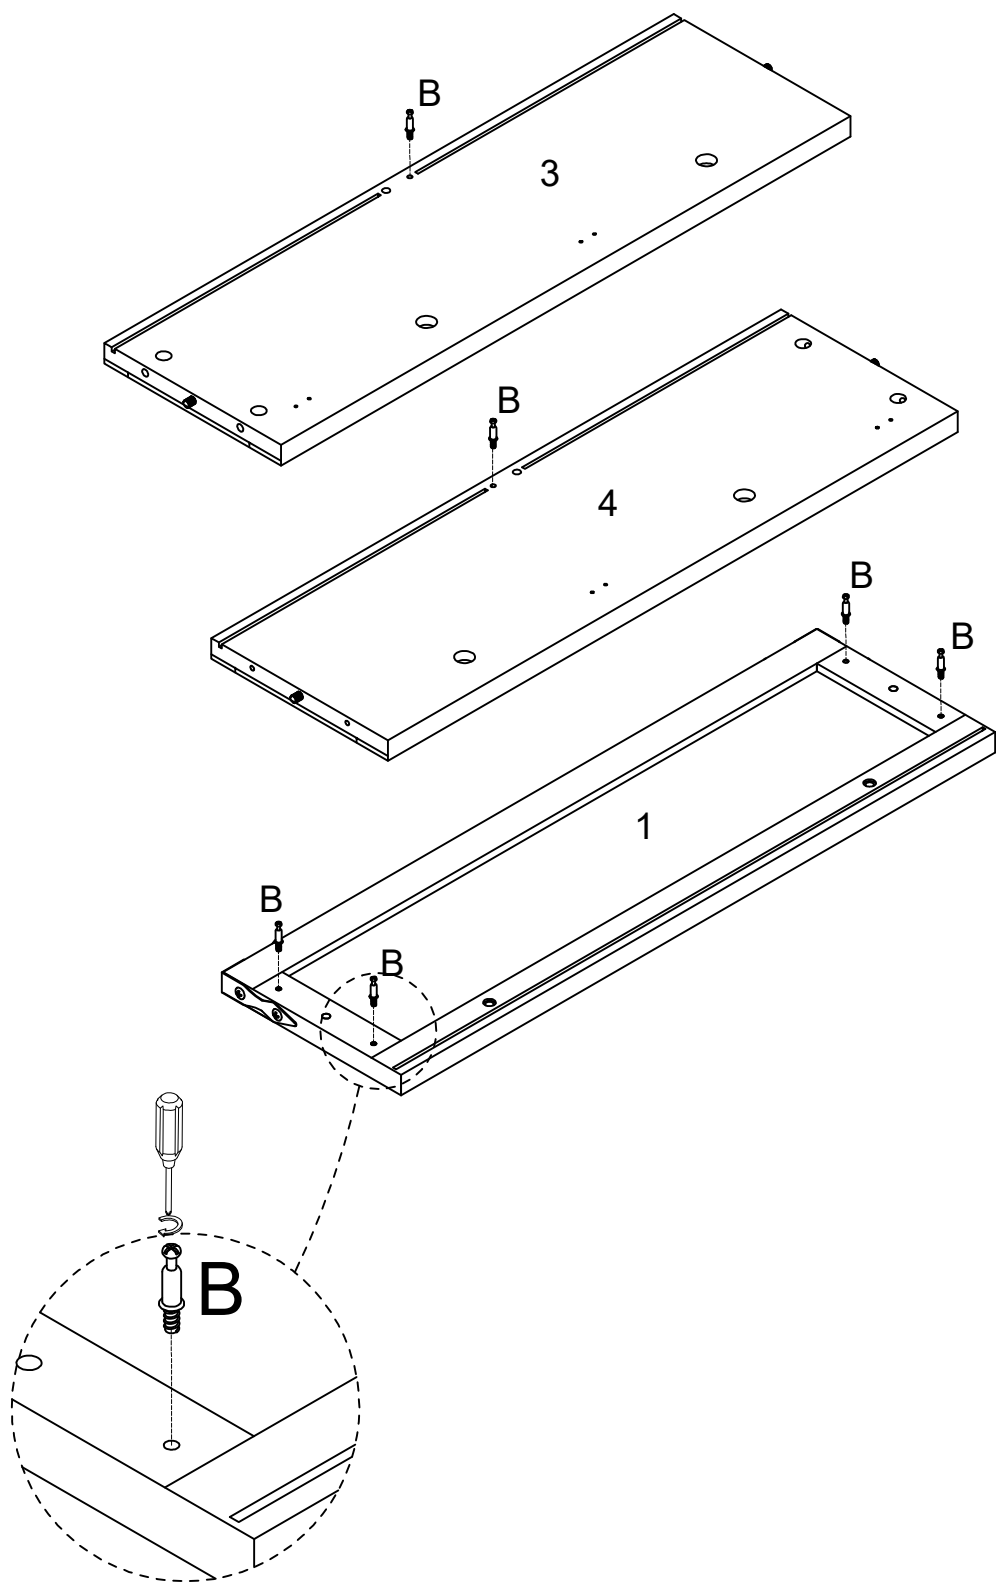
Step 2





B

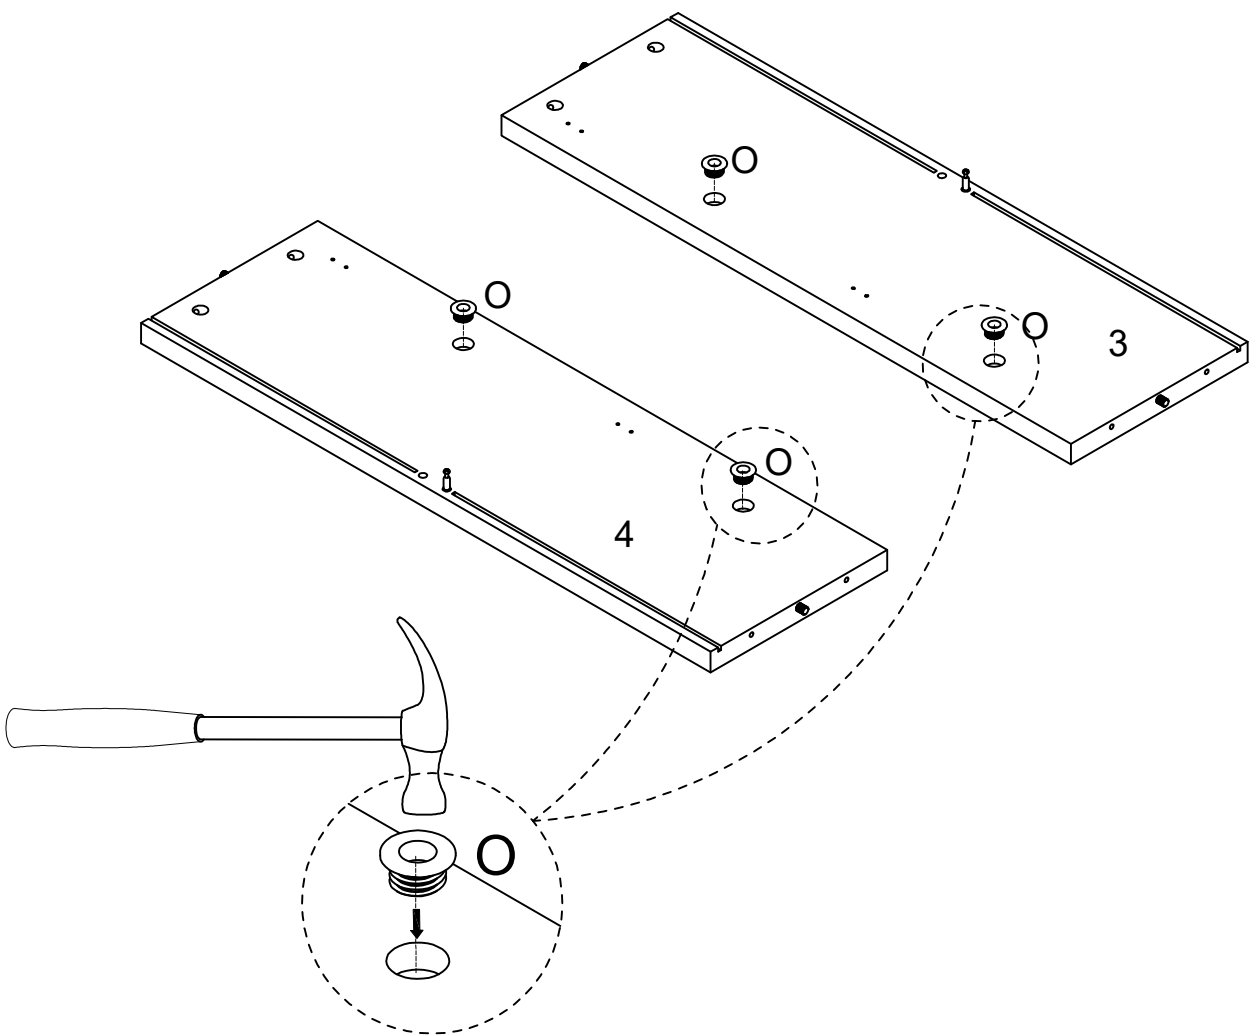X6

Step 3





O

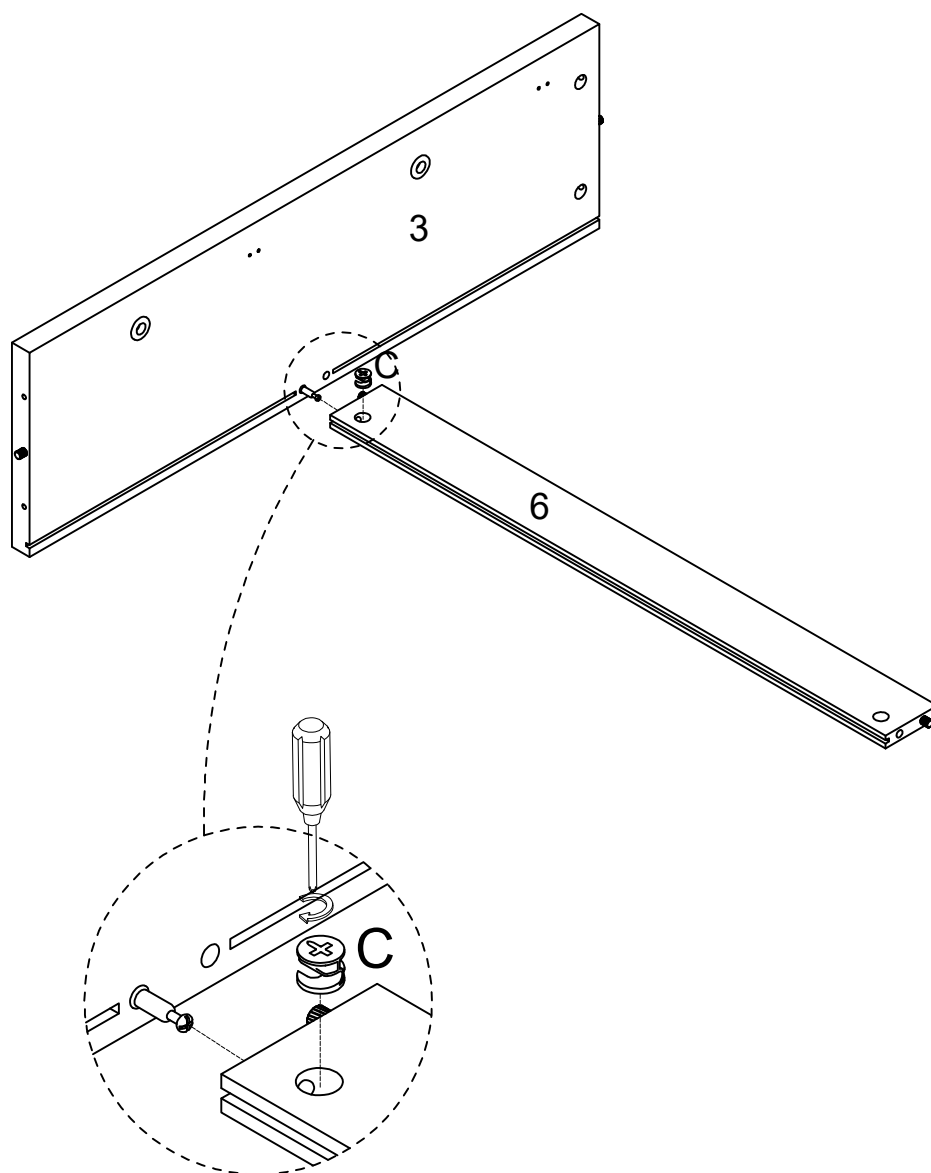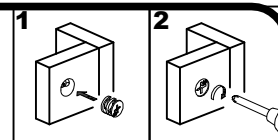X4


Step 4




C
X1

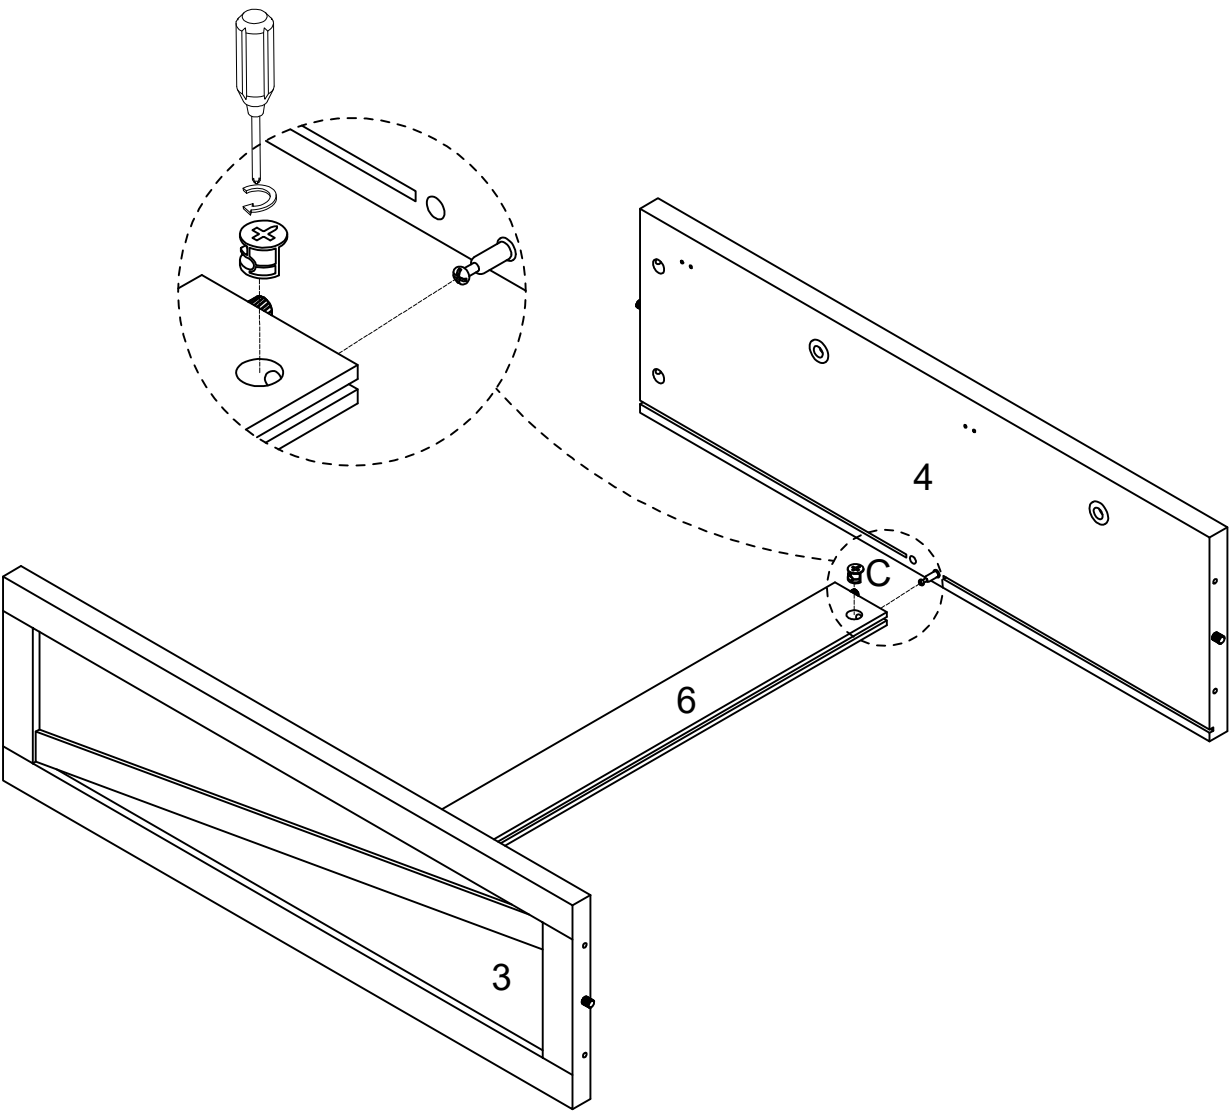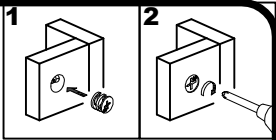Step 5






C

X1

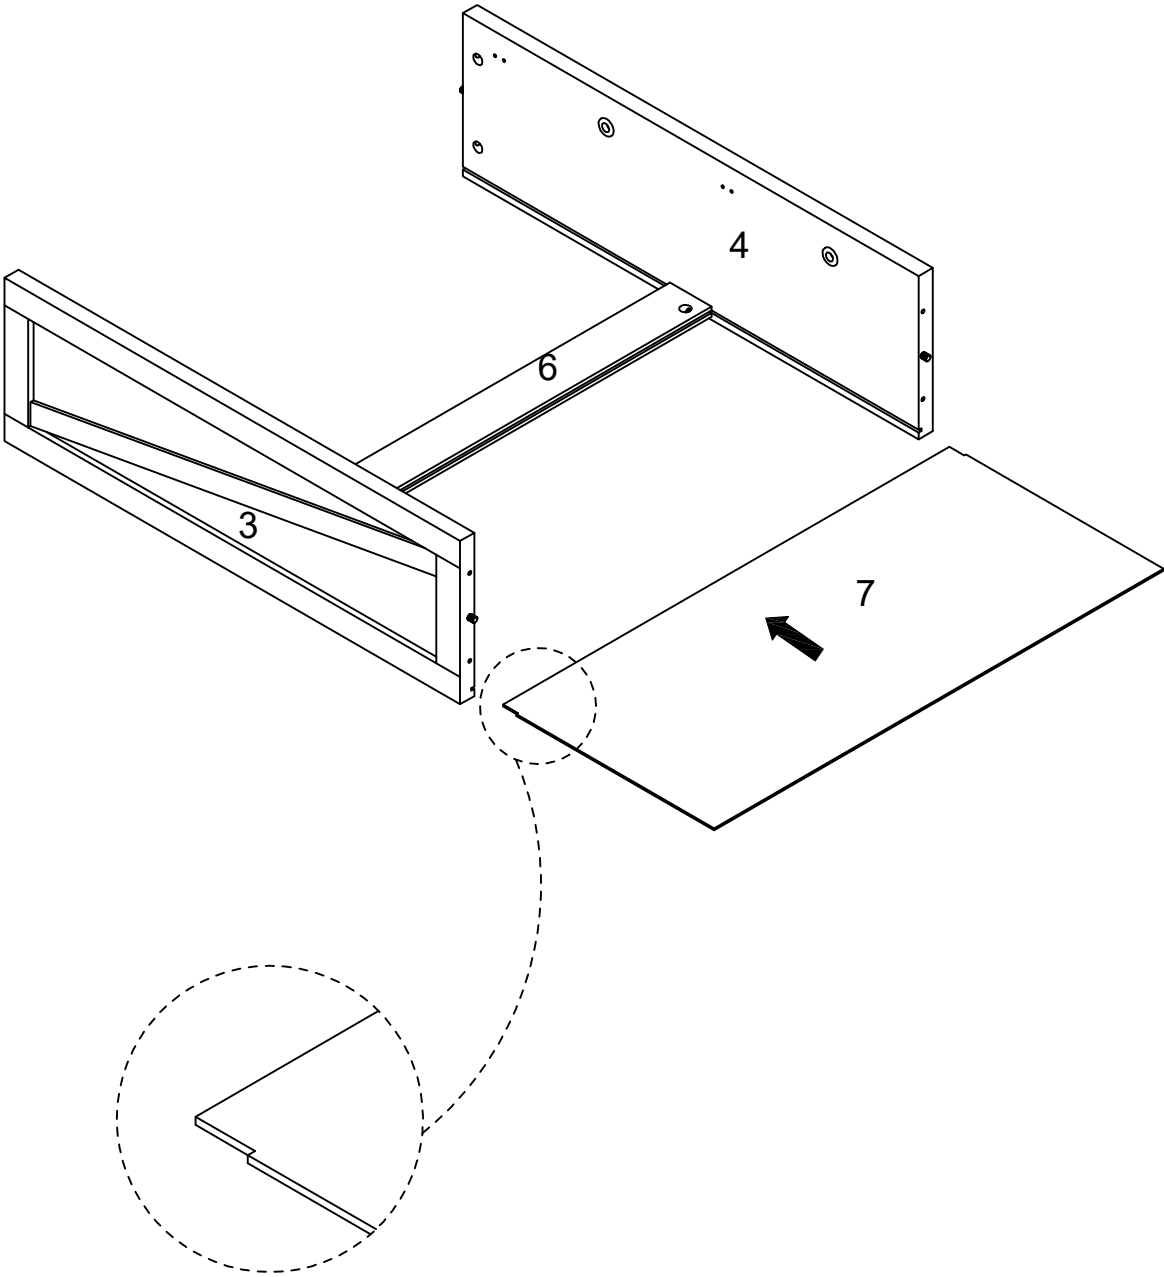Step 6

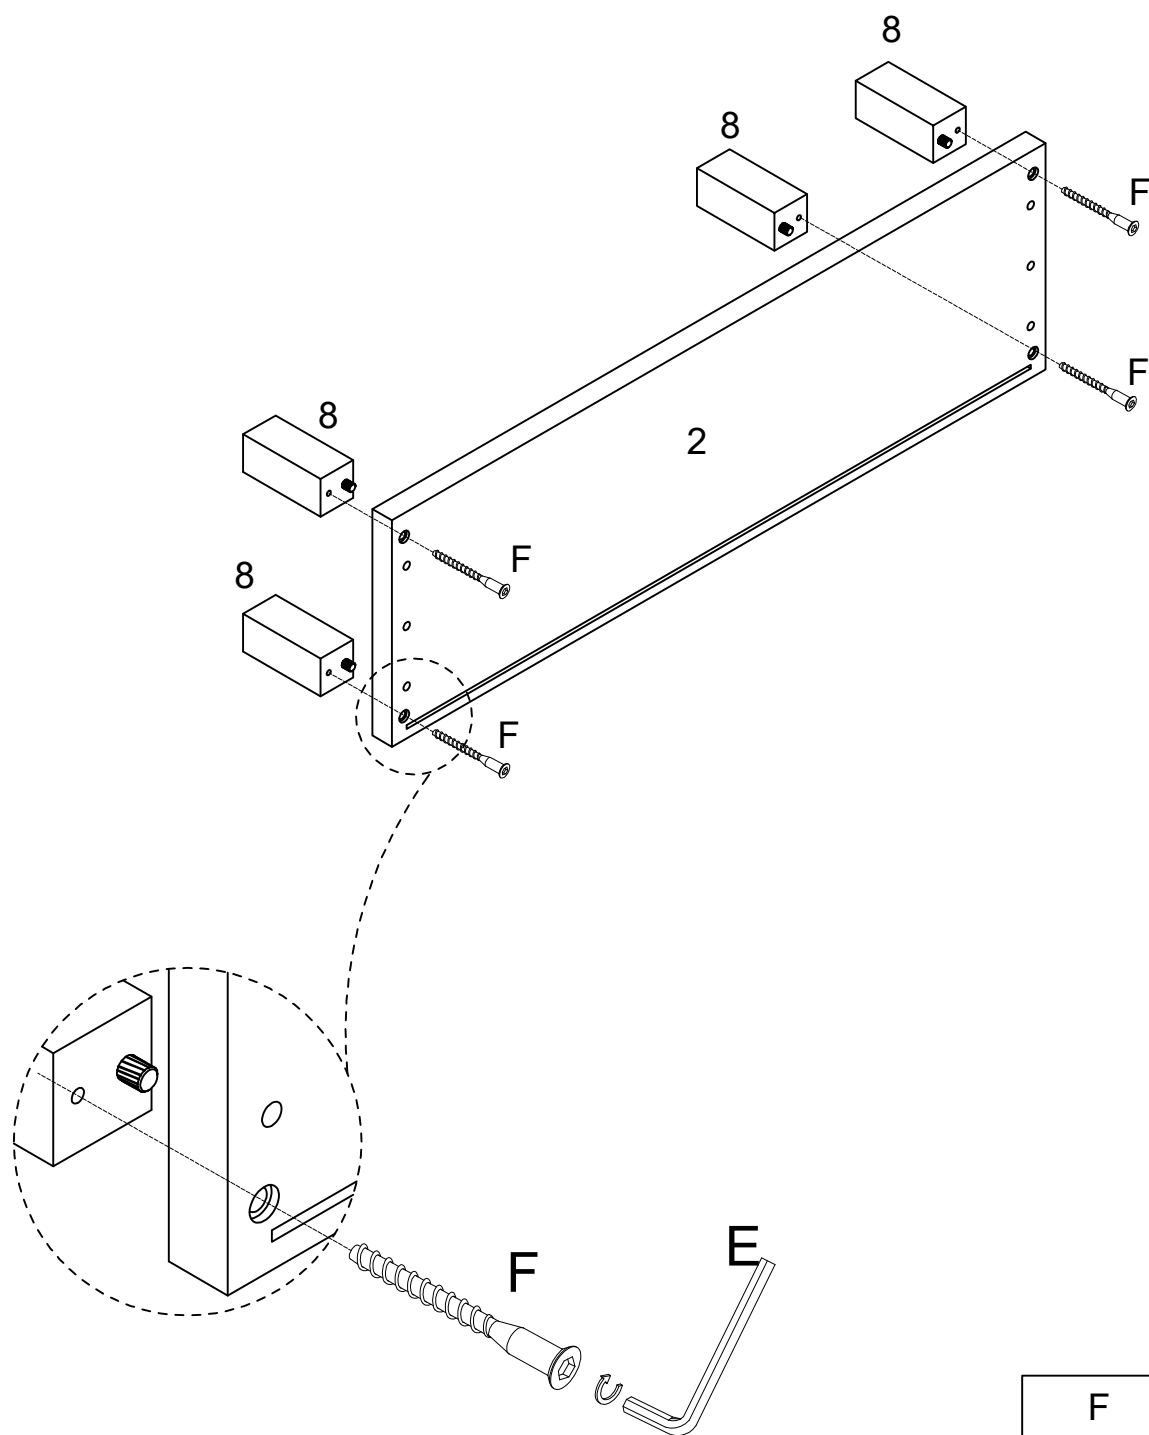




Step 7




F	E
	
X4	X1

Step 8

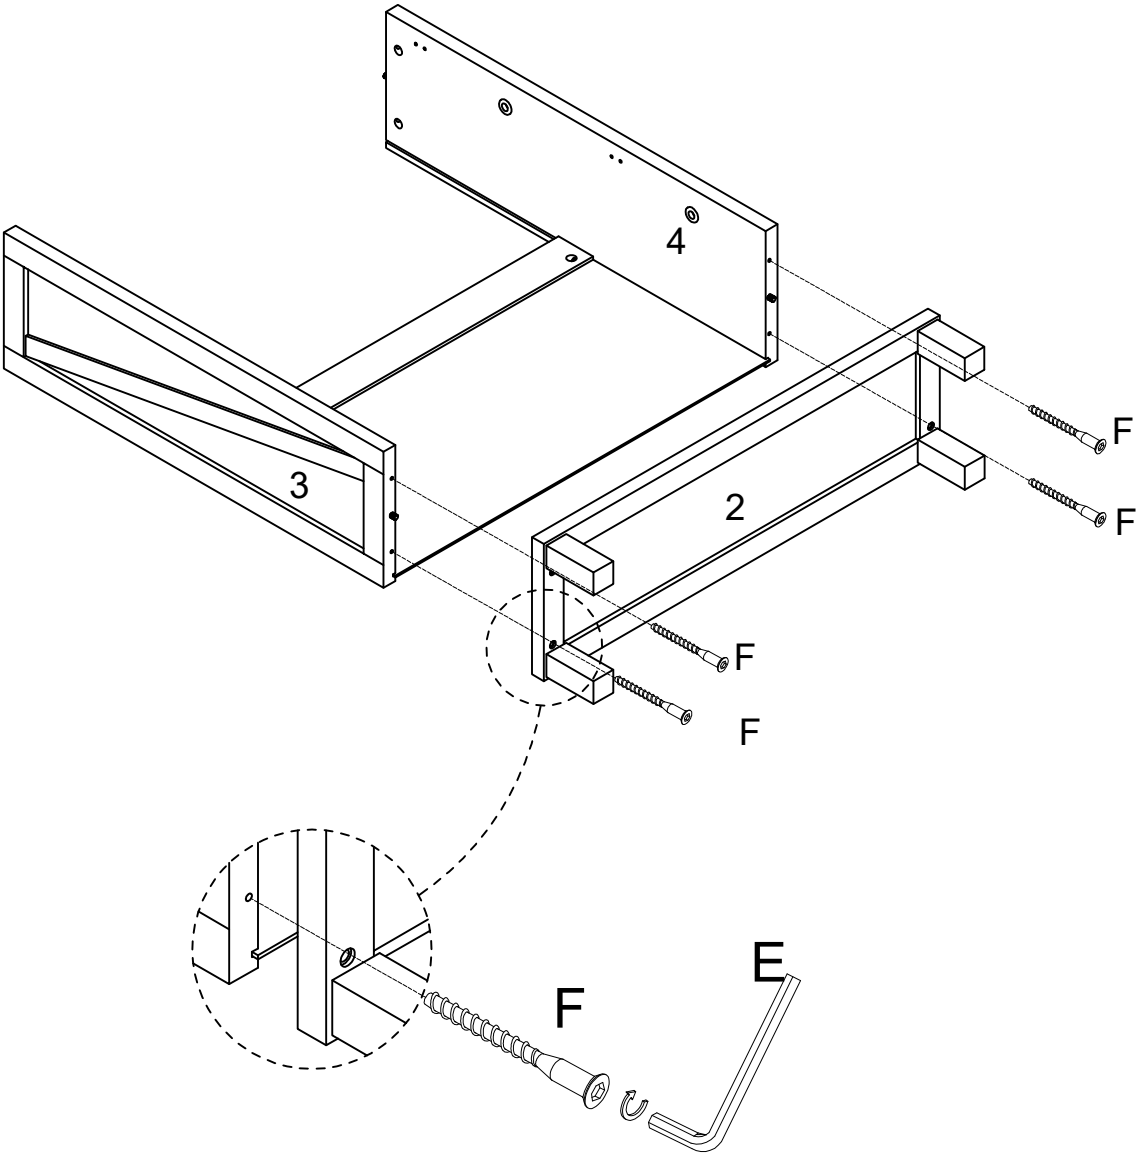






F	E
	
X4	X1

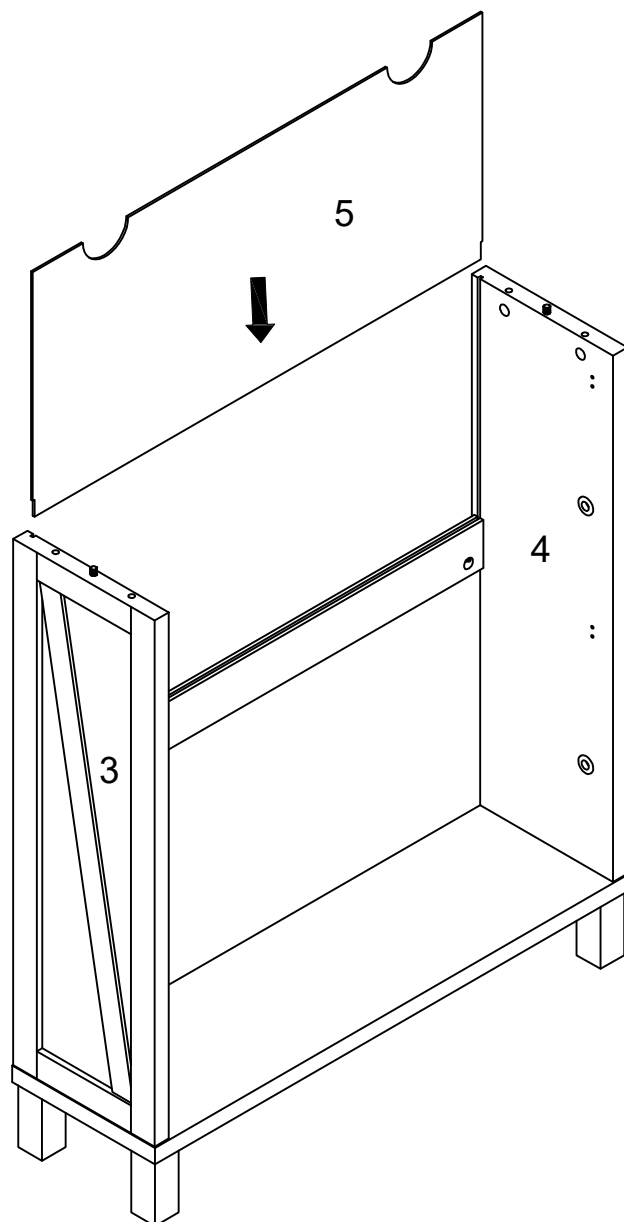Step 9


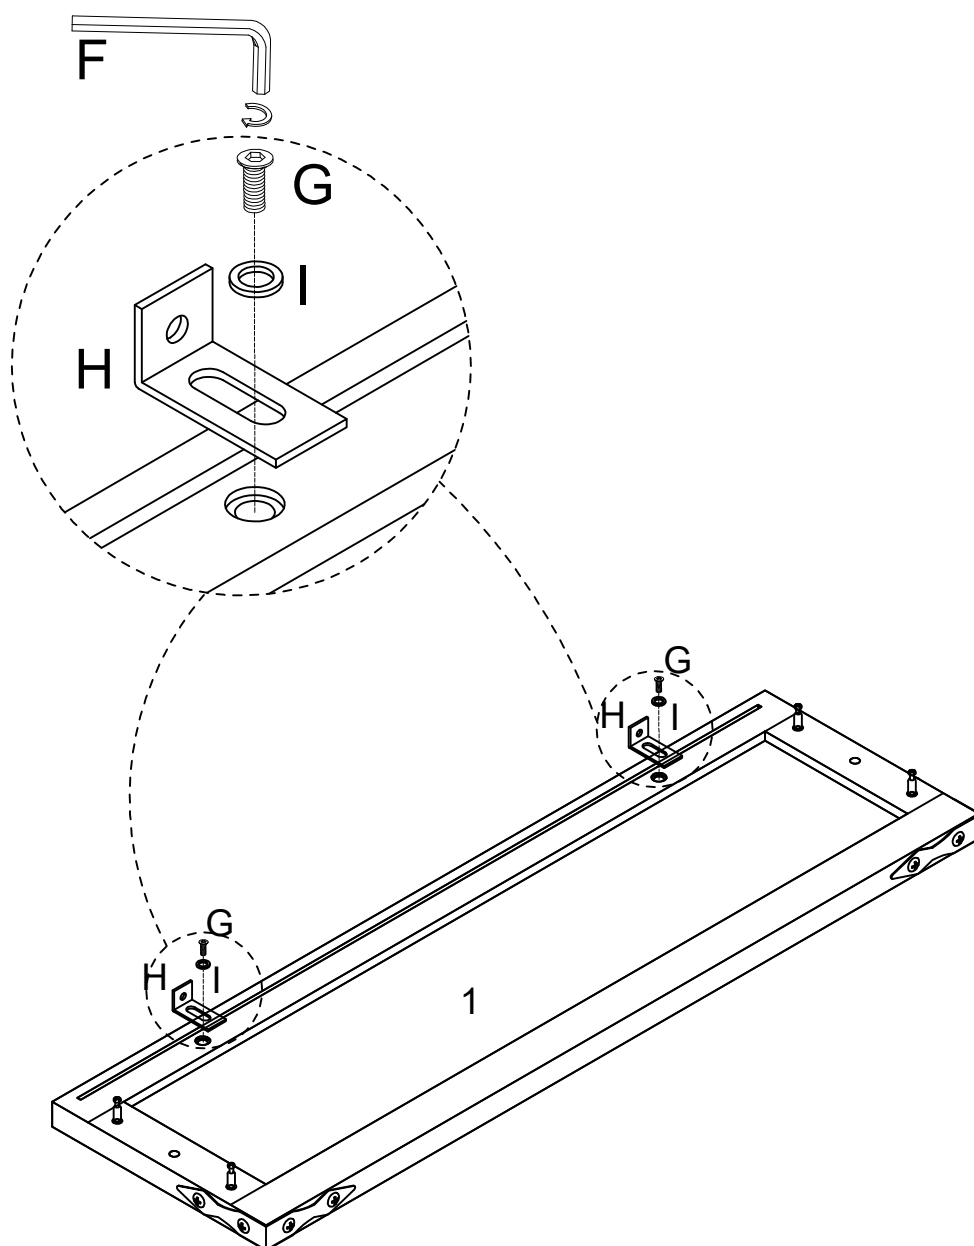



Step 10




I	H	G	E
			
X2	X2	X2	X1

Step 11

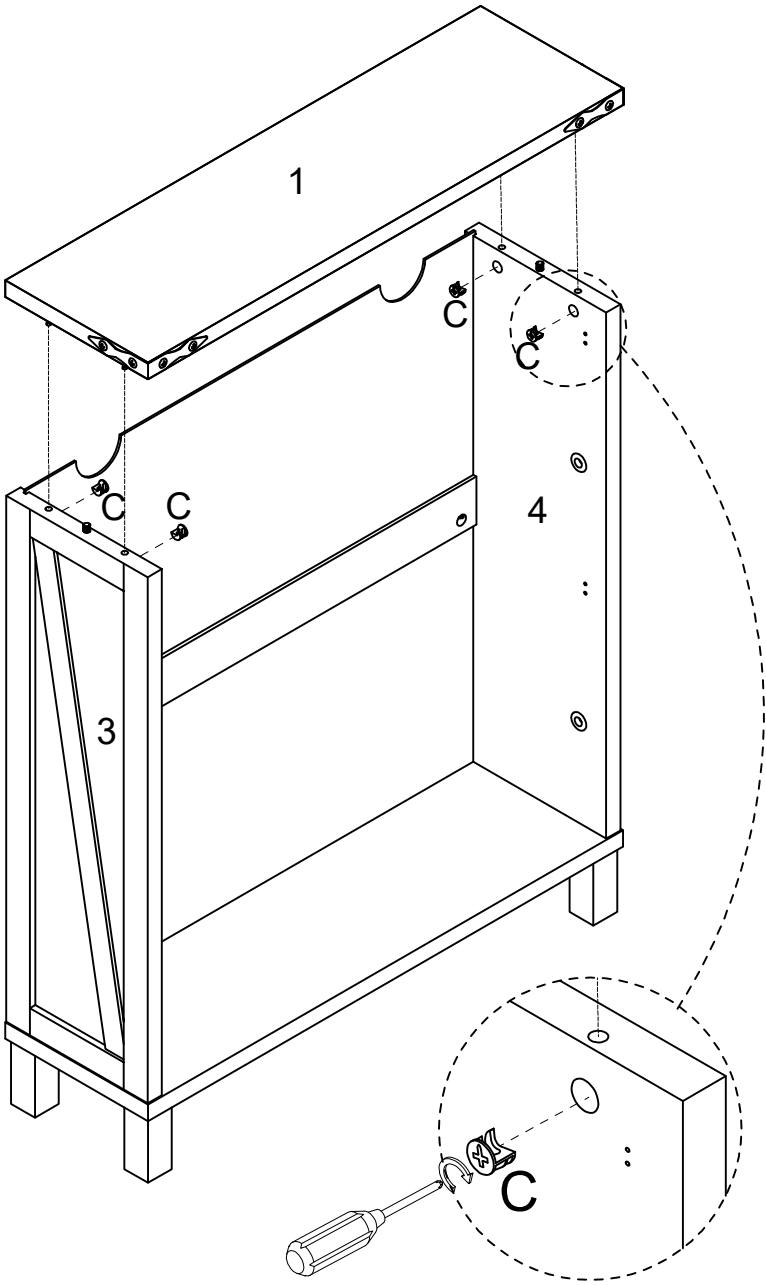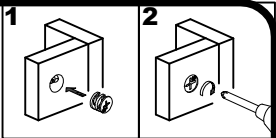


C

X4

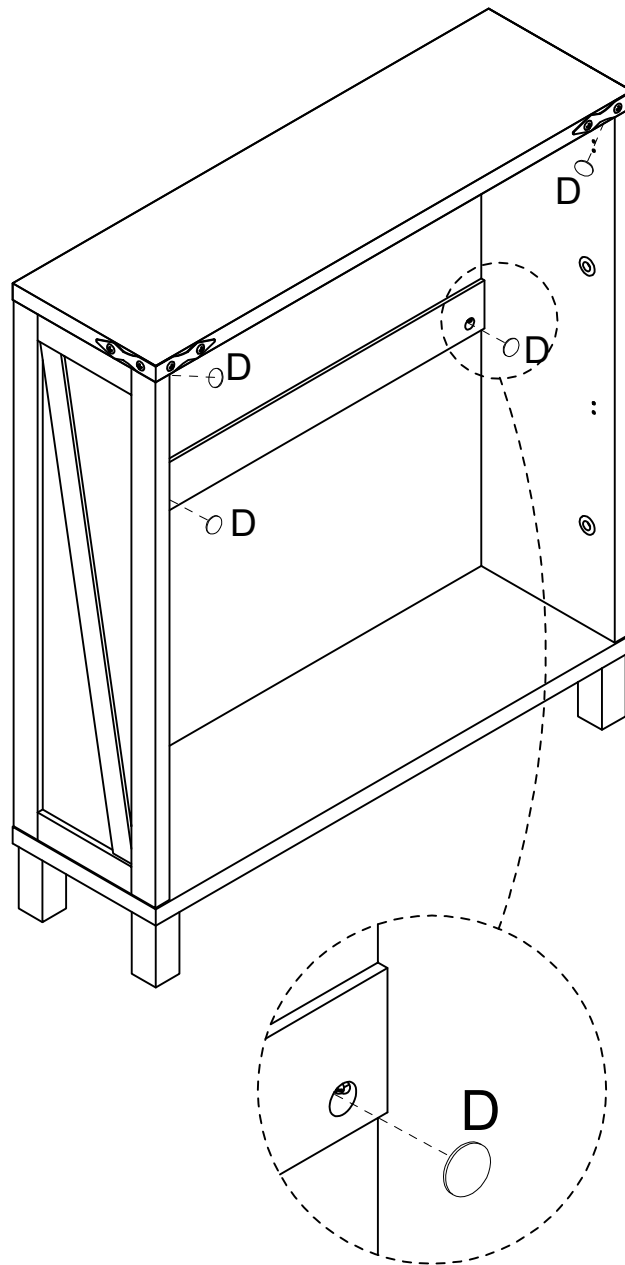




Step 12

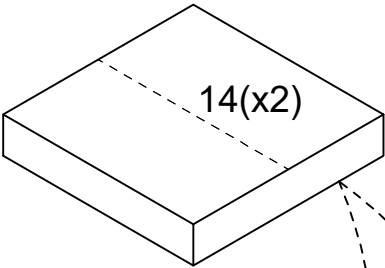


D
O
X6



Step 13




N		retainer	4	pcs
O		extramural	4	pcs
P		In-event races	4	pcs
Q		rotating iron sheet	2	Set
T		Screw	4	pcs


Step 14

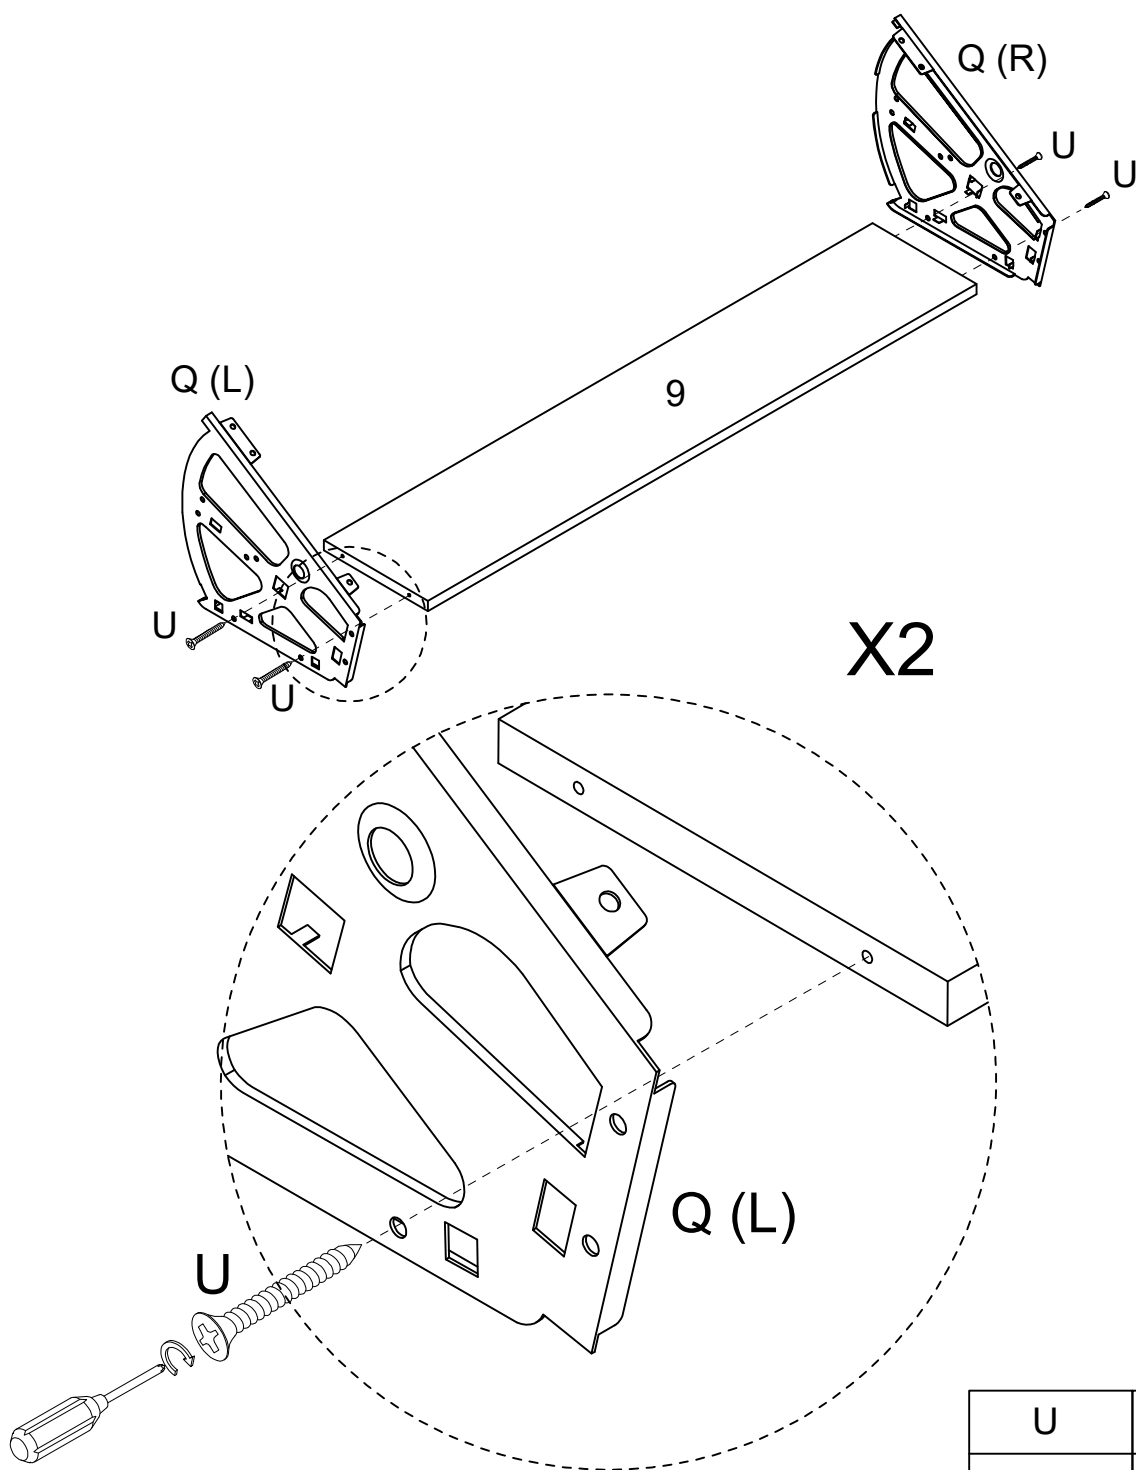


U	Q
	
X8	X4


Step 15

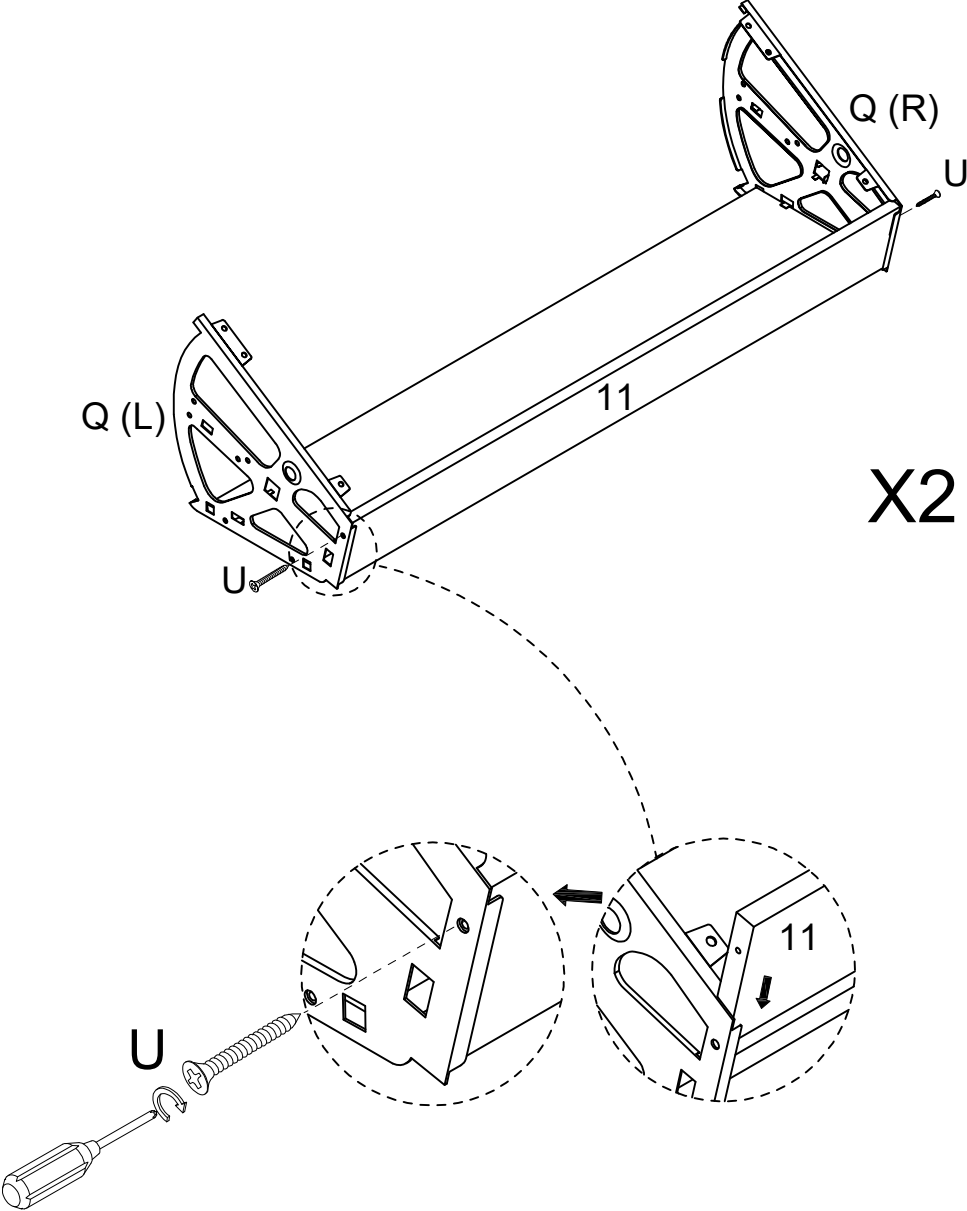


U

X4

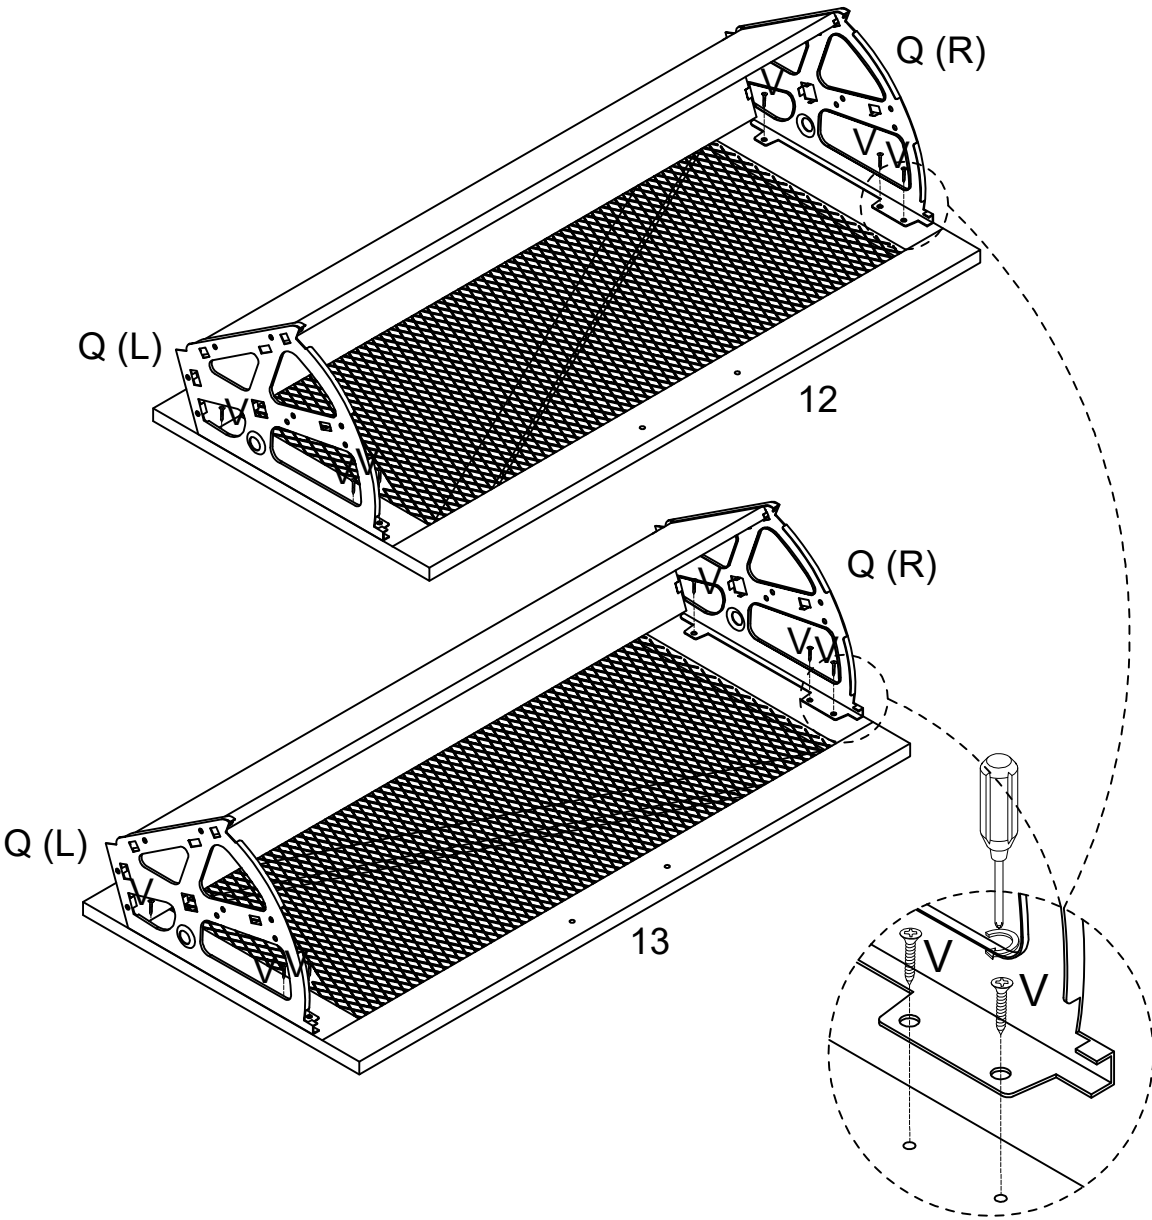
Step 16




V

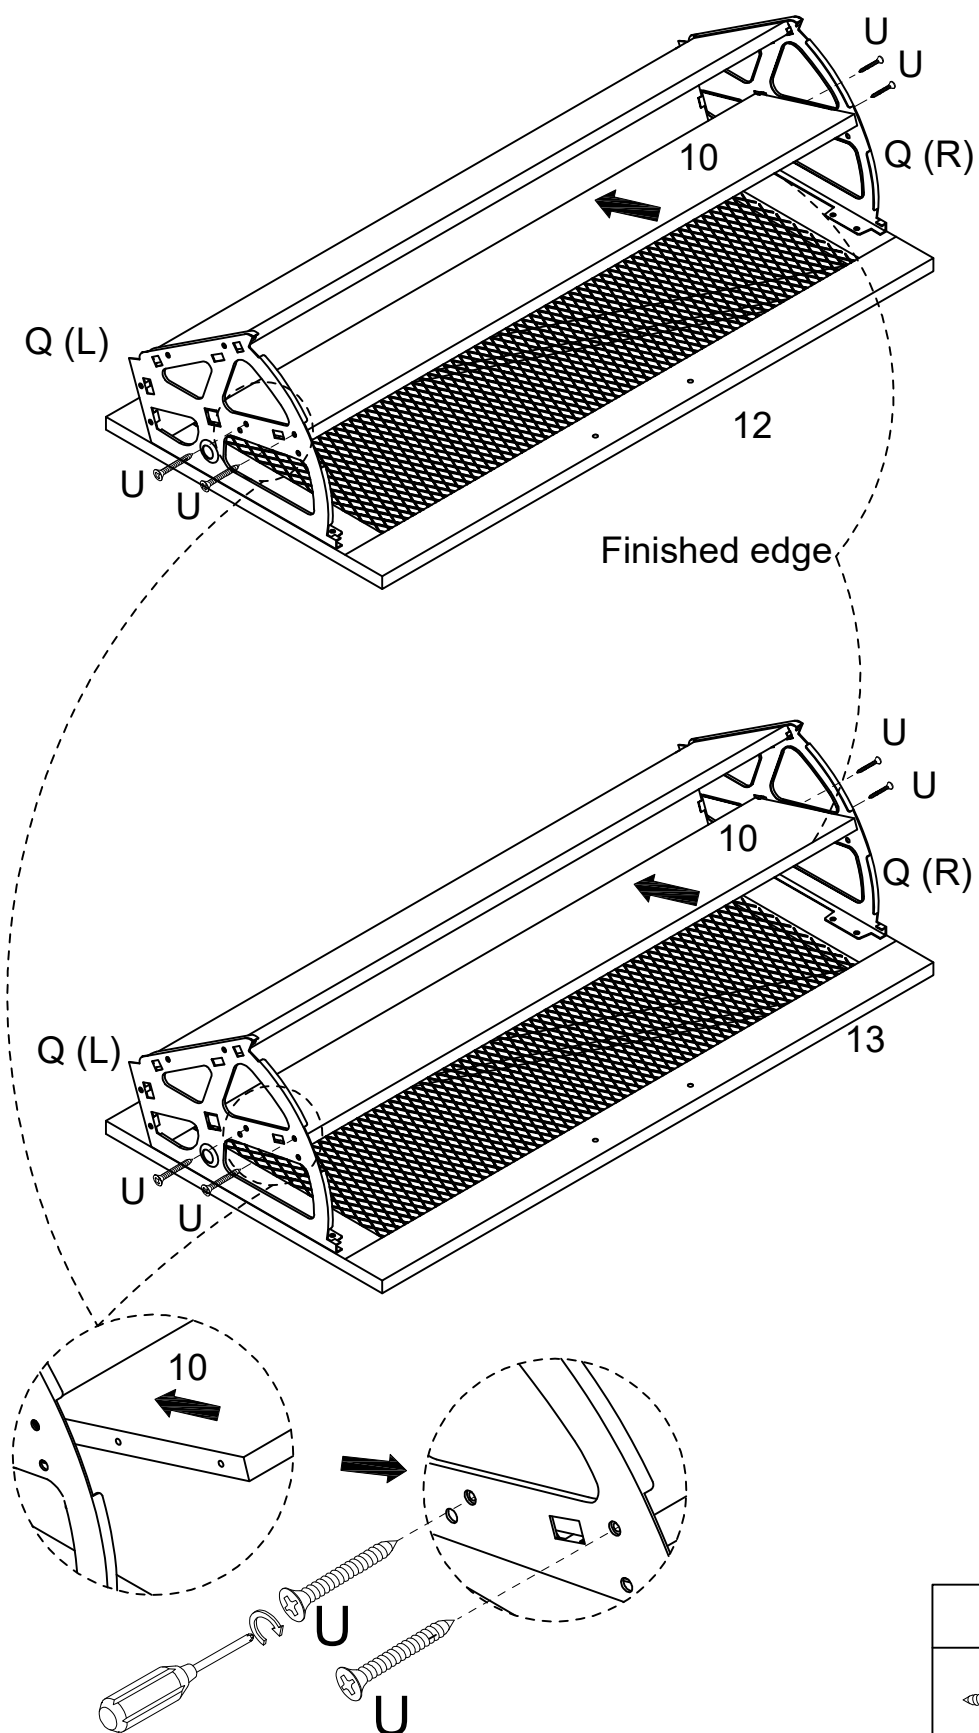X12



Step 17

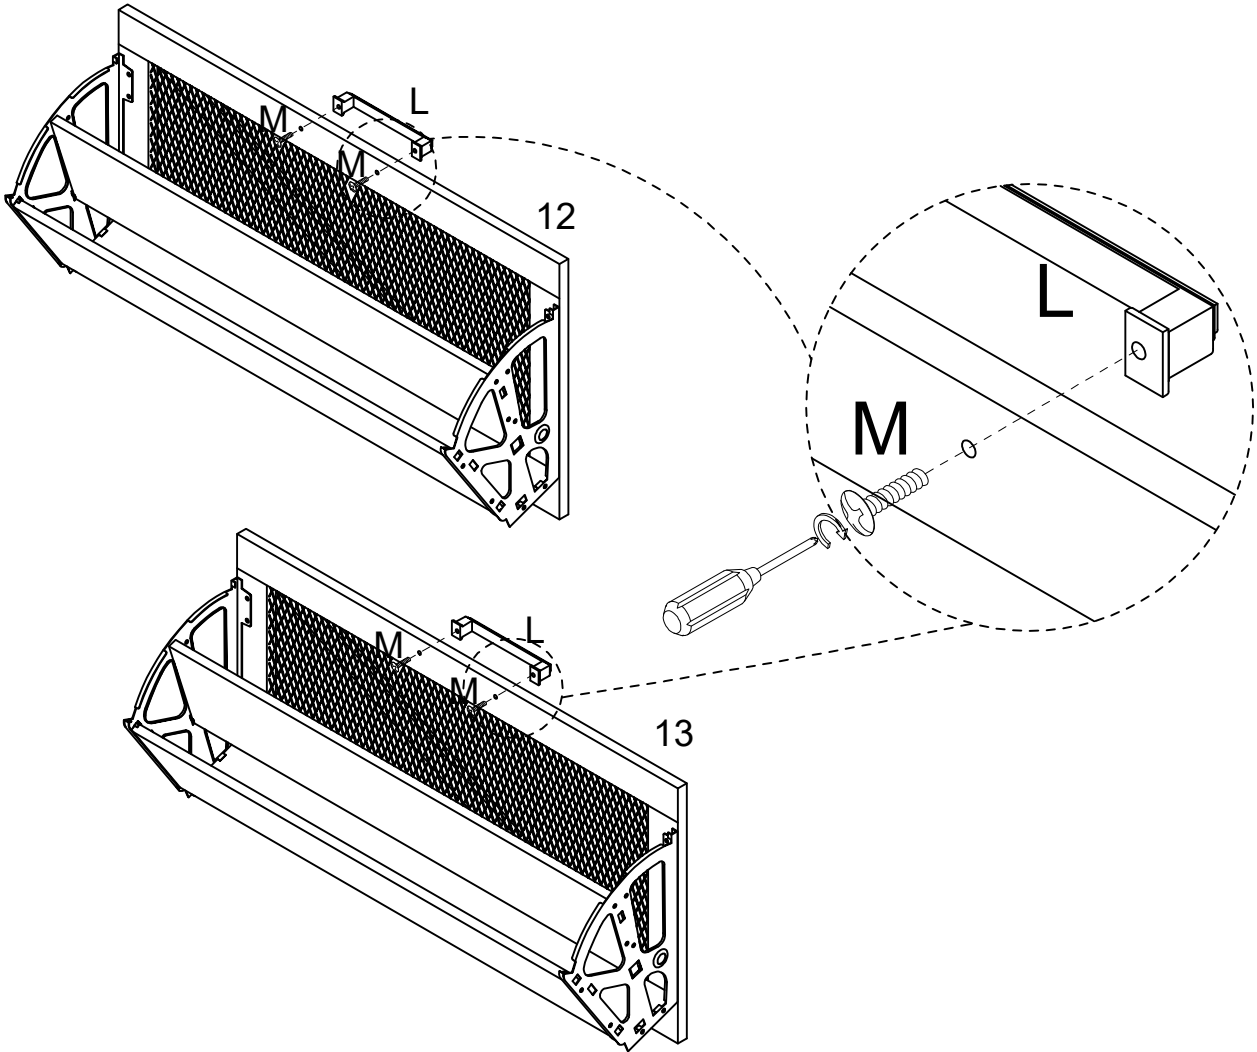


U

X8



Step 18

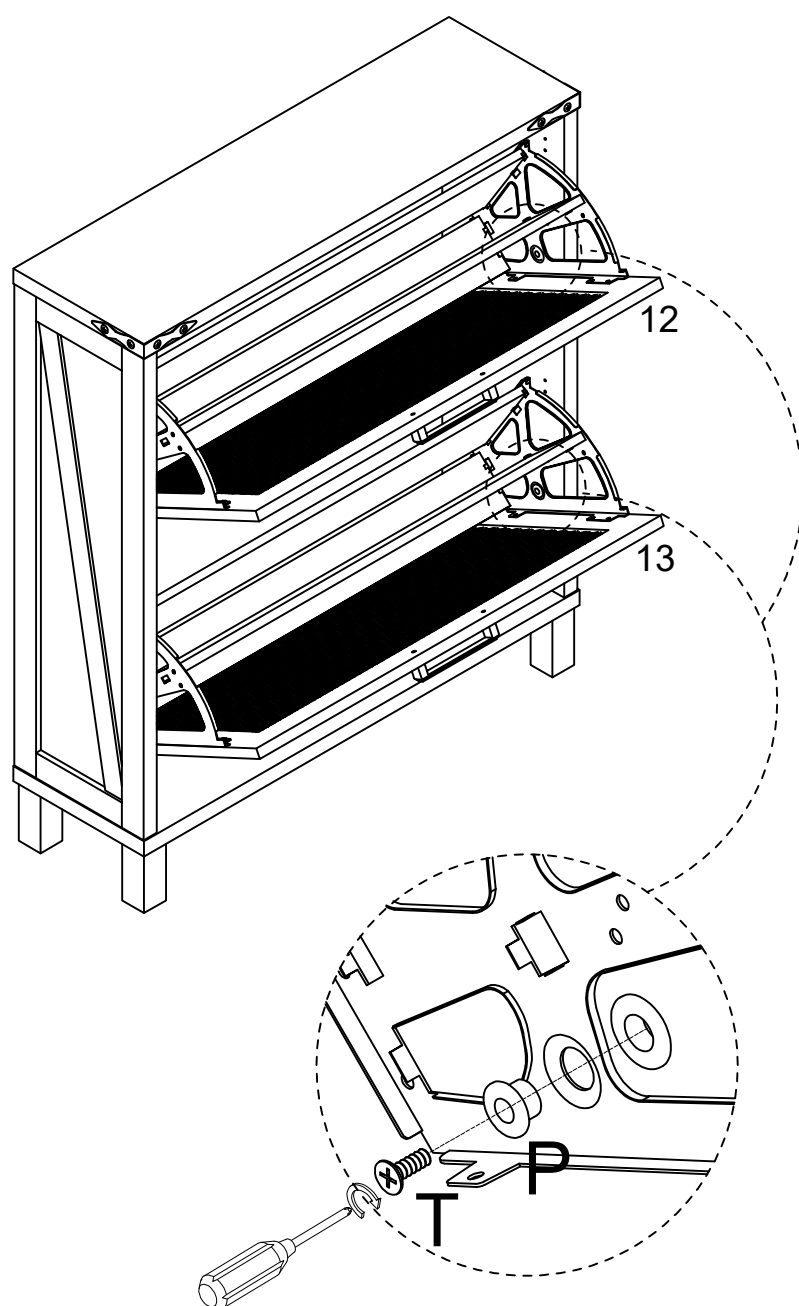


M	L
	
X4	X2



Step 19




T	P
	
X4	X4

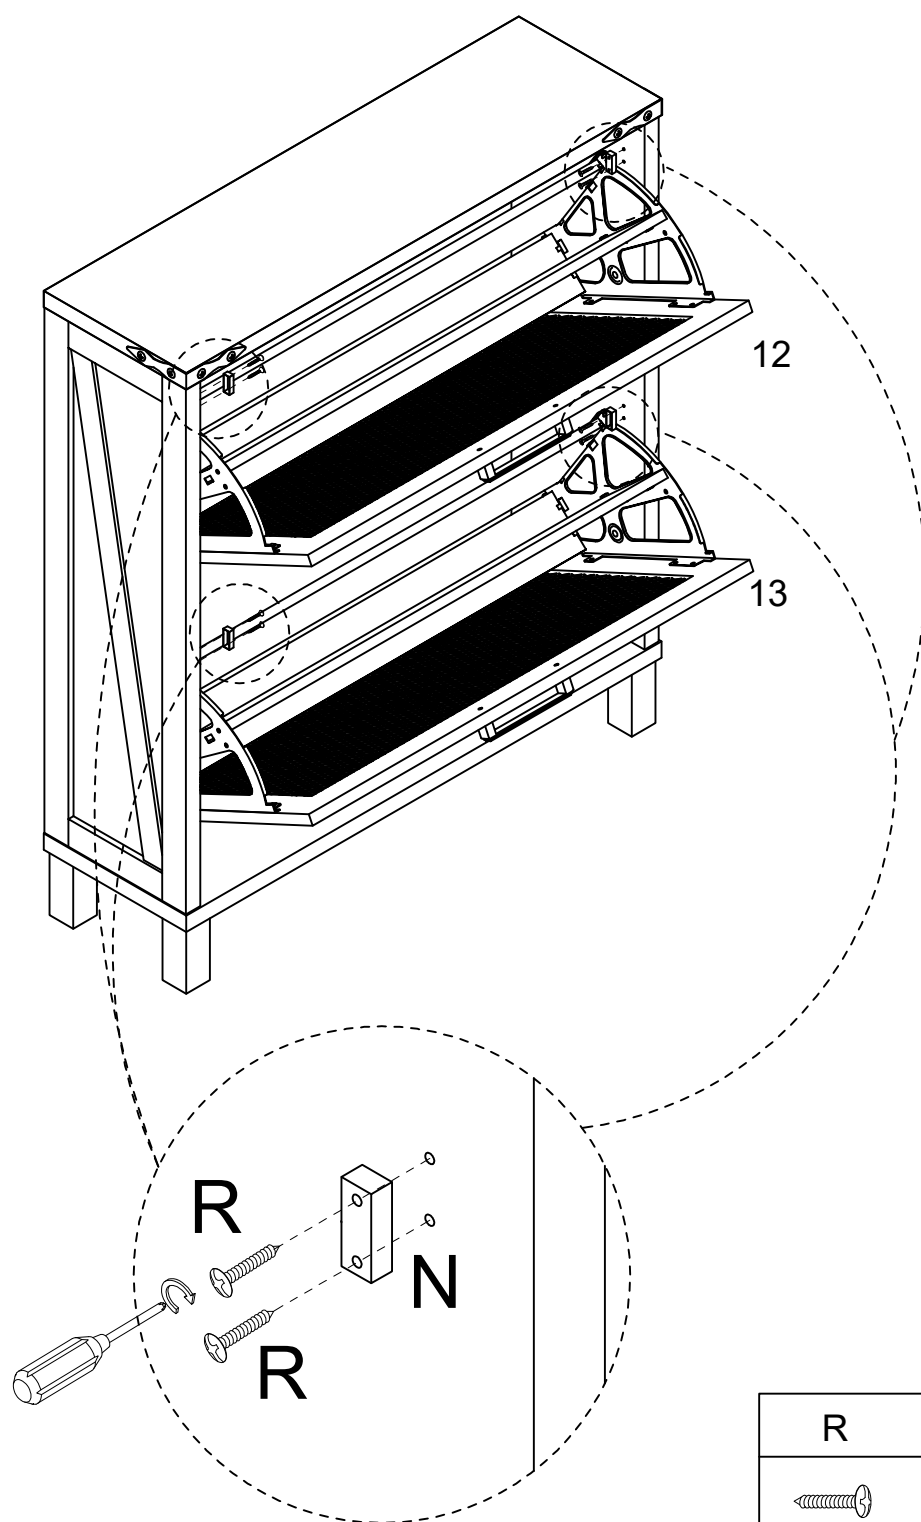

Step 20



R	N
	
X8	X4

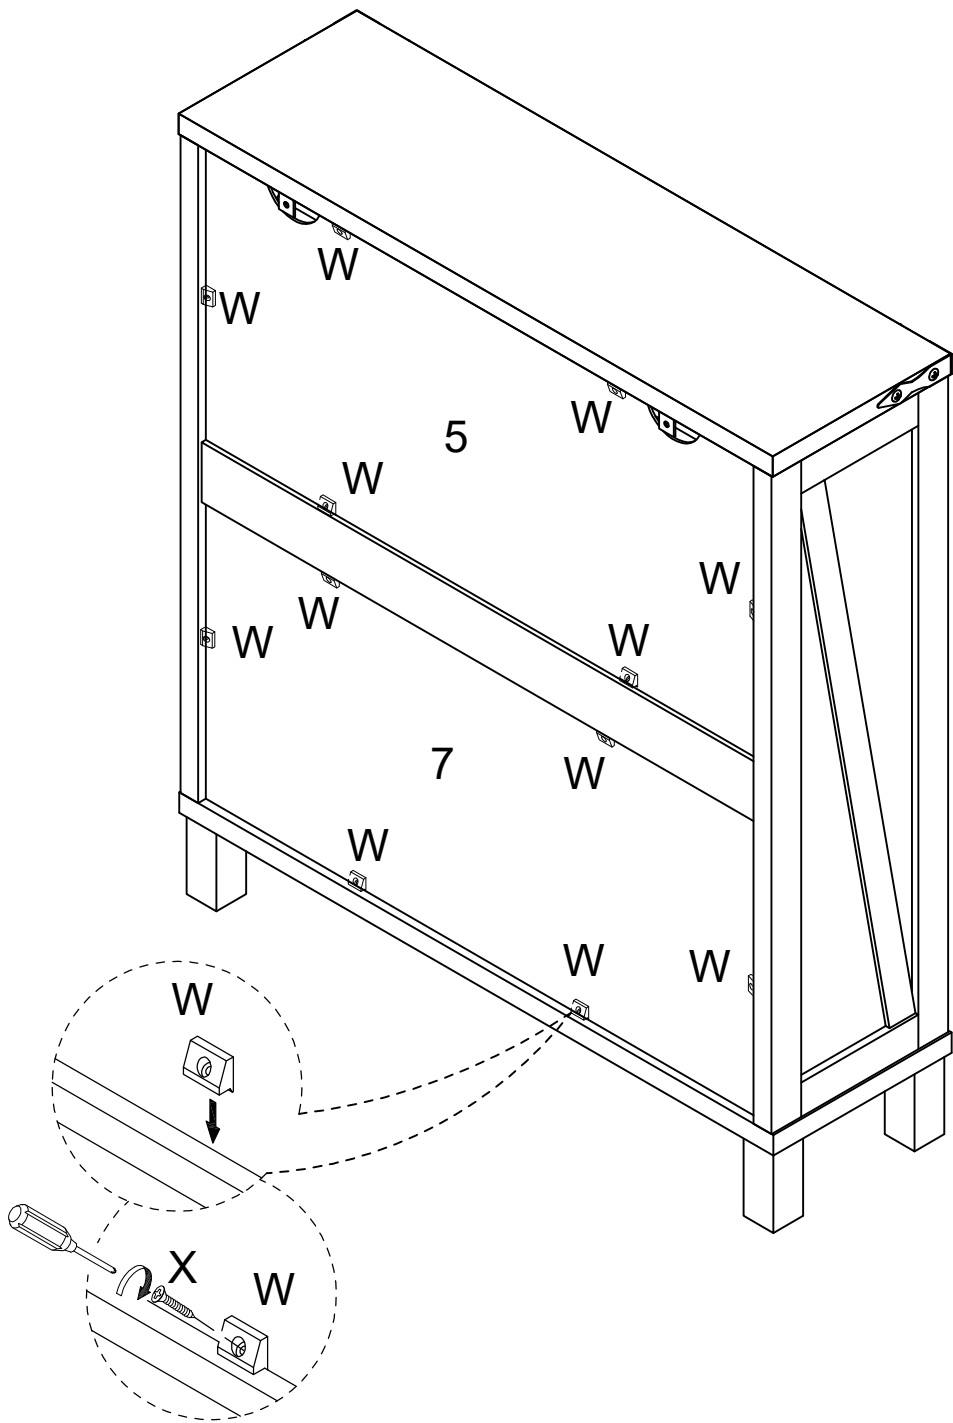
Step 21




W	X
	
X12	X12

Step 22


Make Four holes 40MM deep

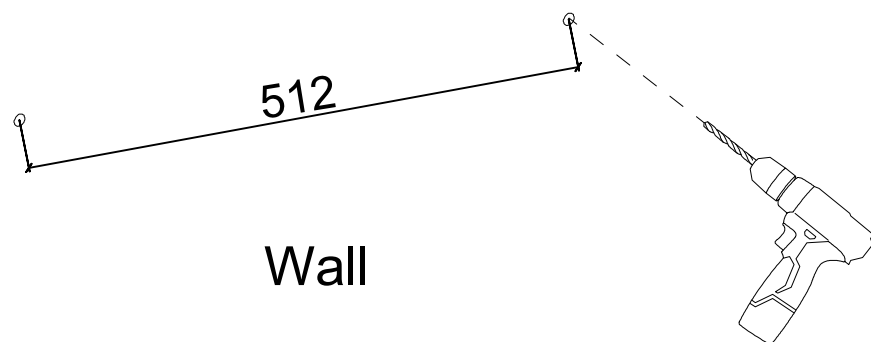


Step 23

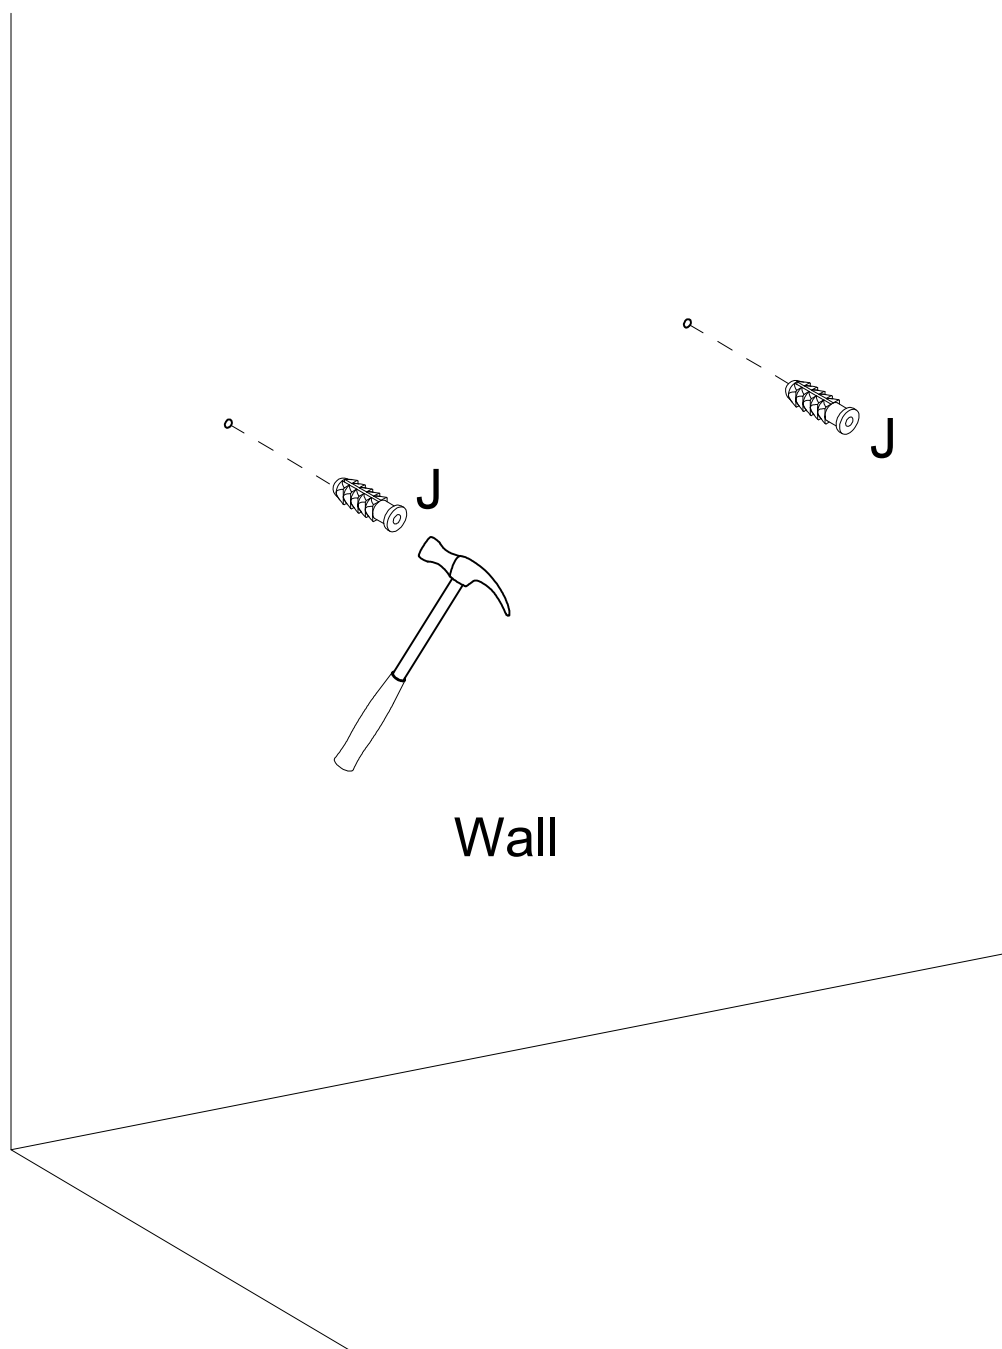


Wall

J

X2

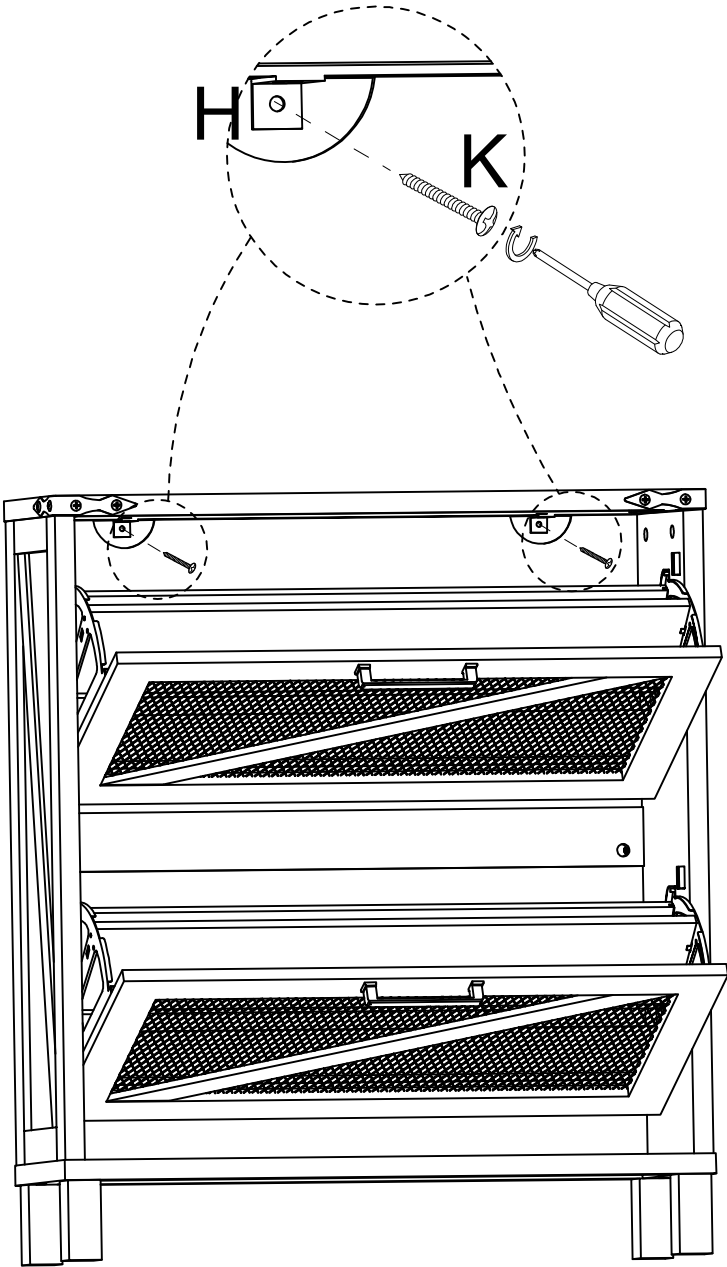Step 24



K

X2

Step 25

