

Wash Cabinet

Assembly Instructions-Please keep for future reference



Dimensions

Width- 29.93inch

Depth- 18.43inch

Height- 34.65inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions














To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

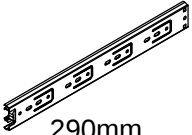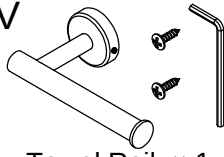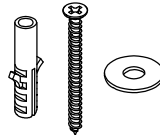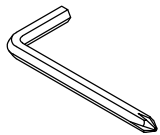A  Cam Bolt × 60+2	B  Cam Bolt × 60+2	C  6×30mm Dowel × 16+2	D  3.5×14mm Door Stopper × 2	E  Bar Handle × 2
F  Knob × 3	G  M4×20mm Screw × 8+1	H  M4×18mm Screw × 2	I  M4×8mm Screw × 5+1	J  3×12mm Screw × 24+2
K  3.5×14mm Screw × 24+2	L  4×40mm Screw × 8+1	M  4×30mm Screw × 18+2	N  L-Shaped Steel × 2	O  L-Shaped Steel × 2
P  Ø15×4mm EVA Pad × 4	Q  Rotating Shaft × 2	R  Shelf Support × 4	S  Table Leg Pad × 4	T  3.5×14mm Door Hinge × 2
U  290mm Drawer Runner × 6	V  Towel Rail × 1	W  Anti-Tip Device × 2	X  Flat Hex Key × 1	

Tools required Not Included



Phillips screwdriver
(medium & large)

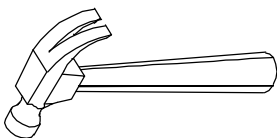


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

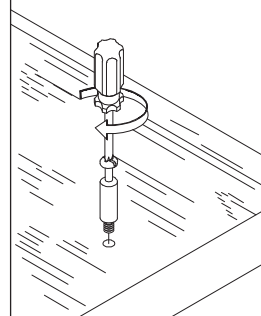

Step 2

Push the male camlock into the entry hole.

2

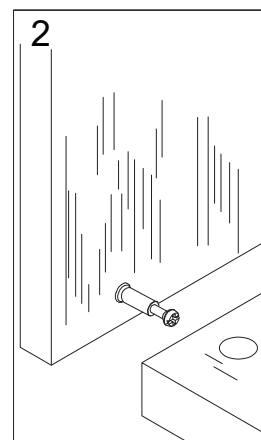


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

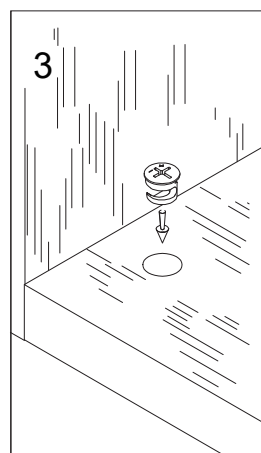


Step 4

Turn the female camlock clockwise with a screwdriver.




You should feel a click when the camlock is locked in place.

The joint is now secure.

4











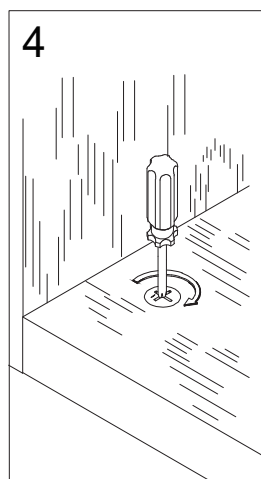


Assembly Instructions

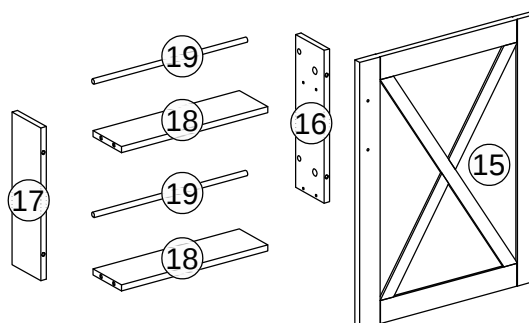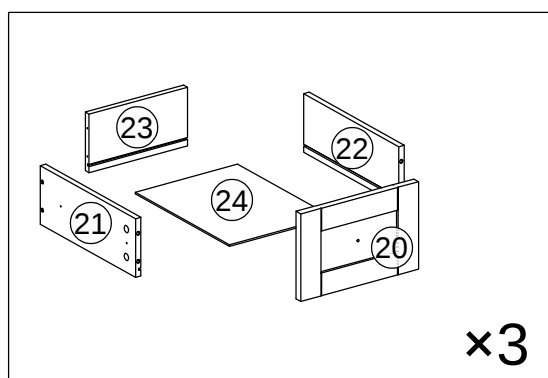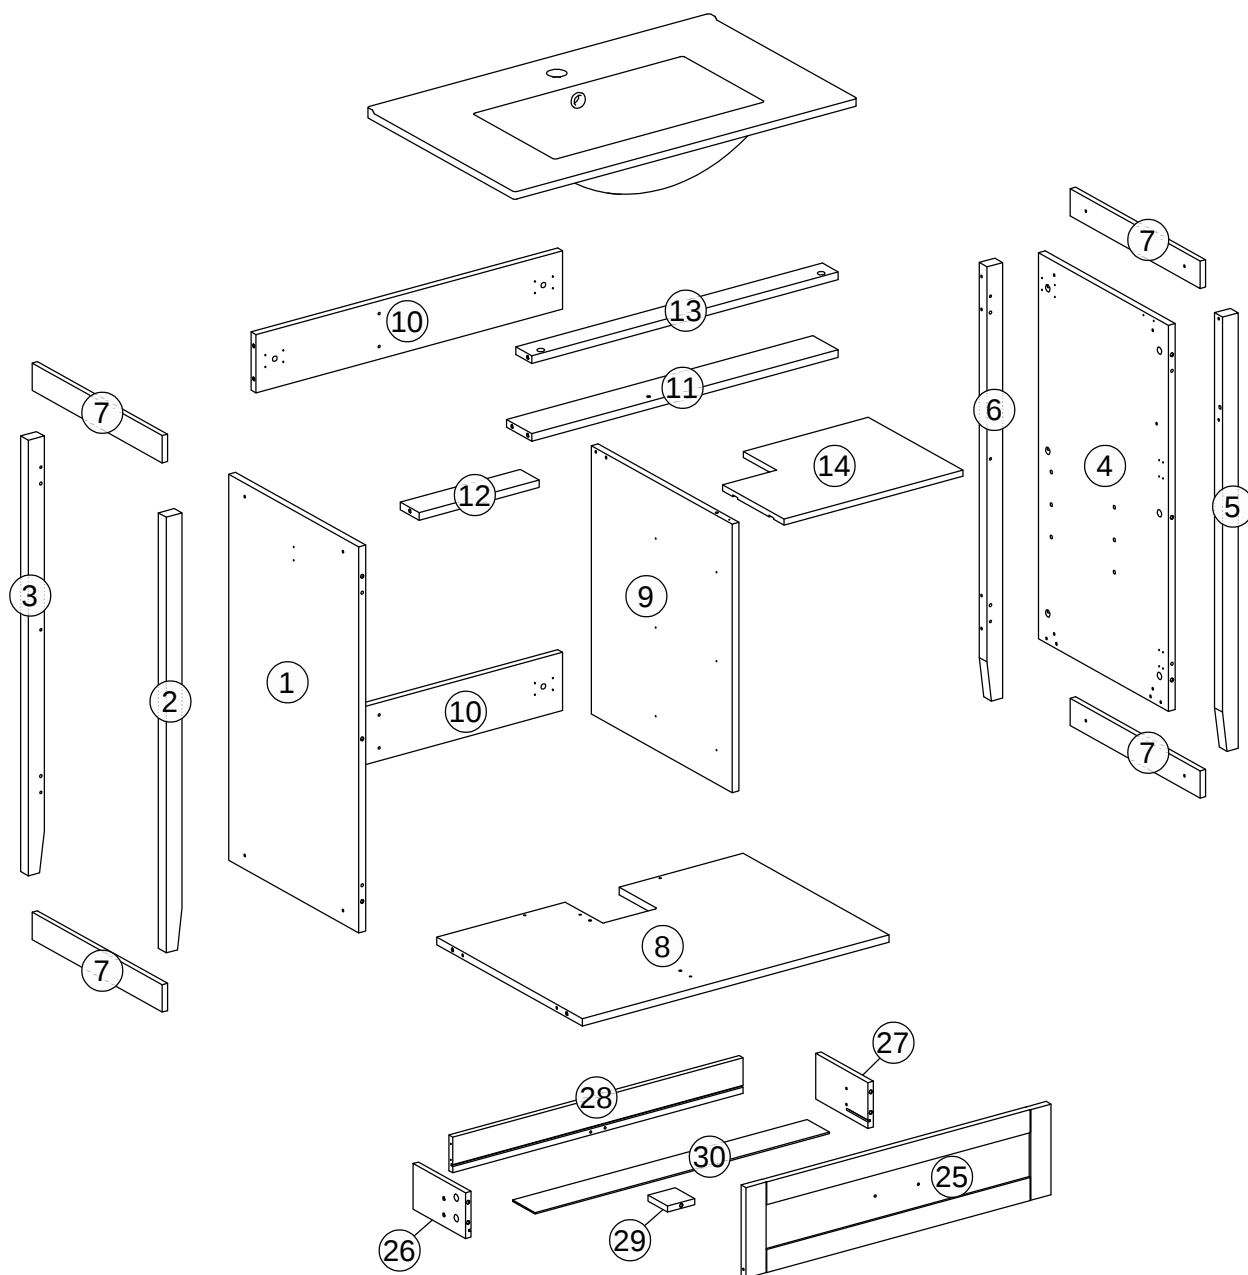









PART LIST

This product comes in 1/2 box.

①  ×1 762*412*15	②  ×1 860*35*25	③  ×1 860*35*25	④  ×1 762*412*15
⑤  ×1 860*35*25	⑥  ×1 860*35*25	⑦  ×4 411*54*12	⑧  ×1 680*462*15
⑨  ×1 530*446*15	⑩  ×2 680*115*5	⑪  ×1 680*80*15	⑫  ×1 266*60*15
⑬  ×1 680*50*15	⑭  ×1 397*300*12	⑮  ×1 524*393*15	⑯  ×1 300*90*12


PART LIST

This product comes in 1/2 box.

(17)  ×1 300*90*12	(18)  ×2 323*90*12	(19)  ×2 Ø10*338	(20)  ×3 260*172*15
(21)  ×3 300*115*12	(22)  ×3 300*115*12	(23)  ×3 217*115*12	(24)  ×3 226*297*3
(25)  ×1 674*178*15	(26)  ×1 165*90*12	(27)  ×1 165*90*12	(28)  ×1 641*70*12
(29)  ×1 62*60*12	(30)  ×1 650*71*3		

PART LIST


This product comes in 2/2 box.

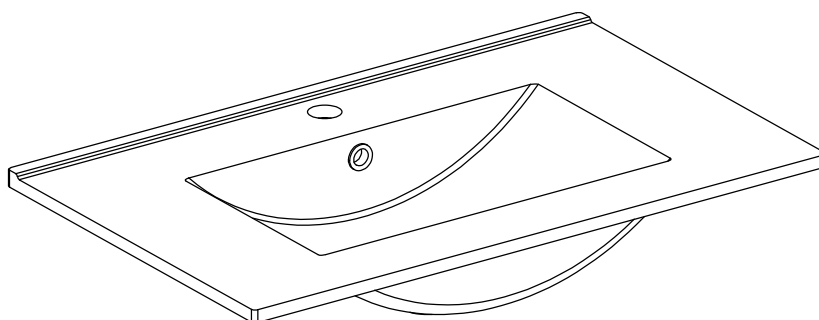

x1

Assembly Instructions

Step 1

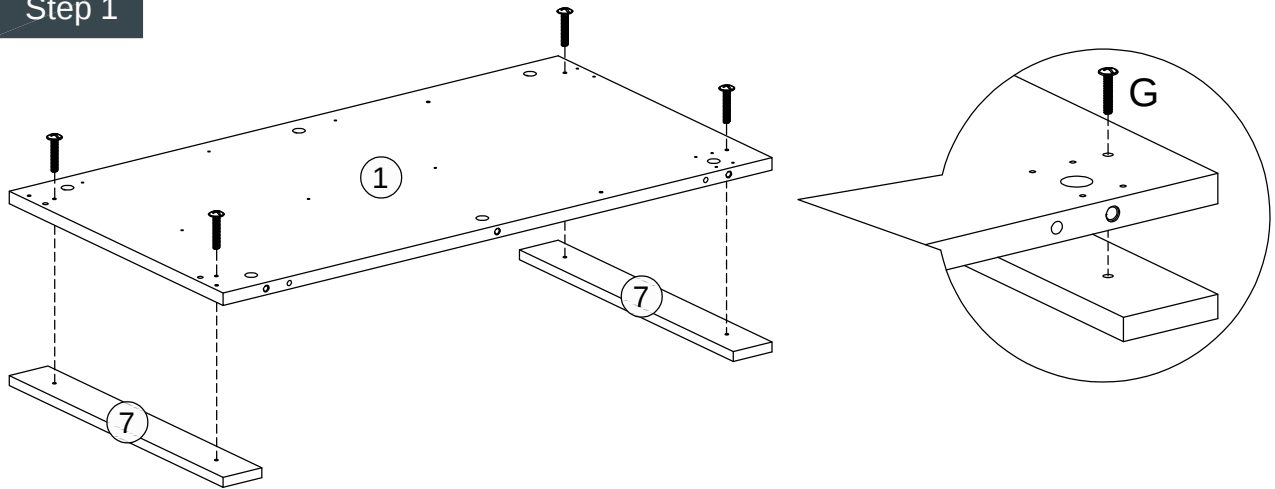


G




M4×20mm
Screw × 4

Step 2

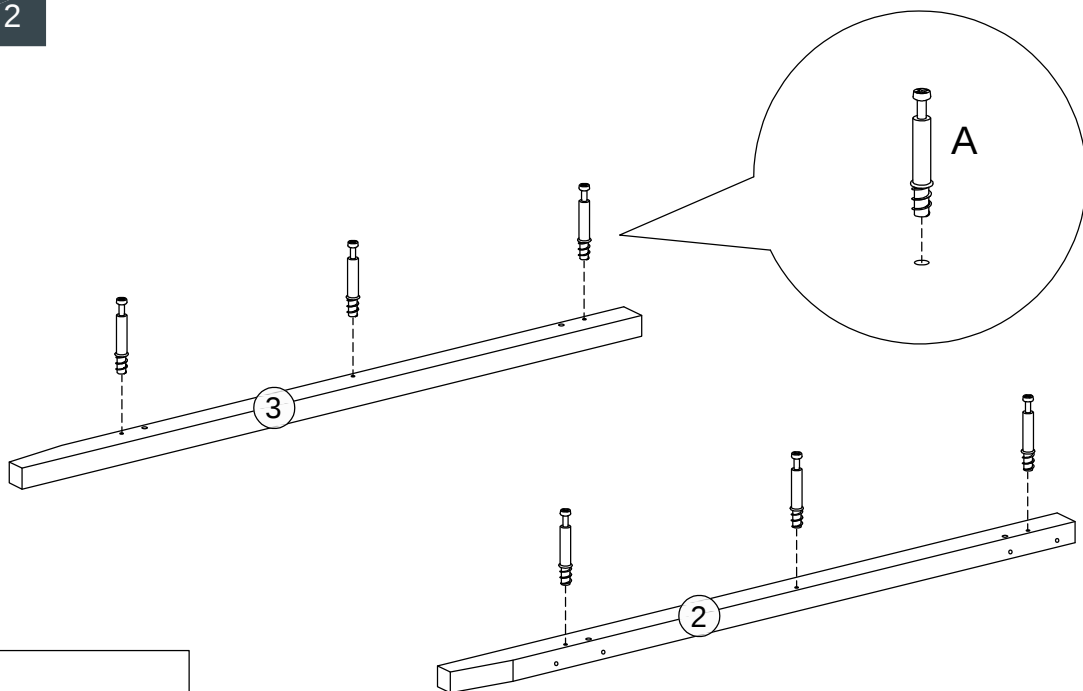


A




Cam Bolt × 6

Assembly Instructions

Step 3

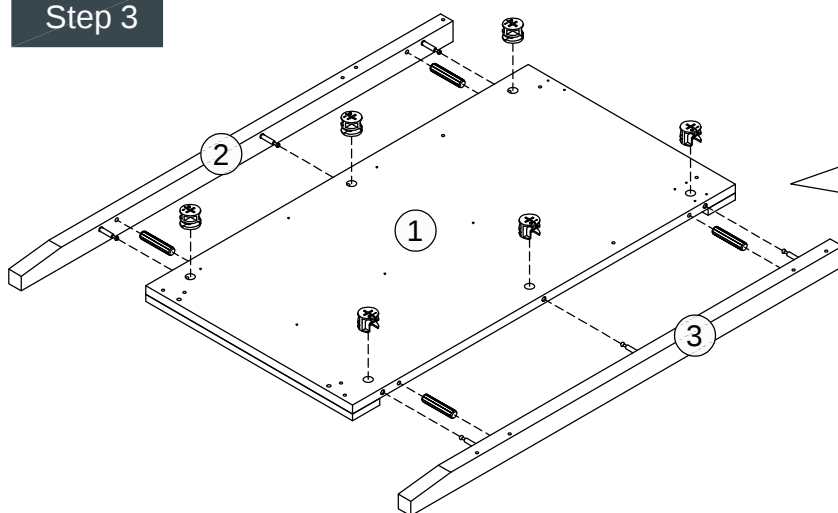


B




Cam Bolt × 6

C




6×30mm
Dowel × 4

Step 4

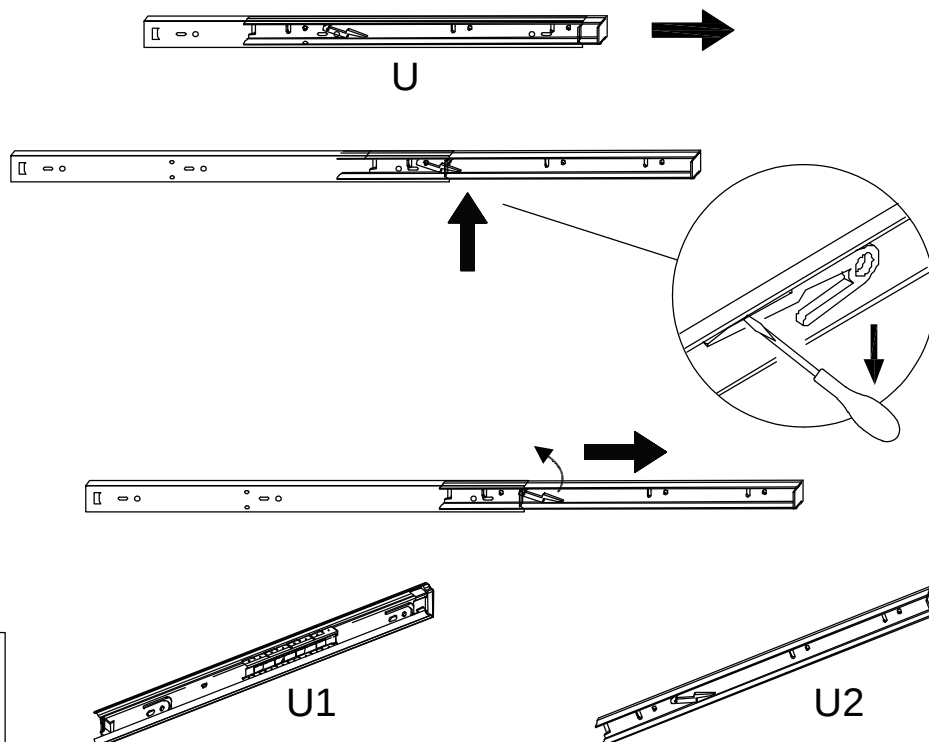

U

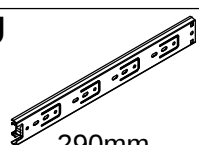


290mm
Drawer Runner × 6

U1


U2

Assembly Instructions

Step 5


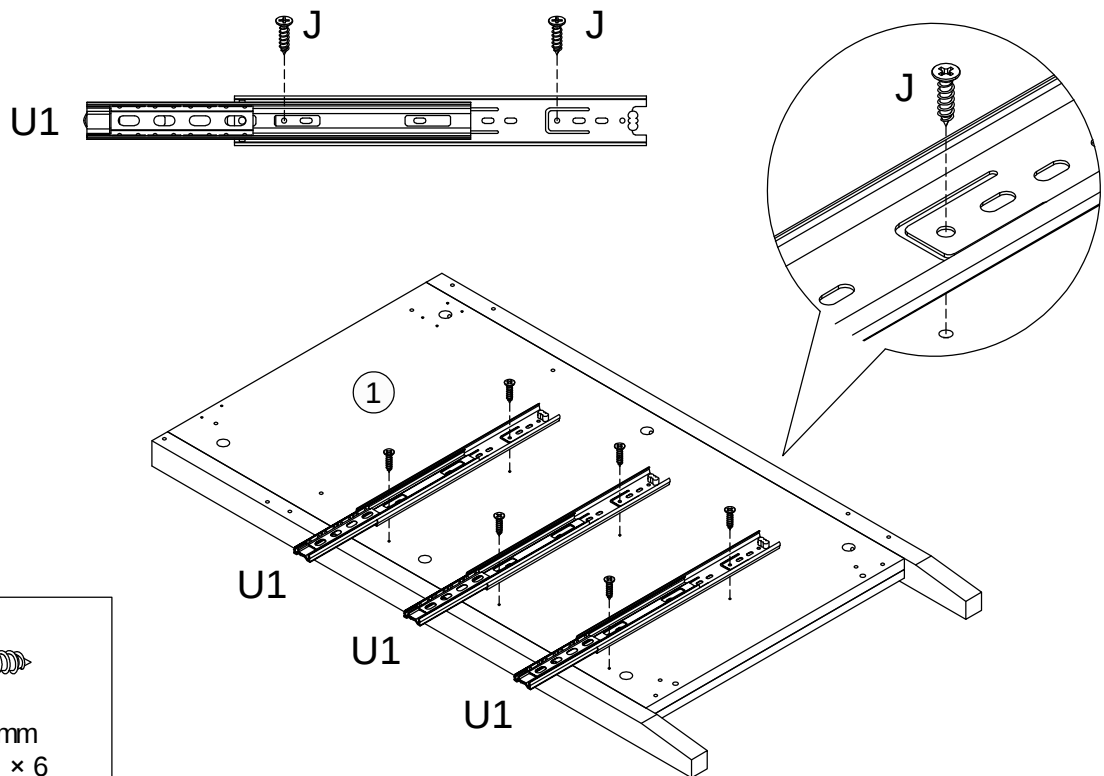


Step 6




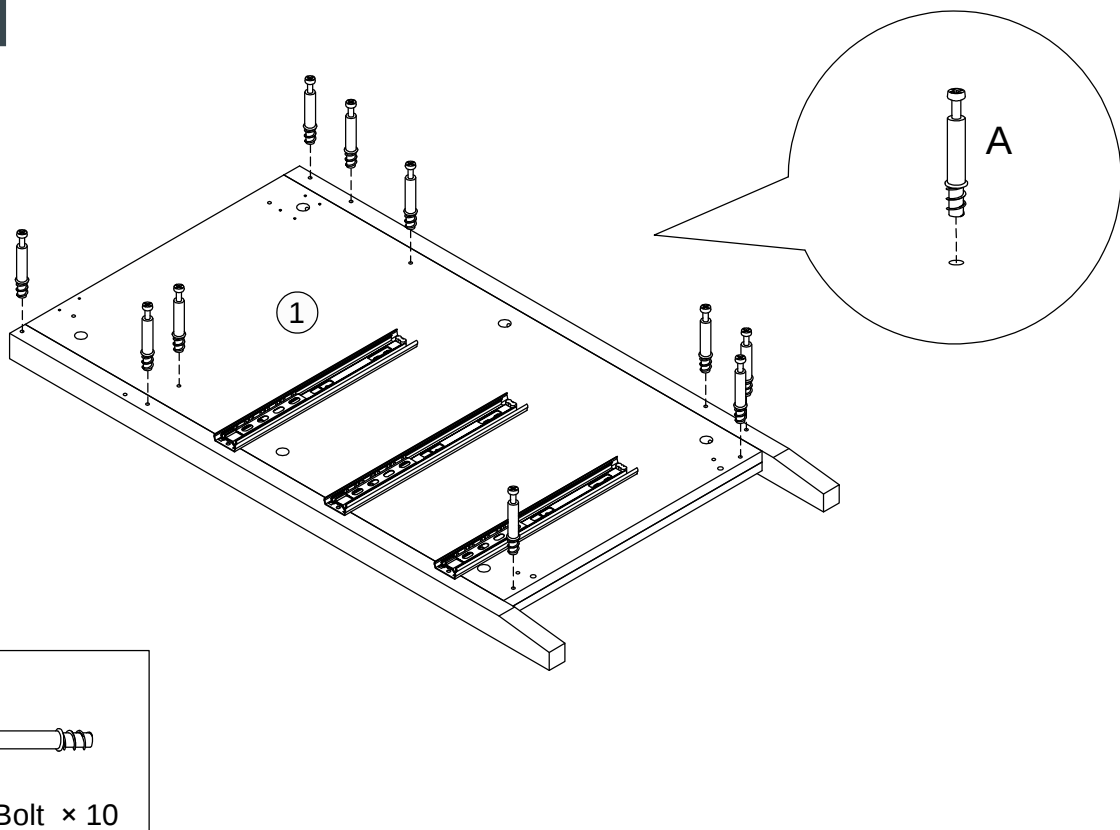


Assembly Instructions

Step 7

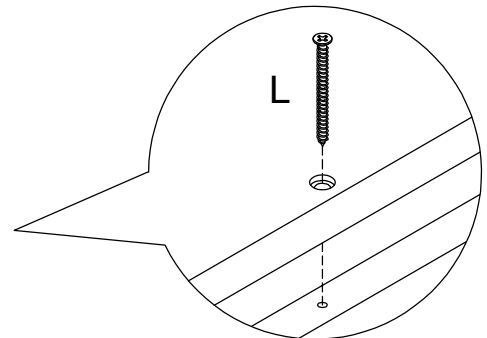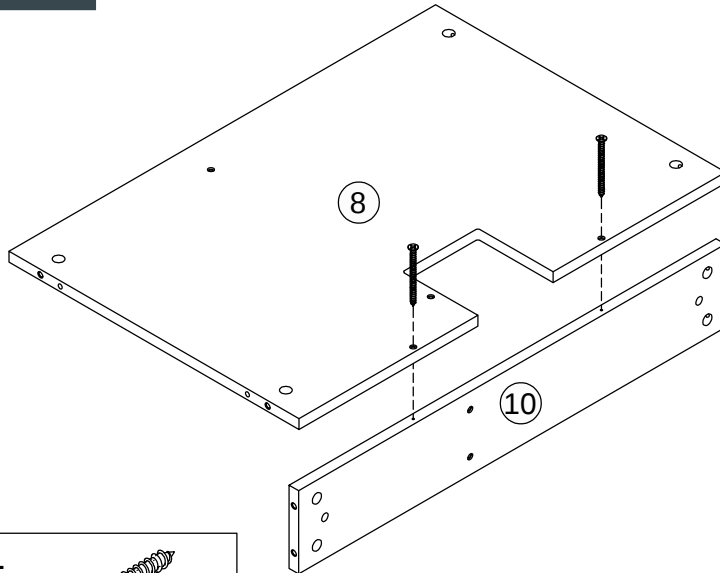


Step 8

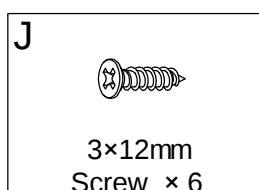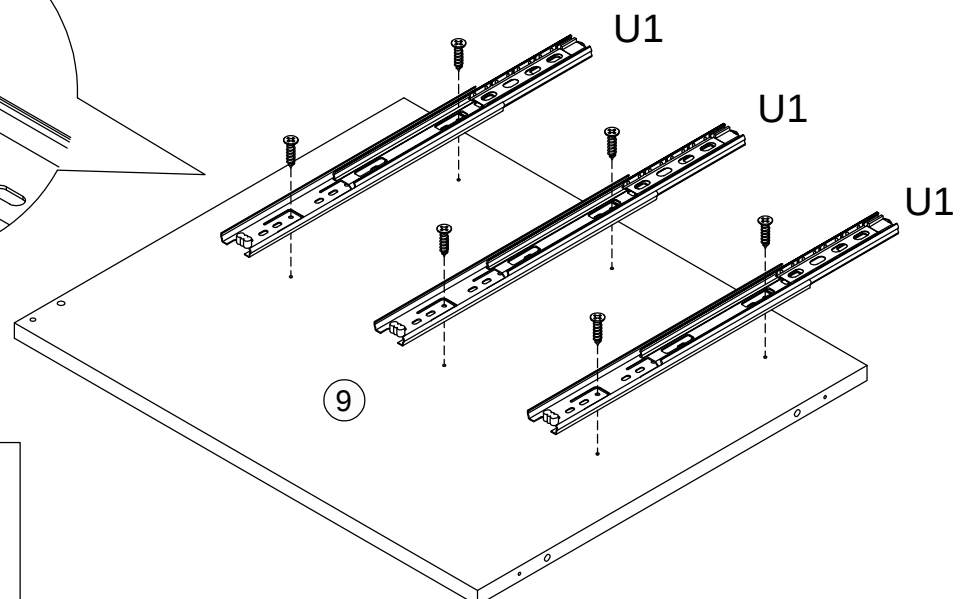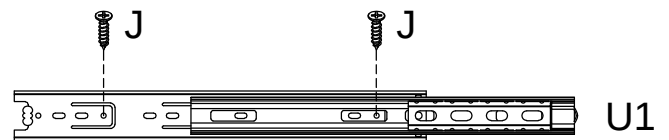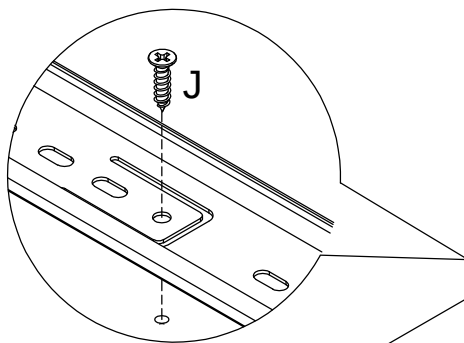


Assembly Instructions

Step 9


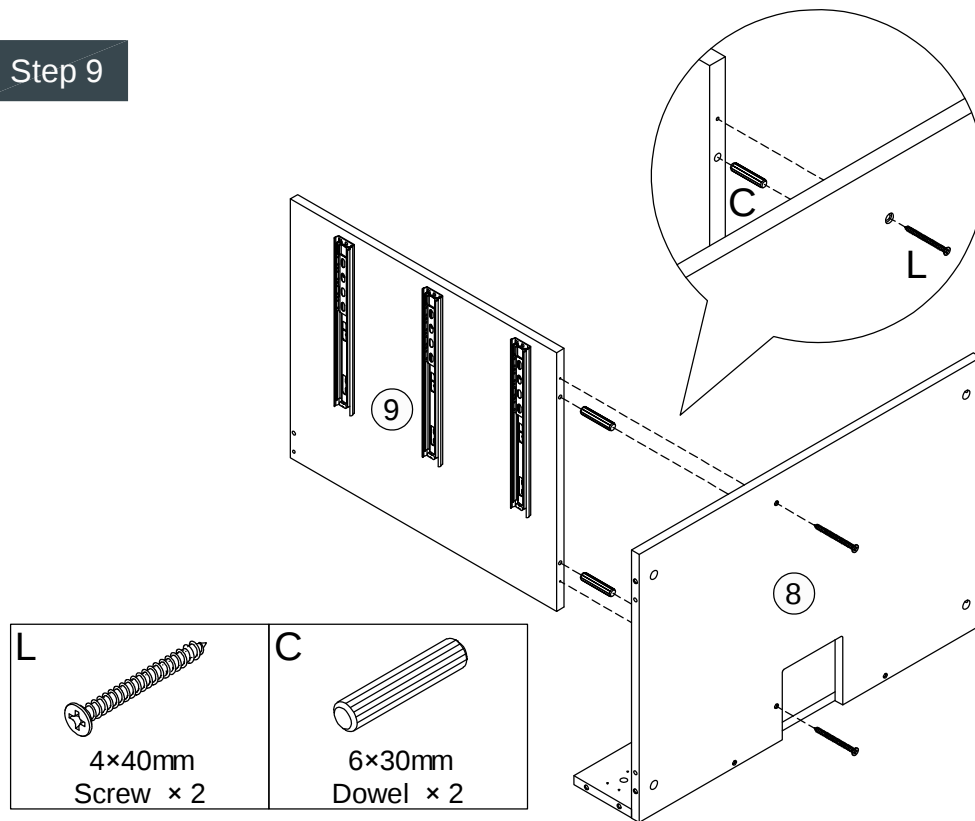


Step 10


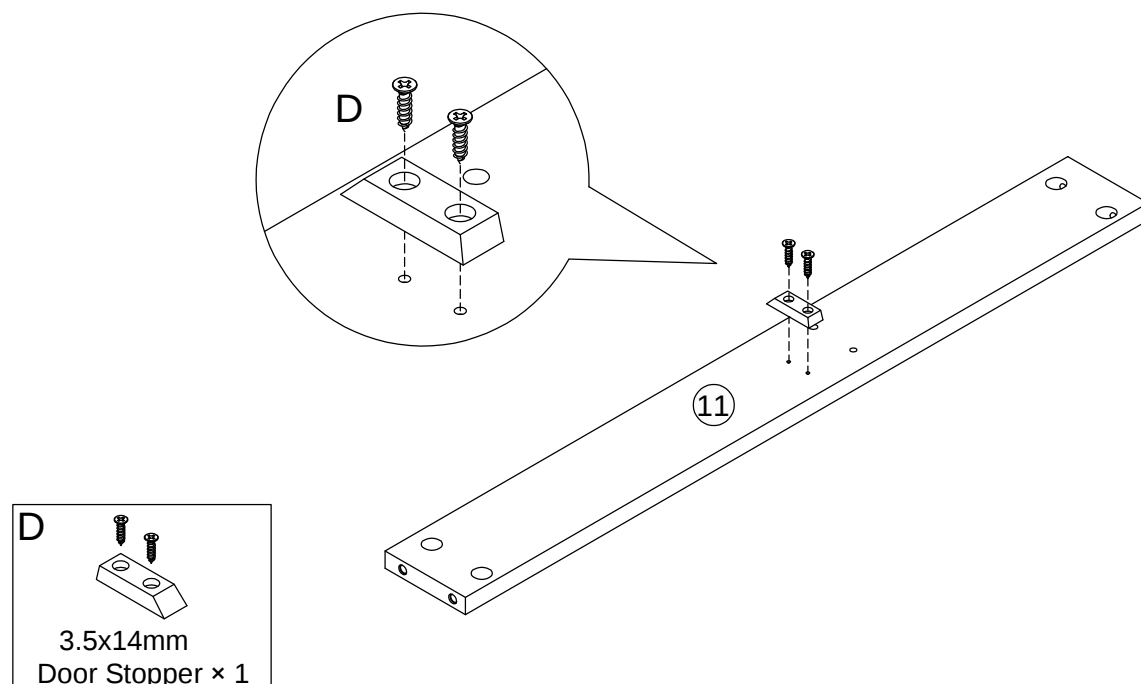


Assembly Instructions

Step 11

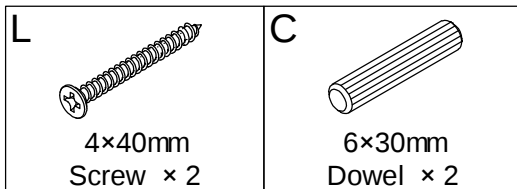
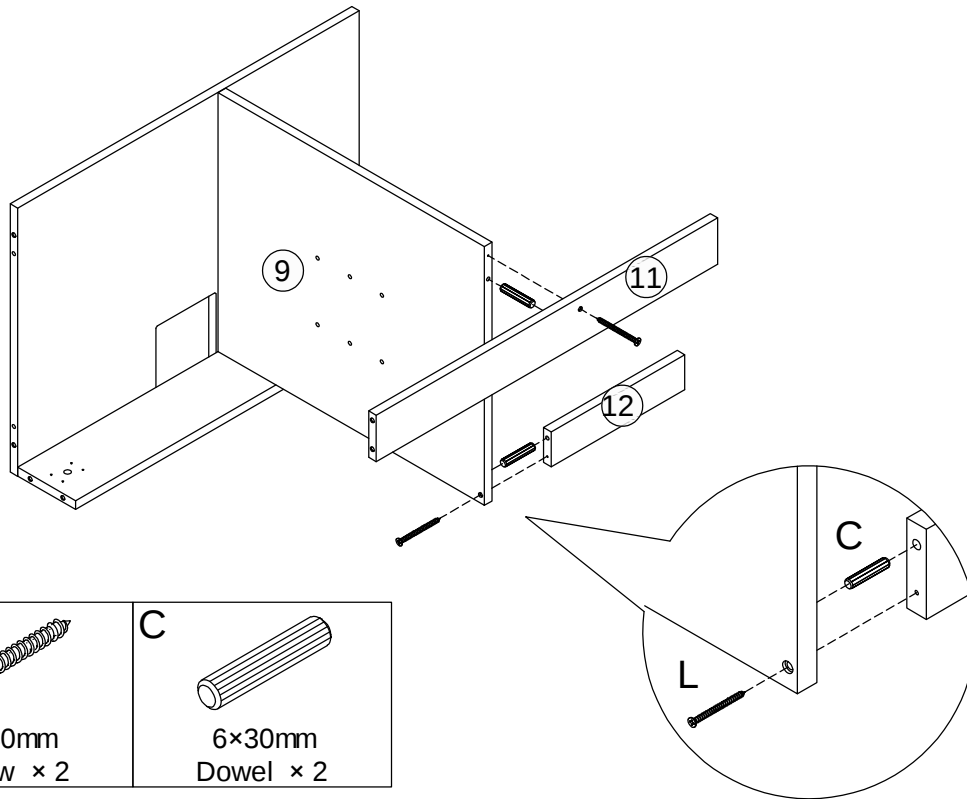


Step 12

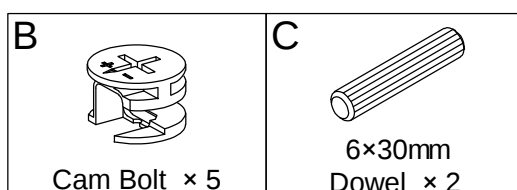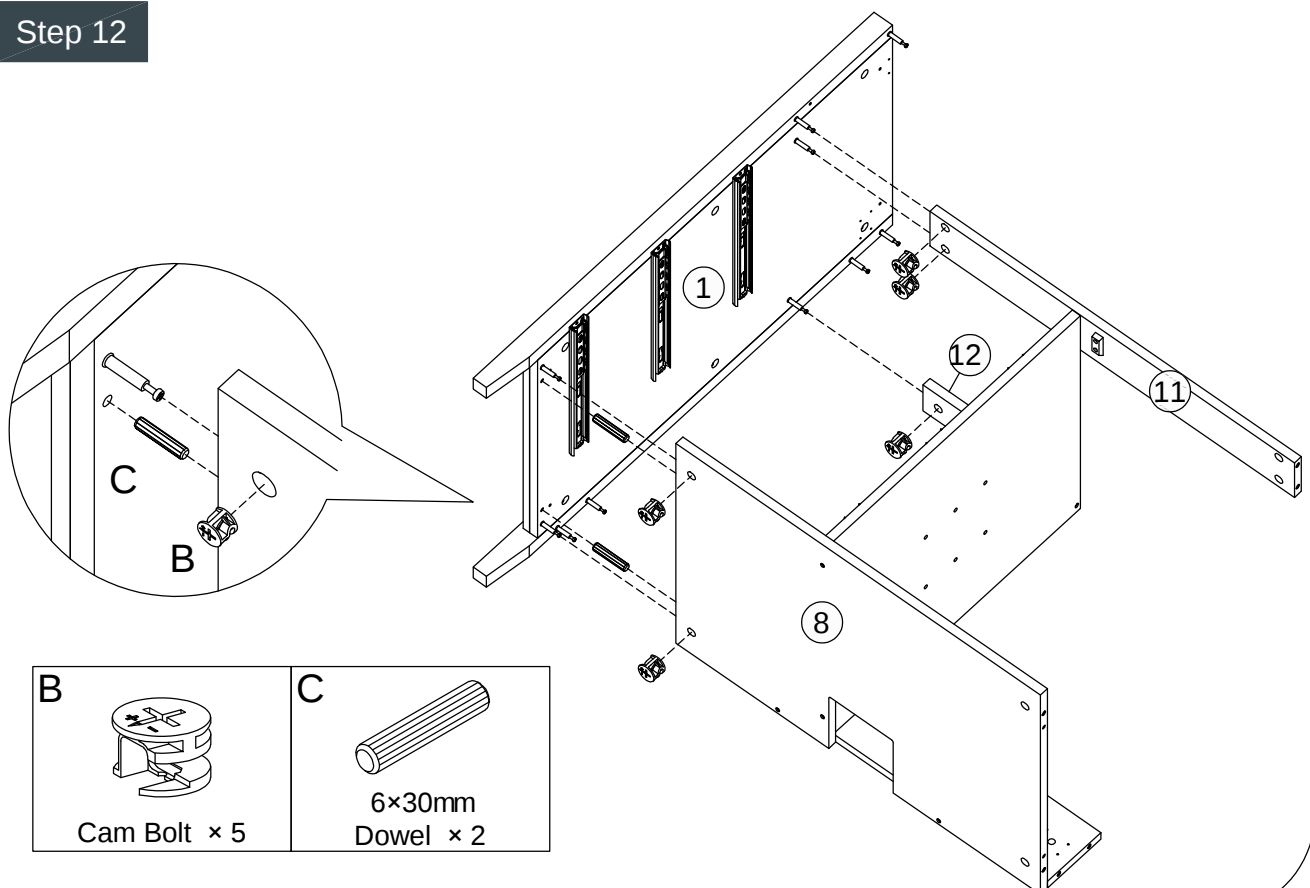

Assembly Instructions

Step 13

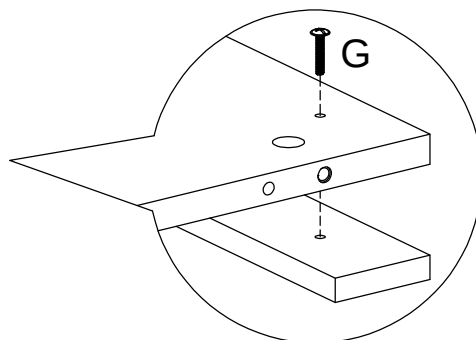
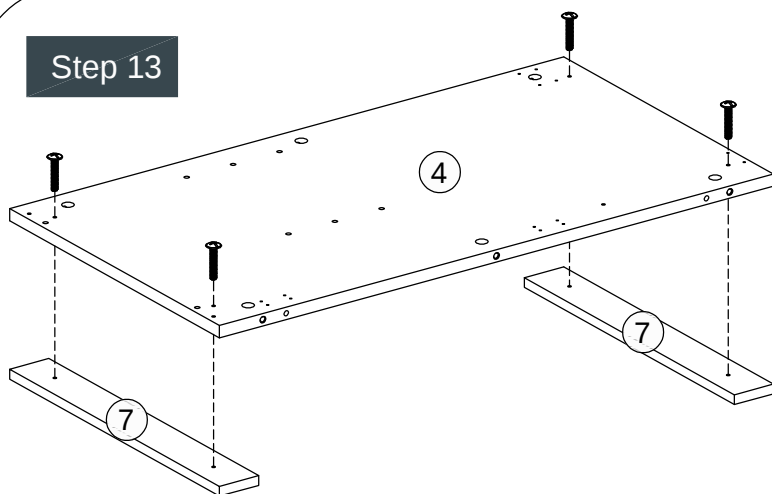


G




M4×20mm
Screw × 4


Step 14

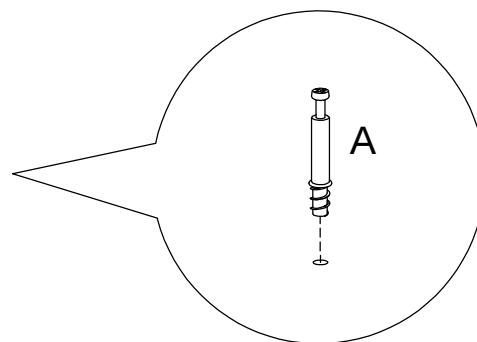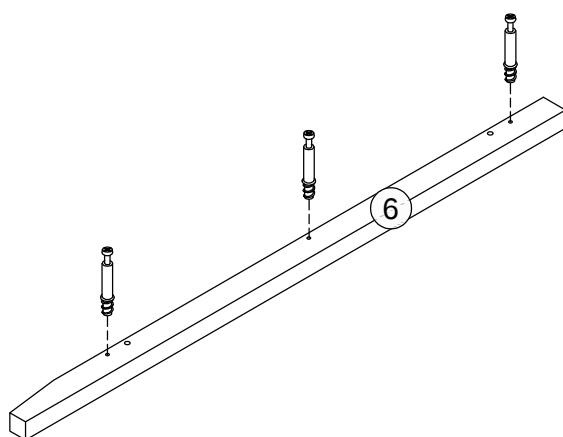

A




Cam Bolt × 6

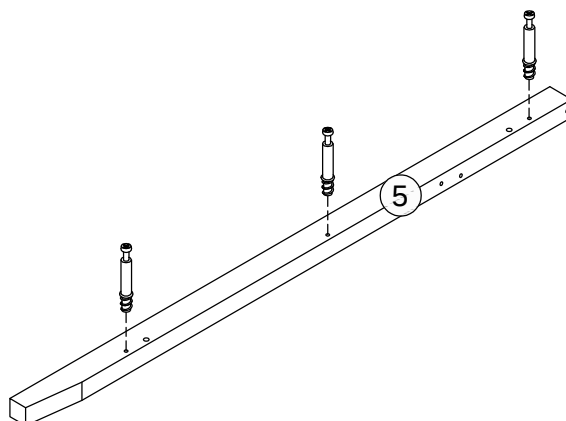


Assembly Instructions

Step 15

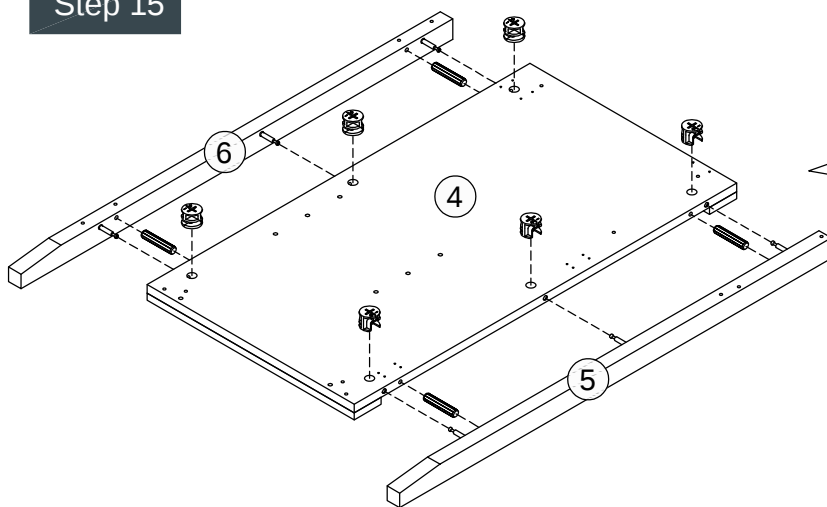


B





Cam Bolt × 6

C




6×30mm
Dowel × 4

Step 16

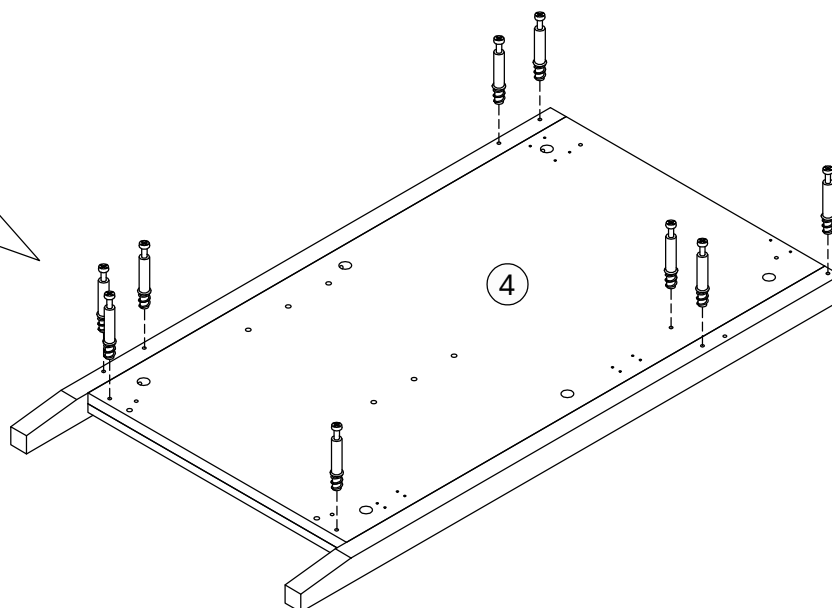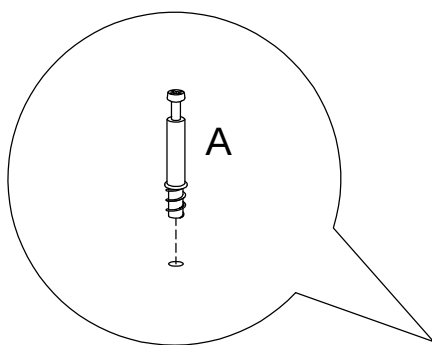


A





Cam Bolt × 9


Assembly Instructions


Step 17

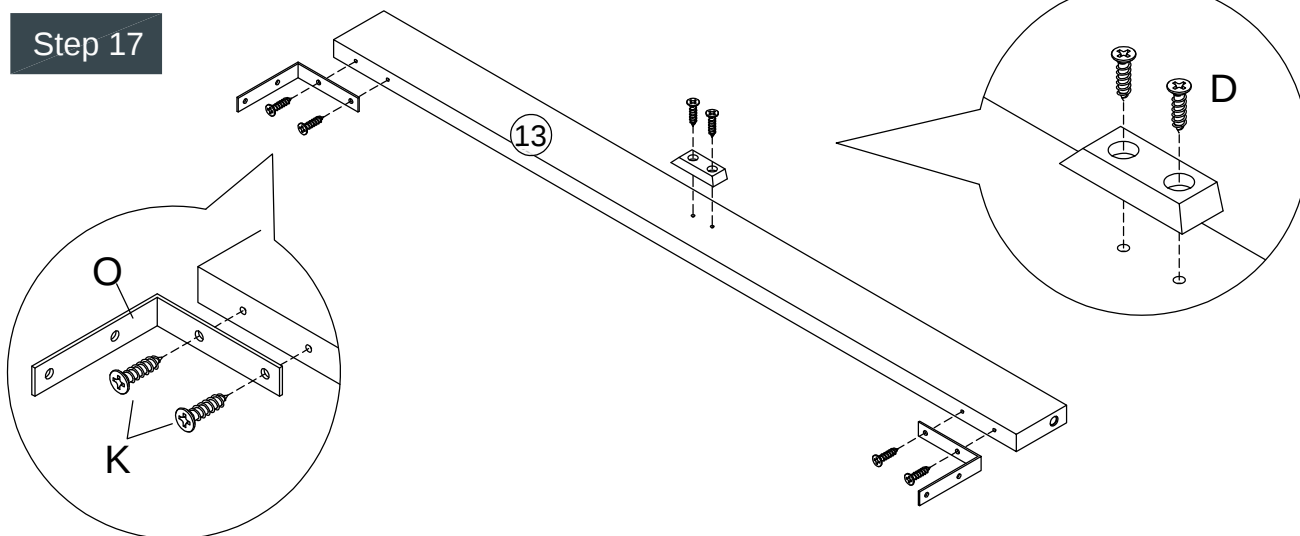

D  3.5x14mm Door Stopper × 1	K  3.5x14mm Screw × 4	O  L-Shaped Steel × 2
---	--	--



Step 18

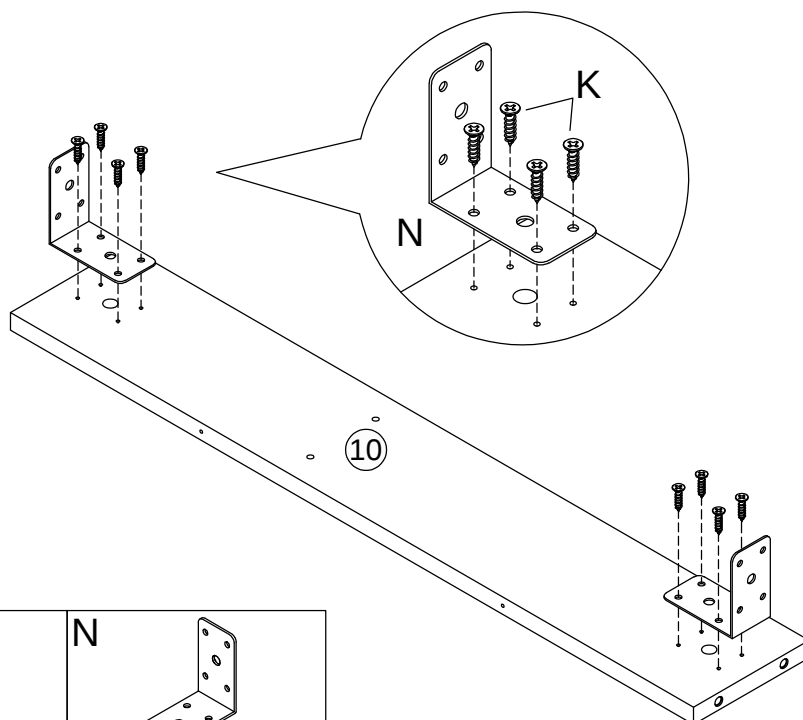


K  3.5x14mm Screw × 8	N  L-Shaped Steel × 2
---	---

Assembly Instructions

Step 19

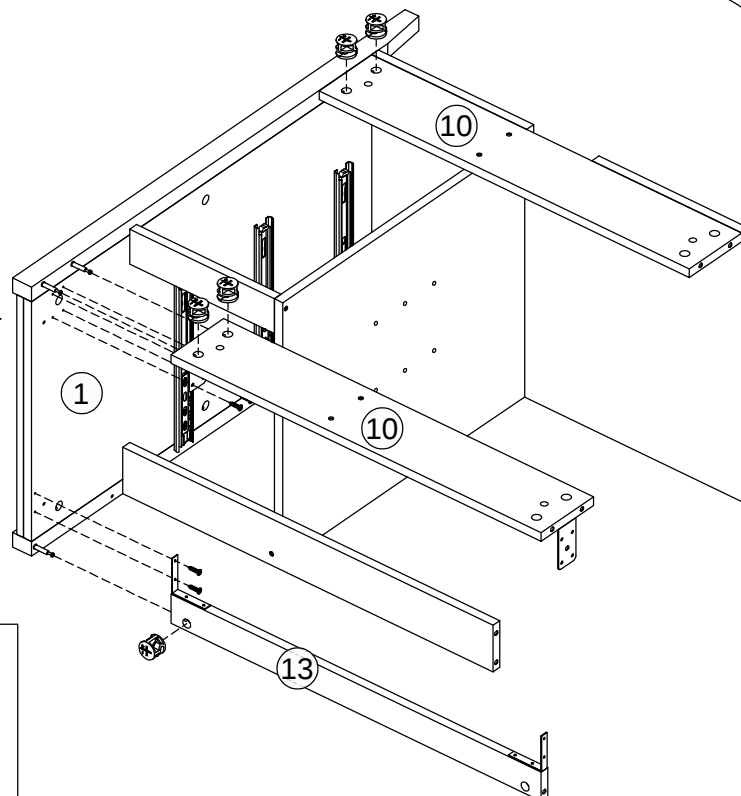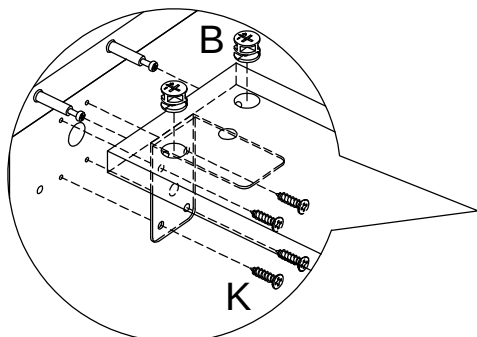

B





Cam Bolt × 5

K




3.5×14mm
Screw × 6

Step 20

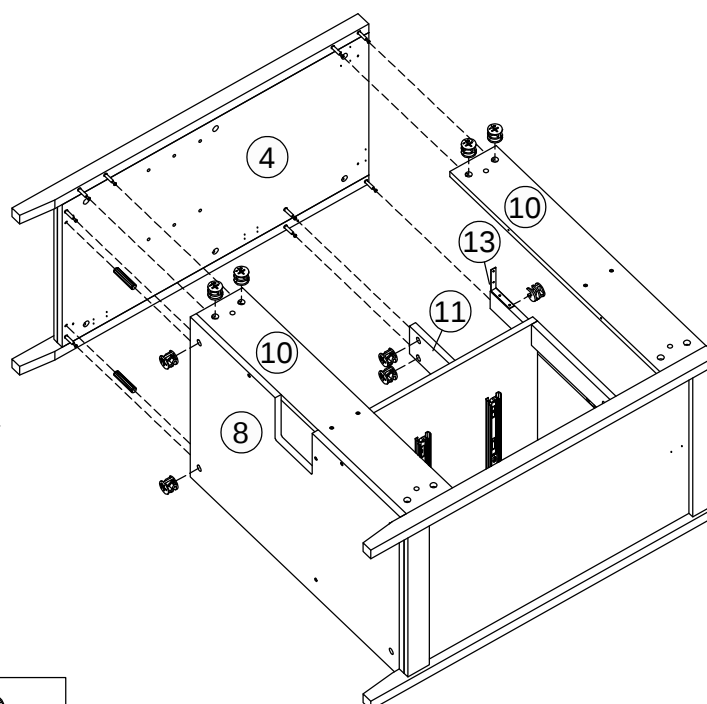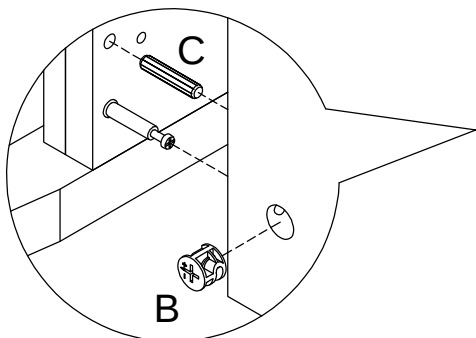


B



Cam Bolt × 9




C




6×30mm
Dowel × 2

Assembly Instructions


Step 21

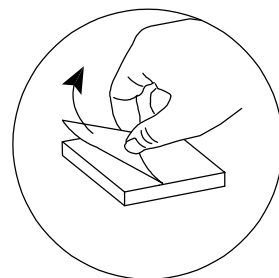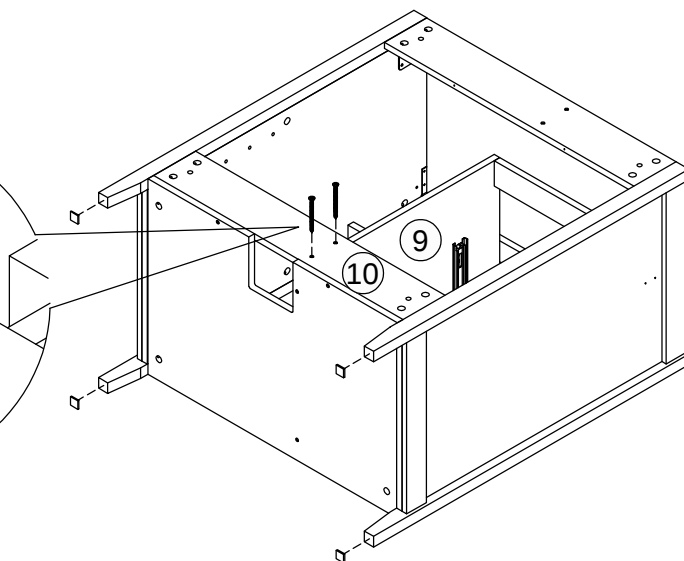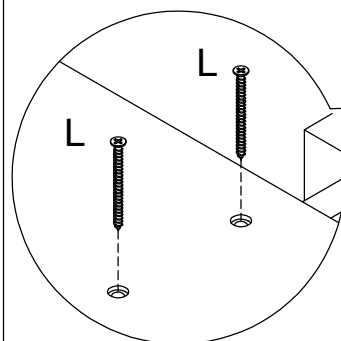



Note: Please remove the protective film before installation

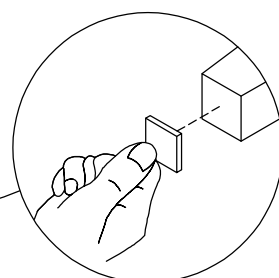

Note: Stick the felt pad to the bottom of the leg post.

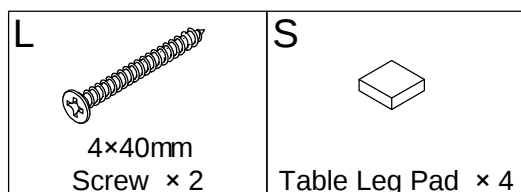


Step 22

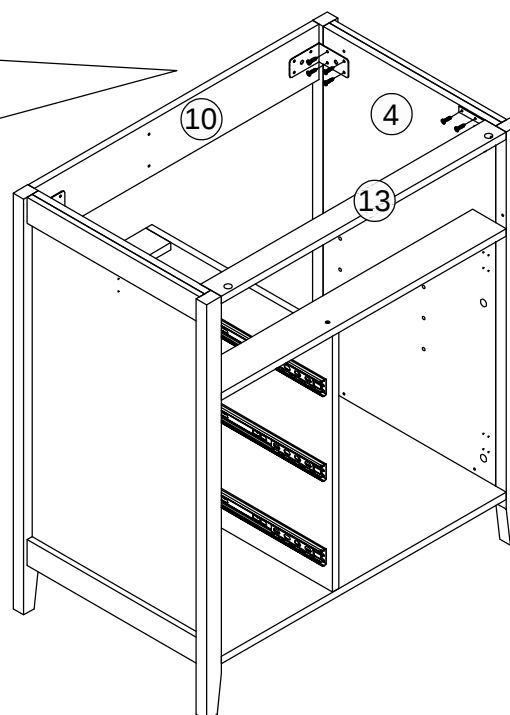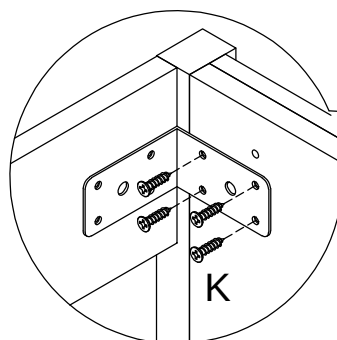


Assembly Instructions



Step 23

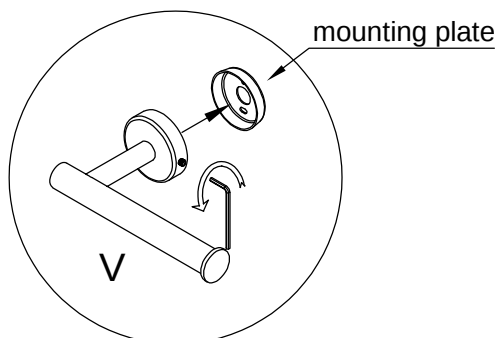




1. First, remove the mounting plate

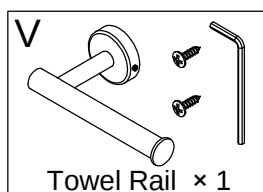

2. Then, secure the back cover to the side panel with screws.

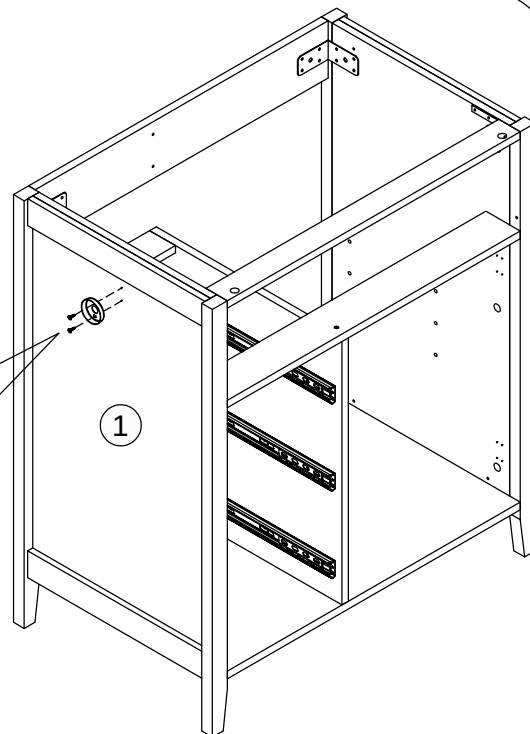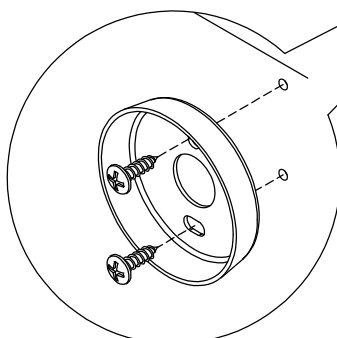


Step 24

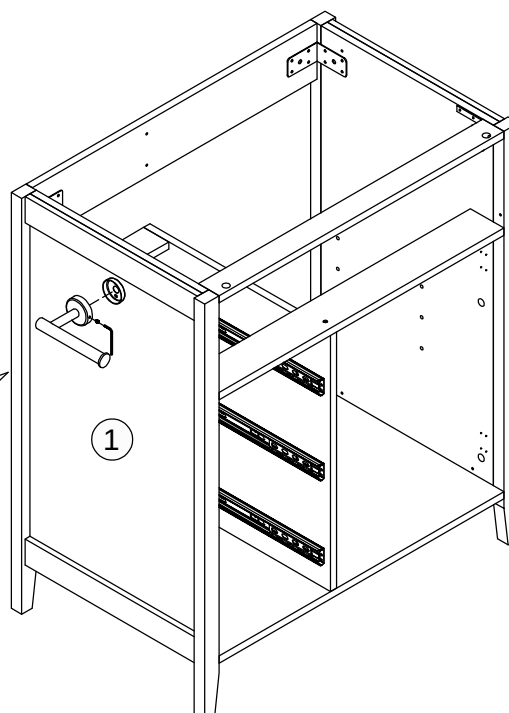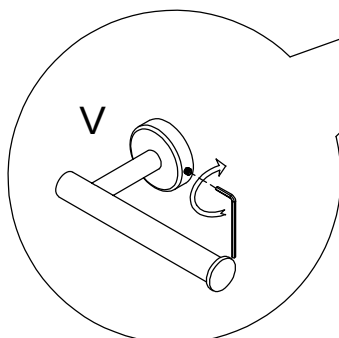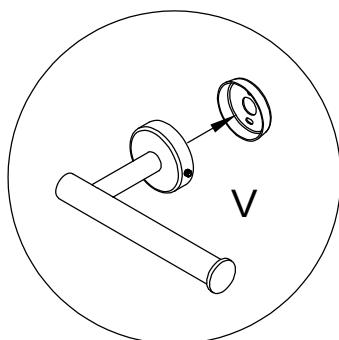


Assembly Instructions

Step 25

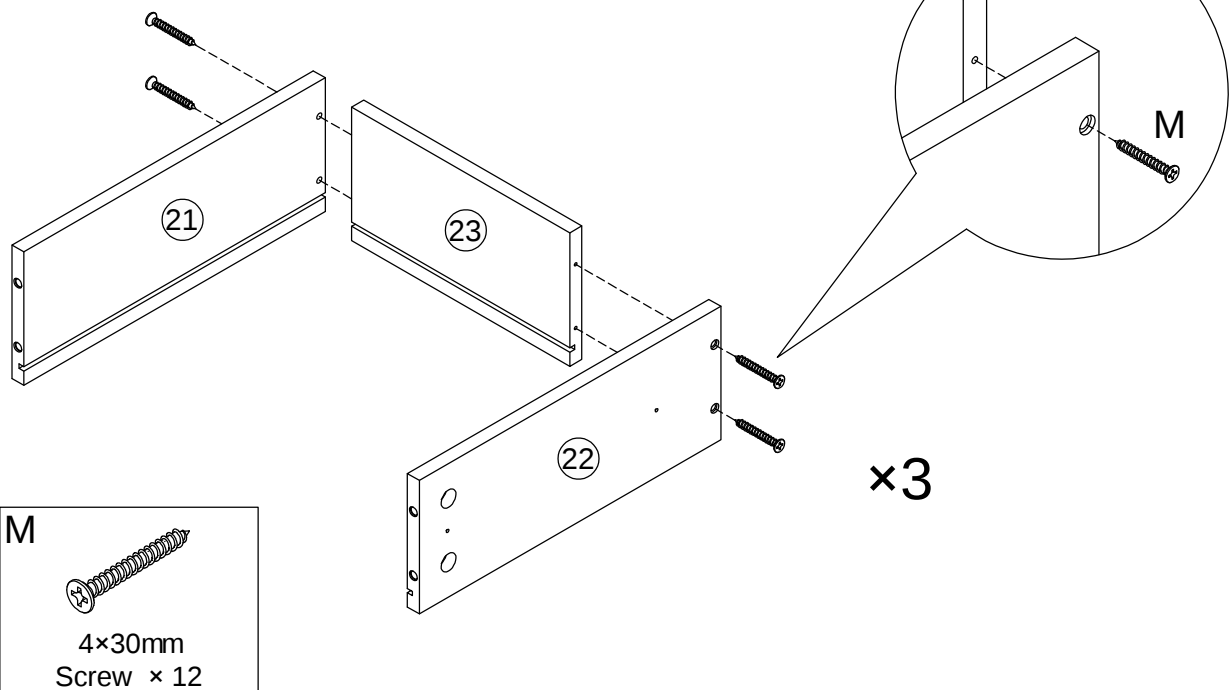


Step 26

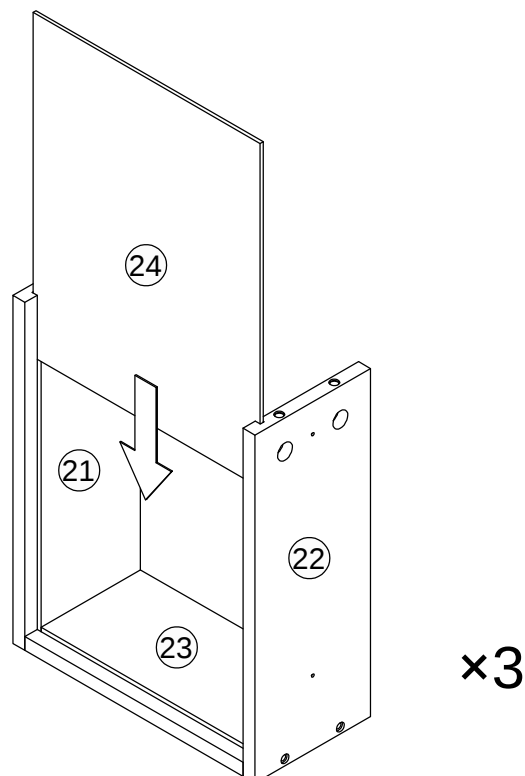


Assembly Instructions

Step 27

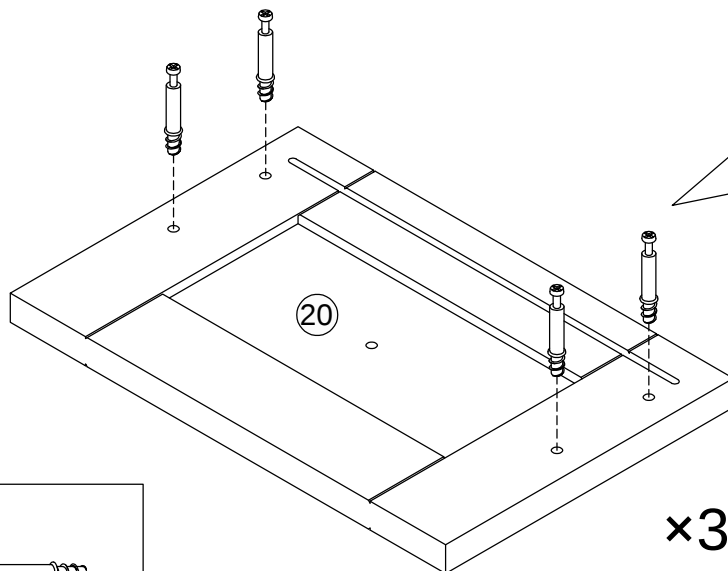


A




Cam Bolt × 12

Step 28

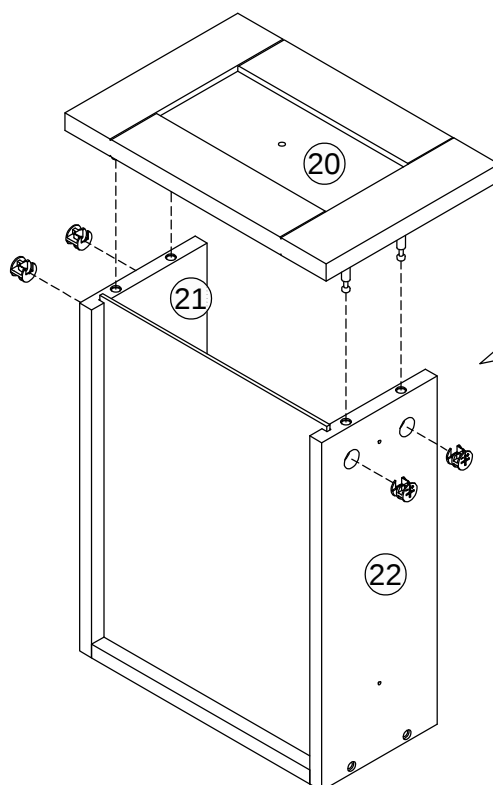


B




Cam Bolt × 12

Assembly Instructions

Step 29


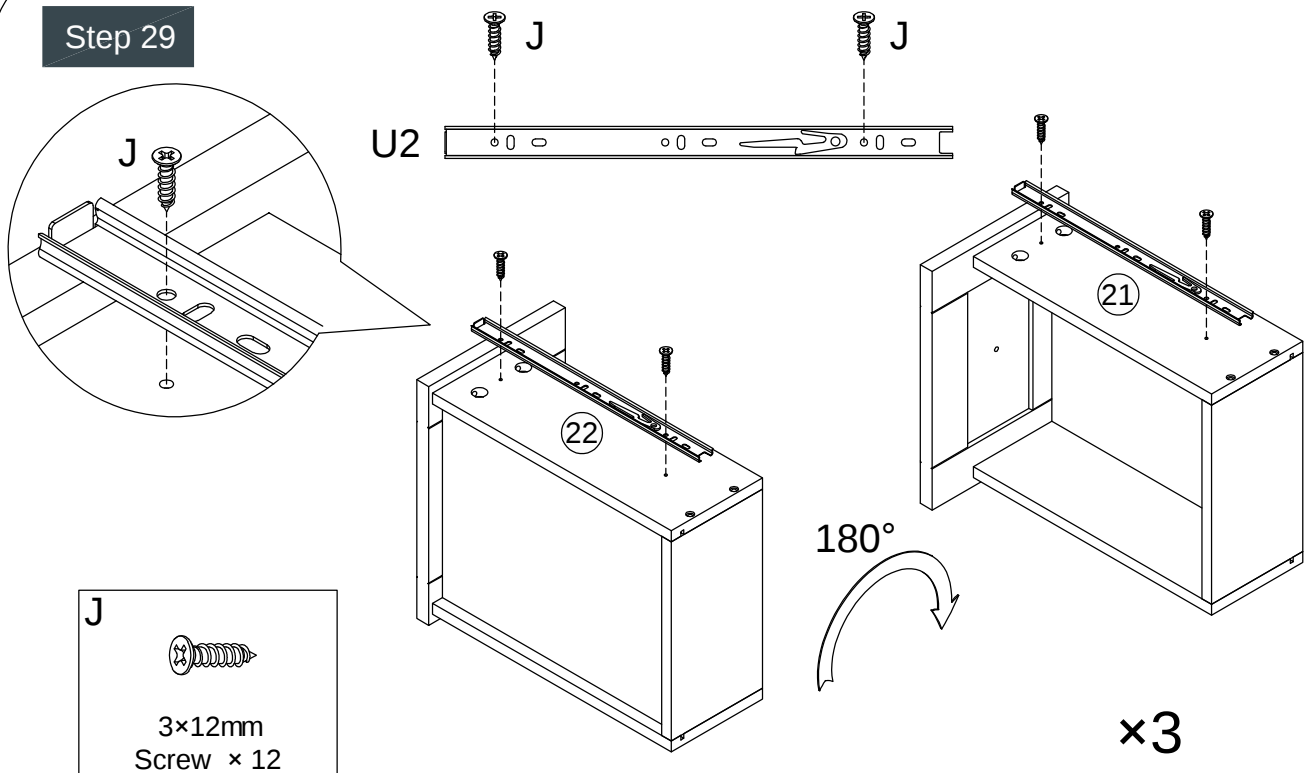


Step 30

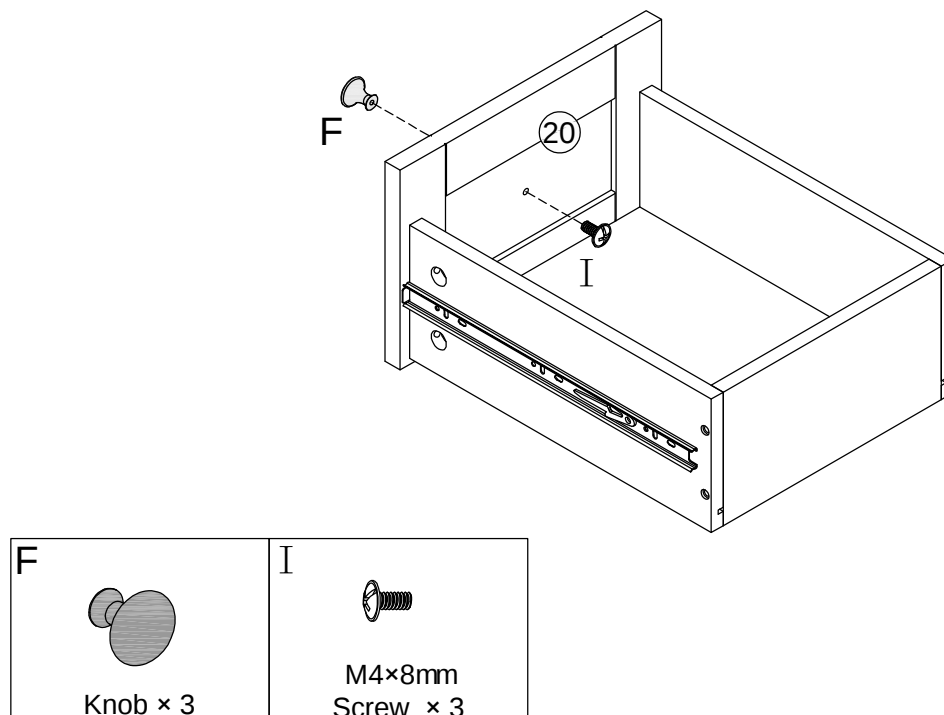


Assembly Instructions

Step 31

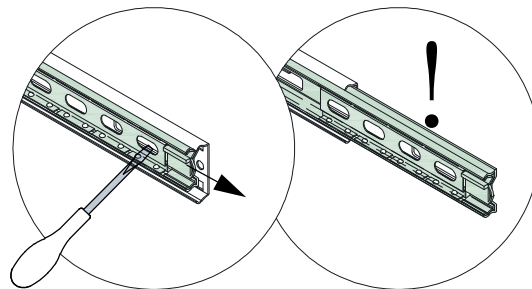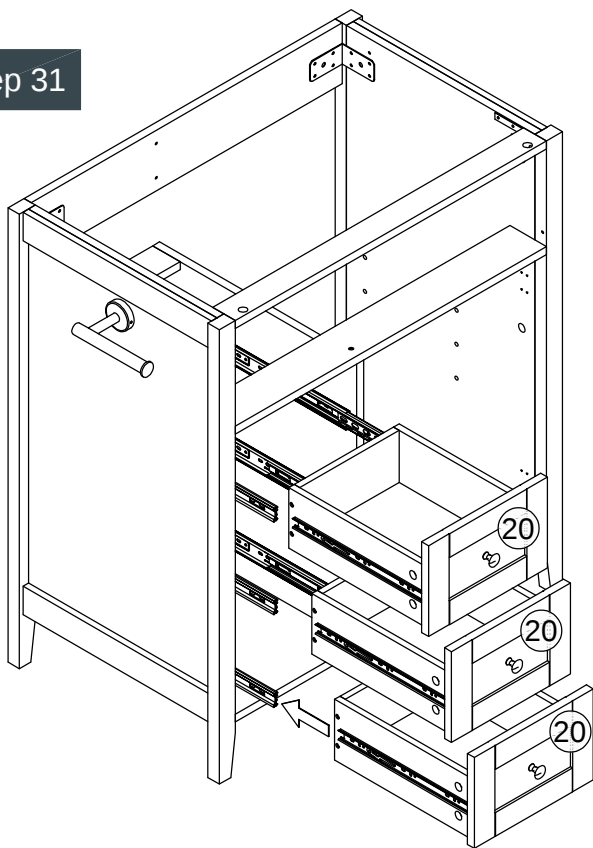


Step 1: Use a screwdriver to pry out the drawer slide's female rail tab.

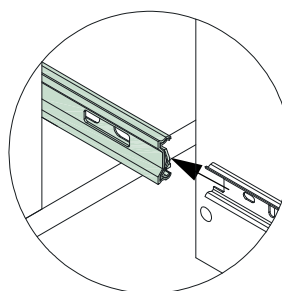


Step 2: Align the drawer's male rail with the female rail tab, then slowly push it in until fully seated.


Step 32

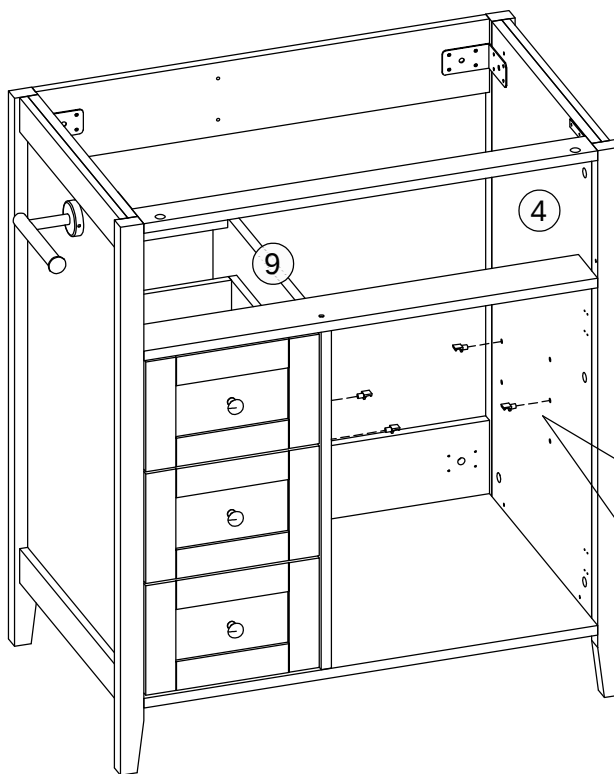

R




Shelf Support × 4




R

Assembly Instructions


Step 33

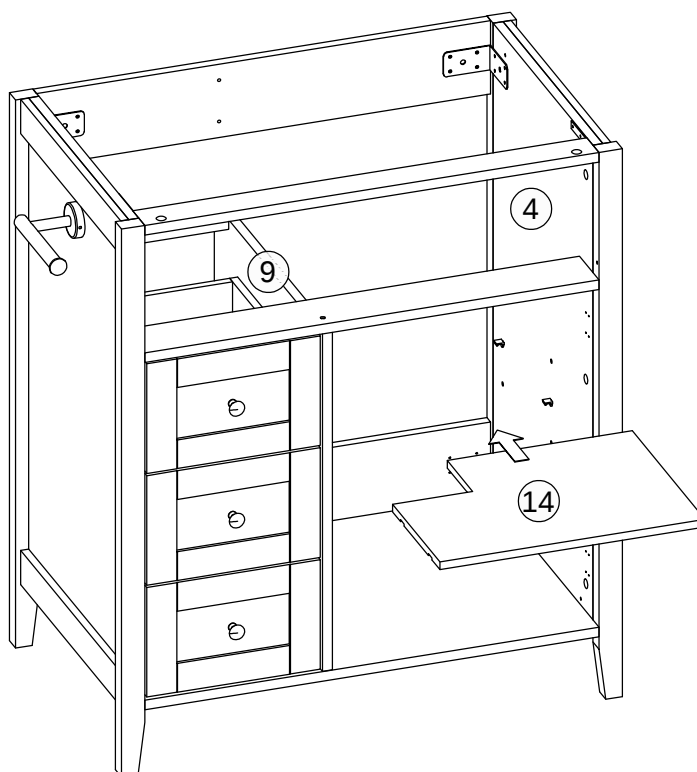

Step 34

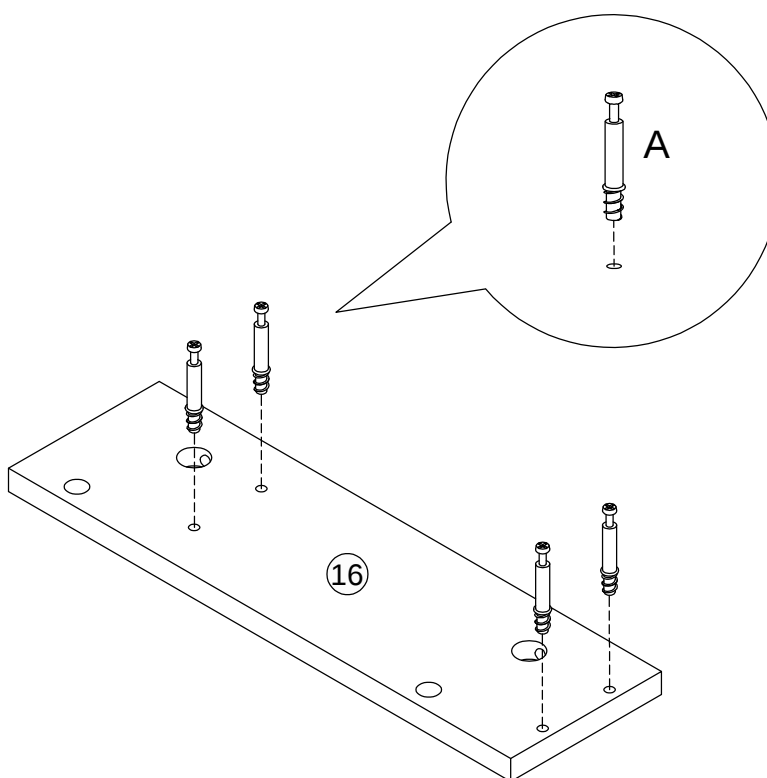


A




Cam Bolt × 4

Assembly Instructions

Step 35

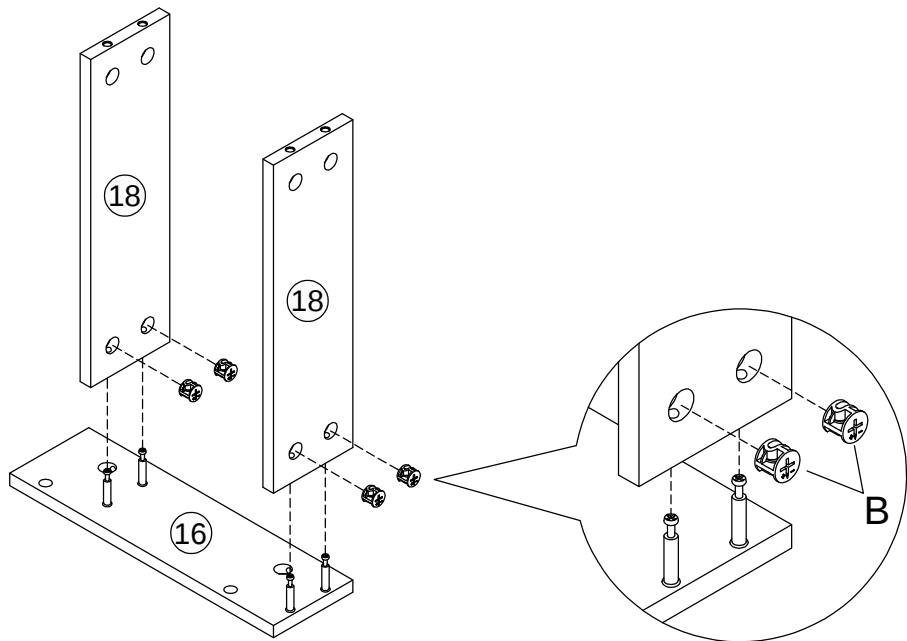


B




Cam Bolt × 4

Step 36

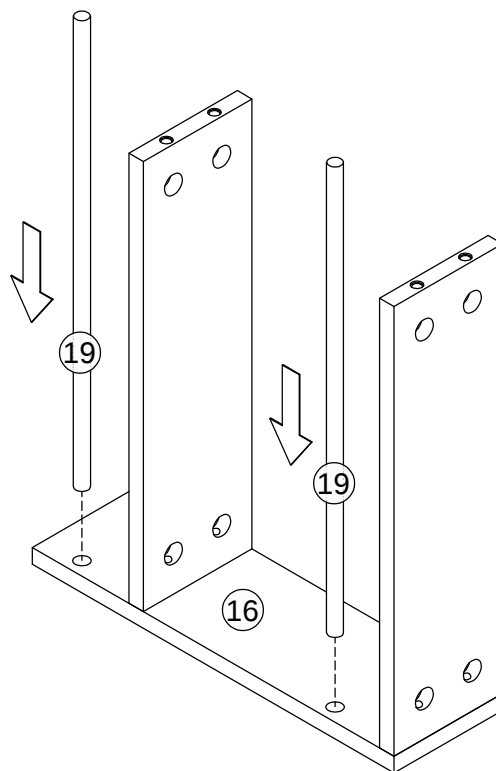


Assembly Instructions

Step 37

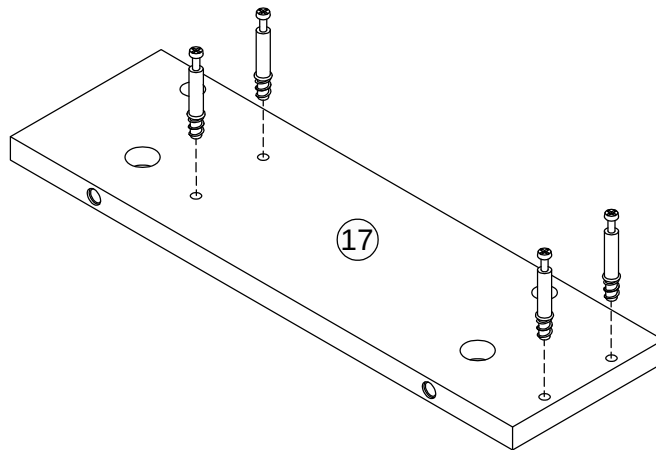


A




Cam Bolt × 4

Step 38

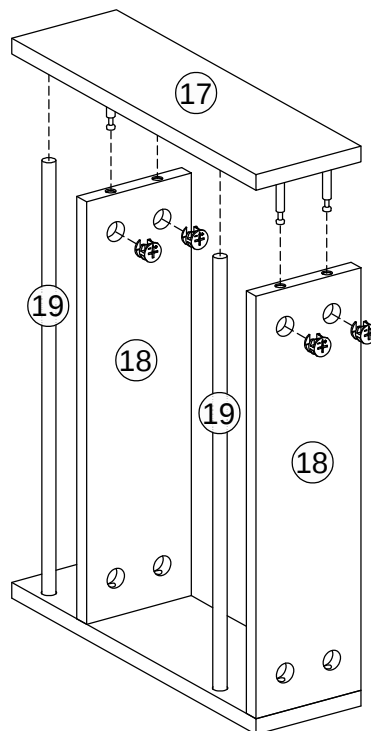


B




Cam Bolt × 4

Assembly Instructions

Step 39

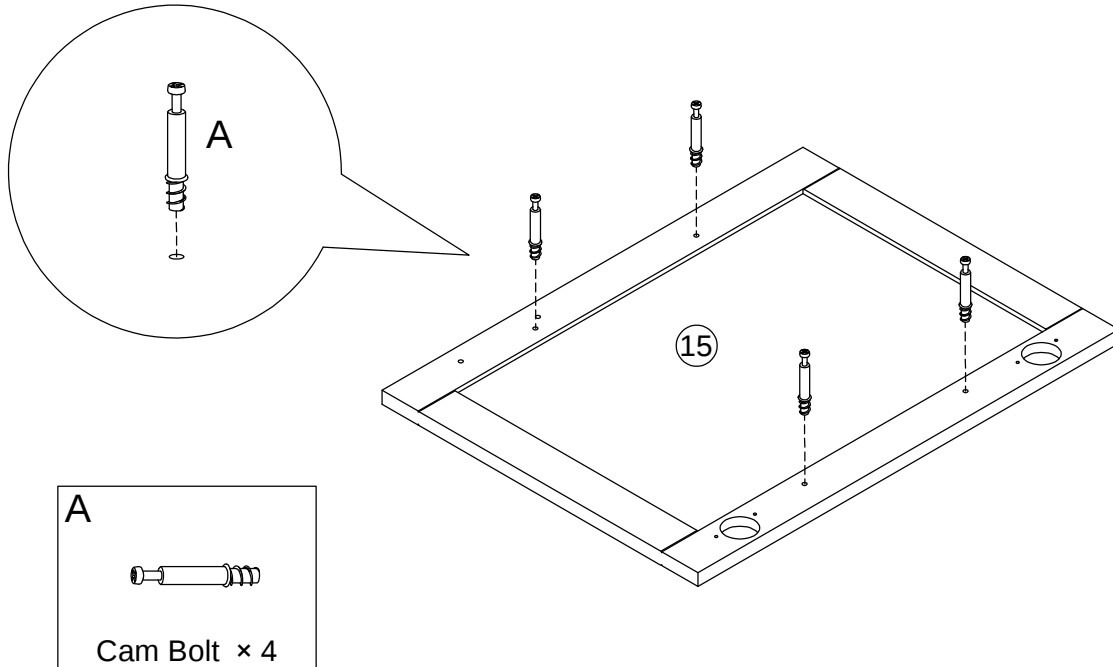


Step 40

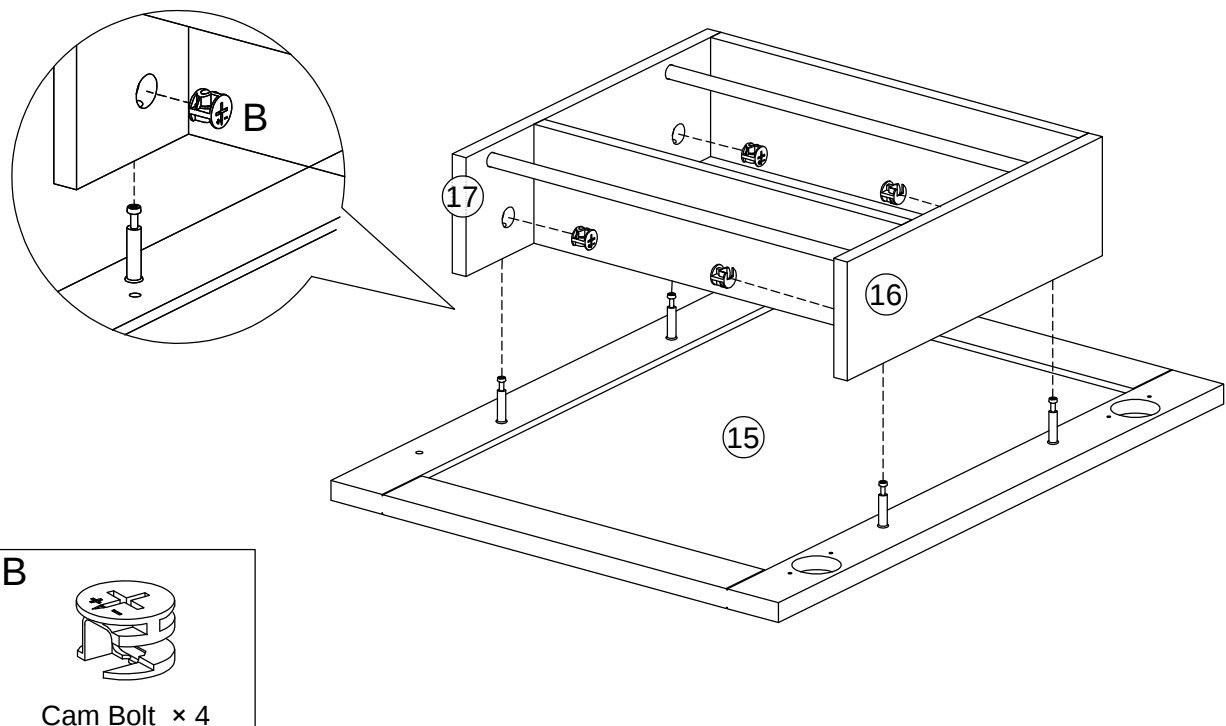


Assembly Instructions


Step 41

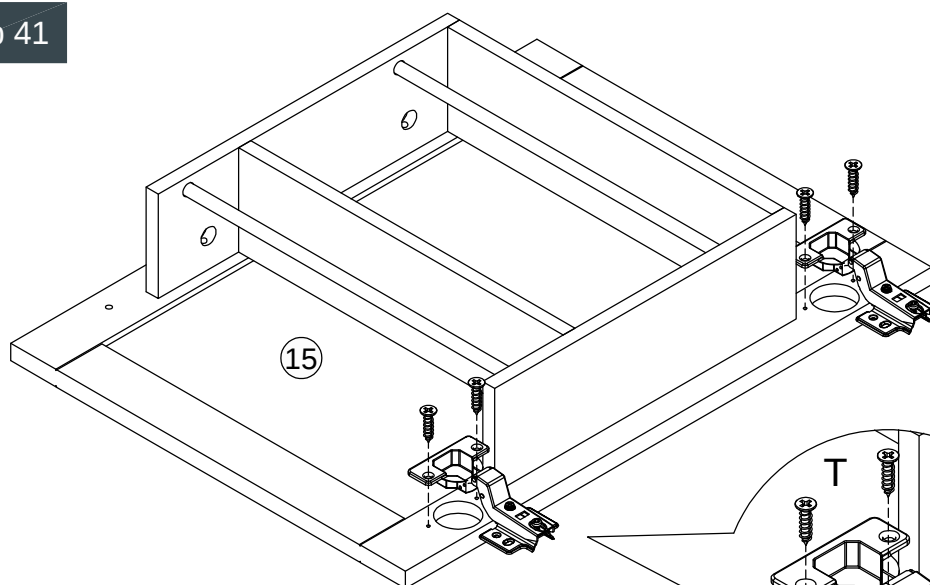


Step 42

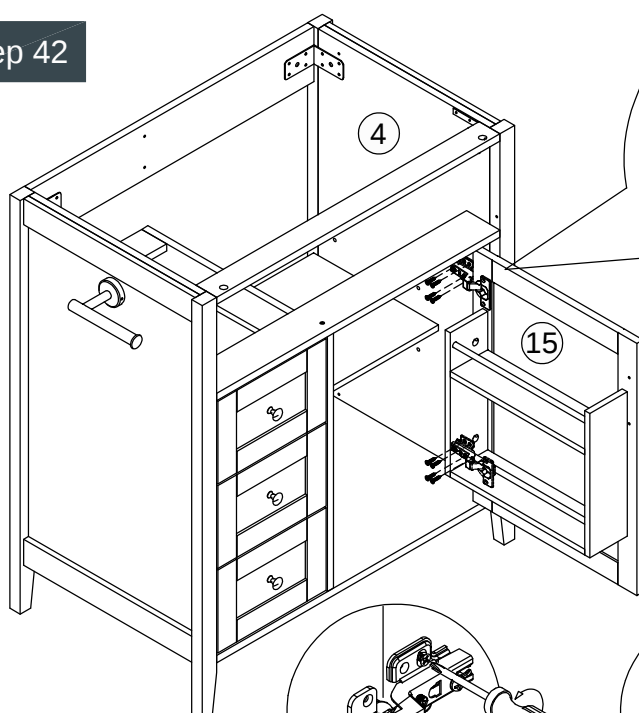


If the door can't close,
please adjust the hinges as below.

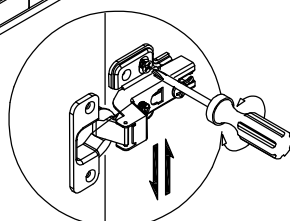

This is used to adjust
the door panel in the up
and down direction.

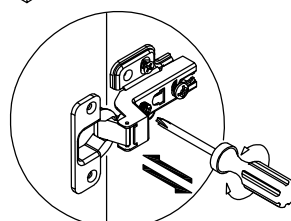



This is used to adjust the
door panel in the left
and right direction.

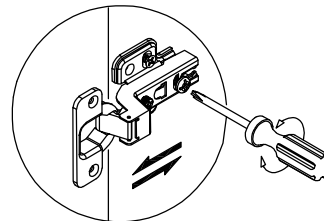


This is used to adjust
the door panel in the
front and rear.

Assembly Instructions

Step 43

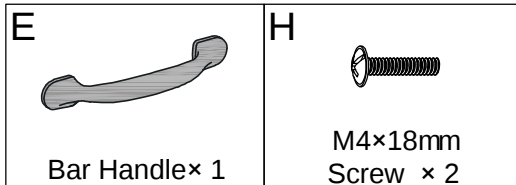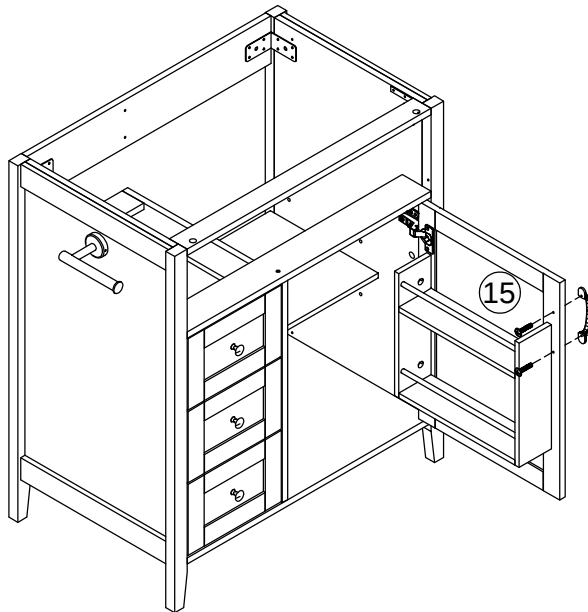


Step 44


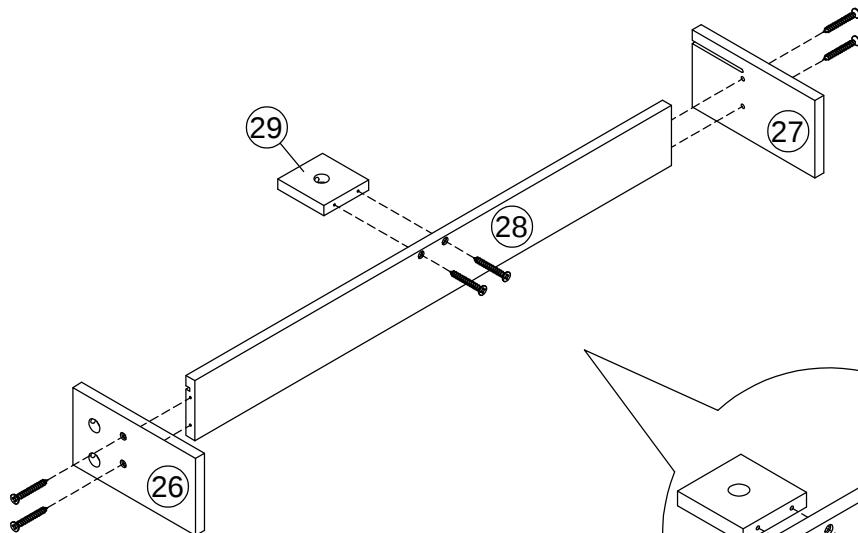


Assembly Instructions

Step 45

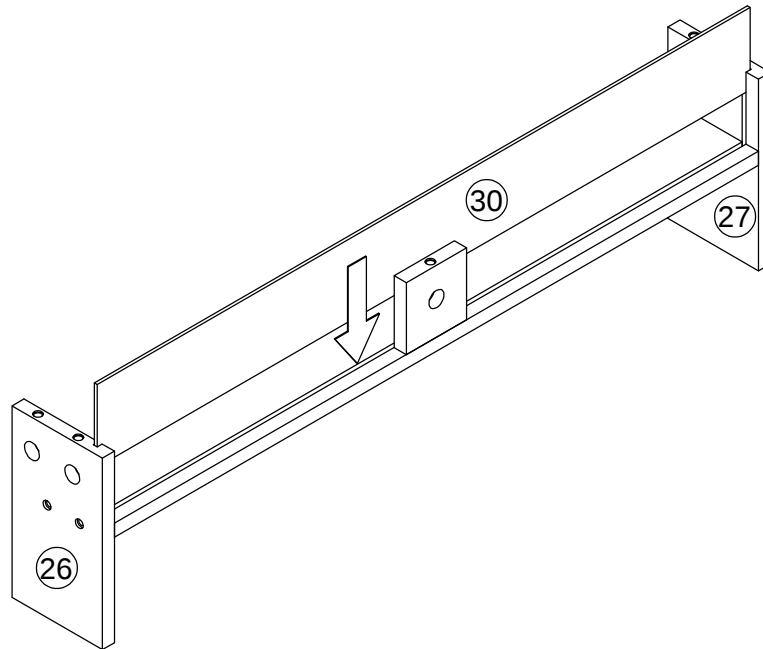


Step 46

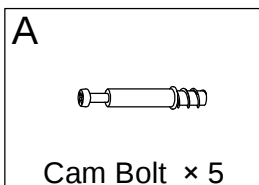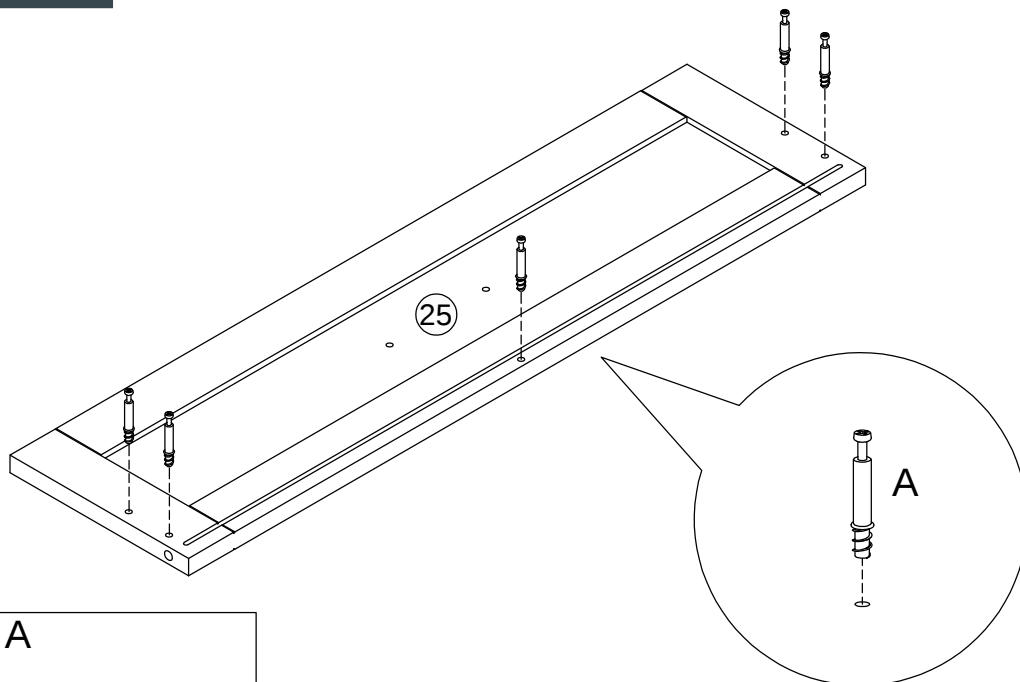


Assembly Instructions

Step 47

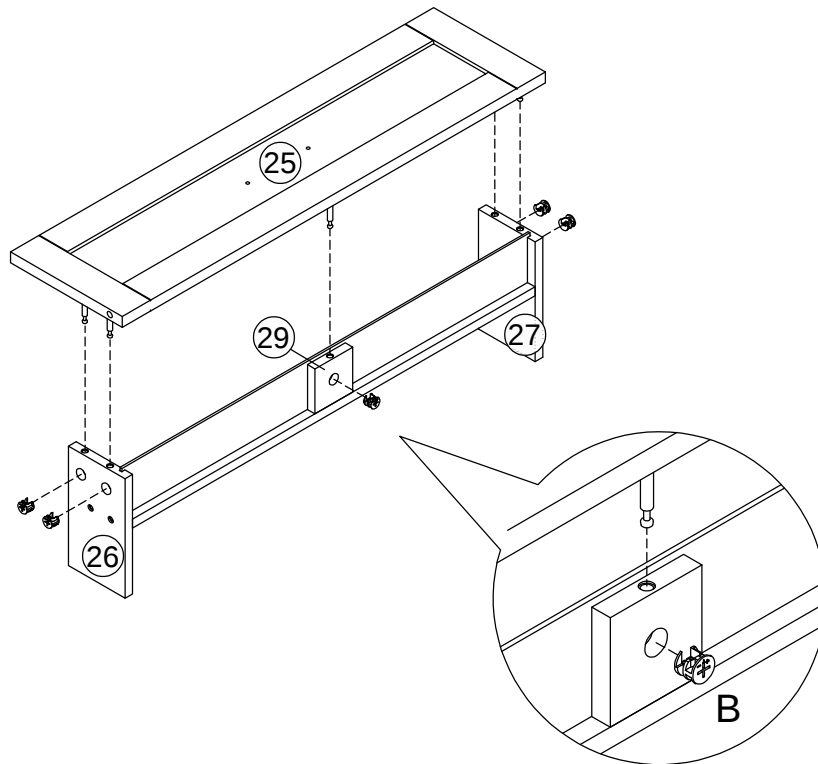


B



Cam Bolt × 5

Step 48

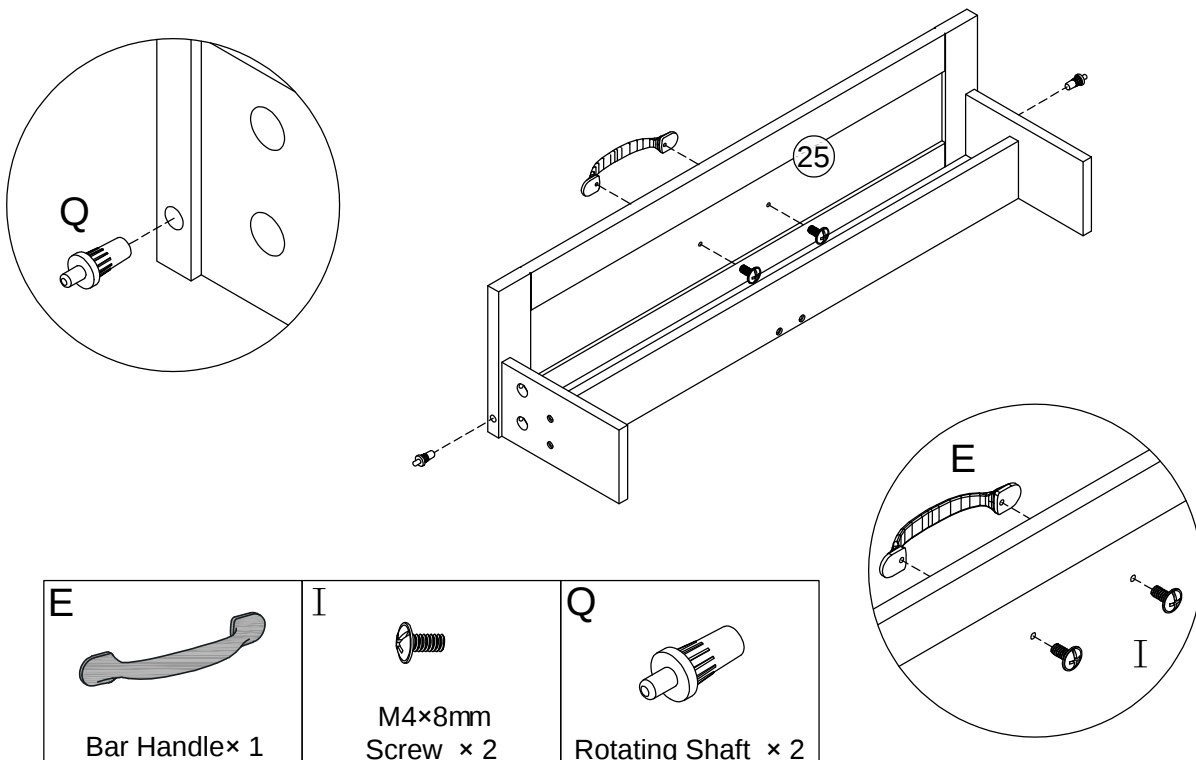

E




Bar Handle × 1

I



M4×8mm
Screw × 2


Q









Rotating Shaft × 2

Assembly Instructions

Step 49


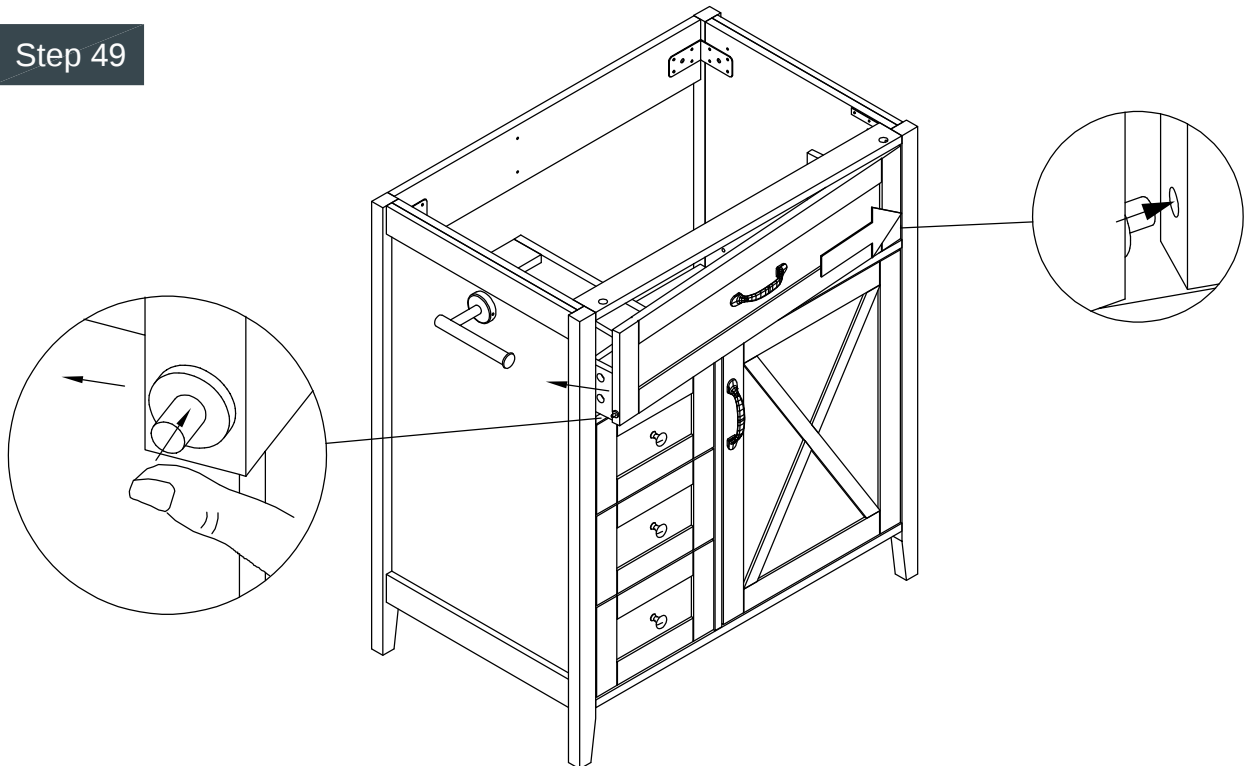


Step 50

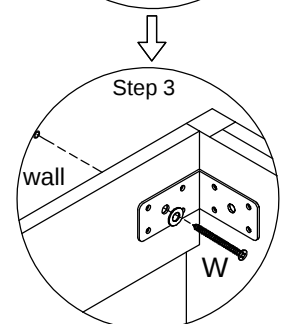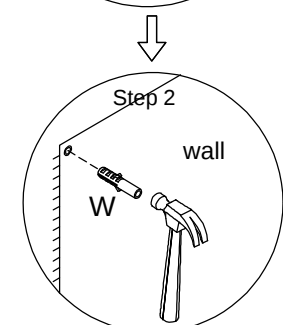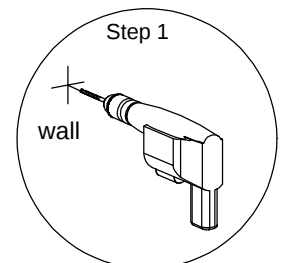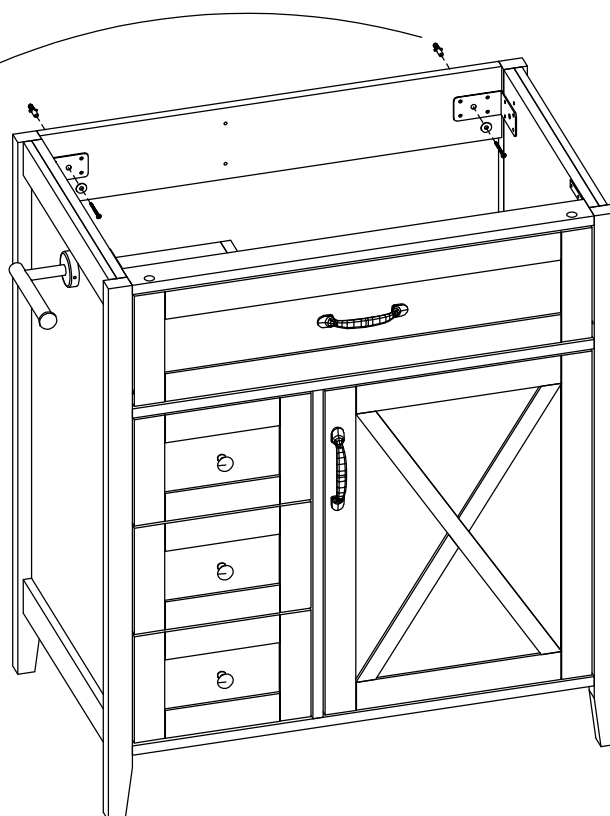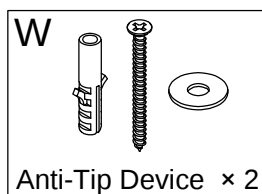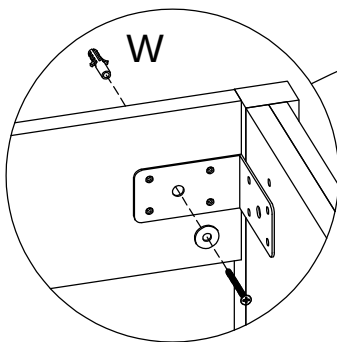

Assembly Instructions

Step 51

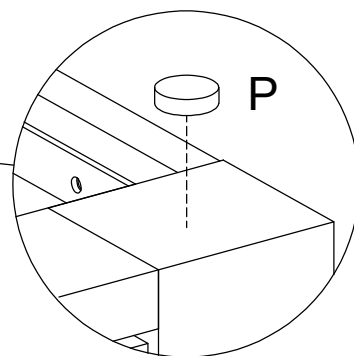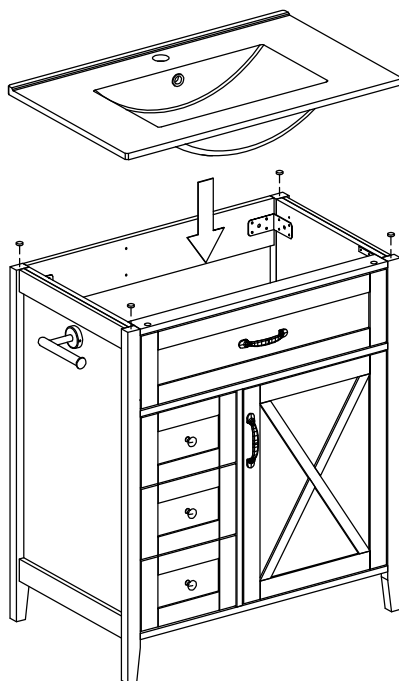

P



Ø15×4mm
EVA Pad × 4

Hinweis: Wenn die Badewanne beim Aufstellen uneben ist, stellen Sie eine runde EVA-Matte darunter, um sie auszugleichen.

Finish

