



AI-BDCCTWR

Assembly Instructions

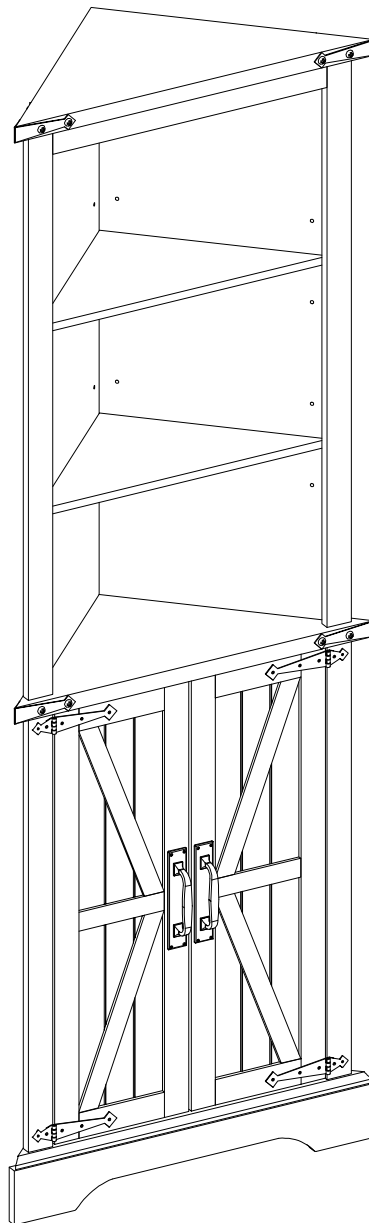


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

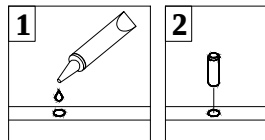


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

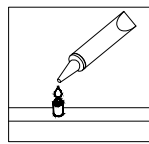


- VI. A Phillips head screwdriver is required for the assembly of this product .

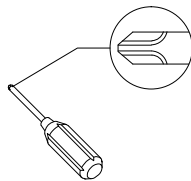








- VII. Power tools should not be used to assemble this product .

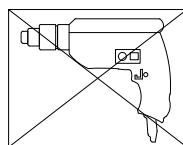


Parts List

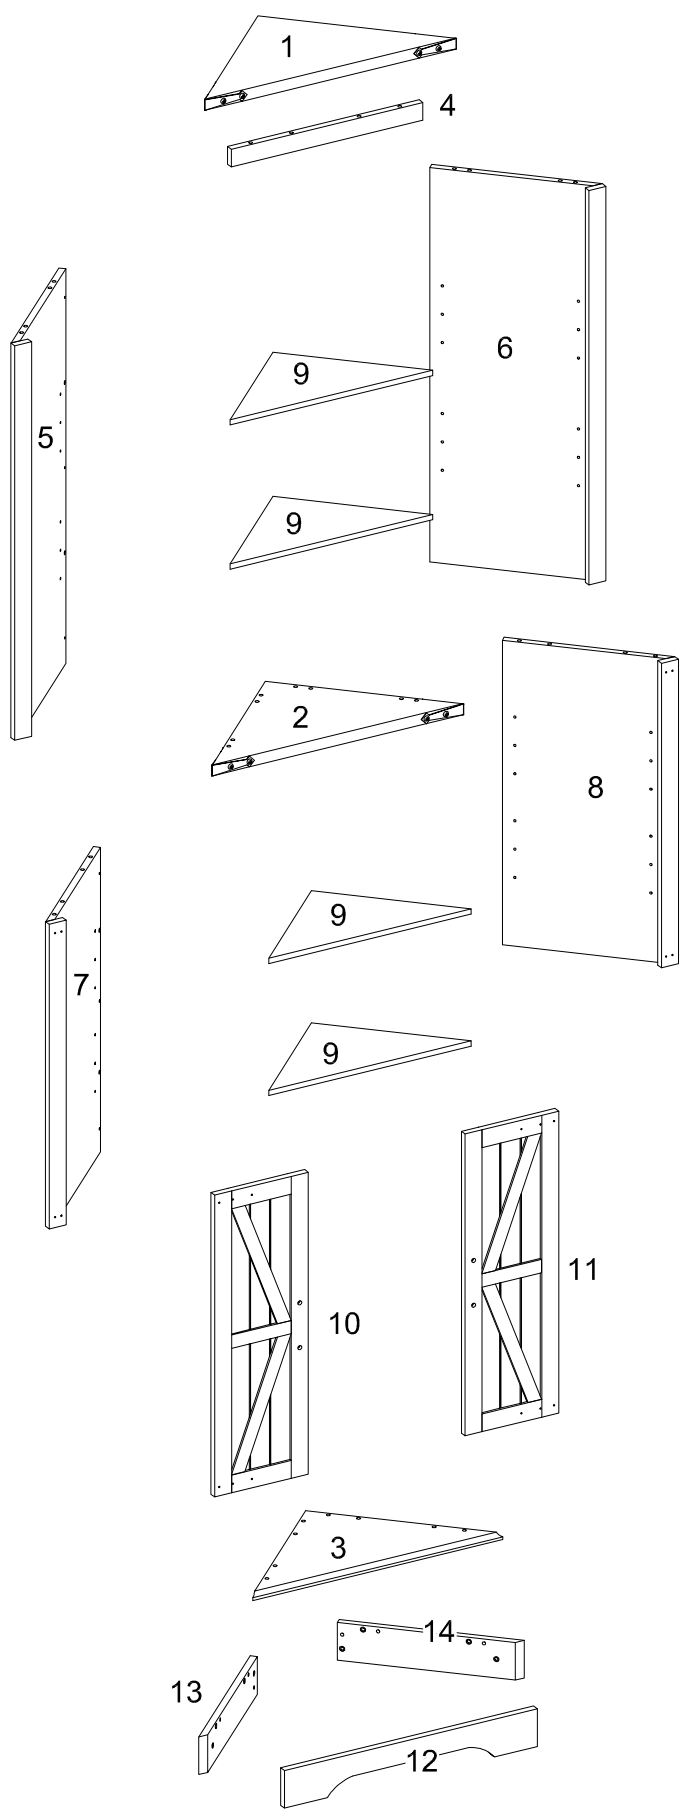


Hardware List

A		Ø8x30mm	Wooden dowel	22 pcs
B		Ø6x35mm	Cam bolt	16 pcs
C		Ø15x11mm	Cam lock	16 pcs
D		Ø30mm	Sticker	16 pcs
E		Ø8x5x16mm	Shelf support pin	16 pcs
F			Glue tube	1 pcs
G		Ø6x50mm	Screw	8 pcs
H		M 4	Hexagon socket key	1 pcs
J		Ø4x12mm	Handle bolt	4 pcs
K			Handle	2 pcs
L			Connecting iron sheet	2 pcs
M			Magnetic catch	1 pcs
N		Ø3x15mm	Screw	22 pcs
O			Metal piece	2 pcs
P			Hinge	4 pcs
Q		Ø3x12mm	Screw	2 pcs
R			Connector	7 pcs
S		Ø6x12mm	Bolt	18 pcs
T			Tipping Restraint Hardware	2 set


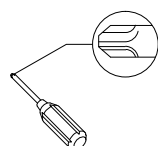


Philips head screwdriver required for assembly
(not included)



Step 1

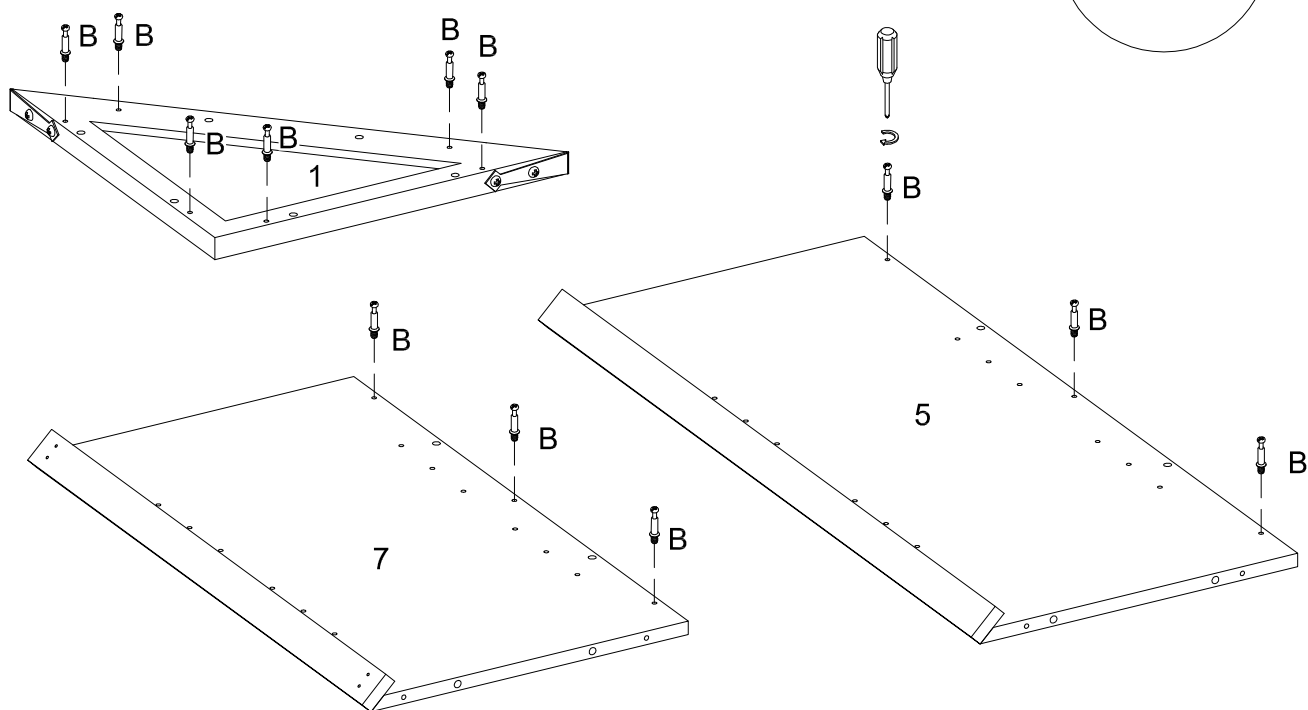




Step 2

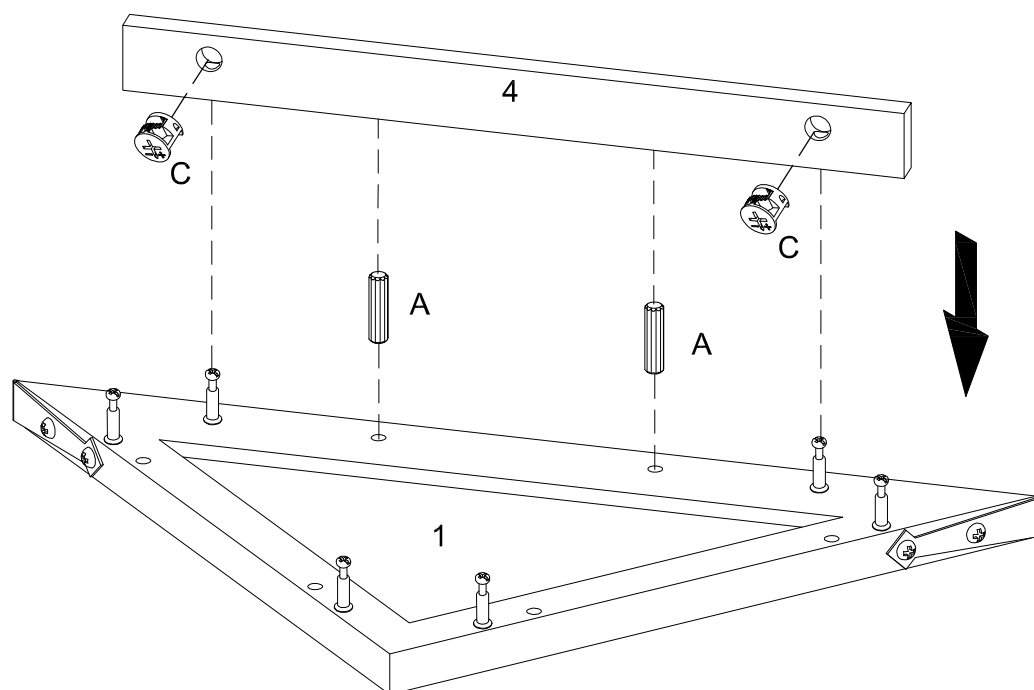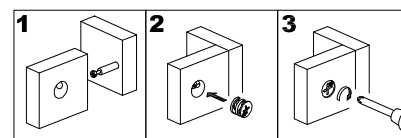


Step 3

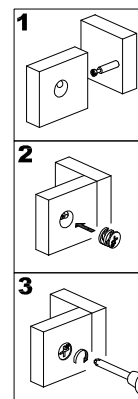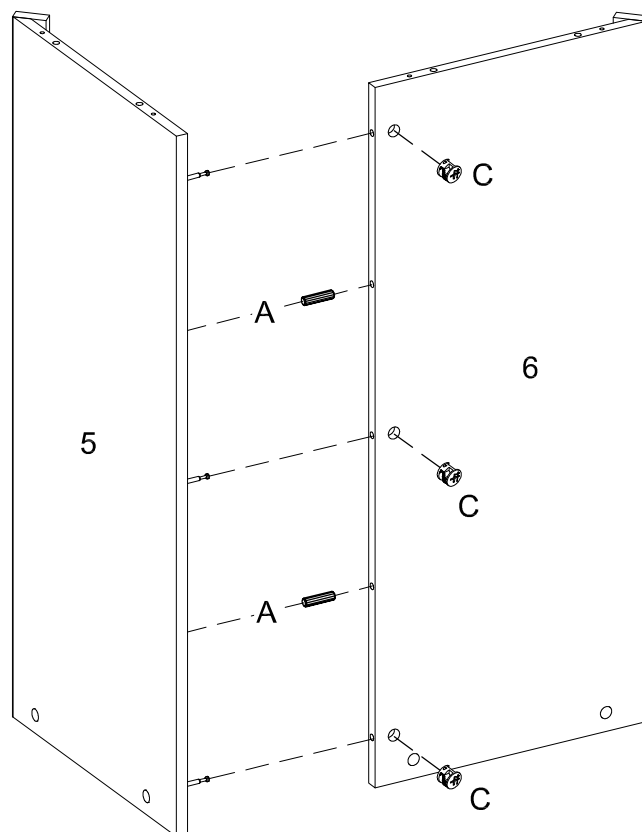


Step 4

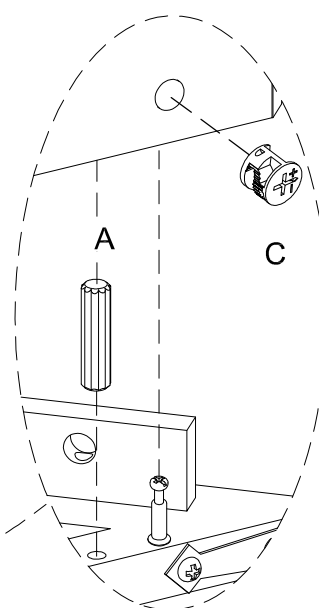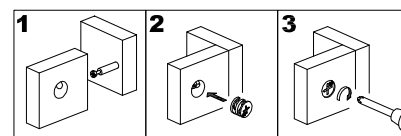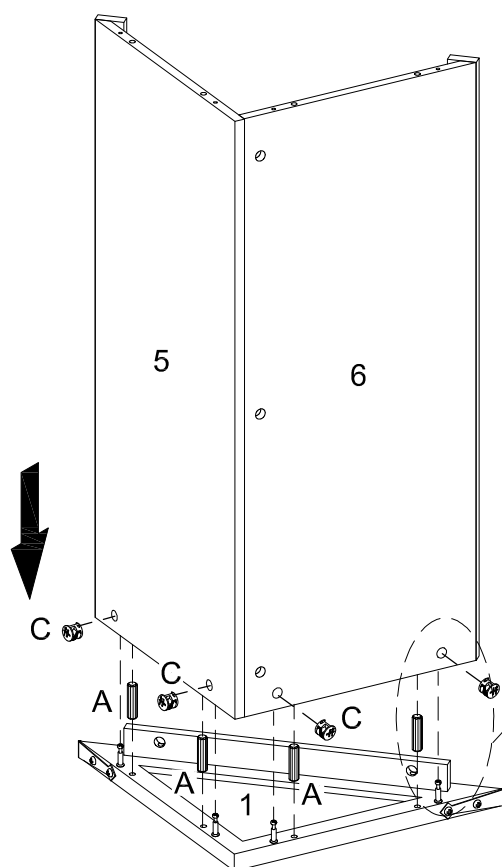



Step 5

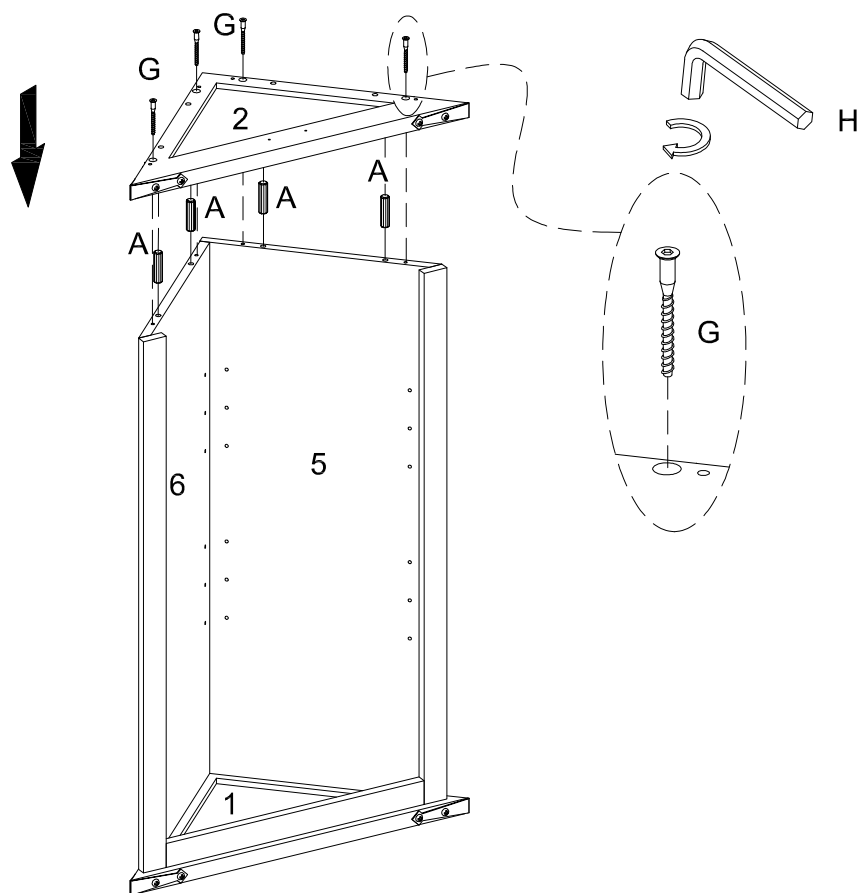


Step 6

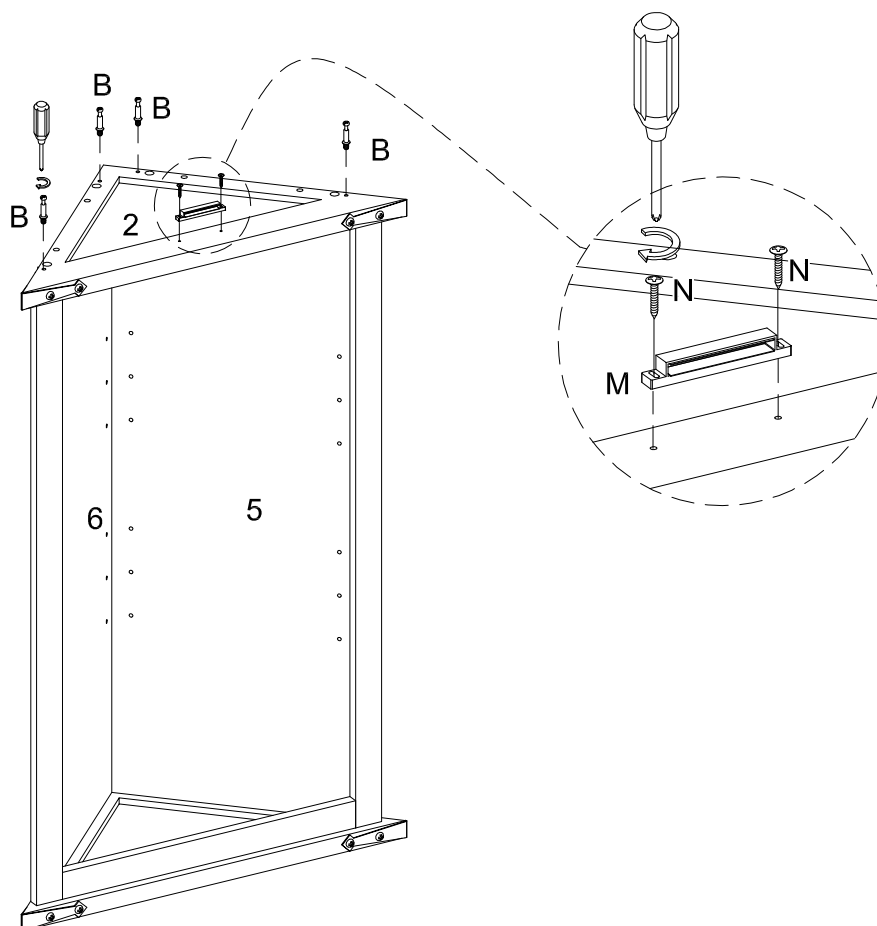


Step 7

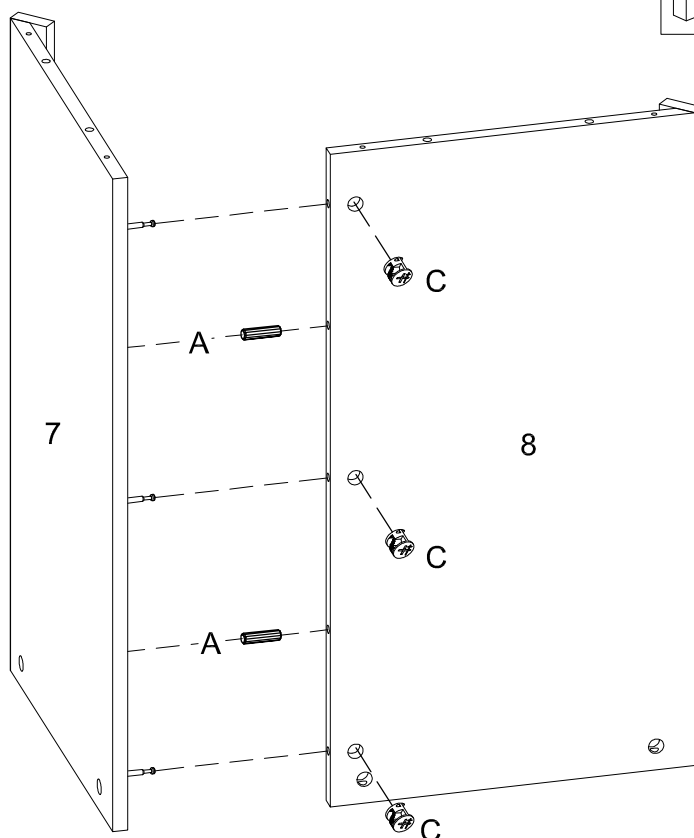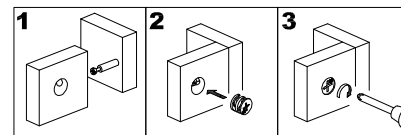


Step 8

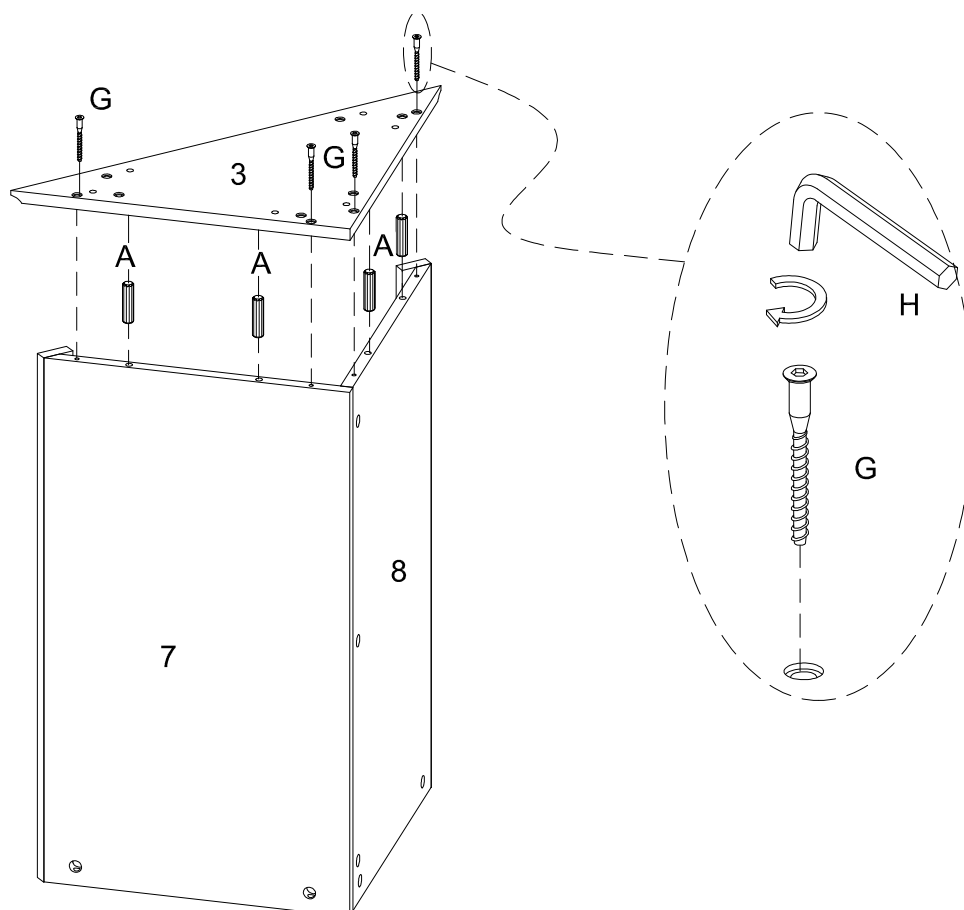


Step 9

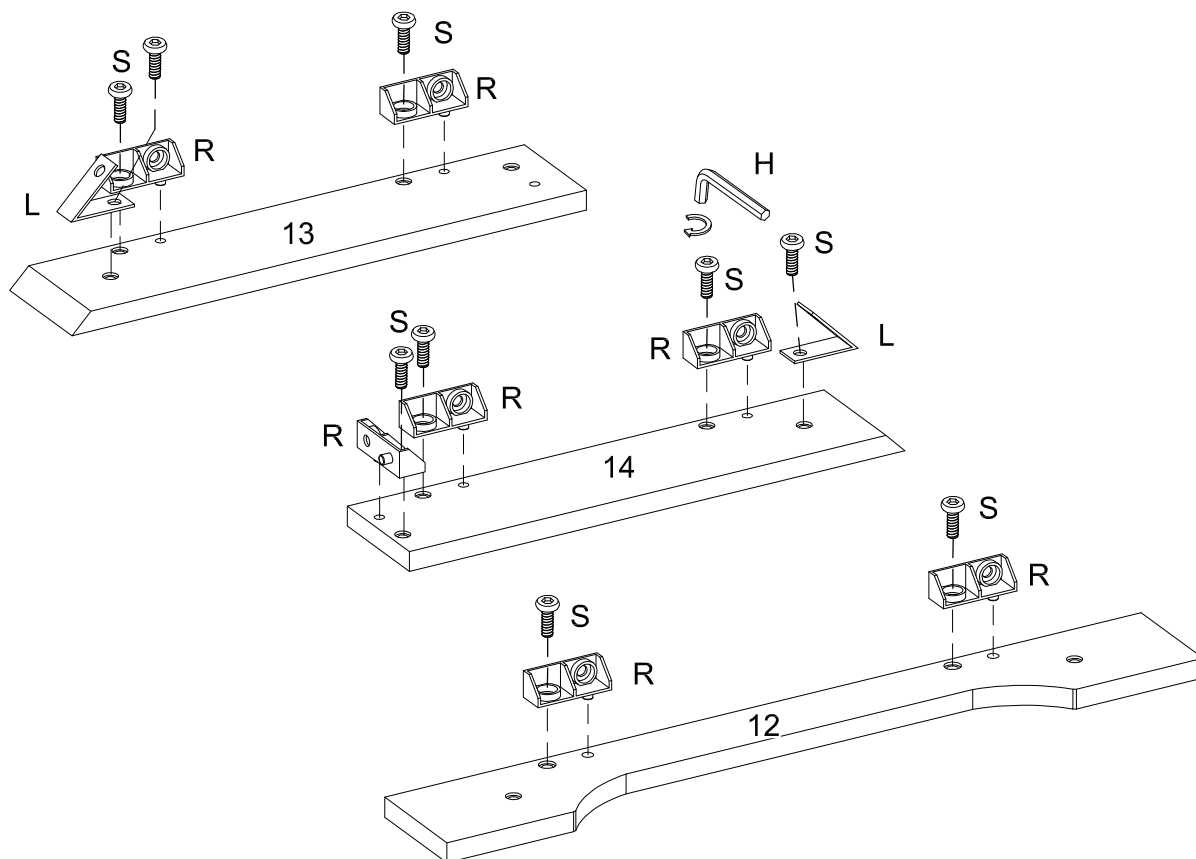


Step 10

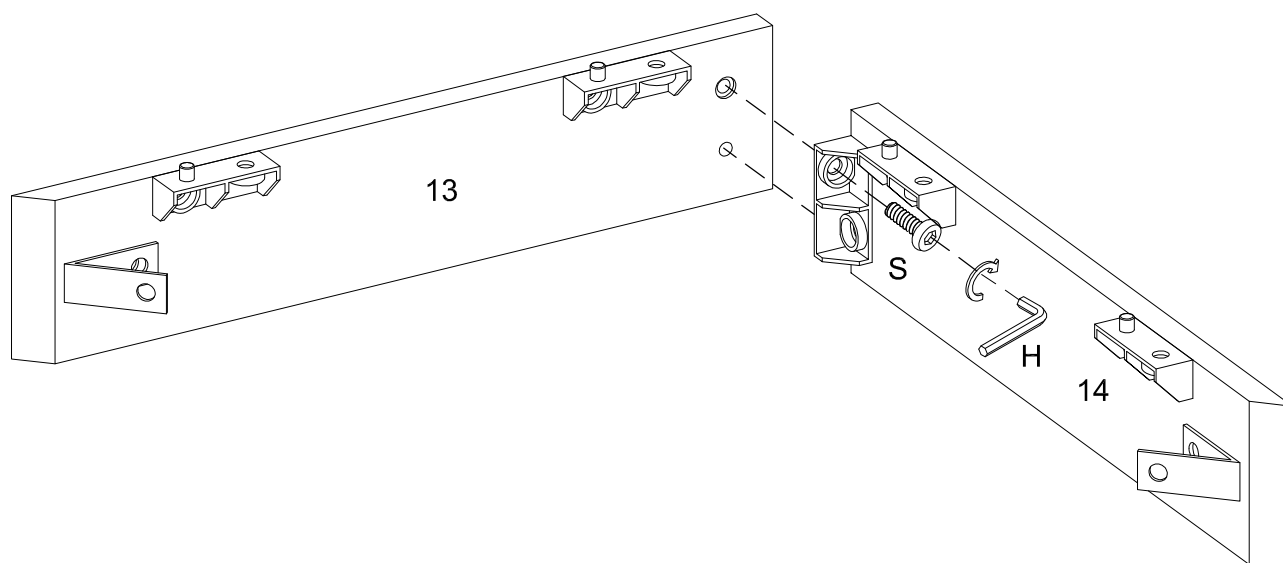



Step 11

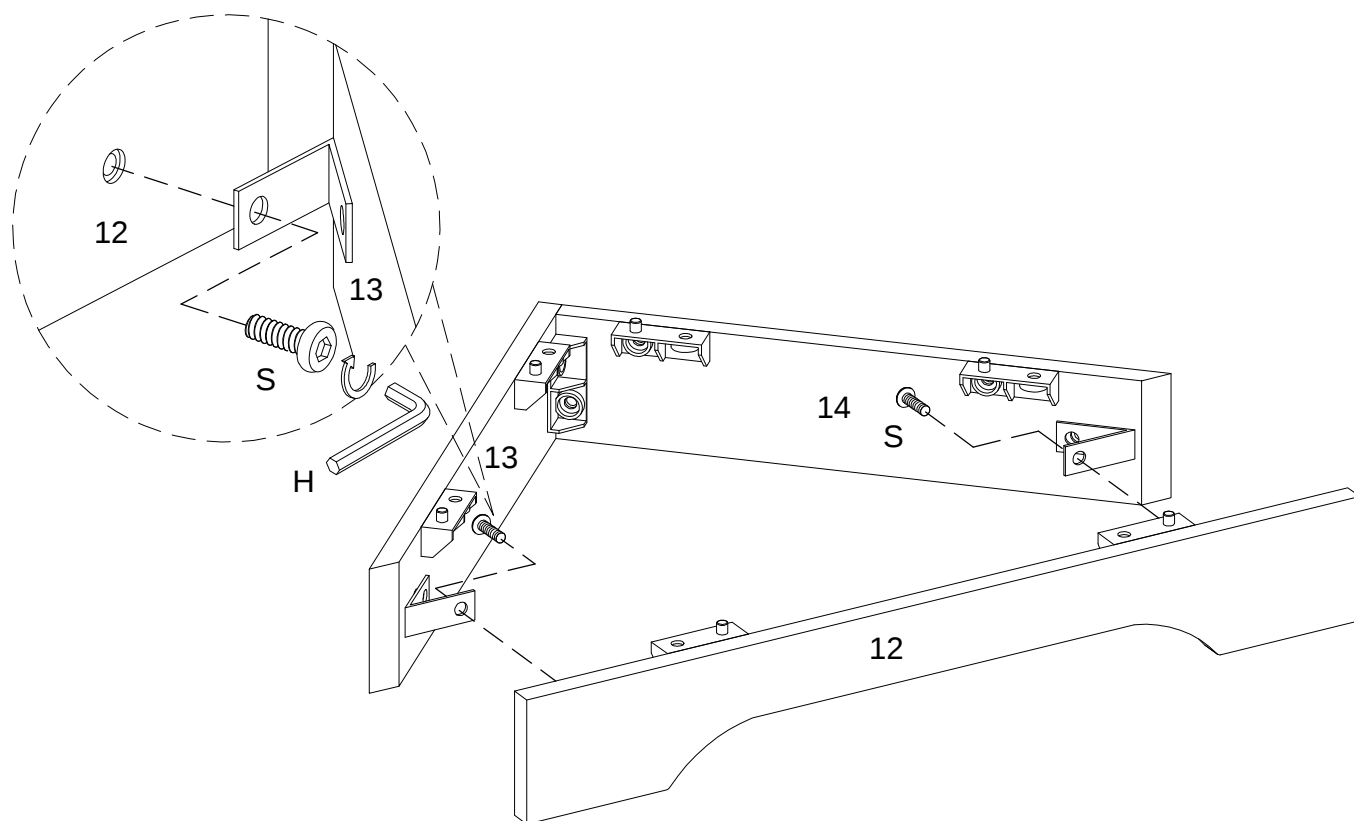


Step 12

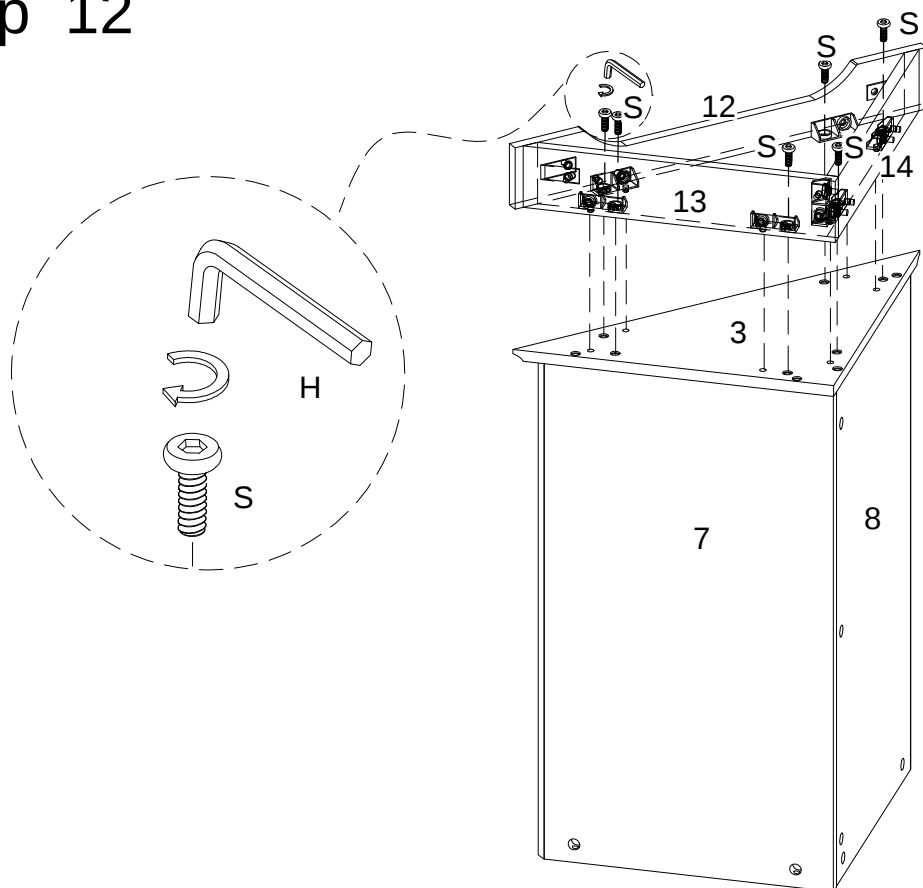


Step 13

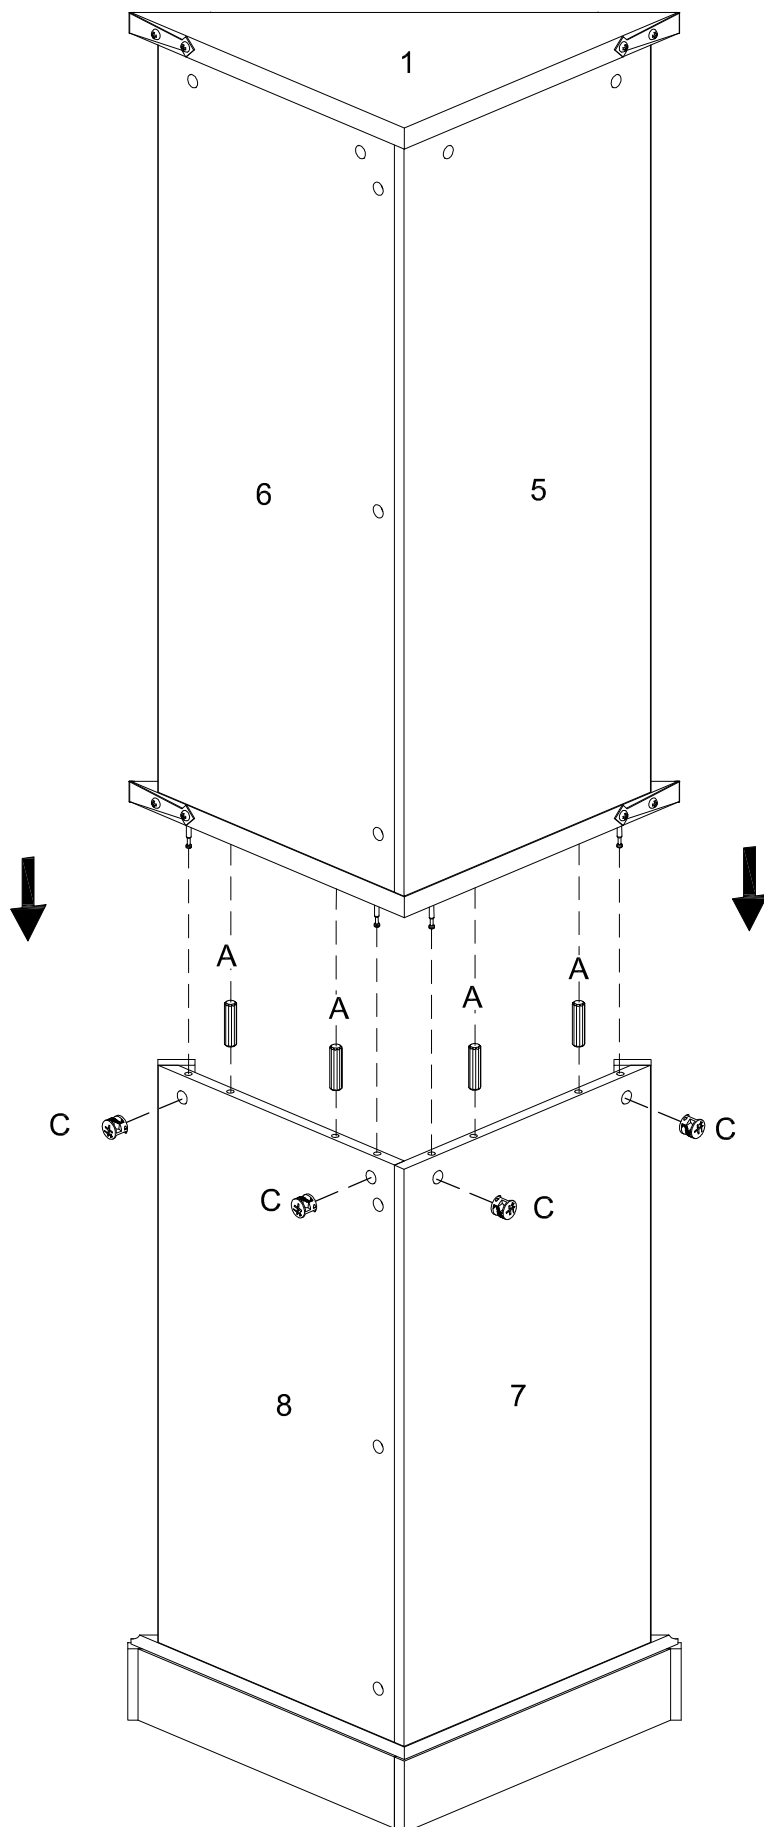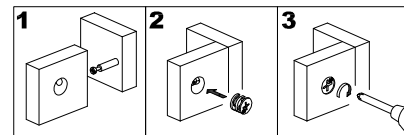


Step 14

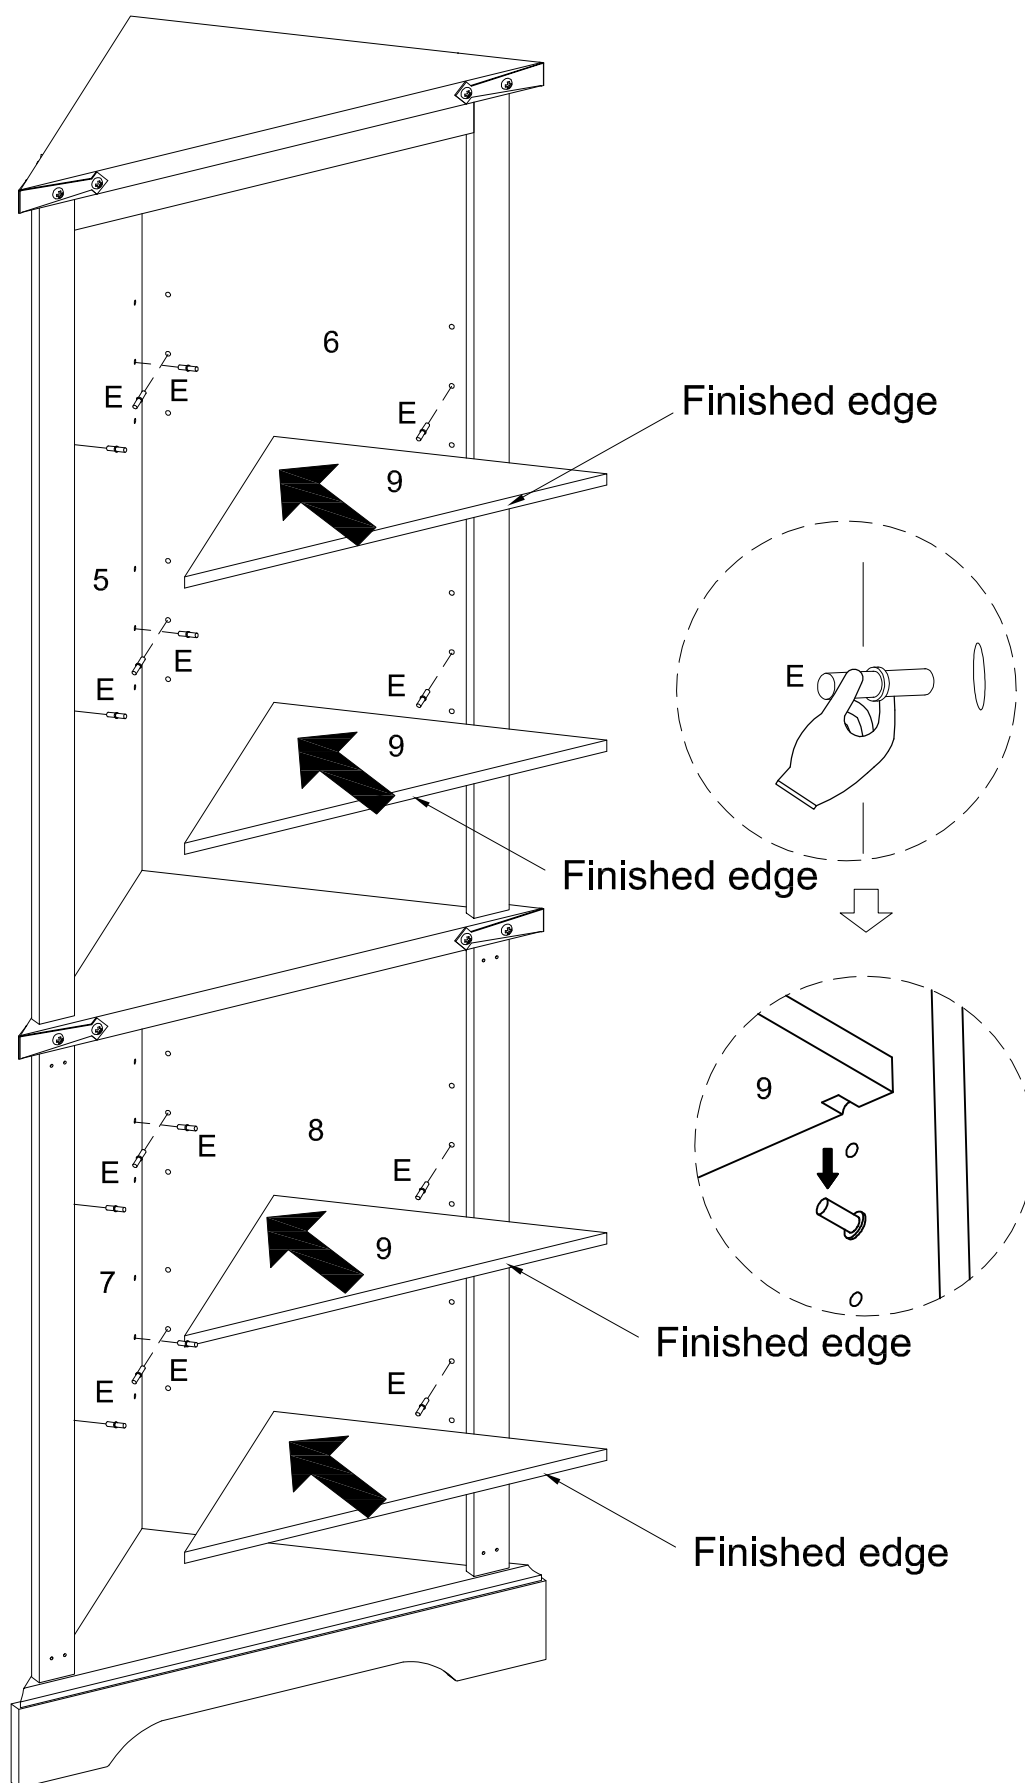


Step 15

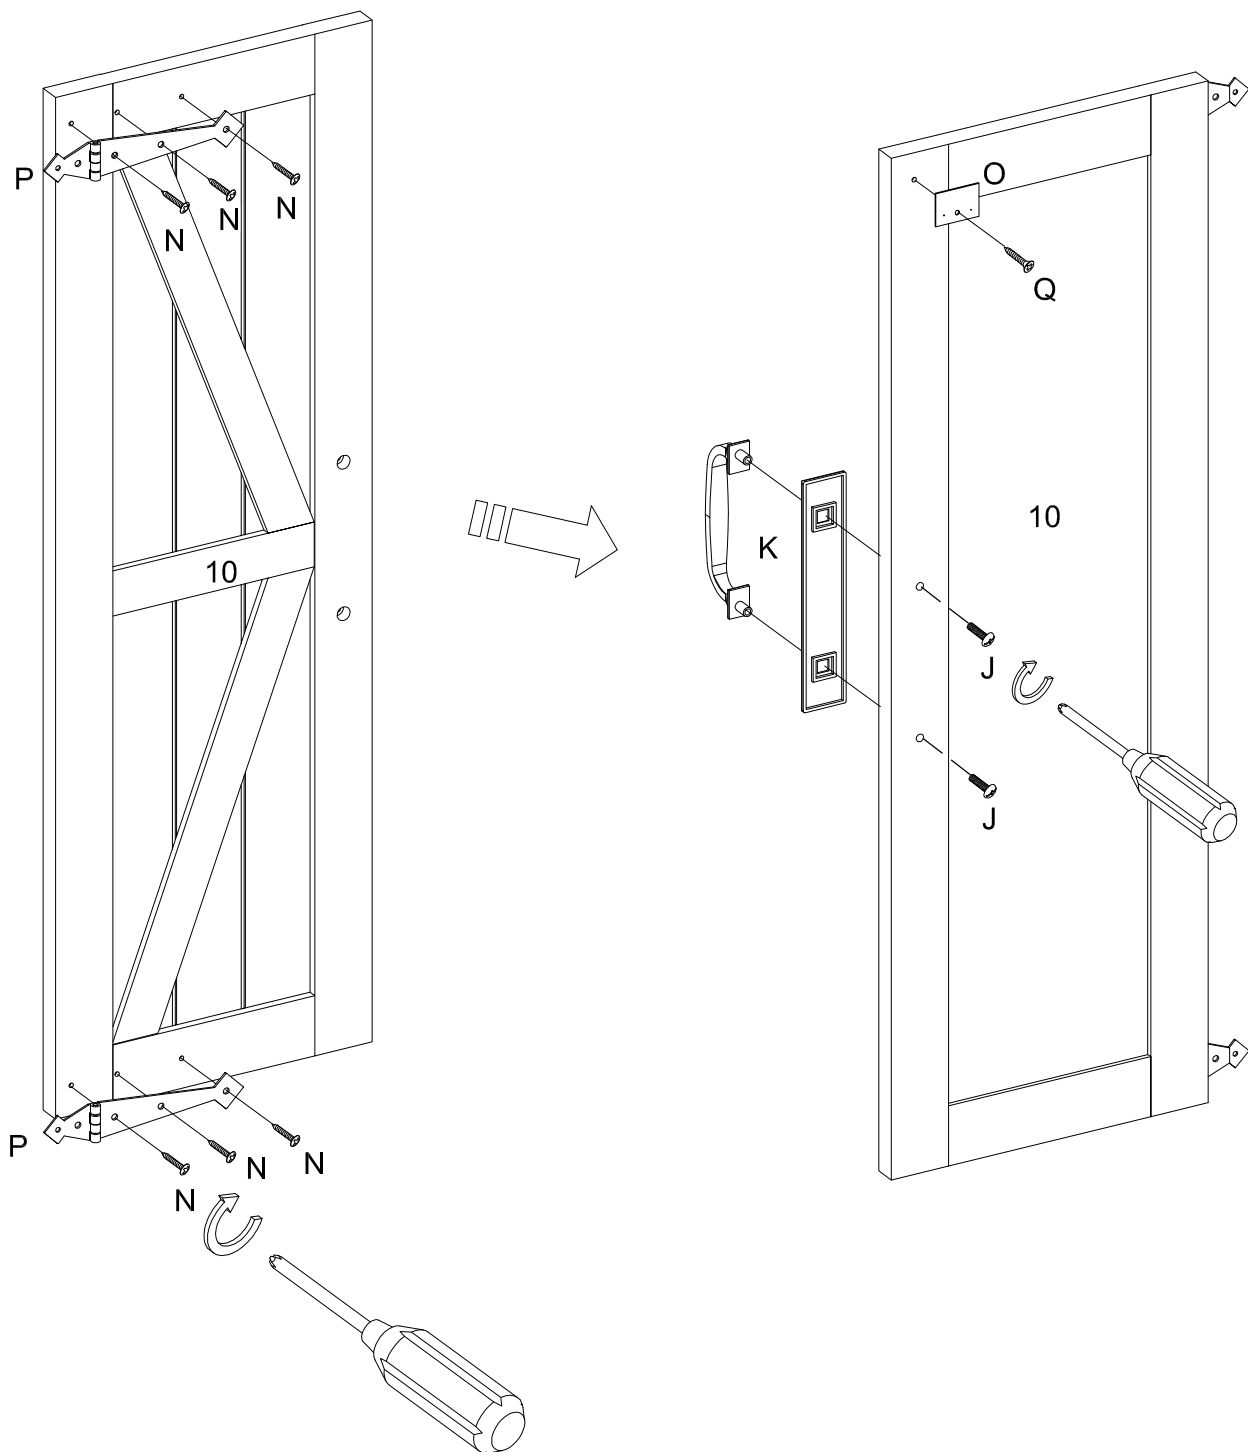


Step 16

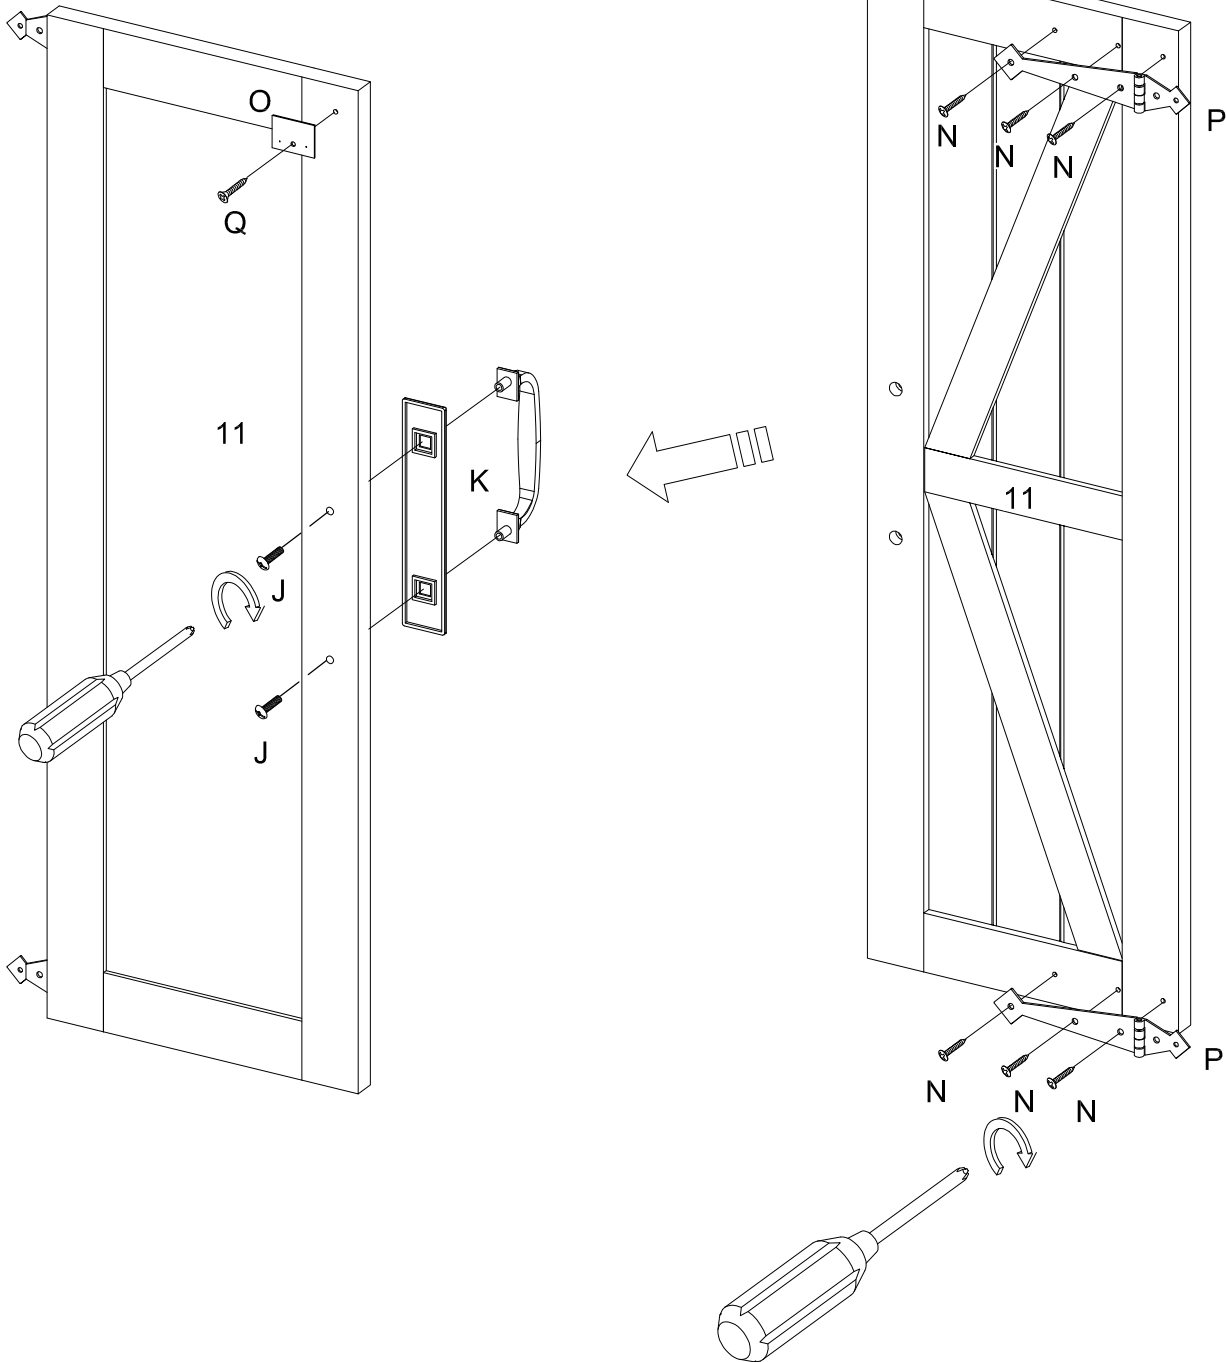

Step 17




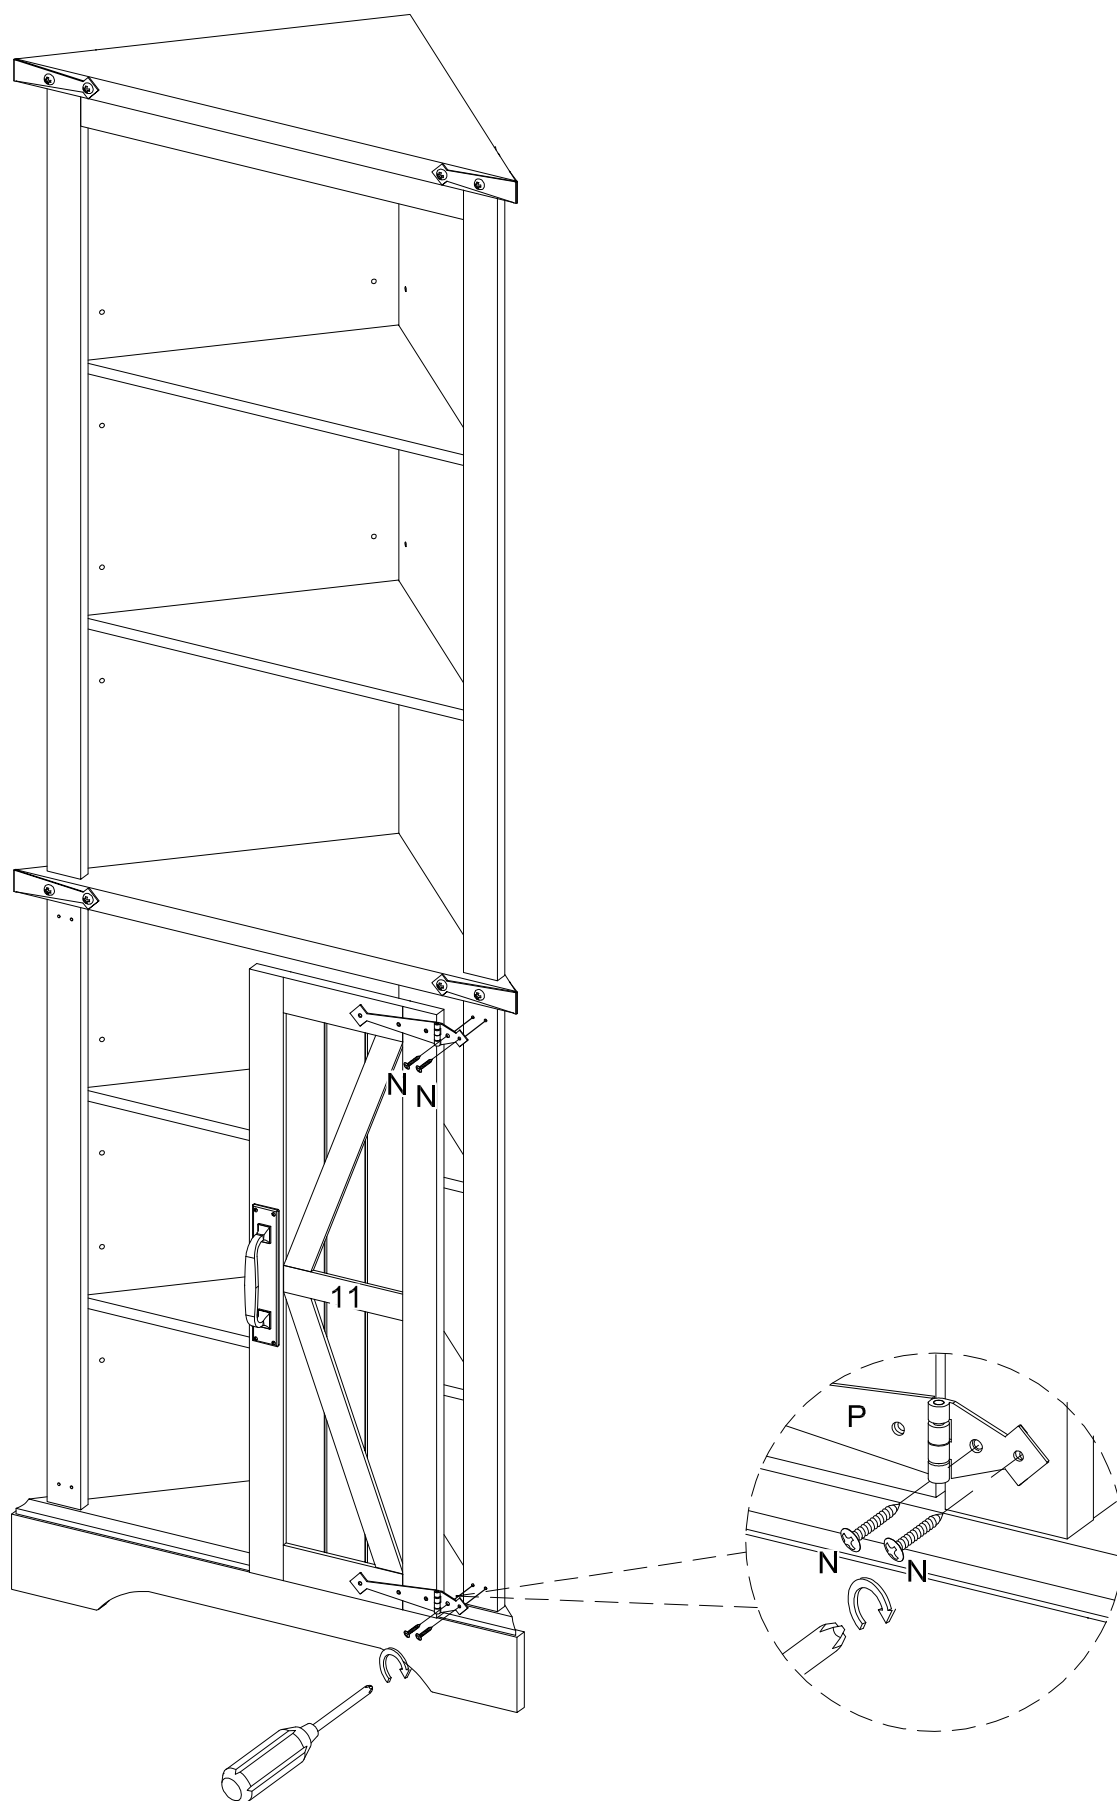


Step 18

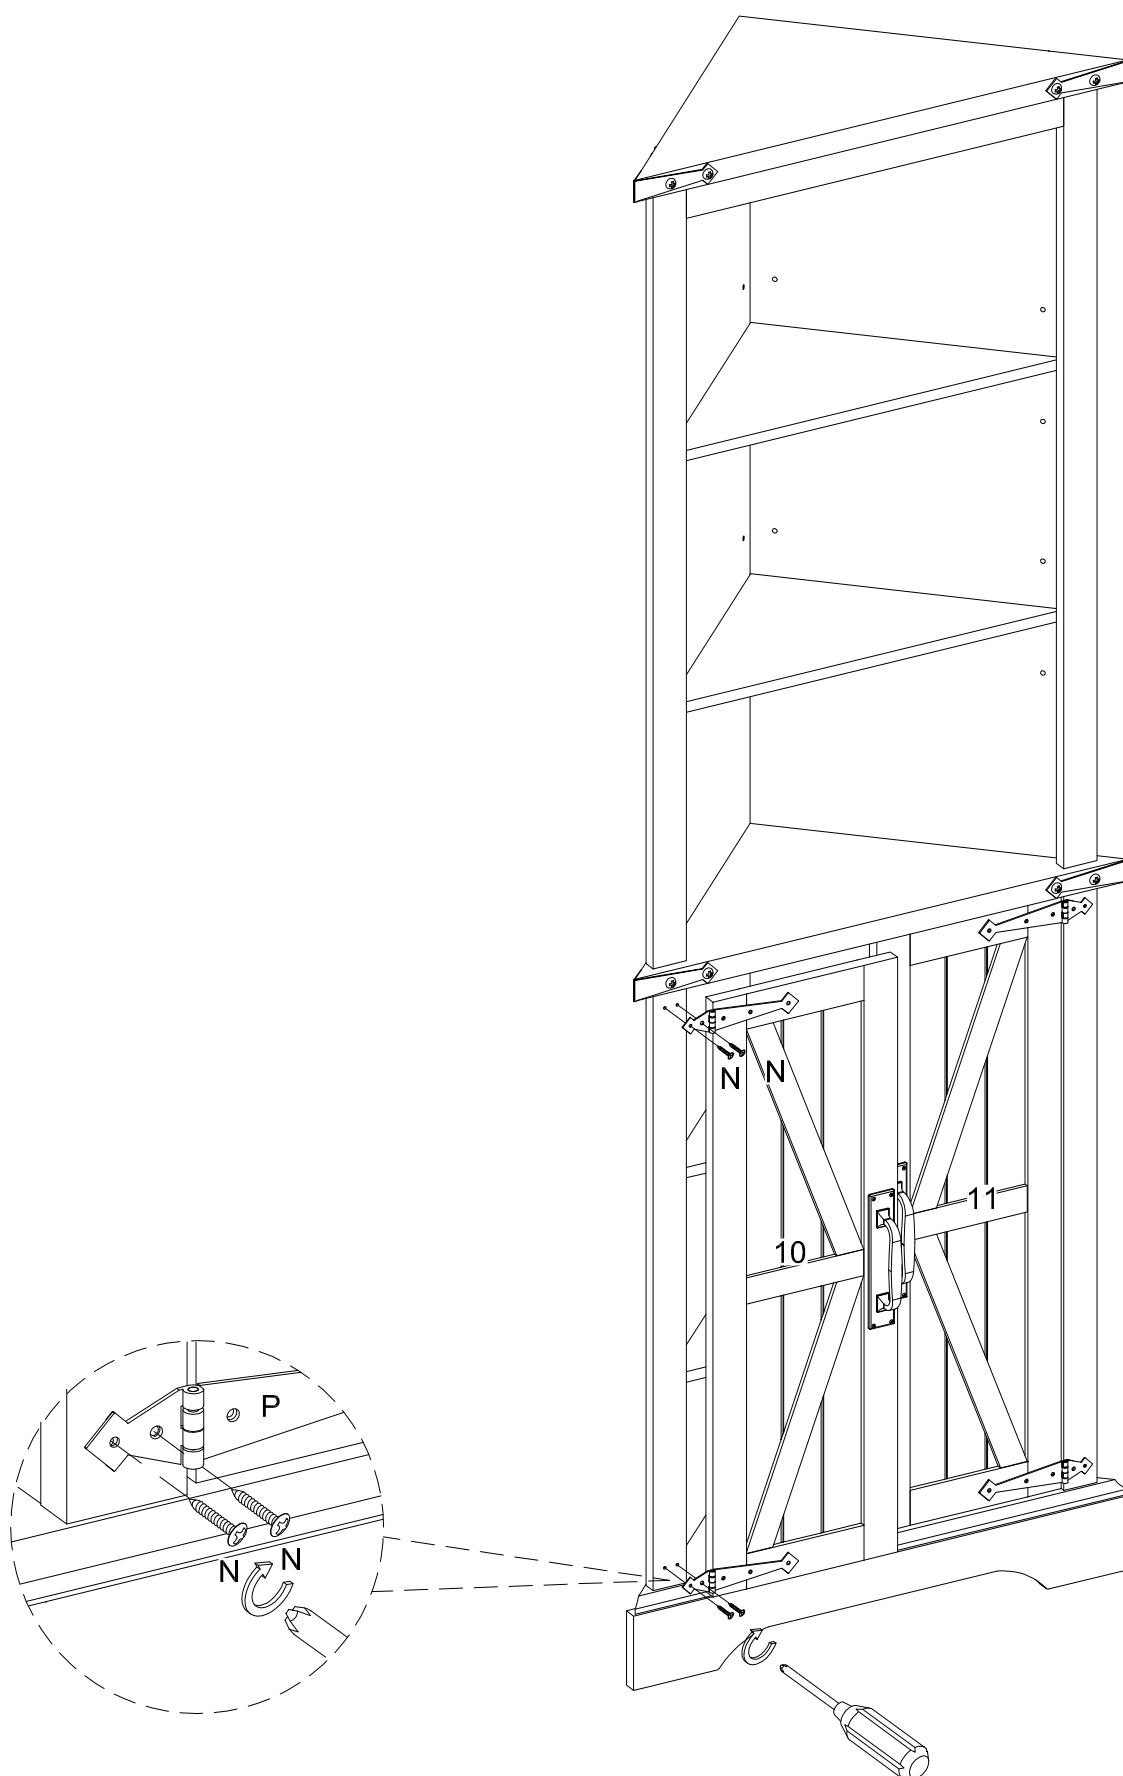

Step 19

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

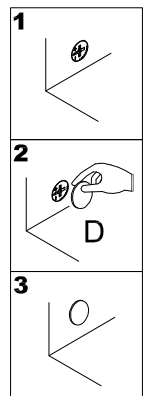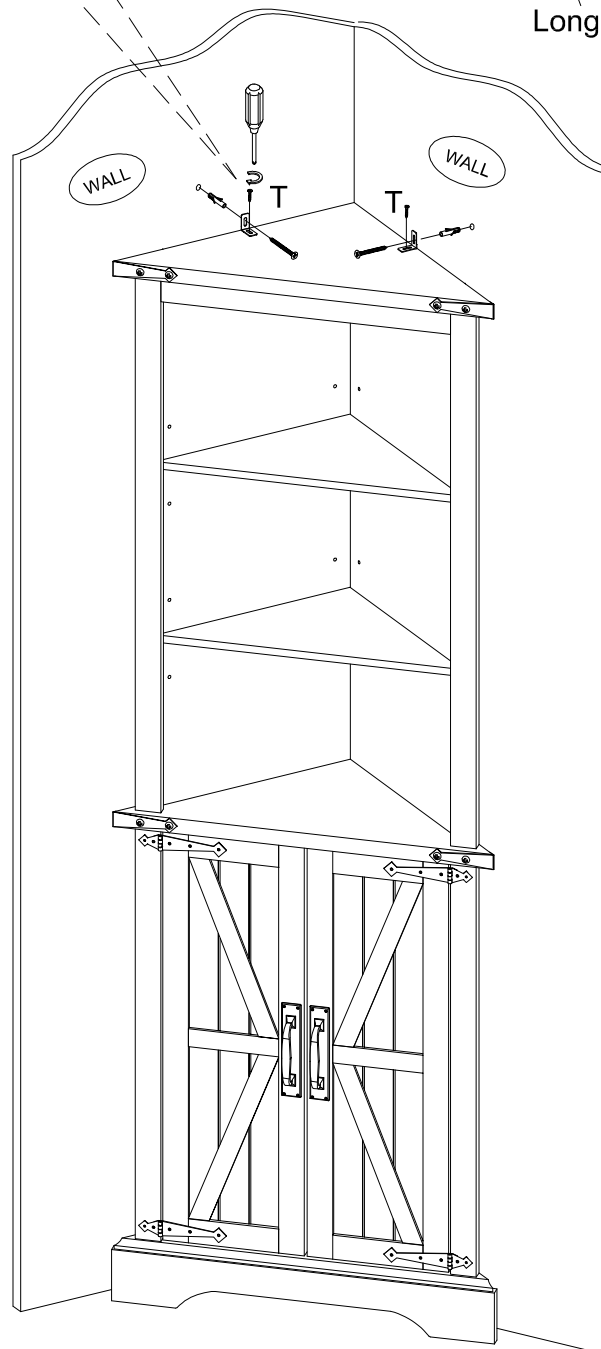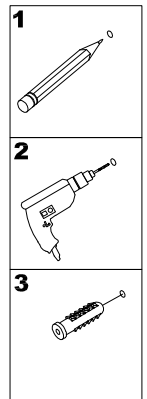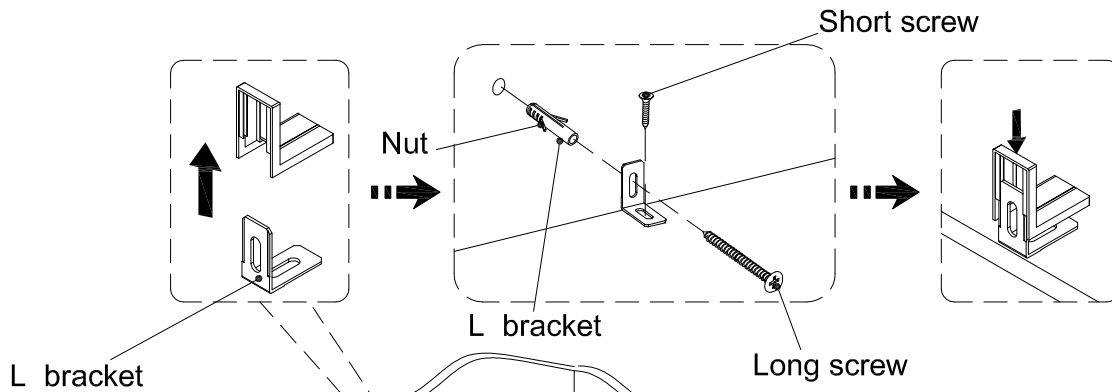

Final Assembly