

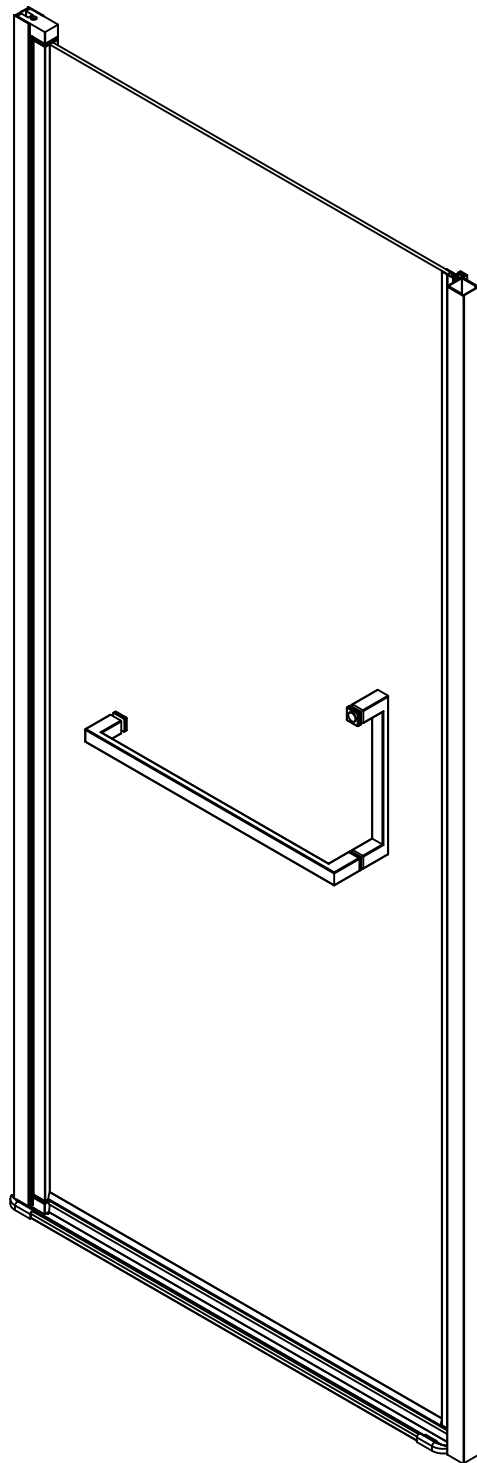
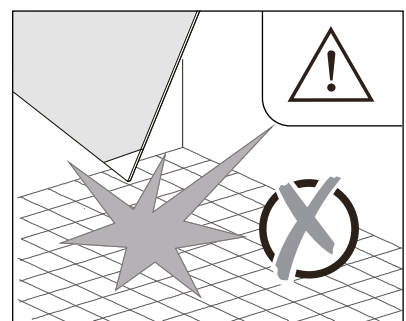
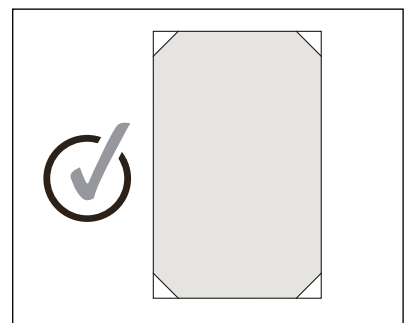
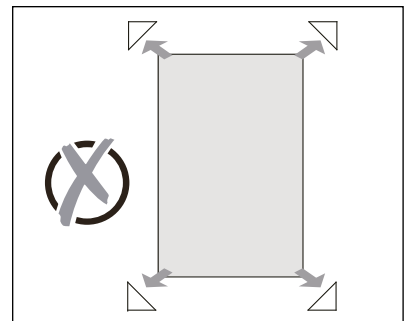
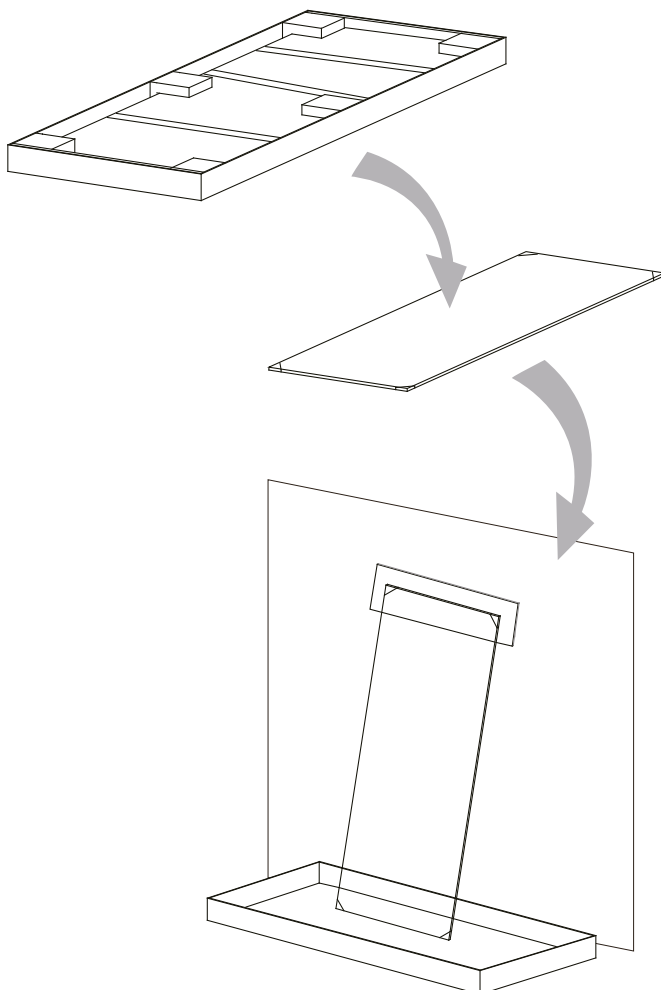
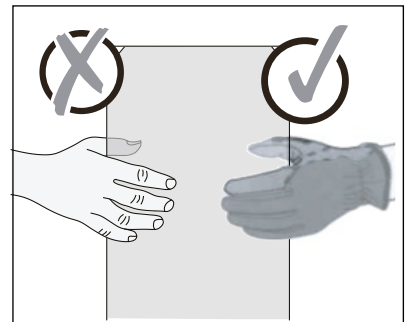
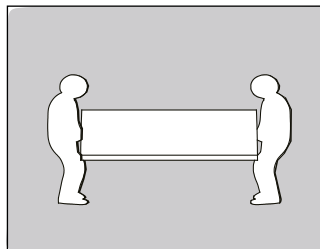
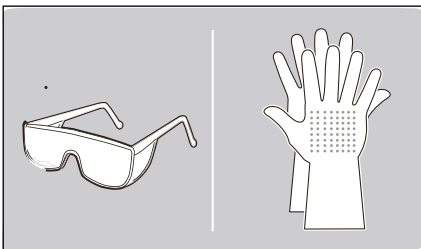
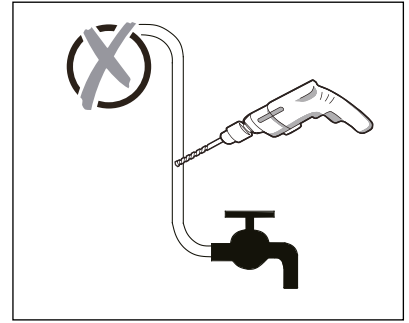


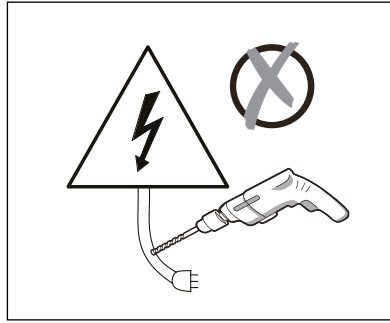



W3887P394450 28-29.2*72inch

W3887P395448 32-33.2*72inch

W3887P395449 34-35.2*72inch

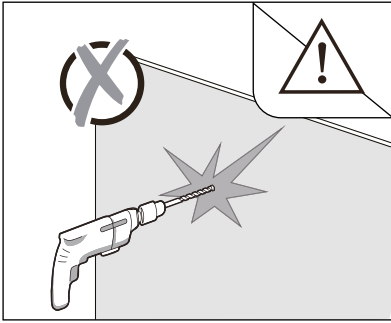


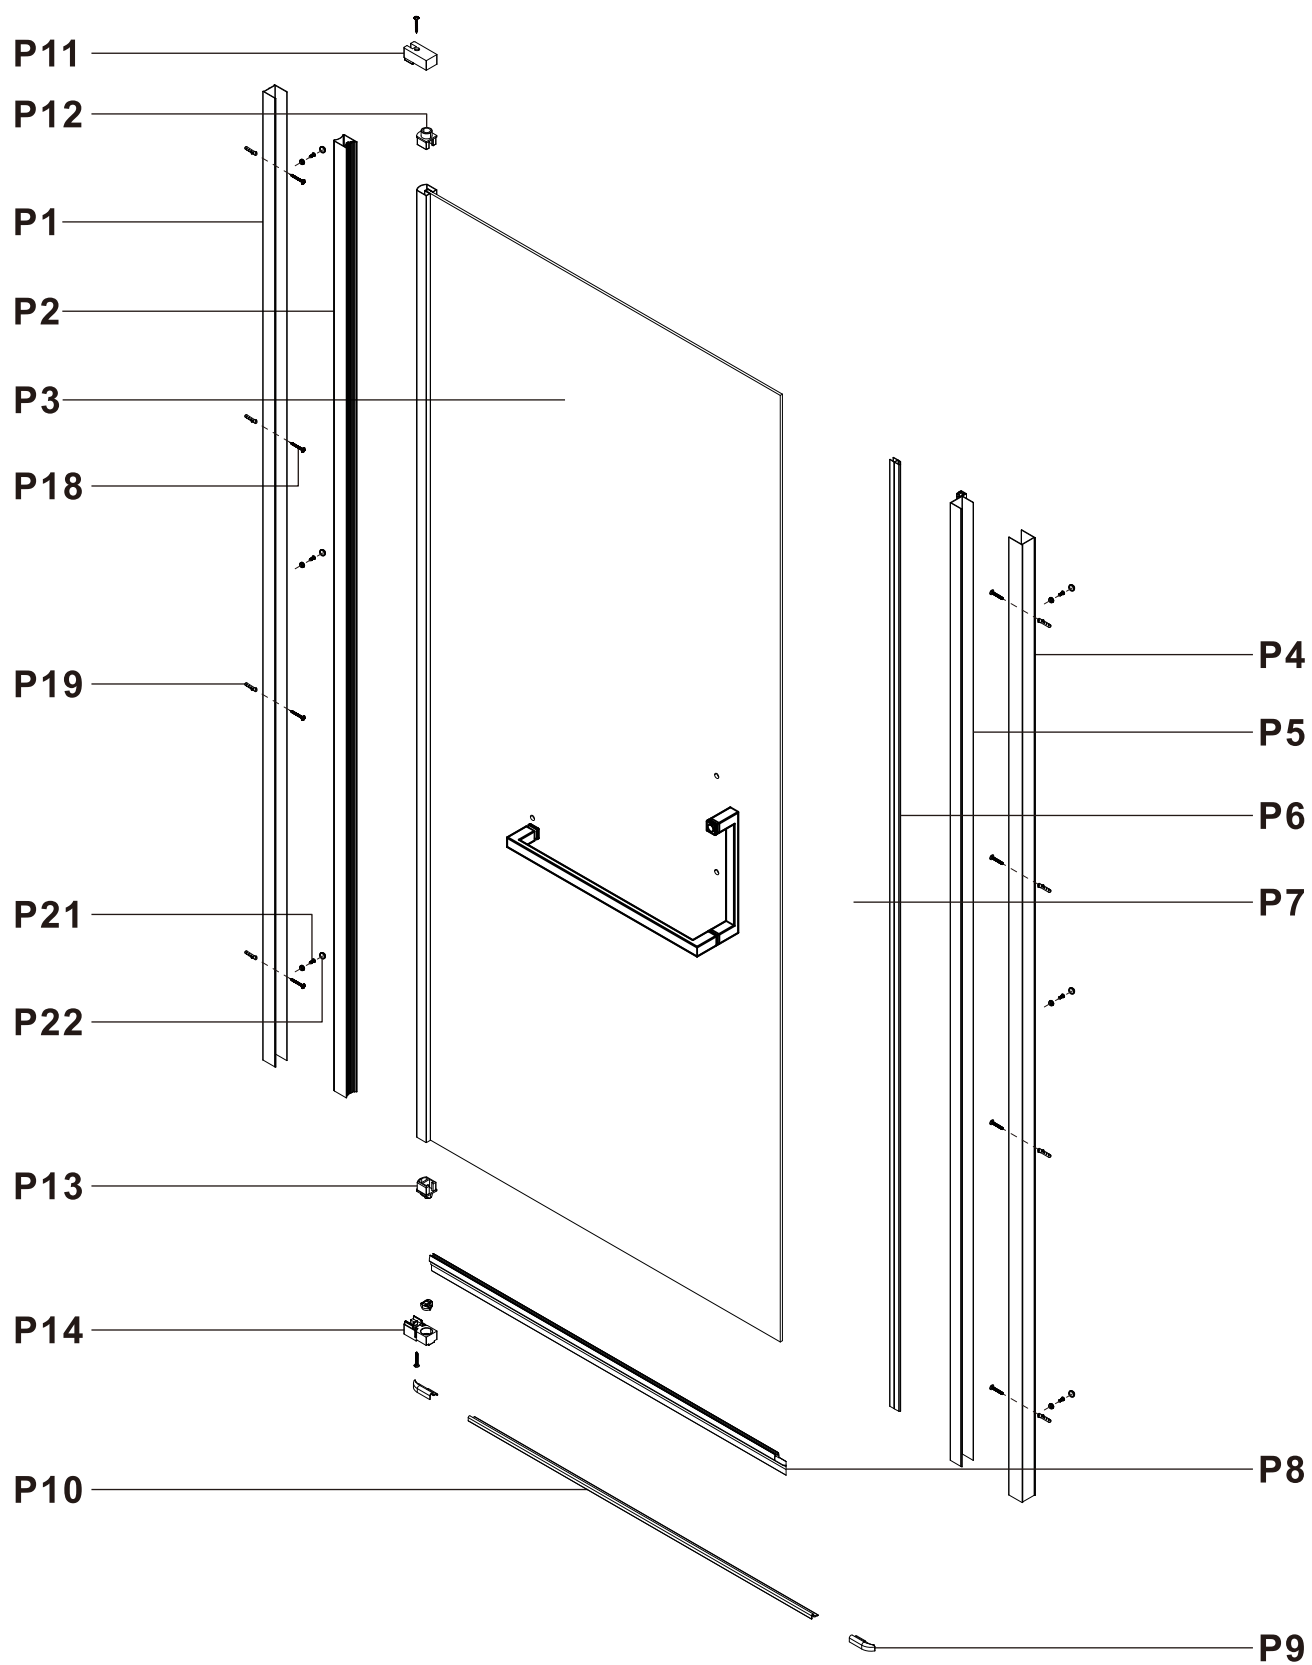

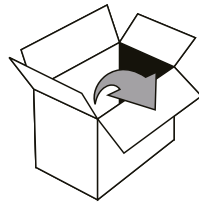








P1 72.05inch X1	P2 X1	P3 X1	P4 71.06inch X1
P5 X1	P6 X1	P7 X1	P8 X1
P9 X1	P10 X1	P11 X1	P12 X1
P13 X1	P14 X1	P18 ST#8x1.2inch X10	P19 X8
P21 ST#8x0.4inch X6	P22 X6		

 $\varnothing$ 1/4 inch	
 $\oplus$ PH2	
 $\varnothing$ 1/8 inch	

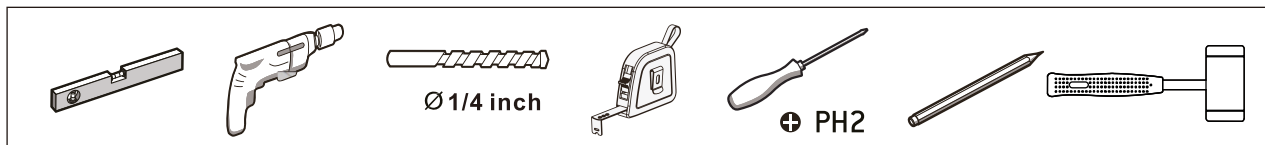

5




1

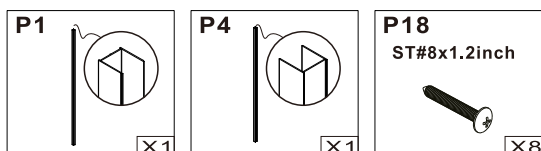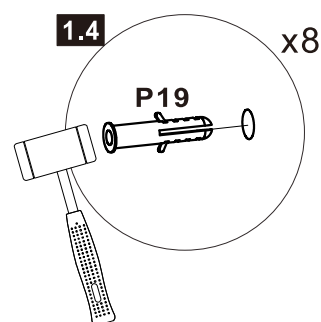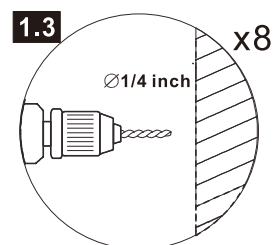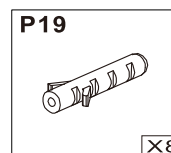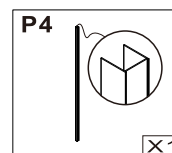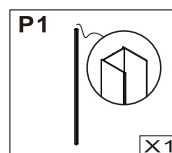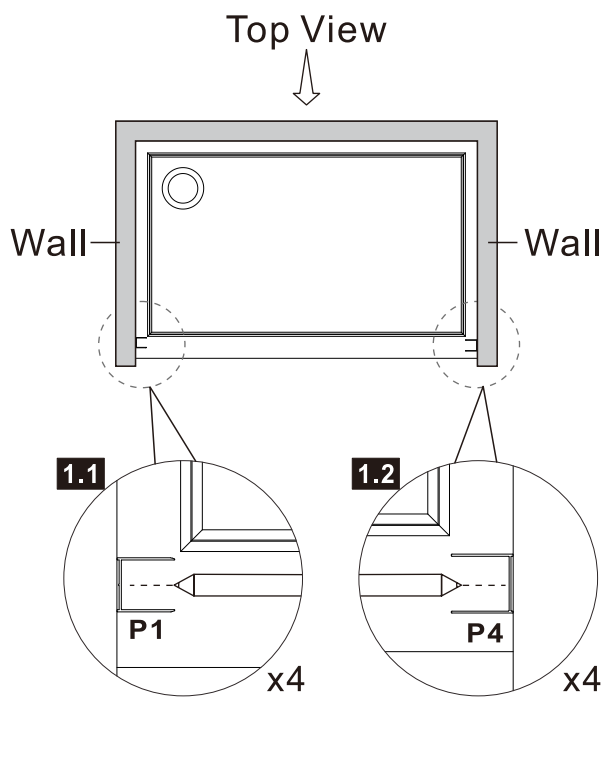


2






EN: Position the wall profile against the wall and use a level to ensure it is horizontal. Mark the hole positions, drill holes, insert wall plugs, and tighten the screws.

ES: Coloque el perfil de pared contra la pared y utilice un nivel para asegurarse de que esté horizontal. Marque los orificios, perfora, inserte los tacos de expansión y apriete los tornillos.

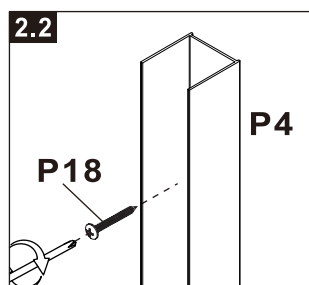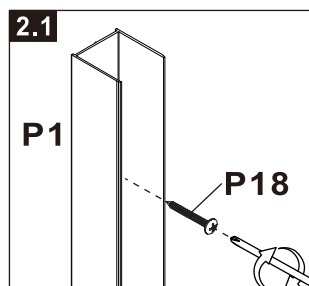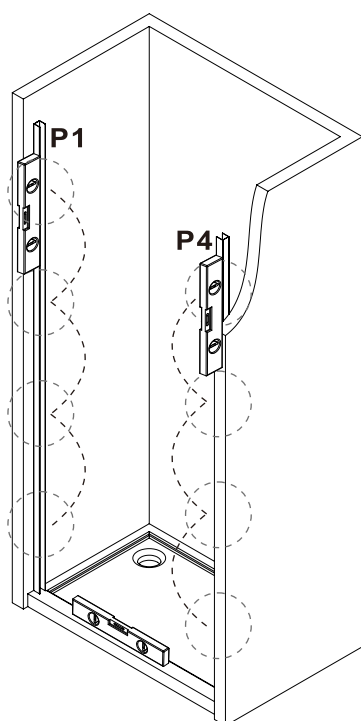





⊕ PH2

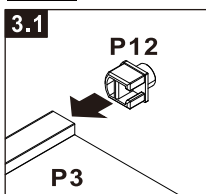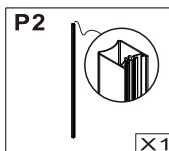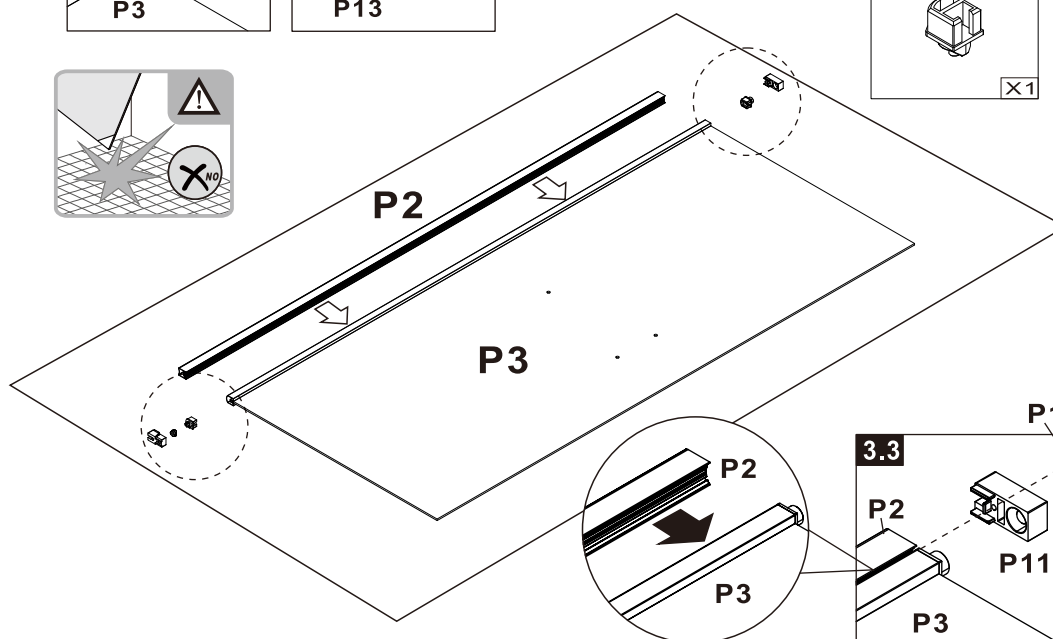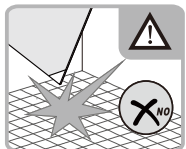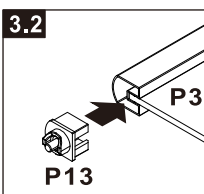3**3.1****3.2**


X1

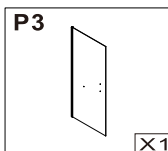


X1

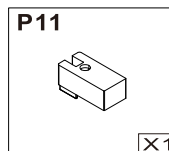


X1

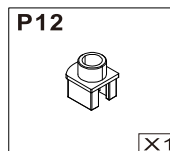

X1

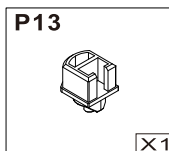

X1

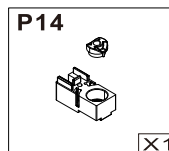



X1




X2

EN : Attach the pivot profile to the glass. Insert the upper and lower pivot pins into the top and bottom, then insert them into the pivot brackets and secure with screws.


ES: Coloque el perfil de pivote en el vidrio. Inserte los ejes de pivote superior e inferior, luego colóquelos en los soportes de pivote y fíjelos con tornillos.

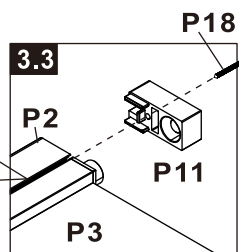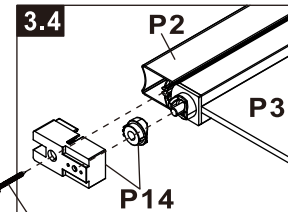**3.3****3.4**





P18

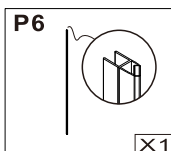

X1

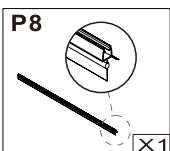

X1

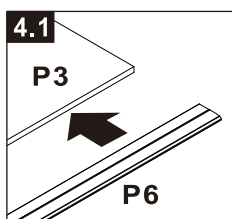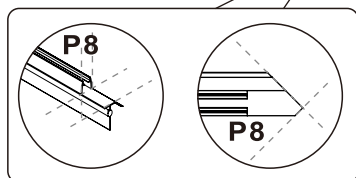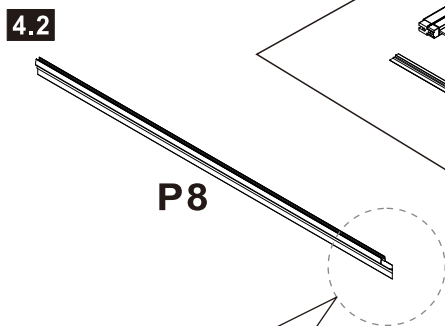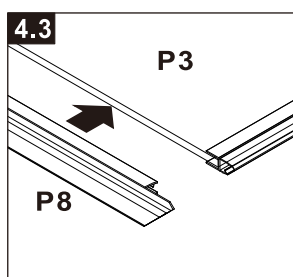4**4.1****4.2****4.3**

EN: Press the magnetic strip onto the side edge of the door glass panel, then press the bottom water barrier strip onto the bottom edge of the glass panel.

ES: Presione la tira magnética en el borde lateral del vidrio de la puerta y luego presione la tira inferior impermeable en el borde inferior del vidrio.







Ø 1/8 inch



5

EN: Insert the glass panel into the wall profiles

ES: Inserte el panel de vidrio en los perfiles de pared.

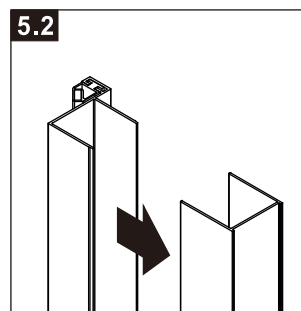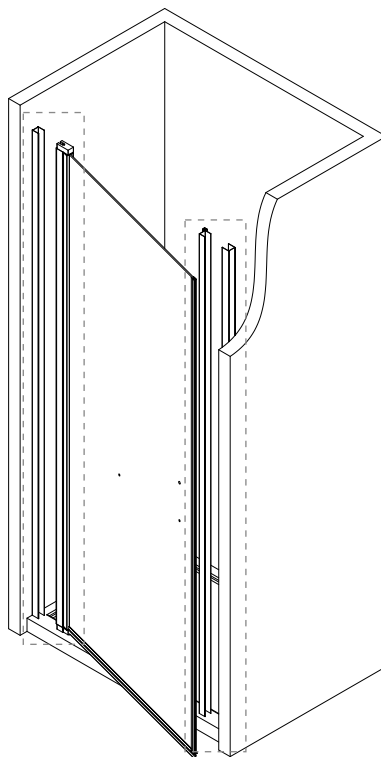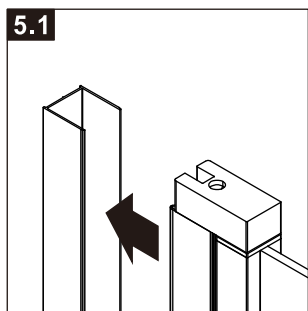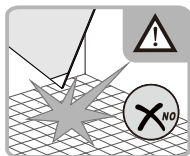

P21
ST#8x0.4inch



X6

P22











X6

6

EN: Drill 3 evenly spaced holes on each side, tighten with screws, then install the screw caps.

ES: Perfore 3 orificios distribuidos uniformemente en cada lado, apriete con tornillos y coloque las tapas de los tornillos.

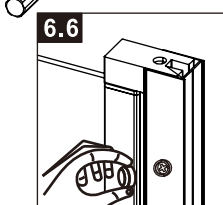
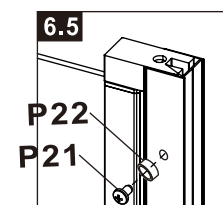
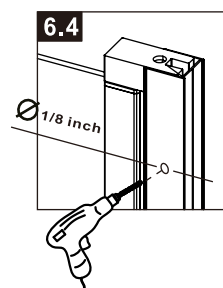
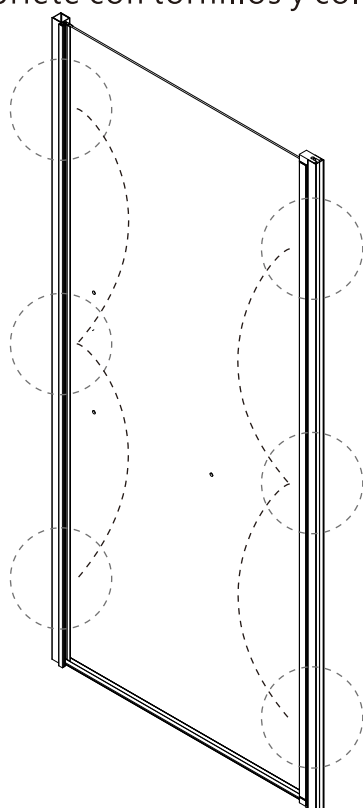
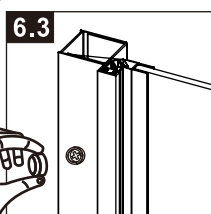
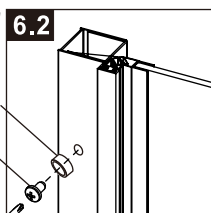
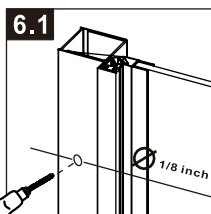






7

EN: Apply silicone sealant to the bottom of the lower water barrier strip and plastic piece, then fix them onto the floor.

ES: Aplique silicona en la parte inferior de la tira impermeable inferior y de la pieza plástica, luego fíjelas al suelo.

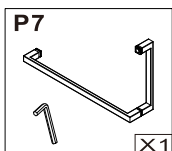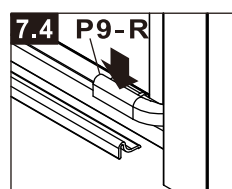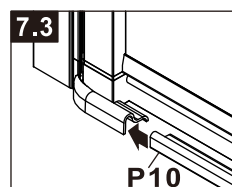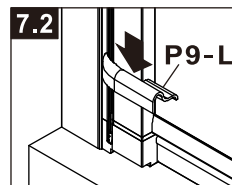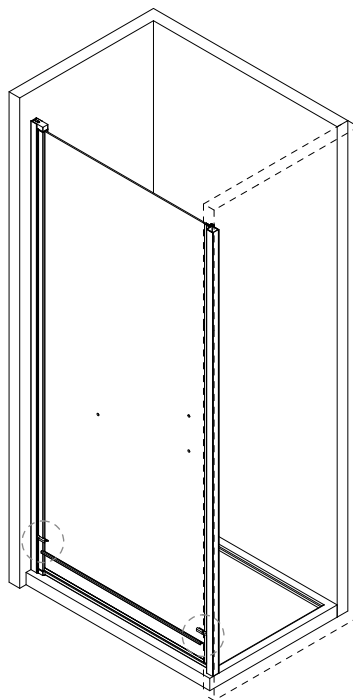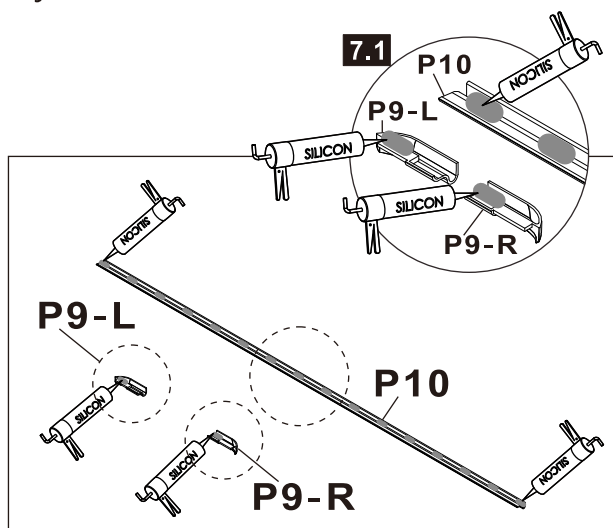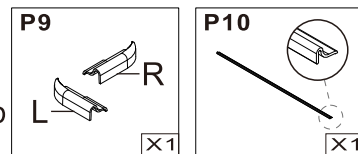


8

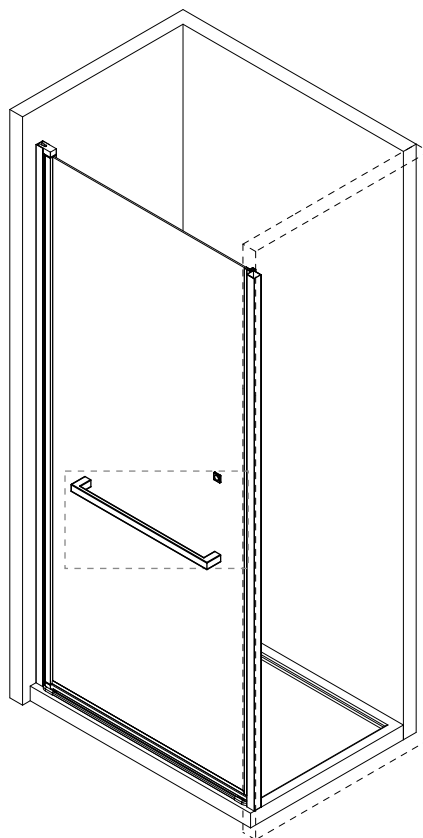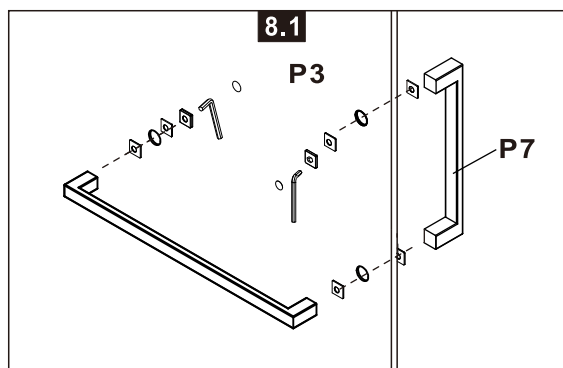

EN: Install the handle using the pre-drilled holes.

ES: Instale la manija utilizando los orificios preperforados.

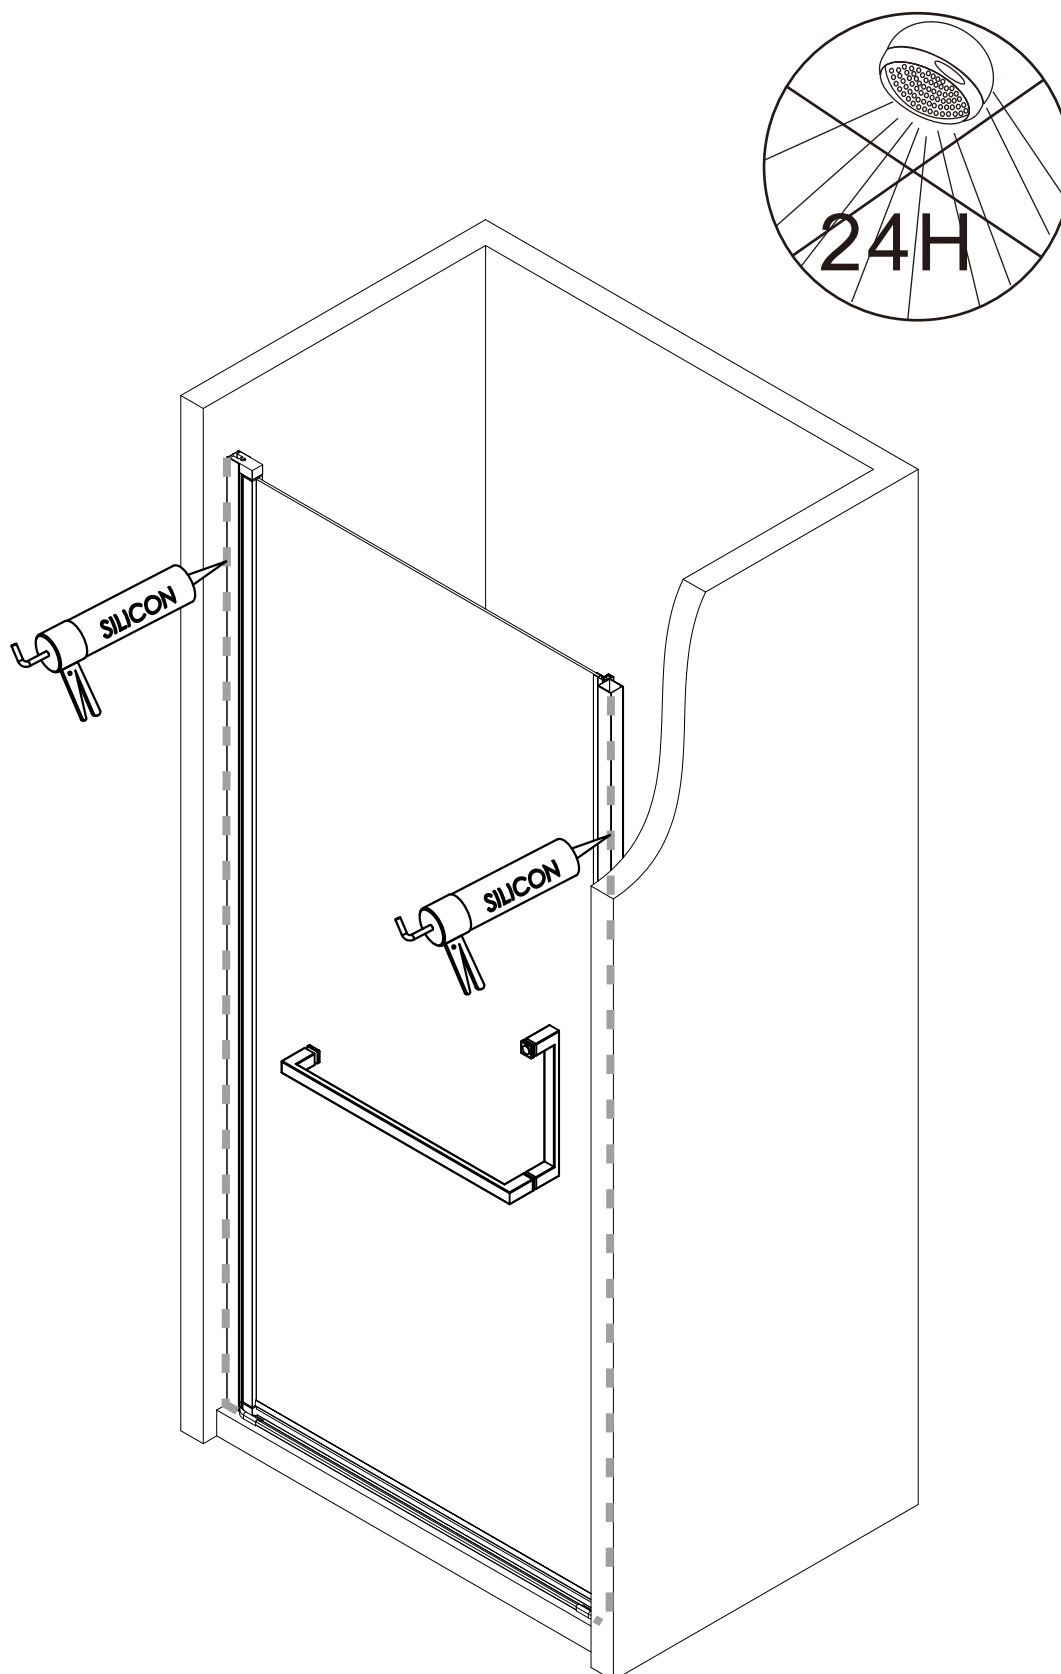**9**

EN: Apply silicone sealant and allow it to cure for 24 hours before use.

ES: Después de aplicar la silicona, deje secar durante 24 horas antes de usar.