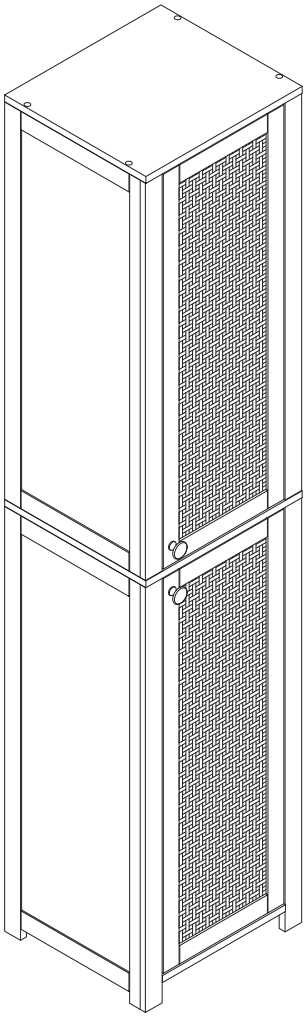
CROSLEY











FURNITURE

Linen Storage Cabinet





CF7042



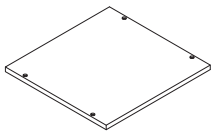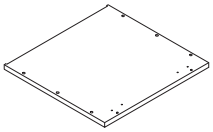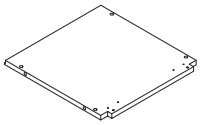PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Upper Panel 2 PCS	Middle Panel 1 PC	Lower Left Panel 1 PC	Lower Right Panel 1 PC
F 	G 	H 	I 	J 
Door Panel 1 PC	Door Panel 1 PC	Bottom Panel 1 PC	Back Panel 2 PCS	Adjustable Shelf 4 PCS

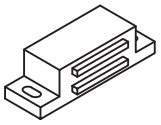HARDWARE LIST

#1  Ø1/4"*1"	#2  Ø8*30mm	#3 	#4  Ø4*22mm	#5 
Bolt 16 PCS (Extra 1)	Wood Dowel 12 PCS (Extra 1)	Knob 2 PCS	Round Head Bolt 2 PCS (Extra 1)	Shelf Holder 16 PCS (Extra 1)
#6 	#7  Ø3*16mm	#8  Ø3*12mm	#9 	#10 
Magnet 4 PCS	Screw 8 PCS (Extra 1)	Round Head Screw 32 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

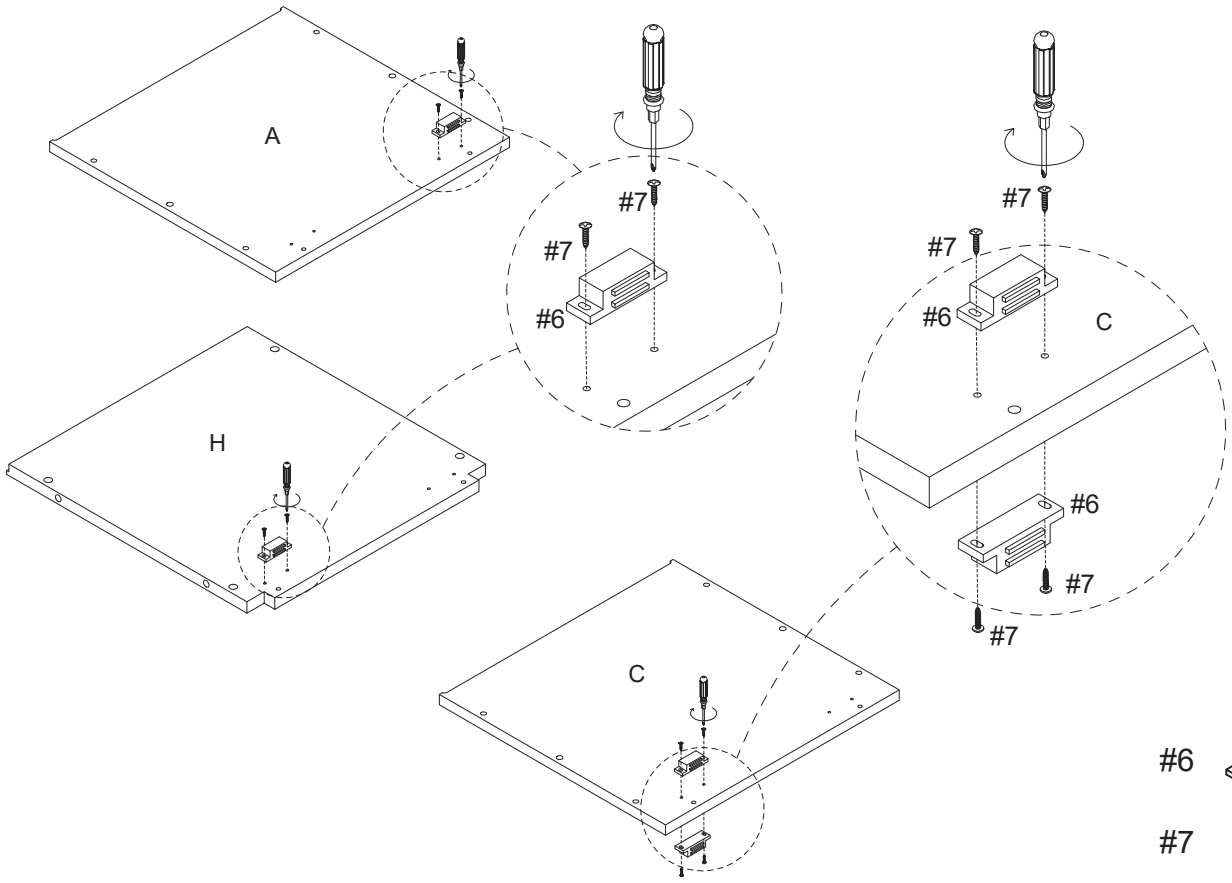
Step 1. Attach magnets (part #6) to panels (parts A, C & H) using screws (part #7) and phillips head screwdriver.



#6 x 4

#7 x 8

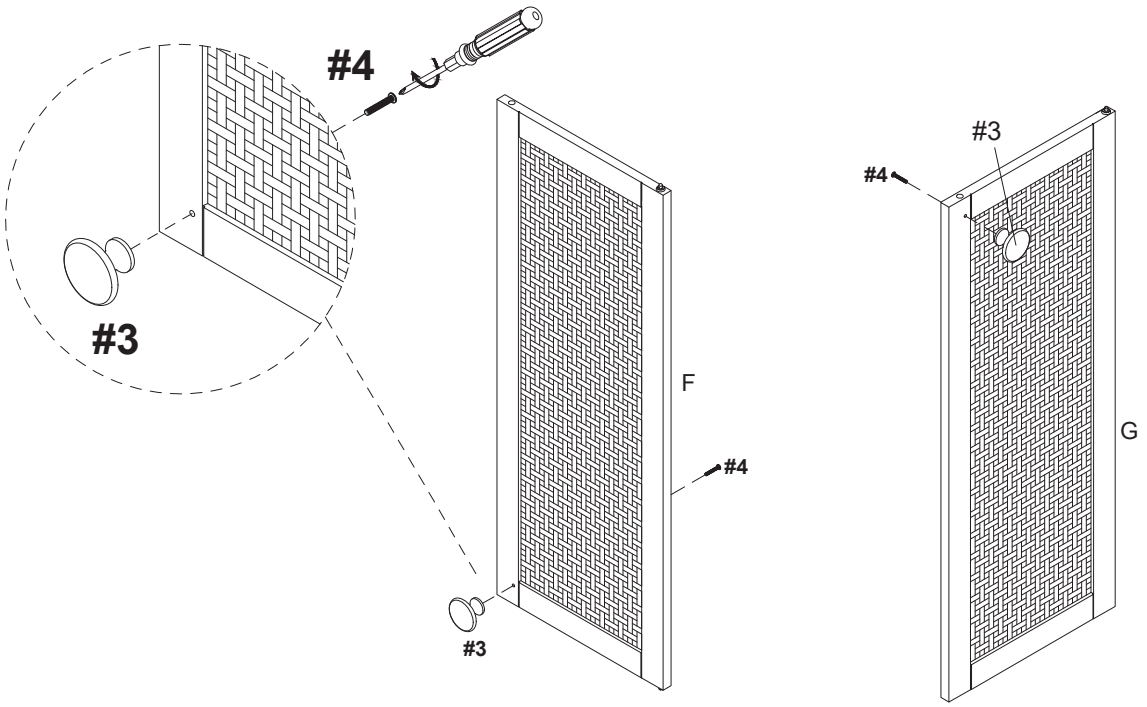
Step 2. Attach knobs (part #3) to doors (parts F & G) using round head bolts (part #4) and phillips head screwdriver.



#3 x 2

#4 x 2

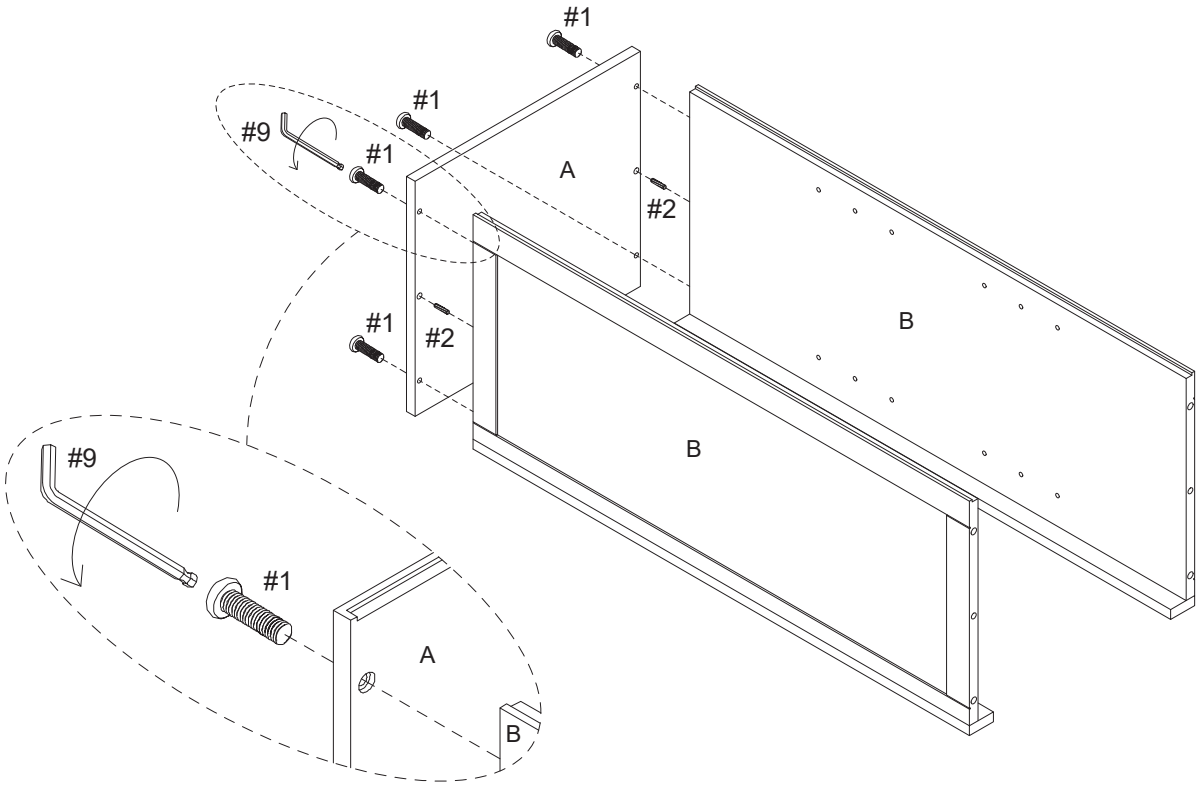Step 3. Attach upper panels (part B) to top panel (part A) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).




#1 x 4

#2 x 2

#9 x 1

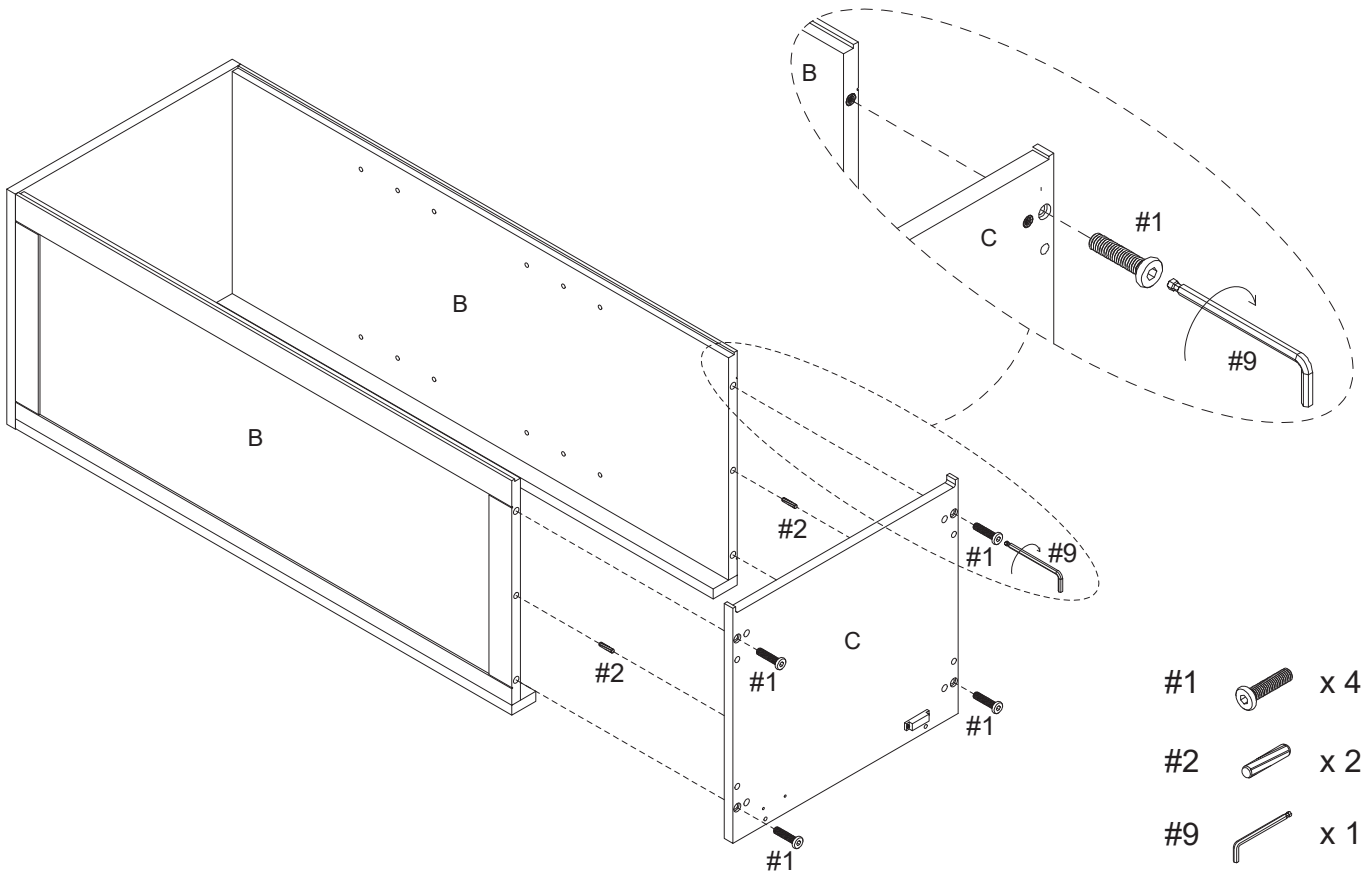Step 4. Attach middle panel (part C) to upper panels (part B) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).




#1 x 4

#2 x 2

#9 x 1

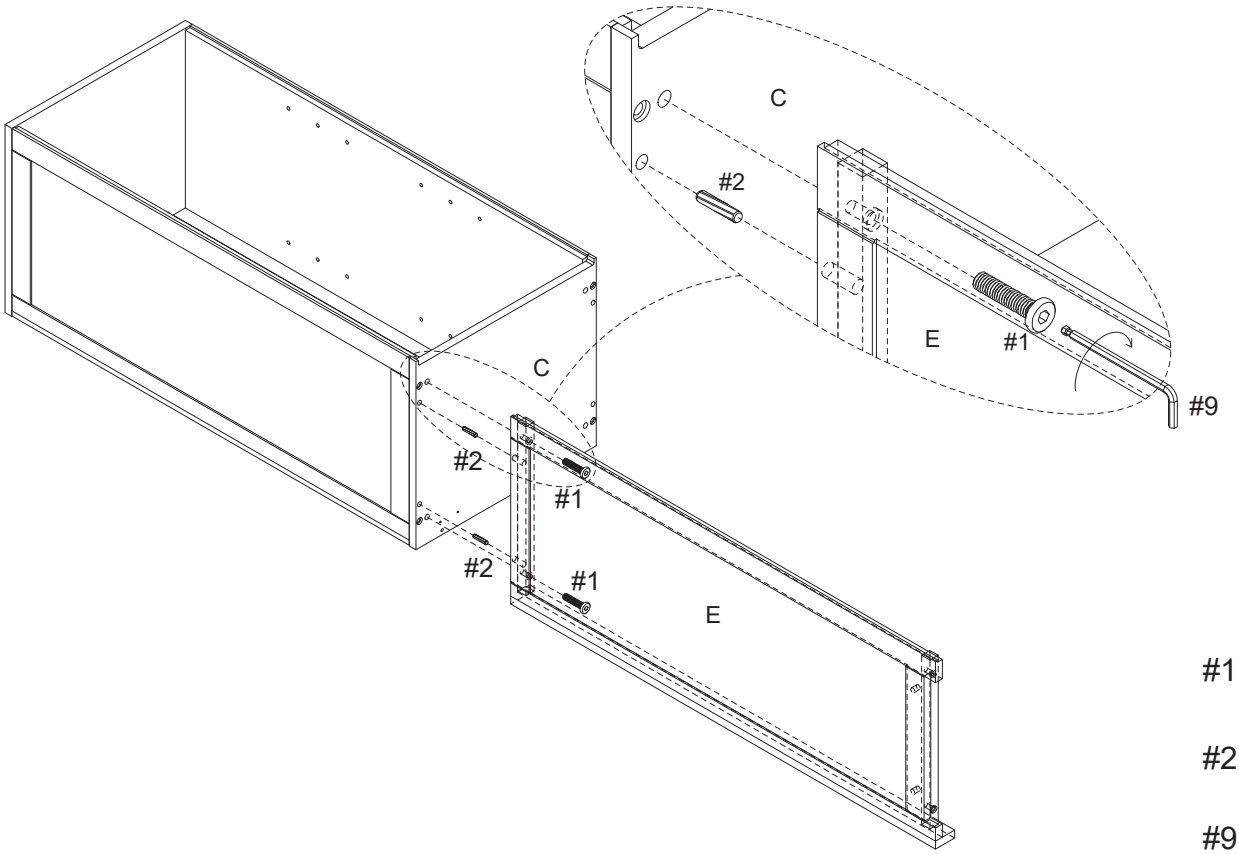Step 5. Attach lower right panel (part E) to middle panel (part C) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).




#1 x 2

#2 x 2

#9 x 1

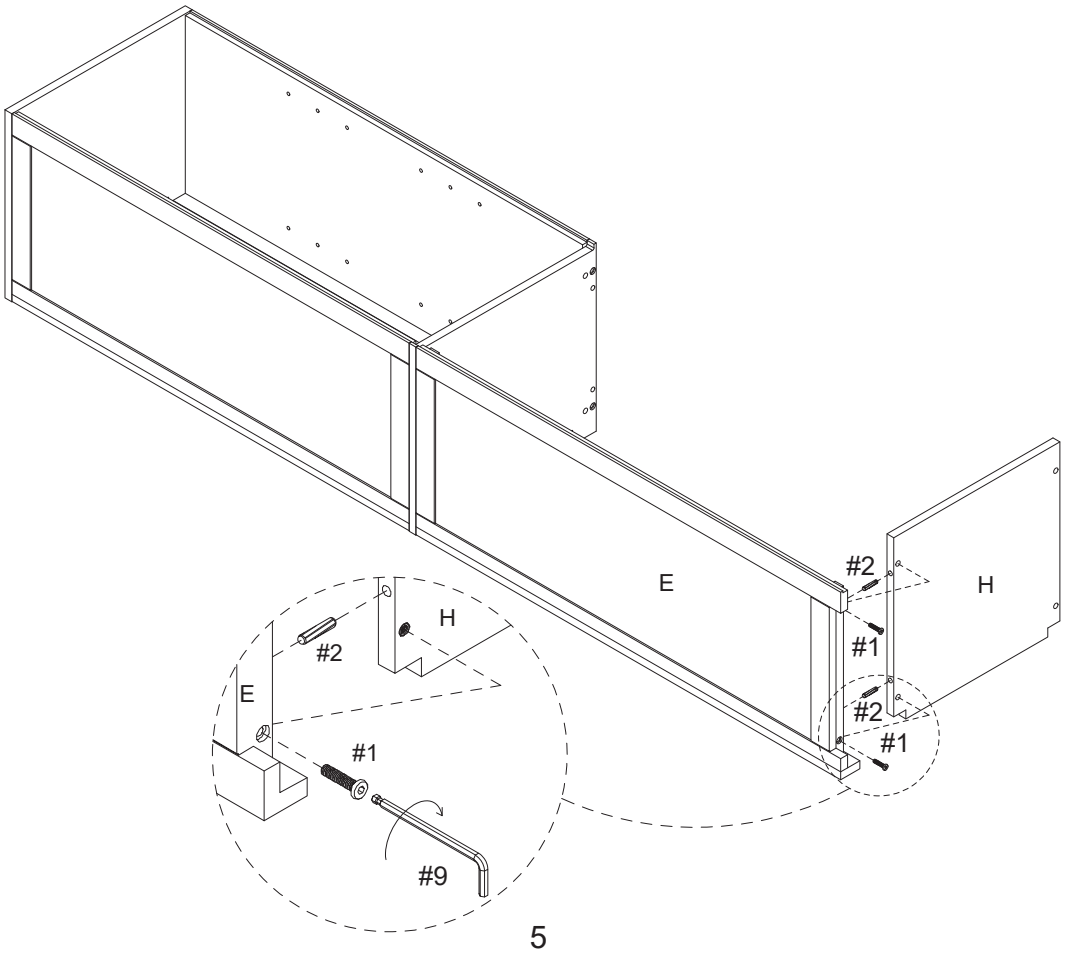Step 6. Attach bottom panel (part H) to lower right panel (part E) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).




#1 x 2


#2 x 2

#9 x 1

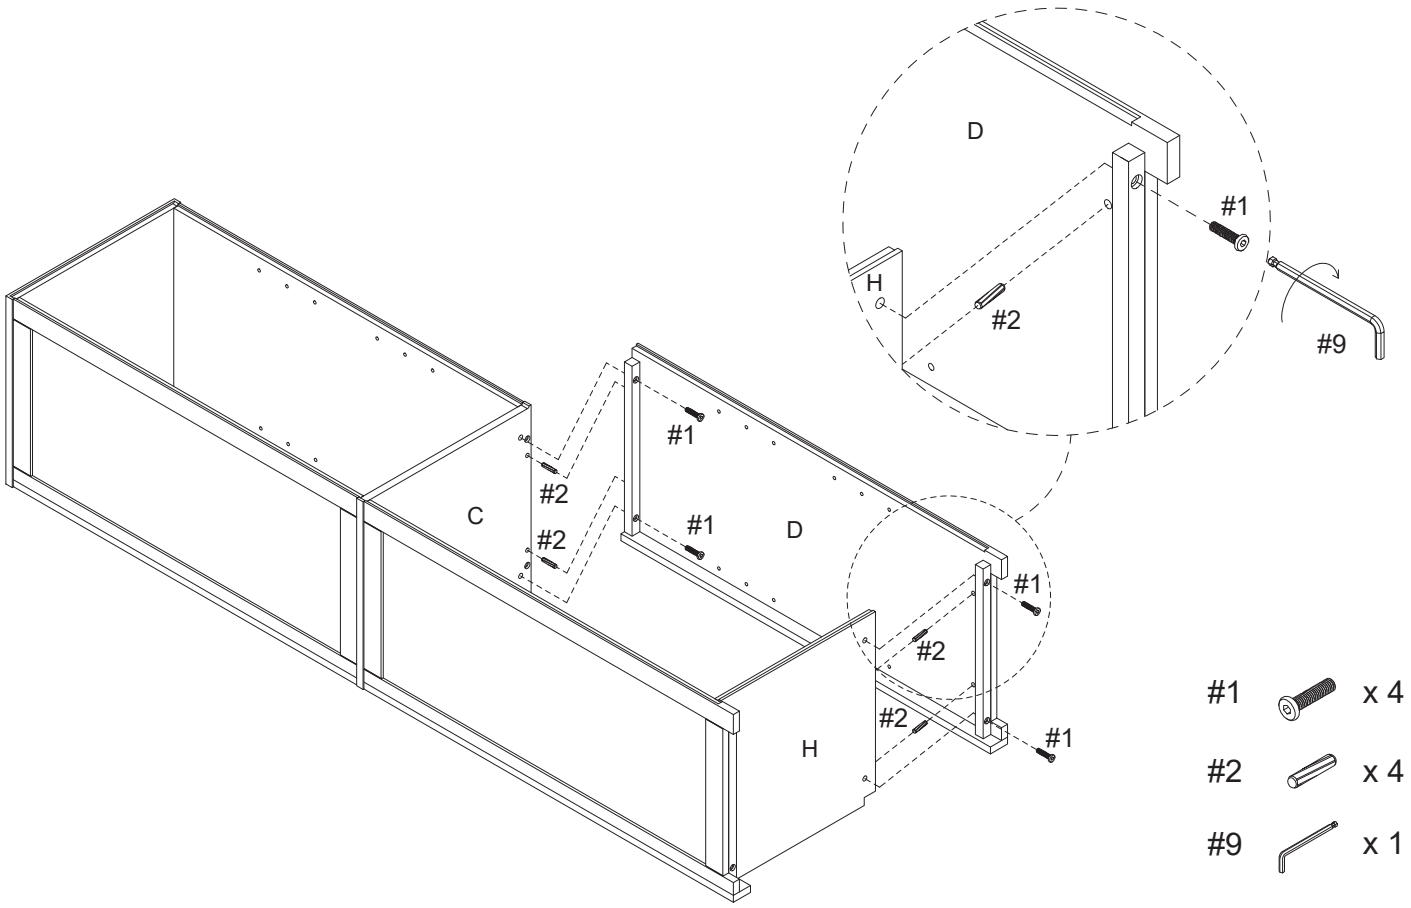Step 7. Attach lower left panel (part D) to panels (parts C & H) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).



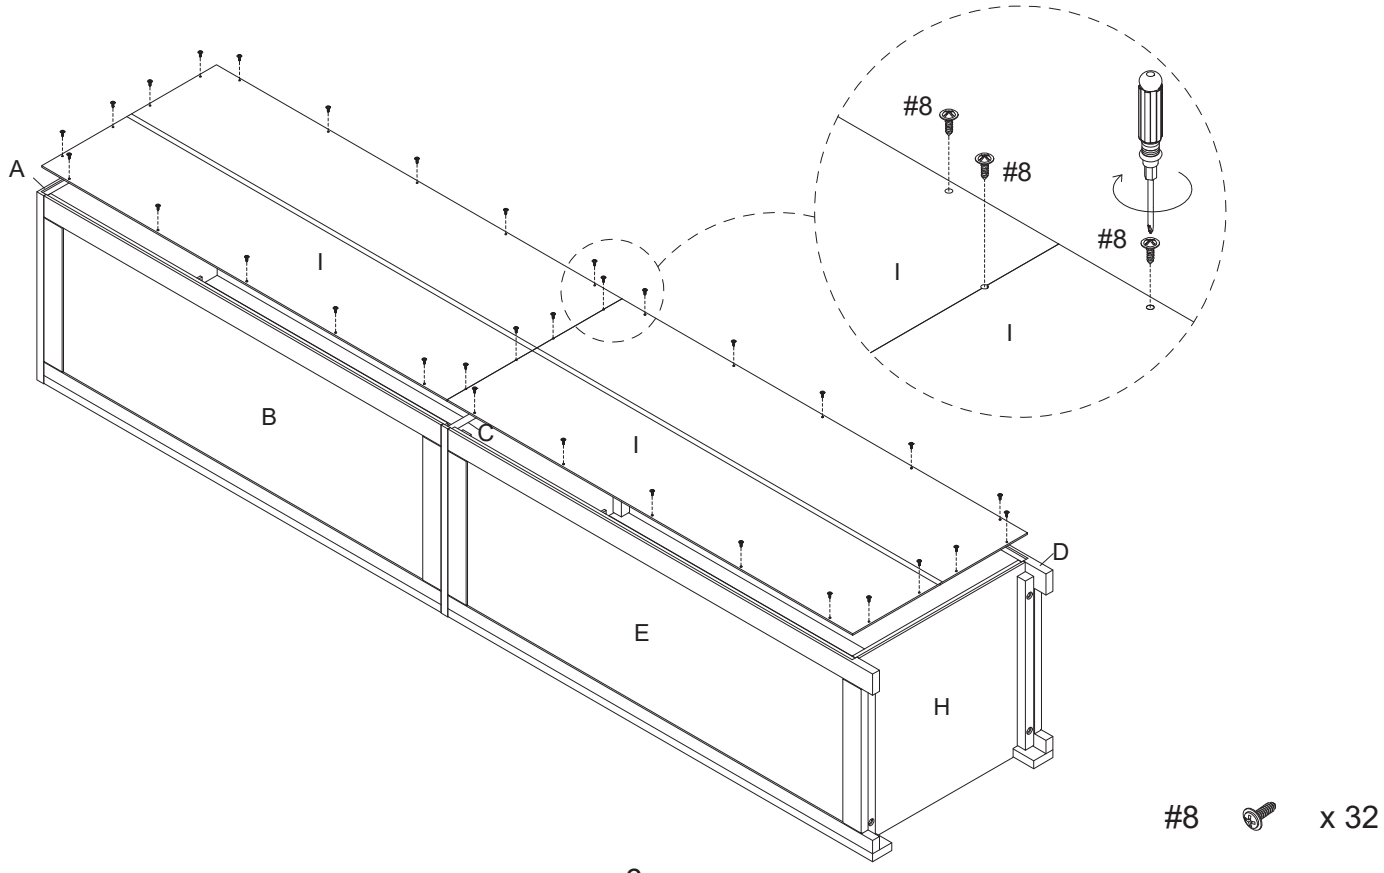
Step 8. Attach back panels (part I) to assembled unit (parts A, B, C, D, E & H) using round head screws (part #8) and phillips head screwdriver.



Step 9. There are two options for door panels (parts F & G). Attach door panels (parts F & G) by placing bottom pin hinge (pre-installed in door) to middle panel (part C) and bottom panel (part H). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A) and middle panel (part C).


Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

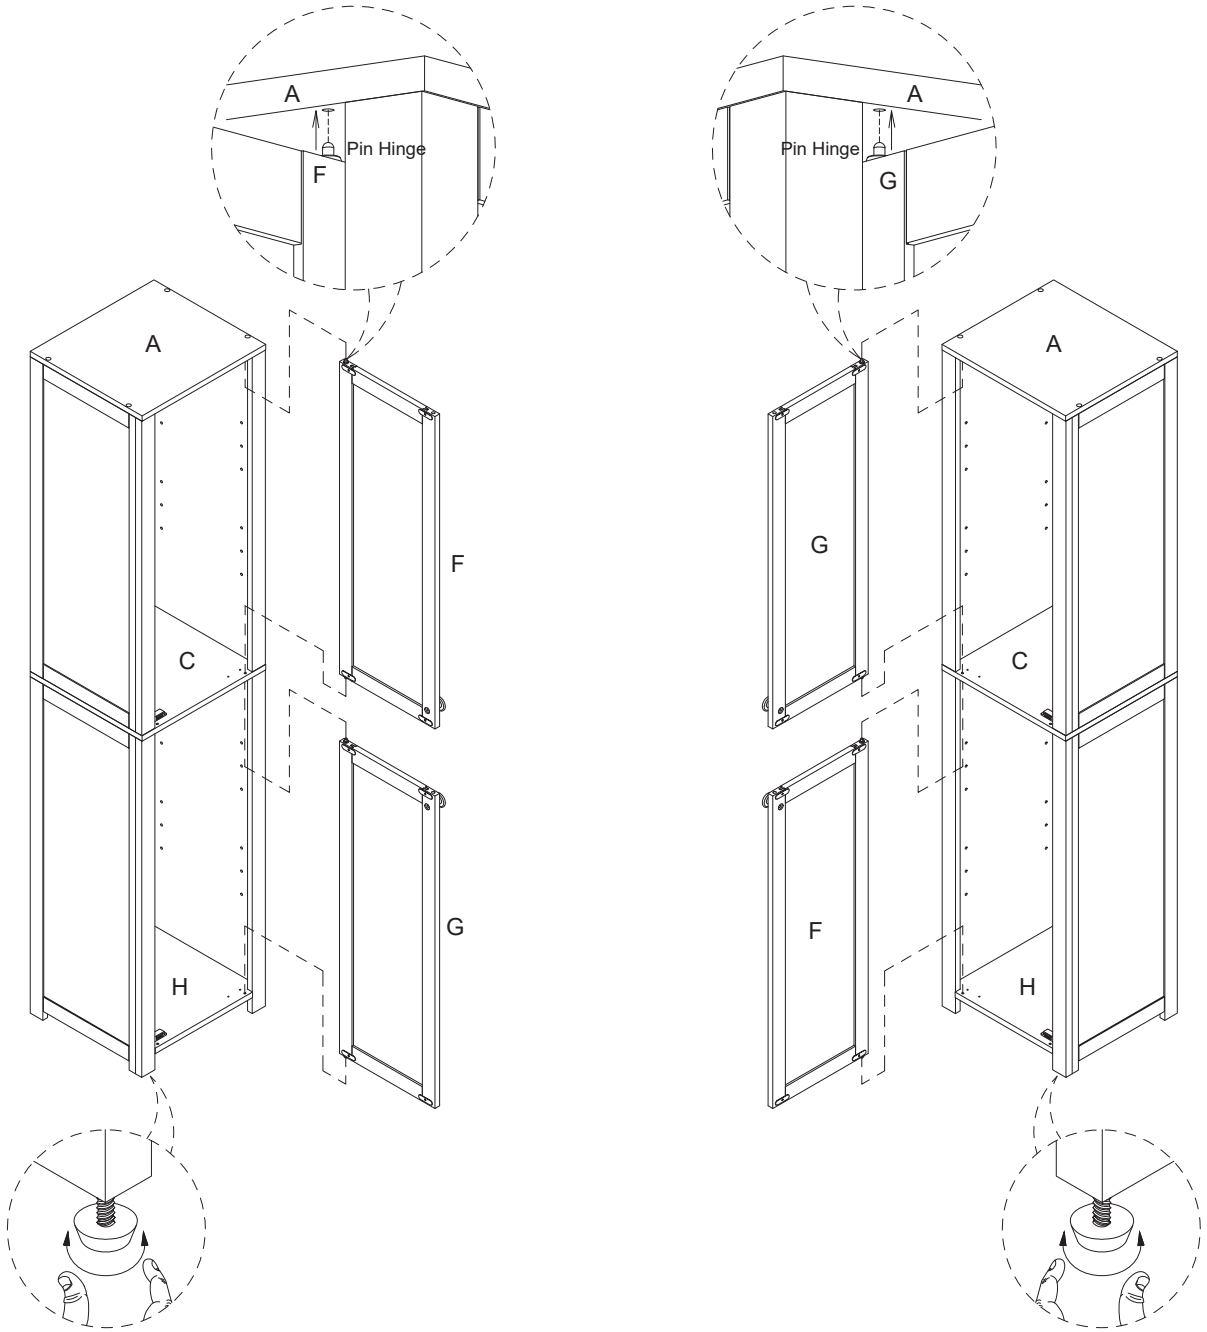Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



Step 10. Insert shelf holders (part #5) into desired position and slide adjustable shelves (part J) into place.

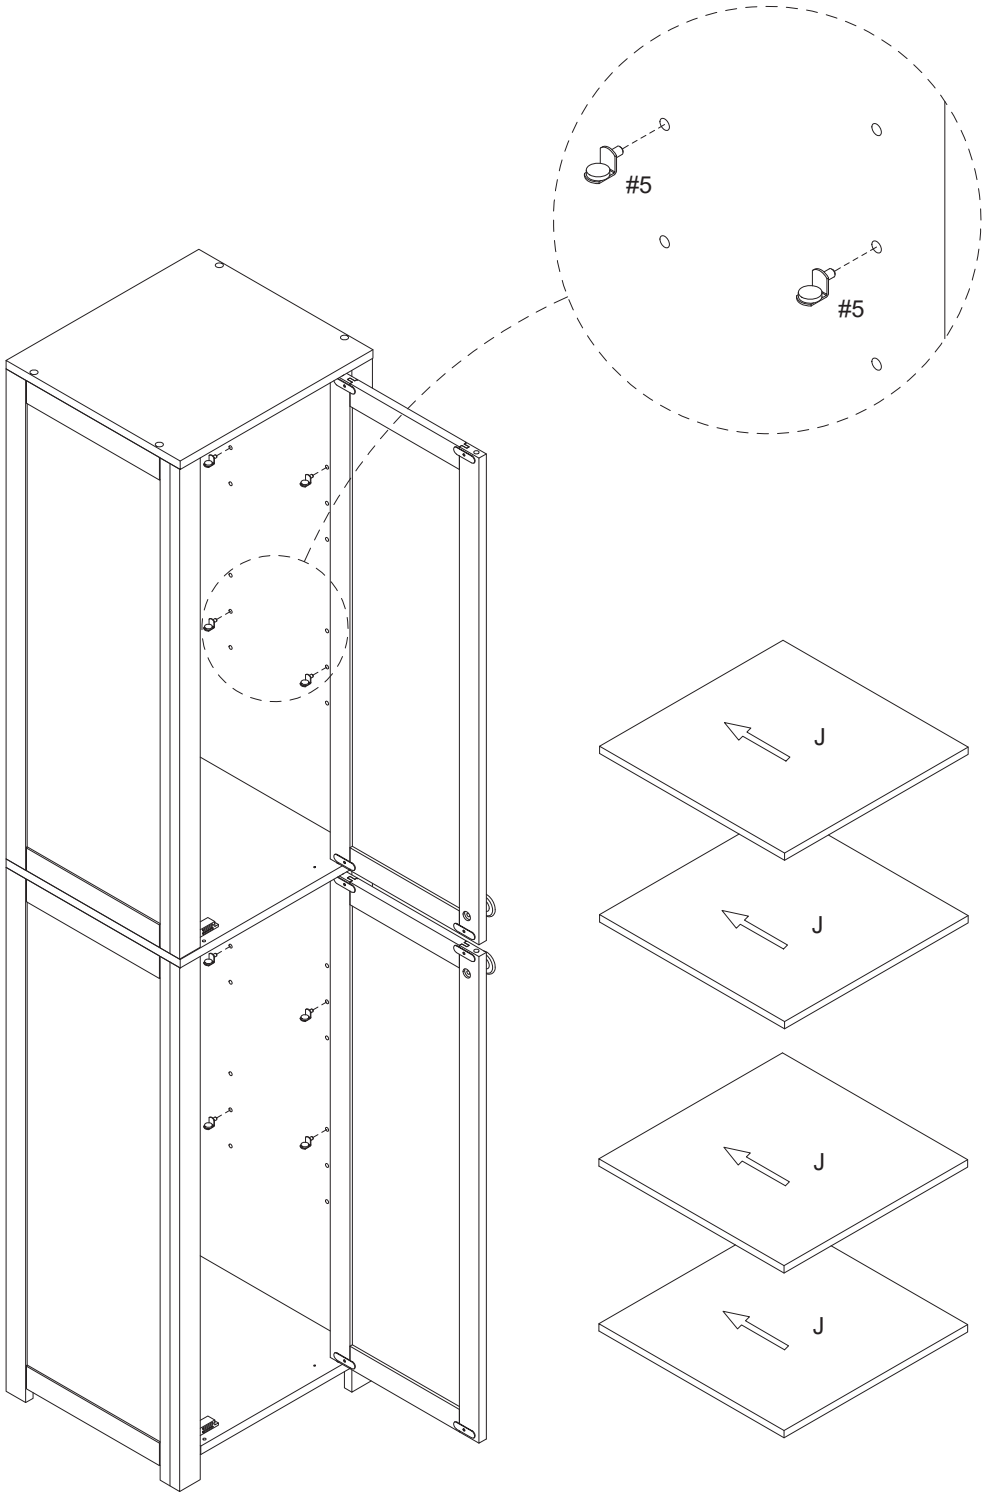Important: Safety strap kit (part #10) must be installed to prevent tipping, damage and/or injury.



#5  x 16

#10	A	B	C	D	E
	 1-1/2"xØ4xD8		 5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

