



BLACK PEDESTAL ASSEMBLY INSTRUCTIONS



Parts Included:

- 2 Black Vinyl Covered **Side Pieces**
- 1 Black Vinyl Covered **Foot Piece**
- 1 Unfinished **Head Piece**
- ****3 Unfinished Center Support Pieces**
 - 2 Pieces with One Slit
 - 1 Piece with Two Slits
- Pedestal Hardware Kit & Assembly Instructions
- Hardware Included: 4 **Large Corner Brackets**, 28 **Small Screws** (#10 x 1/2"), and 1 Phillips Drill Bit


You will need a **Power Drill** or **Phillips Screwdriver** for this assembly.

****STROBEL'S "SOF-FRAME" WATERBED PEDESTAL MODEL IS SLIGHTLY DIFFERENT. YOU WILL HAVE A TOTAL OF 6 UNFINISHED **CENTER SUPPORT PIECES**, INSTEAD OF 3. A TOTAL OF 4 PIECES WITH ONE SLIT AND 2 PIECES WITH TWO SLITS.**

Please Read the Instructions in Full Before Starting.

Assembly Instructions:

1. Lay your pedestal frame pieces flat on the ground in the arrangement in which they will be assembled:

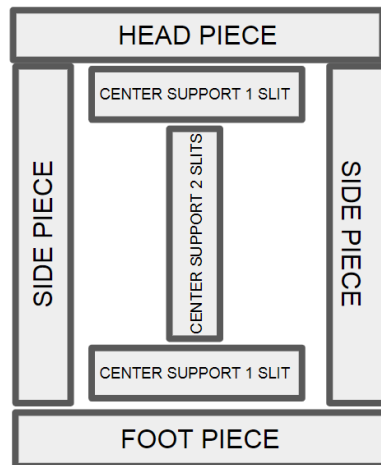


Your 2 long, black vinyl pieces are your **Side Pieces**. The short, black vinyl piece will go at the **Foot** of the bed. The short, unfinished piece will go at the **Head** of the bed. The 3 **Center Support Pieces** will go in the center of the pedestal frame and can be identified by the 'slits' in the wood pieces. You should have a total of 3 unfinished **Center Support Pieces**: one **Center Support Piece** has two slits cut into it and two **Center Support Pieces** have one slit cut into each.

2. Stand one **Side Piece** up on its side and ensure the black vinyl side is facing the outside. Stand the **Head Piece** on its side and line it up with the top INSIDE edge of the **Side Piece** that is standing up. Screw the **Large Bracket** into the inside corner of these 2 pieces using the **Short Screws** to secure them together.



3. Stand the other **Side Piece** up on its side and ensure the black vinyl side is facing the outside. Line up the **Side Piece** to the other end of the **Head Piece** with the INSIDE edge of the side piece. Screw the **Large Bracket** into the inside corner of these 2 pieces using the **Short Screws** to secure them together.

**THE SHORT HEAD & FOOT PIECES SHOULD BE
INSIDE THE TWO SIDE PIECES:**

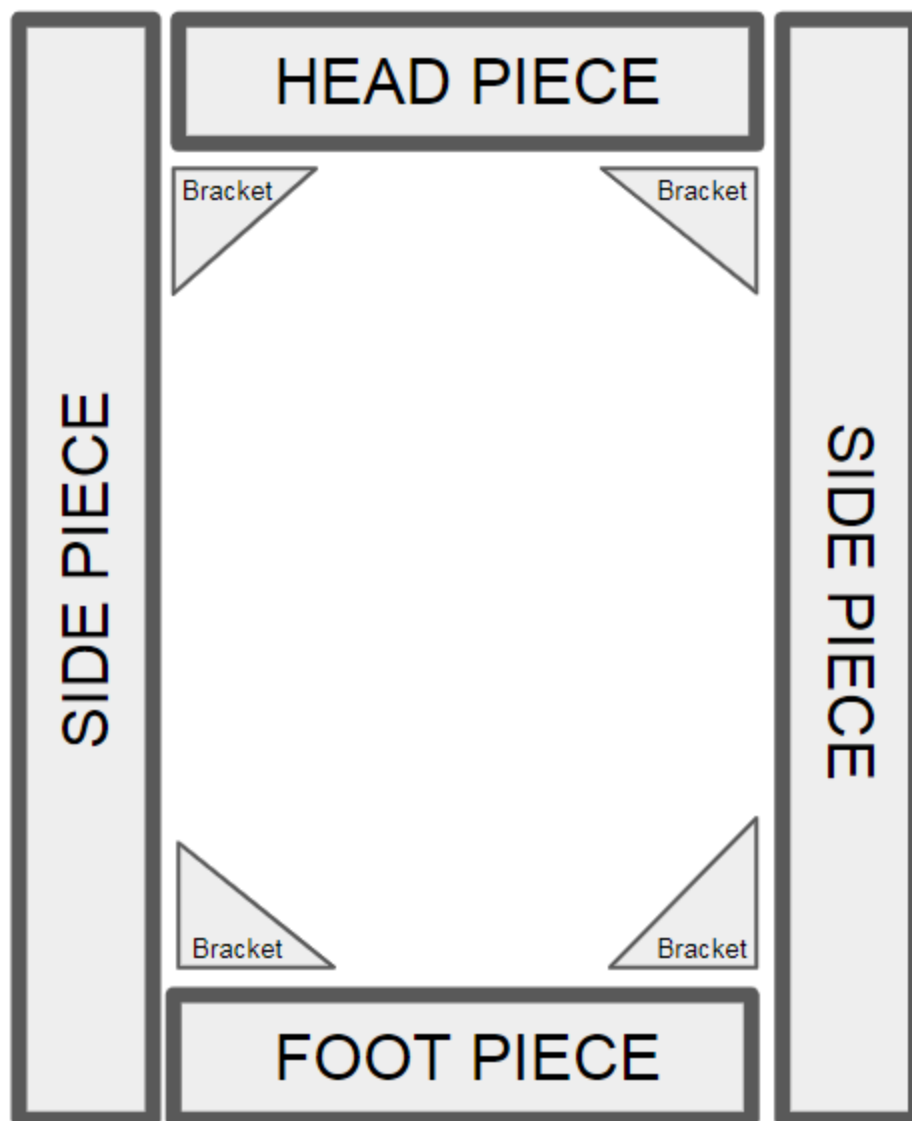


4. Stand the **Foot Piece** up on its side and place at the bottom of the two **Side Pieces**, ensuring the **Side Pieces** are on the OUTSIDE of the **Foot Piece**. The black vinyl should be facing the outside. Screw the **Foot Piece** to both **Side Pieces** using the **Large Corner Brackets** and the **Short Screws** to secure them together.



5. Now that your Pedestal Frame is built, slip together your **Center Support Pieces** in the middle of the Pedestal Frame. The **Center Support Piece** with TWO Slits in it should be placed long ways with the slits facing UP in the center of the frame. The **Center Support Pieces** with ONE Slit in it should be placed long ways with slits facing DOWN over the piece with two slits. The slits should lock each piece in place. **FOR STROBEL'S "SOF-FRAME" MODEL ONLY, PLEASE REFER TO THE NEXT PAGE FOR A REFERENCE IMAGE OF THE CENTER SUPPORT PIECES LAYOUT**



* FOR STROBEL'S "SOF-FRAME" WATERBED
MODEL ONLY, PLEASE ARRANGE THE
CENTER SUPPORT PIECES AS SHOWN IN
THE REFERENCE IMAGE BELOW.

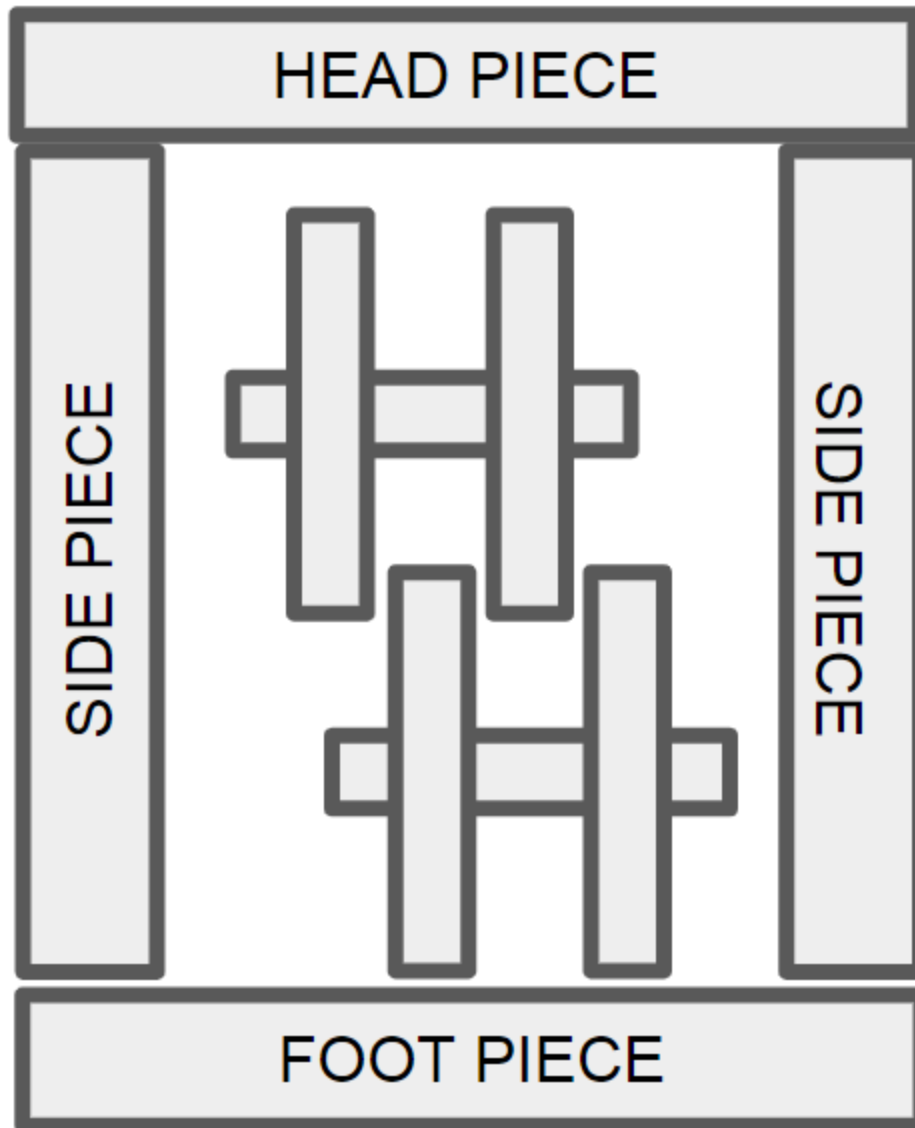

6. Your **Pedestal** is now fully assembled.

7. *If your purchase included **Wood Decking***, lay down your **Wood Decking** pieces, one at a time, on top of the Pedestal. There will be an overhang on all sides.



Thank you for your purchase!

If you have any questions regarding your purchase, please contact Strobel Technologies directly (not your retailer)

LEADS@STROBEL.COM

812-280-6000