

## ASSEMBLY INSTRUCTION

## BLACK METAL FULL/ QUEEN PLATFORM BED

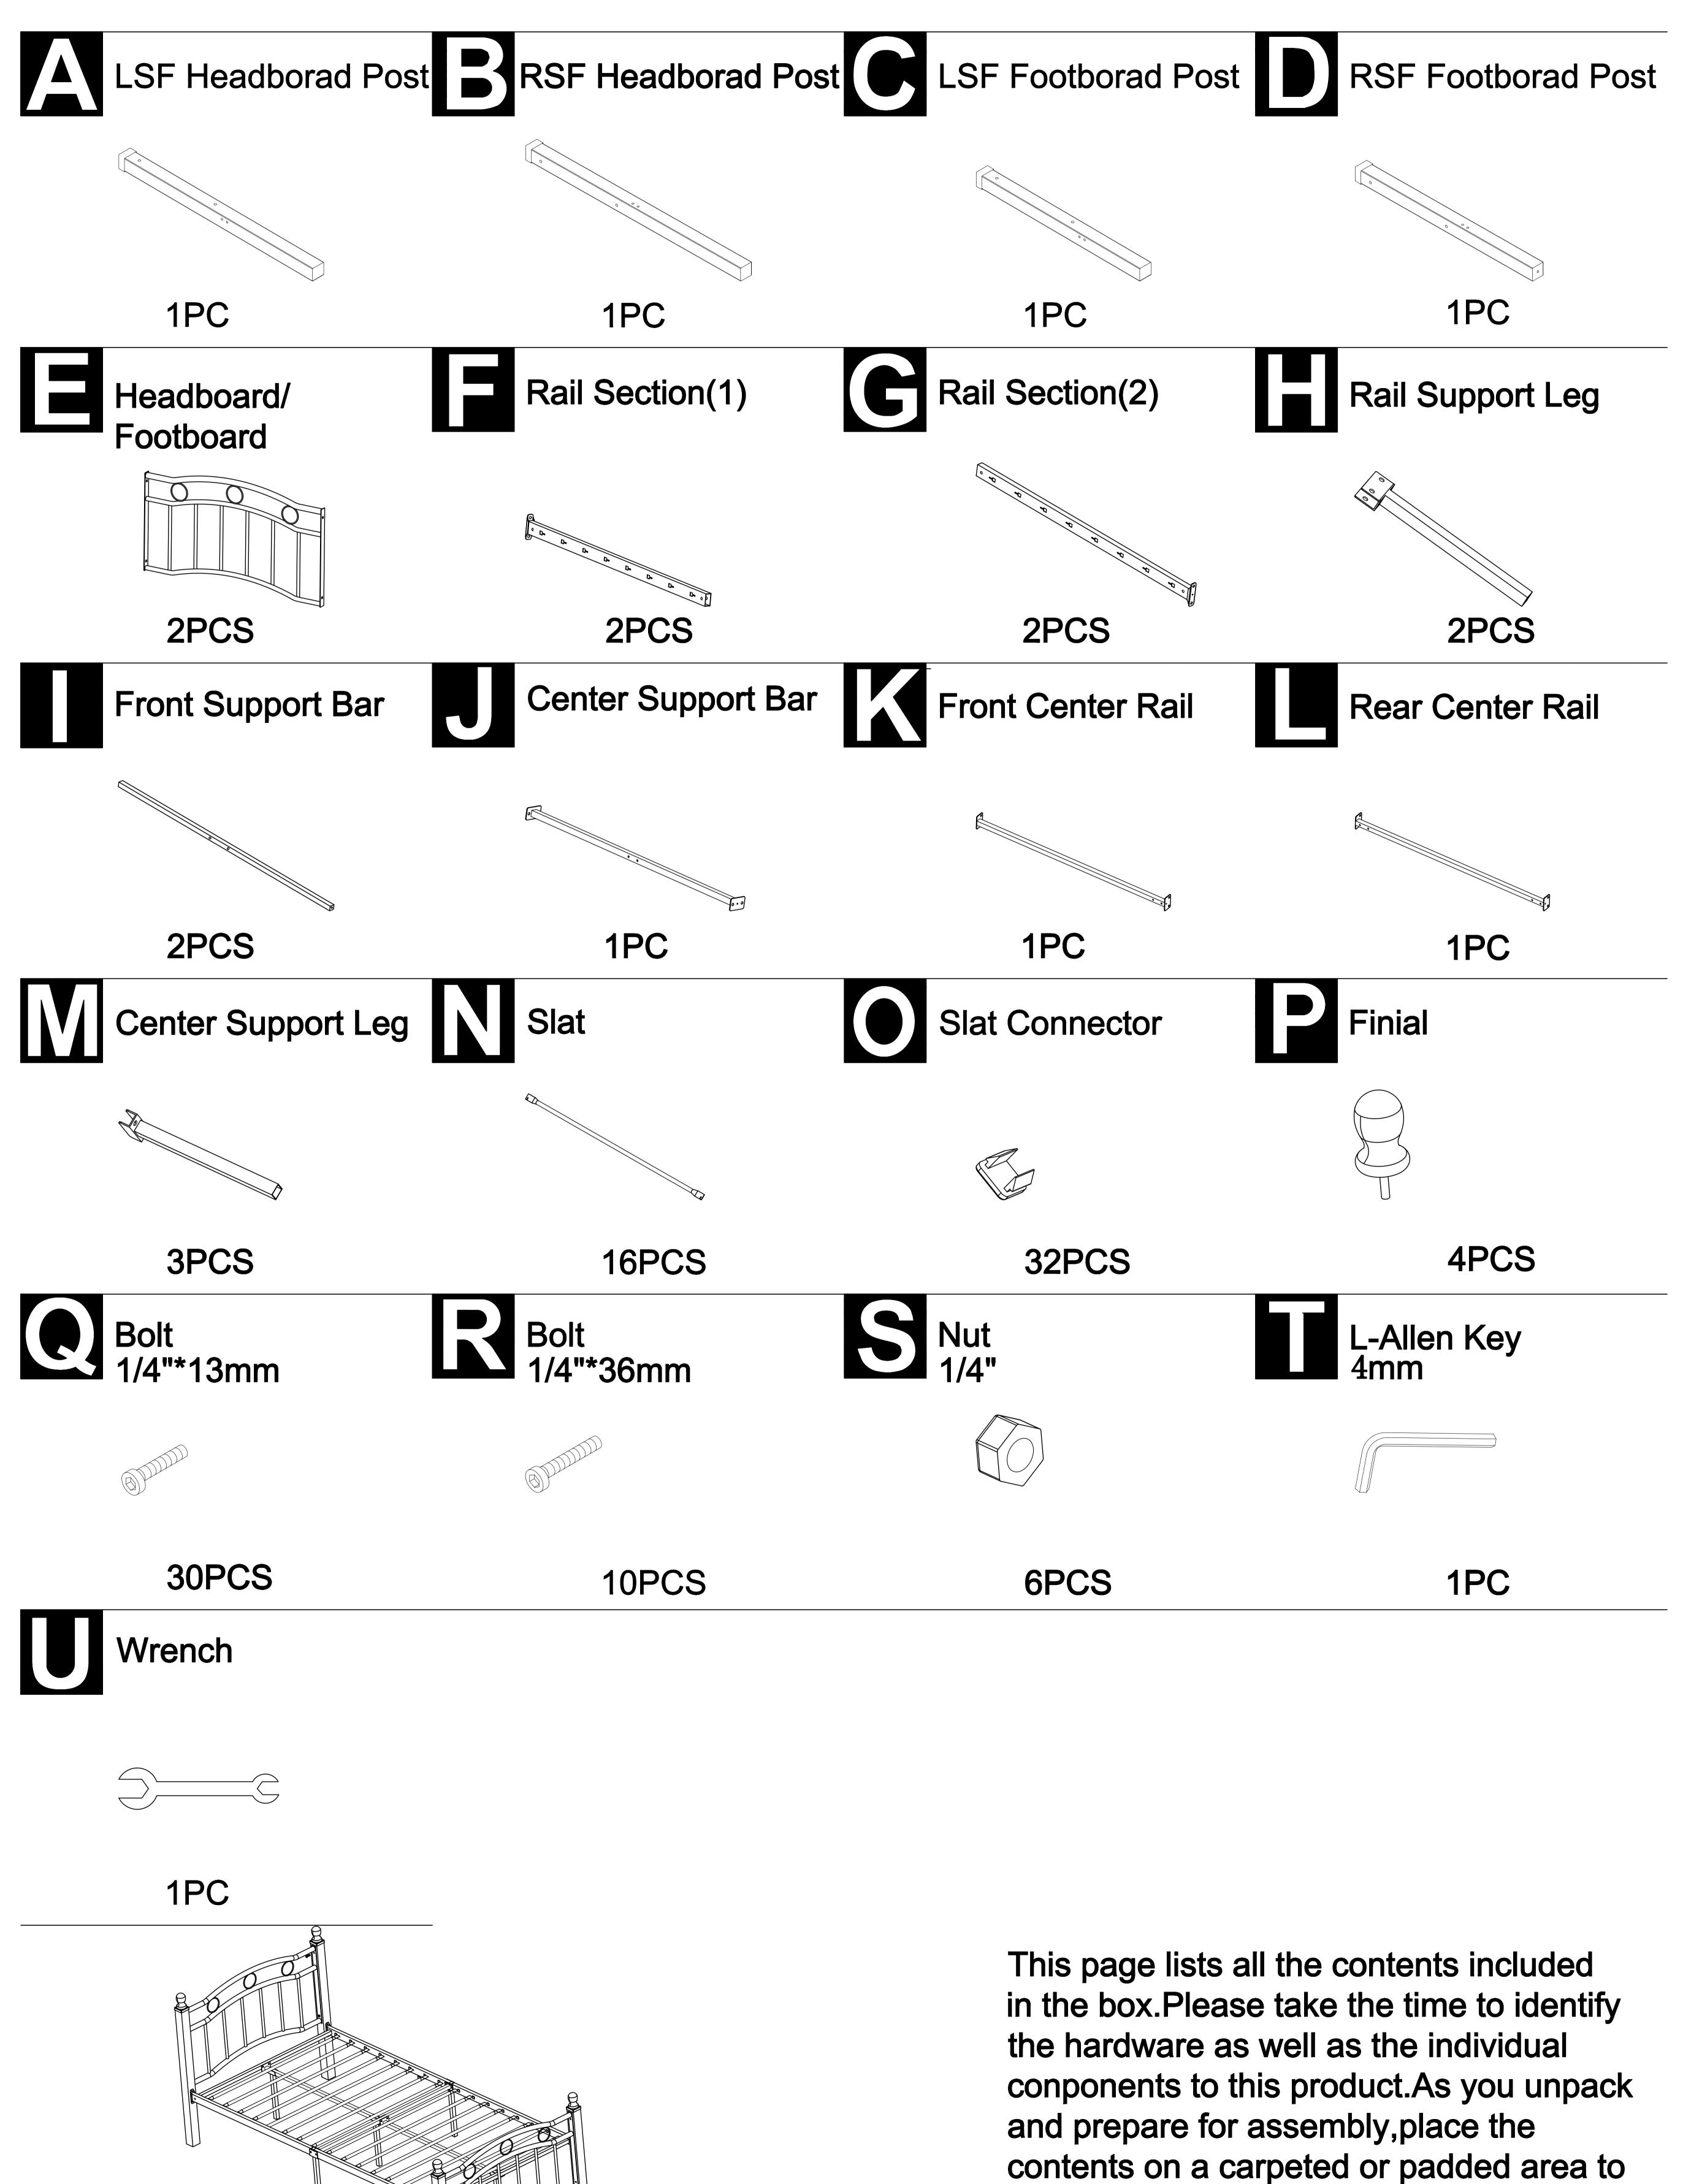


protect them from damage.

Align the LSF Headboard Post(A) and RSF Headboard Post(B) to the Headboard/Footboard(E), insert the Bolt(Q) to the holes, turn the L-Allen Key(T) to tighten them. Align the LSF Footboard Post(C) and RSF Footboard Post(D) to the Headboard/Footboard(E), insert the Bolt(Q) to the holes, turn the L-Allen Key(T) to tighten them.

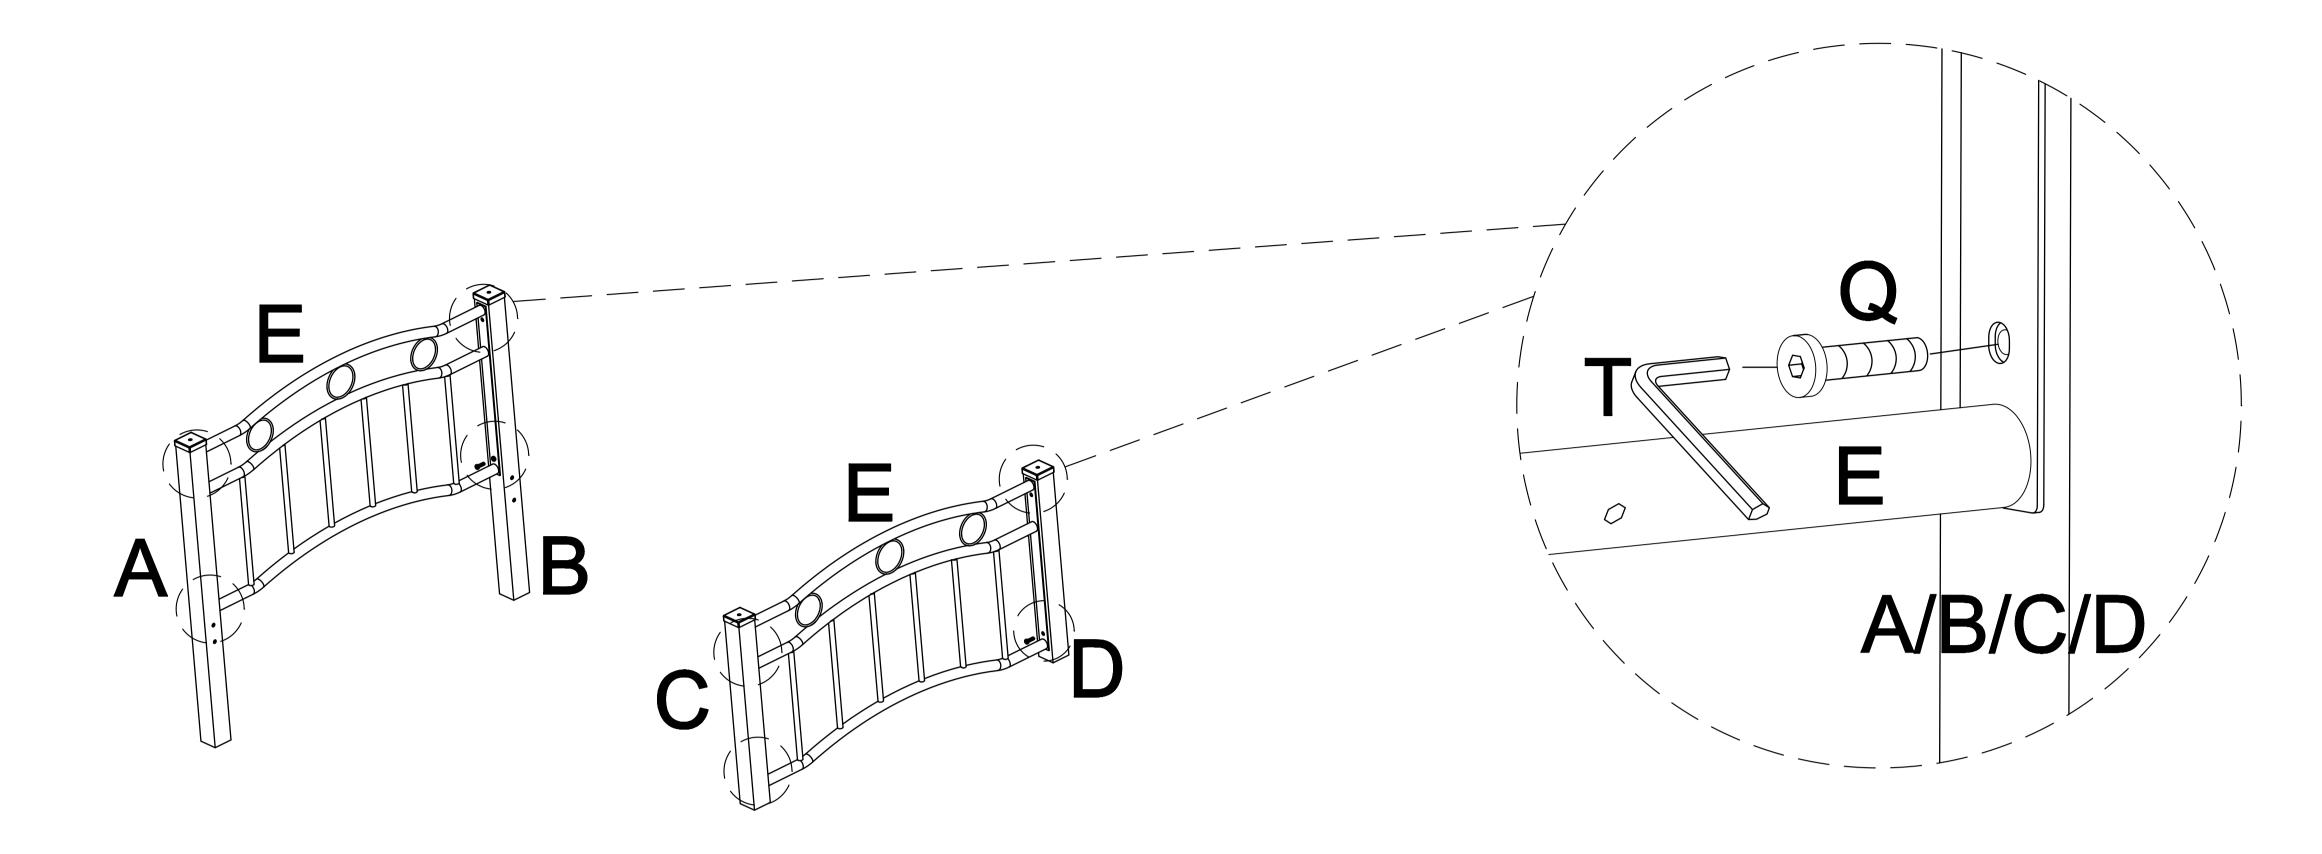


Attach the Rail Section(1)(F), the Rail Section(2)(G) to the Headboard/Footboard(E), insert the Bolt(Q), turn the L-Allen Key(T) to tighten them. Attach the Rail Support Leg(H) to the rail, insert the Bolt(Q), turn the L-Allen Key(T) to tighten them.

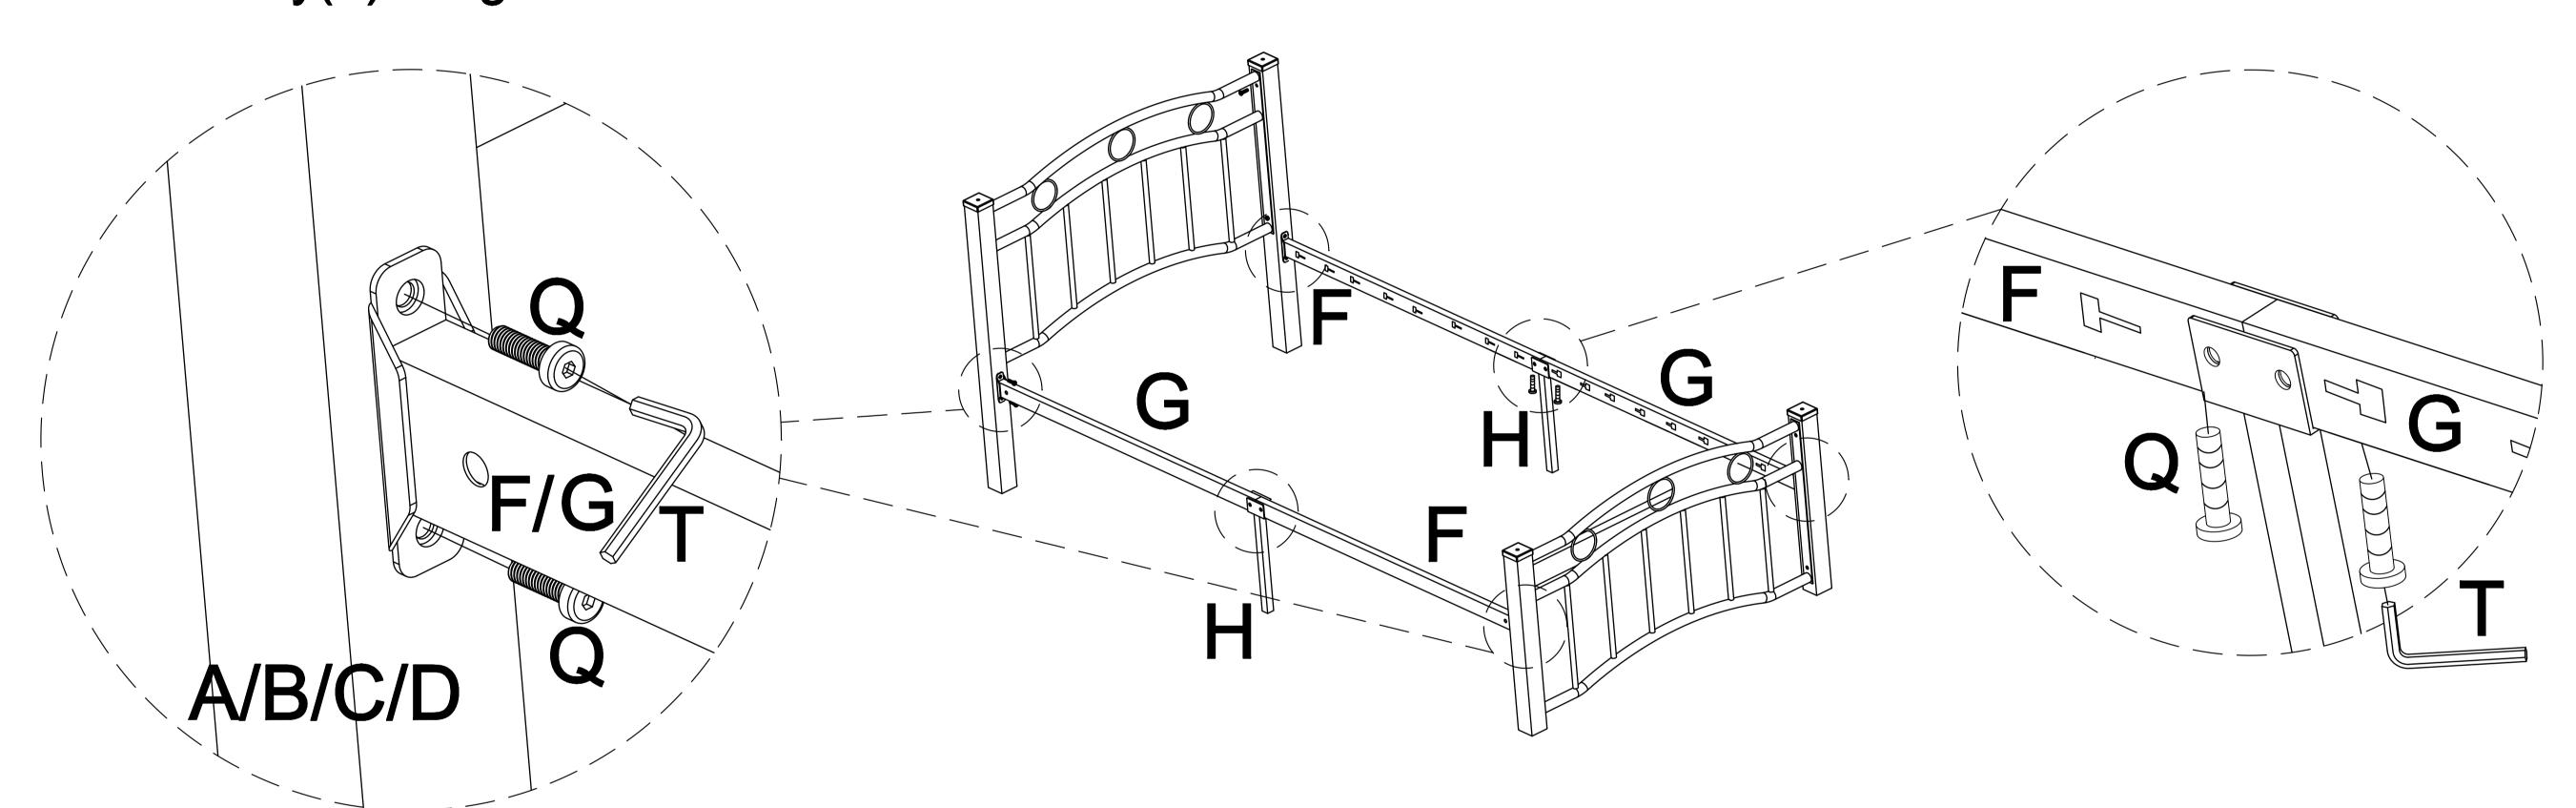


3

Attach the Front Support Bar(I) to the rail, insert the Bolt(R), turn the L-Allen Key(T) to tighten them. Then attach the Center Support Bar(J) to the rail, insert the Bolt(R) and the Nut(S), turn the L-Allen Key(T) and Wrench(U) to tighten them.

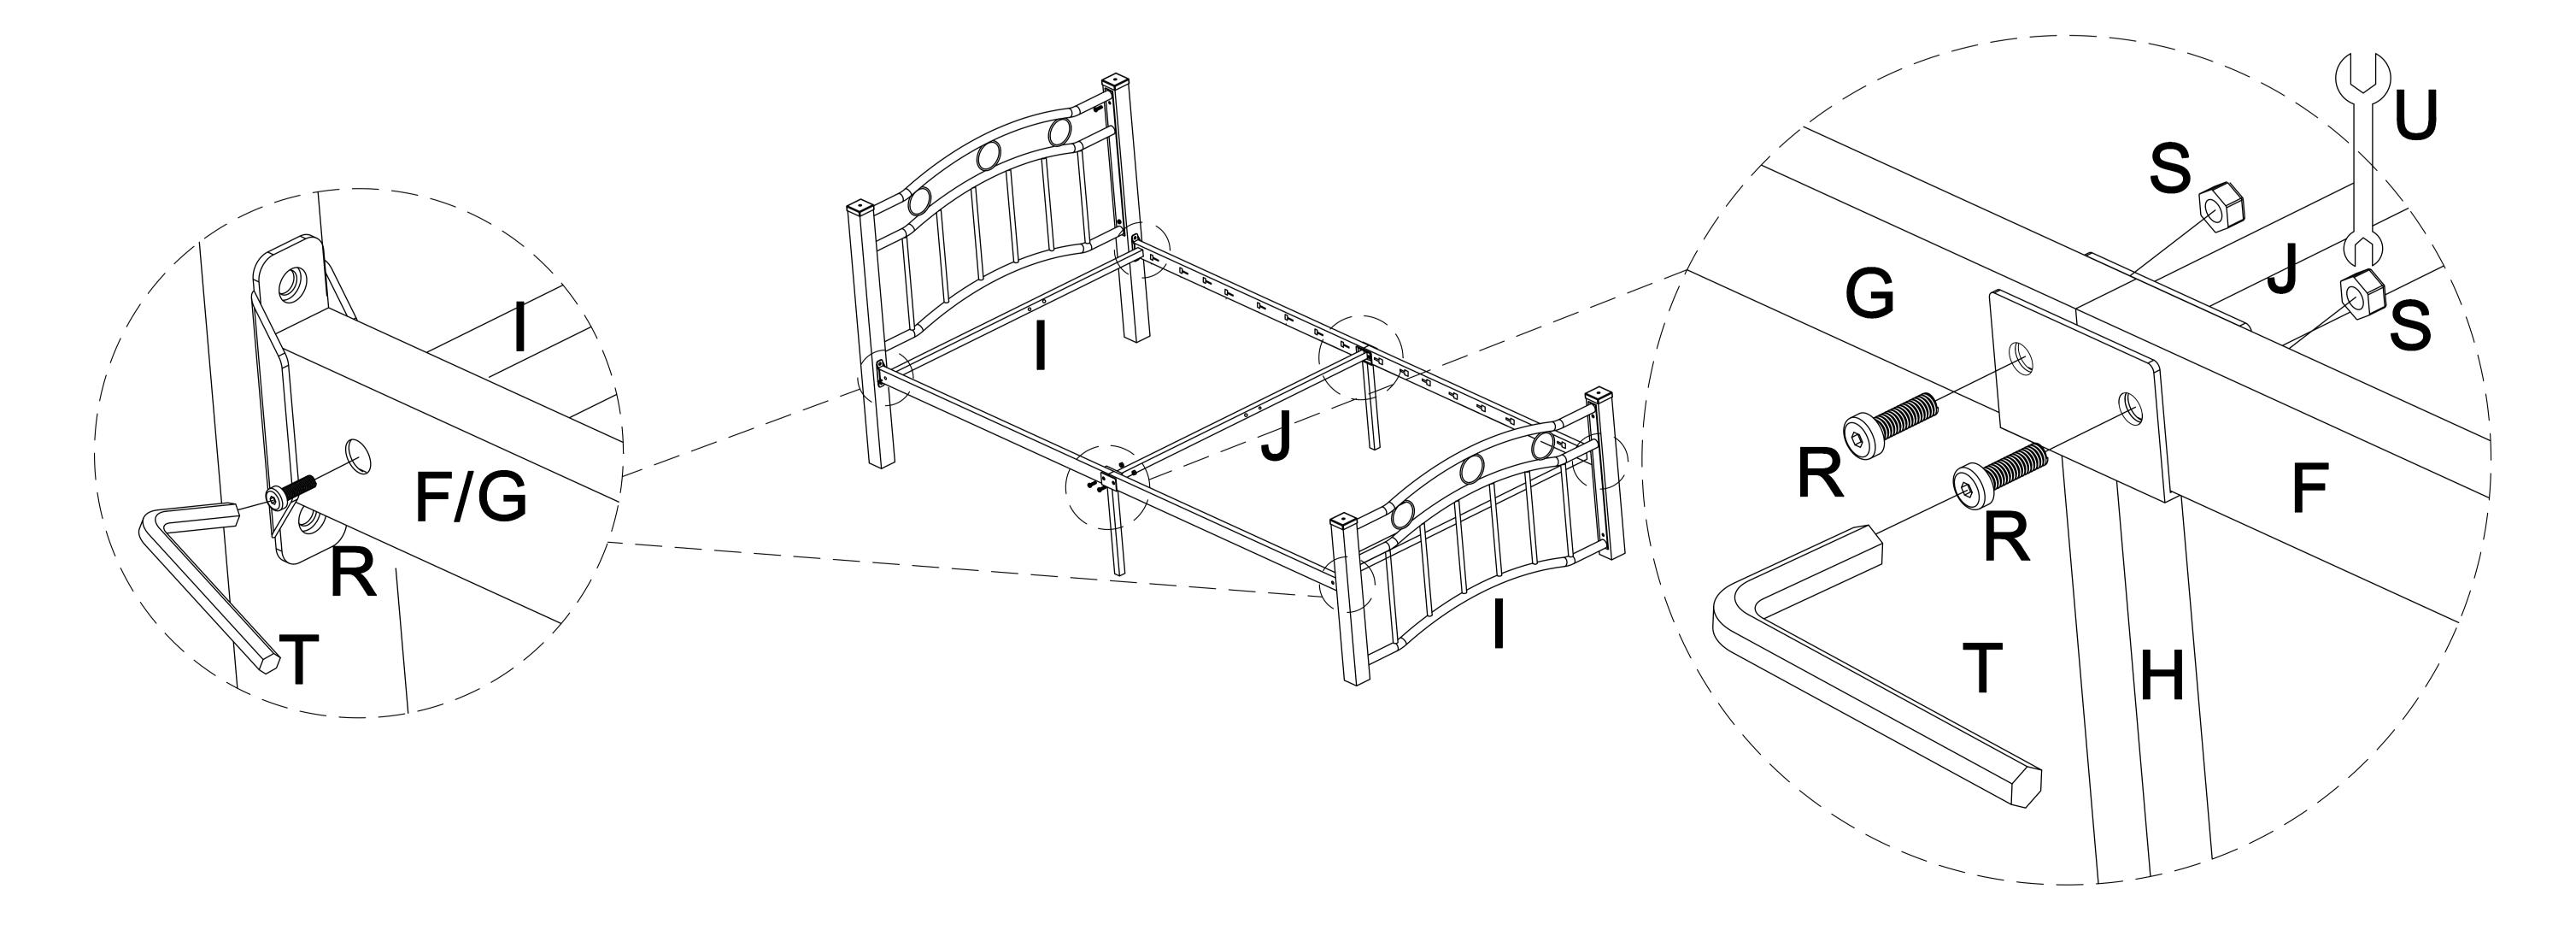





Attach the Front Center Rail(K) and Rear Center Rail(L) to the Support Bar(I)(J), insert Bolt(Q), turn the L-Allen Key(T) to tighten them. Attach the Center Support Leg(M) to the Center Rail(K)(L), insert Bolt(Q), Bolt(R) and Nut(S), turn the L-Allen Key(T) and Wrench(U) to tighten them.

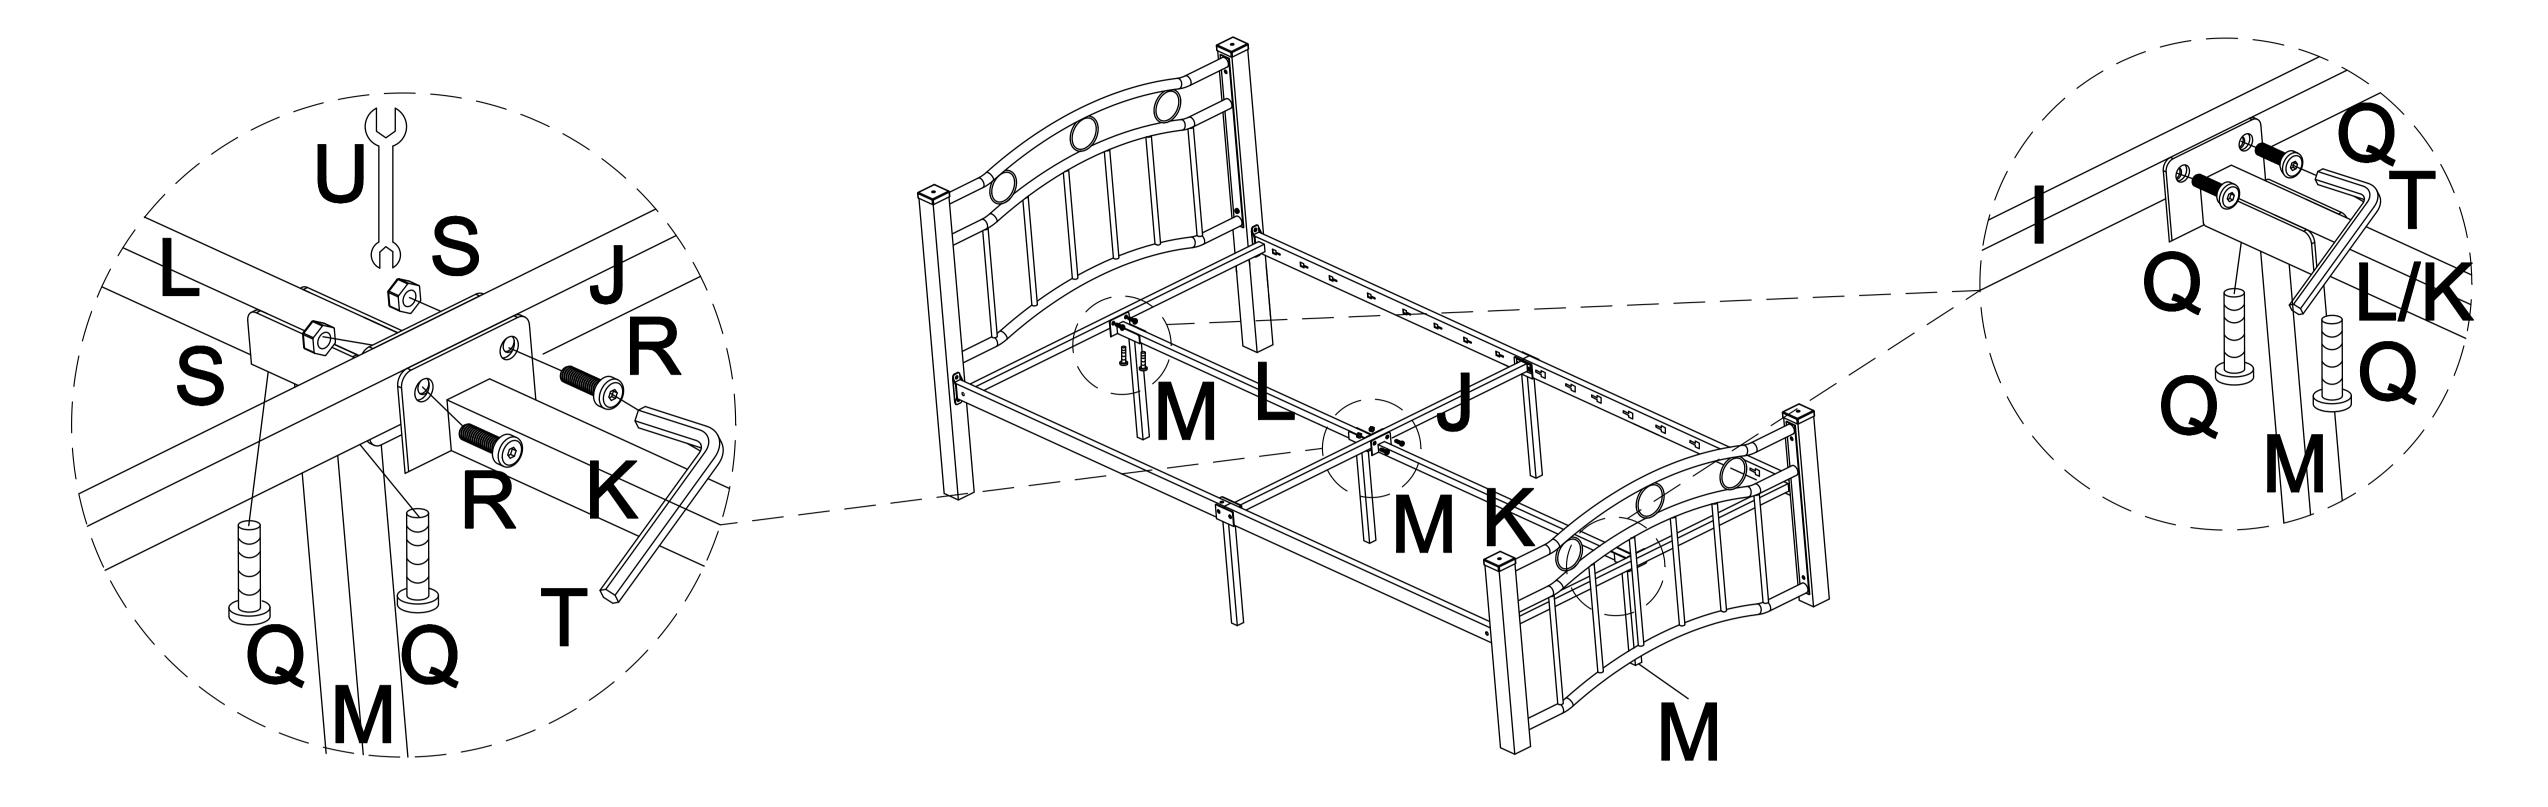

Attach the Finial(P) to the post, then tighten it.

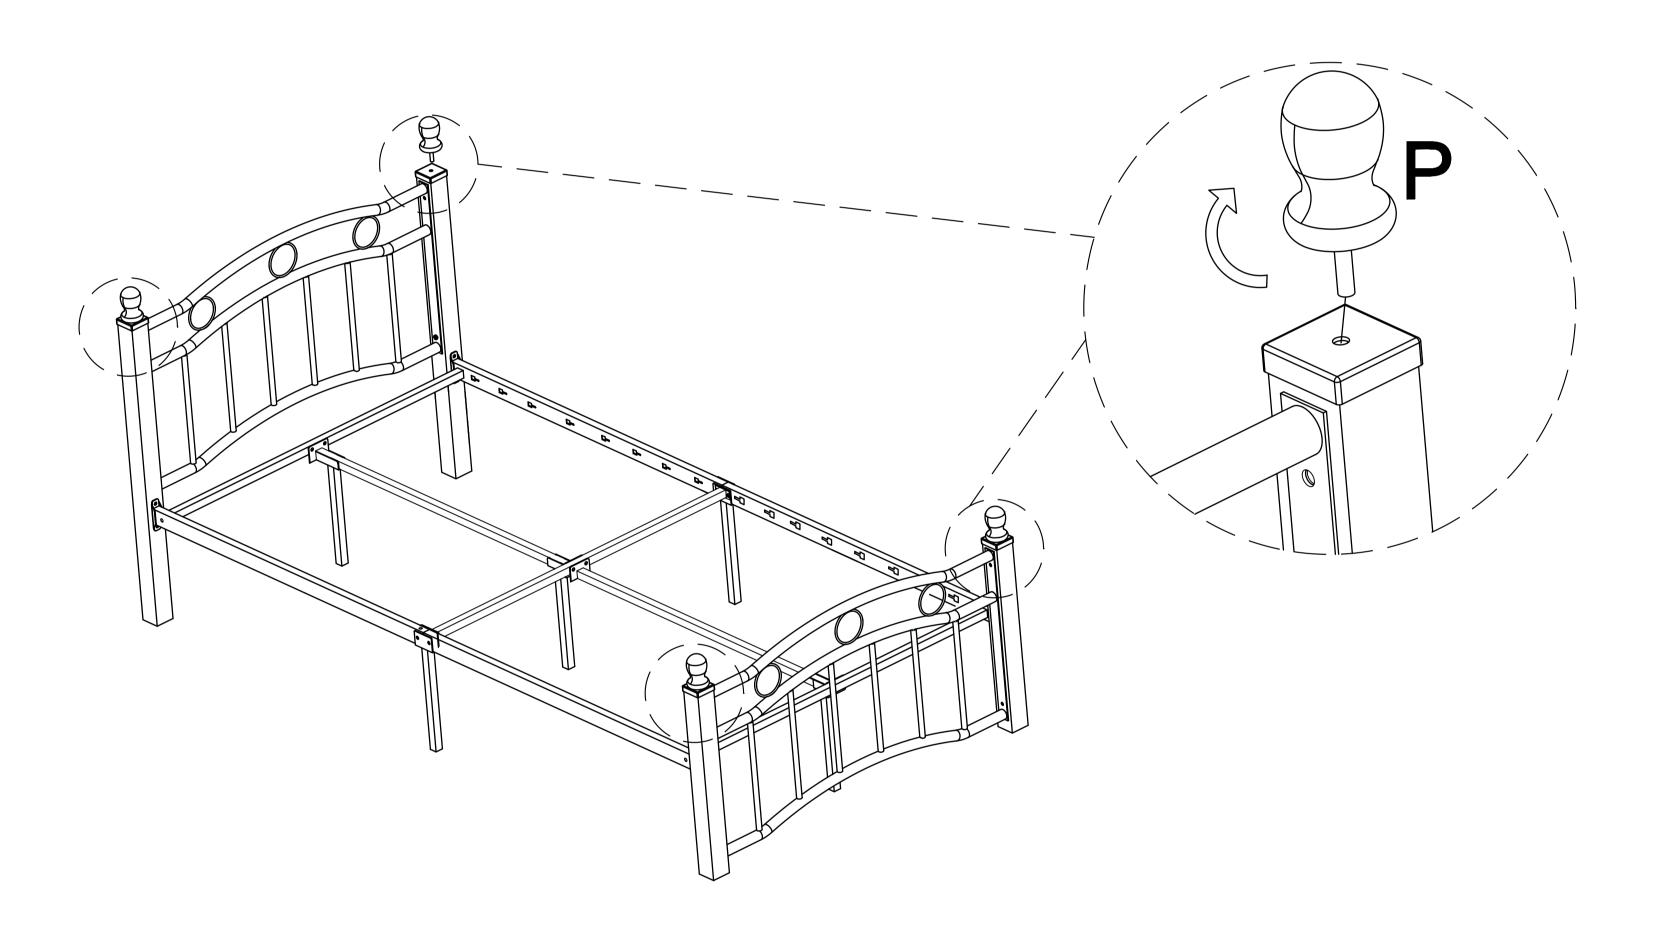

Attach the Slat(N) and the Slat Connector(O) to the rail, then tighten it.

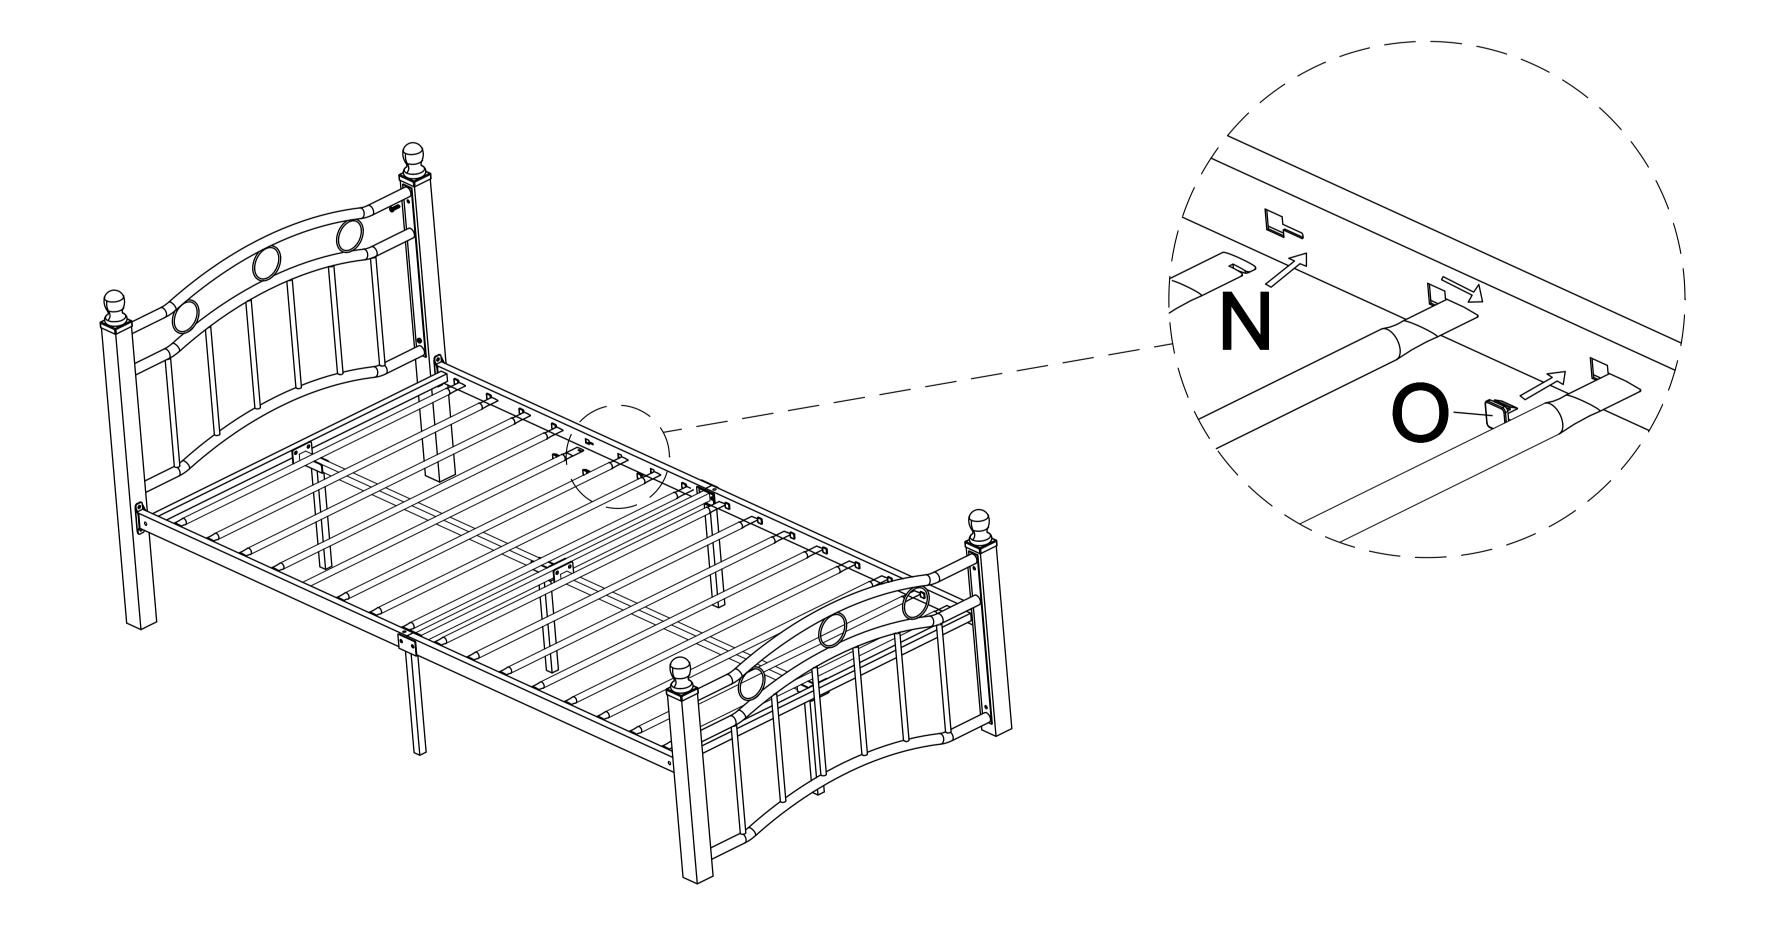

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratchresistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.