

Model: _____
Lot No: _____
Date of Purchased: _____

QUALITY GUARANTEE

We thank you for the purchase of your new Wood Based Convertible, we are confident you will be pleased with the quality and style of your new furniture.

Should this product be defective in materials or workmanship or fail under normal residential use, we will repair or replace it for up to one year from the date of purchase.

Manufacturer: _____
Model: _____
Date of Manufacture: _____
Made in China



This instruction booklet contains **IMPORTANT** Safety Information.
Please read and keep for future reference.


WARNING: This Product contains Small Components - Please ensure they are kept away from small children.

BED

FULL SIZE

Parts and Hardware

1. Headboard	1x	10. Bed Slats	24x
2. Side Rail	2x	11. Support Legs	2x
3. Footboard	1x	12. Center Plastic Connector	12x
4. Center Support Rail	1x	13. End Cap	24x
5. Leg	4x	14. Screw	4x
6. Screw (M8 x 30mm)	12x	15. Wrench	1x
7. Screw (M8 x 30mm)	4x	16. Screw (M8 x 50mm)	8x
8. Spring Washer	8x	17. Allen Key	1x
9. Washer	8x		

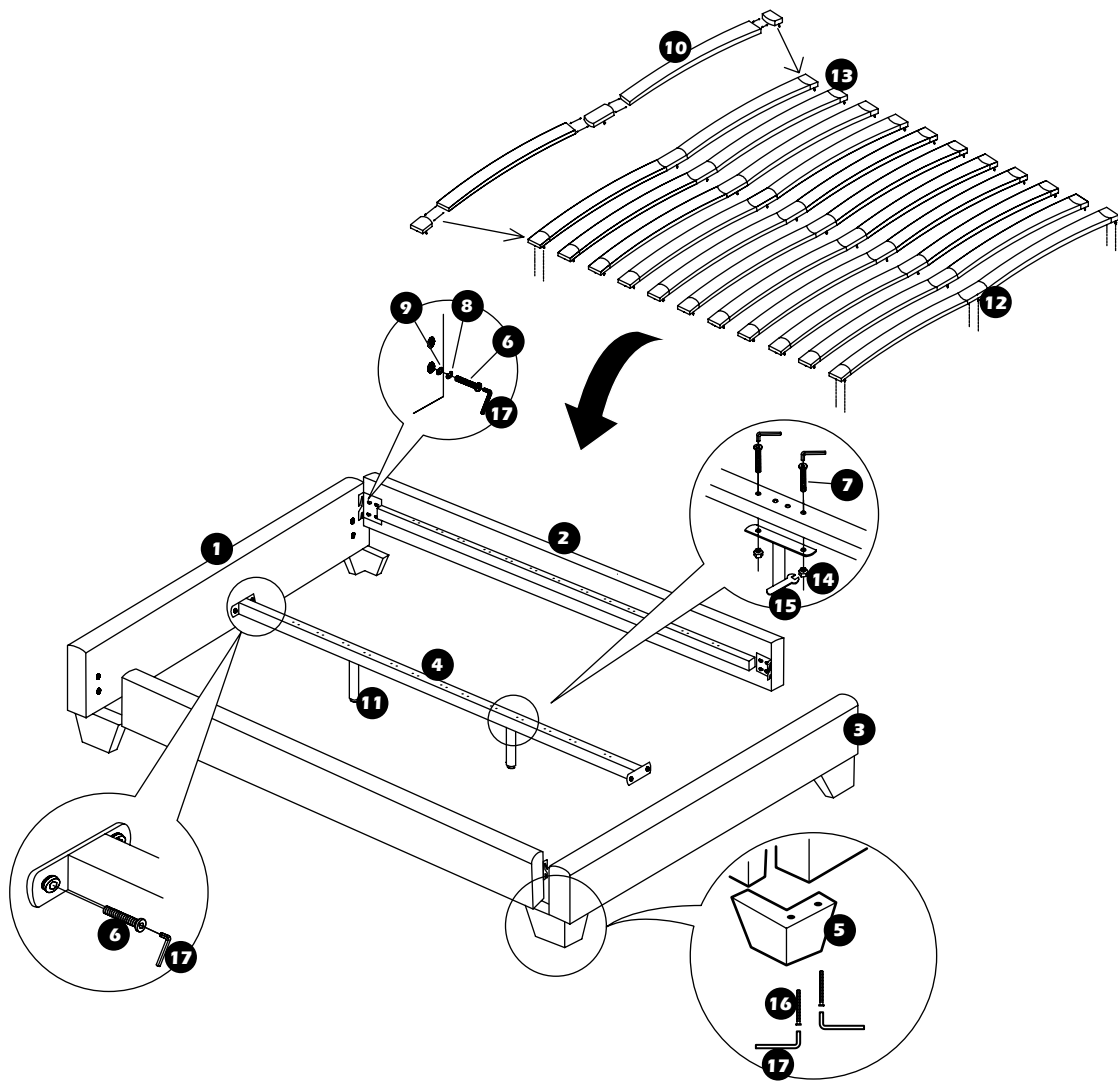

Assembly Instructions

- 1- Please unpack all components and check quantity against list above
- 2- Arrange components as shown in main diagram
- 3- Position the Headboard and Footboard as shown
- 4- Attach side rails into the Headboard and Footboard using two bolts on each end and on each side
- 5- Attach the center leg to the center rail using supplied bolts
- 6- attach the center rail to the headboard and footboard using supplied bolts
- 7- Please attach center plastic connectors to the metal center rail
- 8- Please place the bent wood slats into the center plastic connector and then attach the plastic end cap to the other end of the slat.
- 9- Firmly push the plastic end cap into the metal side rail
- 10- Continue Steps 8-9 until all slats are completed.