



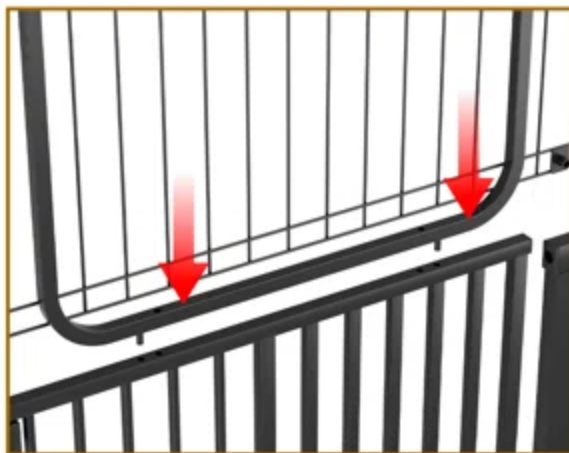

1. Insert pins for placement

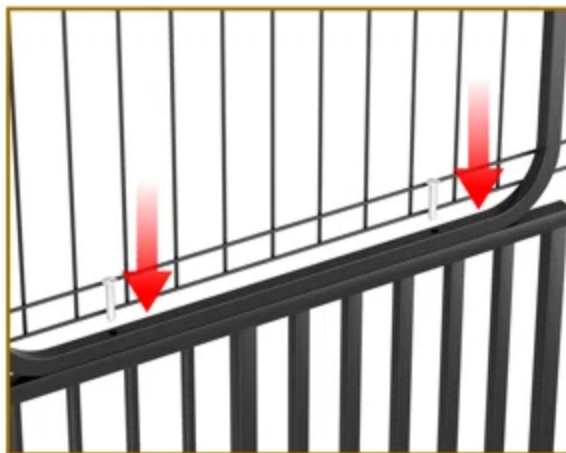

2. Tighten long screws to secure



3. Adjust width, attach side nets to main net



4. Secure with short screws and M5 nuts