


# ASSEMBLY INSTRUCTION

## Bench

Item NO.: FBC040101、 FBC040102、 FBC040103、 FBC040104、  
FBC040201、 FBC040202、 FBC040203、 FBC040204

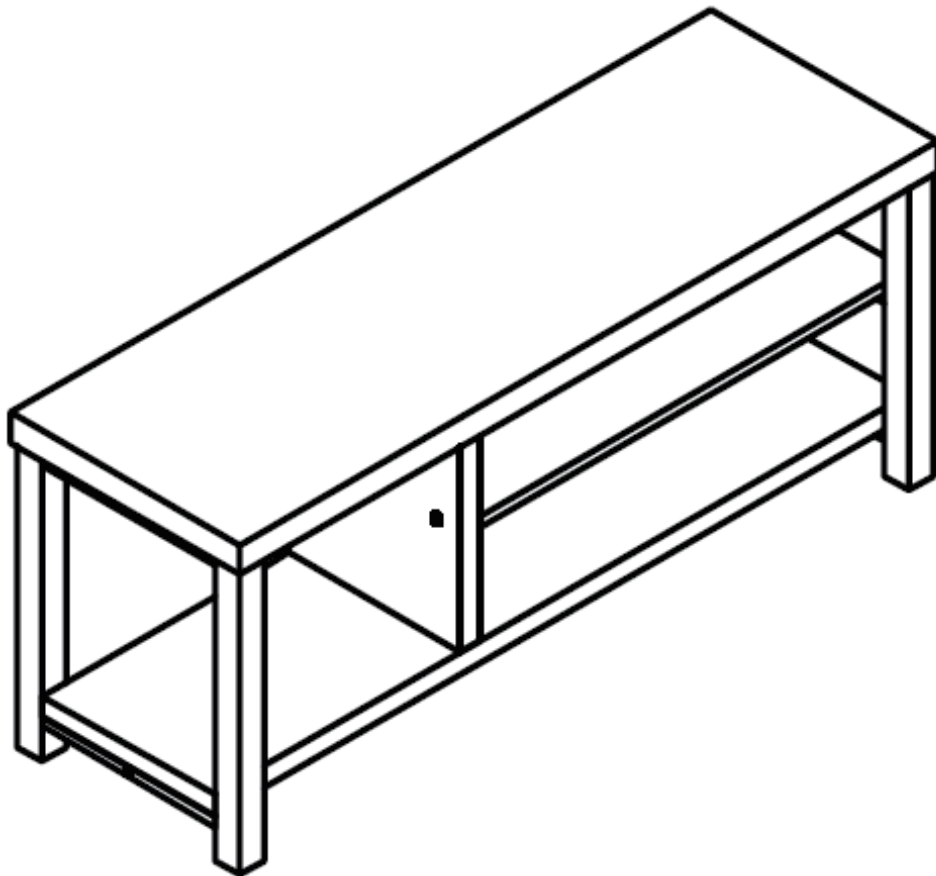

Version: F091124




Thank you for purchasing FOLUBAN shoe bench. If any part is missing or damaged, please do not hesitate to contact us, we will send you the replacement immediately.


**Email: [andy@foluban.com](mailto:andy@foluban.com)**

## ASSEMBLY TIPS

1. Please read the assembly instructions first and become familiar with the parts.
2. Proper assembly of this item requires 2 people.

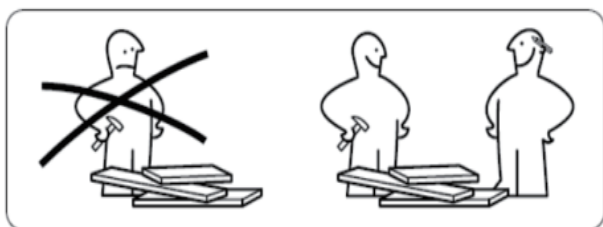

3. Unpack and assemble this unit in an spacious area, assemble the unit on top of the empty carton or carpet to prevent scratches.

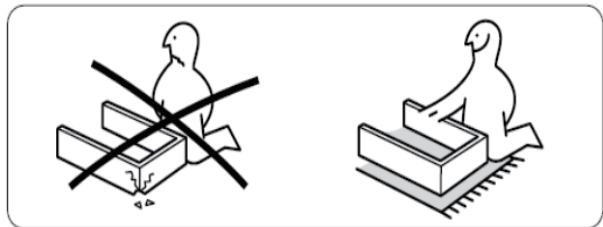



4. To avoid accidentally discarding small parts or hardware, DO NOT dispose of any contents until assembly is completed.
5. **Do not fully tighten all bolts until all parts are in place.** Failure to follow these instructions may cause the bolts to misalign during assembly.







## CARE INSTRUCTIONS

- (1) Hardware may loosen overtime. Periodically check that all connections are tight.
- (2) Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.
- (3) All hot serving dishes should be placed on a pad.
- (4) Any liquid spilled onto the furniture should be cleaned up immediately with a dry cloth.

# Part Identification

While not all parts are labeled, some of the parts will have a label to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

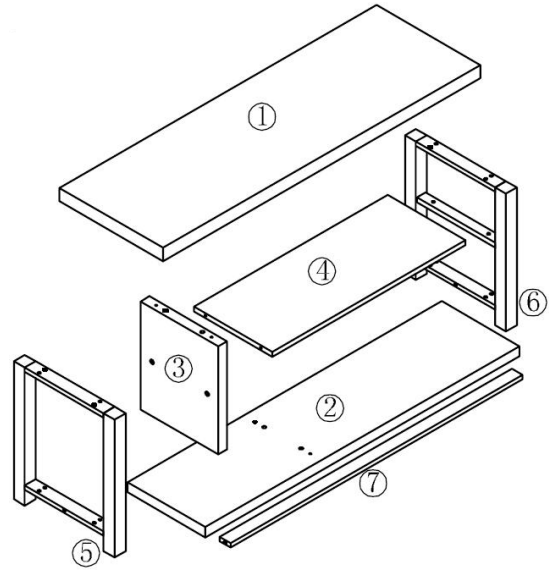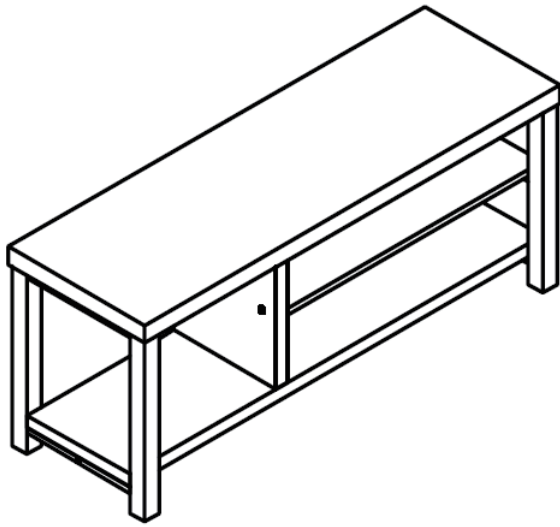
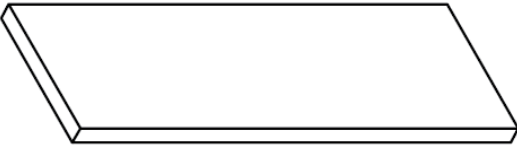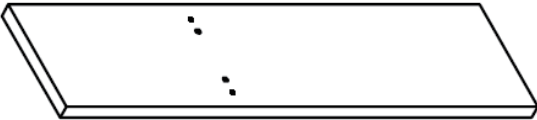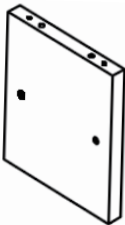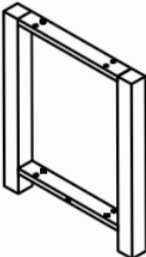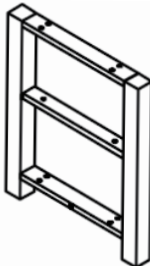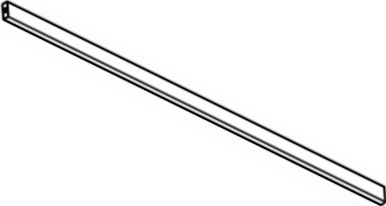
|                                                                                                                                                         |                                                                                                                                                         |                                                                                                                                                          |                                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>①</div> <div></div> <div>Top Panel    1 pc</div>                  | <div>②</div> <div></div> <div>Bottom Panel    1 pc</div>             | <div>③</div> <div></div> <div>Vertical Panel    1 pc</div>           |                                                                                                                                                        |
| <div>④</div> <div></div> <div>Mid Panel    1 pc</div>                 | <div>⑤</div> <div></div> <div>Left Side Leg<br/>1 pc</div>           | <div>⑥</div> <div></div> <div>Right Side Leg<br/>1 pc</div>          | <div>⑦</div> <div></div> <div>Support Rod<br/>1 pc</div>          |
| <div>A</div> <div></div> <div>Short Bolt<br/>M6*25mm    18 pcs</div> | <div>B</div> <div></div> <div>Long Bolt<br/>M6*60mm    2 pcs</div>   | <div>C</div> <div></div> <div>Screw<br/>Ø7*60mm    2 pcs</div>       | <div>D</div> <div></div> <div>Cam Bolt<br/>Ø6*43mm    4 pcs</div> |
| <div>E</div> <div></div> <div>Cam Lock<br/>Ø15*11.5mm    4 pcs</div> | <div>F</div> <div></div> <div>Wood Dowel<br/>Ø10*40mm    4 pcs</div> | <div>G</div> <div></div> <div>Screwdriver<br/>70*30*5mm    1 pc</div> | <div>H</div> <div></div> <div>Allen Key    1 pc</div>             |

# Hardware Usage Guide



## HOW TO USE A CAM BOLT & CAM LOCK.

1.



Cam Bolt

Clockwise rotate the CAM BOLT until the shoulder is against the surface of the board.

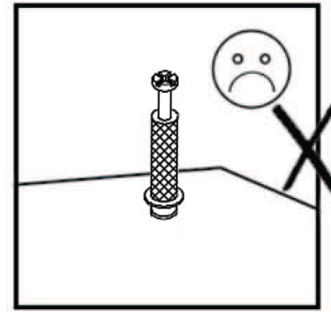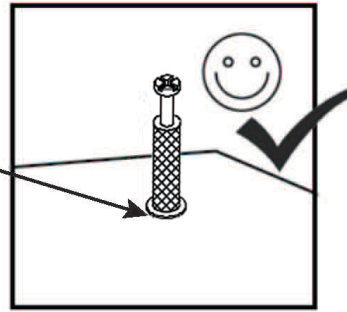


2.

Arrow



Cam Lock

Push a CAM LOCK into the board. The arrow in the CAM LOCK must point toward the hole in the edge of the board.

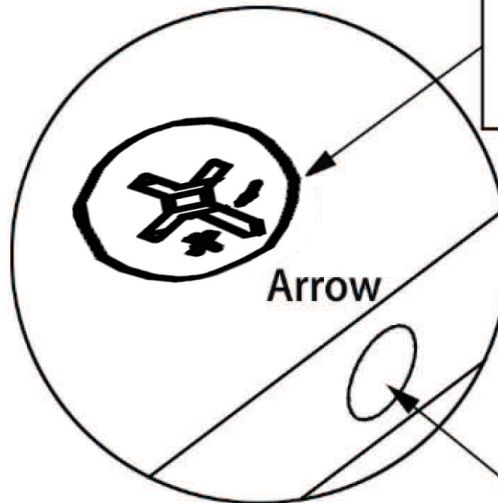


Arrow

Hole


3.

Insert the CAM BOLT into the CAM LOCK.  
Clockwise rotate to tighten the CAM LOCK.

1

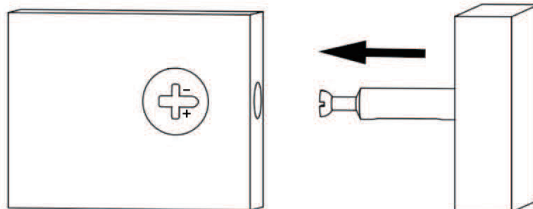


2

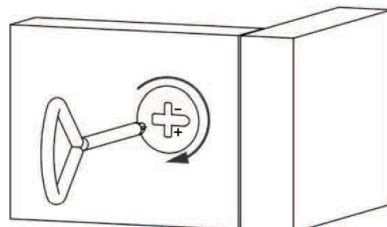

# Step 01

NOTE: DO NOT fully tighten all bolts at this step.  
Product support email: andy@foluban.com


- 1 Lay the Left Side Leg(⑤) parallel to Right Side Leg(⑥) on a clean smooth surface such as carpet or cardboard. Attach the Support Rods(⑦) to 2 Metal Legs(⑤)(⑥) with Long Bolts(B) by Allen key(H). Do not fully tighten all bolts until all parts are in place.

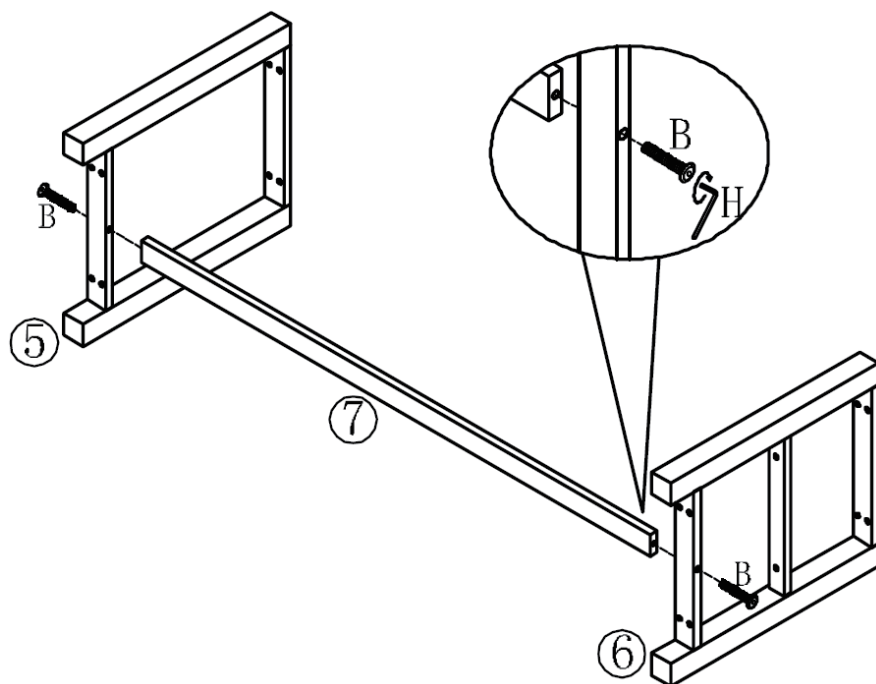

# Step 02

Product support email: andy@foluban.com



- 2.1 Screw 2 Cam Bolts(D) into the holes on Top Panel(①) and 2 Cam Bolts(D) into the holes on Bottom Panel(②) by Screwdriver(G) as shown. The Cam Bolts(D) must be fully tightened.
- 2.2 Attach and align the Bottom Panel(②) to the assembled part with Short Bolts(A) by Allen key(H). Do not fully tighten all bolts until all parts are in place.

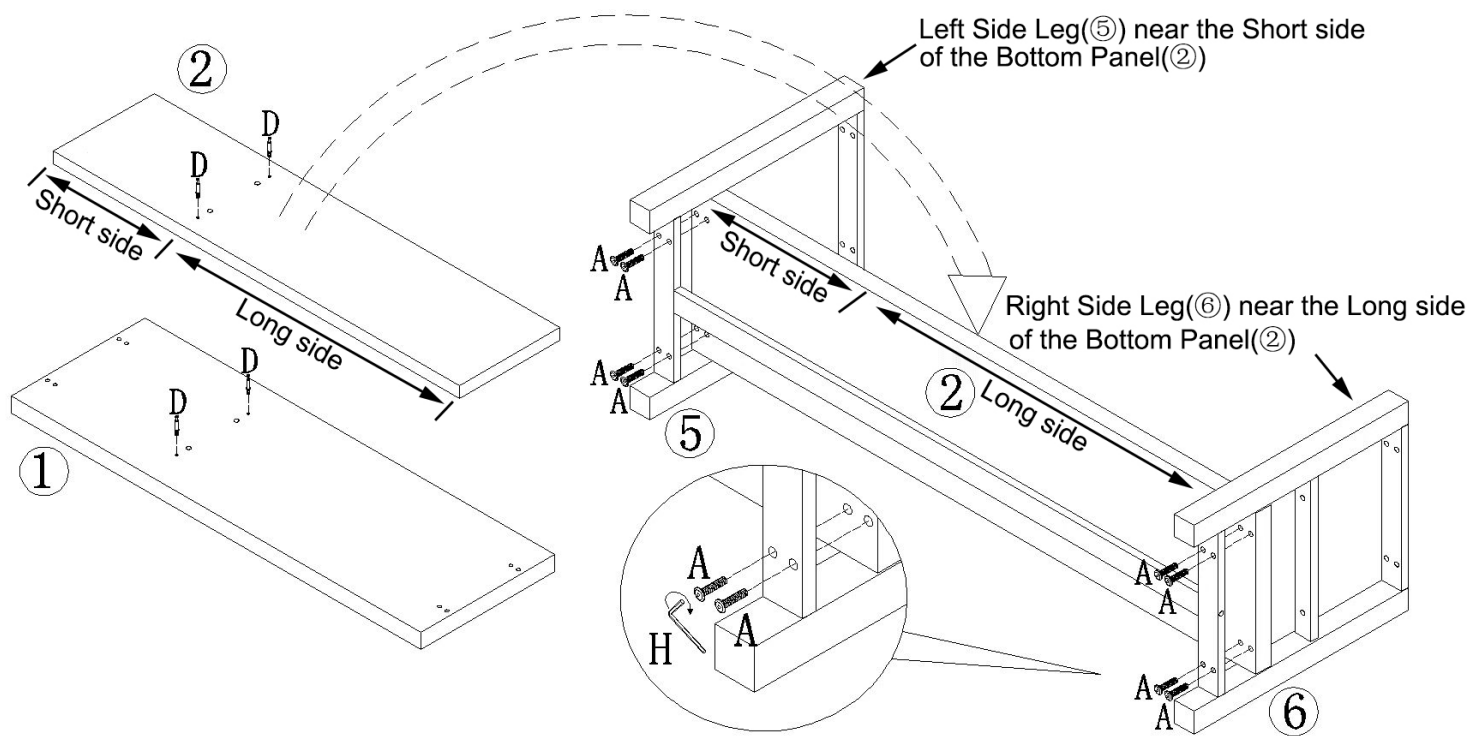

# Step 03

Product support email: [andy@foluban.com](mailto:andy@foluban.com)


- 3.1 Insert 2 Wood Dowels(F) into the Bottom Panel(②), attach and align the Vertical Panel(③) to the Bottom Panel(②). Make sure Wood Dowels(F) and Cam Bolts(D) on the Bottom Panel(②) are inserted into Vertical Panel(③).
- 3.2 Insert 2 Cam Locks(E) into the Vertical Panel(③), make sure the arrow on Cam Lock points to Cam Bolt(D), and then tightly fasten by turning Screwdriver(G) clockwise.

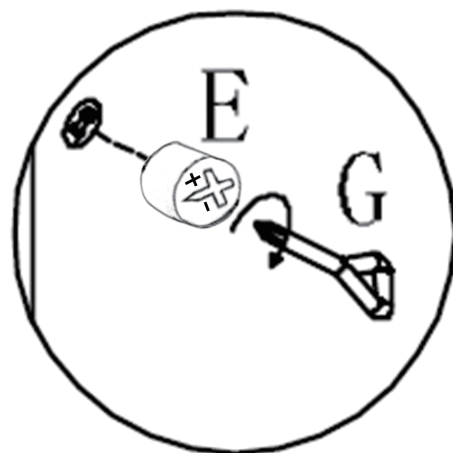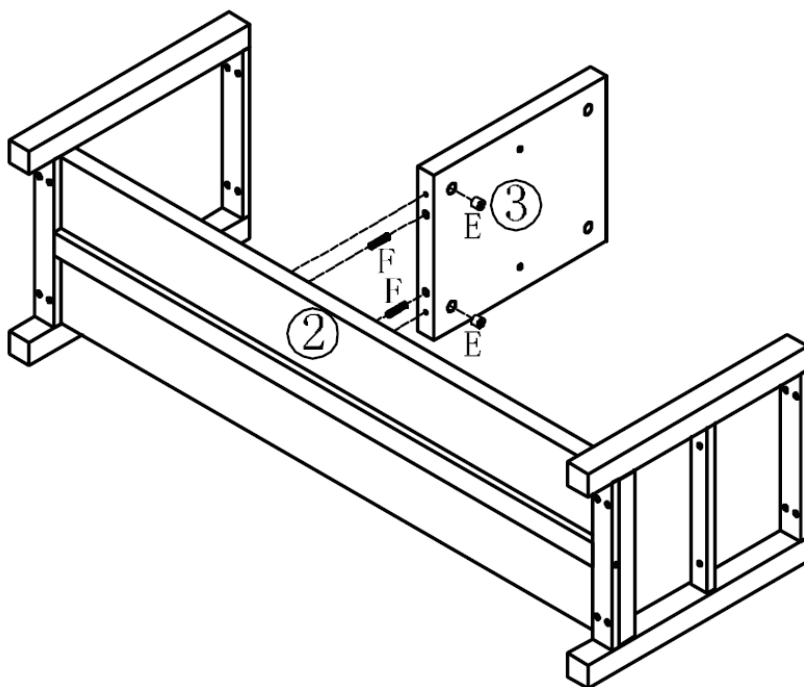

# Step 04

Product support email: [andy@foluban.com](mailto:andy@foluban.com)

- Attach and align the Mid Panel(④) to the Vertical Panel(③) and Right Side Leg(⑥) with Screws(C) and Short Bolts(A) by Allen Key(H). Do not fully tighten all bolts until all parts are in place.

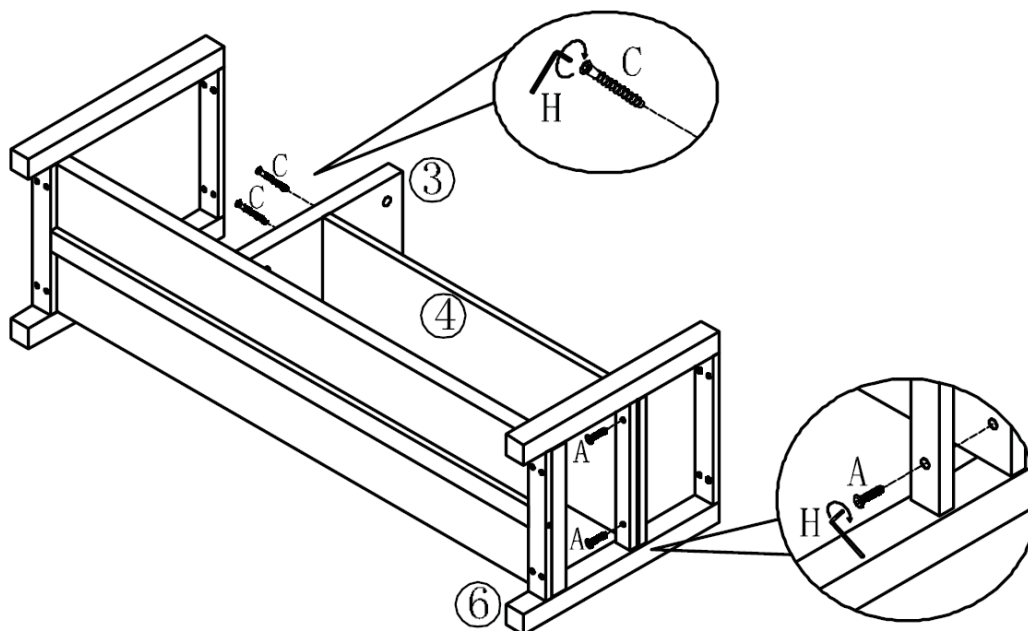




# Step 05

NOTE: If holes don't align, loosen all bolts and adjust the holes slightly. After all holes are aligned, fully tighten all bolts.

- 5.1 Insert 2 Wood Dowels(F) into the Top Panel(①), attach and align the Top Panel(①) to the assembled part as shown. Make sure Wood Dowels(F) and Cam Bolts(D) on the Top Panel(①) are inserted into Vertical Panel(③).
- 5.2 Insert 2 Cam Locks(E) into the Vertical Panel(③), make sure the arrow on Cam Lock points to Cam Bolt(D), and then tightly fasten by turning Screwdriver(G) clockwise.
- 5.3 Connect and fasten Top Panel(①) to Left Side Leg(⑤) and Right Side Leg(⑥) with 8 Short Bolts(A) by Allen Key(H).

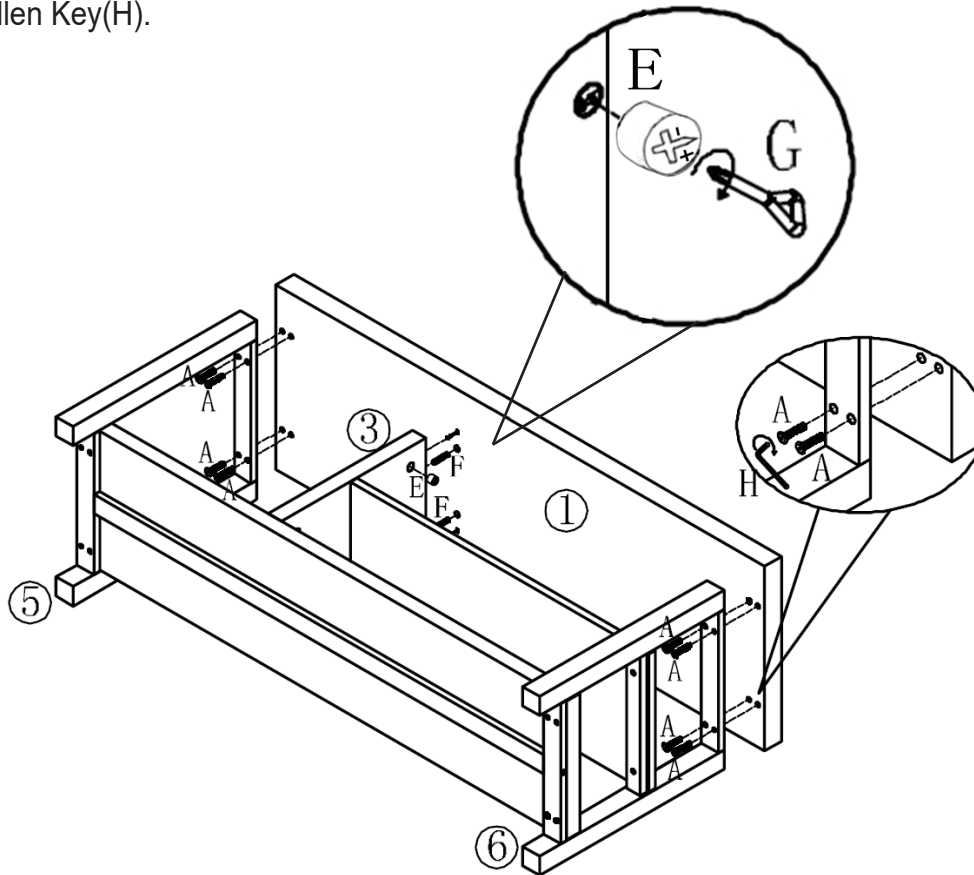

# Step 06

Product support email: [andy@foluban.com](mailto:andy@foluban.com)

- Fully tighten all bolts. And this completes assembly.

