

Installation of ALEKO® Windows Awning

step1: Identify all parts from the parts list above. Install the head rod clamps, spacing evenly starting 6" from each end of window.

step5: Attach the head rod into the head rod clamps and tighten the wing nuts. Install one pulley on the left head rod clamp hook, install two pulleys on each hook of the right head rod clamp (Install the two pulleys on the side you want the pull cord)

step8: Tie one end of the thread onto the left front bar of awning, thread through left side pulley, then over closest right side pulley and down to the cleat and back up to open right pulley, then tie end onto the right front bar, draw all slack in thread towards cleat and tie off. (Substitute left for right to operate from)

step6: Add the eye ends on ends of the arms, straighten the front bar, making sure the awning is level and screw the hinges into wall.


step7: Install the tie down cleat on the left hand side 4-6" below the awning (when facing the awning)

step4: Add the elbows to the end of front bar, slide the arms into the side sleeves and thread into the elbows

step2: Assemble the head rod and front bar by using the internal connectors.

step3: Slide both head rod and front bar into awning sleeves.

Finished plan

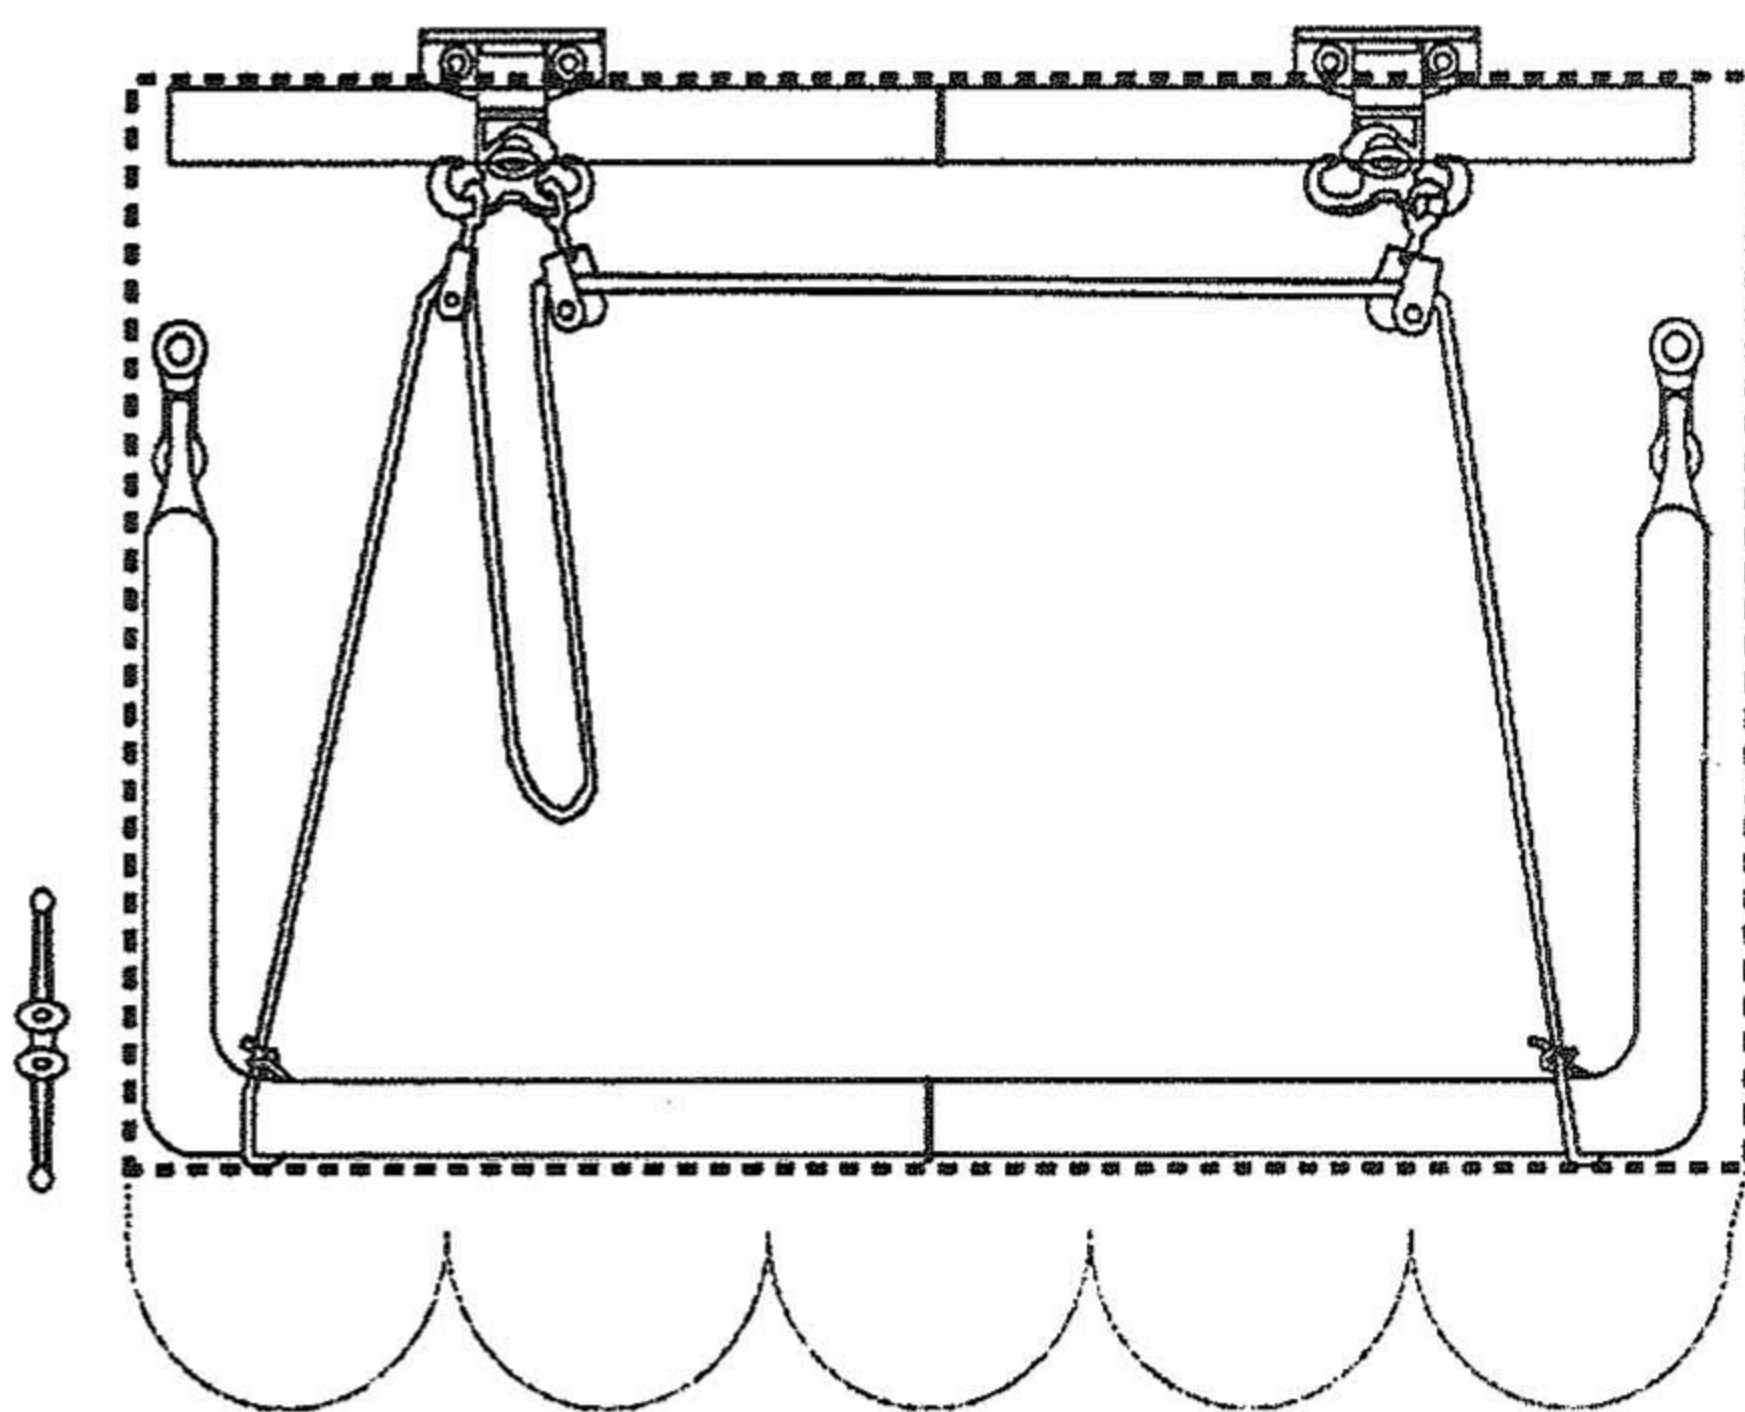

For more information, parts and accessories

www.AlekoProducts.com