

NOYO is easy as 1, 2, 3....


What you need: #2 Philips head screw driver

What is provided: 2-8 Allen Screws™, 1 Allen Key™, 4 Steel Wood Screws, 4 Toggle Bolts

1. Assemble Frame

Align frame modules to have NOYO logo below top dowel

Use Allen Screws™
To screw modules together

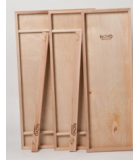

Frame can easily be disassembled for storage, transport or adding/removing modules to change head board size.

2. Mount Frame

Hardware for 2 types of wall mounting is provided:

- 3/16x4" Toggle bolts for drywall
- 3" Steel wood screws for wooden walls and/or screwing into 2x4 wooden studs



Find best place to place wall brackets above bed.


Remember that you can slide headboard horizontally into place.

Just make sure you level brackets above bed at desired height.

Mount wall brackets with hardware provided.



Pull pad and slipcover over head board.

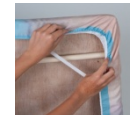

Hang head board onto wall brackets and slide horizontally into desired place.



3. Care for your head board

NOYO Cedar wood frame wipes off with a damp cloth

NOYO Pad:

- Hypoallergenic, all new material consisting of Cotton/Polyester fabric with 100% Polyester fill
- Machine wash, warm water, mild detergent
- Tumble dry, low heat, or line dry

NOYO Slipcover:

- Hypoallergenic, 100% Polyester, Water based ink
- Recommended wash before use: machine warm wash, gentle cycle with like colors, remove promptly.
- **No bleach**
- Tumble dry low or line dry
- Warm iron as needed