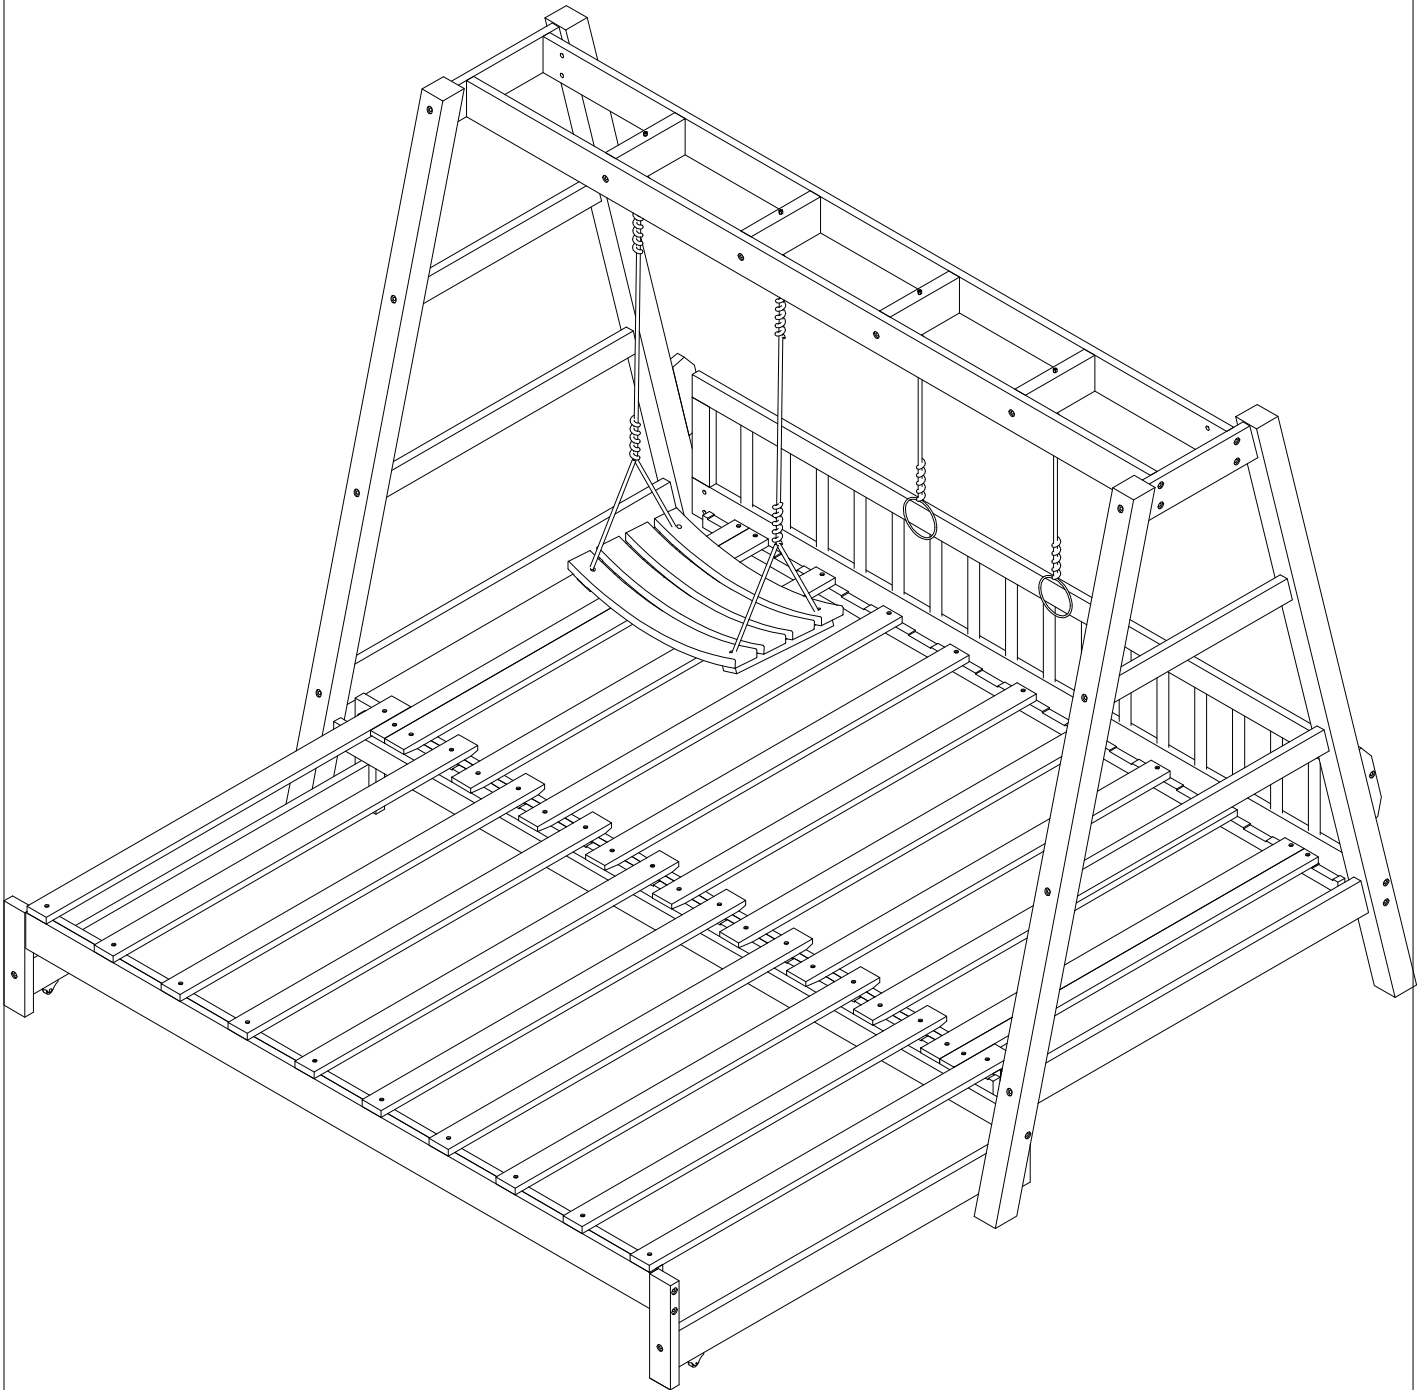



ASSEMBLY INSTRUCTION

SKU CODE: (WF303012-WF303013)


This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team



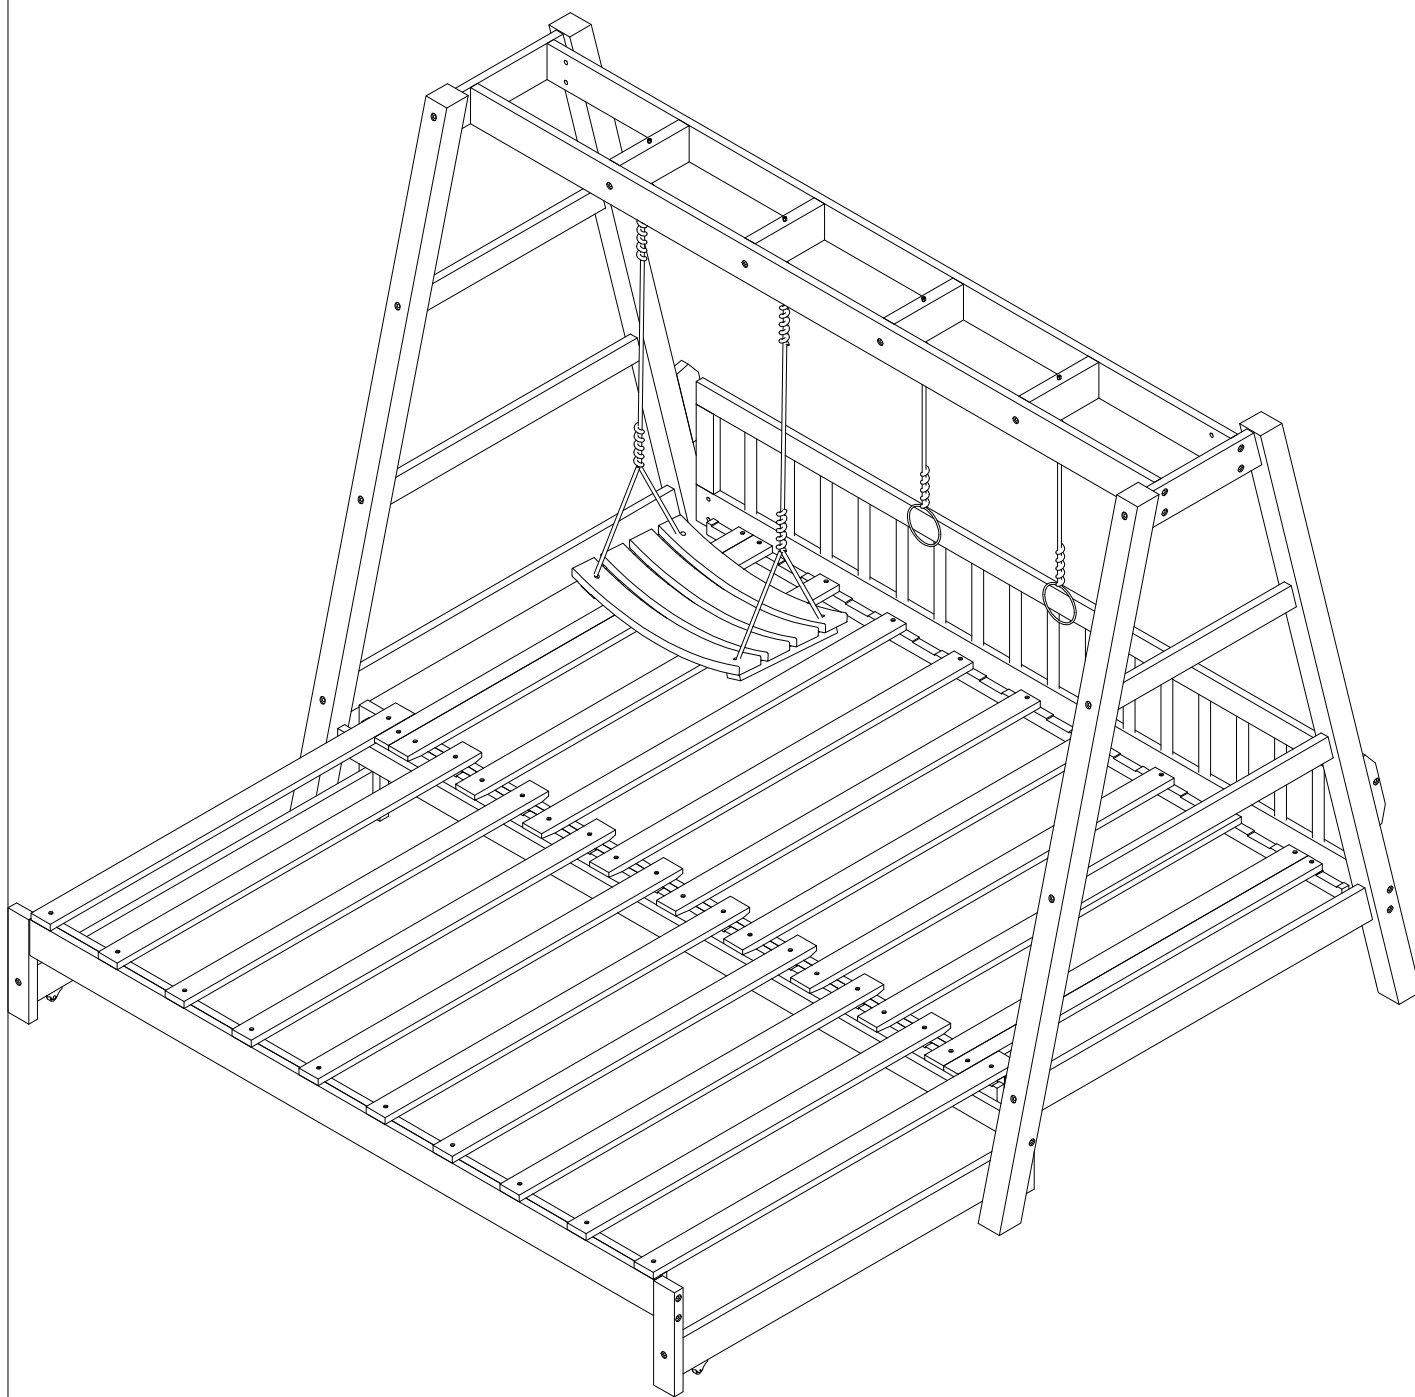
OPTION 1












OPTION 2

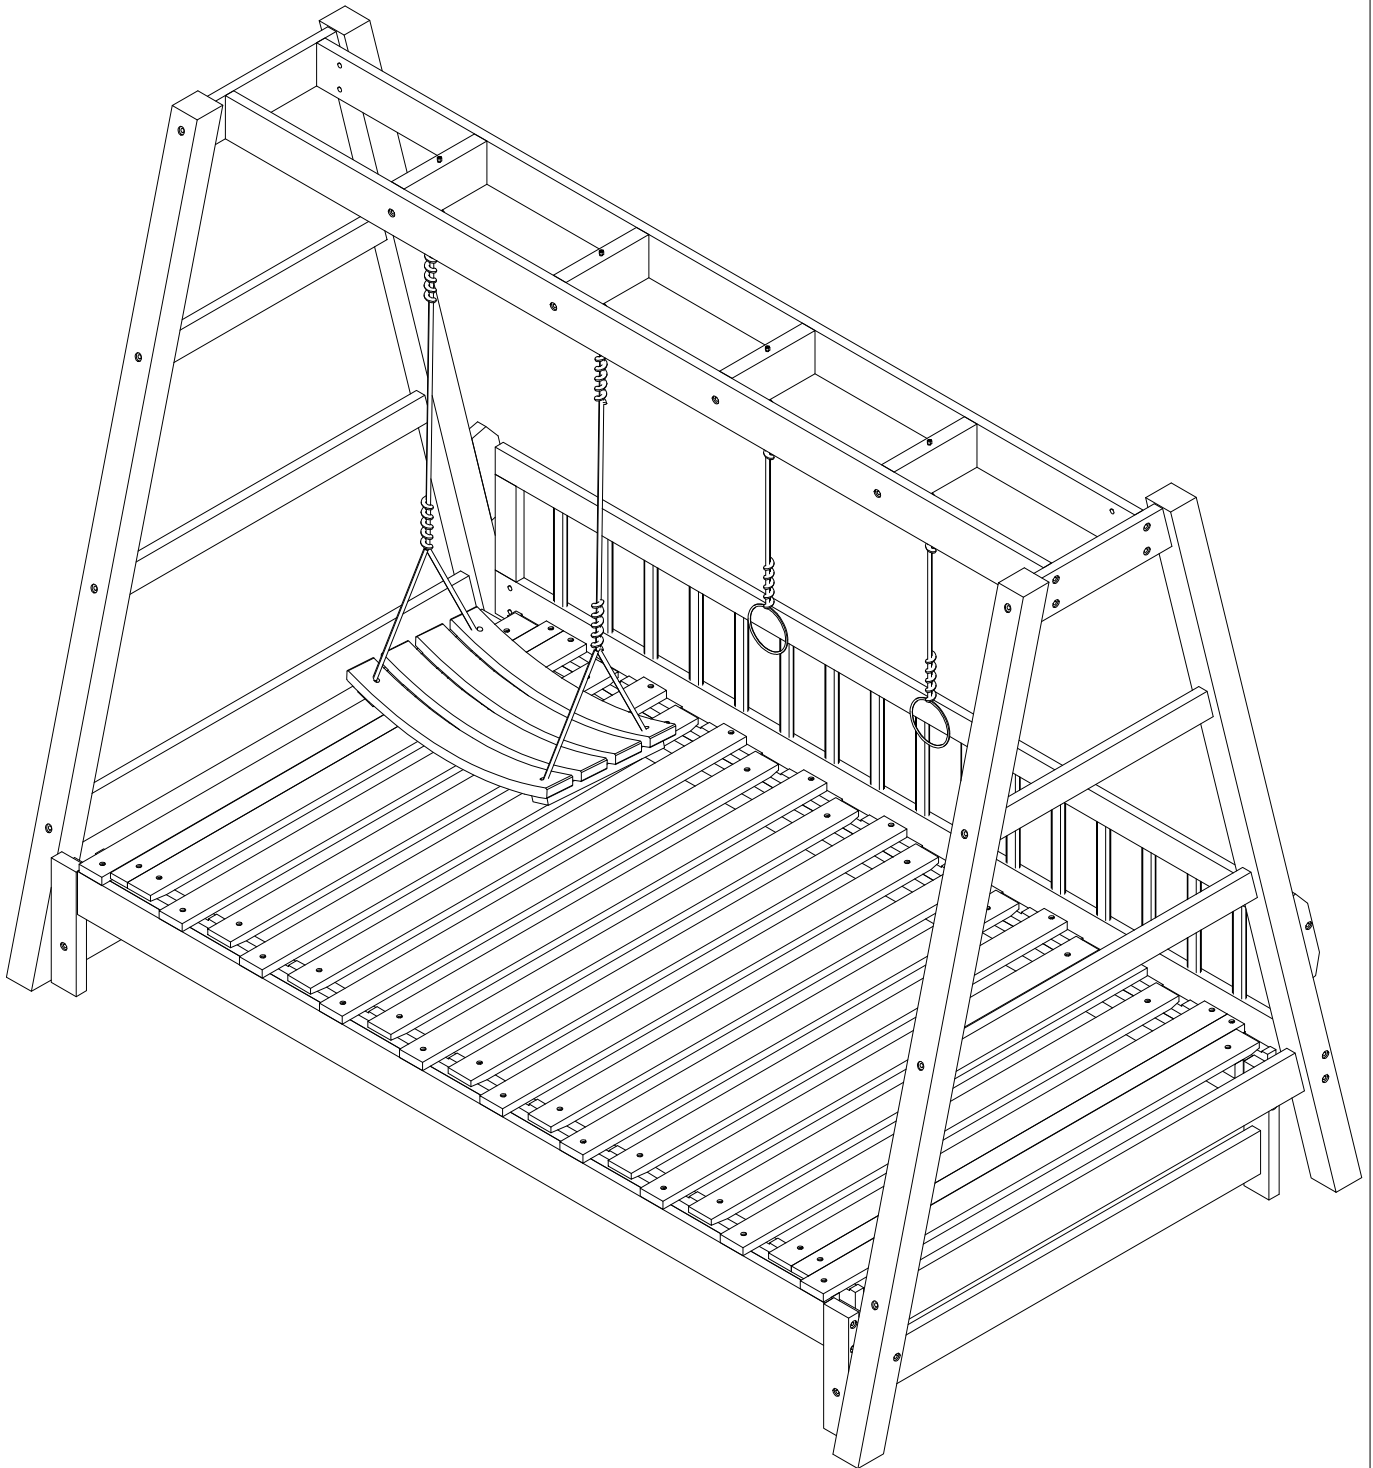










ASSEMBLY INSTRUCTION

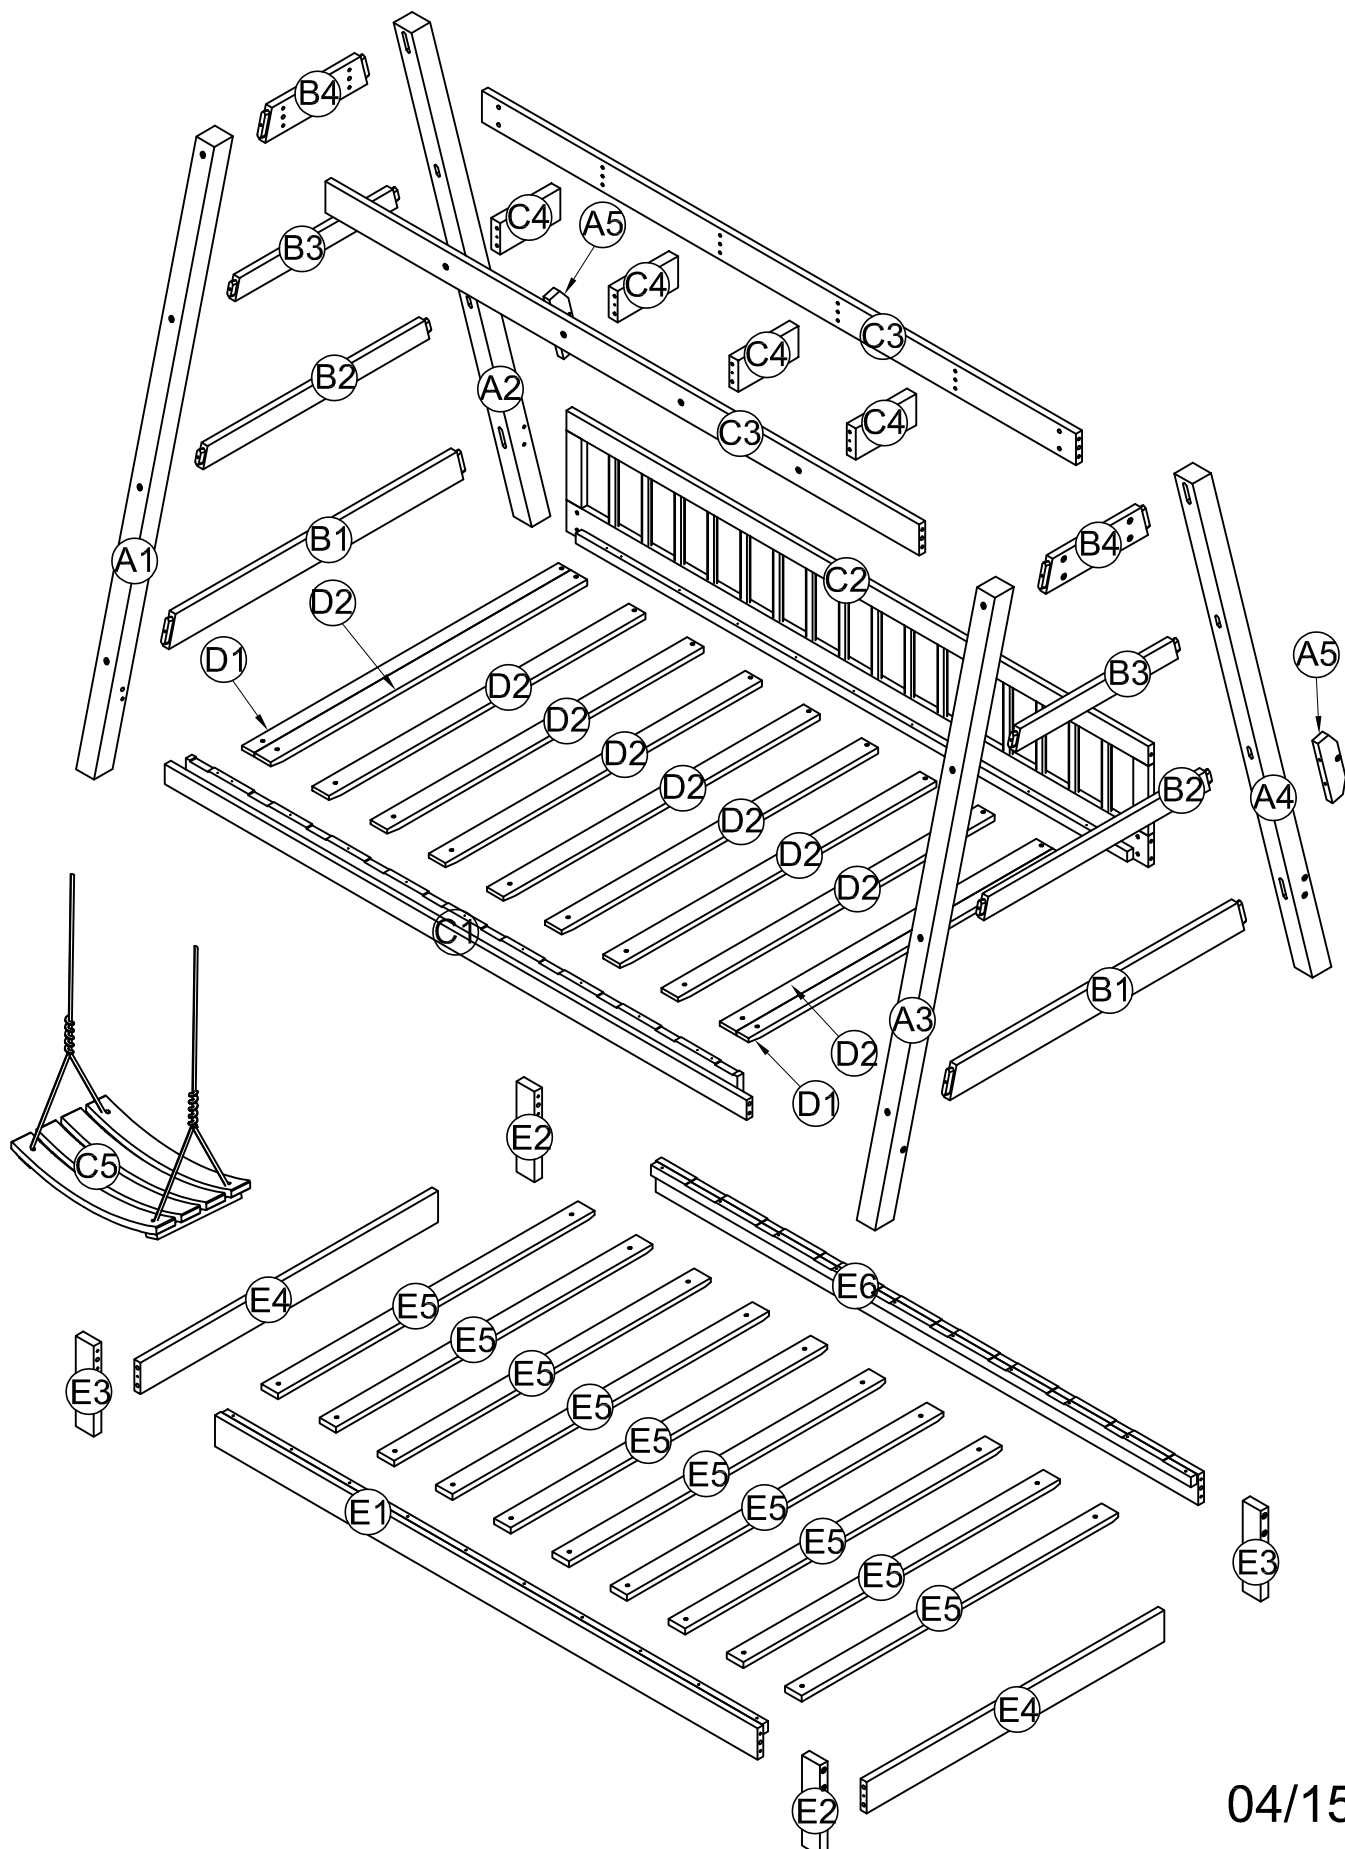






Part List (Box 1-WF303012)

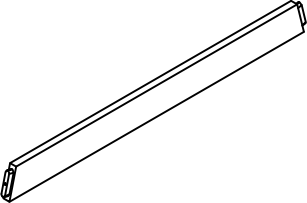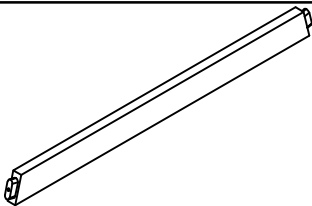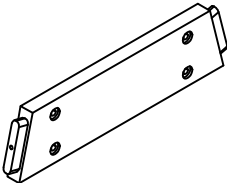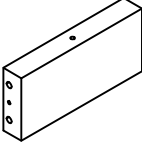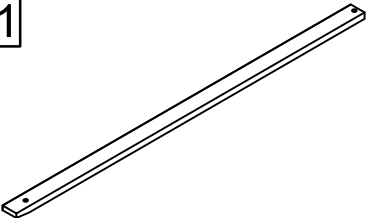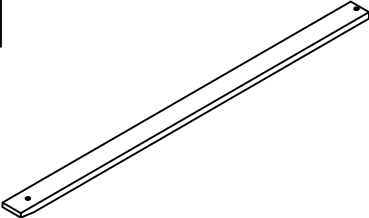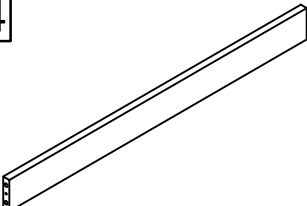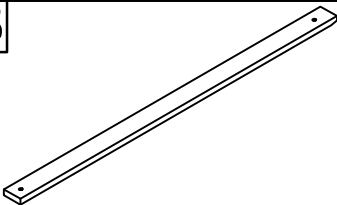
A5  Wood bars-2pcs	B1  Wood bars-2pcs	B2  Wood bars-2pcs
B4  Wood bars-2pcs	C4  Wood bars-4pcs	C5  Swing Frame-1pc
D1  Slats-2pcs	D2  Slats-9pcs	E2  Legs-2pcs
E3  Legs-2pcs	E4  Wood bars-2pcs	E5  Slats-10pcs

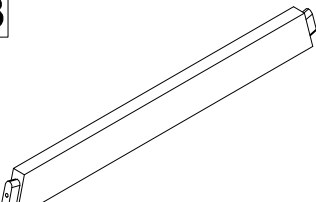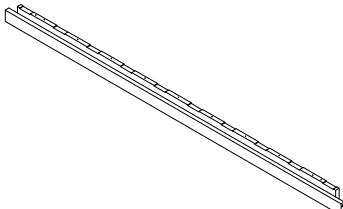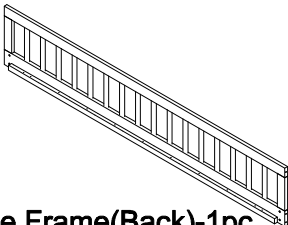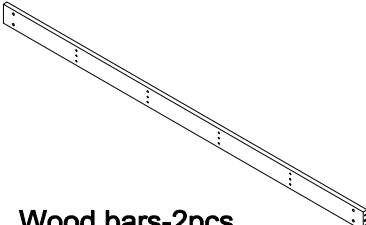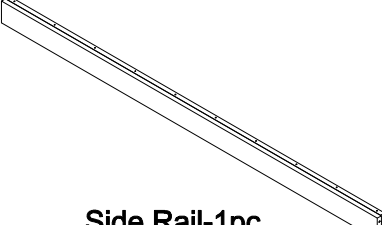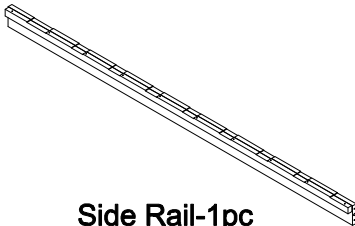Part List & Hardware List (Box 2-WF303013)

A1  Leg-1pc	A2  Leg-1pc	A3  Leg-1pc
A4  Leg-1pc	B3  Wood bars-2pcs	C1  Side Rail(Front)-1pc
C2  Side Frame(Back)-1pc	C3  Wood bars-2pcs	E1  Side Rail-1pc
E6  Side Rail-1pc		

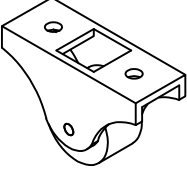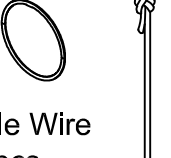Hardware List (Box 2-WF303013)


1	 Ø10 x 40 mm Wood dowel 38pcs	2	 Ø1/4" x 100 mm Hex-Head bolts 14pcs	3	 Ø1/4" x 13 mm Horizontal-Hole bolts 22pcs
4	 M4 x 15 mm Wood Screws 8pcs	5	 Wheels 4pcs	6	 Screws 1/4" x60 12pcs
7	 M4 x 30 mm Wood Screws 42pcs	8	 Screws 1/4" x80 16pcs	9	 Screws 1/4" x100 4pcs
10	 Nut 4pcs	11	 Cinch 4pcs	12	 Screws 1/4" x50 2pcs
13	 Ø1/4" x 60 mm Hex-Head bolts 8pcs	14	 Handle Wire 2pcs	15	 Allen Key 1pc
16	 Ø16 / Ø6 x 2 mm Washer 8pcs	17	 Circle 2pcs		



Assembly Tools Required (Not Included)


STEP 1: Following below illustration:

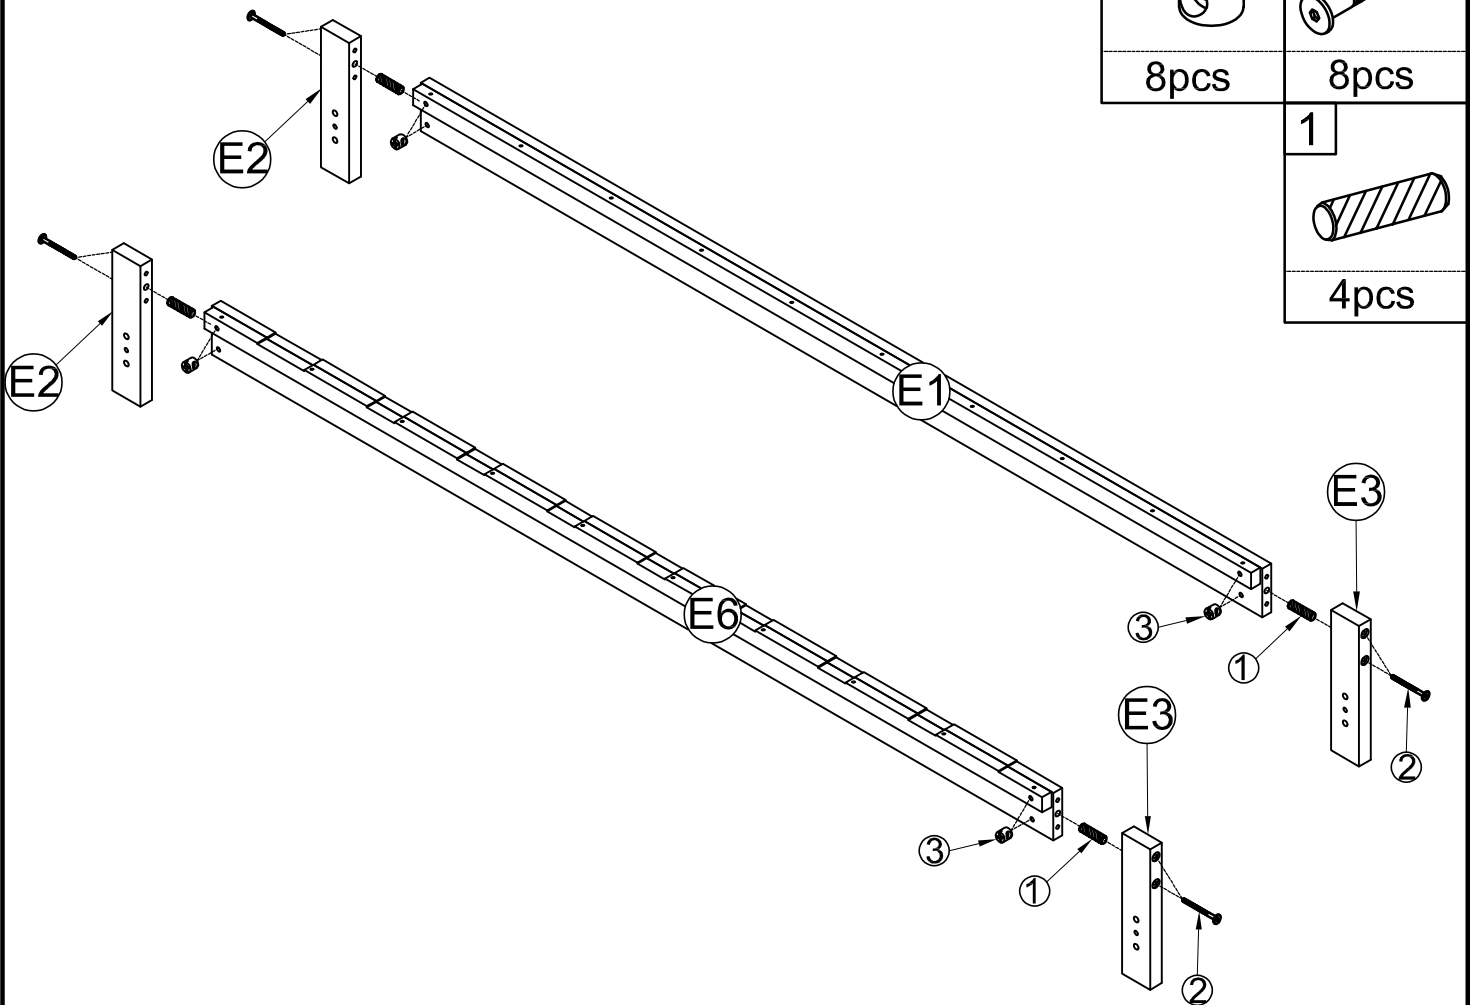- Using hardware #2,#3 and dowel #1 to Assembly E1 Side Rail with Legs E1,E2
- Look at detail view for more detail




STEP 2: Following below illustration:

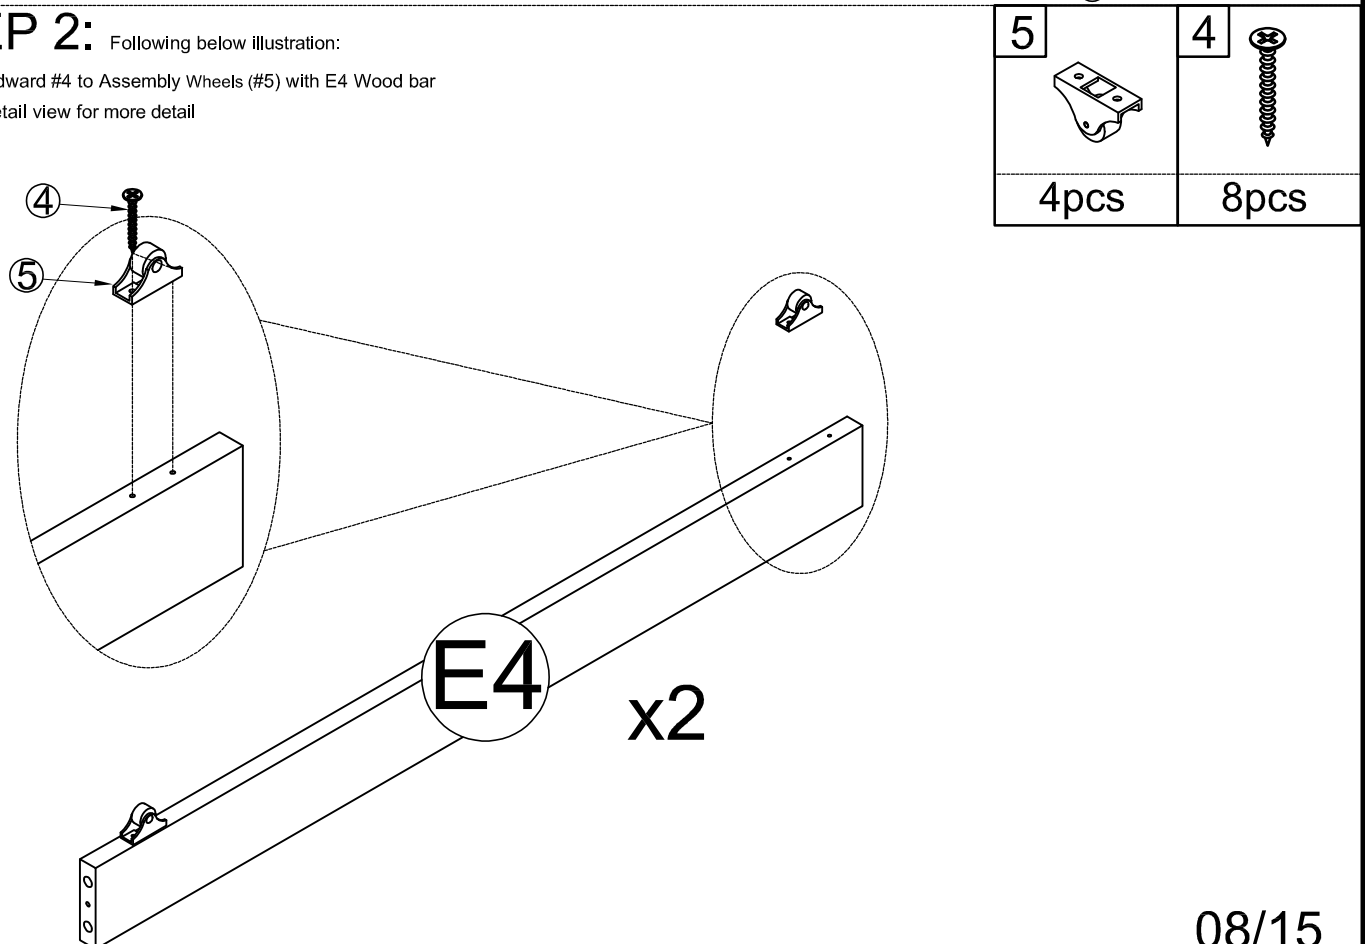- Using hardware #4 to Assembly Wheels (#5) with E4 Wood bar
- Look at detail view for more detail




STEP 3: Following below illustration:

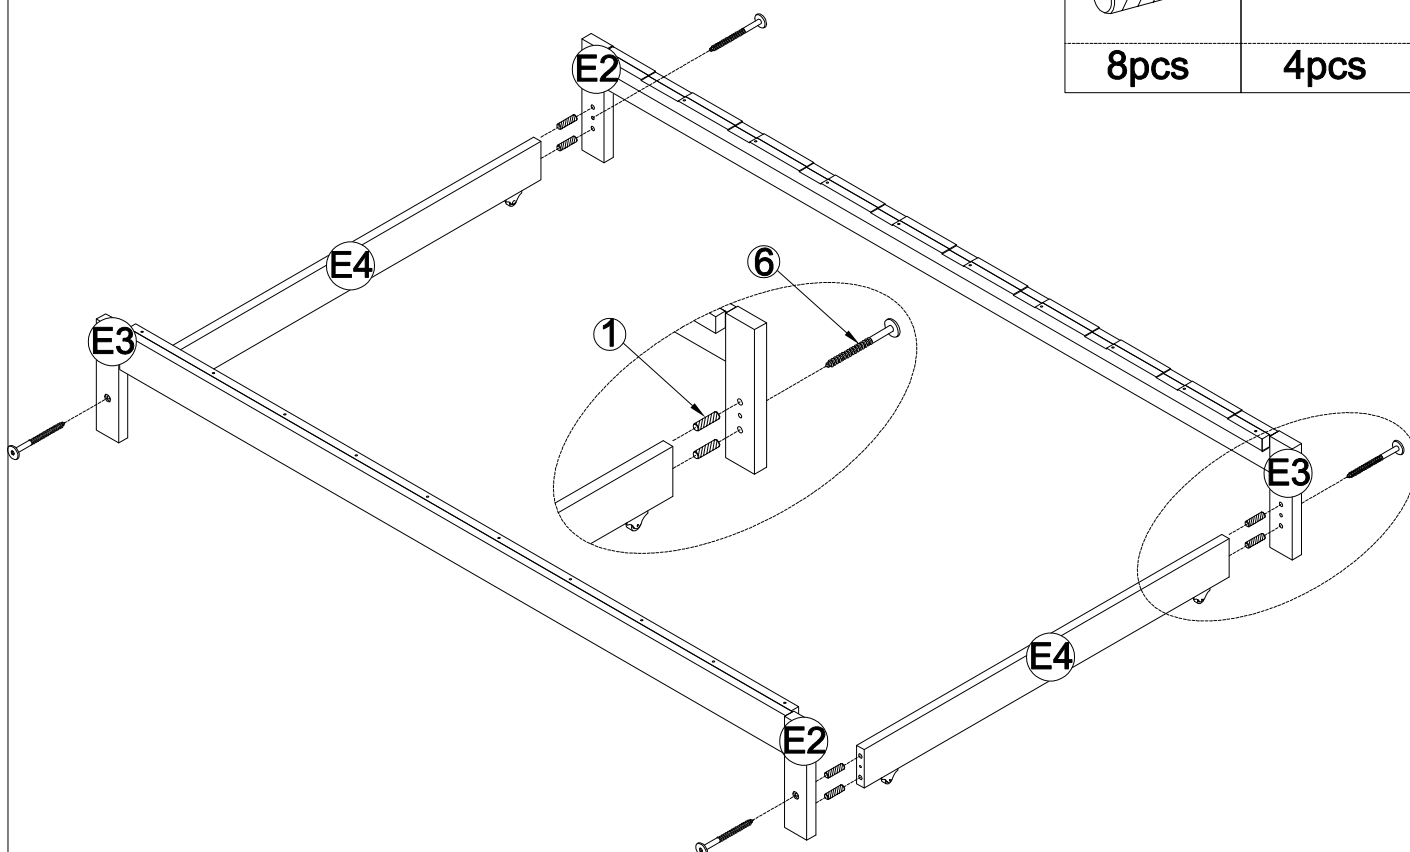- Using hardward #6 and dowel #1 to Assembly Frame(completed on step 1) with Frame(completed on step 2)
- Look at detail view for more detail



STEP 4: Following below illustration:

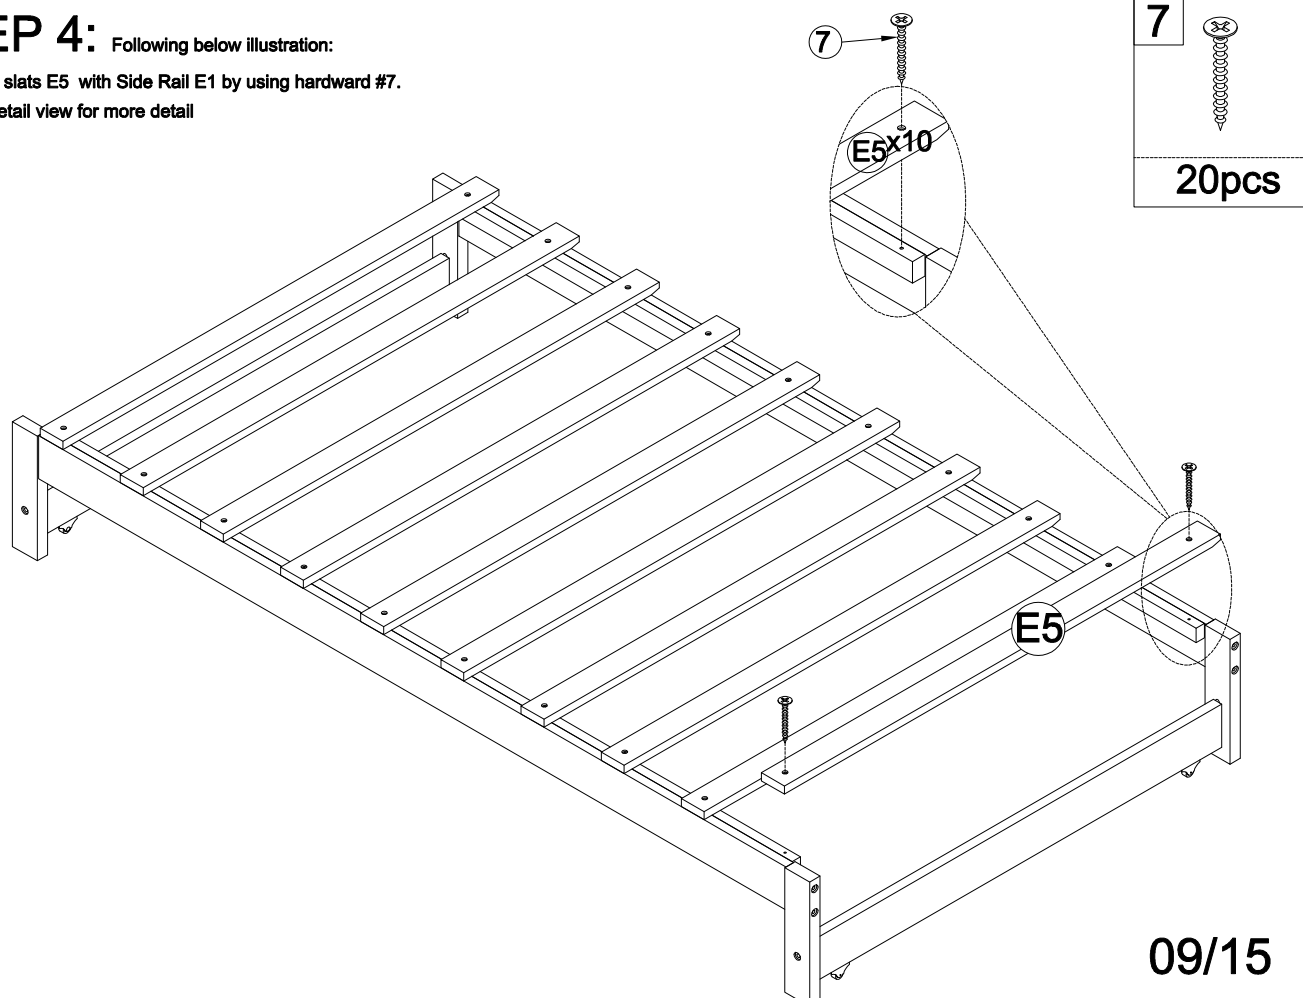- Screw 10 slats E5 with Side Rail E1 by using hardward #7.
- Look at detail view for more detail




STEP 5-1: Following below illustration:

8



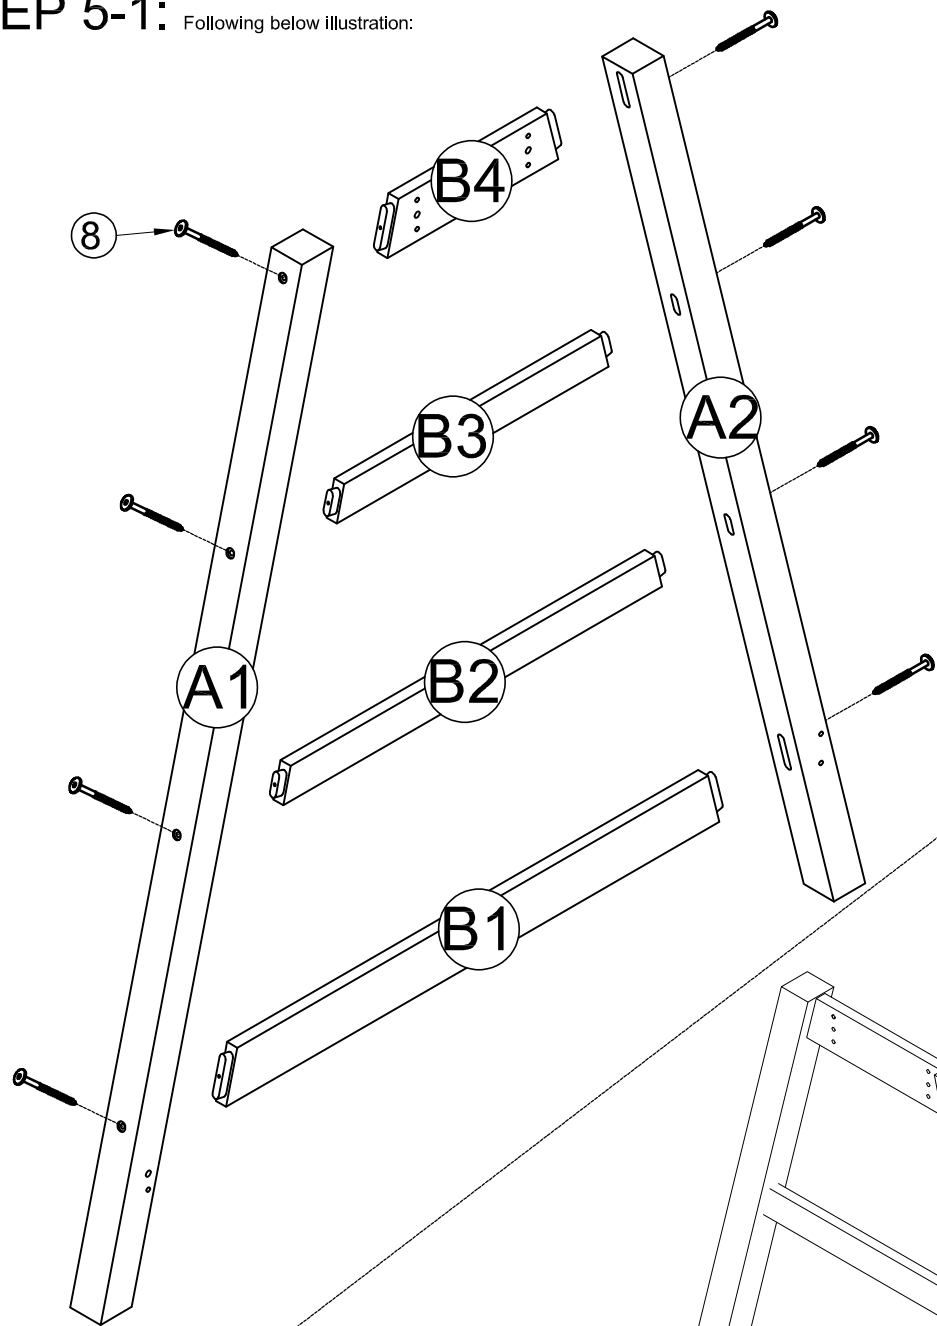8pcs




9



2pcs

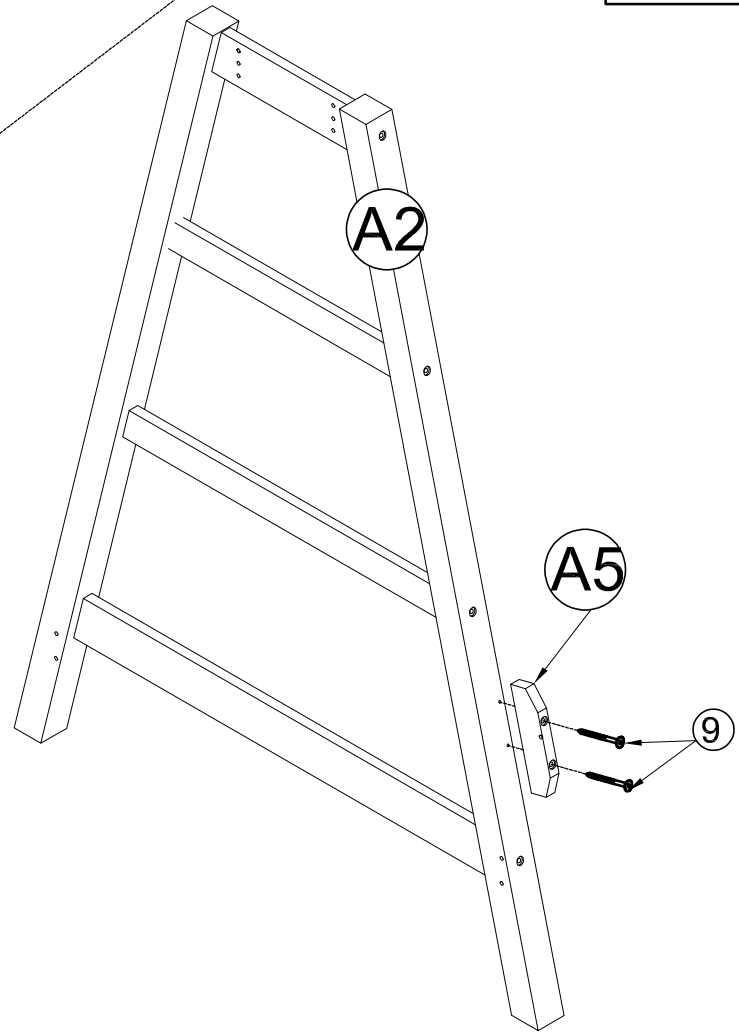STEP 5-2: Following below illustration:




STEP 6-1: Following below illustration:

8



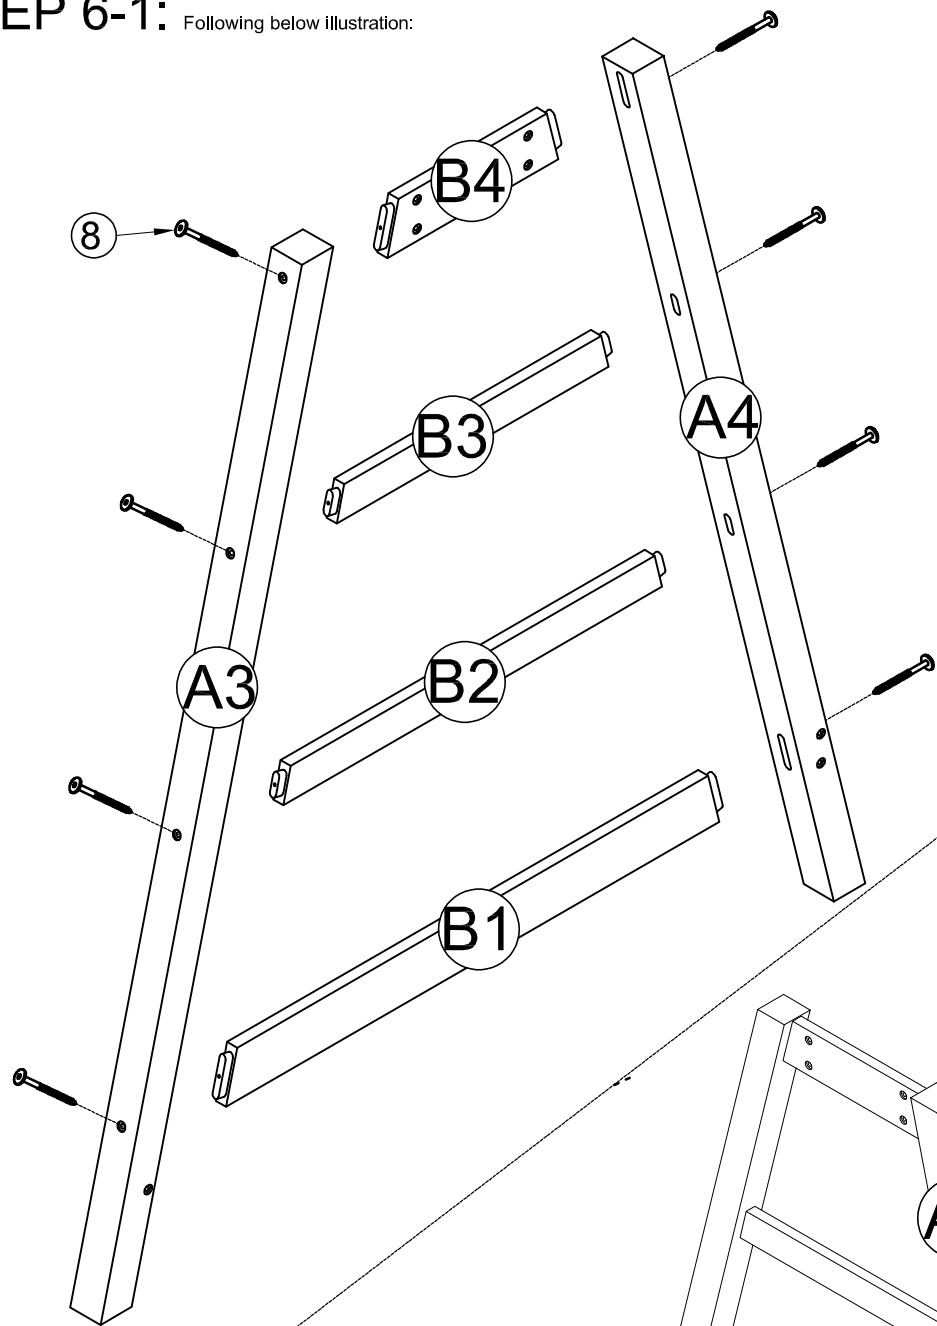8pcs




9






2pcs

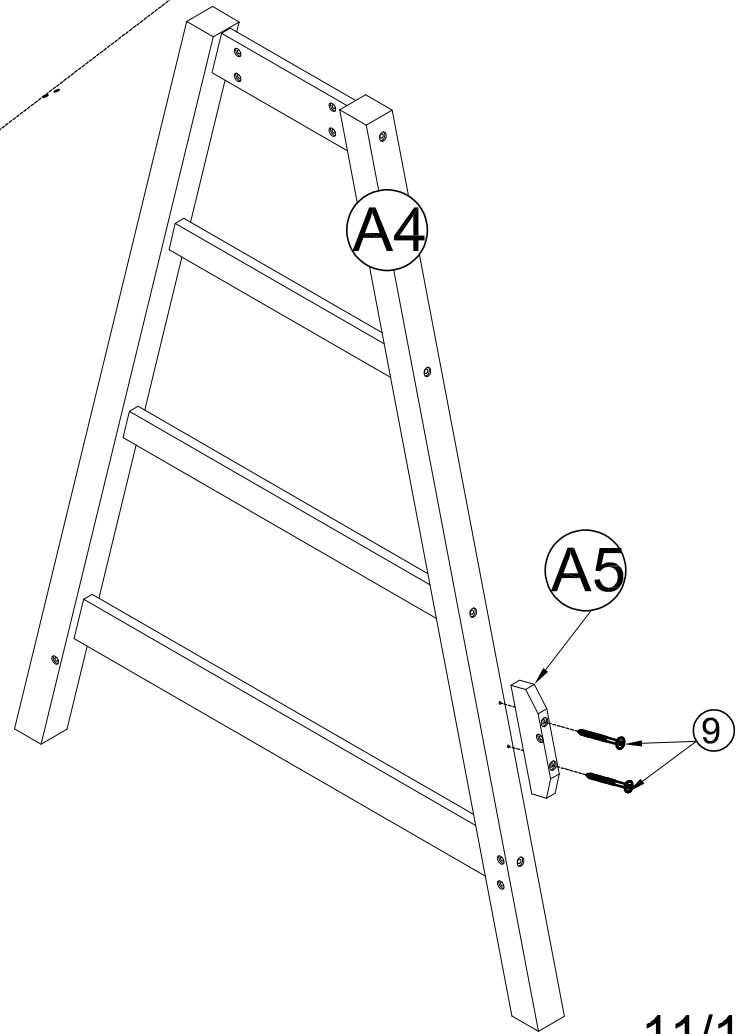STEP 6-2: Following below illustration:





STEP 7-1: Following below illustration:

16	11	10
		
8pcs	4pcs	4pcs

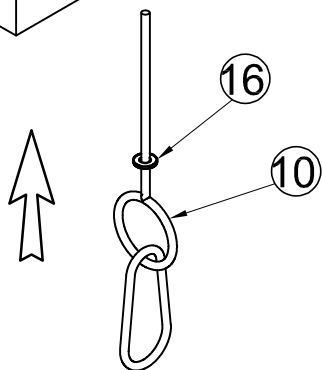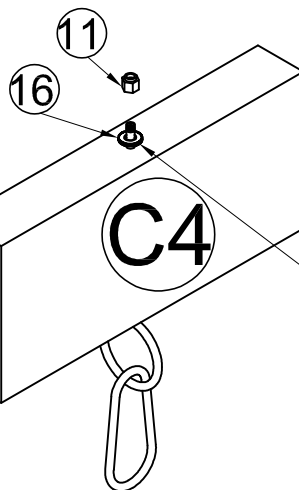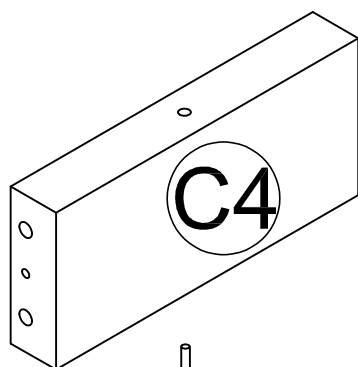

STEP 7-2: Following below illustration:

1	6
	
16pcs	8pcs




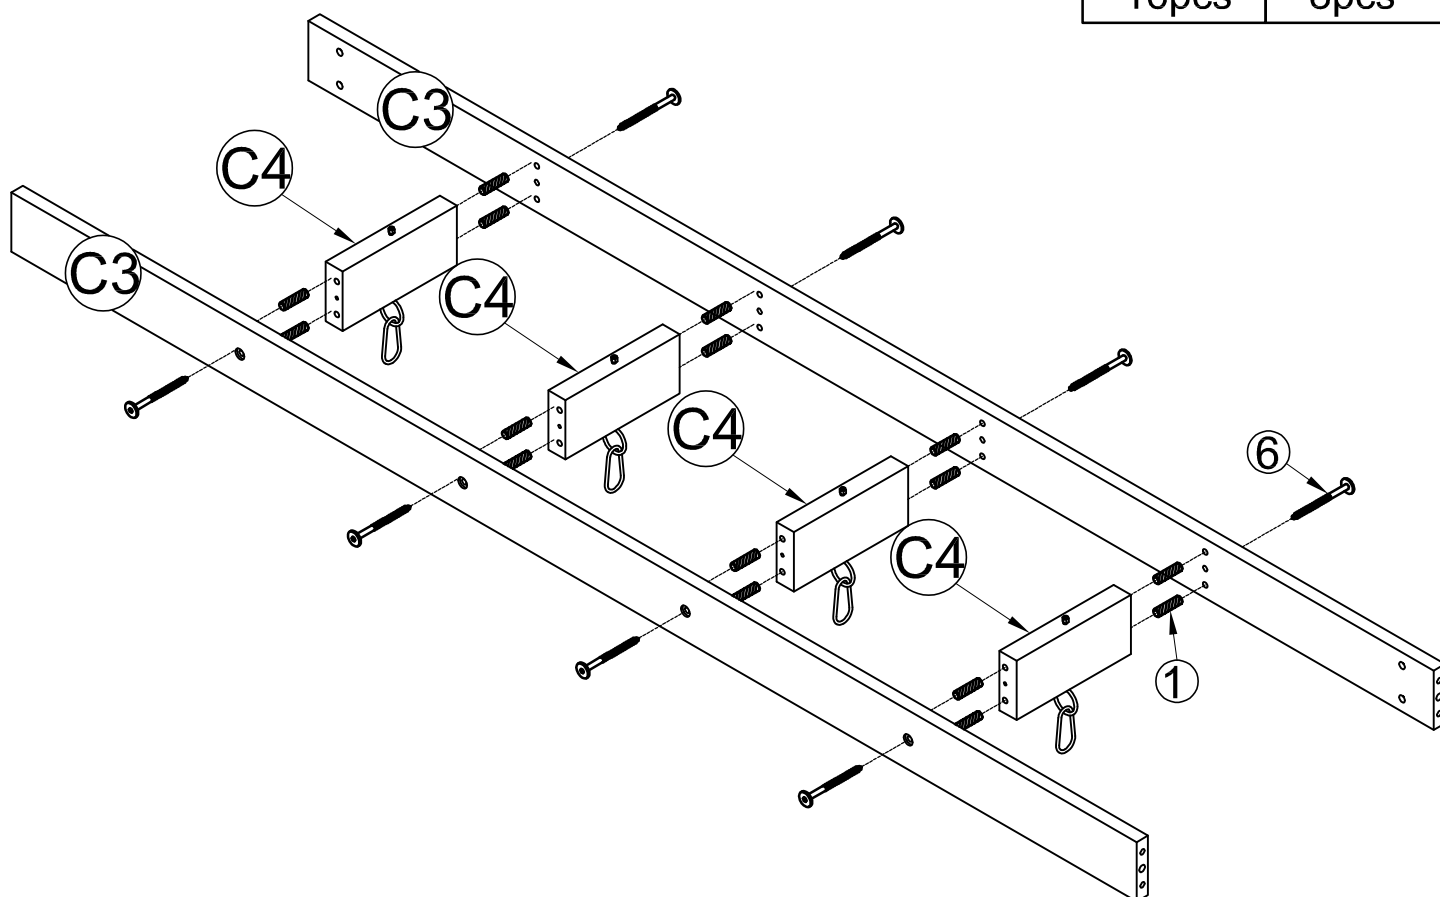



STEP 8: Following below illustration:

-Insert side rail C1 into the Frame(completed on step 4)

-Using hardward #2,#3,#12,#13 and dowel #1 to Assembly Frame(Completed on step 5-2,Step 6-2)

With C1,C2 Frame and Frame(Completed on step 7-2)

13	3	2
		
8pcs	14pcs	6pcs
	12	1
		
	2pcs	10pcs

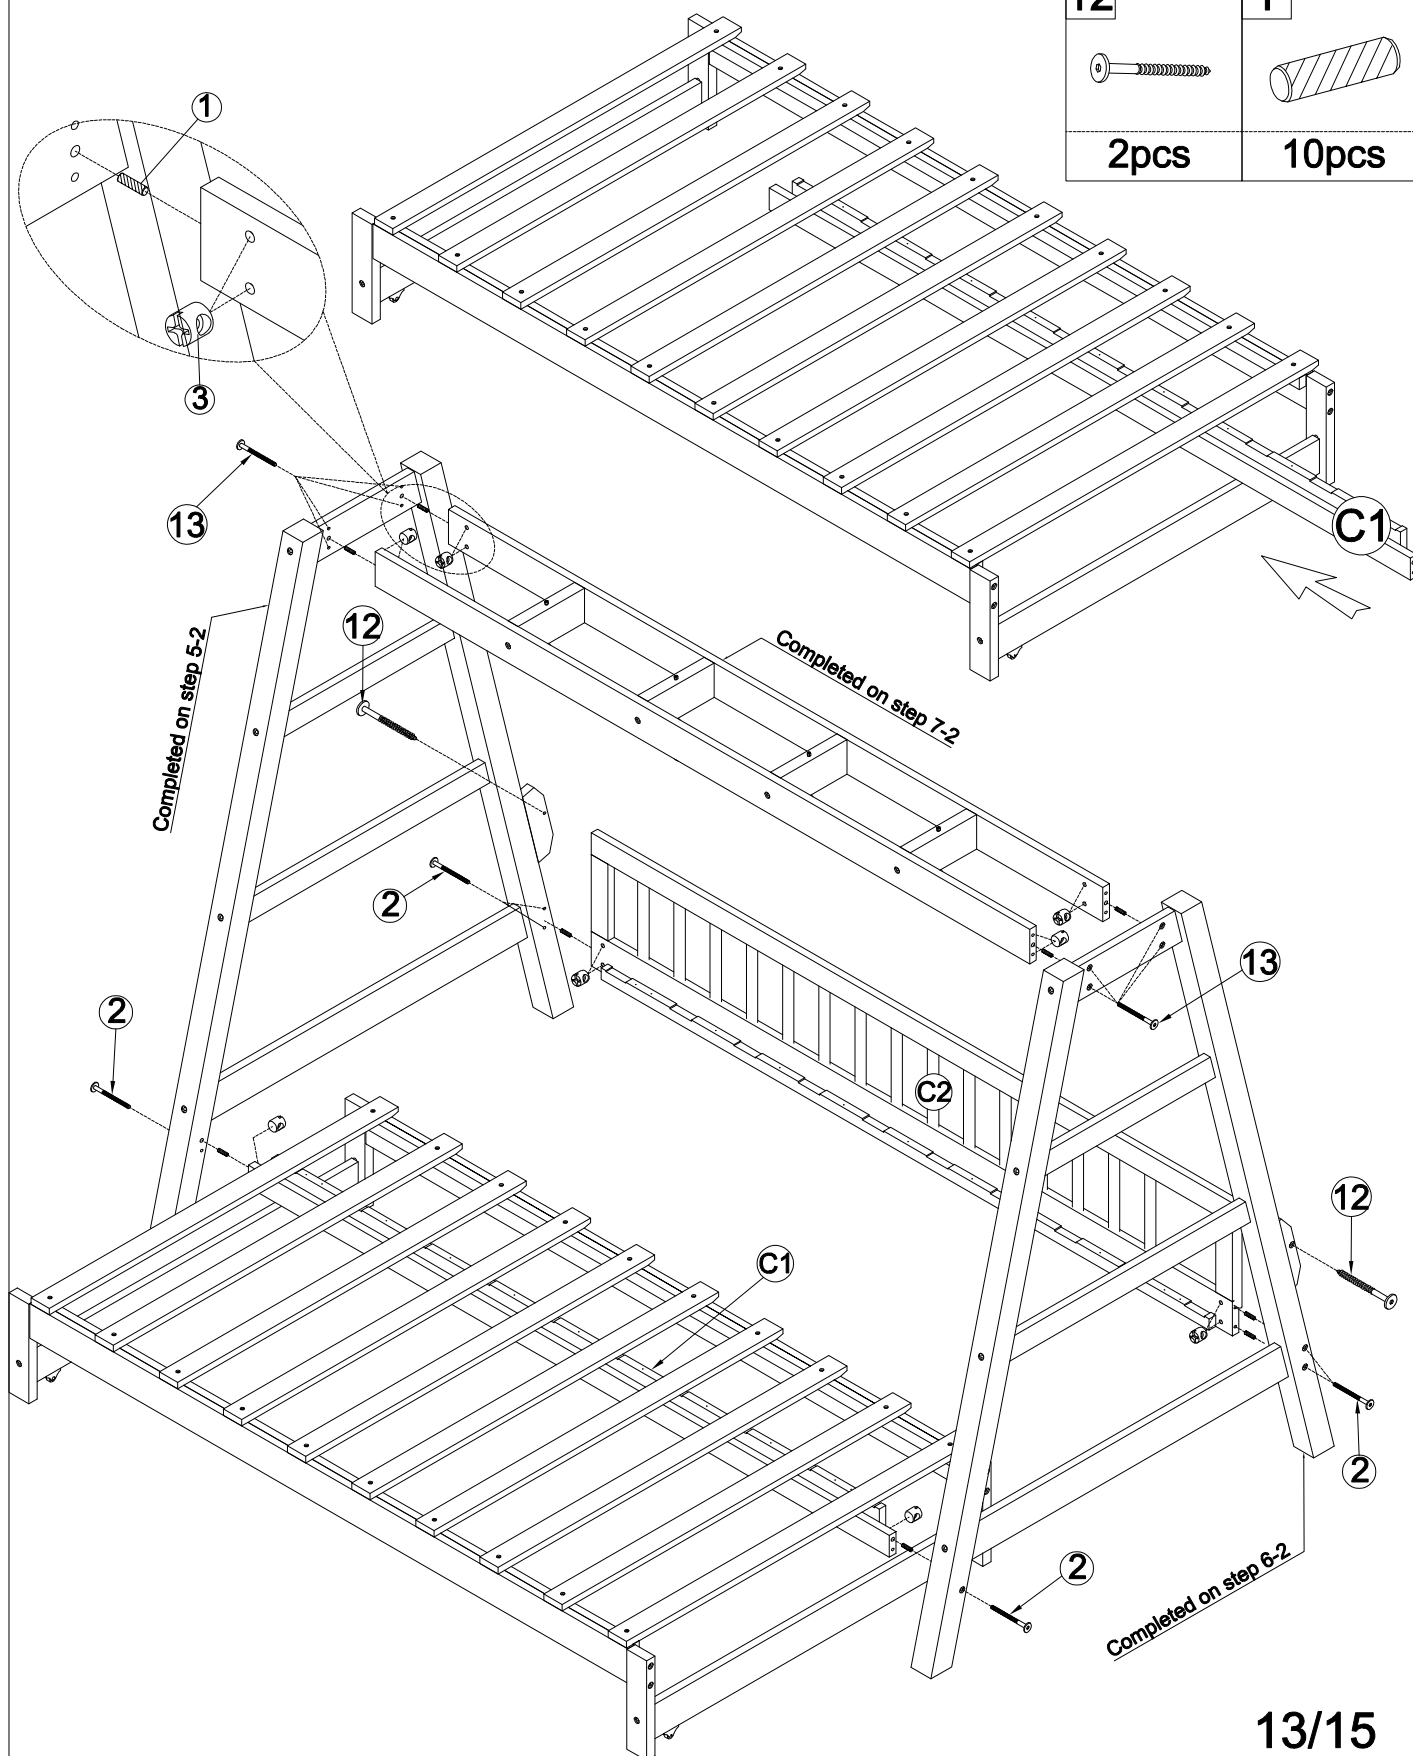


STEP 9: Following below illustration:



-Screw 2 slats D1 and 9 saist D2 with Side Rails C1,C2 by using hardward #7.

-Look at detail view for more detail

7




22pcs

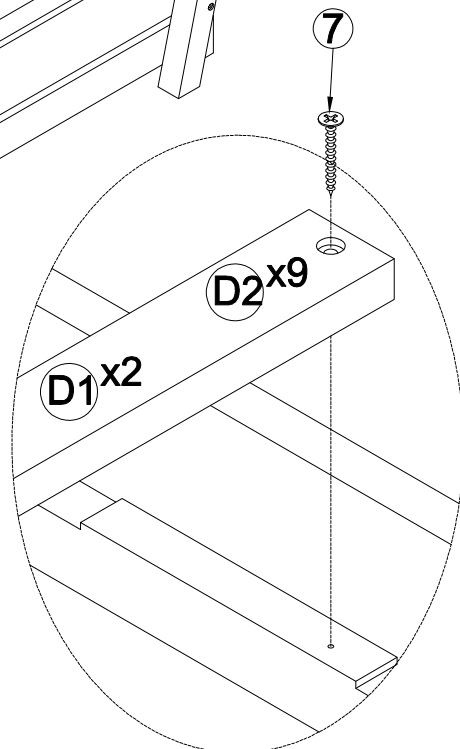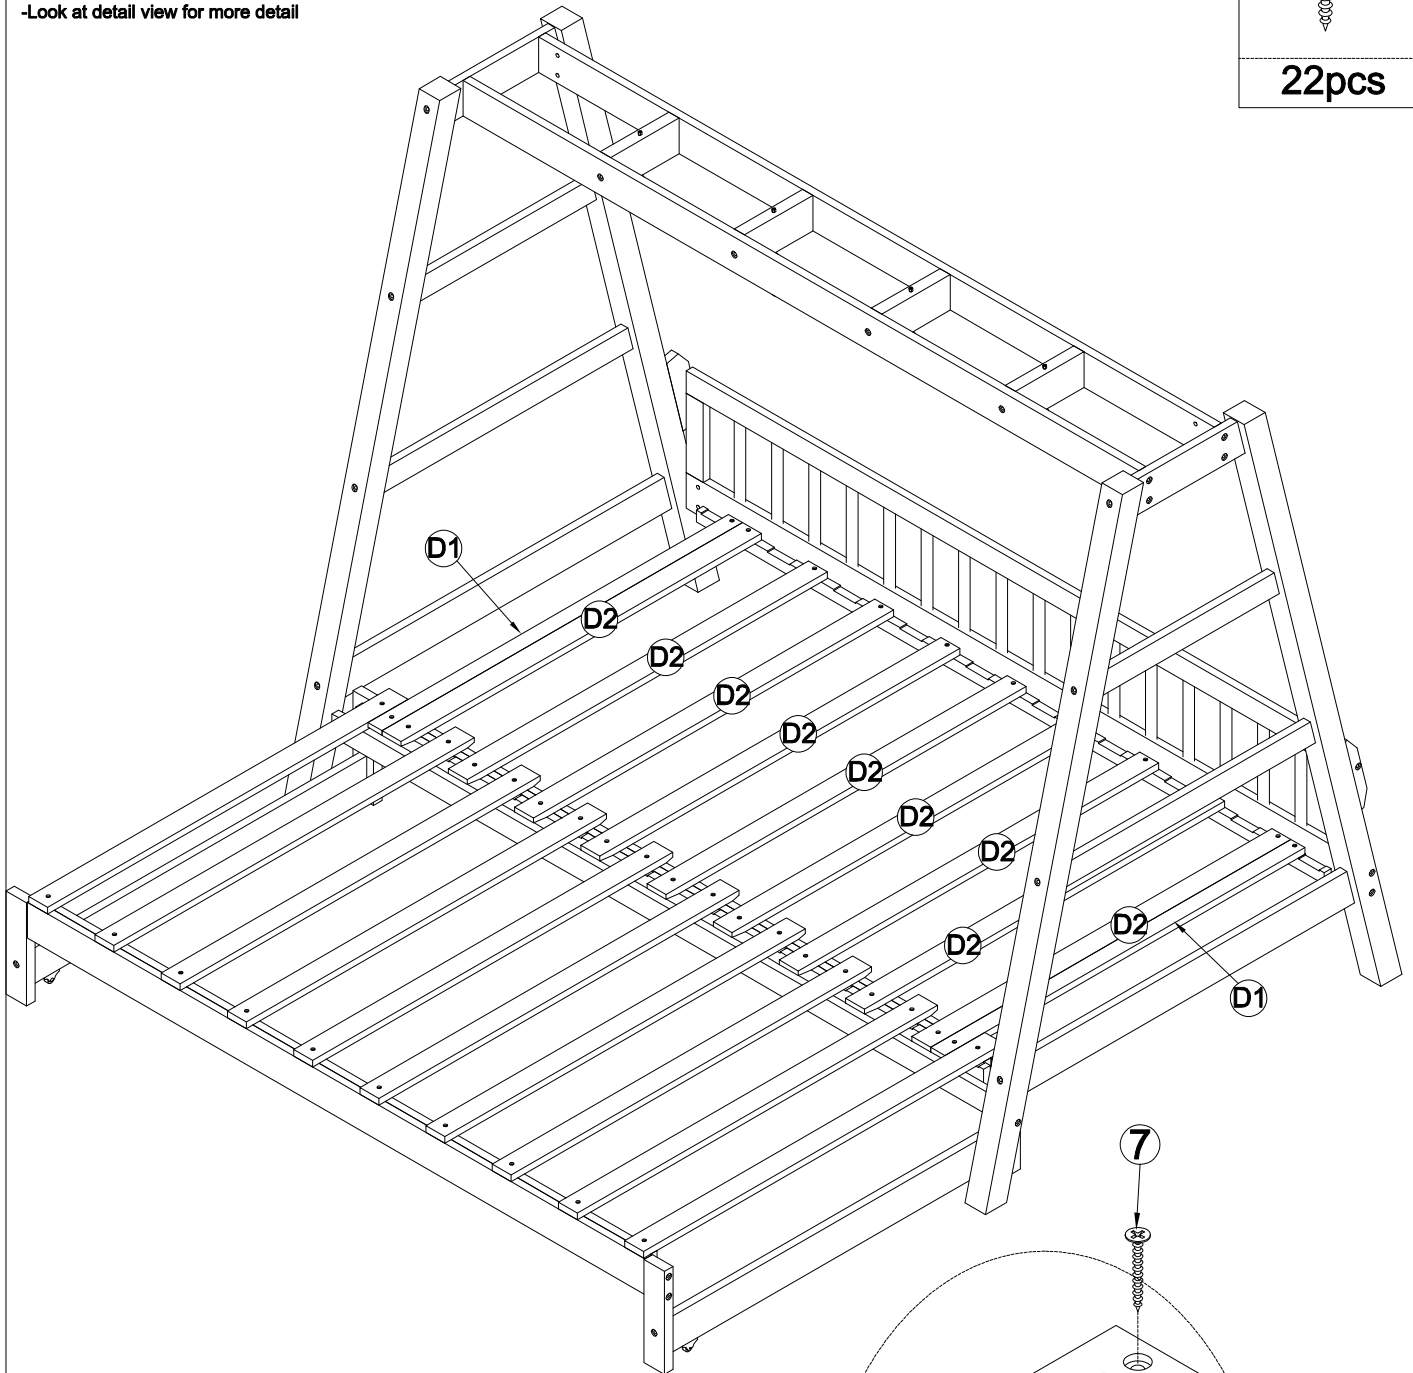

STEP 10: Following below illustration:

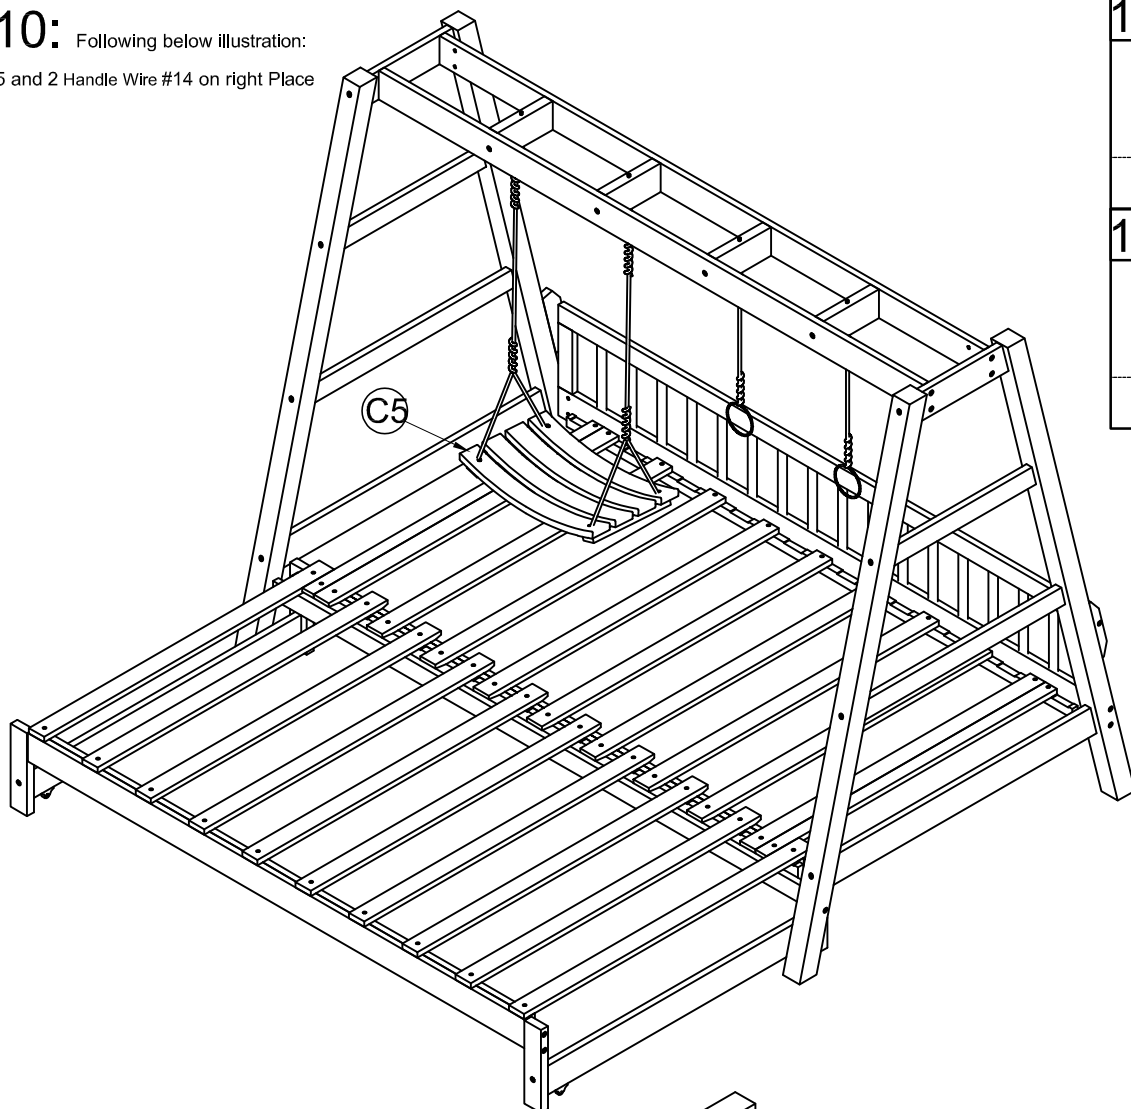-Hanging swing C5 and 2 Handle Wire #14 on right Place



14	
	2pcs
17	
	2pcs

