



ASSEMBLY INSTRUCTIONS



















FULL BED WITH 2 DRAWERS

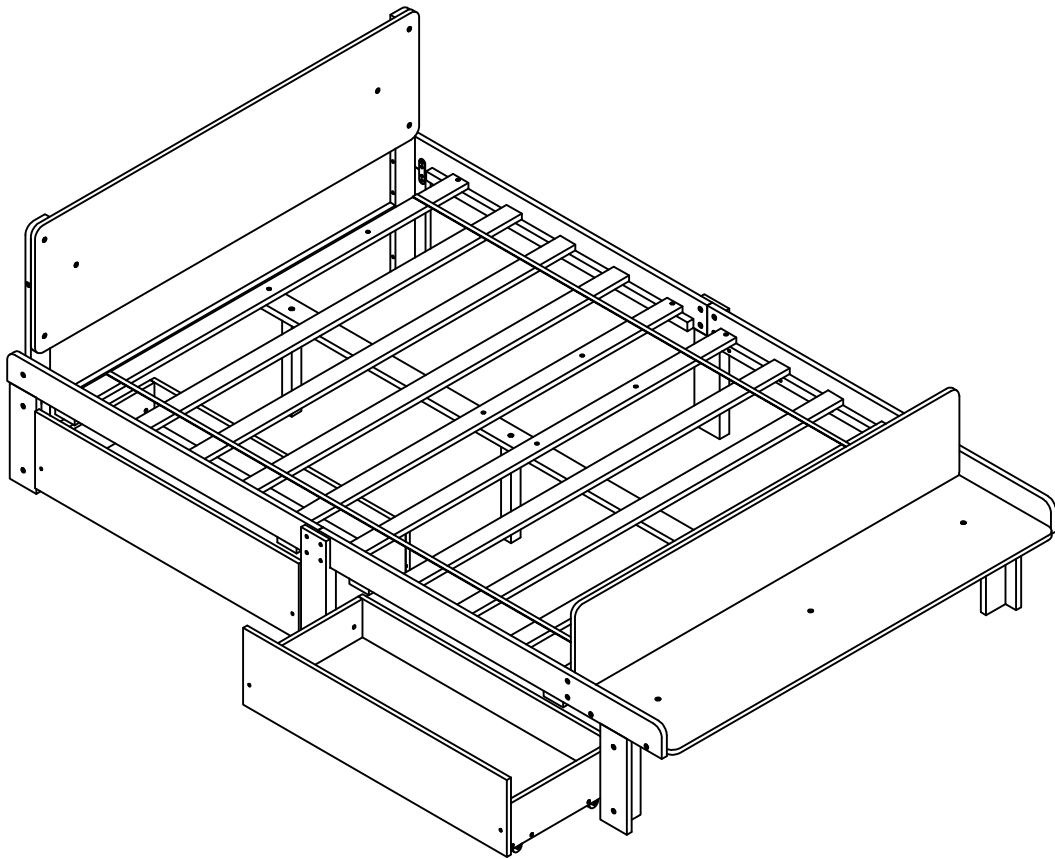




Detail View

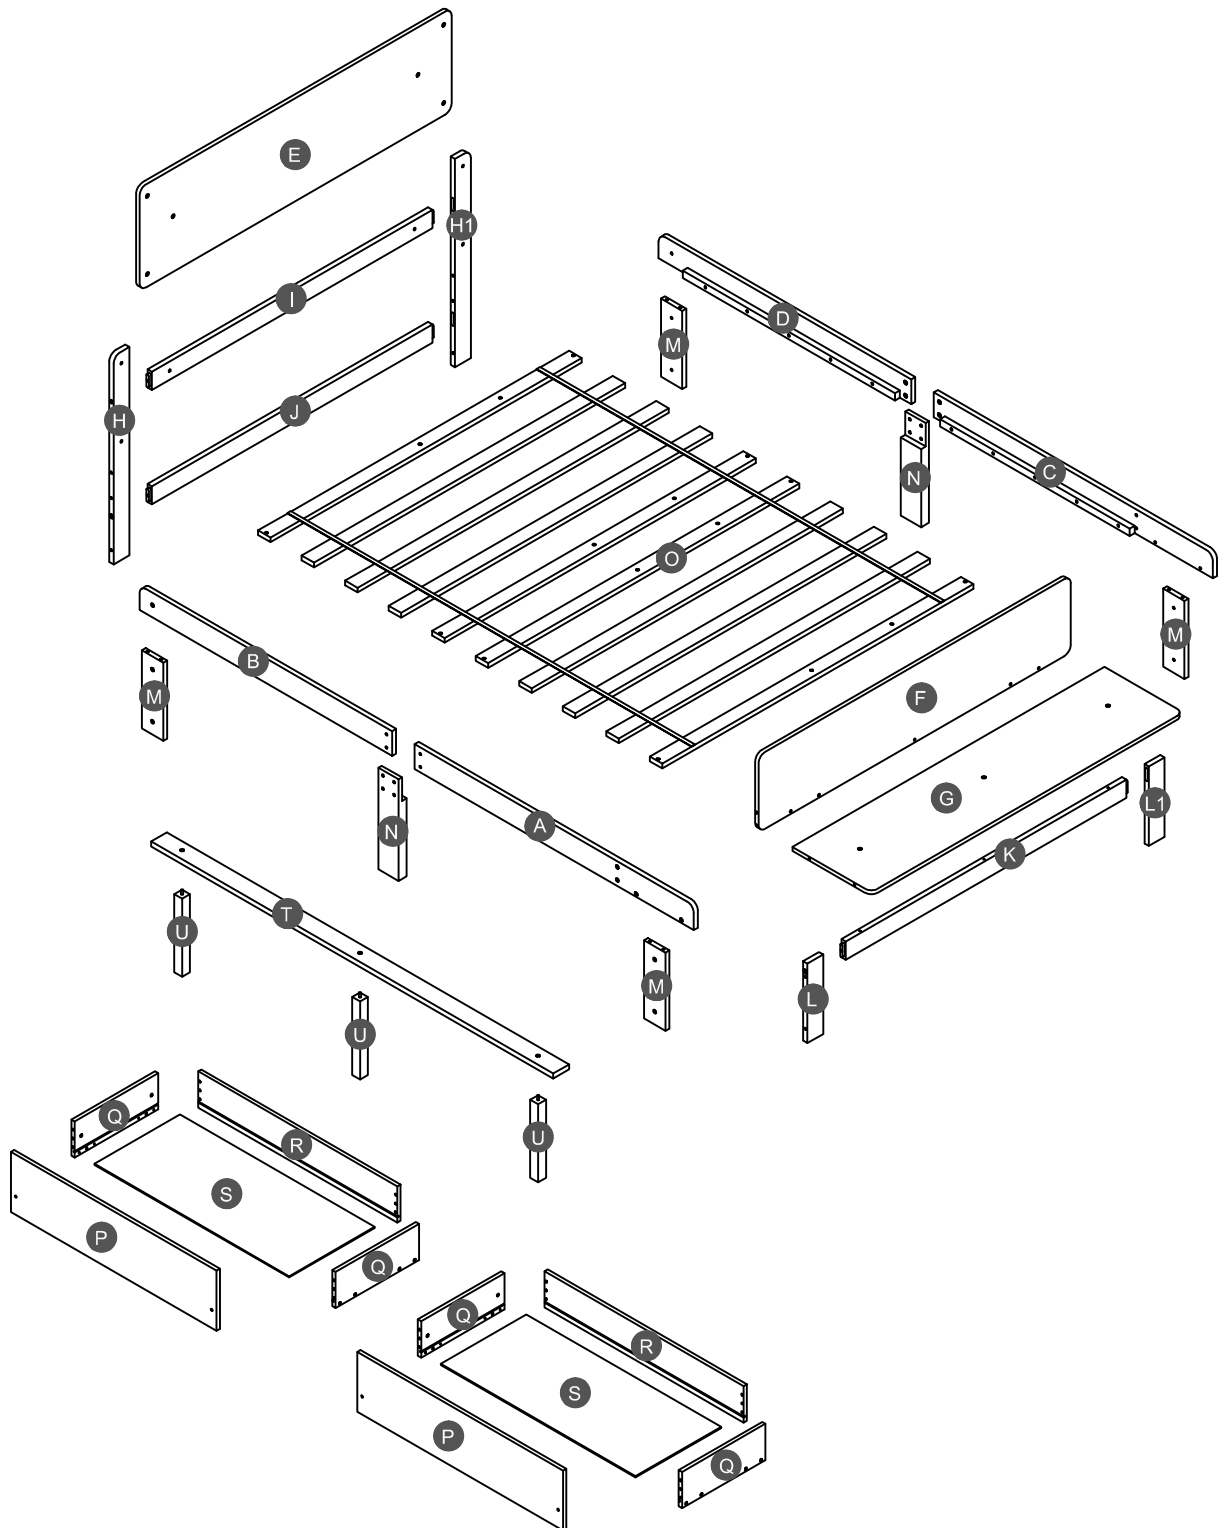


Part List

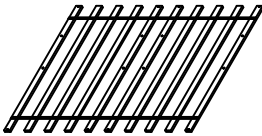A  Side rail (Left front) - 1pc	B  Side rail (Left back) - 1pc	C  Side rail (Right front) - 1pc
D  Side rail (Right back) - 1pc	E  Back panel - 1pc	F  Divider panel - 1pc
G  Front panel - 1pc	H  Leg HB (Left) - 1pc	H1  Leg HB (Right) - 1pc
I  Upper horizontal bar HB - 1pc	J  Lower horizontal bar HB - 1pc	K  Horizontal bar FB - 1pc
L  Leg FB (Left) - 1pc	L1  Leg FB (Right) - 1pc	M  Support leg - 4pcs
N  Support side rail - 2pcs	O  Slat - 1Set = 10pcs	P  Front drawer panel - 2pcs
Q  Left / right drawer panel - 4pcs	R  Back drawer panel - 2pcs	S  Drawer bottom - 2pcs
T  Lower support slat - 1pc	U  Leg support - 3pcs	

Hardware List


1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (26pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (6pcs)	3  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (29pcs)
4  $(\varnothing 12) 1/4" \times 30 \text{mm}$ Hex-Head bolts (14pcs)	5  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (35pcs)	6  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (3pcs)
7  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	8  $\varnothing 4 \times 30 \text{mm}$ Wood screws (36pcs)	9  $75 \times 20 \times 2 \text{mm}$ Metal bracket (4pcs)
10  $24 \times 28 \times 28 \times 2 \text{mm}$ Metal bracket (4pcs)	11  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (24pcs)	12  $70 \times 35 \times 19 \text{mm}$ Drawer stopper (4pcs)
13  $100 \times 54 \times 20 \text{mm}$ Wheels (8pcs)	14  $\varnothing 10 \times 20 \text{mm}$ Wood dowel (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

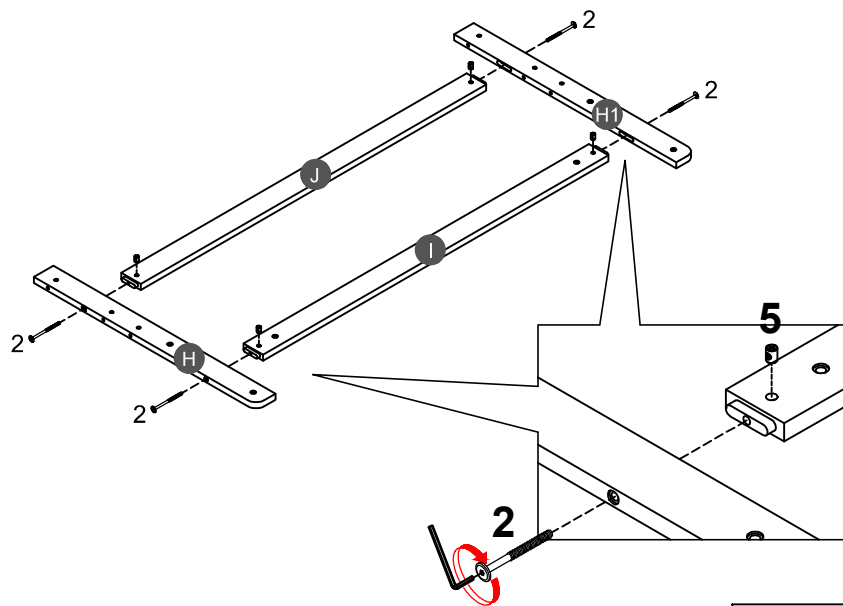


2		5	
4PCS		4PCS	

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

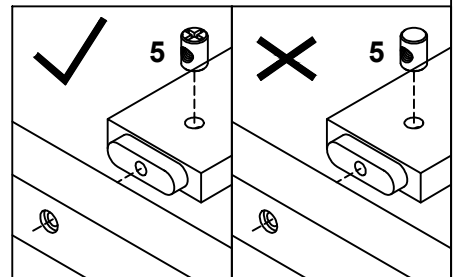


STEP 2:

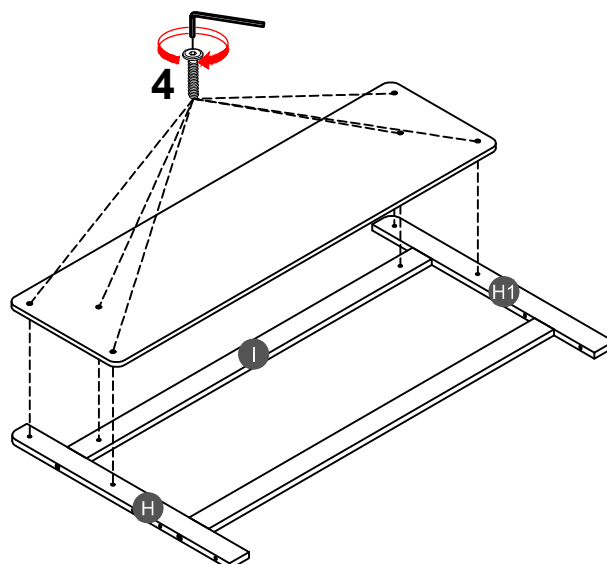

4	
6PCS	


STEP 3:

8		12	
4PCS		2PCS	

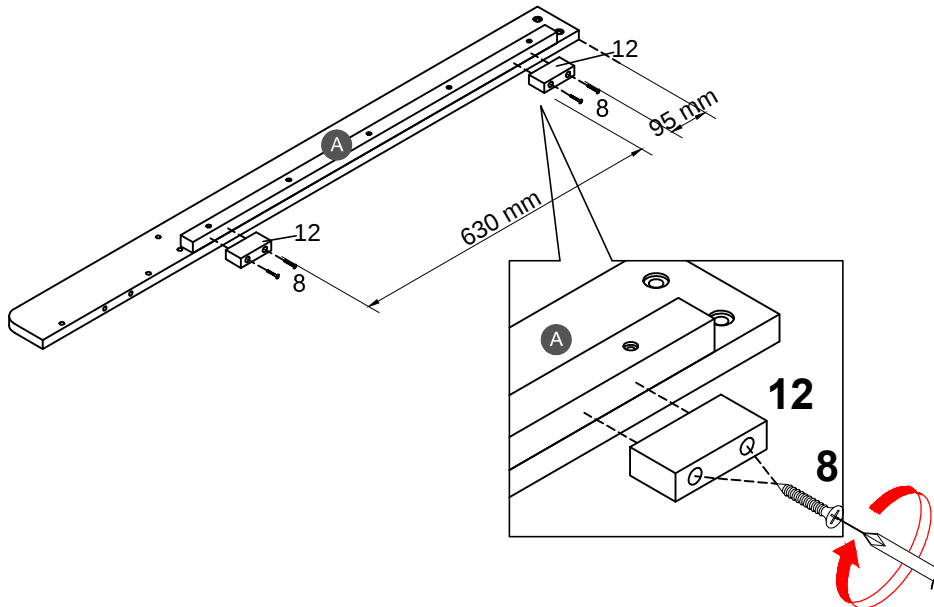


STEP 4:

8		12	
4PCS		2PCS	

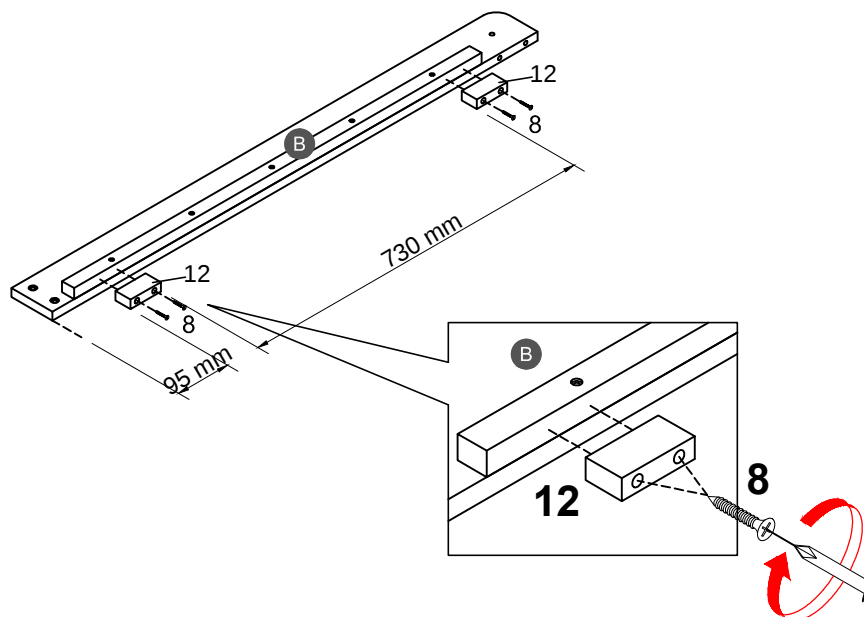

STEP 5:

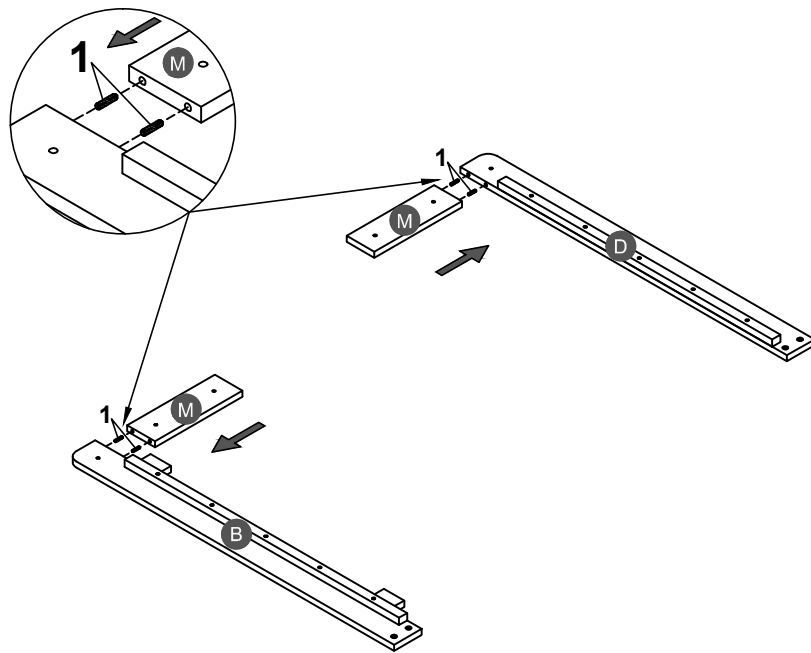


1



4PCS

STEP 6:

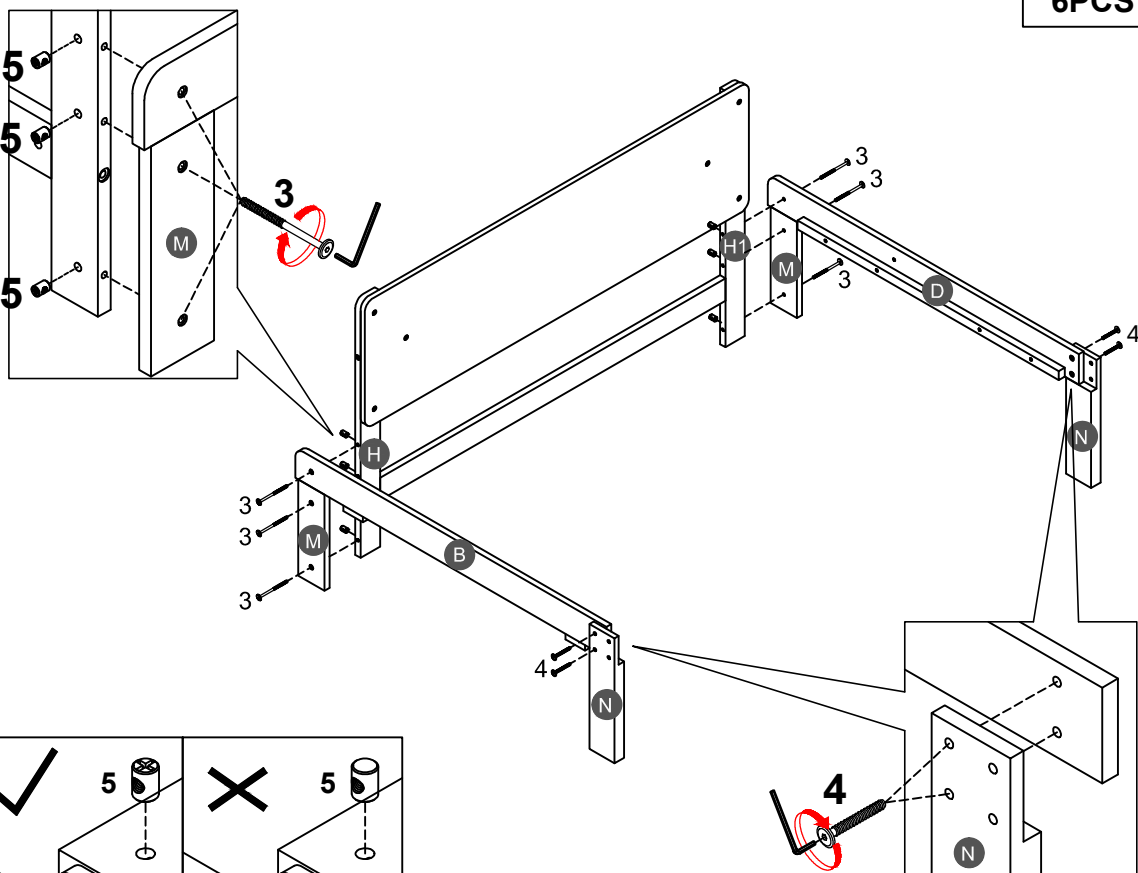

3



6PCS

4



4PCS


5



6PCS


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 7:

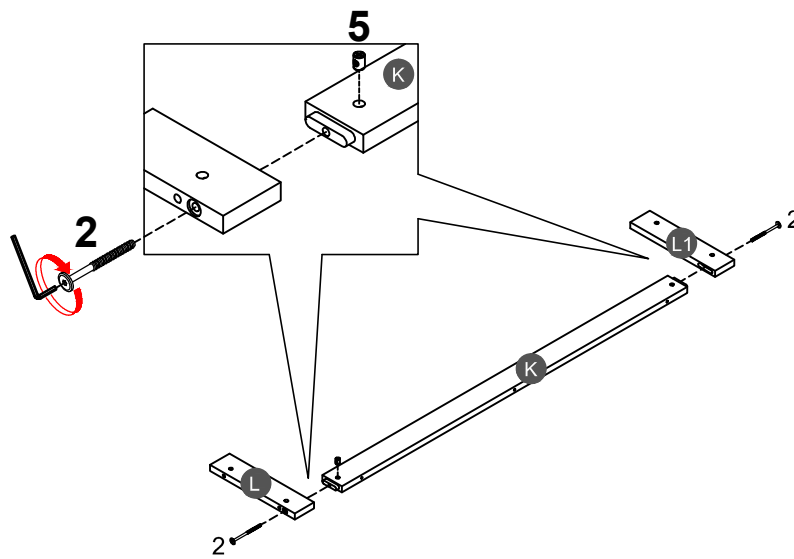

2		5	
2PCS		2PCS	


STEP 8:

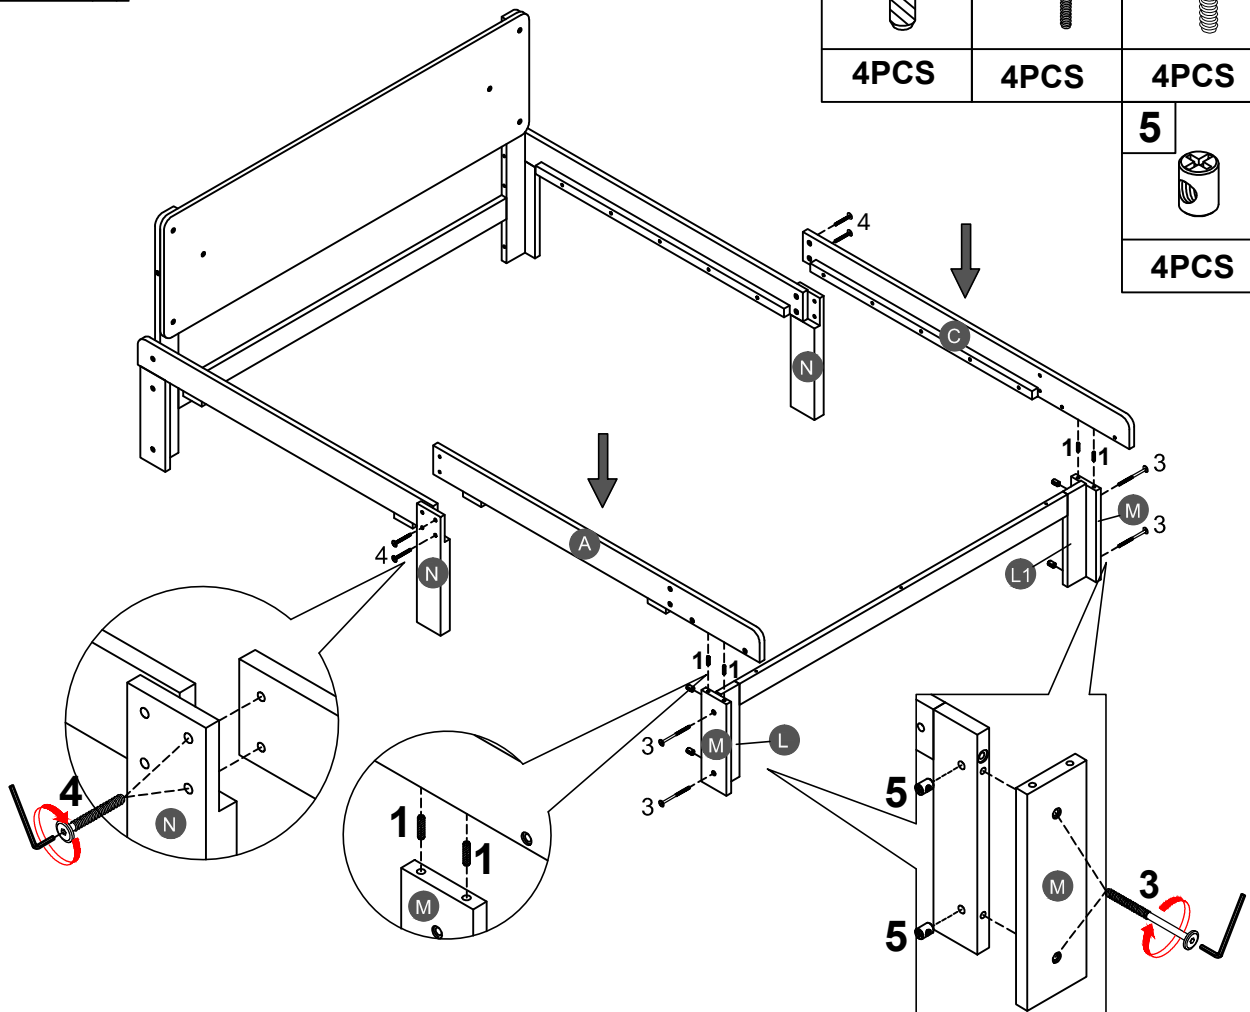

1		3		4	
4PCS		4PCS		4PCS	
				5	
				4PCS	


STEP 9:

3		5	
4PCS		4PCS	

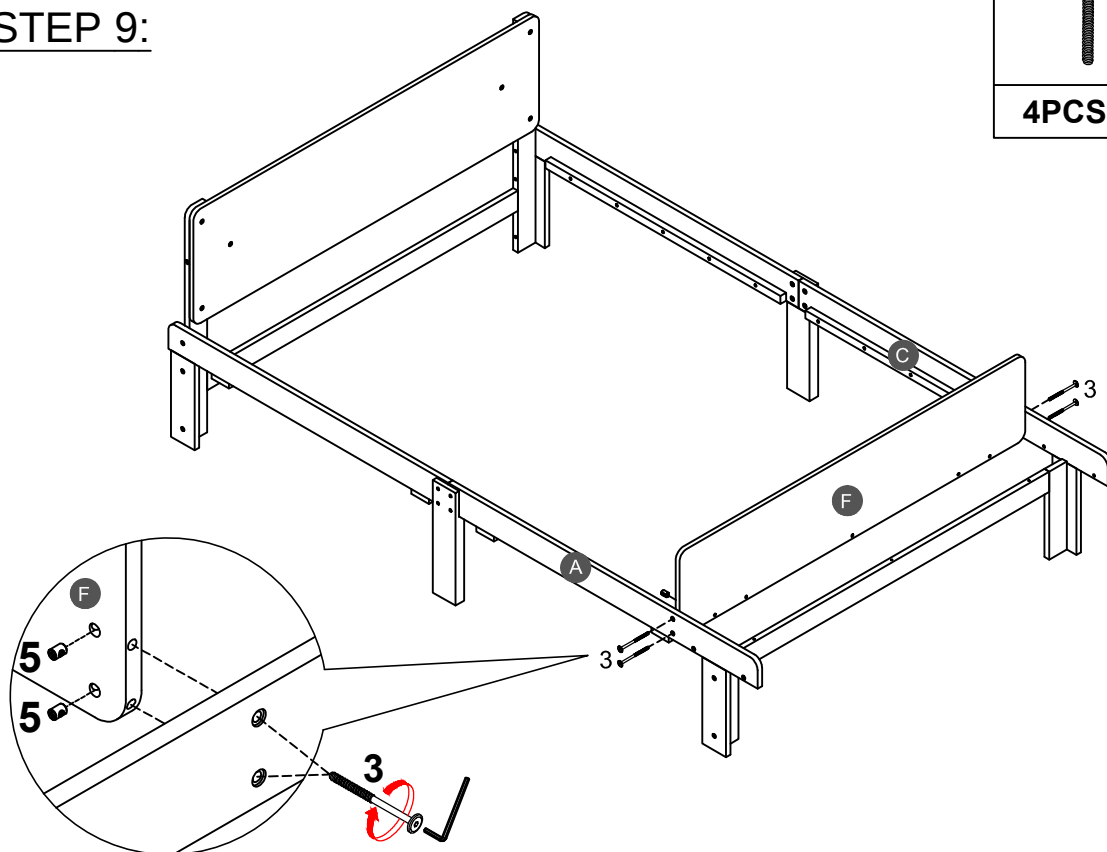


STEP 10:


1	
2PCS	

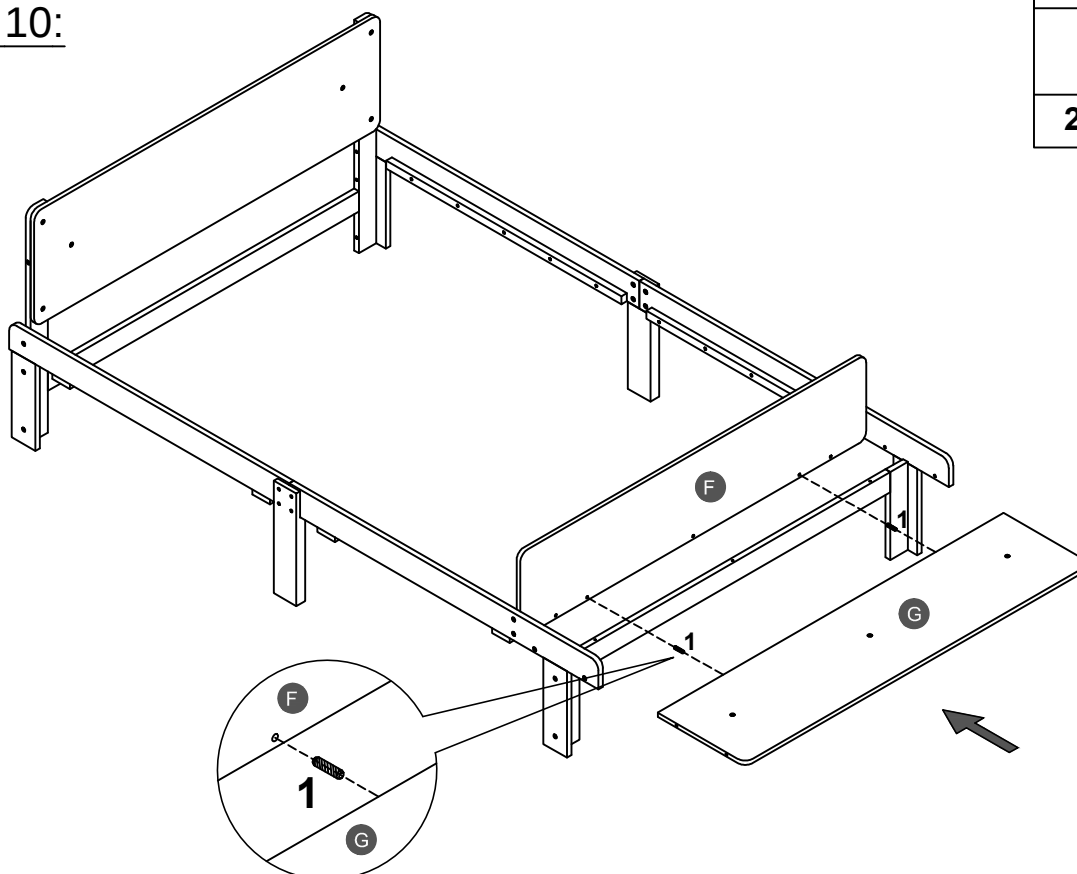


STEP 11:

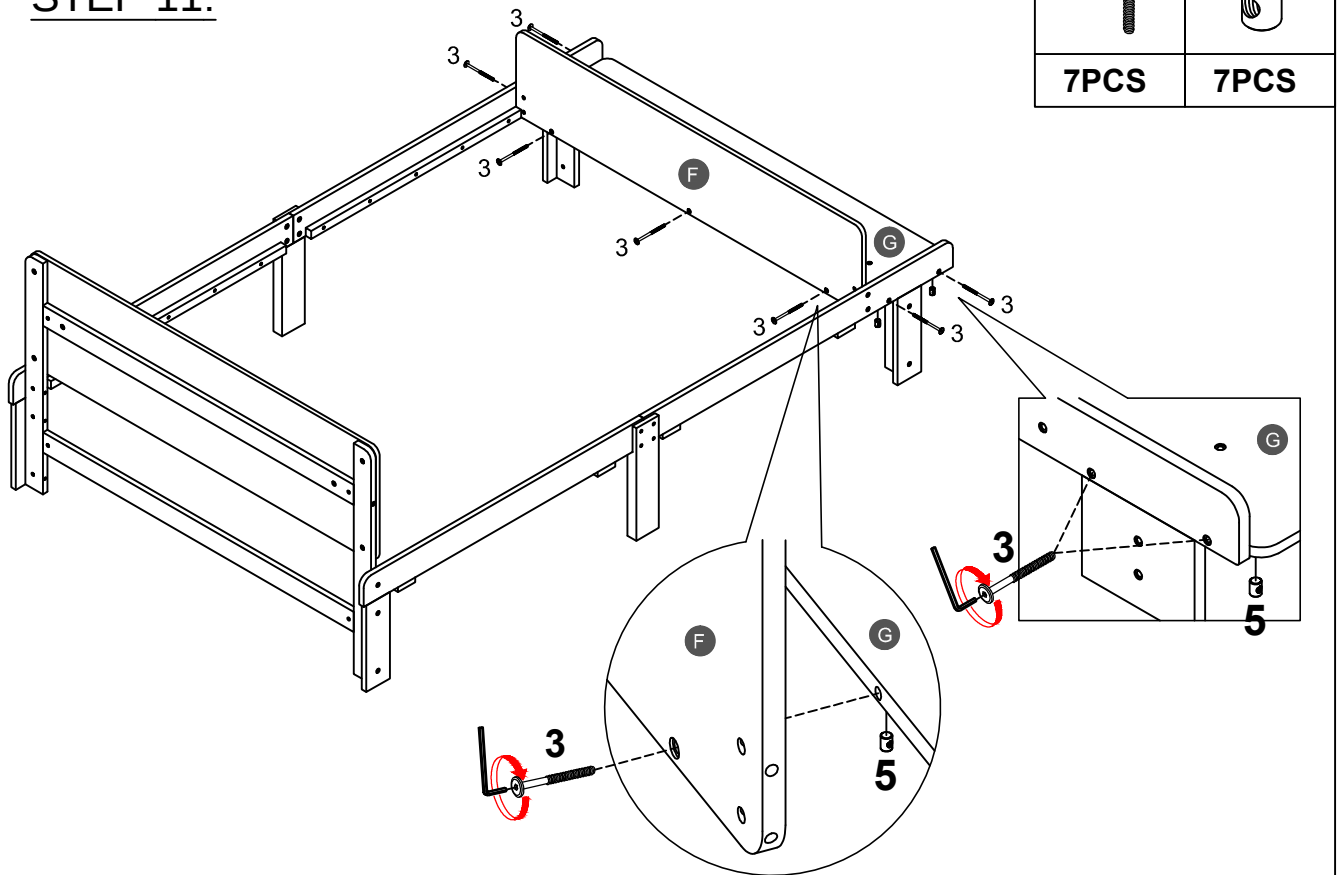

STEP 12:

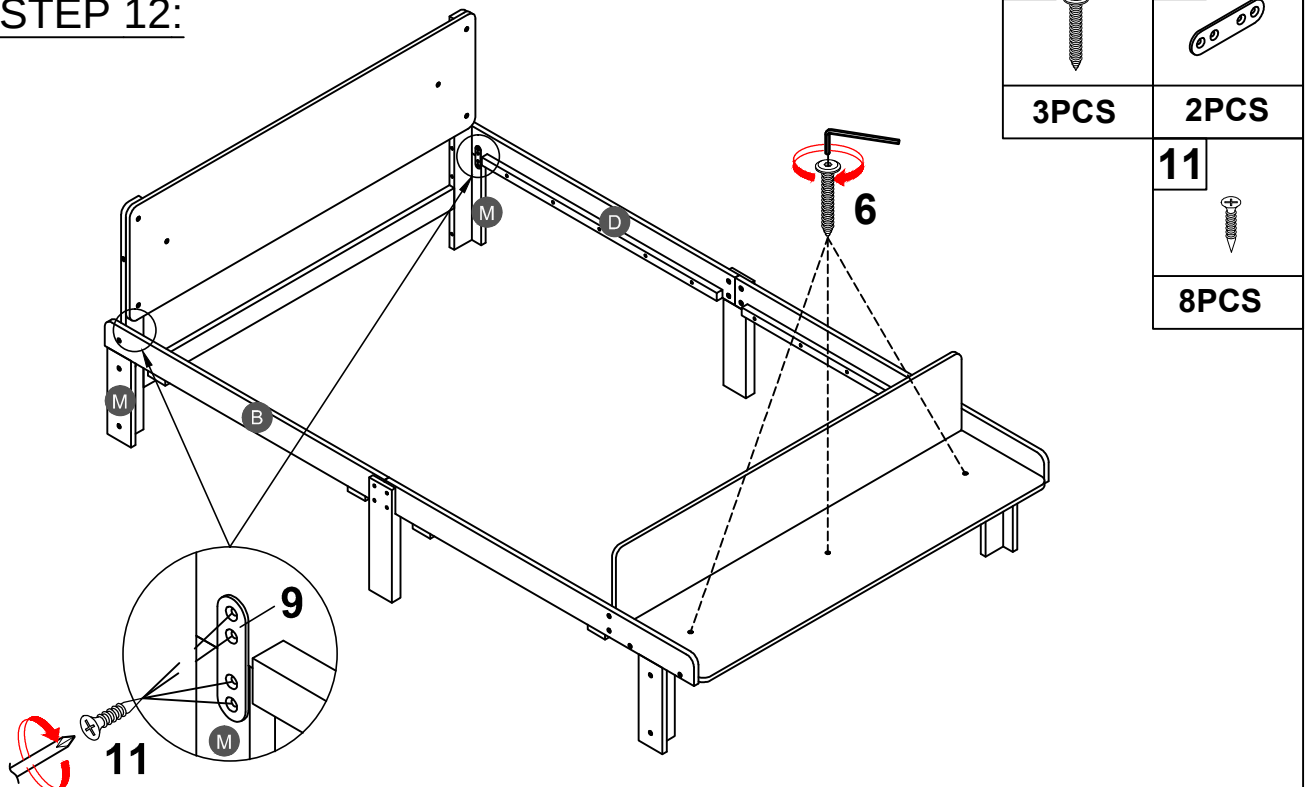


STEP 13:

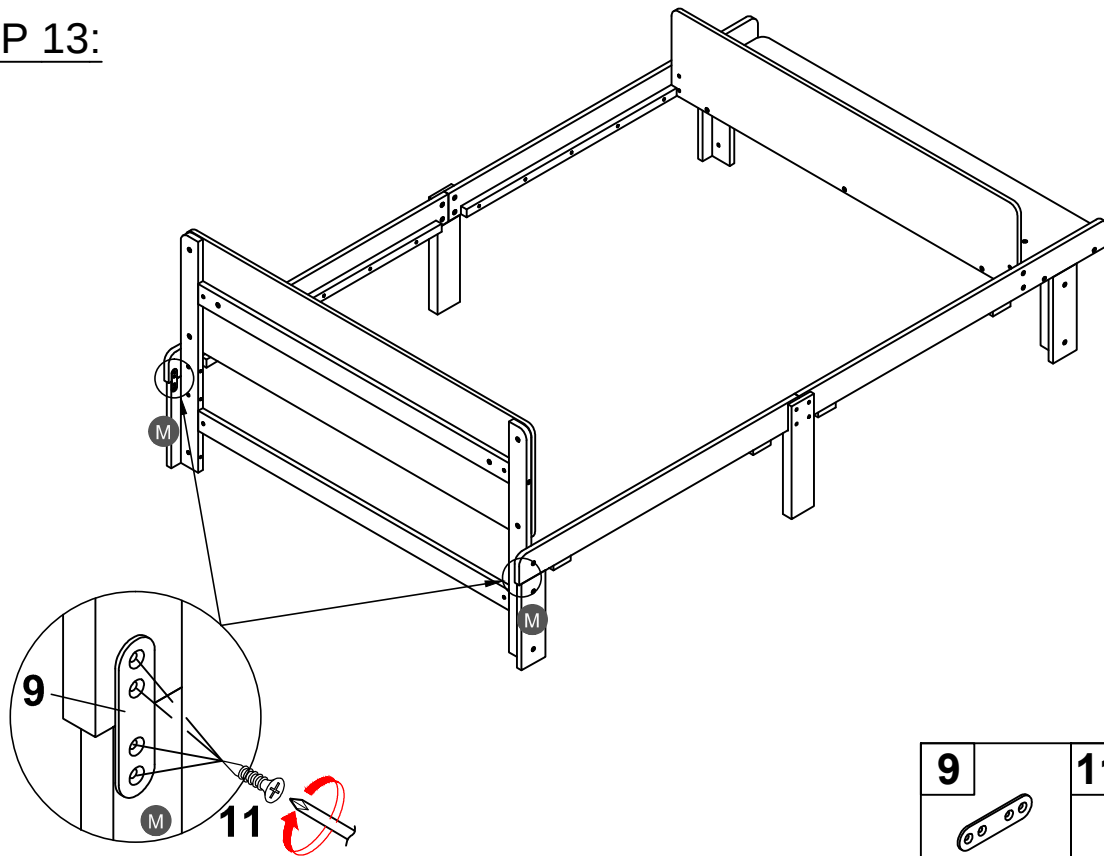


9		11	
2PCS		8PCS	
10		11	
2PCS		4PCS	



STEP 14:

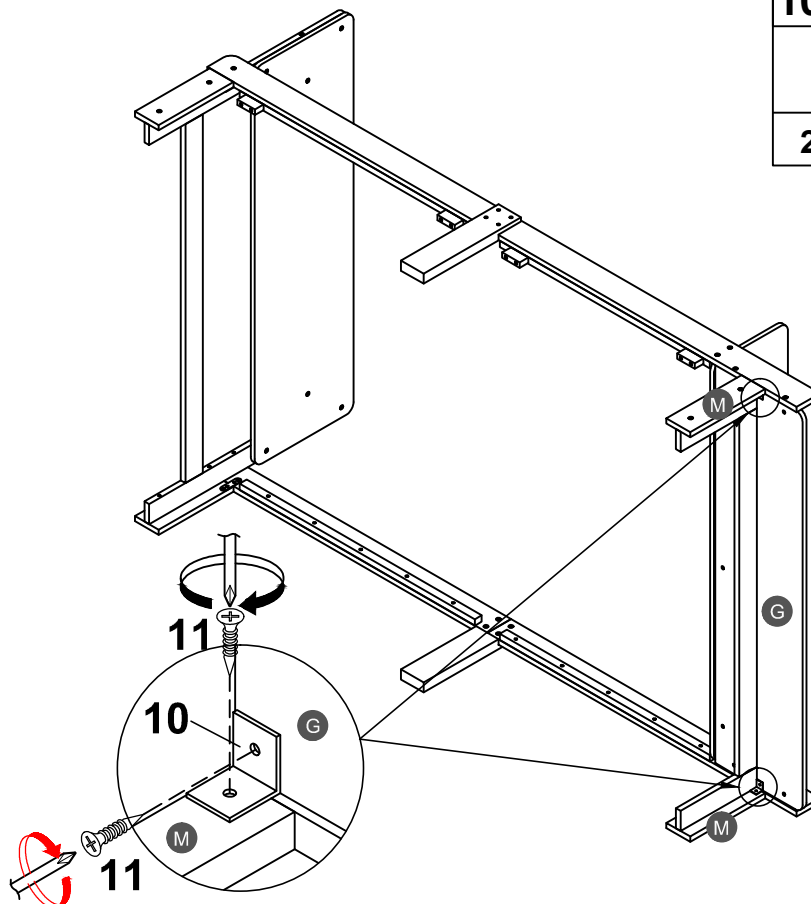

STEP 15:

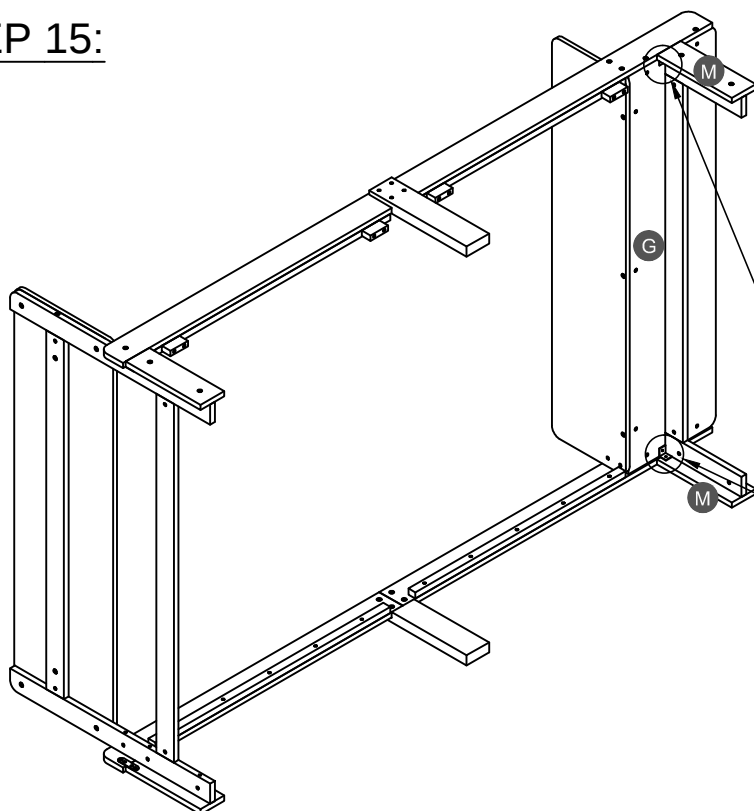

10	11
	
2PCS	4PCS

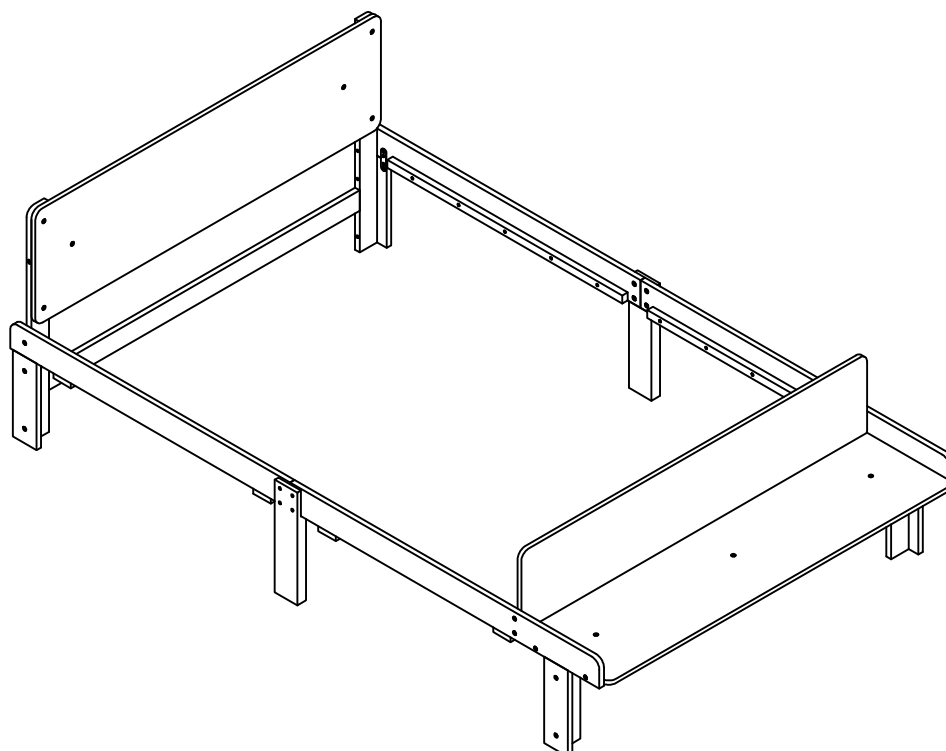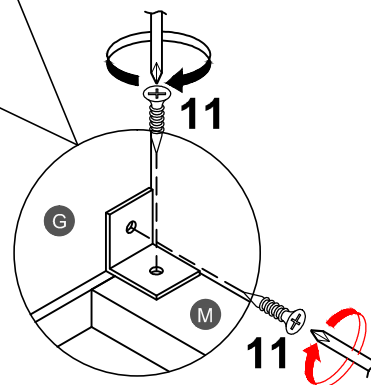


STEP 16:

8



8PCS

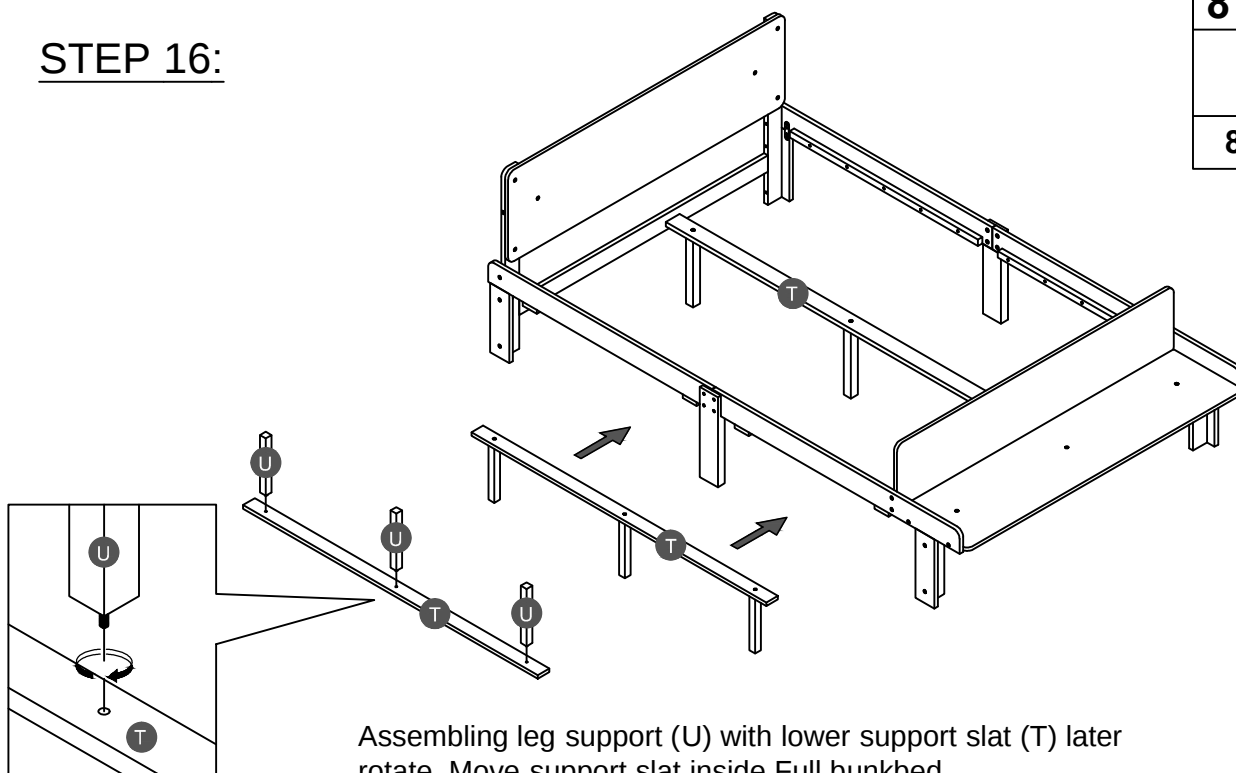


Assembling leg support (U) with lower support slat (T) later rotate, Move support slat inside Full bunkbed.

STEP 17:

8




12PCS

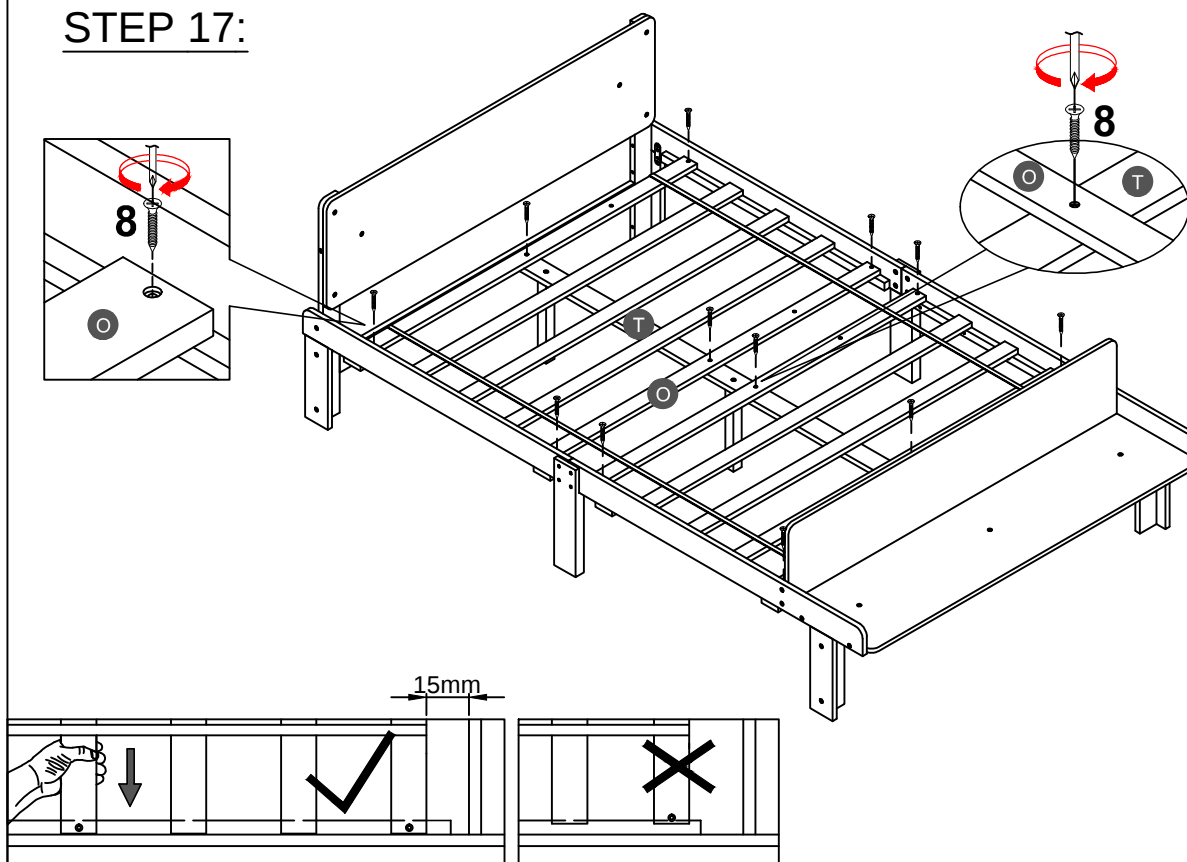

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 18:

1	3	5
		
8PCS	4PCS	4PCS

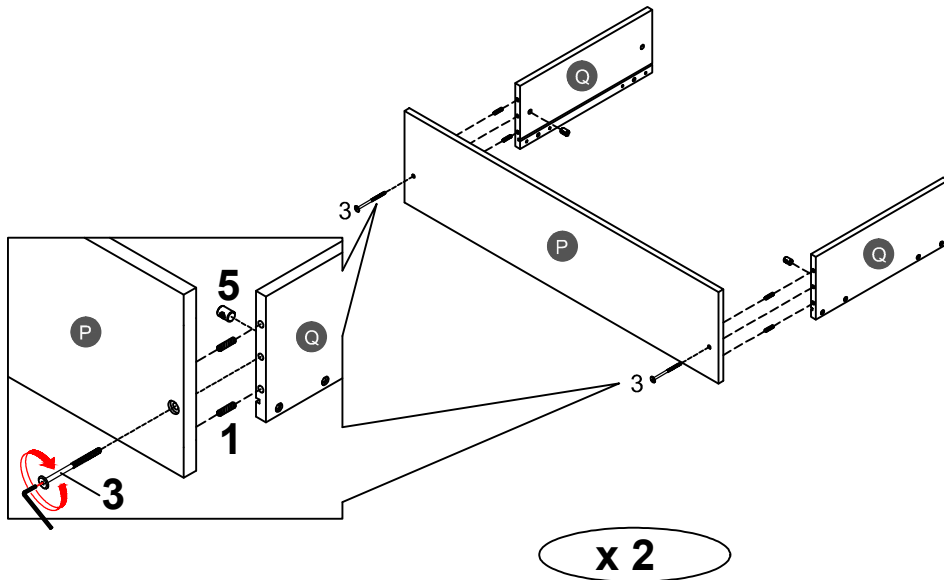


STEP 19:

1	3	5
		
8PCS	4PCS	4PCS

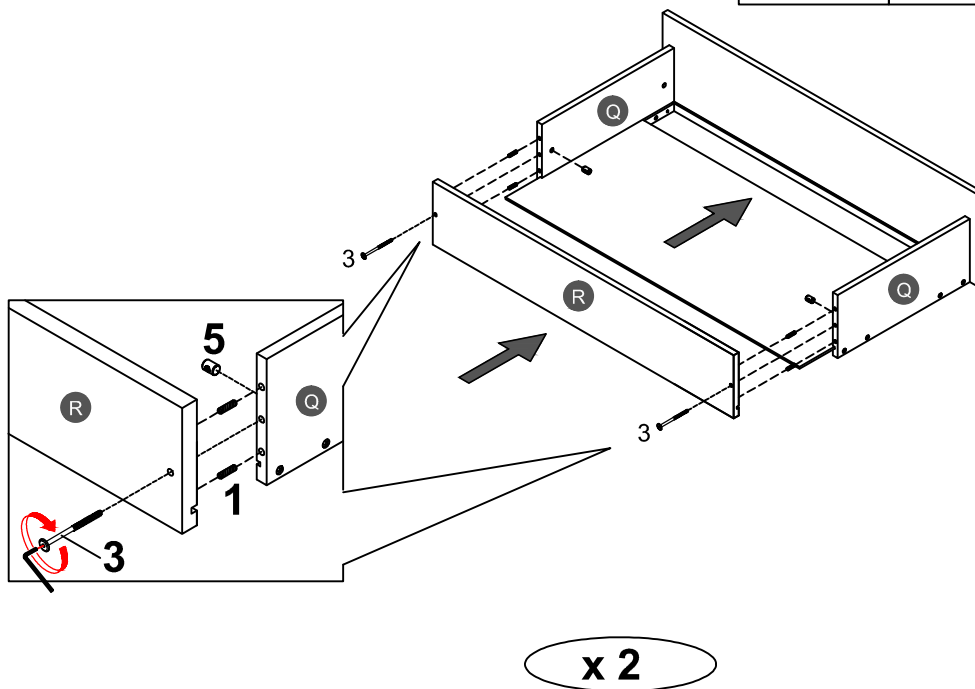


STEP 20:


8		13		14	
16PCS		8PCS		8PCS	

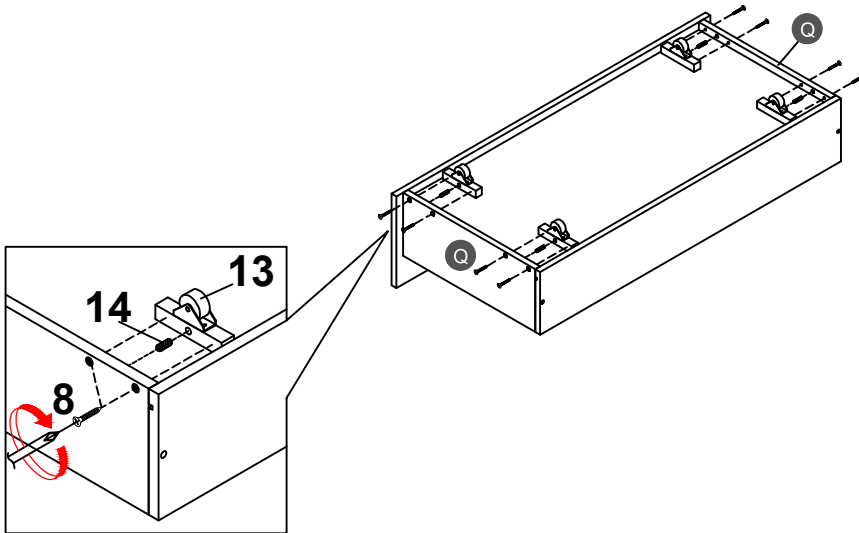

x 2

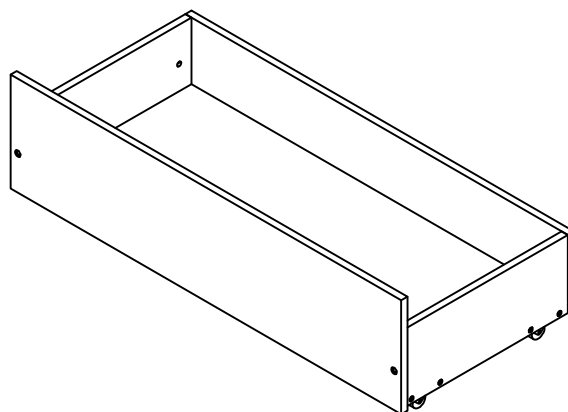

STEP 21:

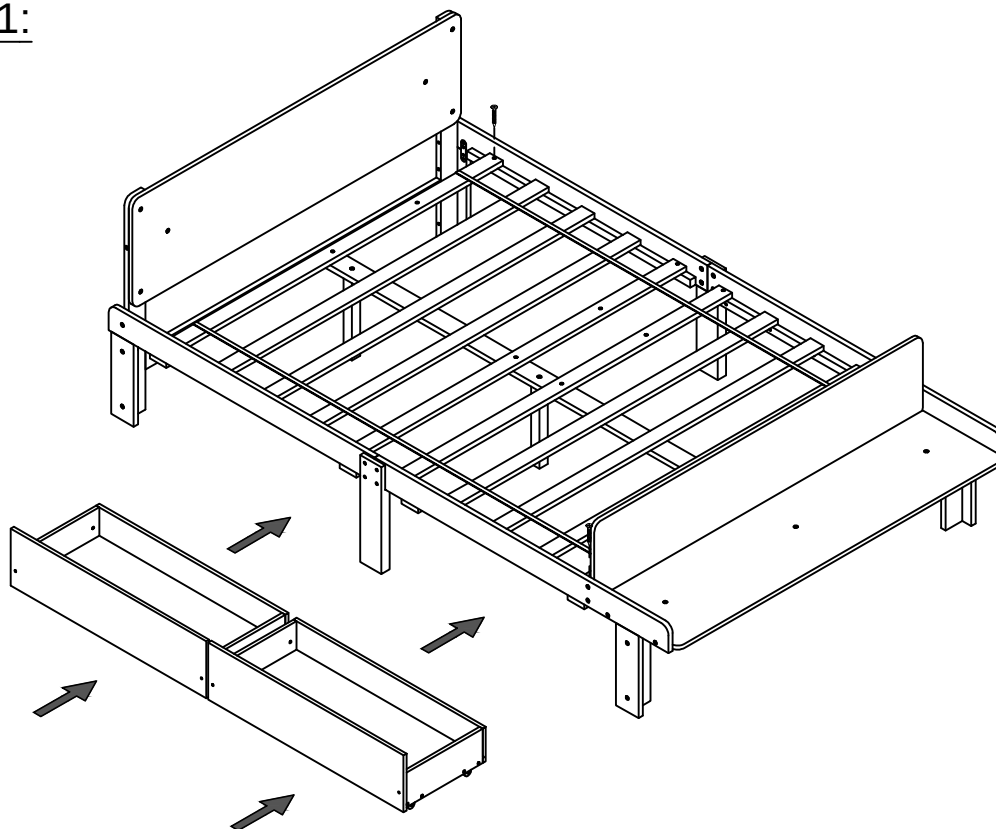

Push Drawer under the bottom of Bunk Bed.

