

Assembly instruction sheet

TD-4081

1

2

3

Place Both Brackets
Place the aluminum bracket and black bracket on the seat cushion together. Make sure the screw holes are aligned.

4

Install all 3 screws C first. Do not tighten fully.

5

Install all 4 screws B. Once all screws B are installed, tighten all screws (B and C)

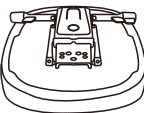
Black bracket (for screws B)

Aluminum bracket (for screws C)

IMPORTANT: Install C first and leave loose. Then install B. Tighten only after all B and C screw are in place.

6

7

	1		2		1	 M8*20 X 3	C	 M6*35 X 6	A
	1		1		5			 M6*25 X 4	B