

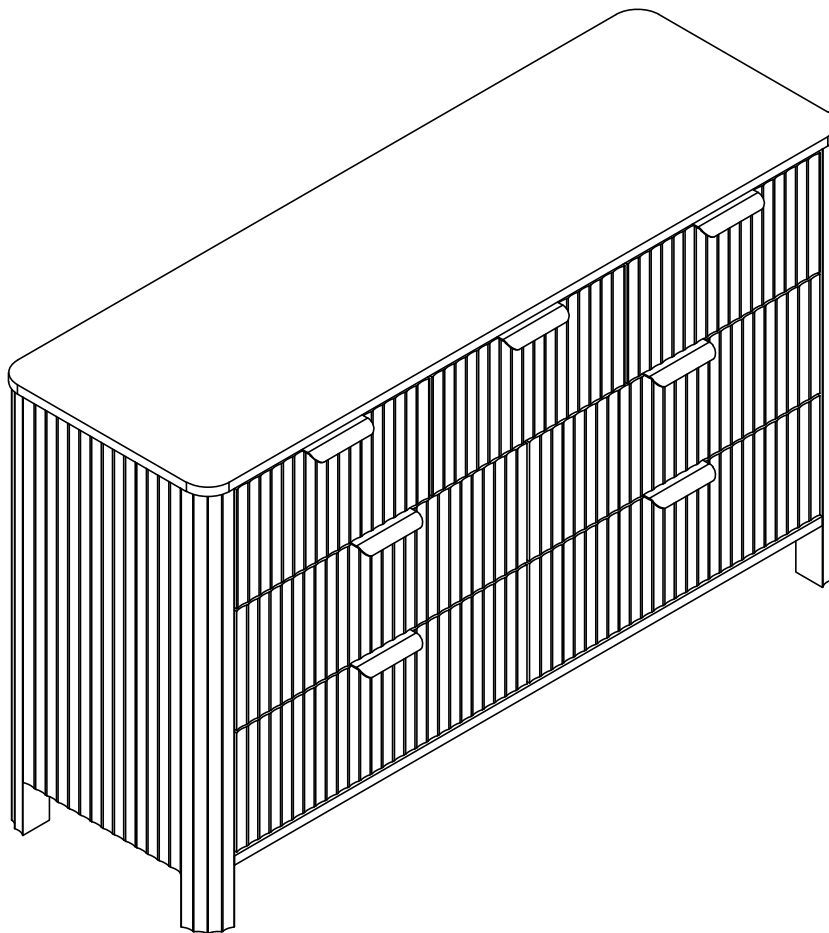
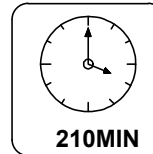


HLG253


Version:1.0

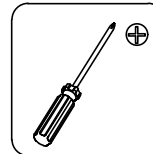

IT IS RECOMMENDED
TO USE POWER TOOLS

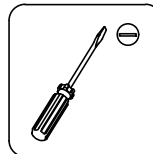

210MIN

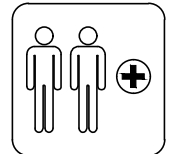

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: support@anymaple.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

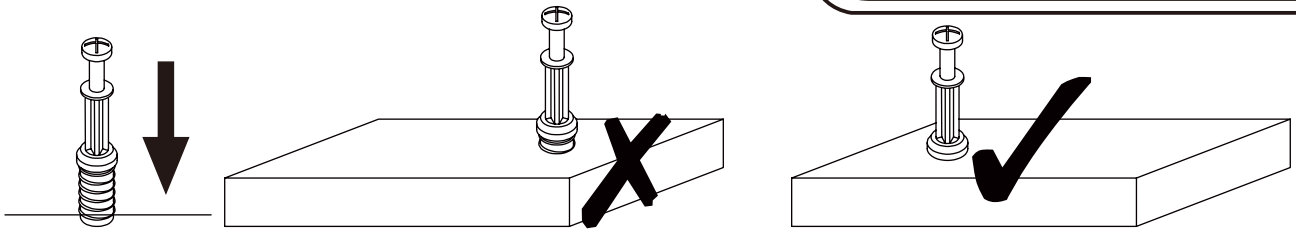


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

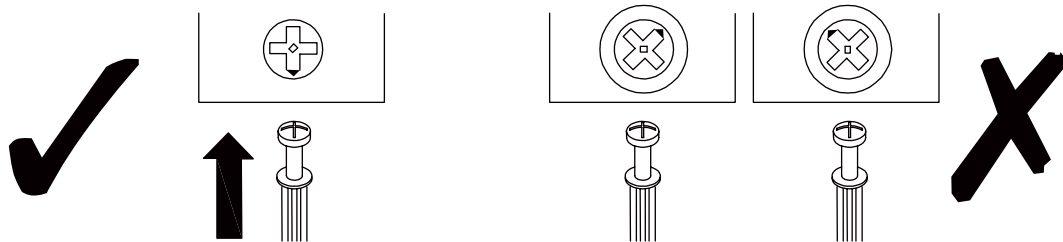










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










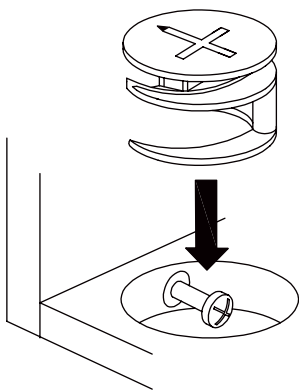





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.





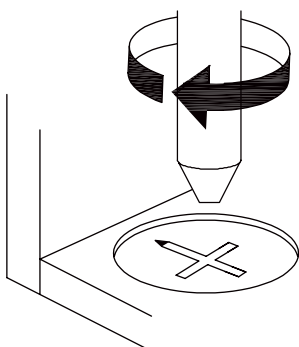














EN_Turn cam lock clockwise to tighten.

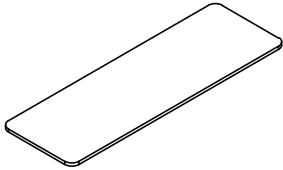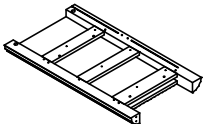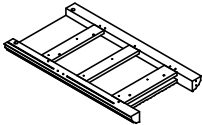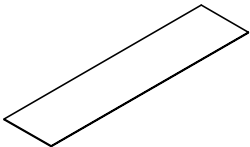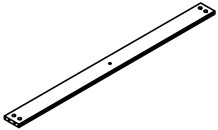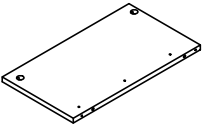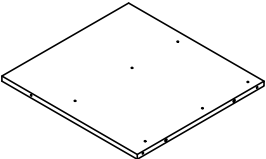
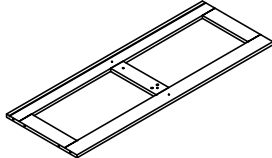
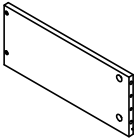
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x2	
7		x1	
8		x1	
9		x1	
10		x7	

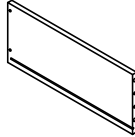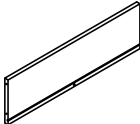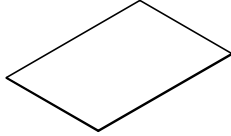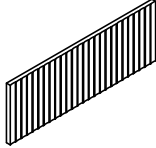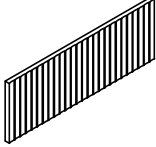NO.	PARTS	QTY	SPARE
11		x7	
12		x4	
13		x4	
14		x4	
15		x2	
16		x2	
17		x3	
18		x3	
19		x1	
20		x1	

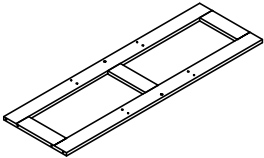NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
	 Hardware Kit	x1	

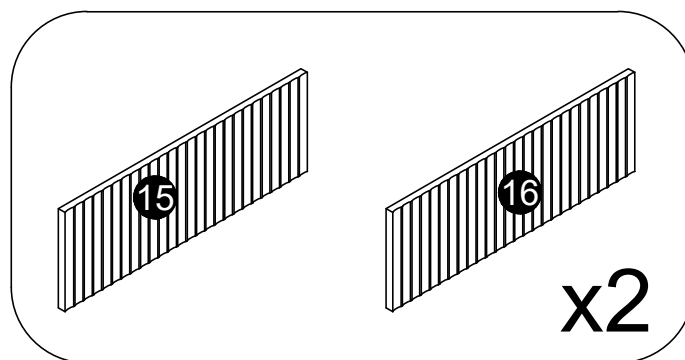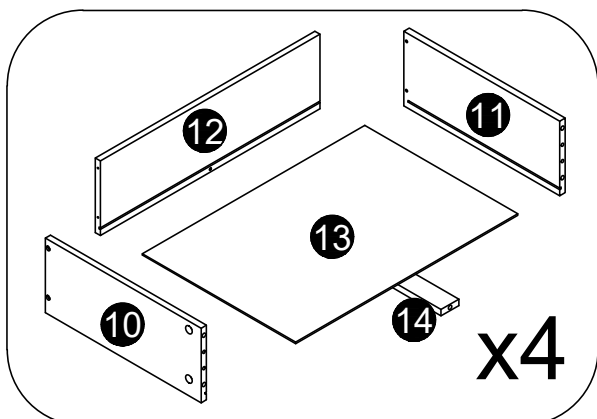
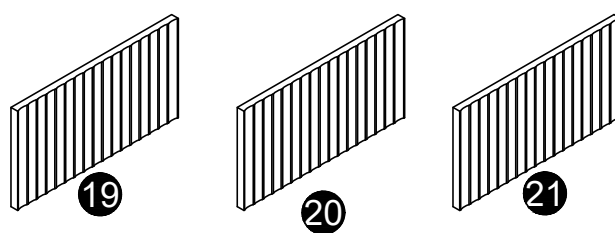
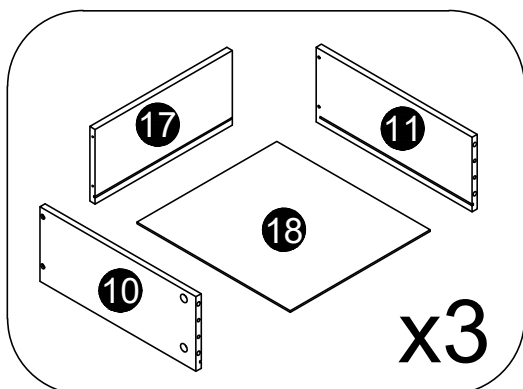
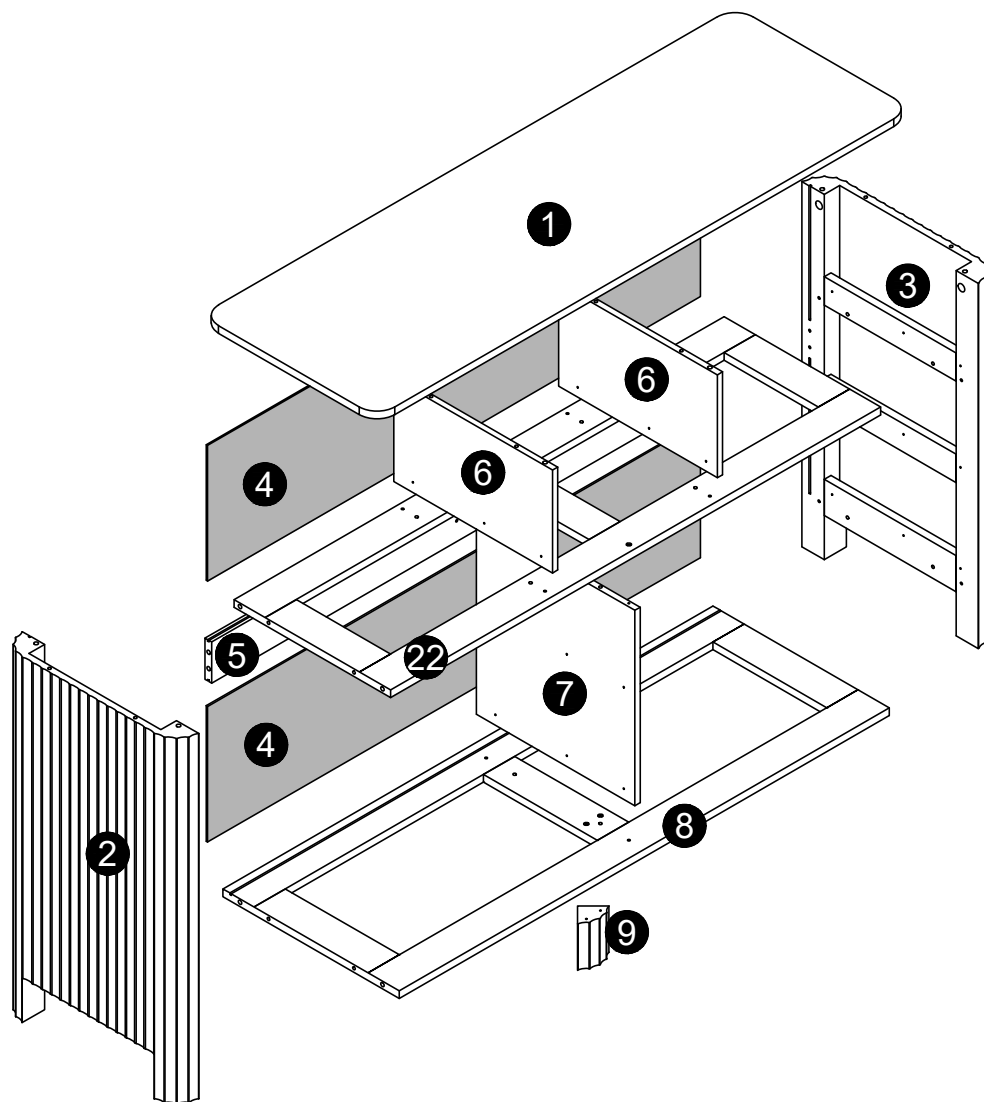




 A x52 Ø6x35mm +3(spare)	 B x52 Ø15x10mm +3(spare)	 C x52 Ø6x30mm +5(spare)	 D x43 Ø4x35mm +4(spare)	 E x84 Ø3.5x12mm +8(spare)	 F x7 F-1 F-2
 G x2 Ø4x35mm	 H x2	 I x1	 J x10 Ø3x16mm +1(spare) J-1 J-2	 K x2 Ø4x14mm K-1 K-2	 L x2
 M x4	 N x2 Ø6x30mm	 CL x7 L330mm	 CR x7 L330mm	 DL x7 L330mm	 DR x7 L330mm



 A x20	 B x20	 C x16	 D x20
---	---	---	---



01

x4

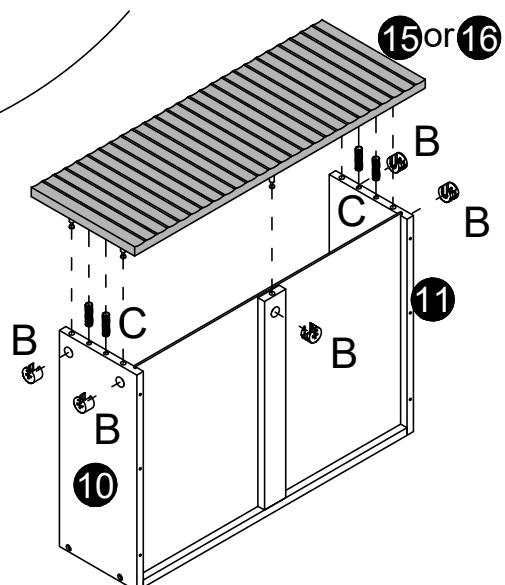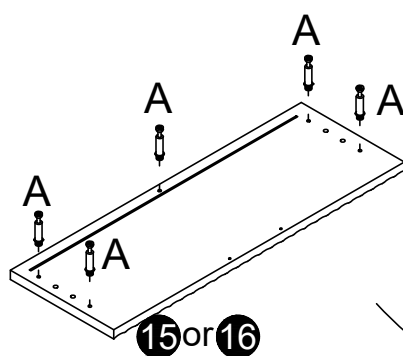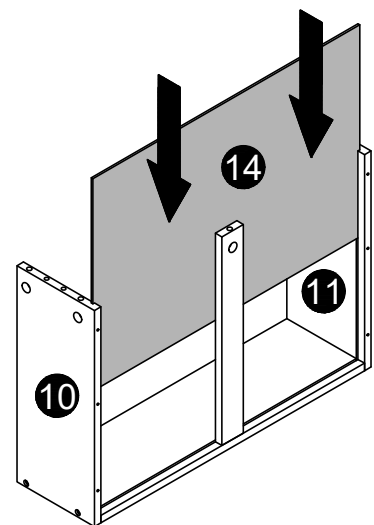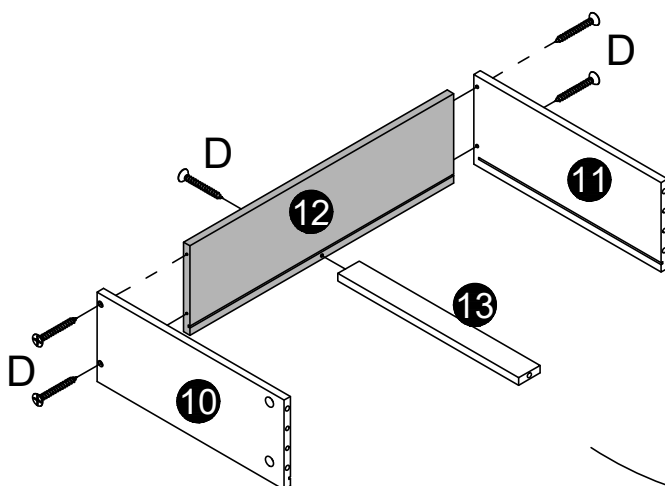

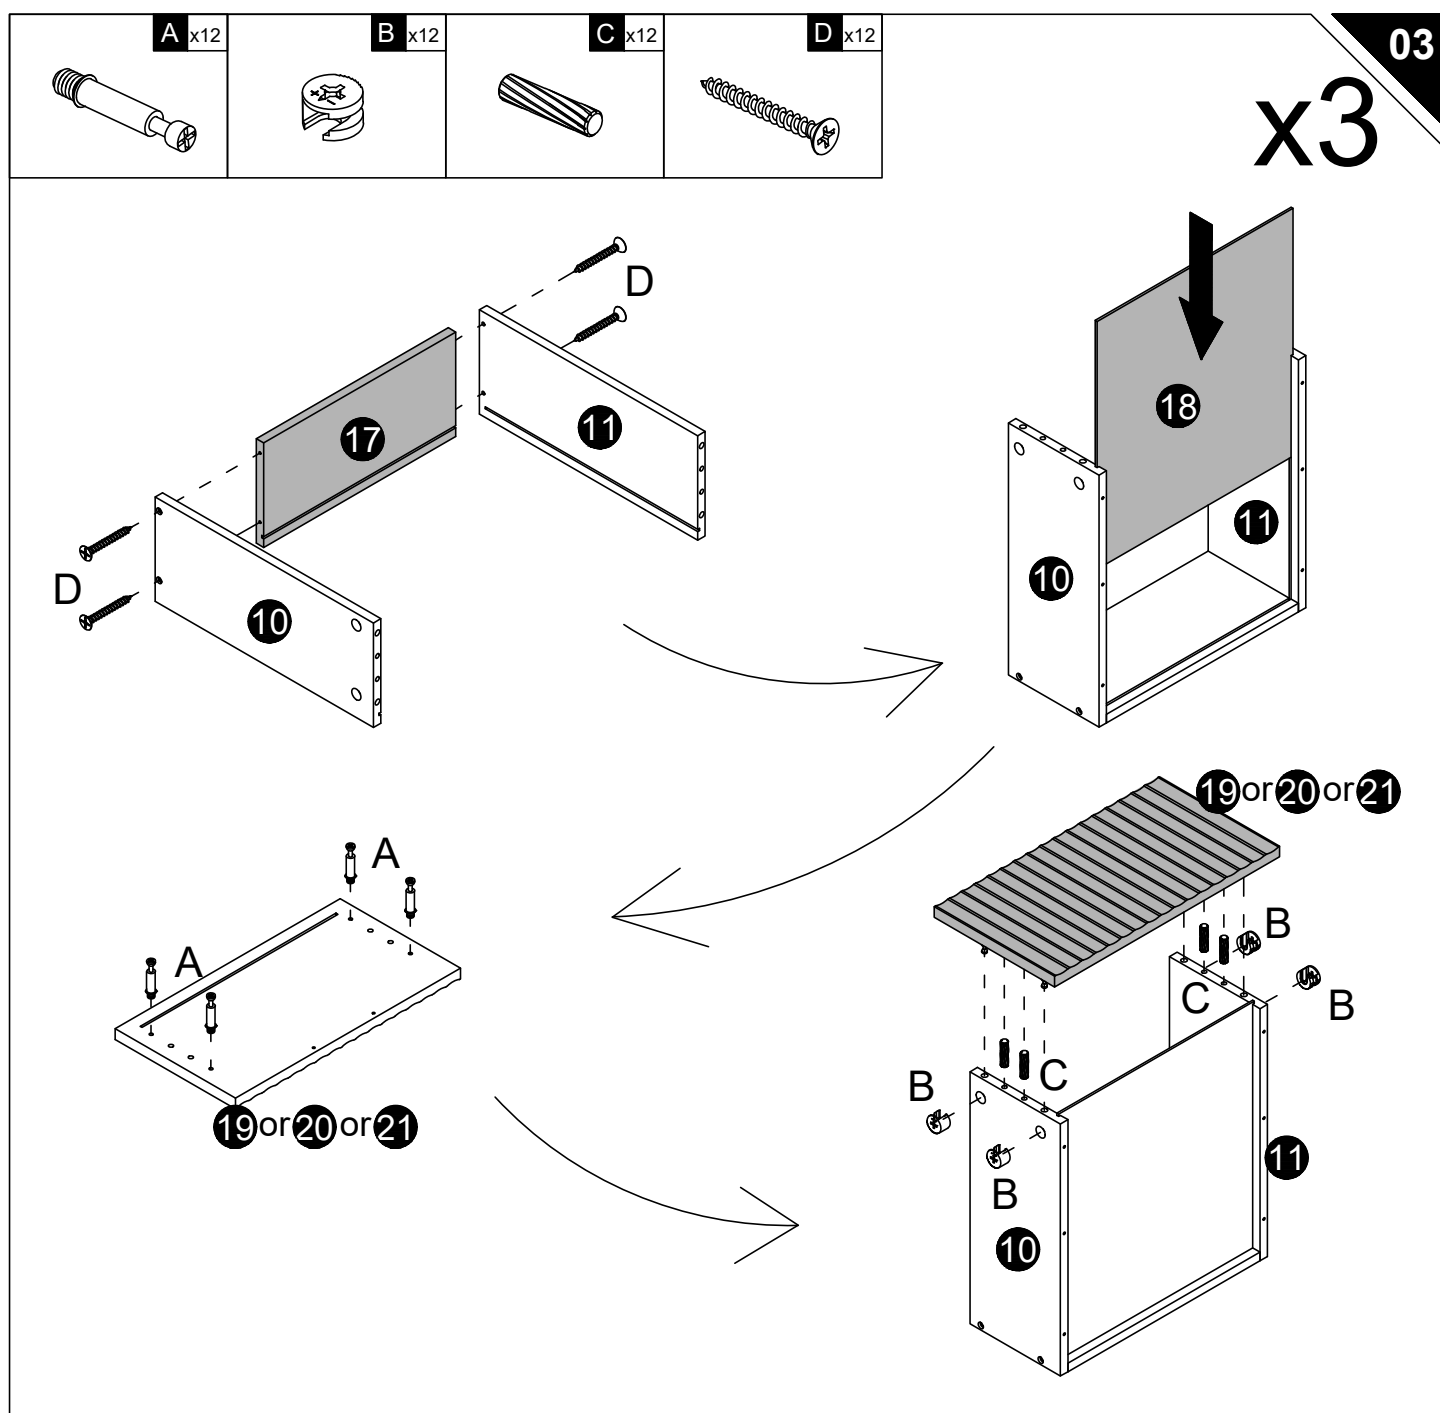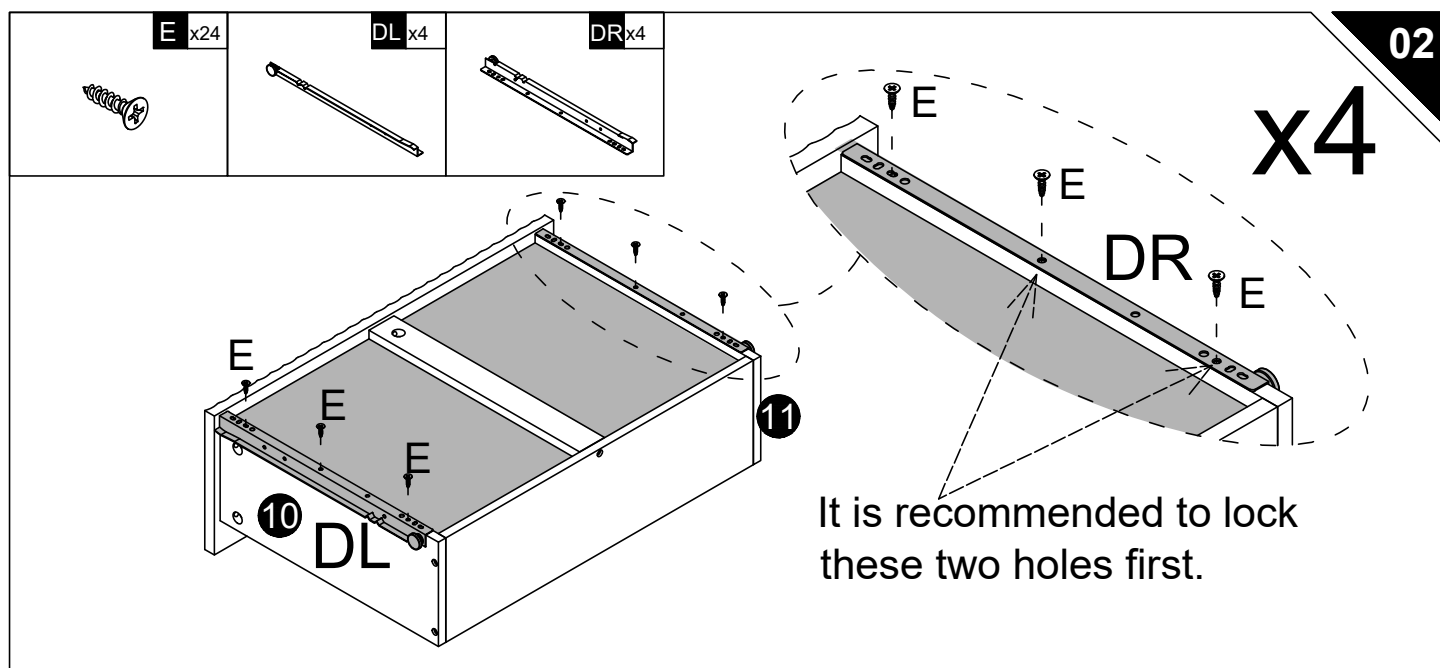

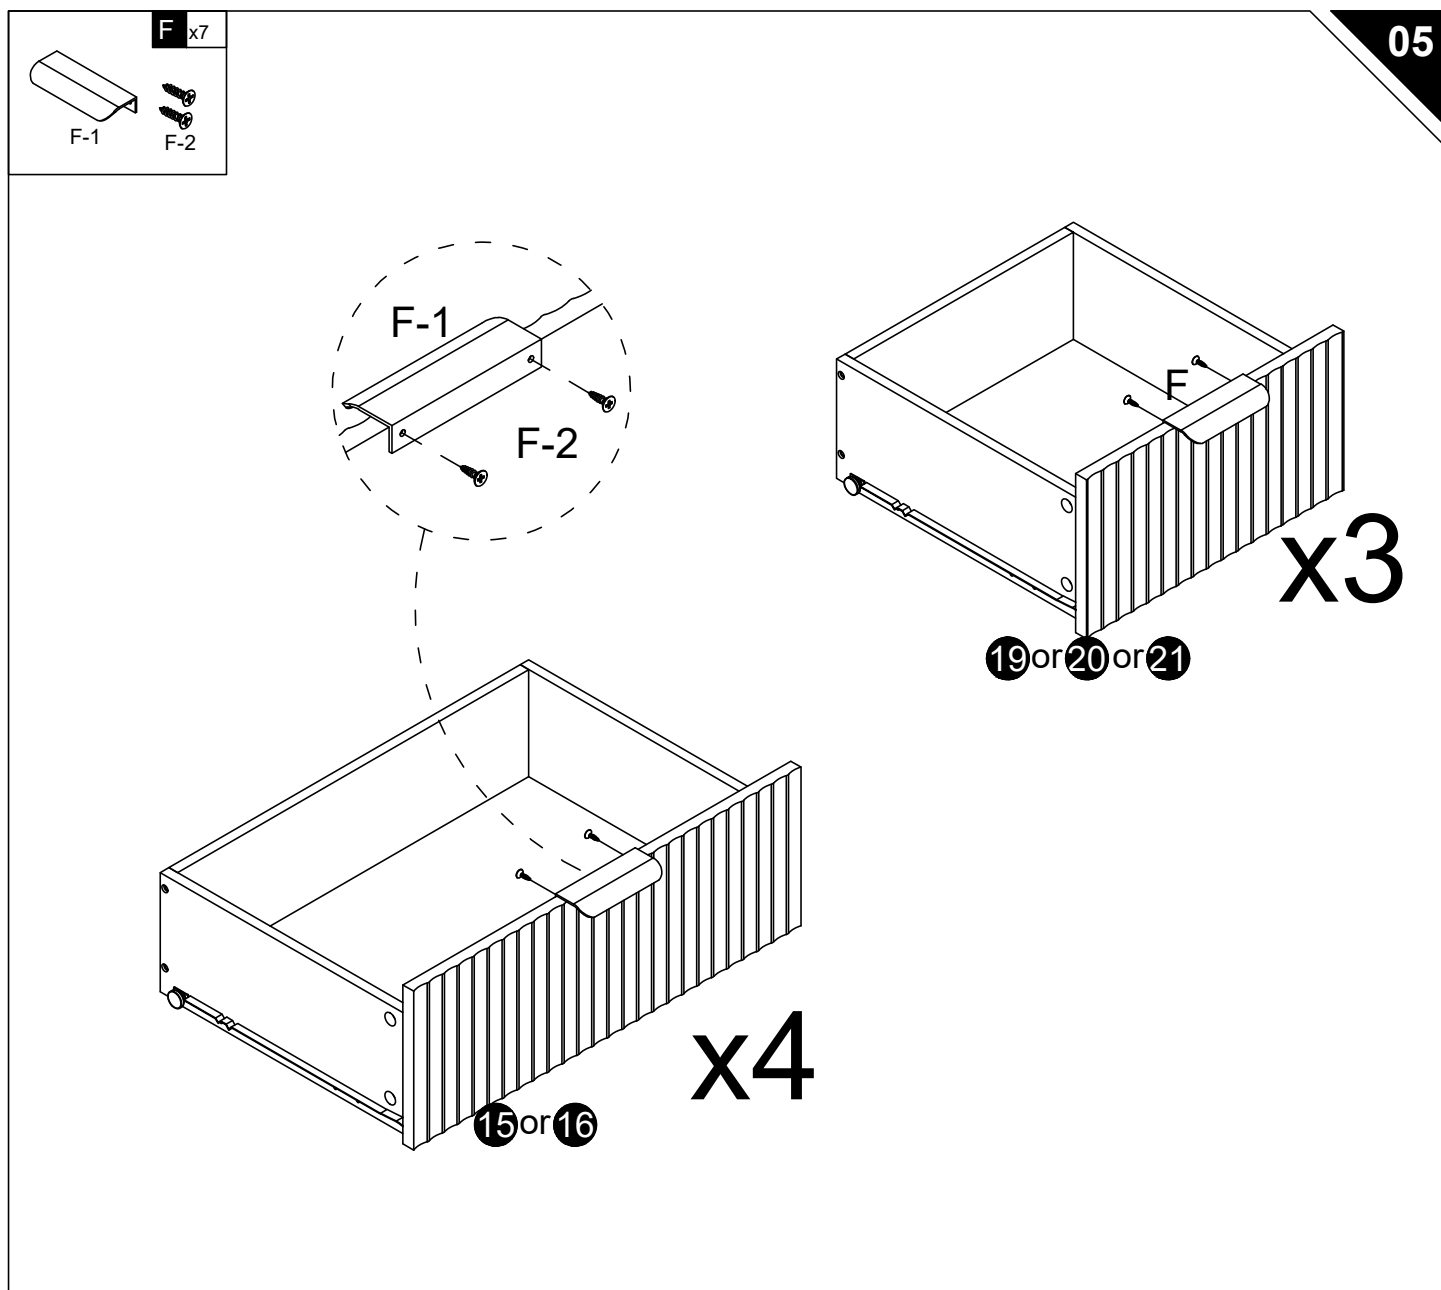
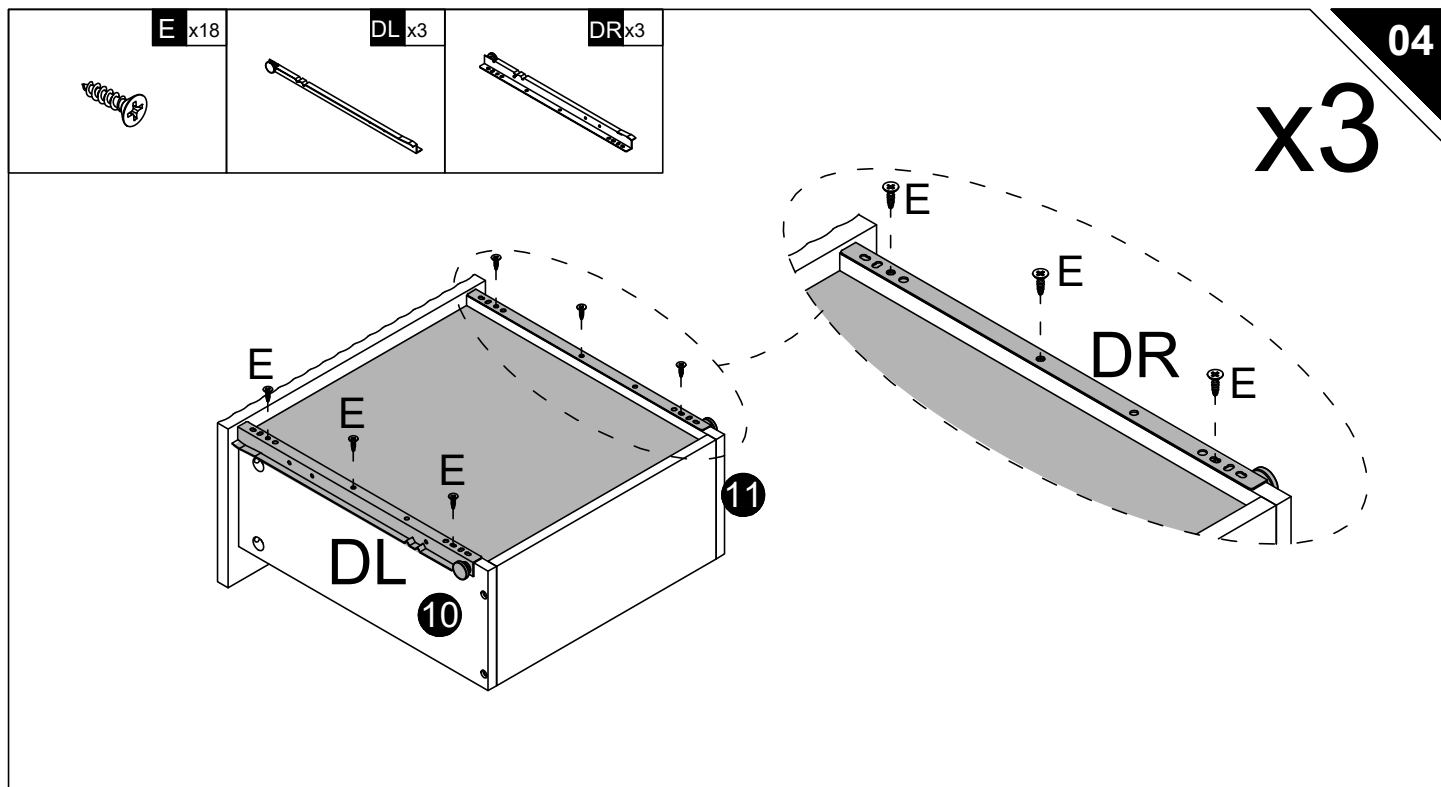


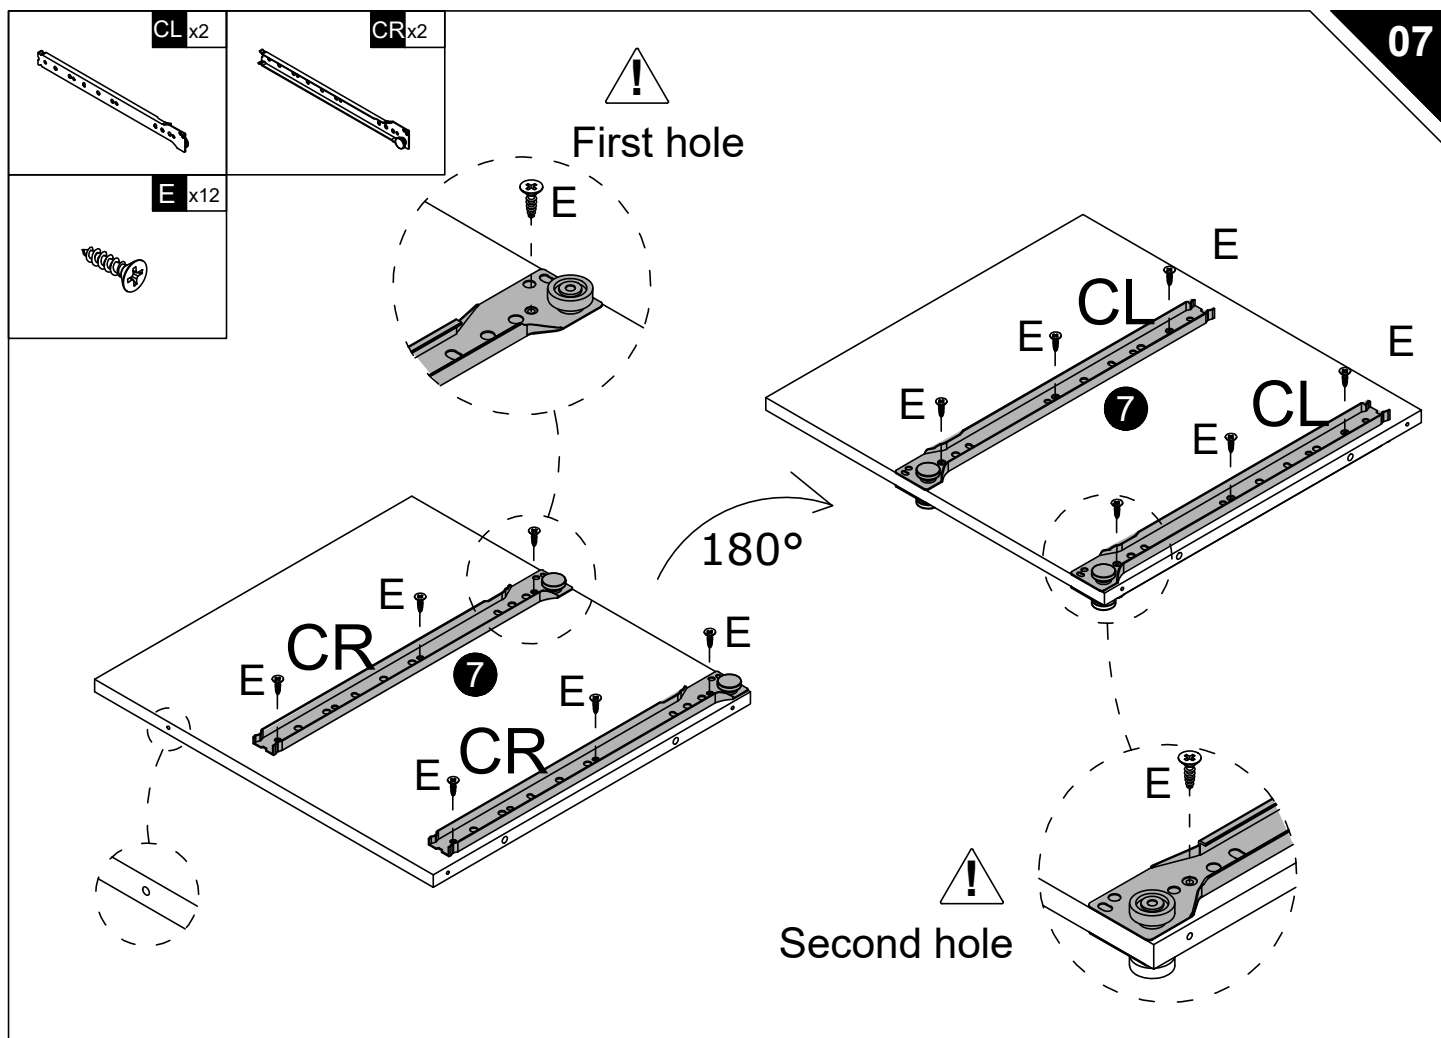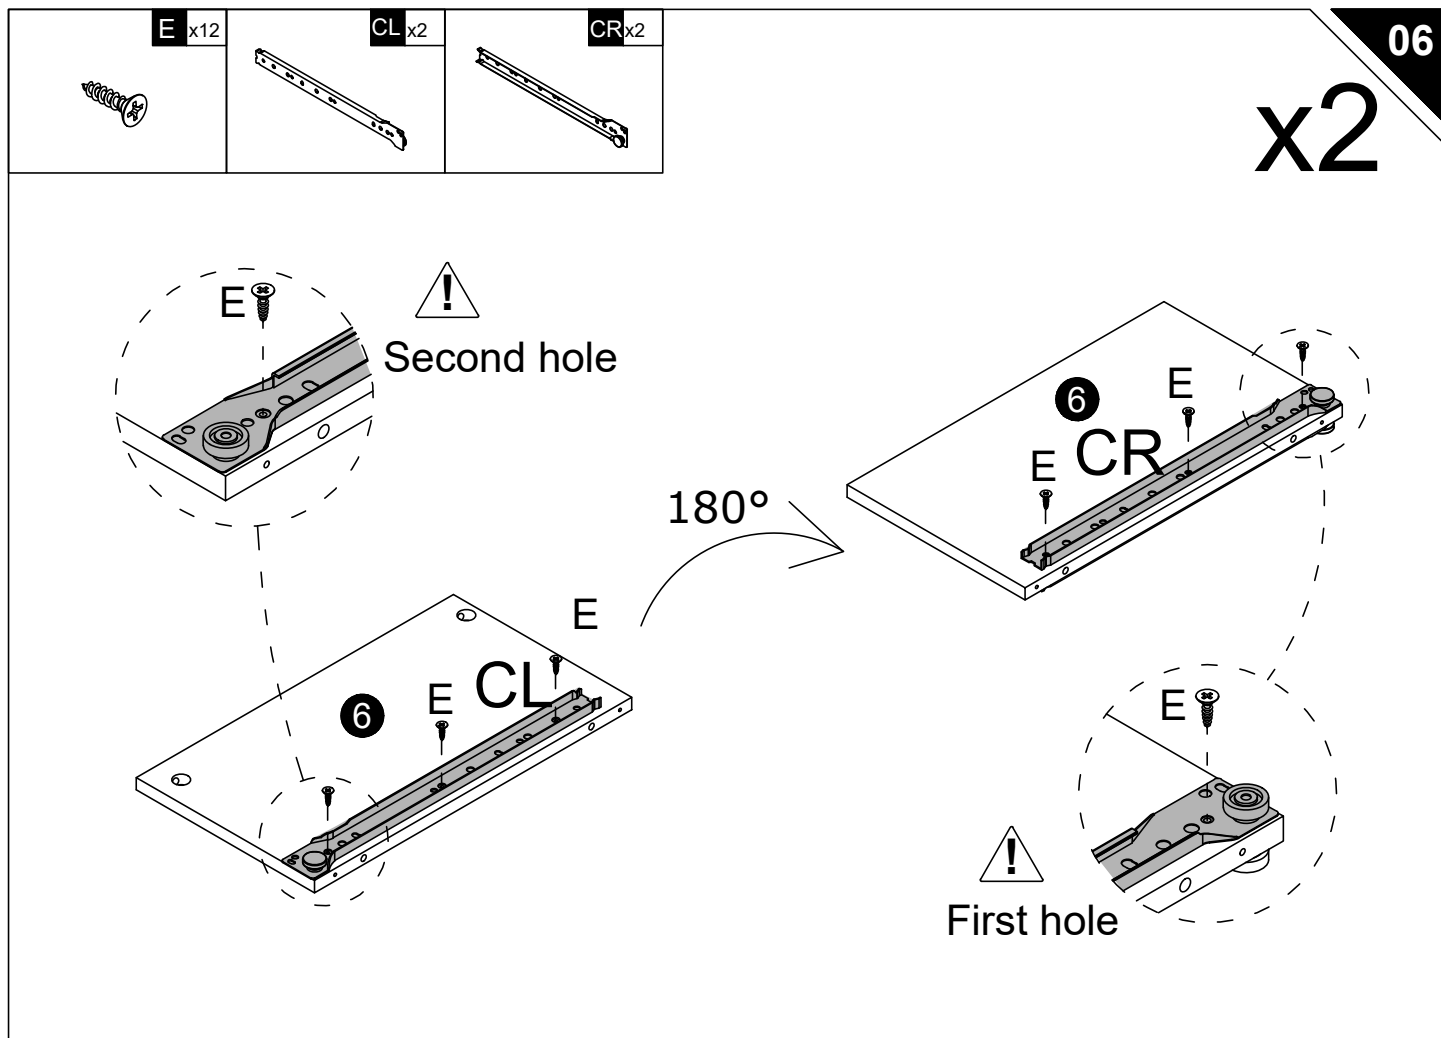

E x9



CL x3

08

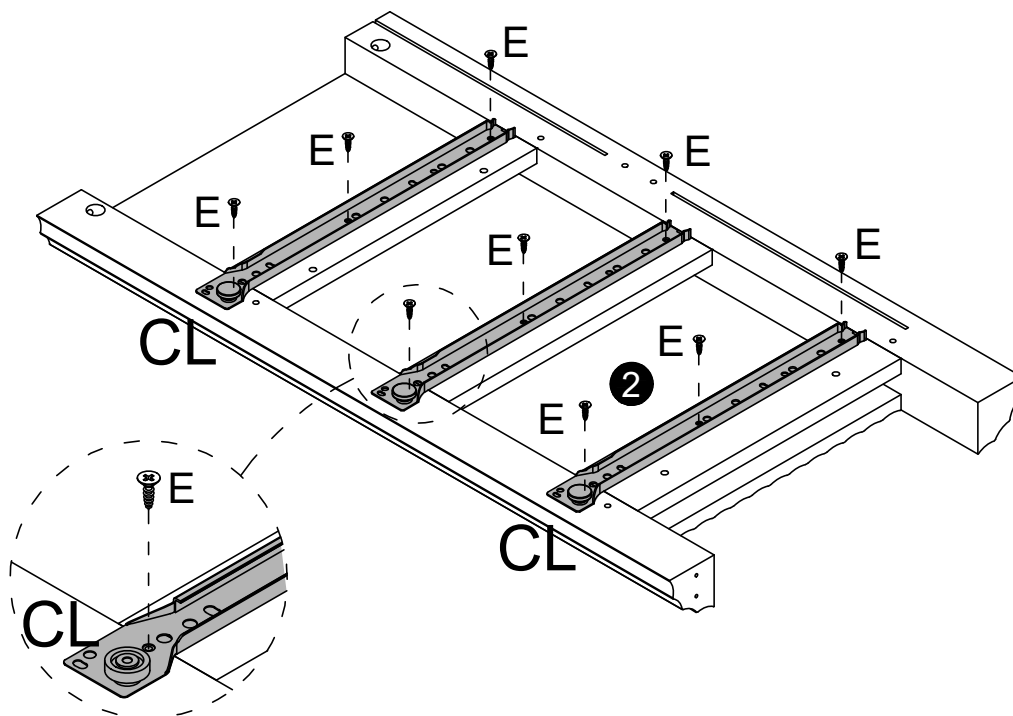

A x6



09

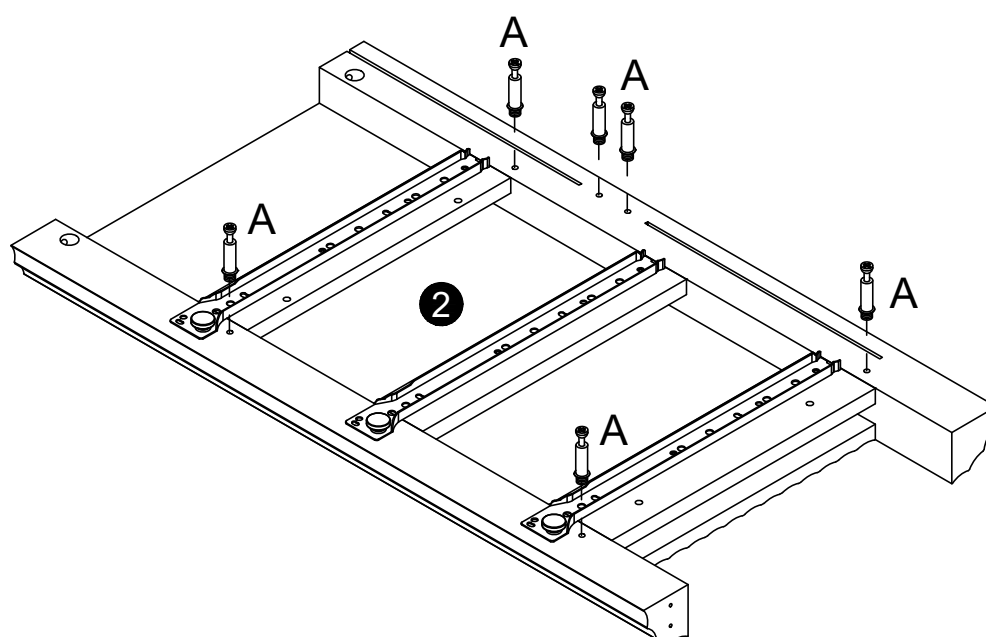

E x9



CR x3

10

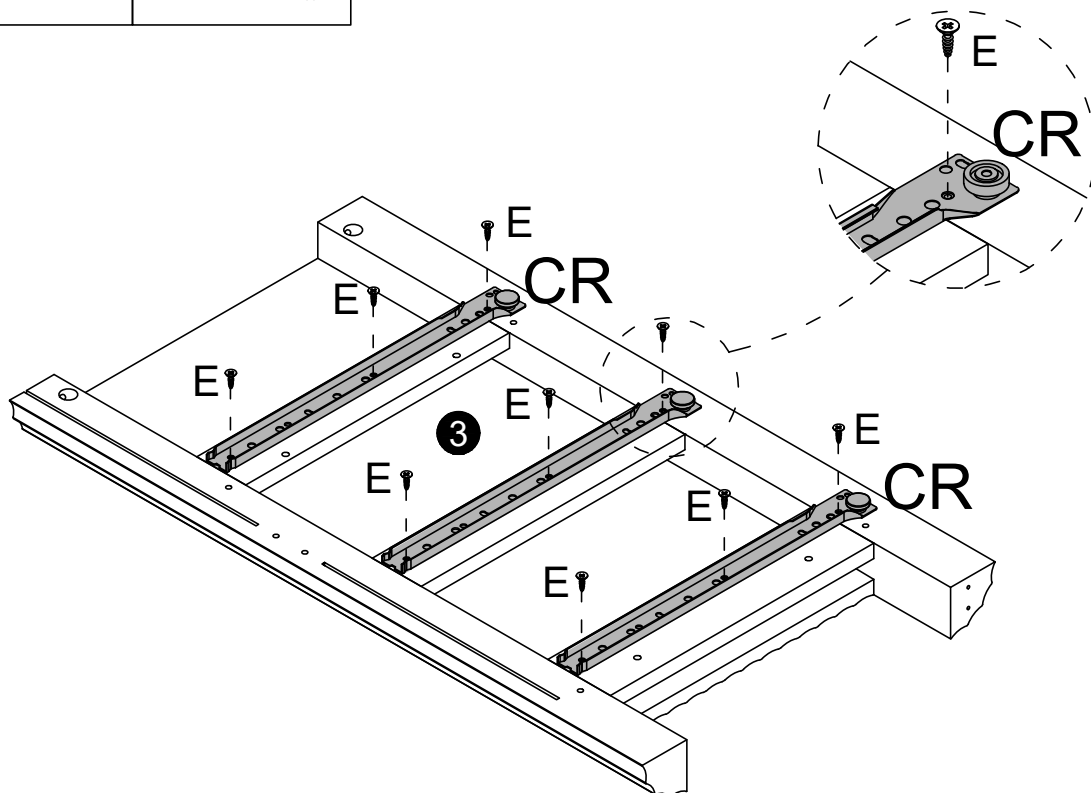


A x6

11


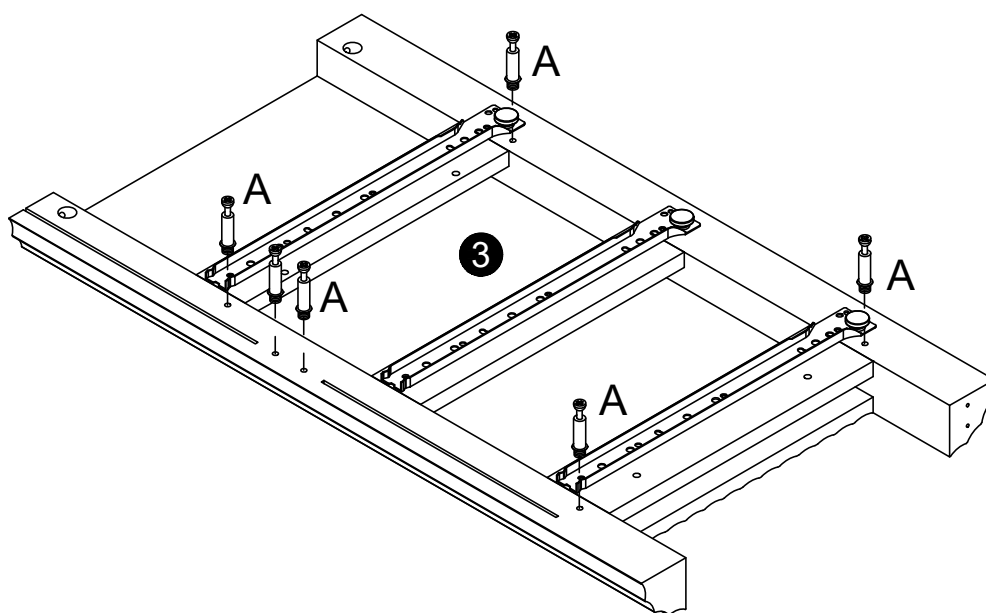



C x4

D x4









Pay attention to
the position of the
holes.

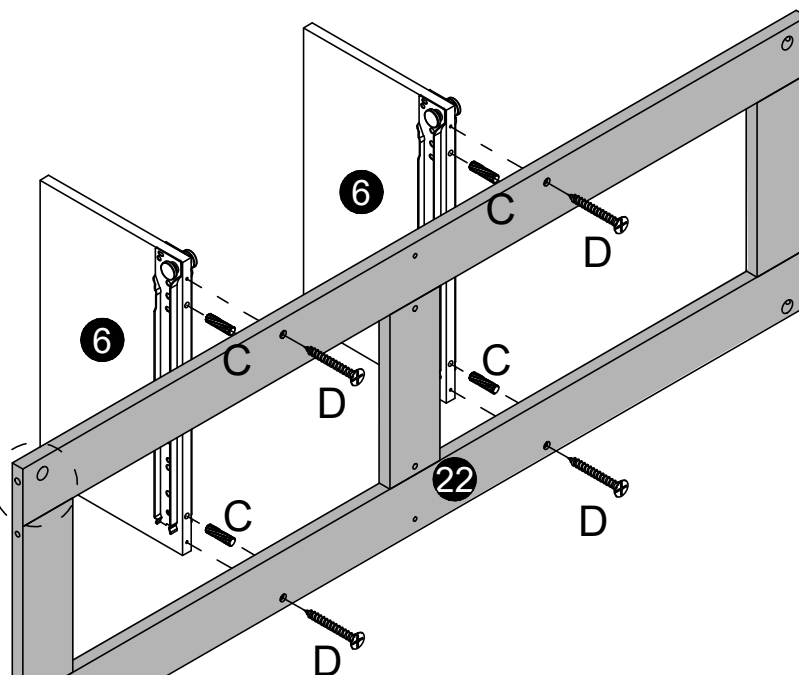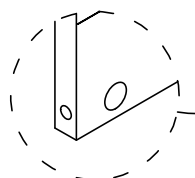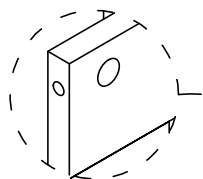

C x2

D x2

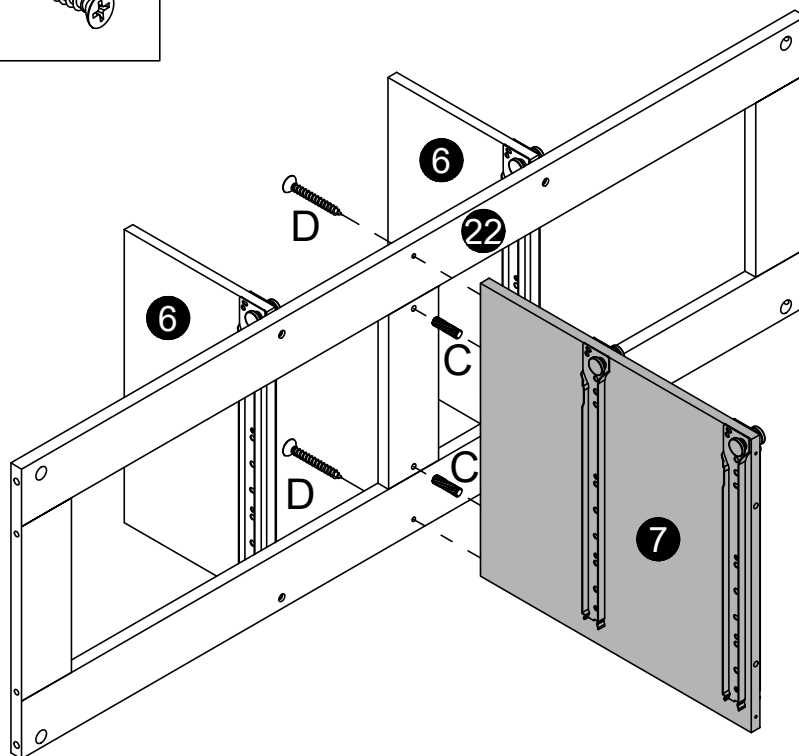



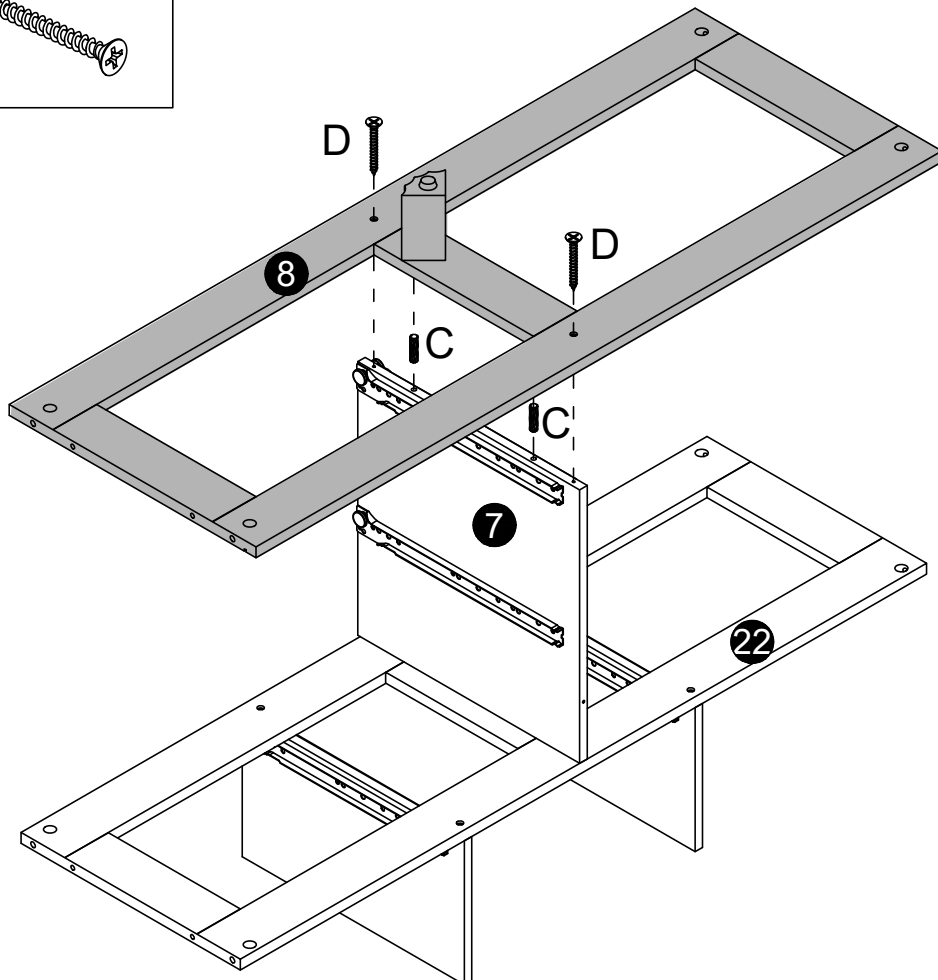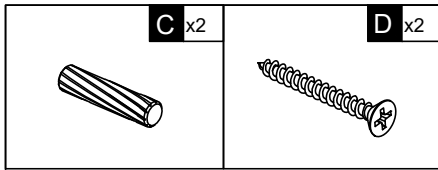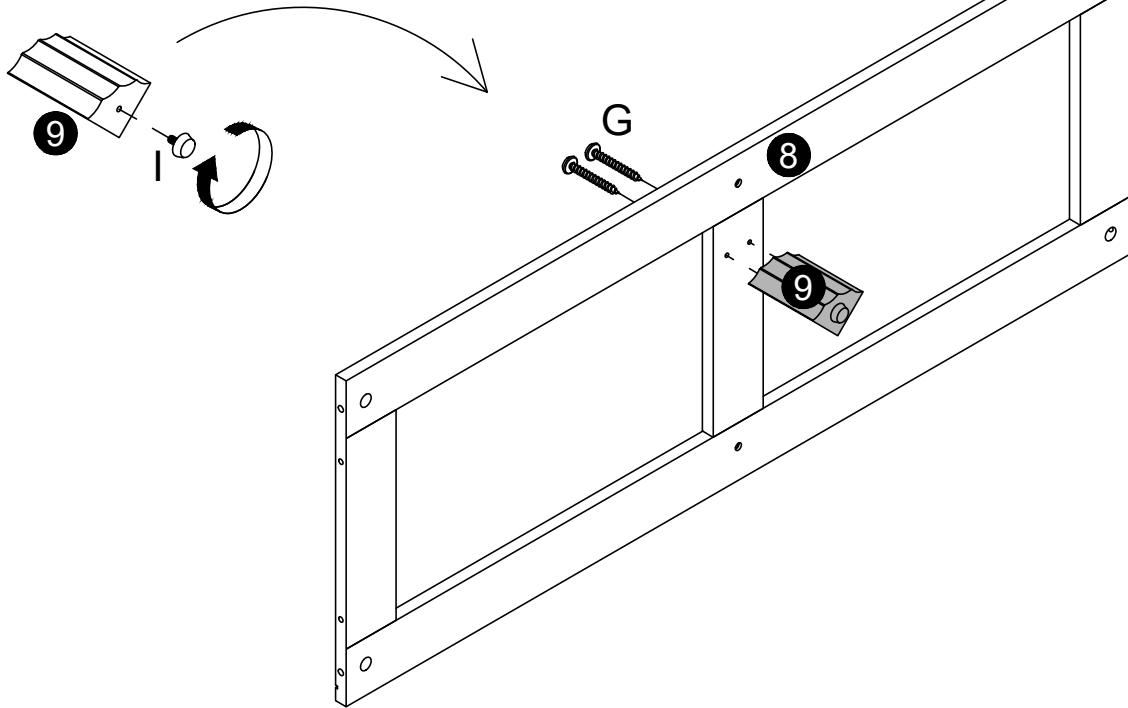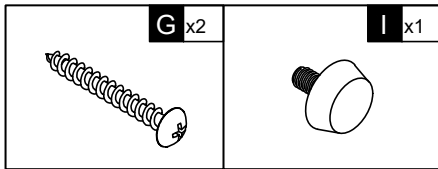

B x6








C x4

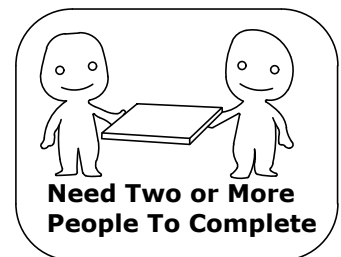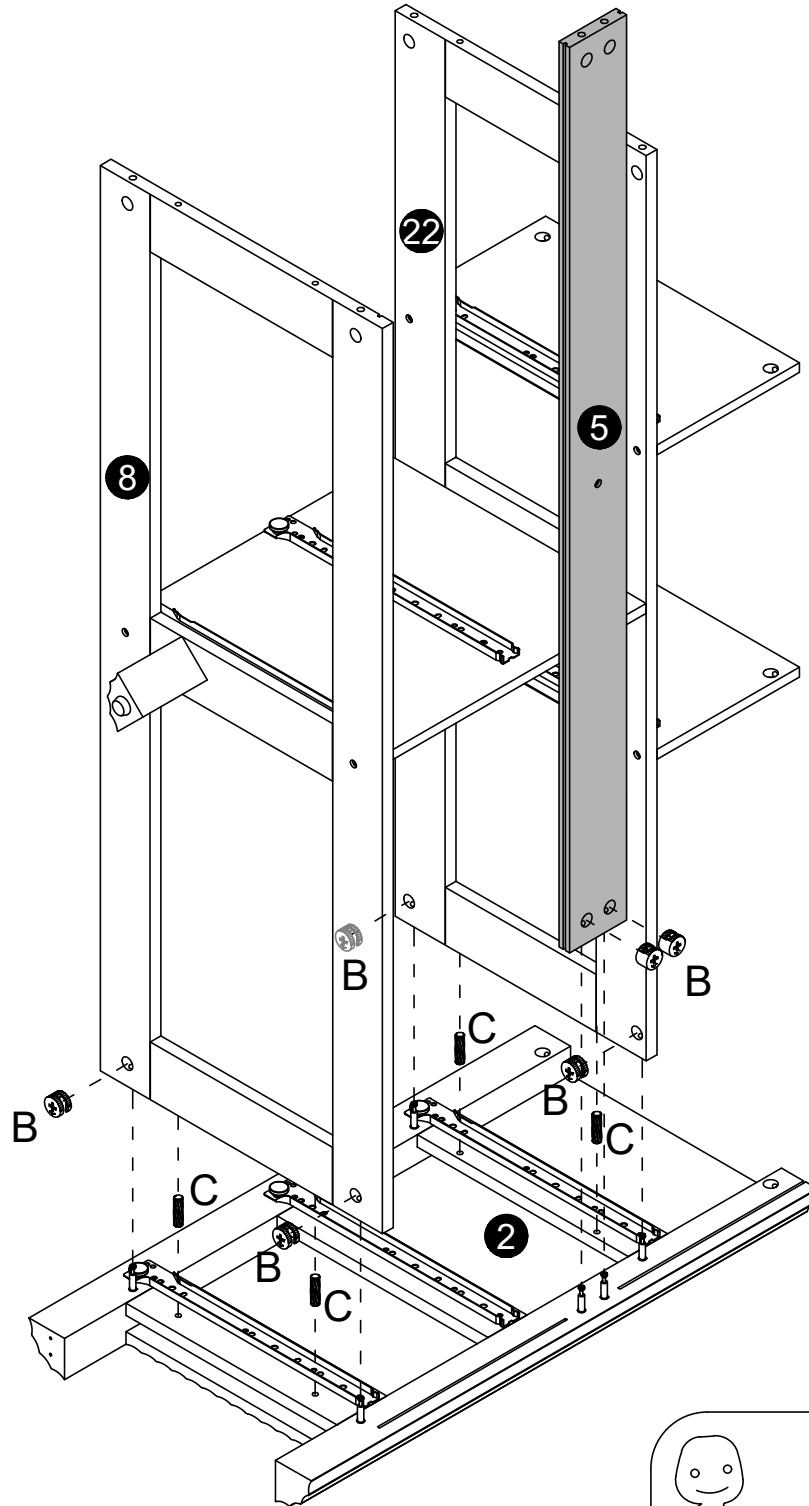

C x4

D x1

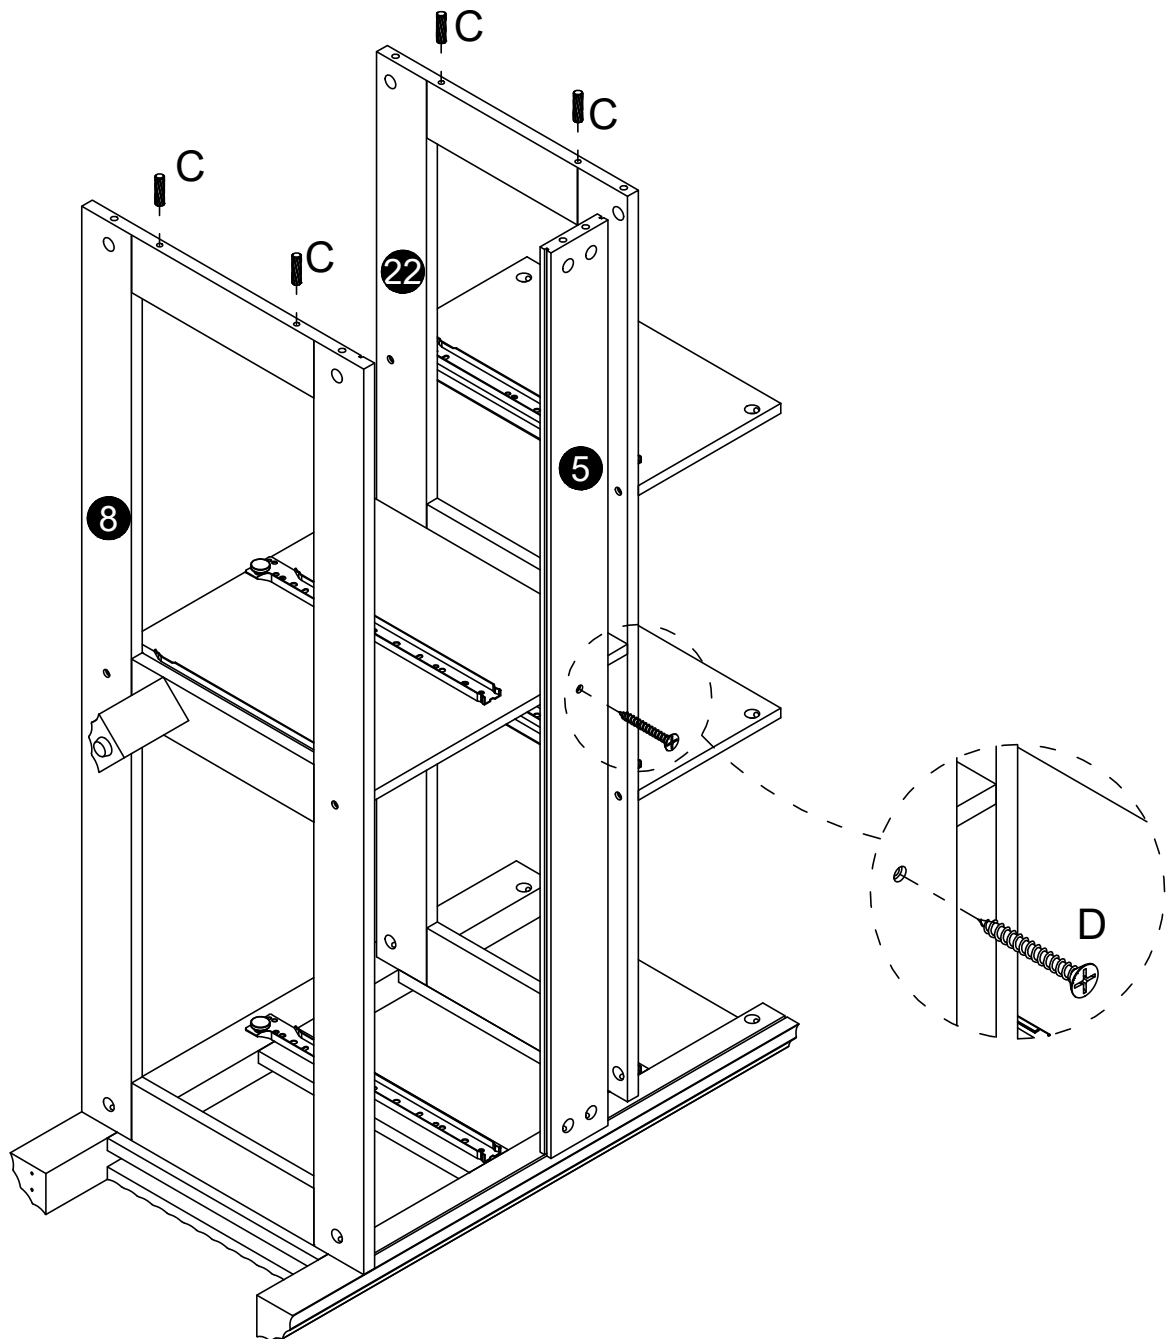


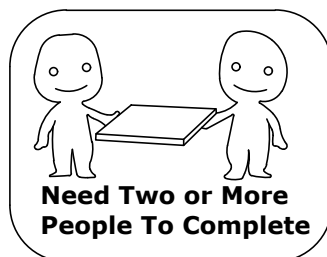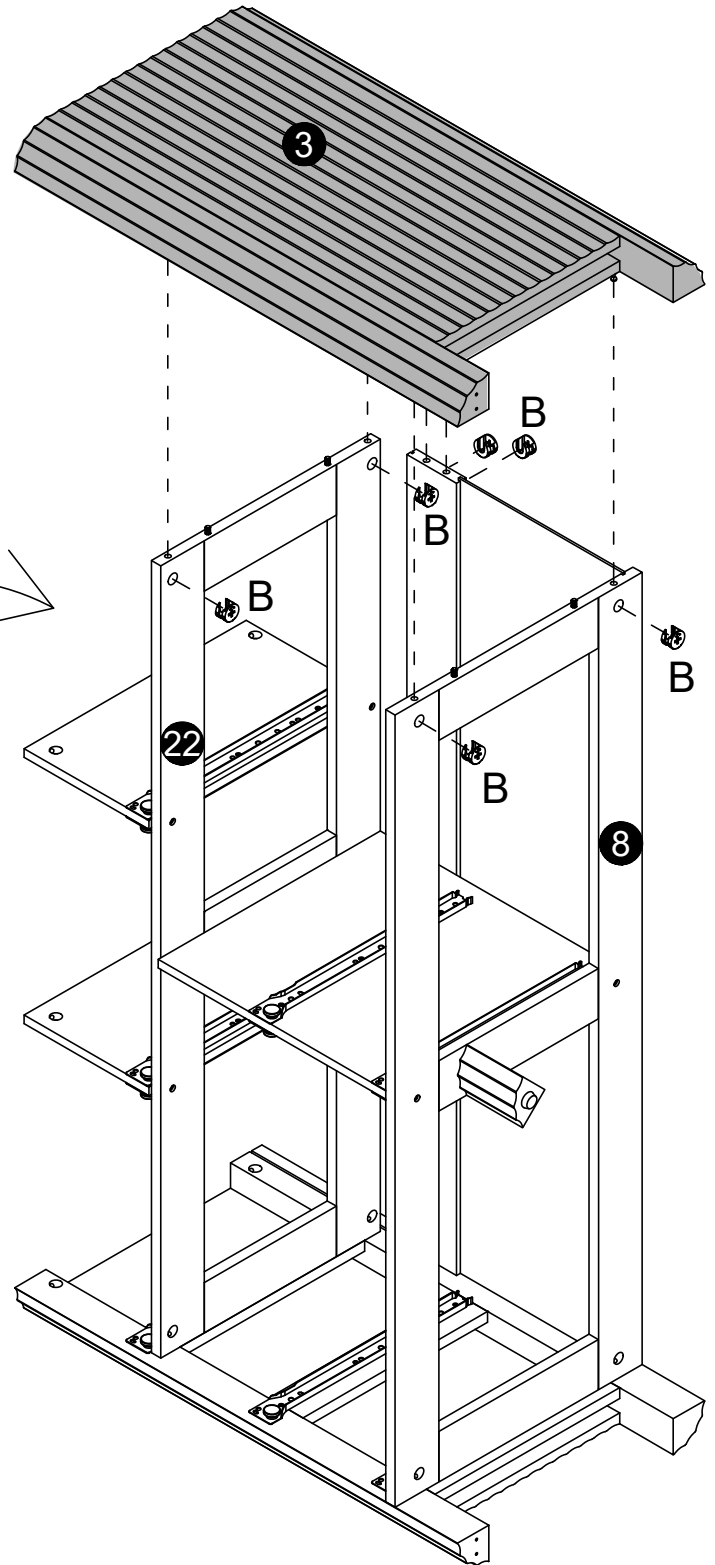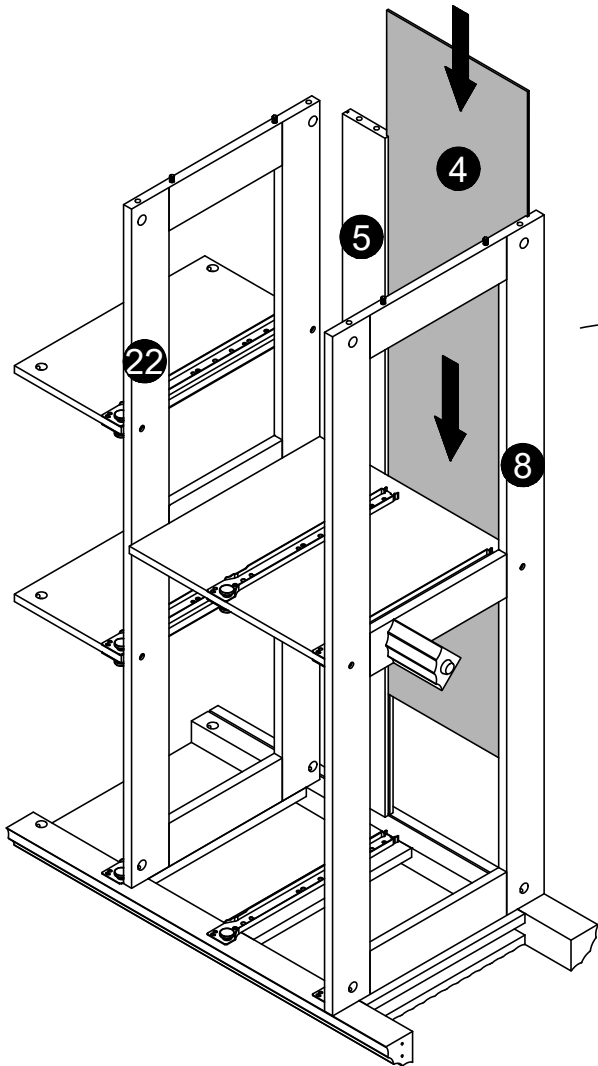



H x2



L x2




M x4

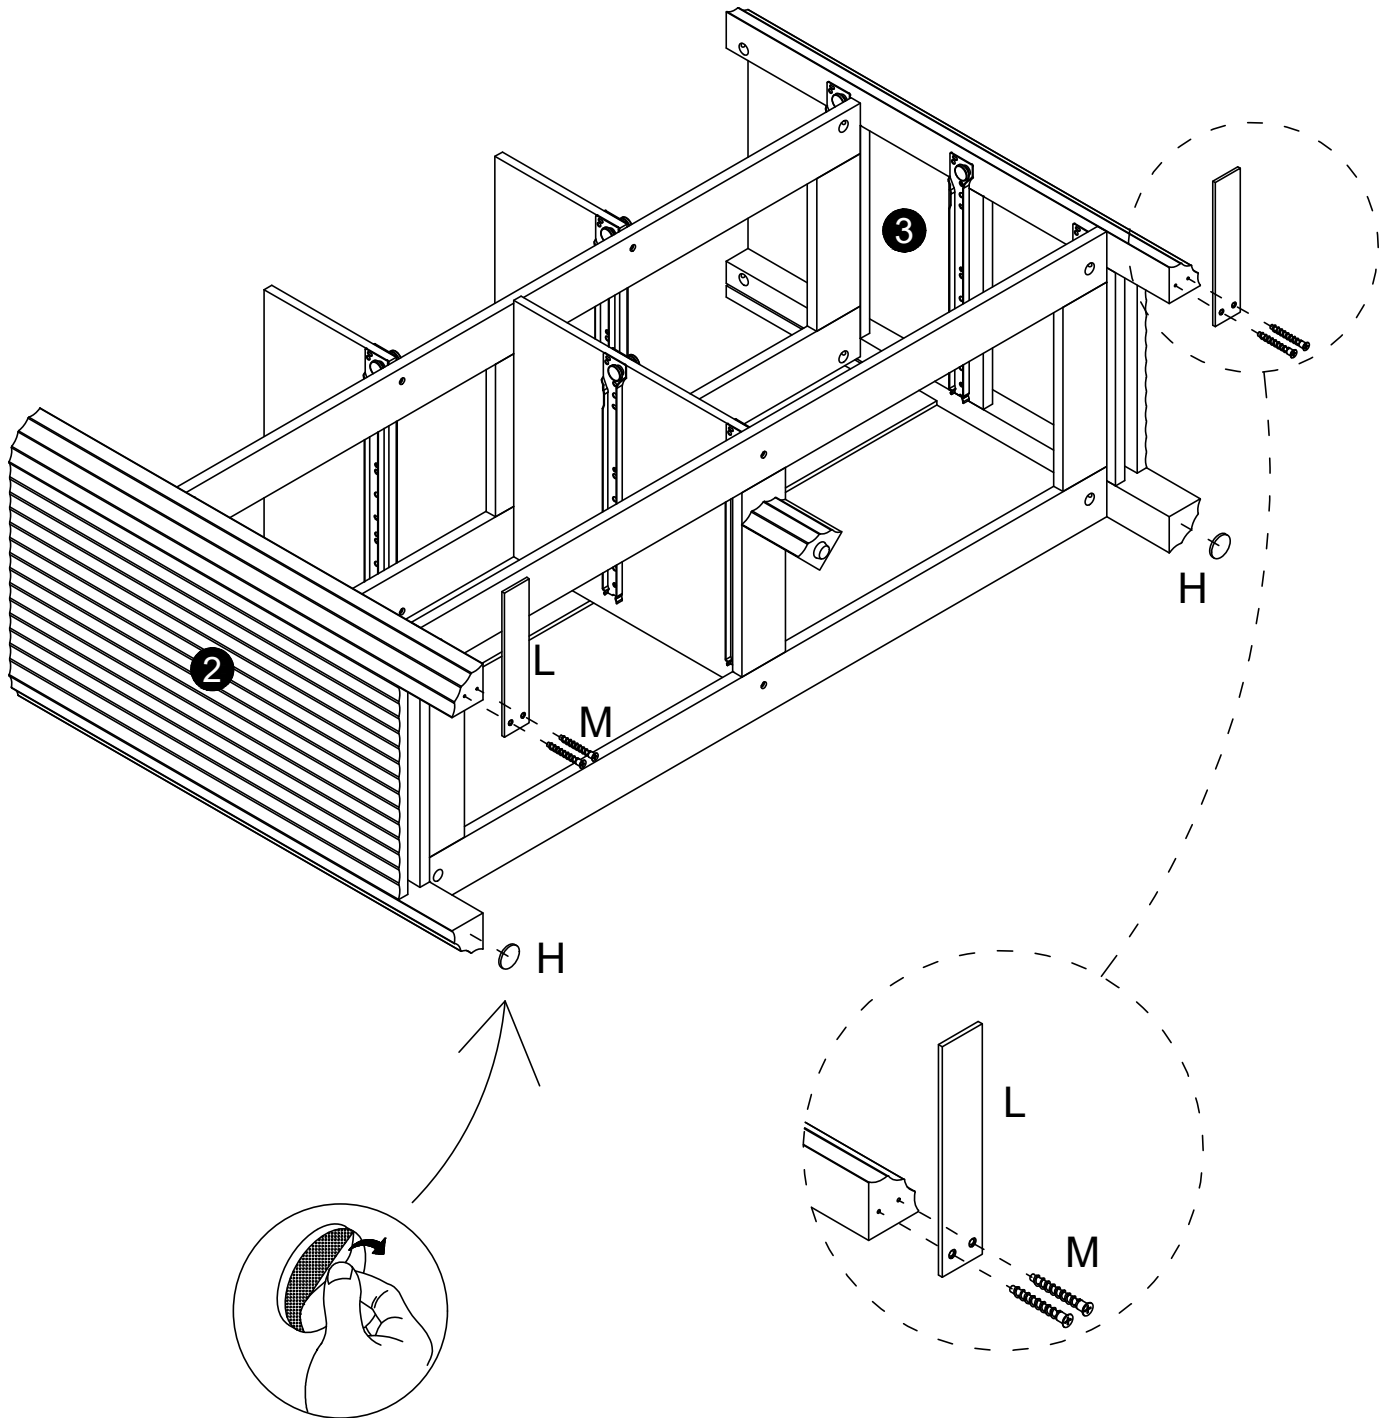


C x8




20

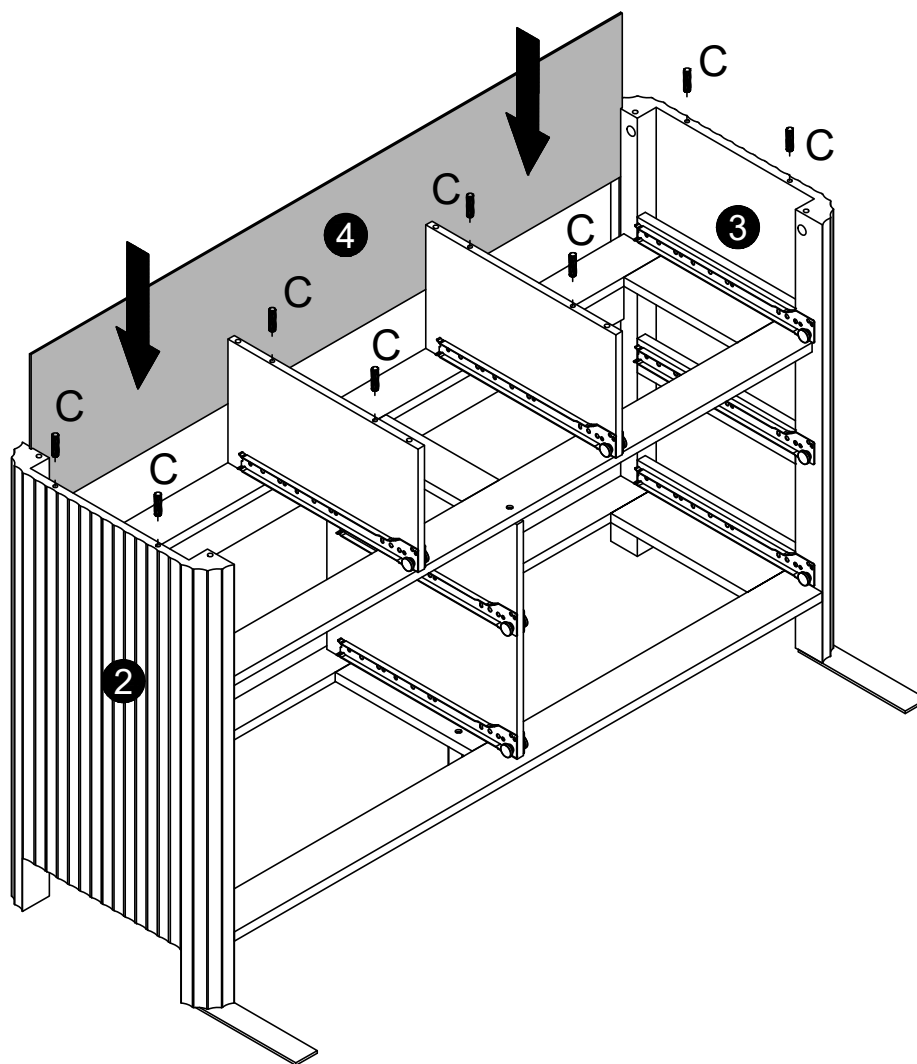

A x8




21

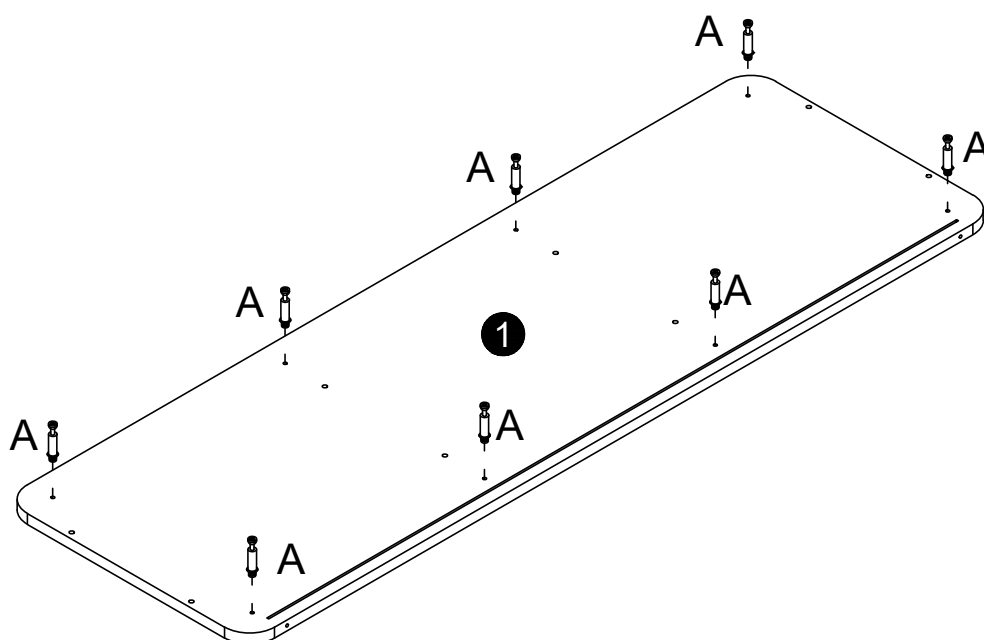

B x8



22

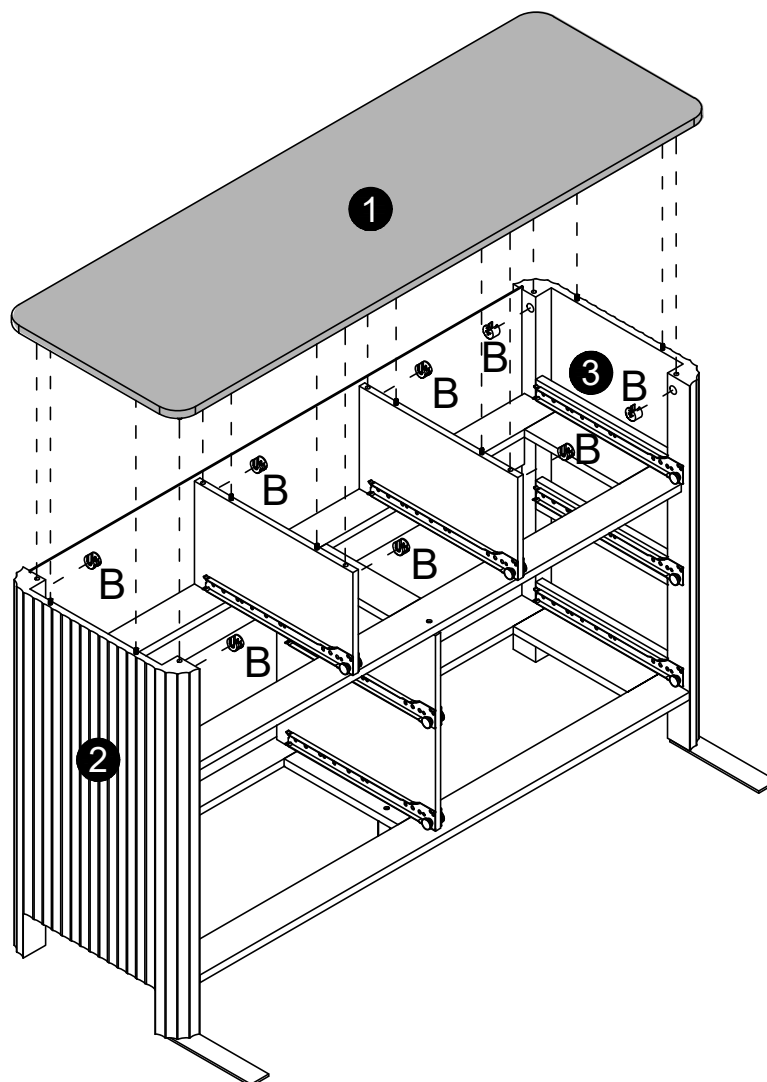

J x10





J-1




J-2

23

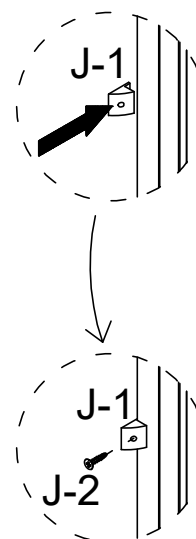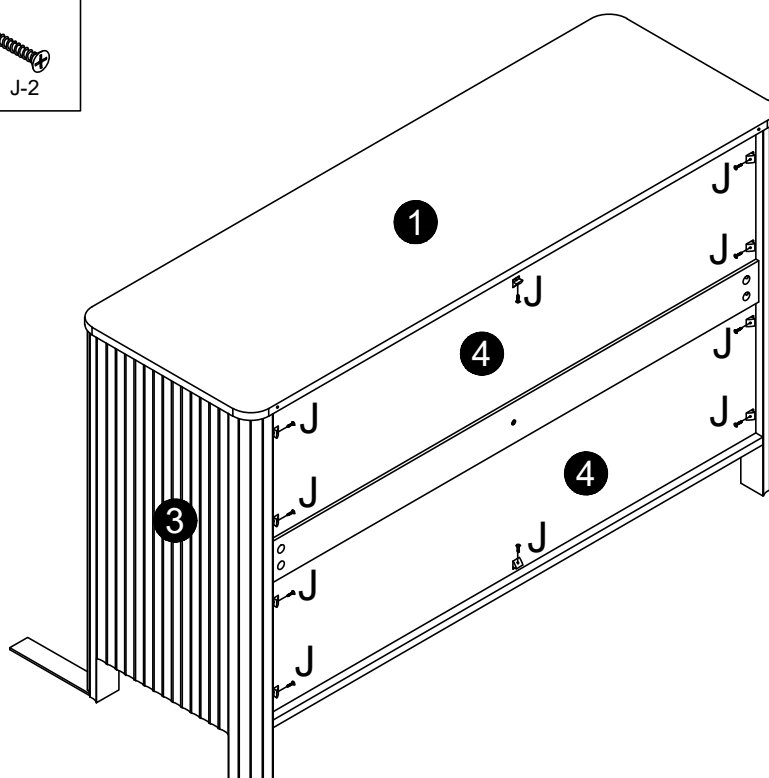




Attention:




There are three types of drawers, namely drawer 15 , 19 on the left, drawer 16 , 21 on the right and drawer 20 in the middle. The following illustration shows Drawer 15 , 19 on the left .

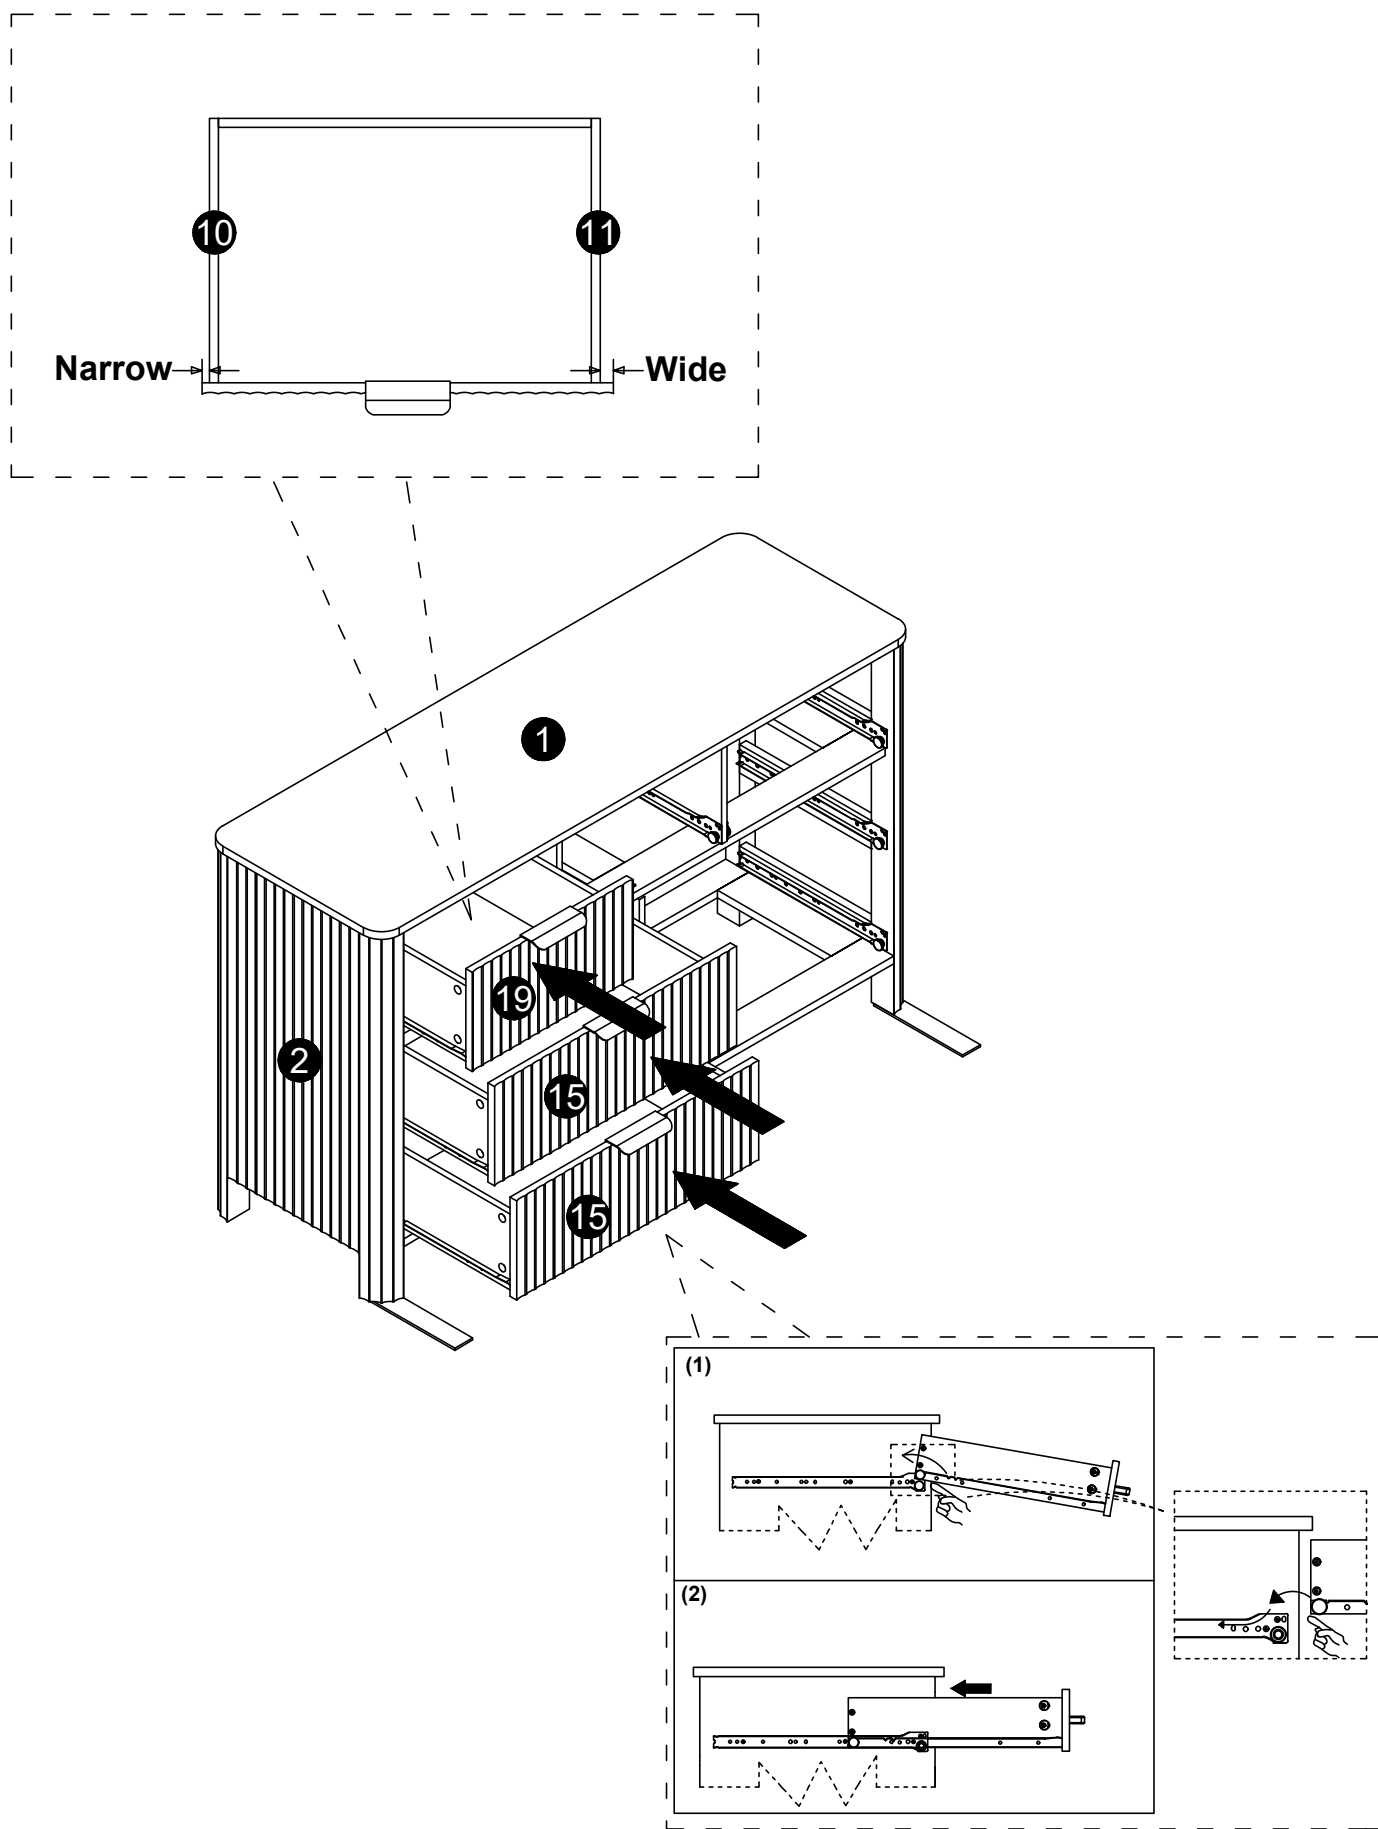

Attention:


There are three types of drawers, namely drawer 15 , 19 on the left, drawer 16 , 21 on the right and drawer 20 in the middle. The following illustration shows Drawer 16 , 21 on the right .

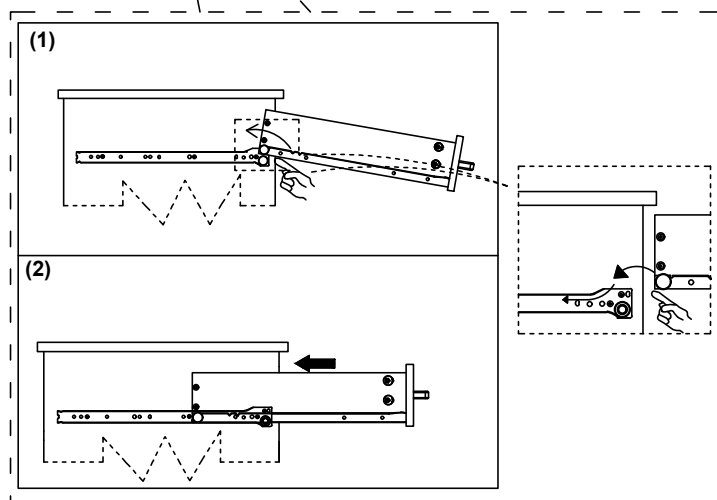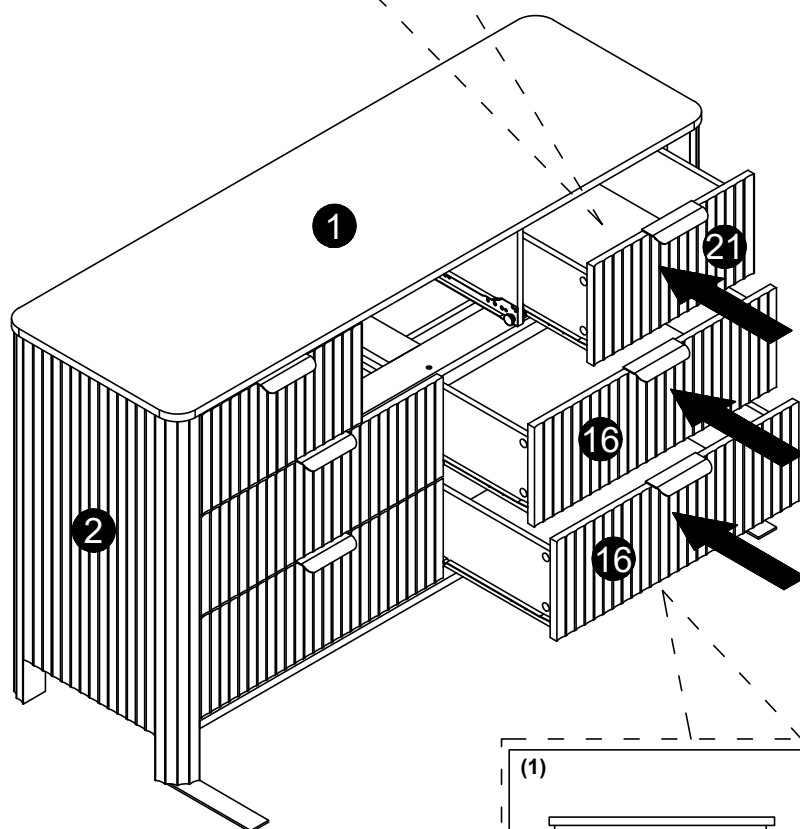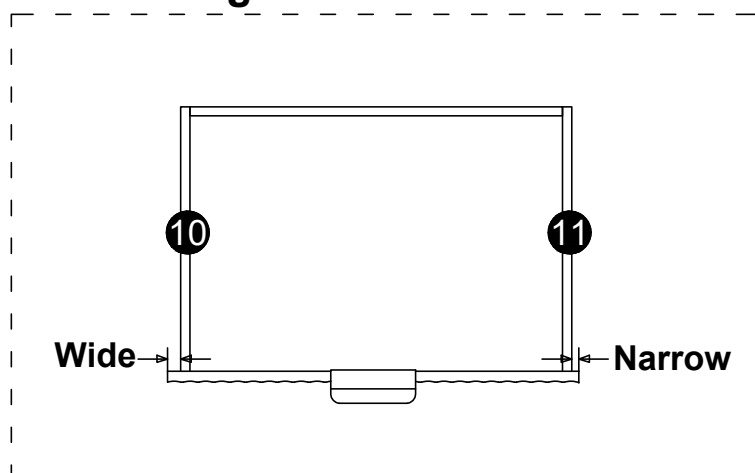

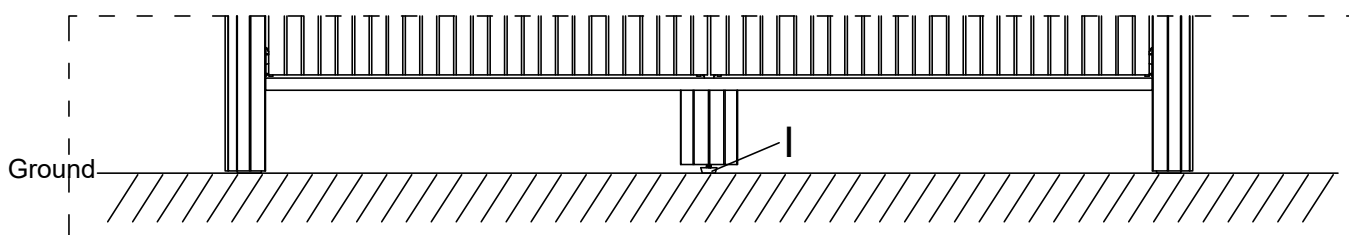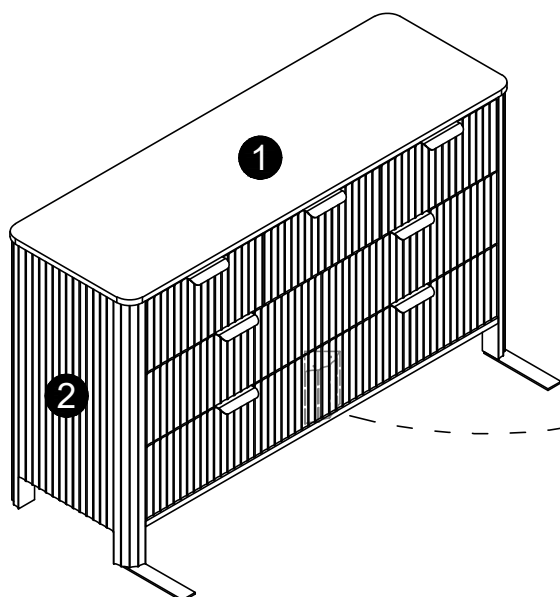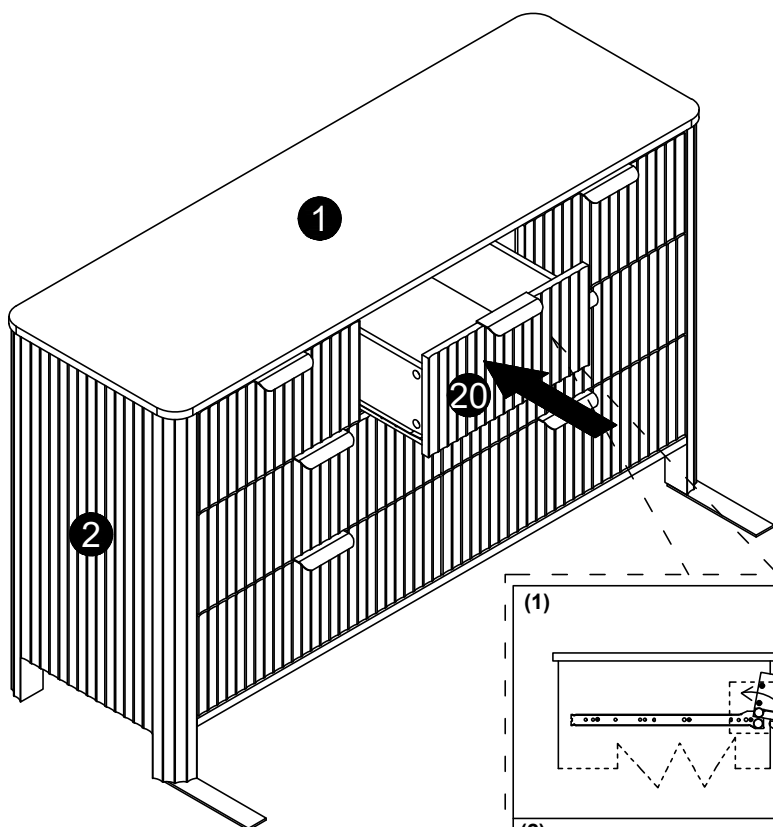


If the cabinet is unstable with the ground, please rotation control the foot fitting (I)


D x2



K x2



N x2



K-1

K-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

WALL

N

(4)x2

Then, put the expansion bolt into the hole

WALL

D

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

N K D

WALL

N K D

