
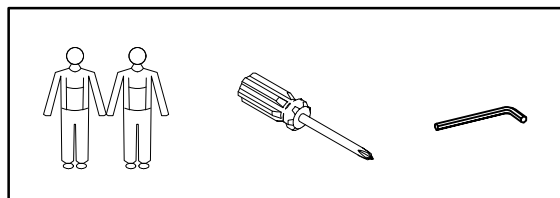


BED FRAME WITH HEADBOARD

ASSEMBLY INSTRUCTION

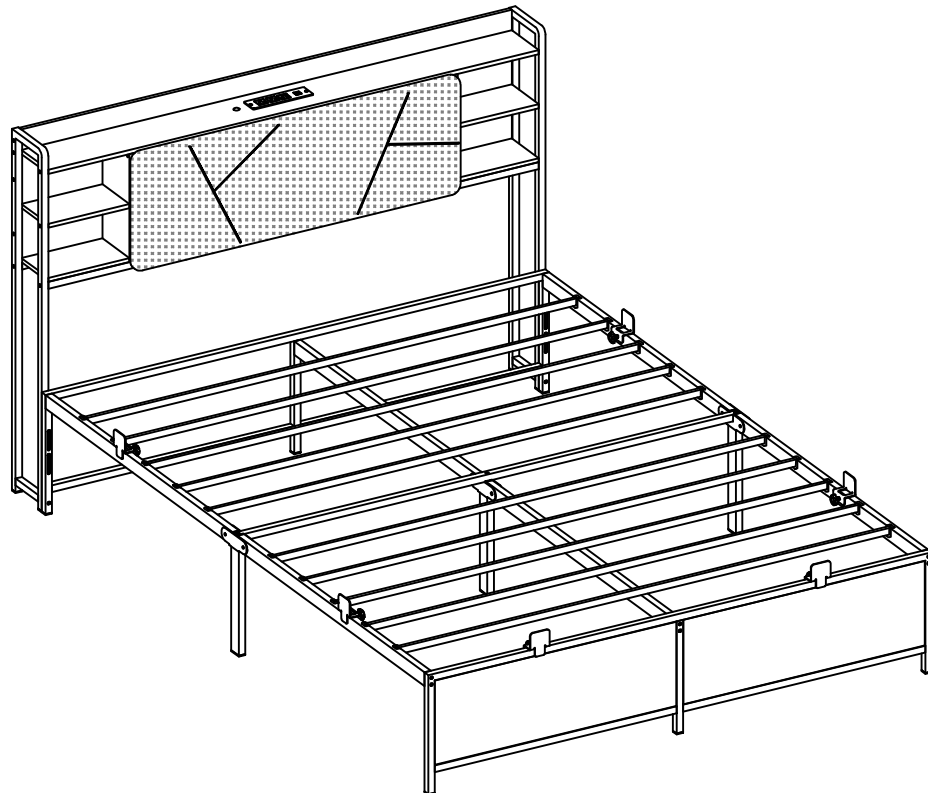

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

Dear Customers,

Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.


If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.

Thanks again for your order. Please feel free to contact us in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.

















Please follow the instruction manuals and use a pad to protect the product during your assembly.


















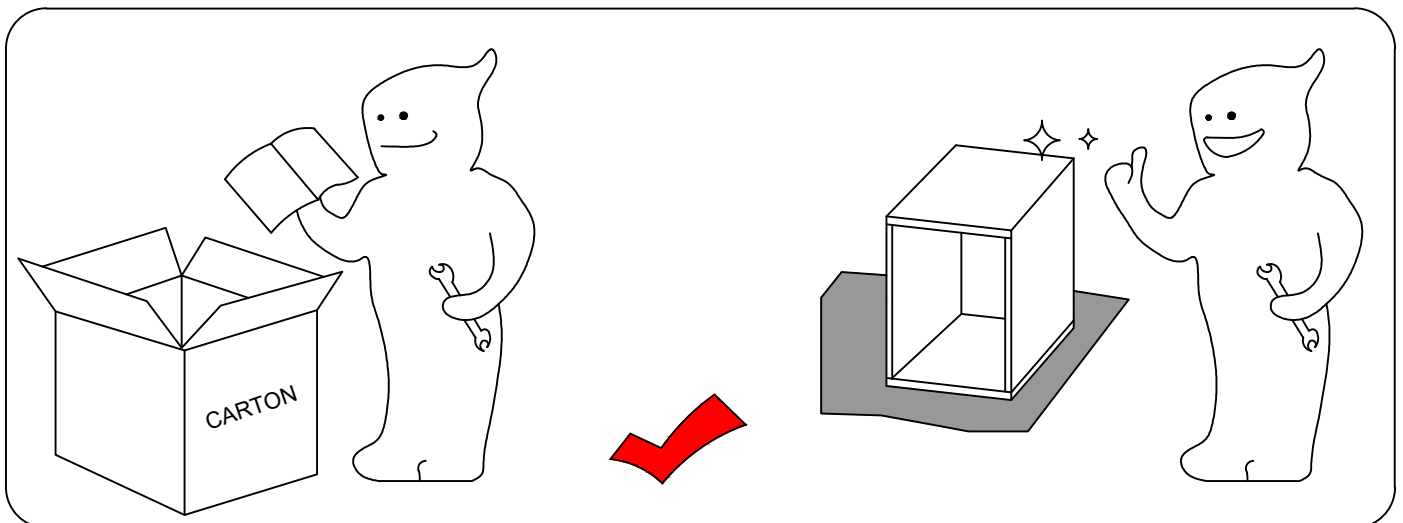
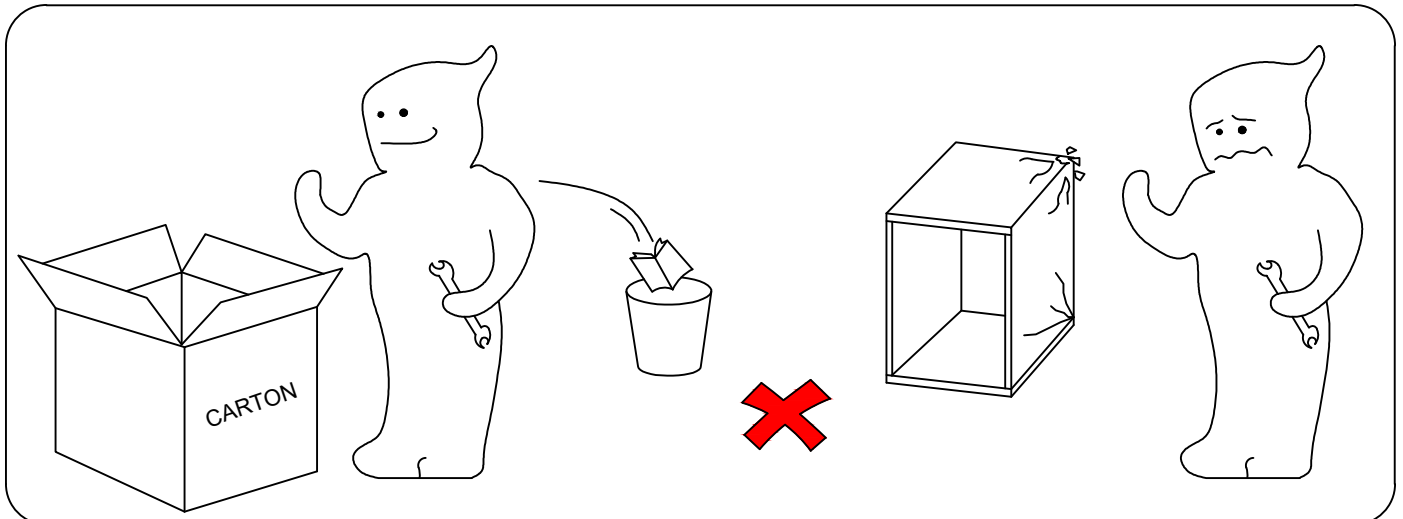


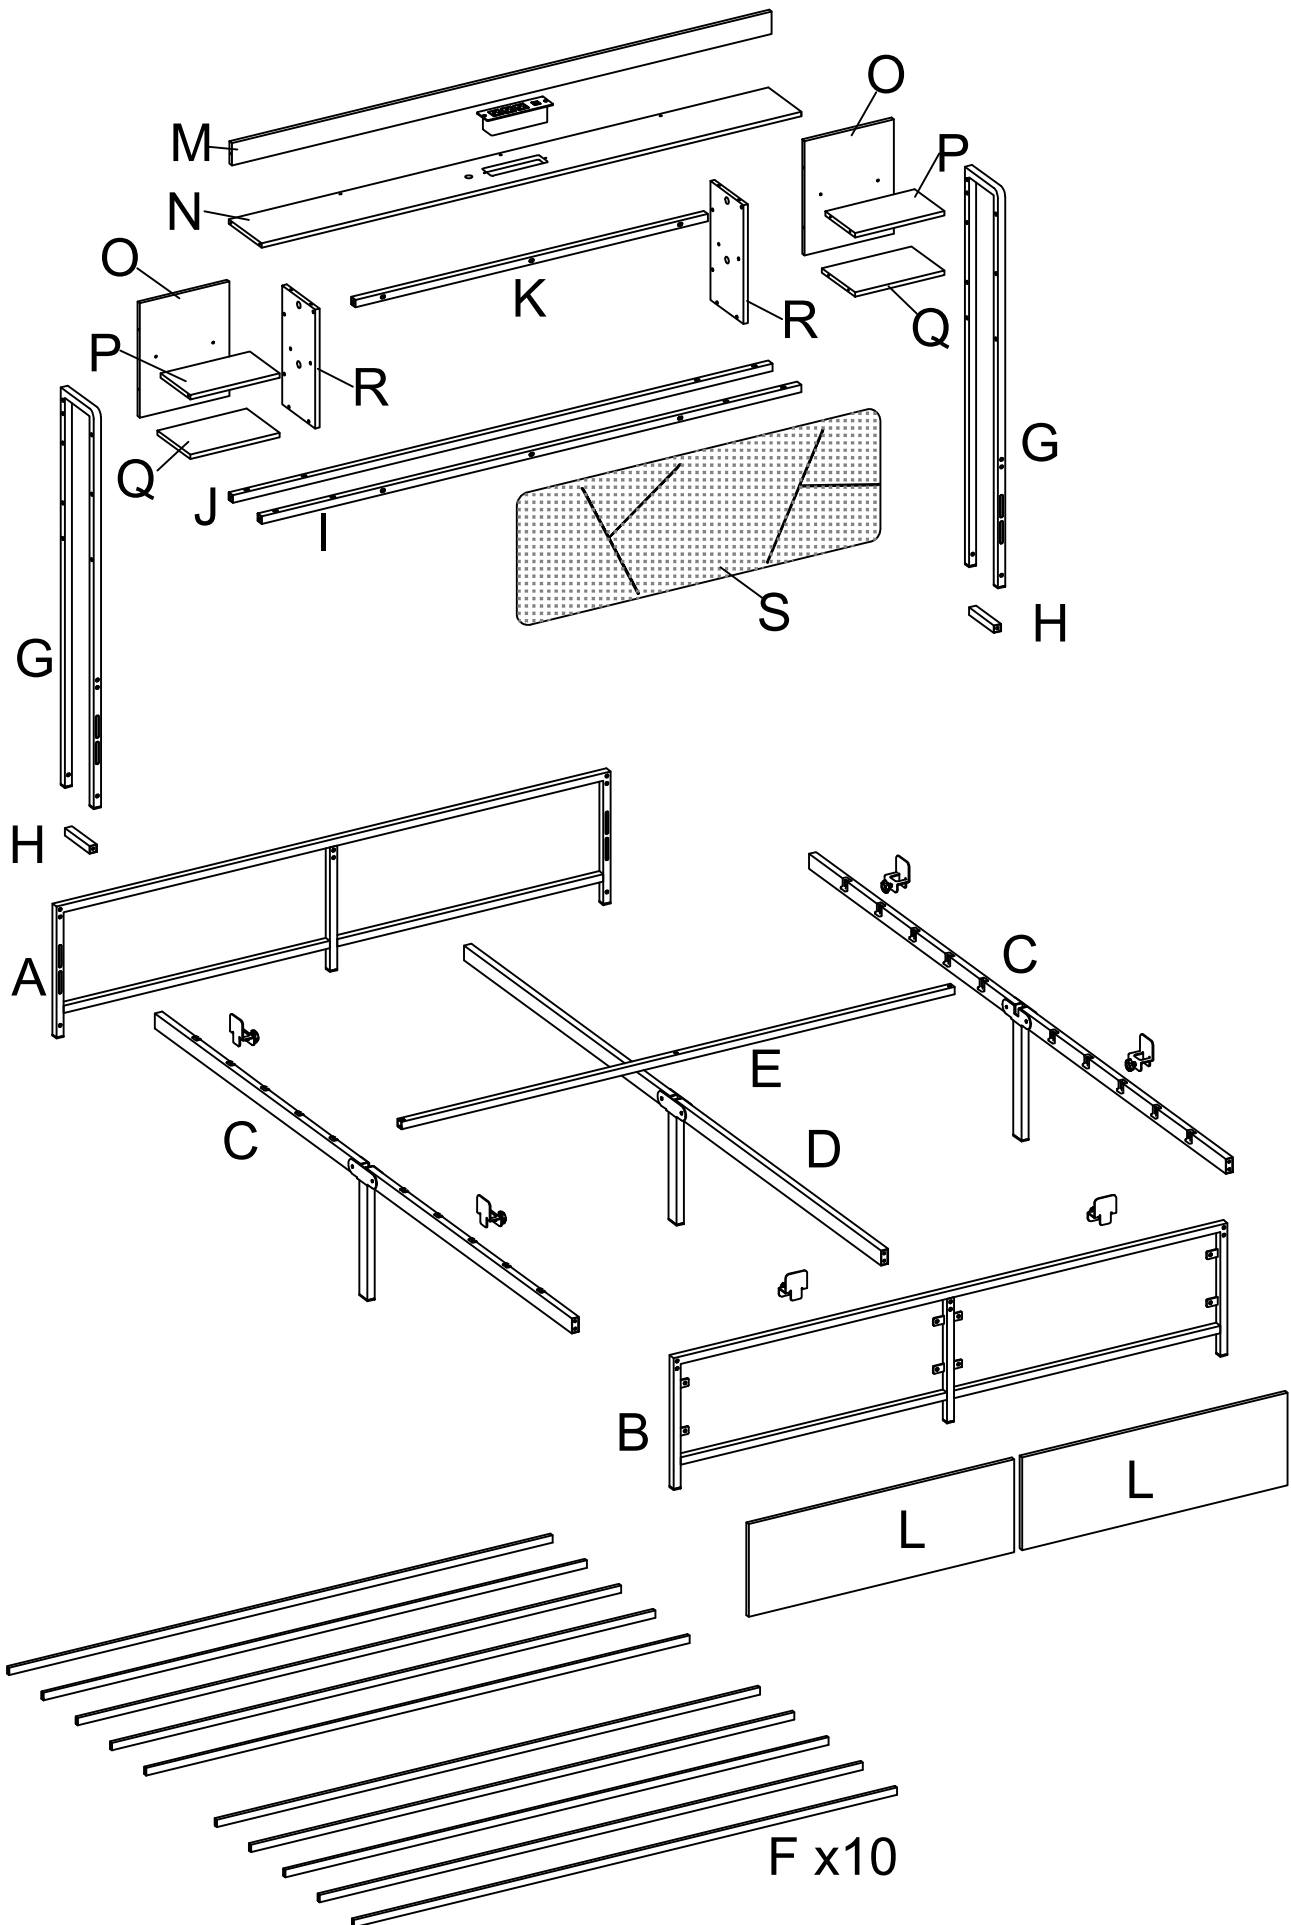

PART LIST

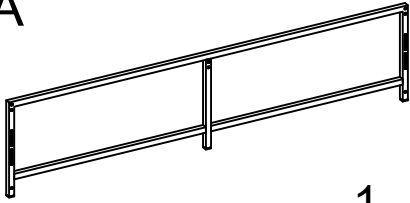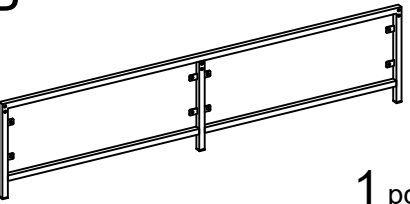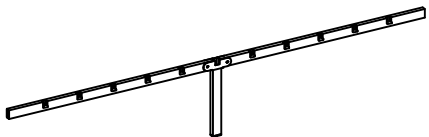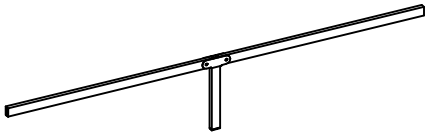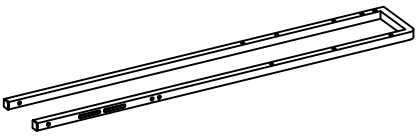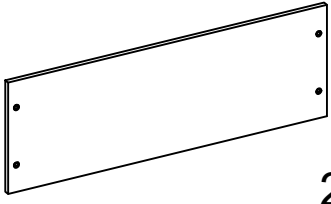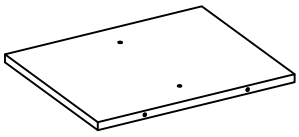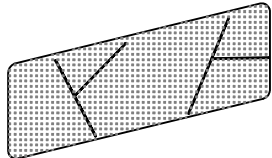A  1 pc	B  1 pc	C  2 pcs
D  1 pc	E  1 pc	F  10 pcs
G  2 pcs	H  2 pcs	I  1 pc
J  1 pc	K  1 pc	L  2 pcs
M  1 pc	N  1 pc	O  2 pcs
P  2 pcs	Q  2 pcs	R  2 pcs
S  1 pc		


HARDWARE LIST

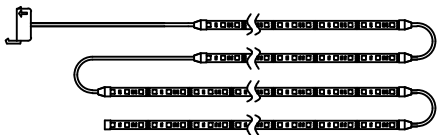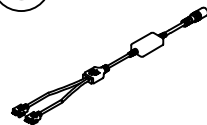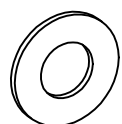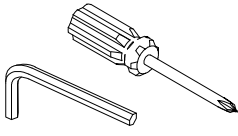①  M6x809 pcs	②  M6x408 pcs	③  M6x88 pcs	
④  M6x554 pcs	⑤  6 pcs	⑥  M8x256 pcs	
⑦  20+20+80+80cm2 pcs	⑧  1 pc	⑨  1 pc	
⑩  M6x358 pcs	⑪  M6x306 pcs	⑫  M6x278 pcs	⑬  M4x307 pcs
⑭  M5x4524 pcs	⑮  M6x16x1.08 pcs	⑯  M64 pcs	⑰  M3x1218 pcs
⑱  1 pc	⑲  M6x284 pcs	⑳  Ø124 pcs	㉑  RF Remote Control1 pc
㉒  17 pcs	㉓  8 pcs	㉔  10mm1 pc	㉕  M41 pc

STEP 1


13  x4

Keep the holes of the Part P toward this direction as shown

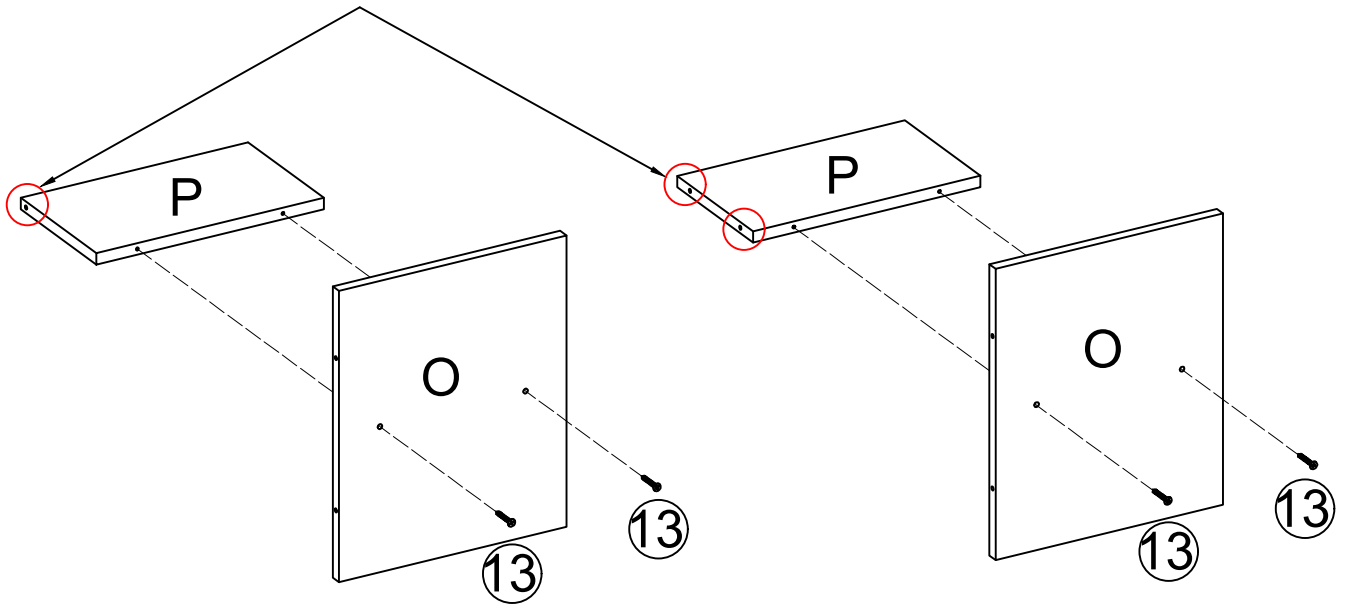


STEP 2

14  x12

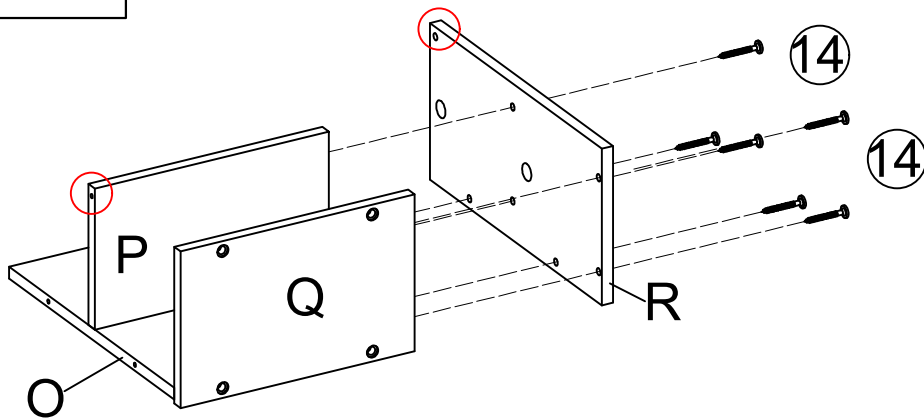


Keep the holes of the Part P and Part R toward this direction as shown

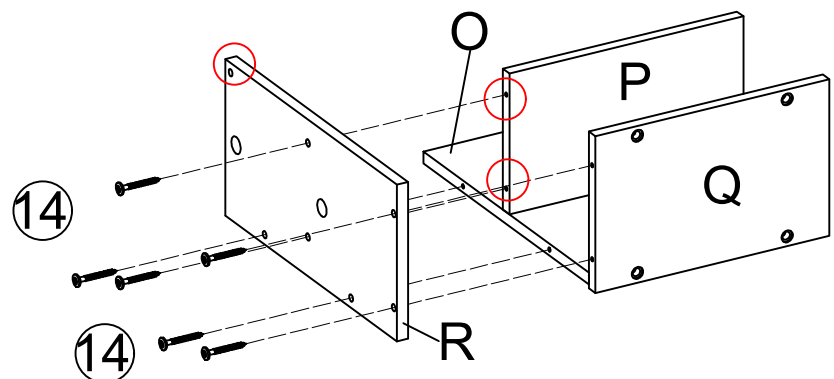


STEP 3

10  x2

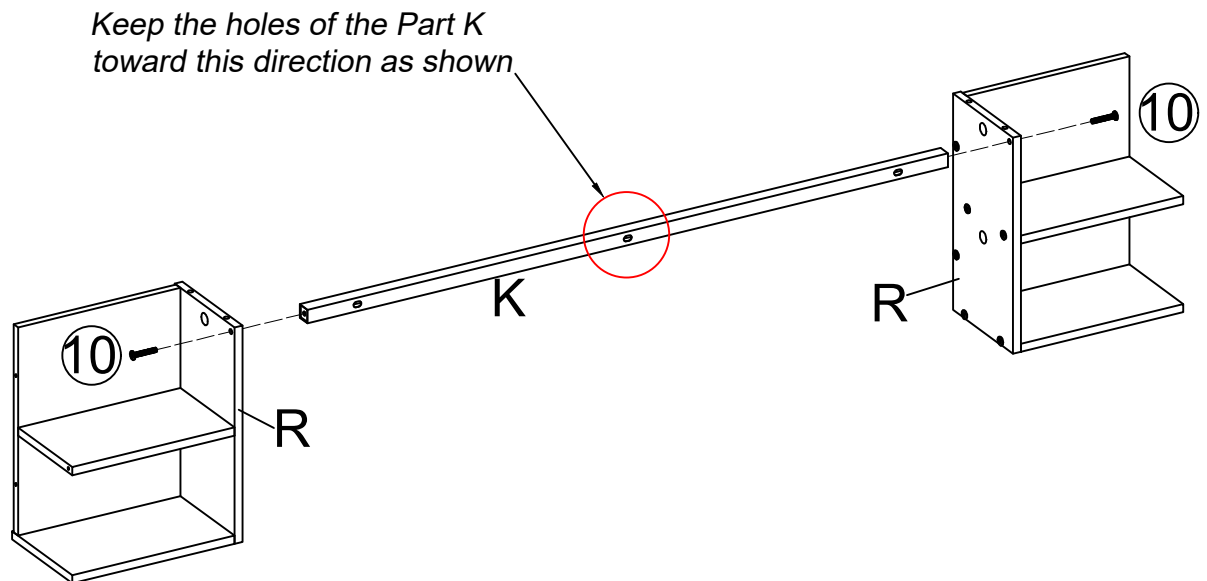


STEP 4

13  x3

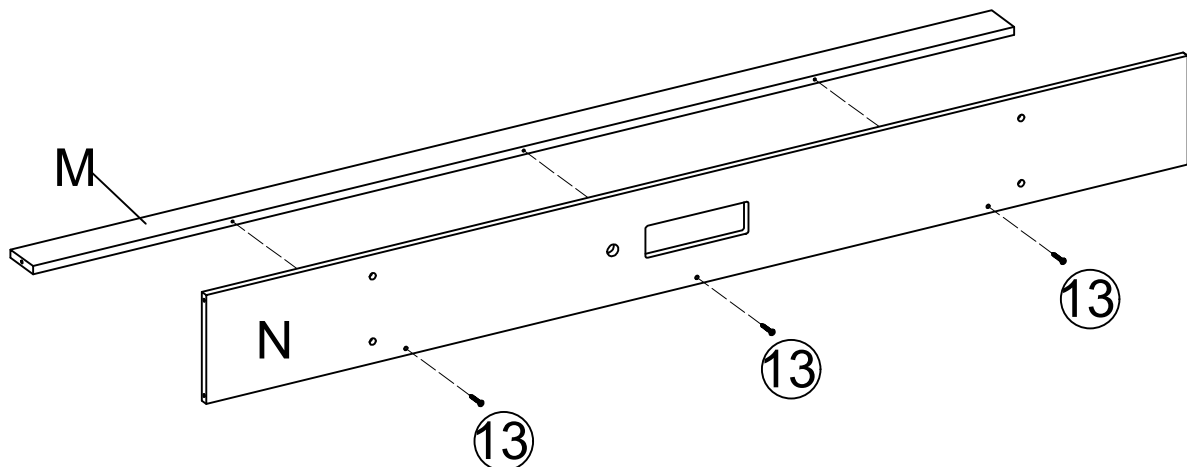



STEP 5

19  x4

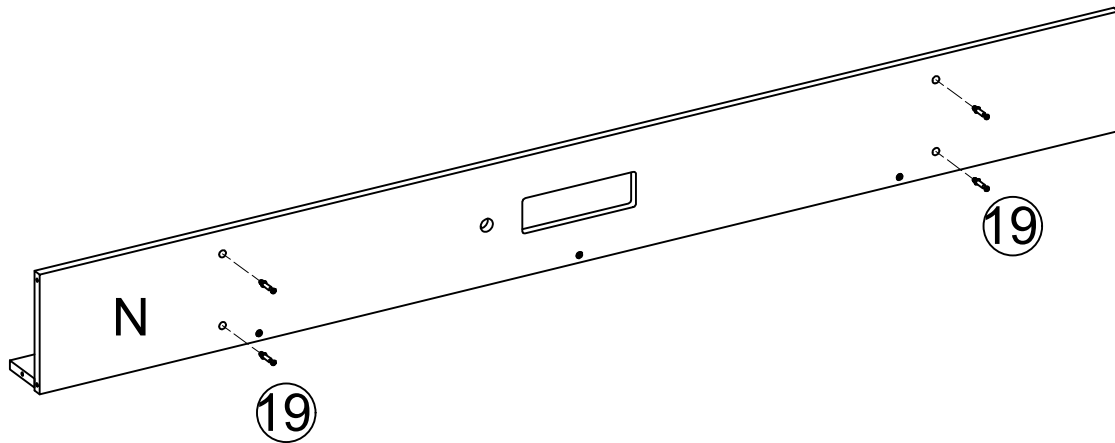

STEP 6

20  x4

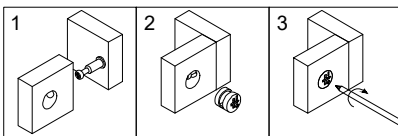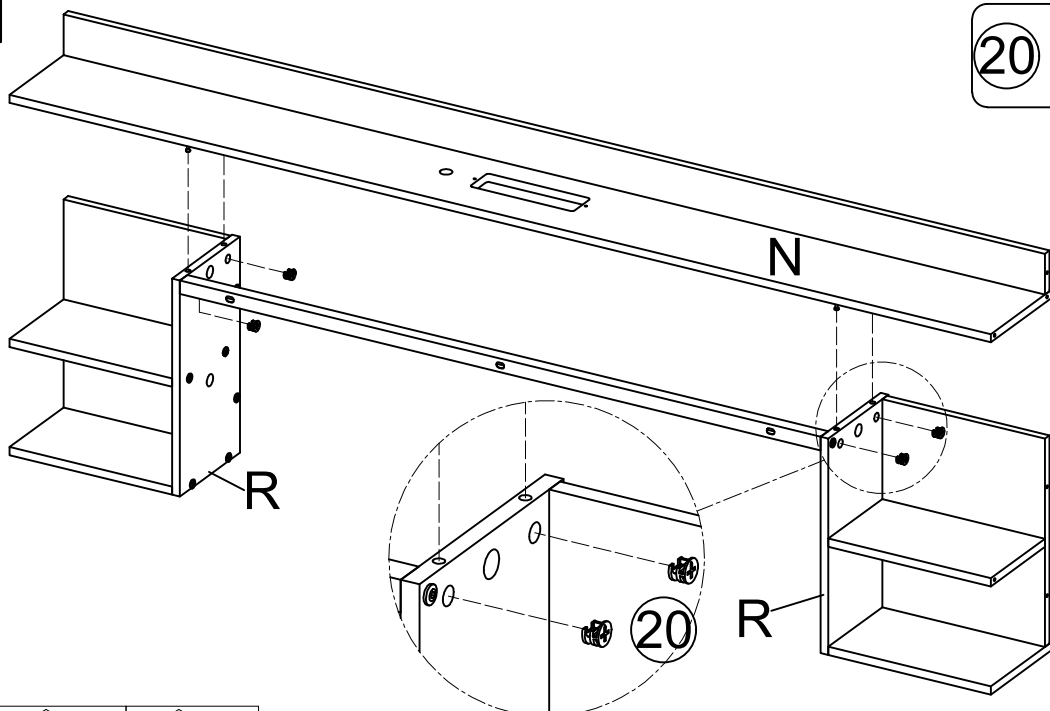


Please point the arrow upward to the mounting hole when installing Part 20. then use screwdriver to tighten it in the "+" direction.

Cam Lock Fastening System


STEP 7

12  x8

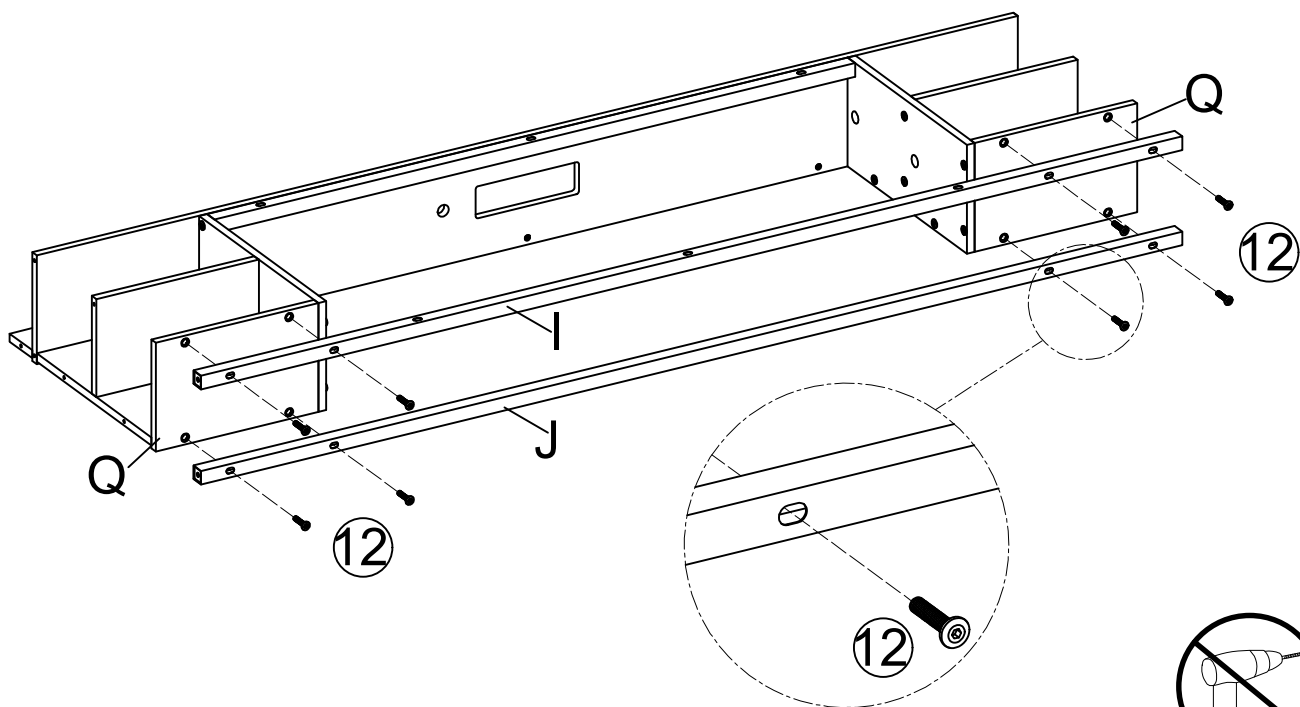


STEP 8

11  x6

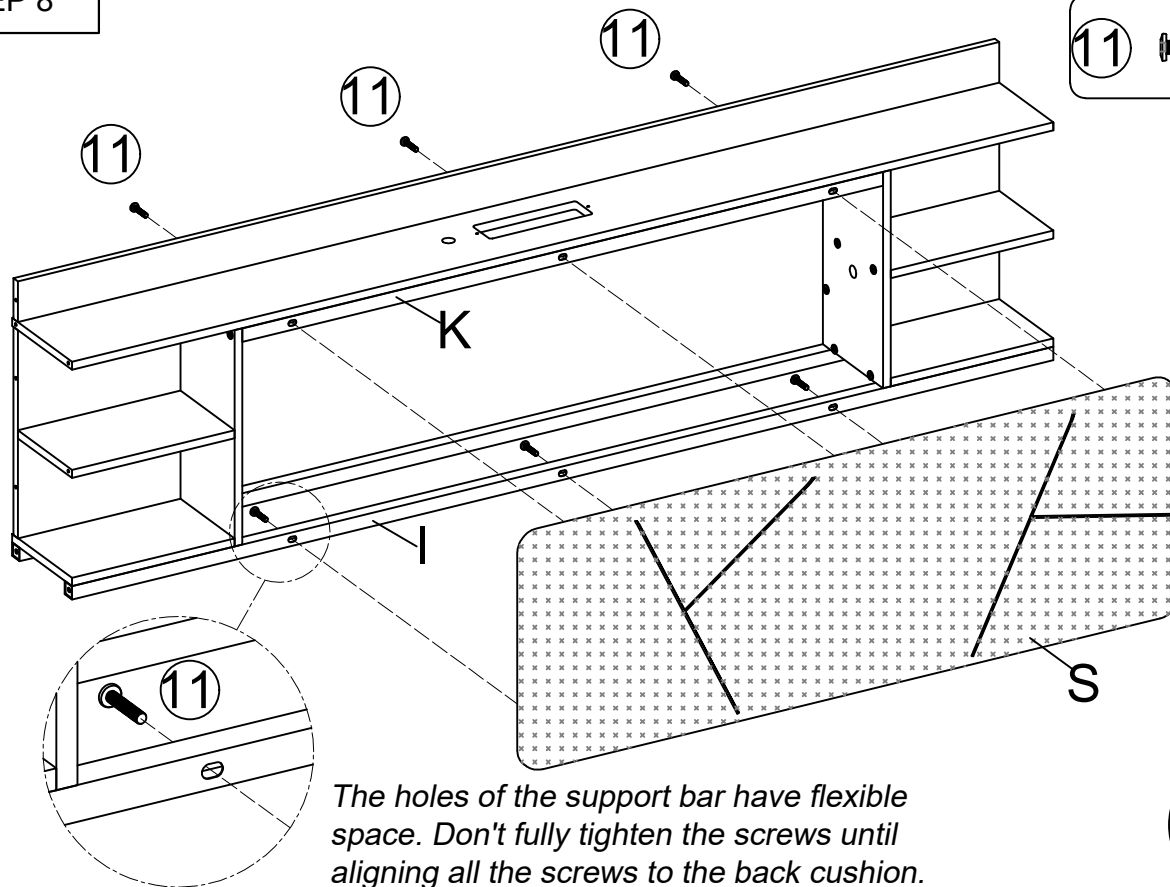


STEP 9

10  x4

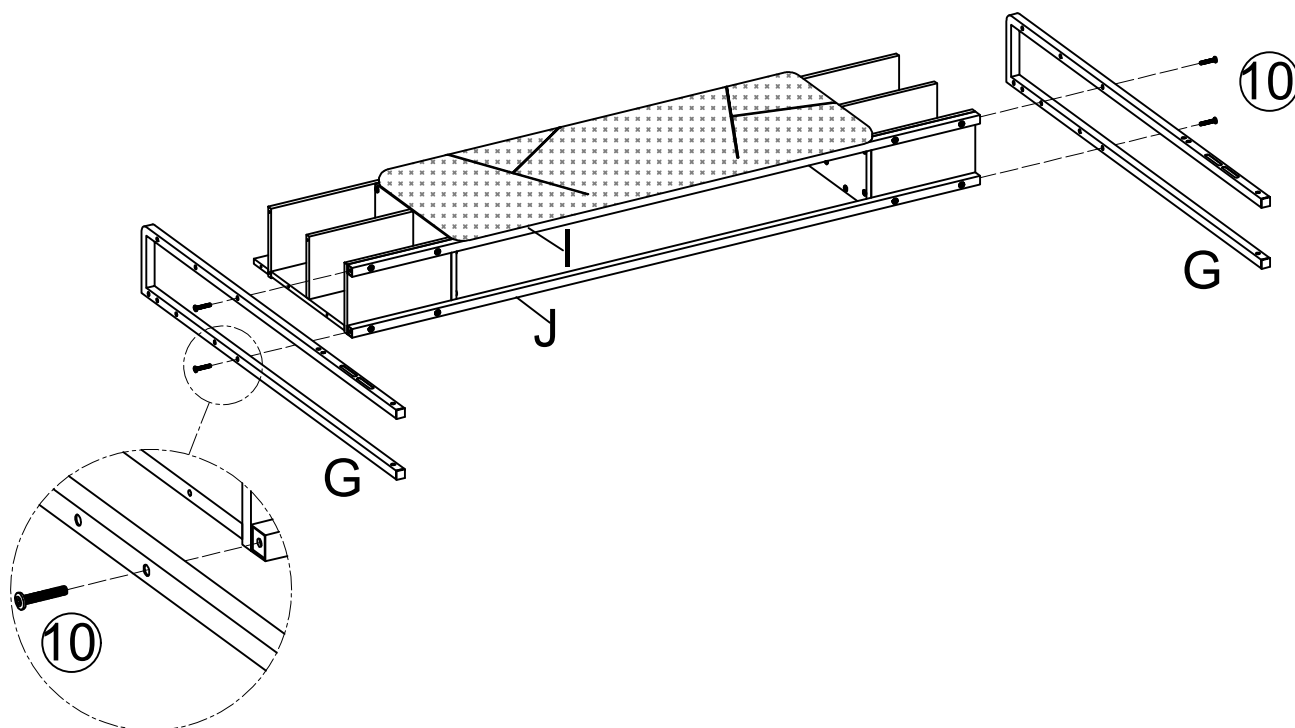


STEP 10

14  x12

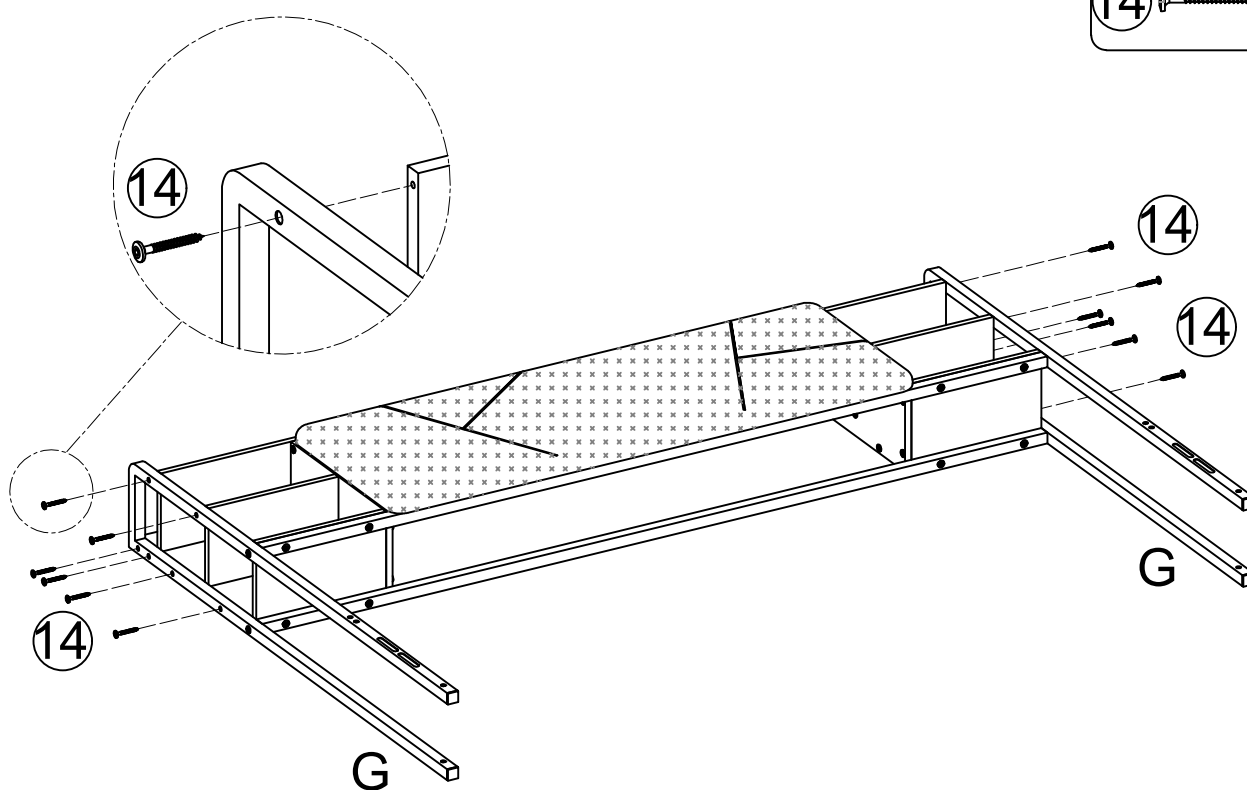

STEP 11

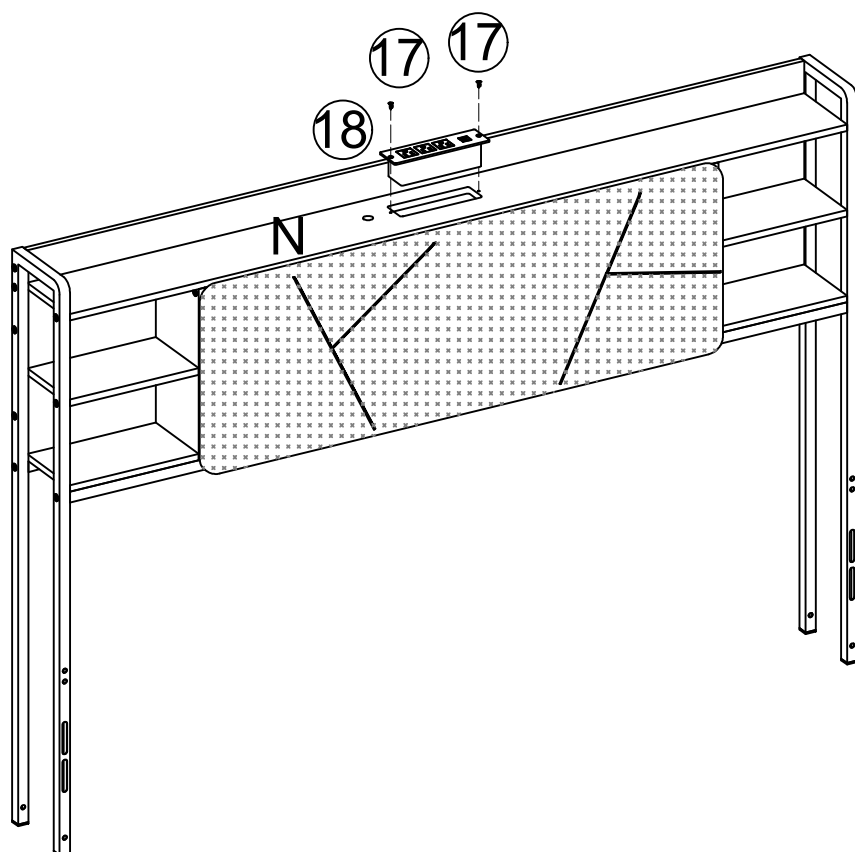


17  x2


18  x1




STEP 12

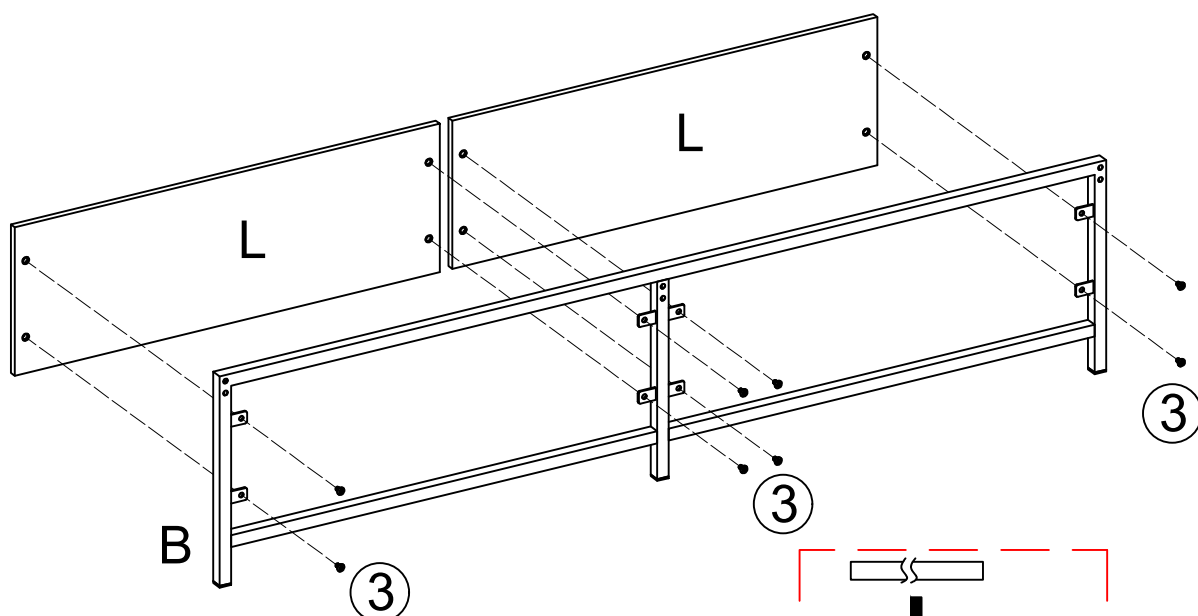


3  x8

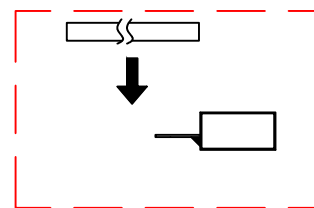


STEP 13

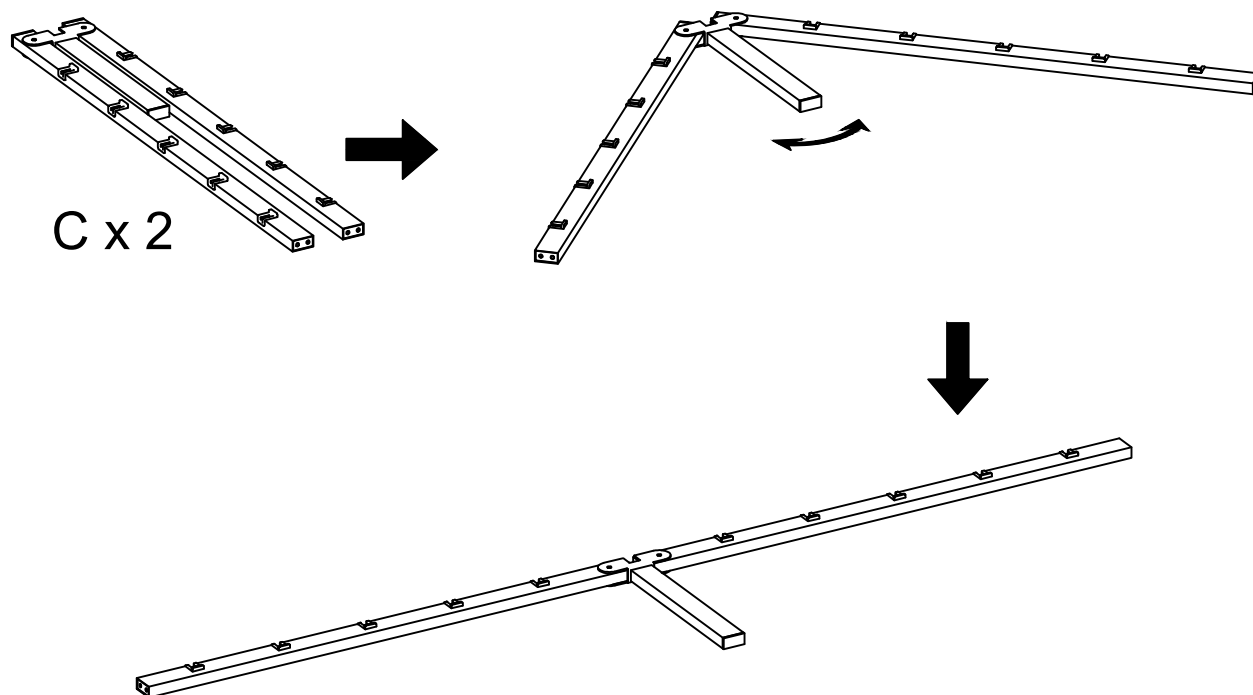

STEP 14

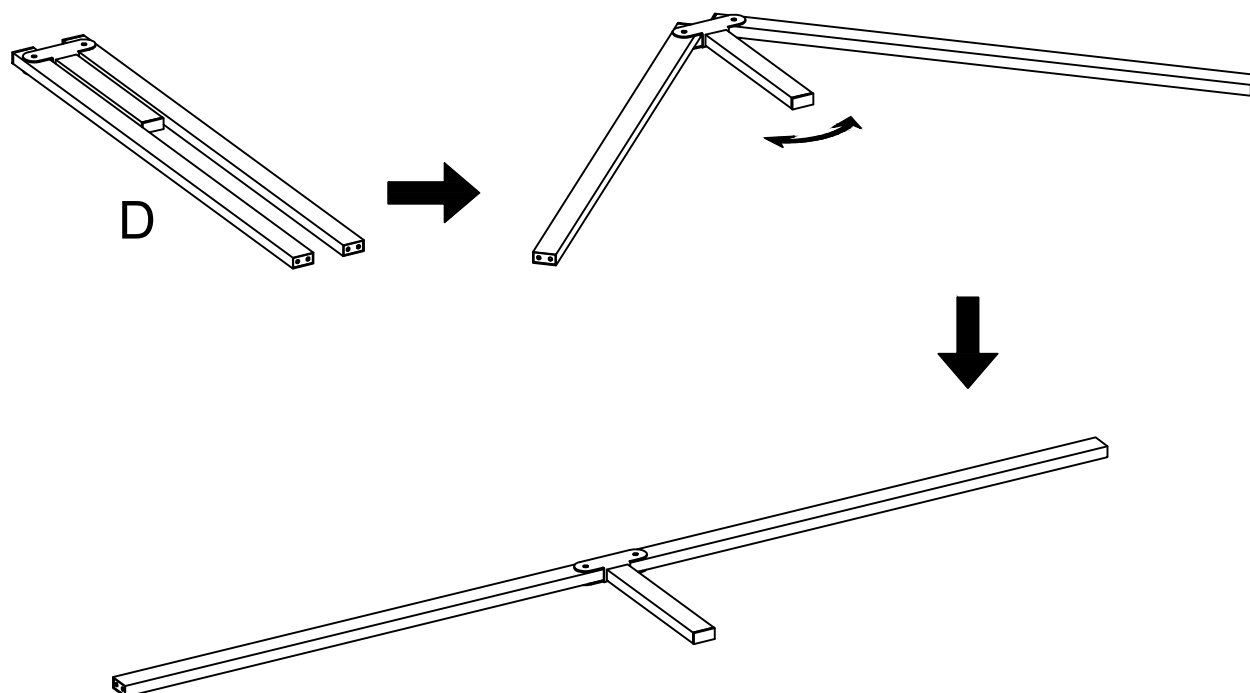

STEP 15

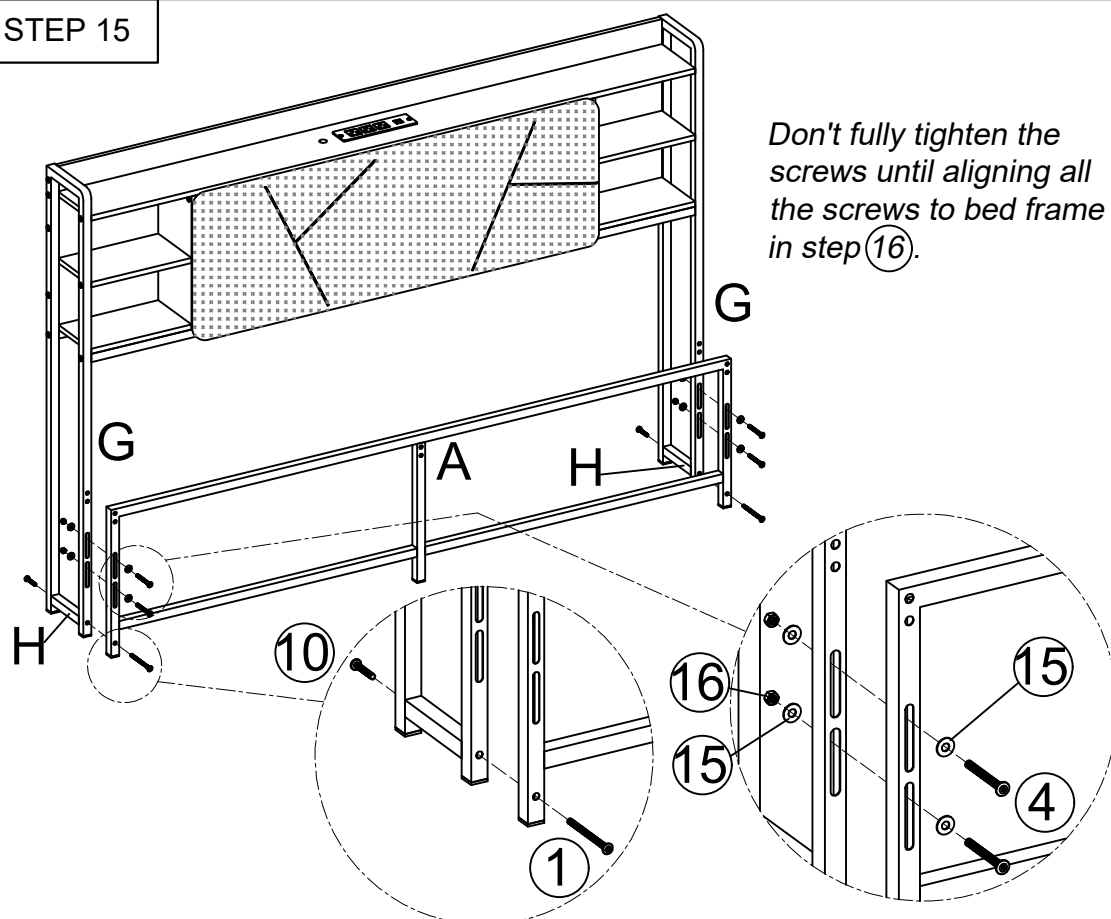

① — x2

④ — x4


⑩ — x2

⑮ — x8

⑮ — x4

②④ — x1


STEP 16

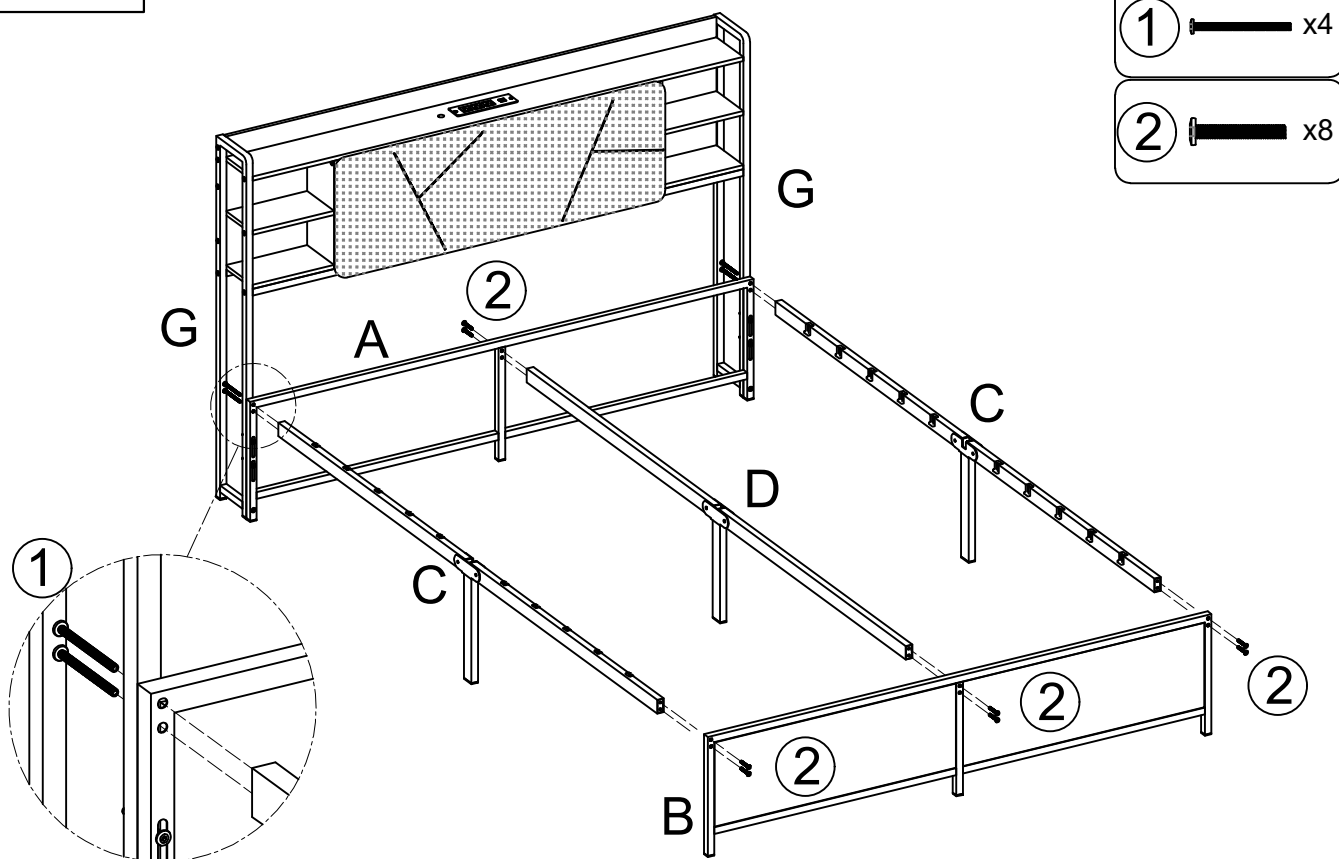


① — x4

② — x8


STEP 17

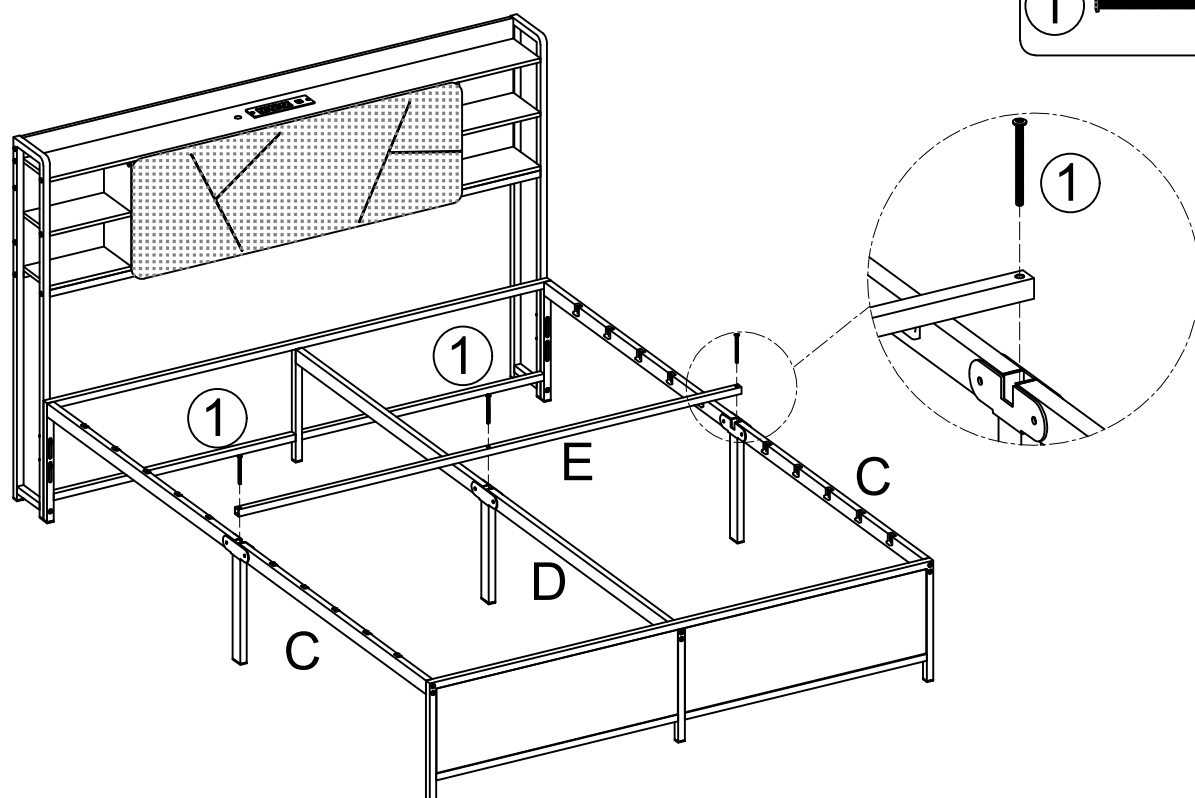

STEP 18

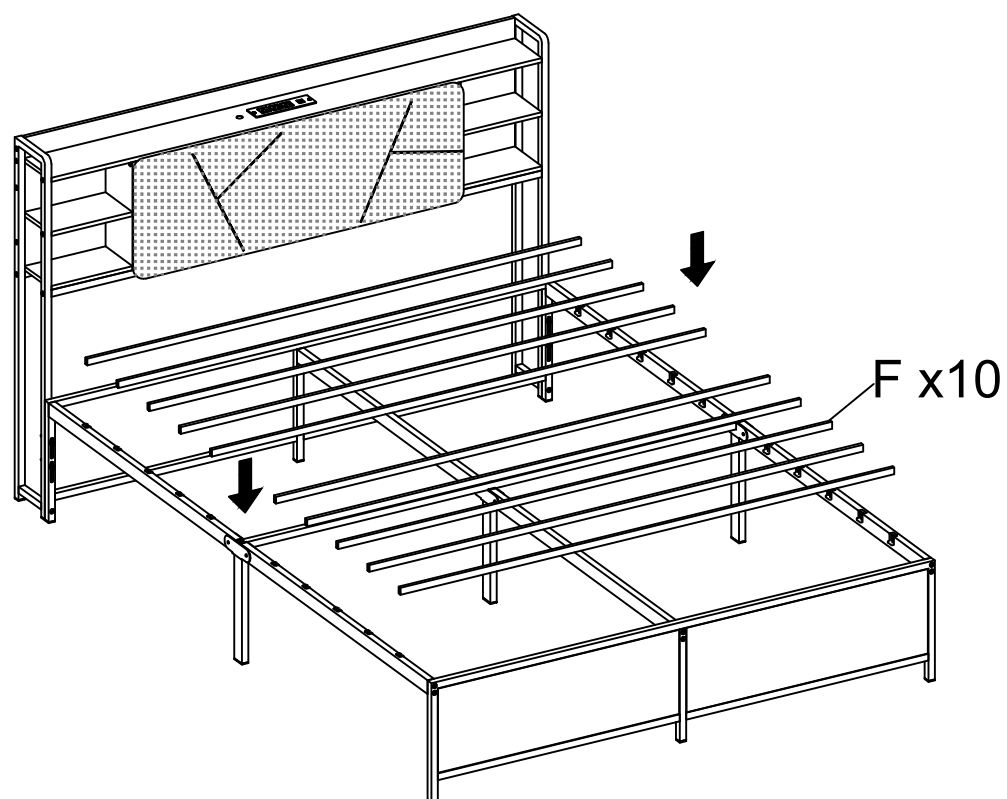

STEP 19


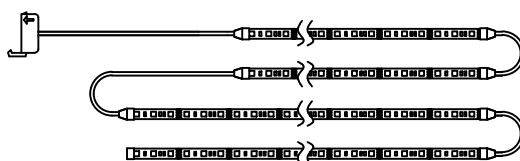


7 x2


17 x16

23 x8

Tear off the tape of the LED strip, stick the LED strip to the bottom of shelves (N/P). Fix the LED strip with plastic clips. Note: Do not cover the lamp beads.

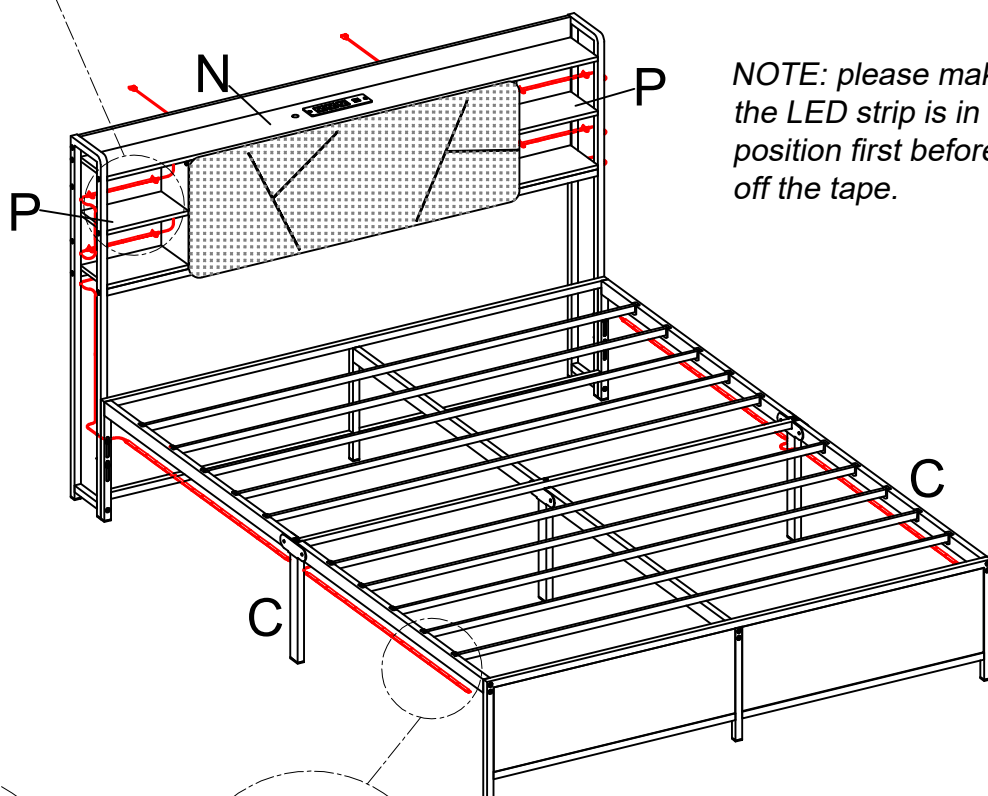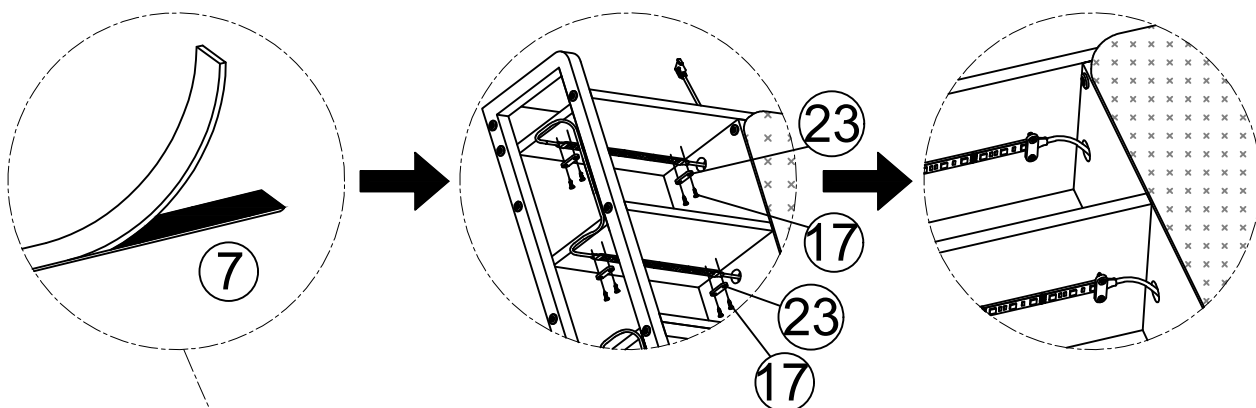

NOTE: please make sure the LED strip is in proper position first before tear off the tape.

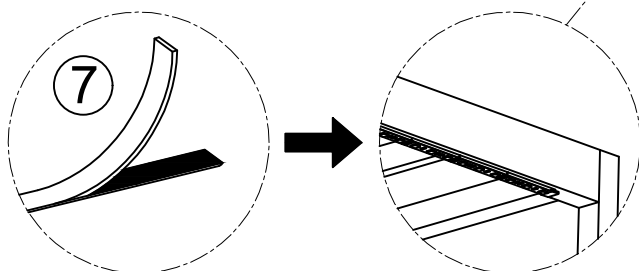


Tear off the tape of the LED strip, stick the LED strip to the bottom of bed frame (C).



STEP 20

22  x17


bandages can wrap the wires, making your bed look neater.

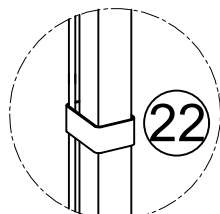


Secure the LED light strip with the bandages.

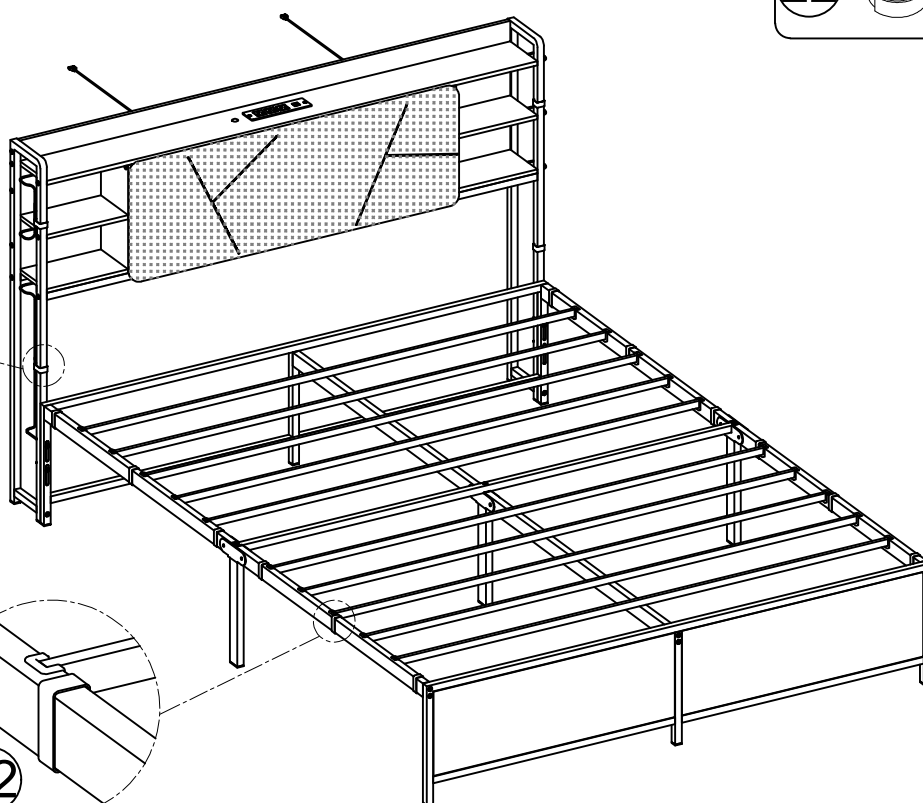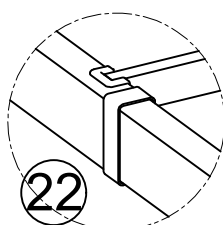

STEP 21

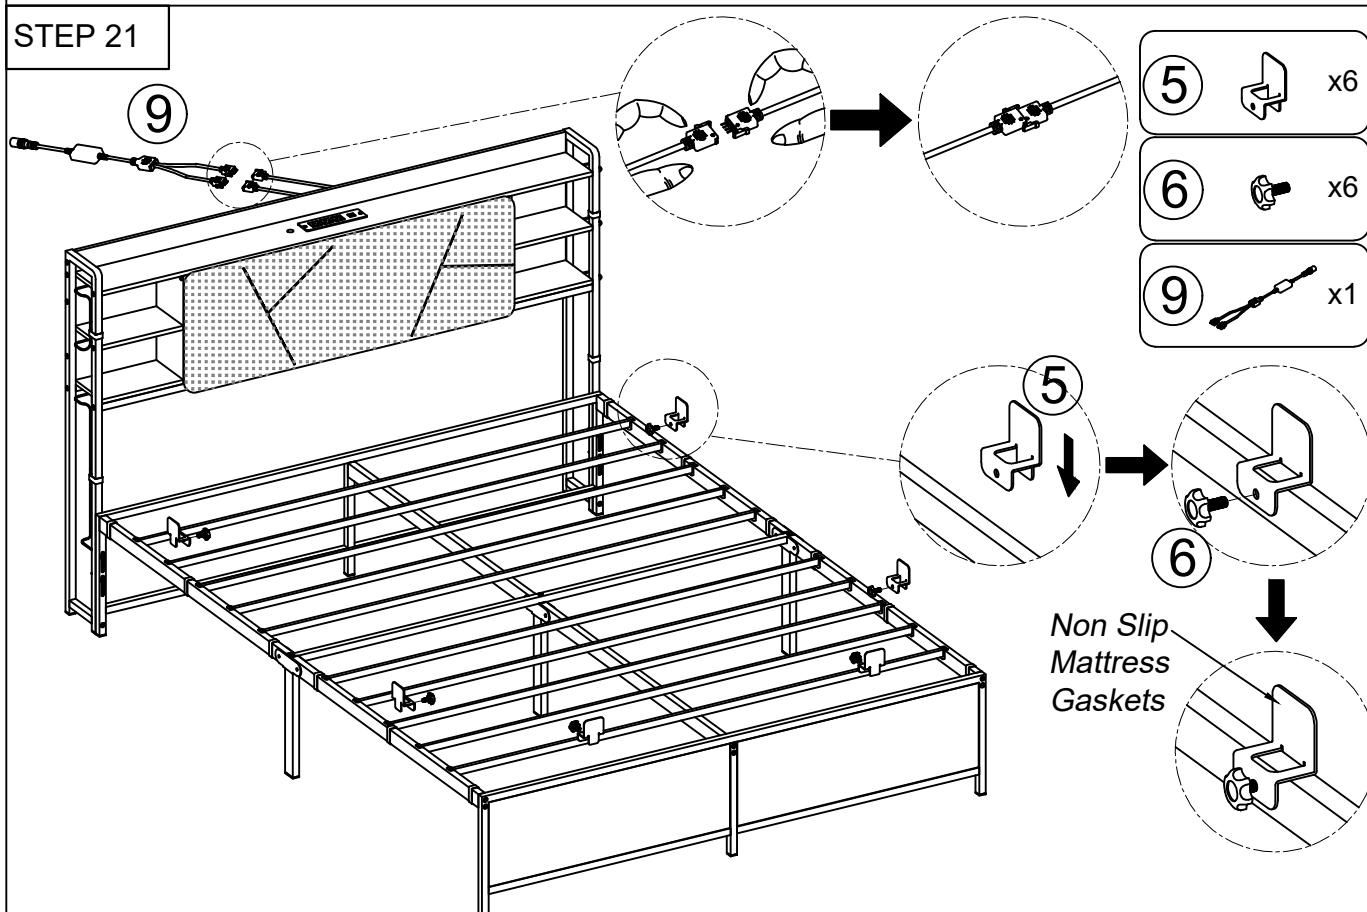

STEP 22

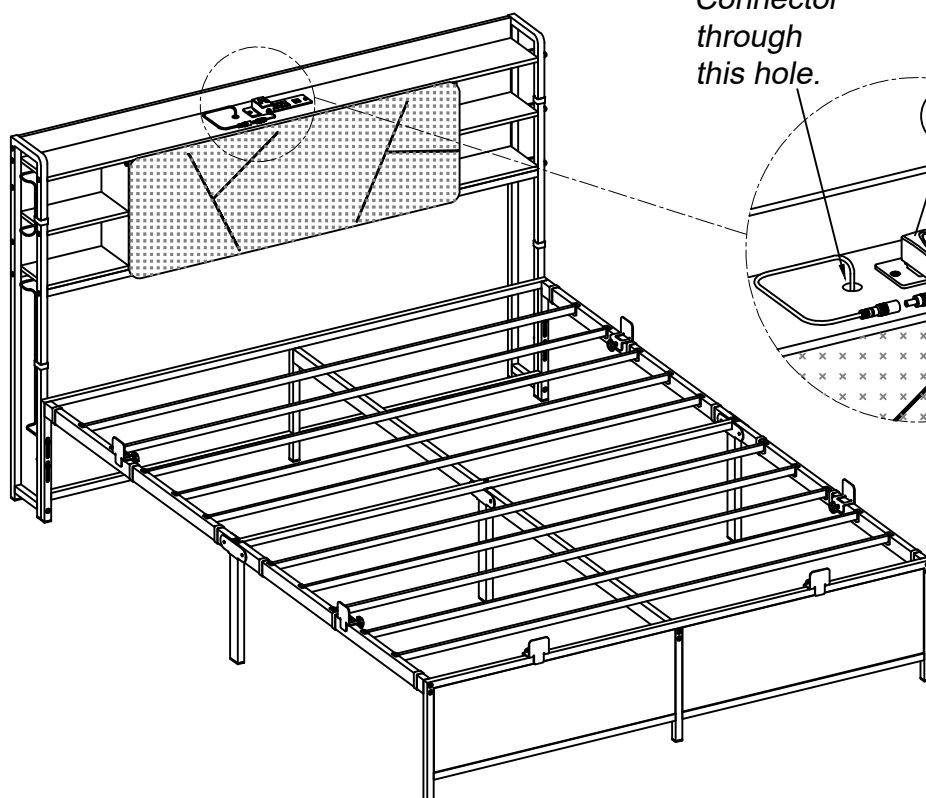

DONE

