


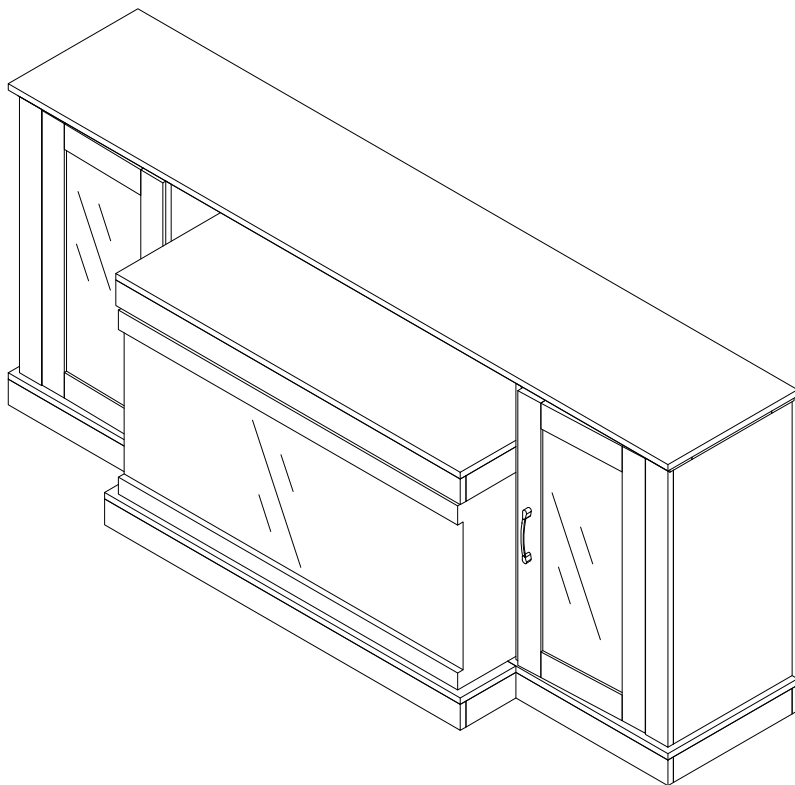

Attention: Don't tighten the screw before all screws are in place


UESR'S MANUAL

WYWJHM316


WYWJHM198

Fireplace cabinet


Explosion view

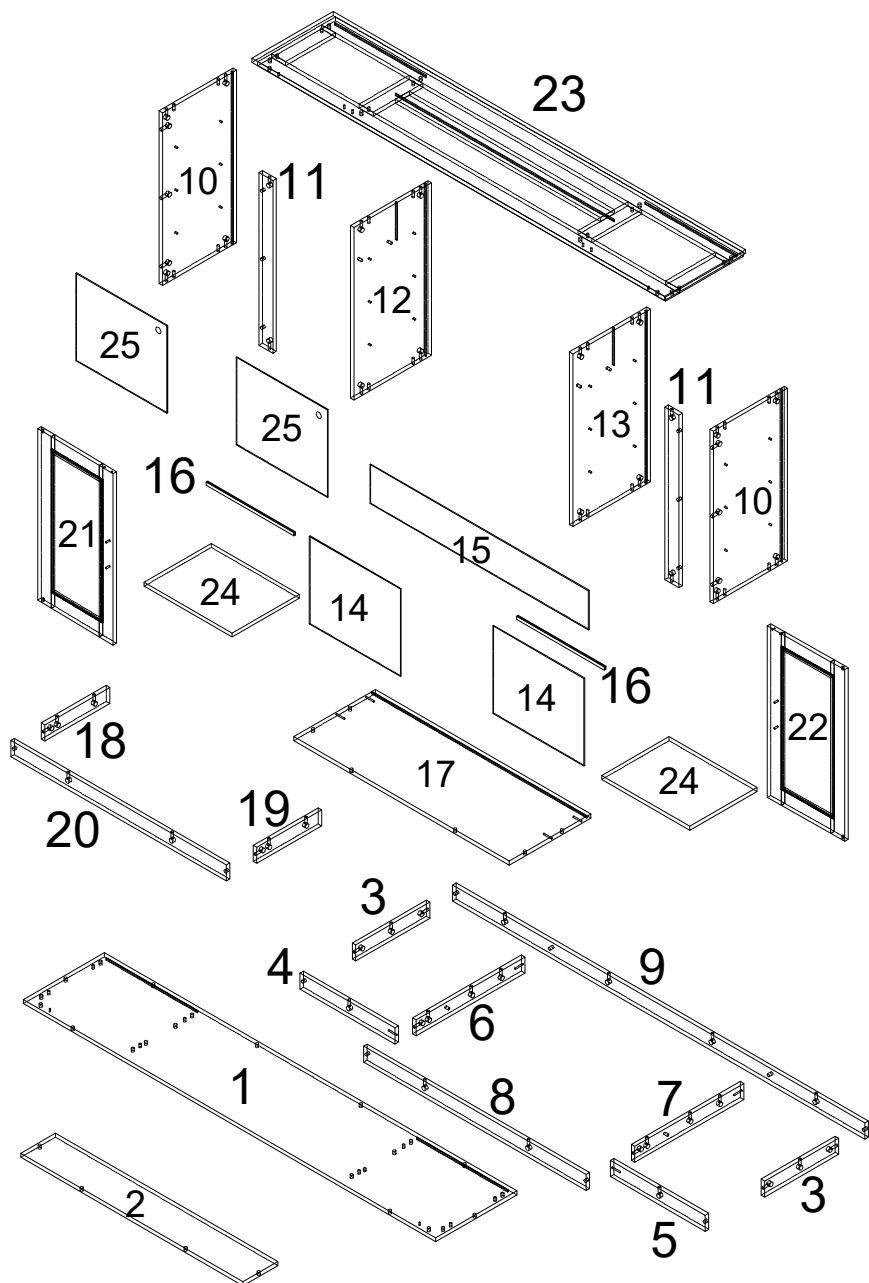


Hardware List

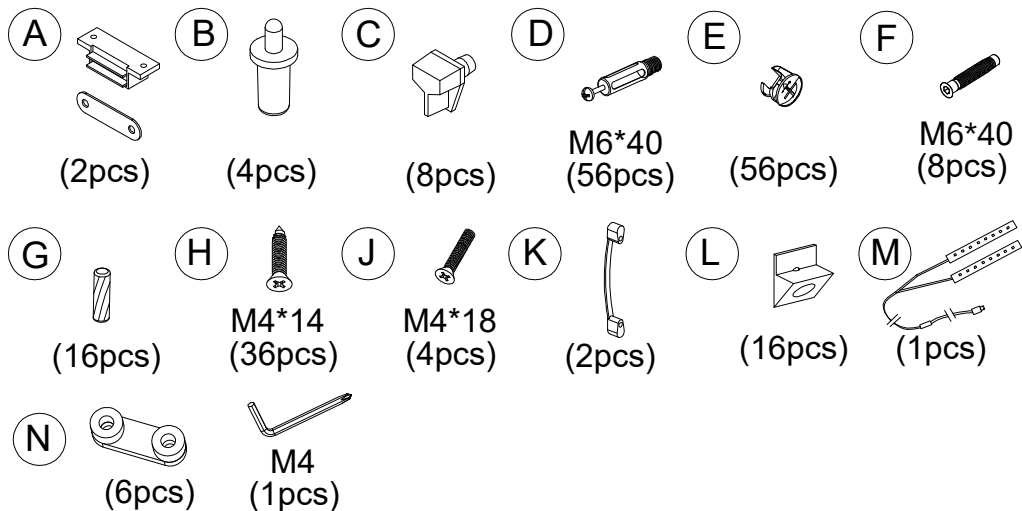

Panel List

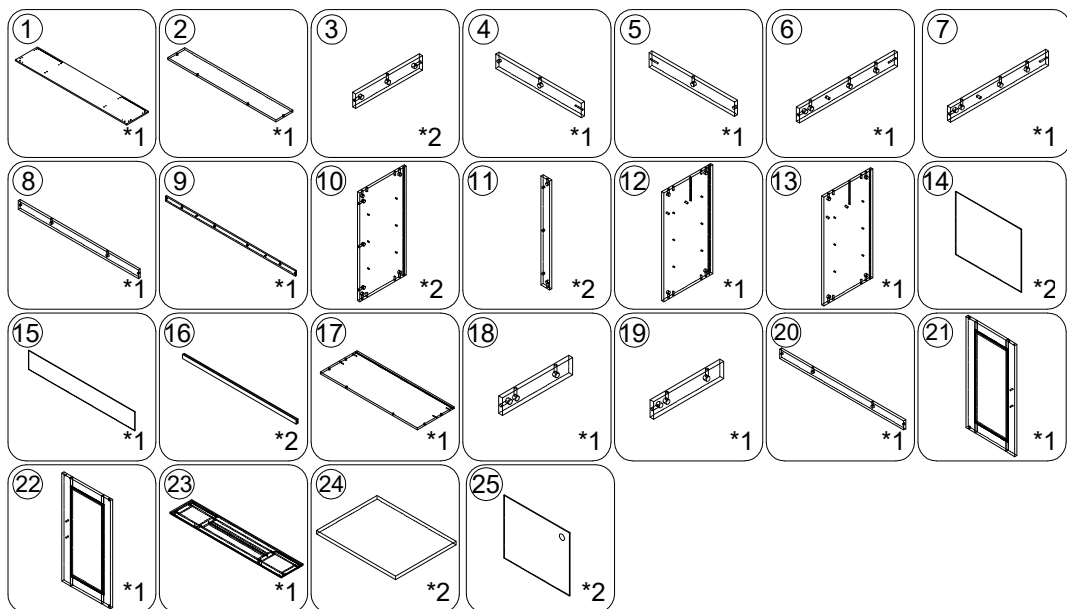


Assembling the unit with camlocks and wood dowels.

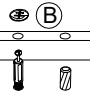
		 Arrow must face hole	
Gently screw cam bolt into the threaded anchor.	Tap one end of the wooden dowel gently into the hole.	Gently attach the dowel to the second panel and insert it into the hole.	Screw the camloc firmly into locked position.

Assembly instructions


Step 1

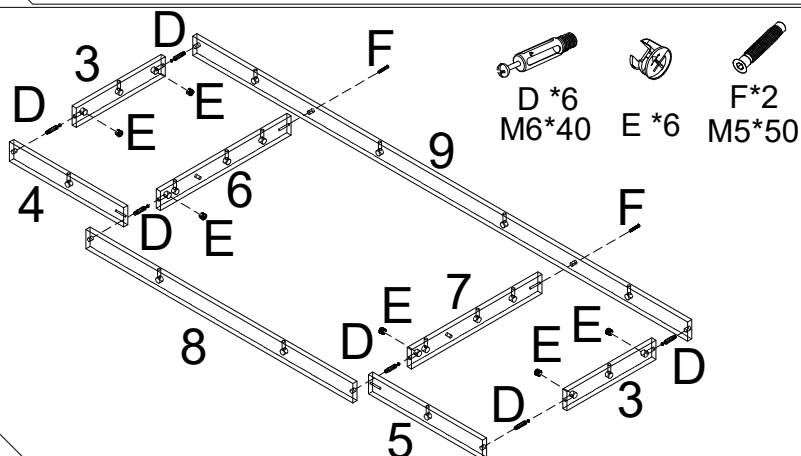


Step 2

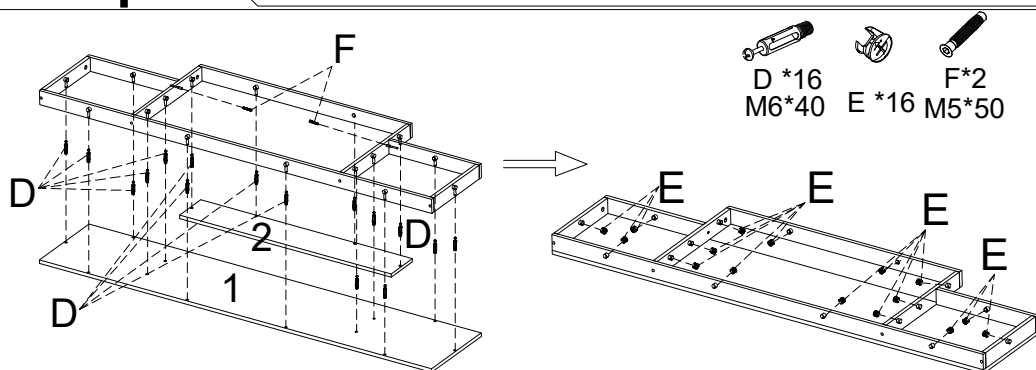


Step 3

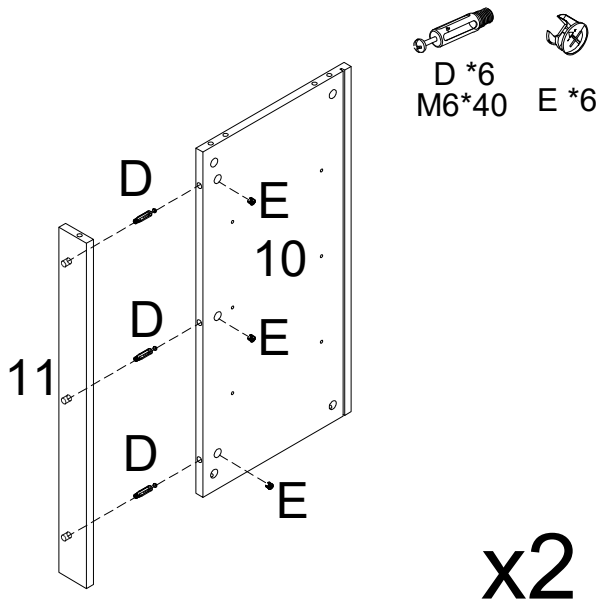


Step 4

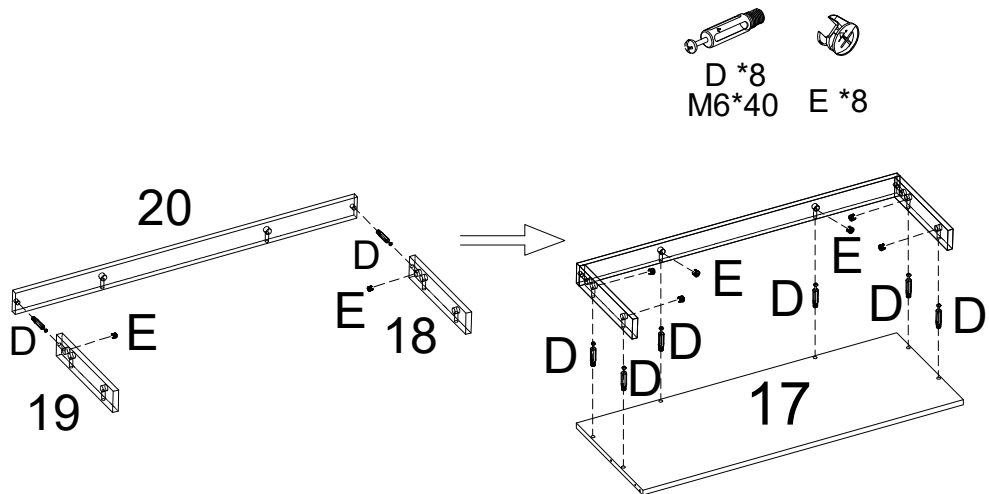


Step 5

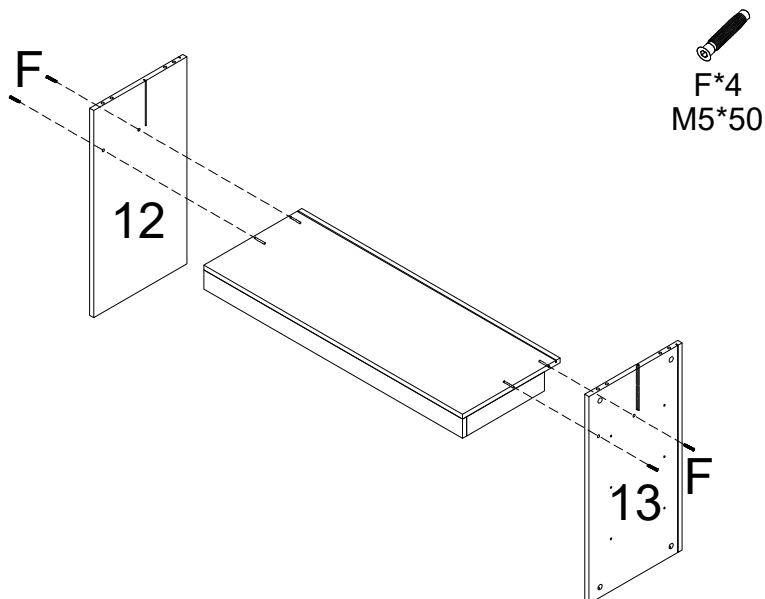

Step 6

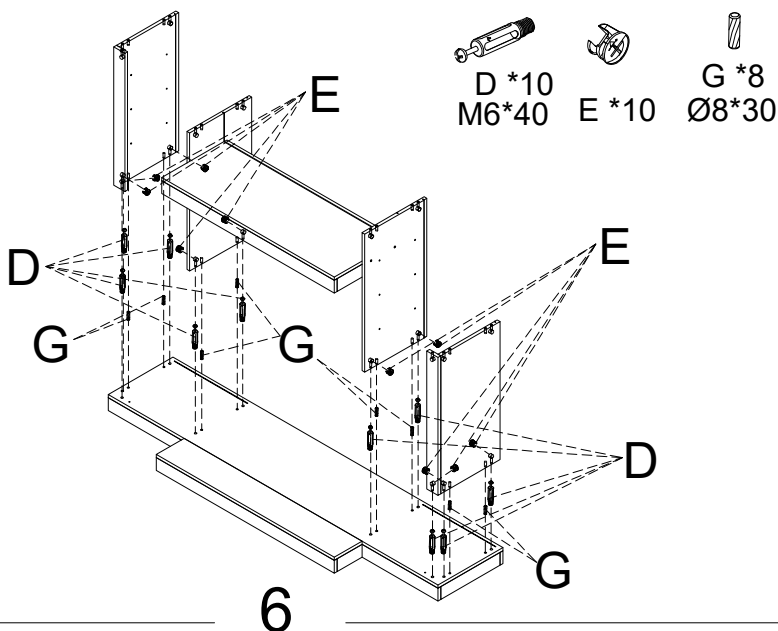


Step 7

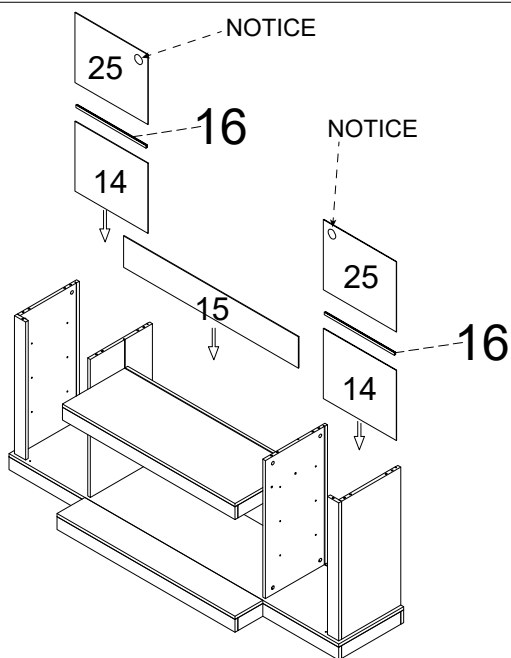


Step 8



H *4
M4 *14

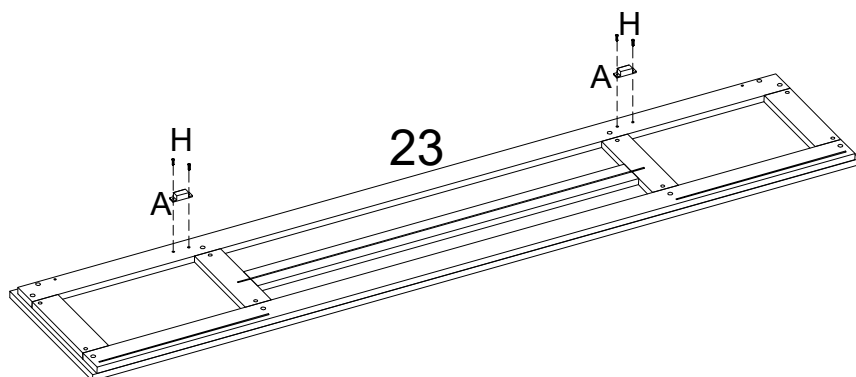


Step 9

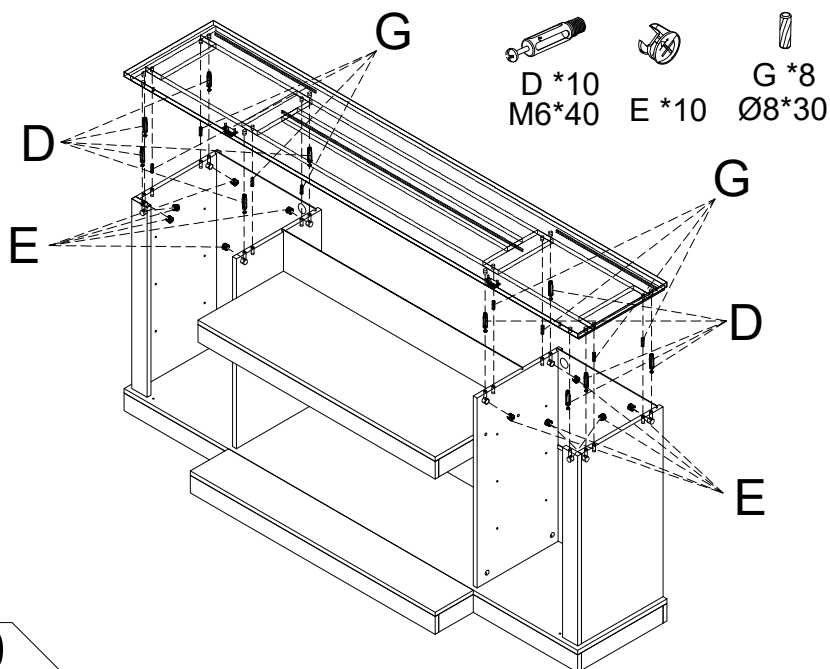


Step 10

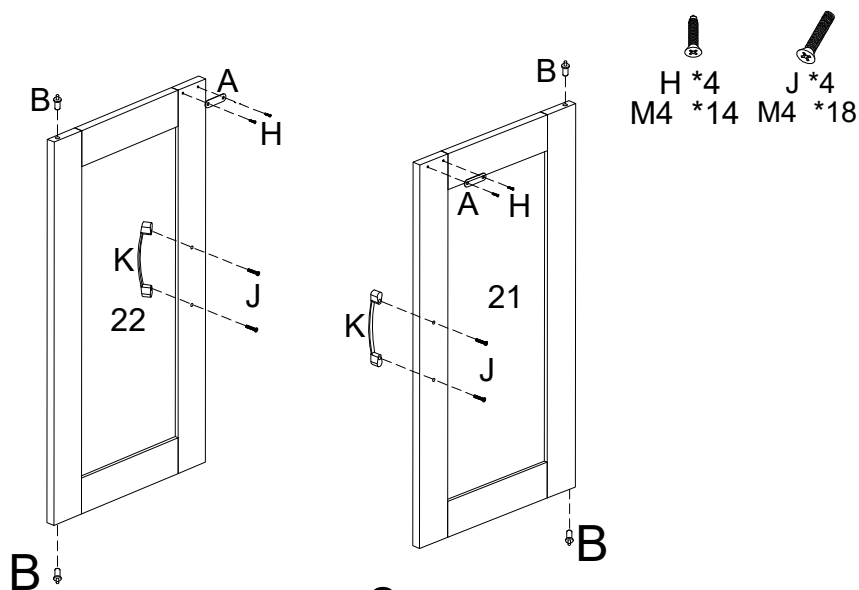


Step 11

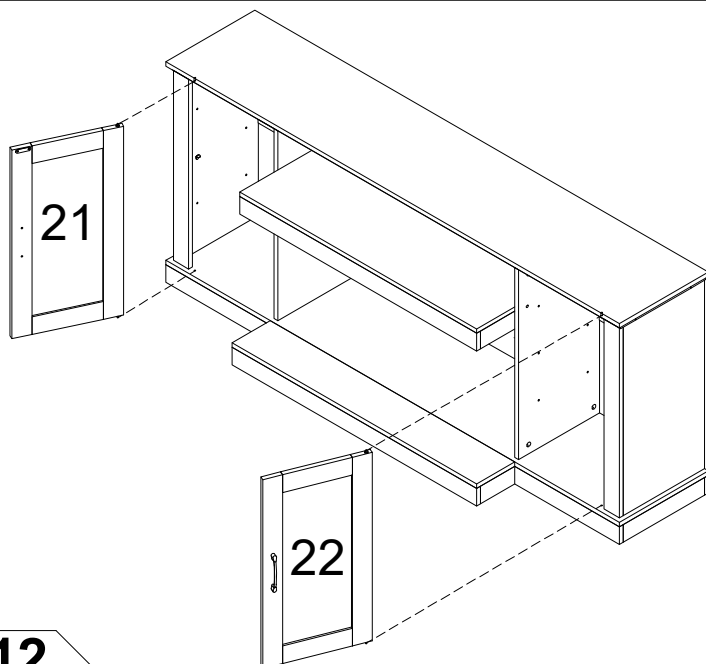

Step 12

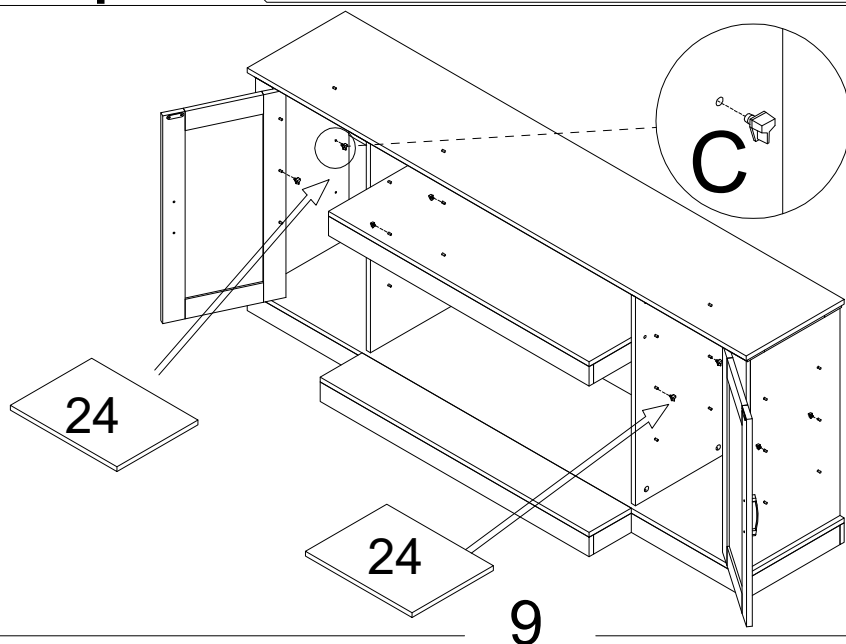

Step 13

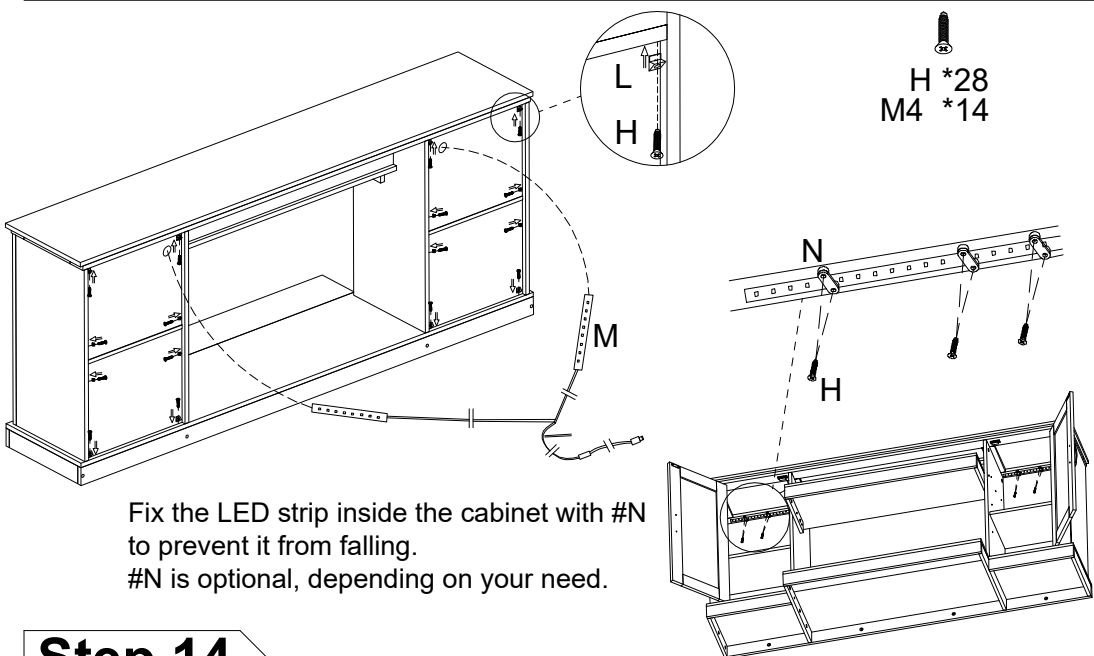

Step 14

