


design **TOSCANO**[®]


INSTRUCTIONS FOR YOUR PRODUCT

Thank you for your recent purchase of this Design Toscano hand-crafted piece of wall art. We have taken great care to create this piece especially for you. Please review these instructions and assemble this piece with care. Do not over tighten any screw connection.


Parts

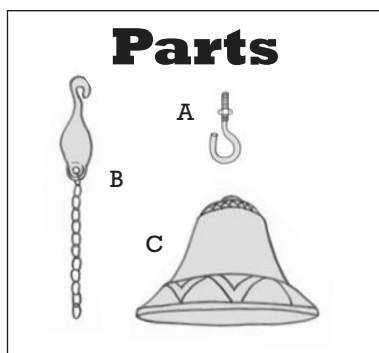


Step 1

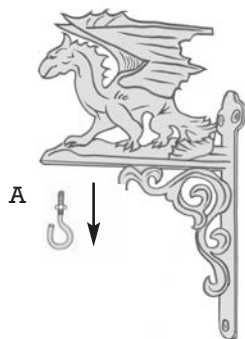

Step 2

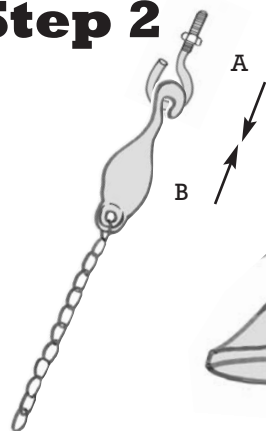

Step 3

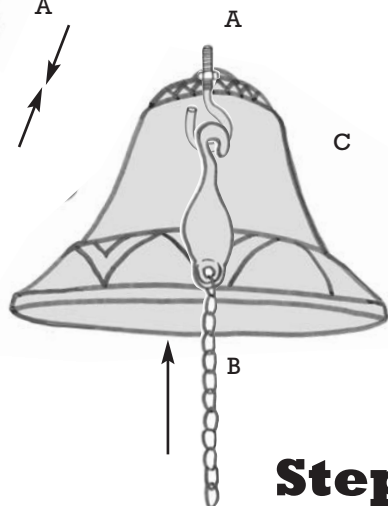

Step 1

Unscrew the hook (A) from the dragon bracket.

Step 2

With the hook unscrewed from the bracket, hook the clanger (B) onto the hook (A).

Step 3

With the hook (A) and clanger (B) attached to each other, insert the threaded part of the hook through the hole at the top of the bell (C). Adjust the bolt on the hook so that at least 1/8 of thread shows above bell.

Step 4

Insert the threaded part of hook into the threaded hole on the bracket. Align both correctly and screw until tight. Take care to align correctly, misalignment will result in stripped threads on the screw.



Wall anchor screws not included.

Step 4