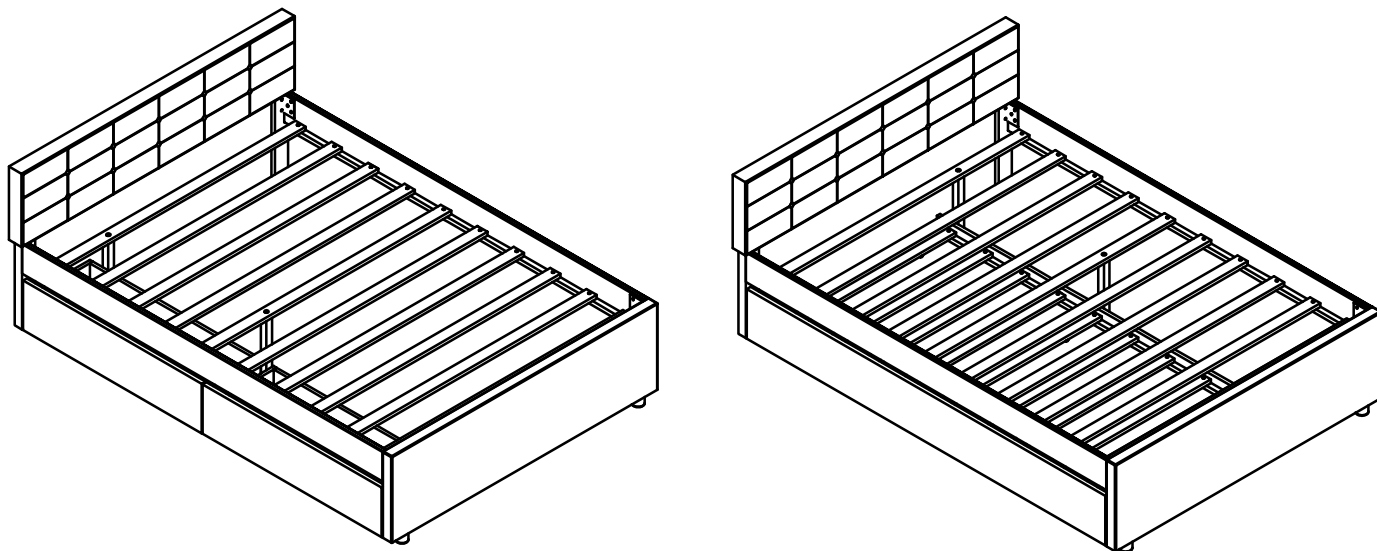


ASSEMBLY INSTRUCTION



SAFETY WARNINGS

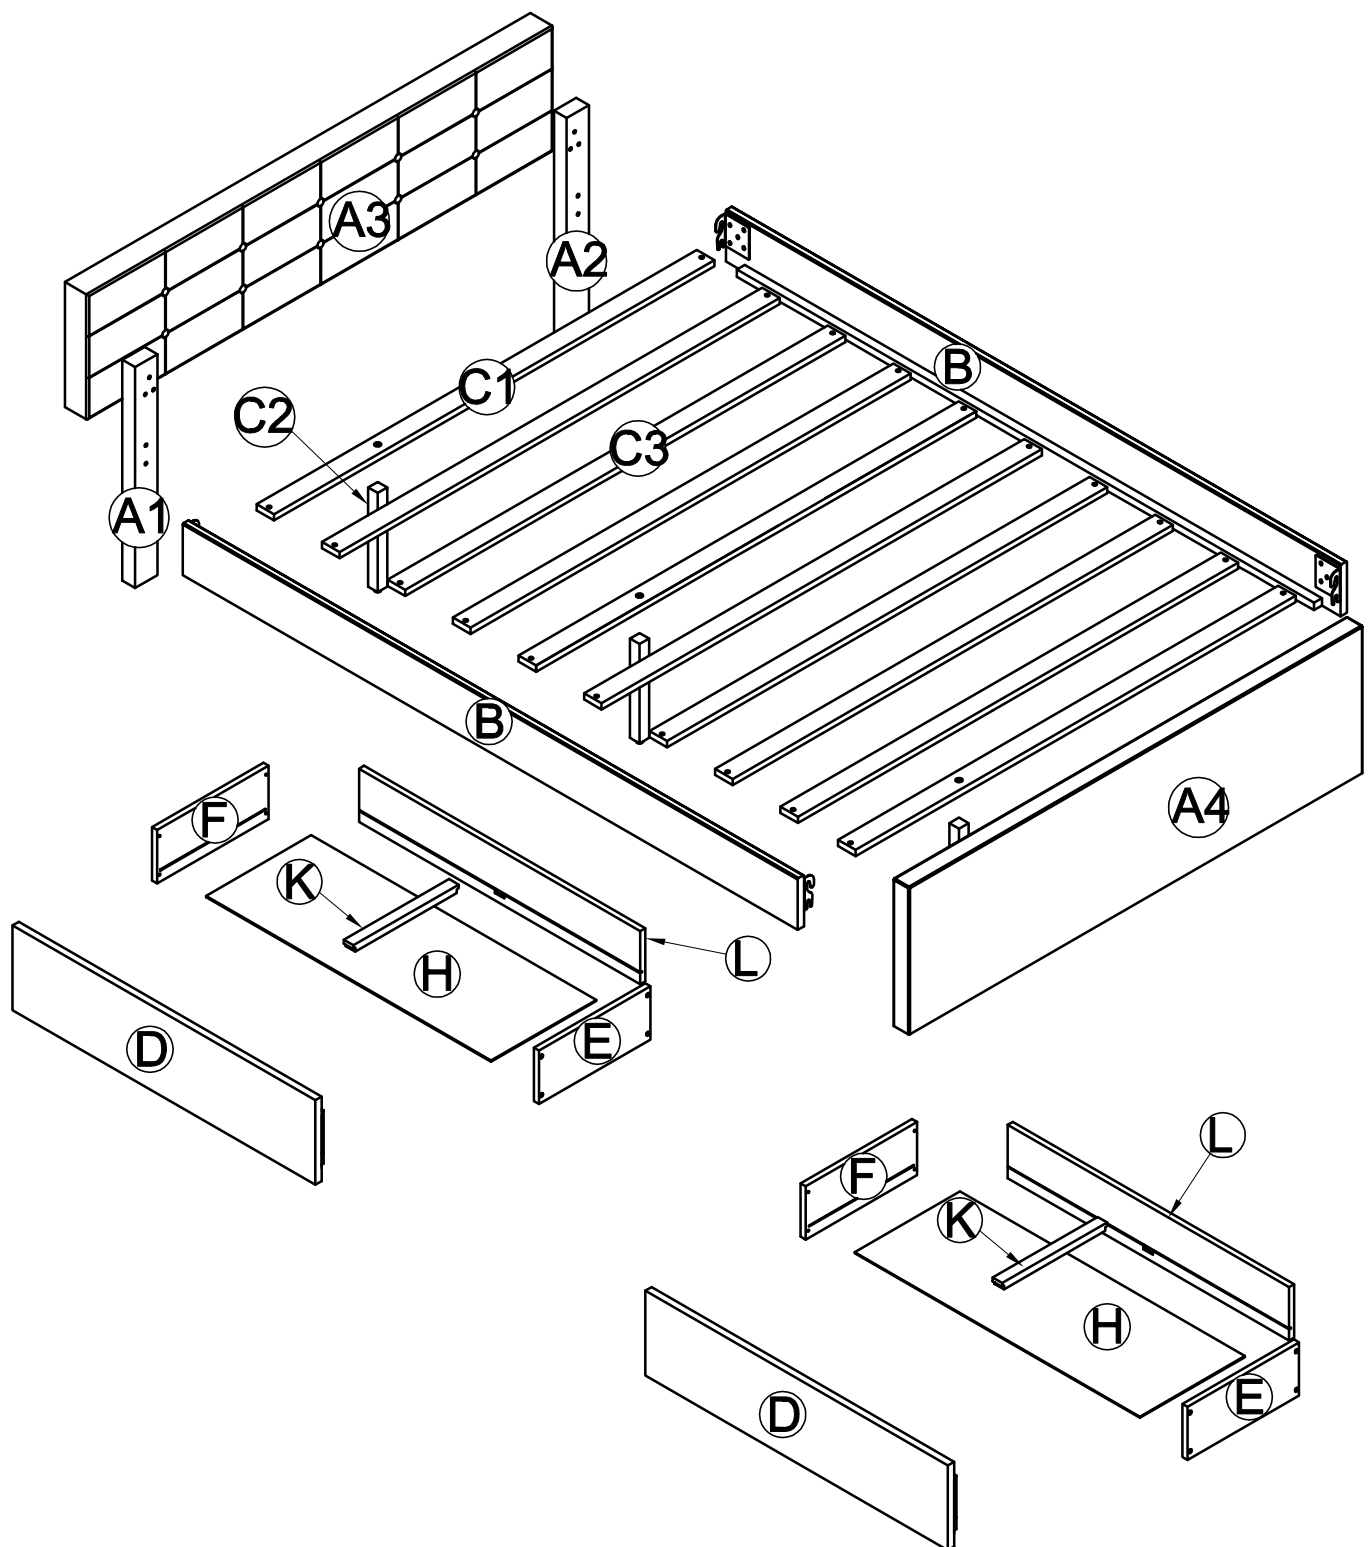
1. Follow the information on the warning label appearing on the upper bunk end structure and on the carton... Do not remove warning label from bed.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches below the upper edge of guard rails.
4. Do not allow children under 6 years to use the upper bunk.
5. Prohibit more than one person on upper bunk.
6. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
7. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
8. Always use the ladder for entering and leaving upper bunk.
9. Do not use substitute part. Contact the manufacturer or dealer for replacement part.
10. Use of night light may provide added safety precaution for a child using the upper bunk.
11. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
12. Always use guardrail on both long sides of the upper bunk.
13. The use of water or sleep flotation mattresses is prohibited.
14. Keep these instruction for future reference.
15. Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to hooks, belts and jump rores.
16. Trundle : Only use for mattress 6 inch.

PLEASE DO NOT RETURN PRODUCT TO THE STORE

if you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.


ASSEMBLY INSTRUCTION

BED WITH 2 DRAWES







ASSEMBLY INSTRUCTION







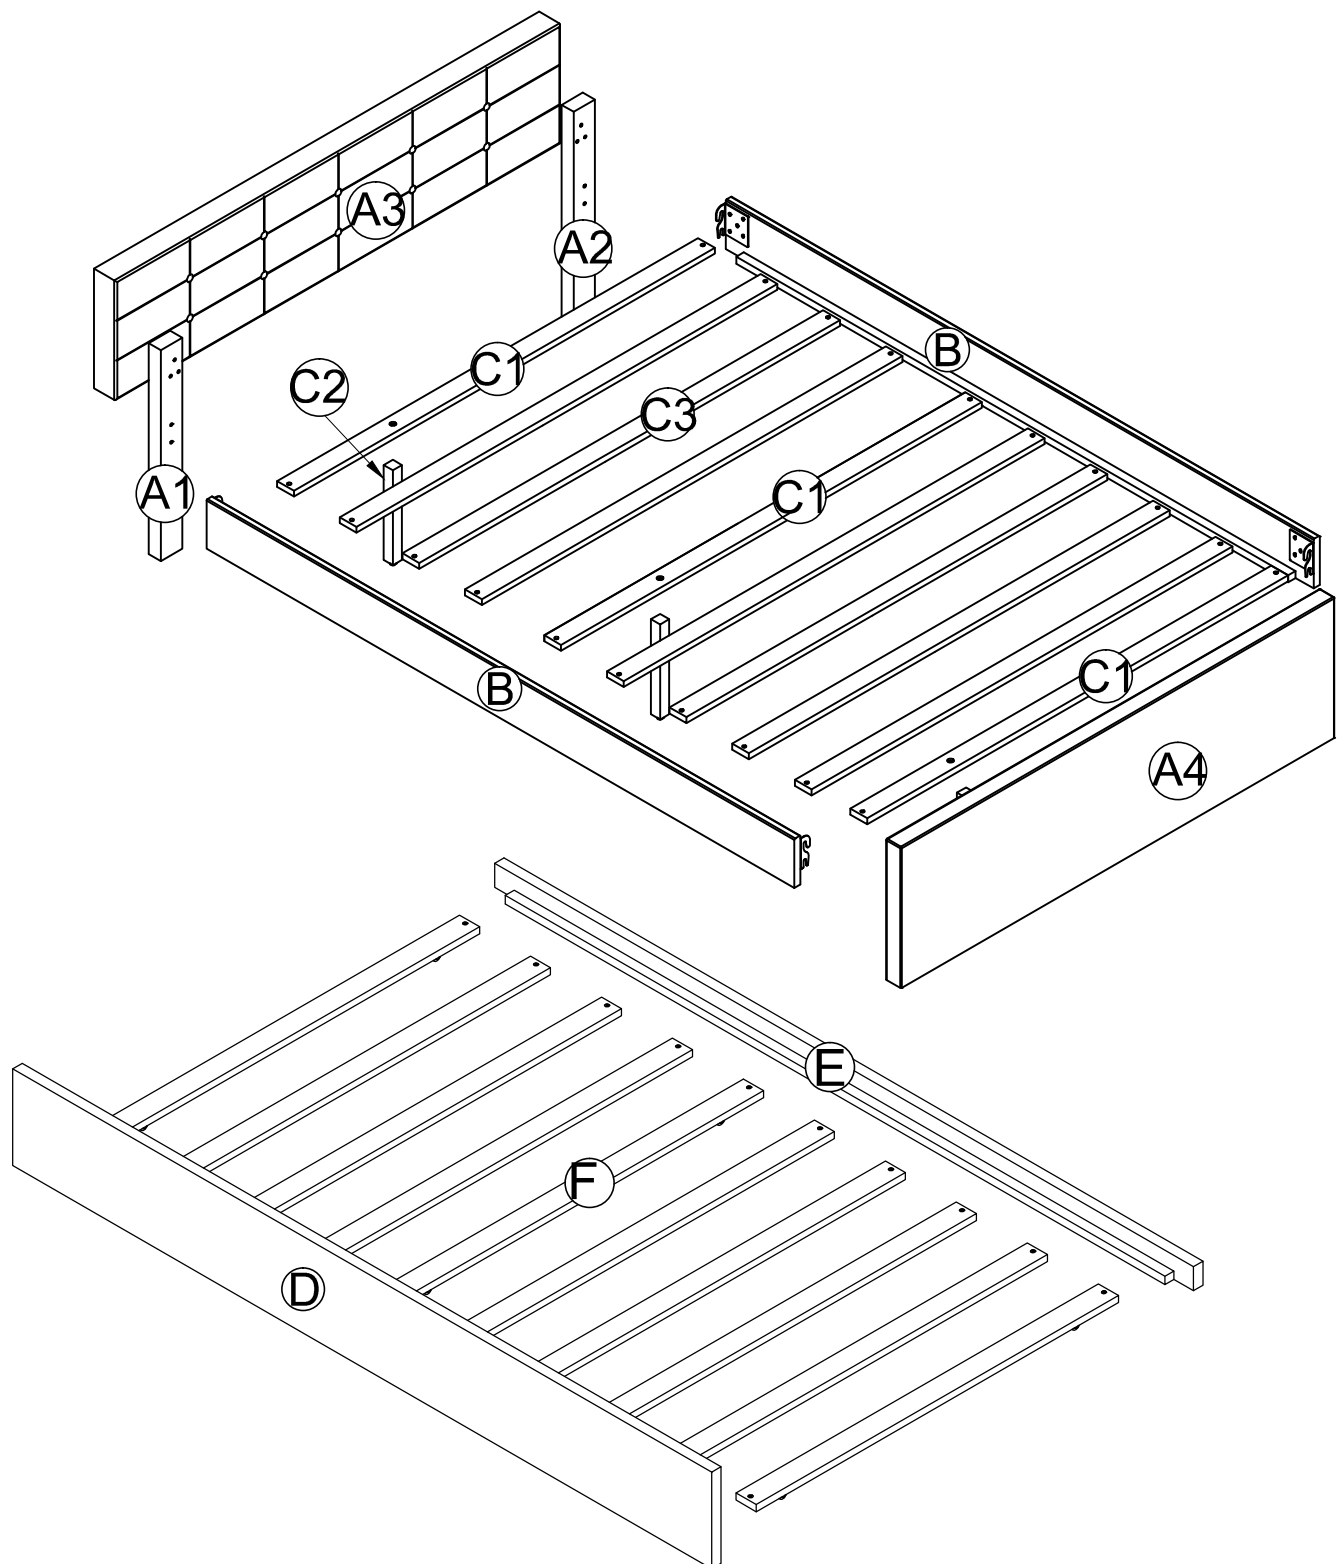
BED WITH TRUNDLE







Part List

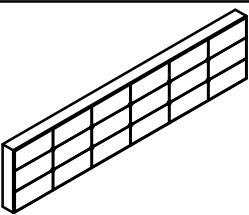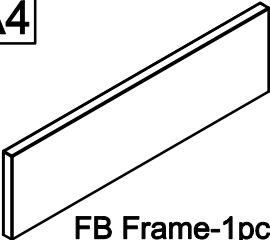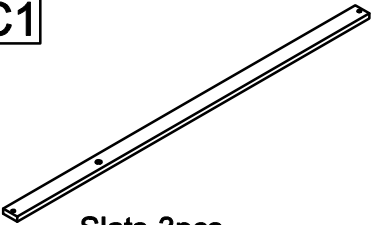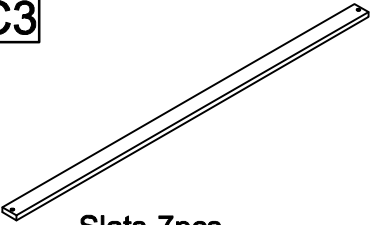
A1  Leg(HB-Front)-1pcs	A2  Leg(HB-Back)-1pcs	A3  HB Frame-1pcs
A4  FB Frame-1pcs	C1  Slats-3pcs	C2  Support Slats-3pcs
C3  Slats-7pcs		

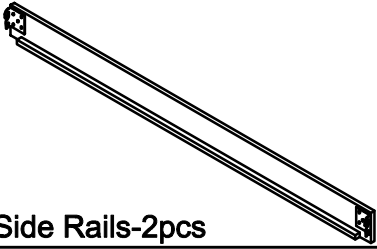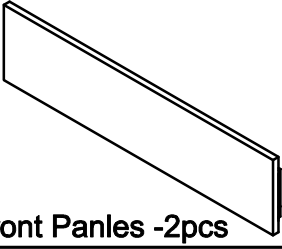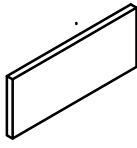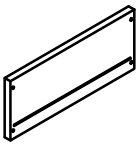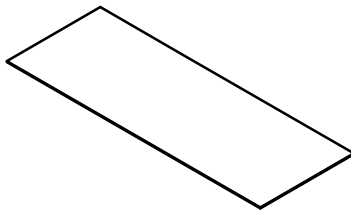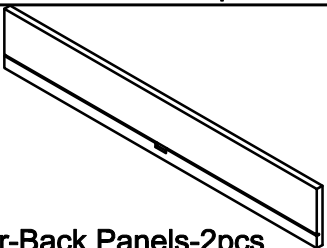Part List

B  Side Rails-2pcs	D  Drawer-Front Panles -2pcs	E  Drawer-Side Panles -2pcs
F  Drawer-Side Panles -2pcs	H  Drawer-Bottom Panles-2pcs	K  Drawer-Support Bottom-2pcs
L  Drawer-Back Panels-2pcs		


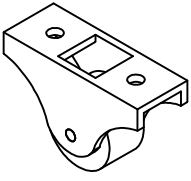


Hardware List

1  Plastic Feet(Ø50x40) 2pcs	2  Ø1/4" x 30 mm Hex-Head bolts 7pcs	3  Ø1/4" x 20 mm Hex-Head bolts 4pcs
4  M4 x 30 mm Wood Screws 36pcs	5  Wheels 8pcs	6  M4 x 15 mm Wood Screws 16pcs
7  Allen Key 1pc	8  Ø1/4" x 50 mm Hex-Head bolts 6pcs	9   Stopper 3pcs M4 x 38 mm Wood Screws 6pcs







Assembly Tools Required (Not Included)

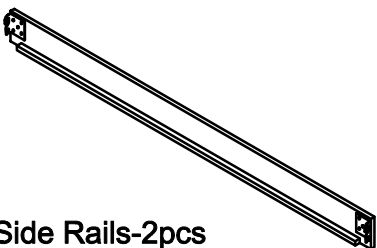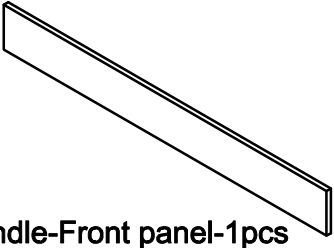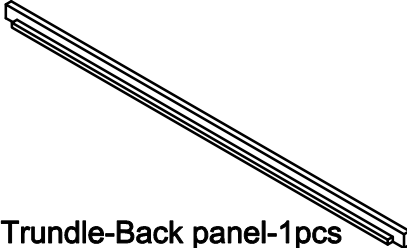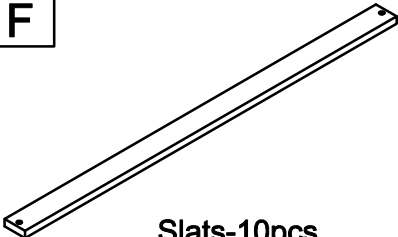Part List

B  Side Rails-2pcs	D  Trundle-Front panel-1pcs	E  Trundle-Back panel-1pcs
F  Slats-10pcs		

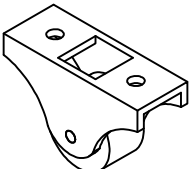Hardware List

1  Plastic Feet(Ø50x40) 2pcs	2  Ø1/4" x 30 mm Hex-Head bolts 7pcs	3  Ø1/4" x 20 mm Hex-Head bolts 4pcs
4  M4 x 30 mm Wood Screws 40pcs	5  Wheels 6pcs	6  M4 x 15 mm Wood Screws 21pcs
7  Allen Key 1pc	8  Ø1/4" x 50 mm Hex-Head bolts 6pcs	9   Stopper 3pcs M4 x 38 mm Wood Screws 6pcs
10  Steel Bracket 3pcs		




Assembly Tools Required (Not Included)


STEP 1:

Following below illustration Assembly Plastic Feet #1 With Footboard(A4)
to complete Footboard

1



2pcs

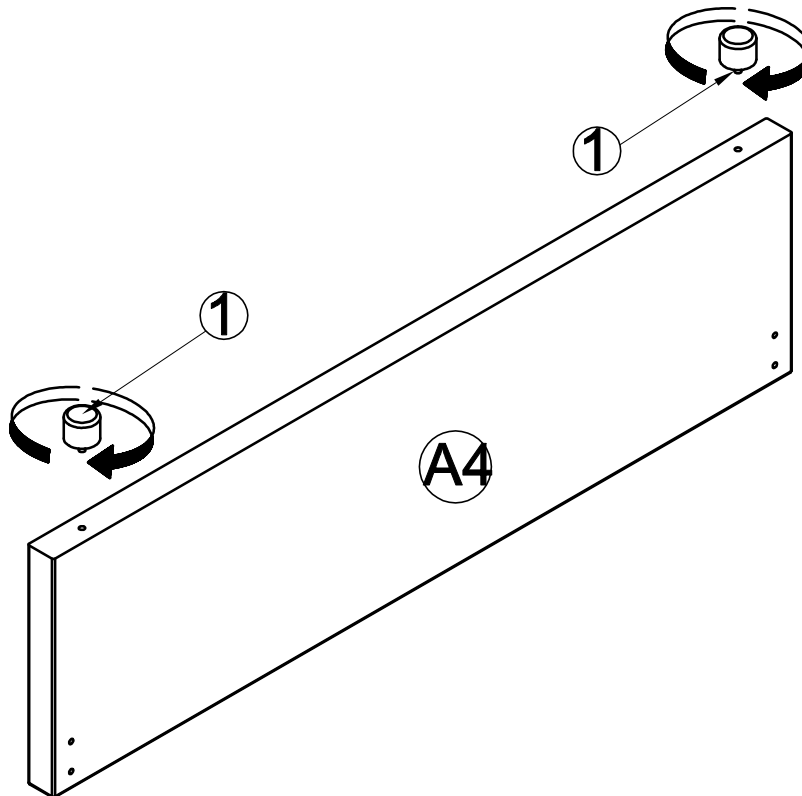


STEP 2:


Following below illustration:

-Using hardware #8 to connect Legs(A1&A2) With Headboard Frame(A3)
to complete Headboard

8




6pcs

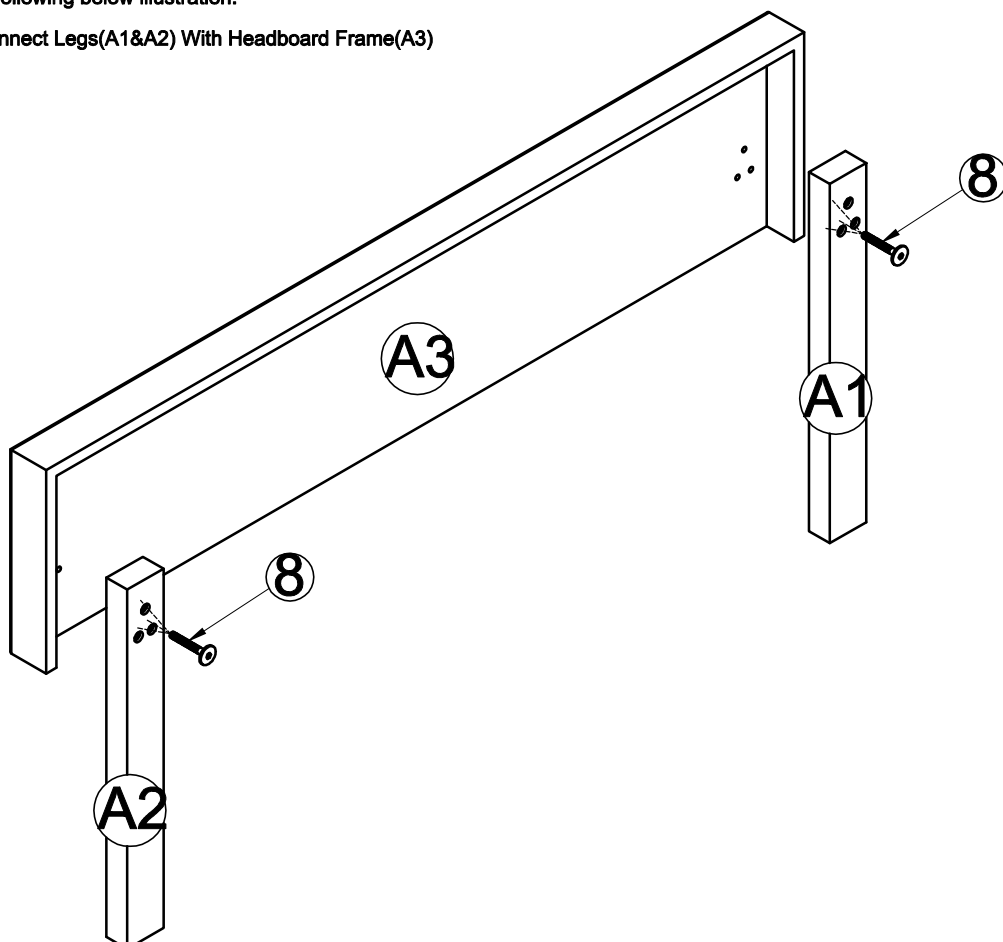


STEP 3: Following below illustration Using hardware #2,#3 to Assembly Headboard (Completed on step 2) and Footboard (Completed on step 1) with siderail B(x2) .Look at detail view for more detail

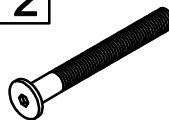2



4pcs

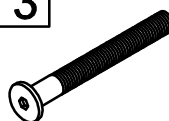3



4pcs

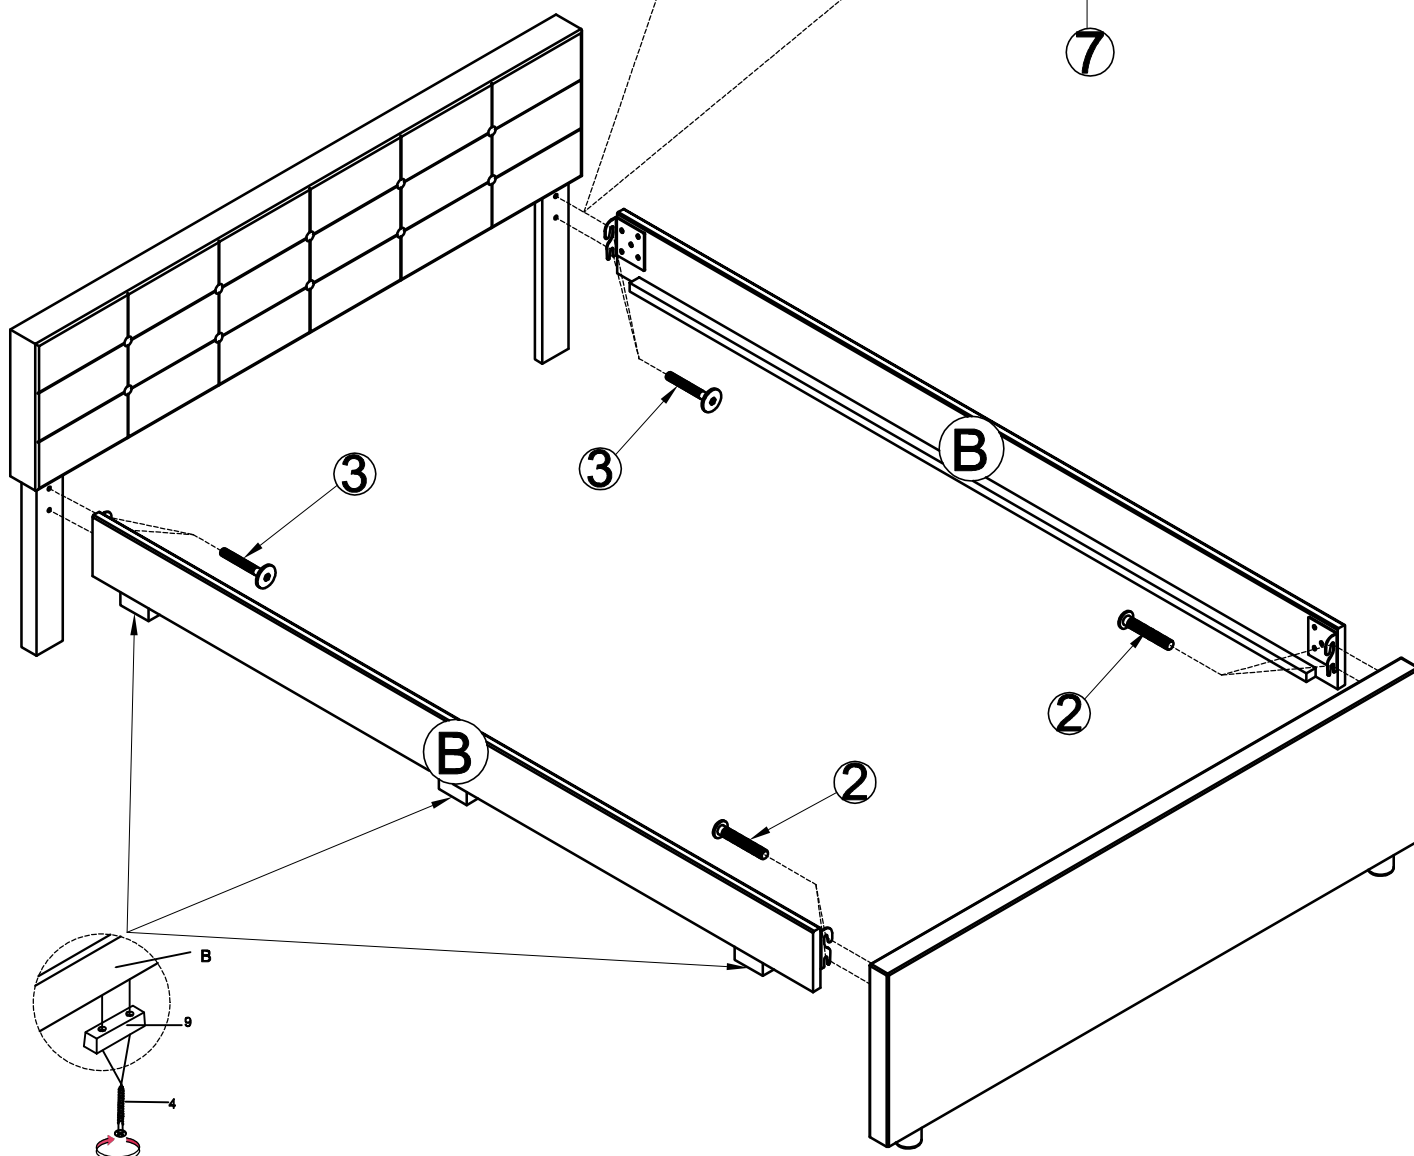
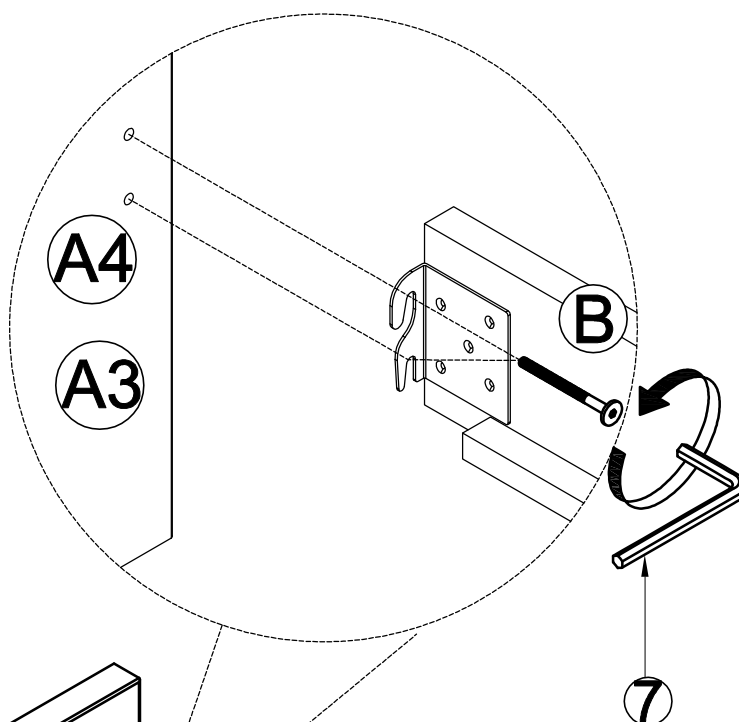
9




Stopper
3pcs




M4 x 38 mm
Wood Screws 6pcs



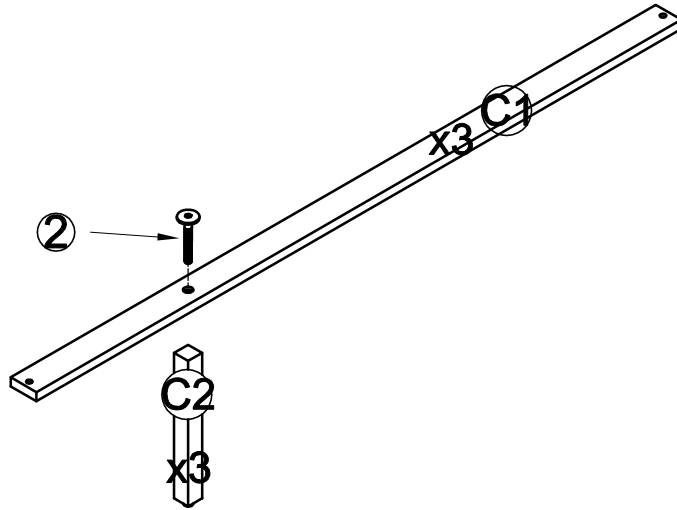STEP 4: Following below illustration Using hardward #2 to Assembly Slats C1(x3) with Support Slats C2(x3) .Look at detail view for more detail



2

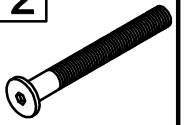

3pcs

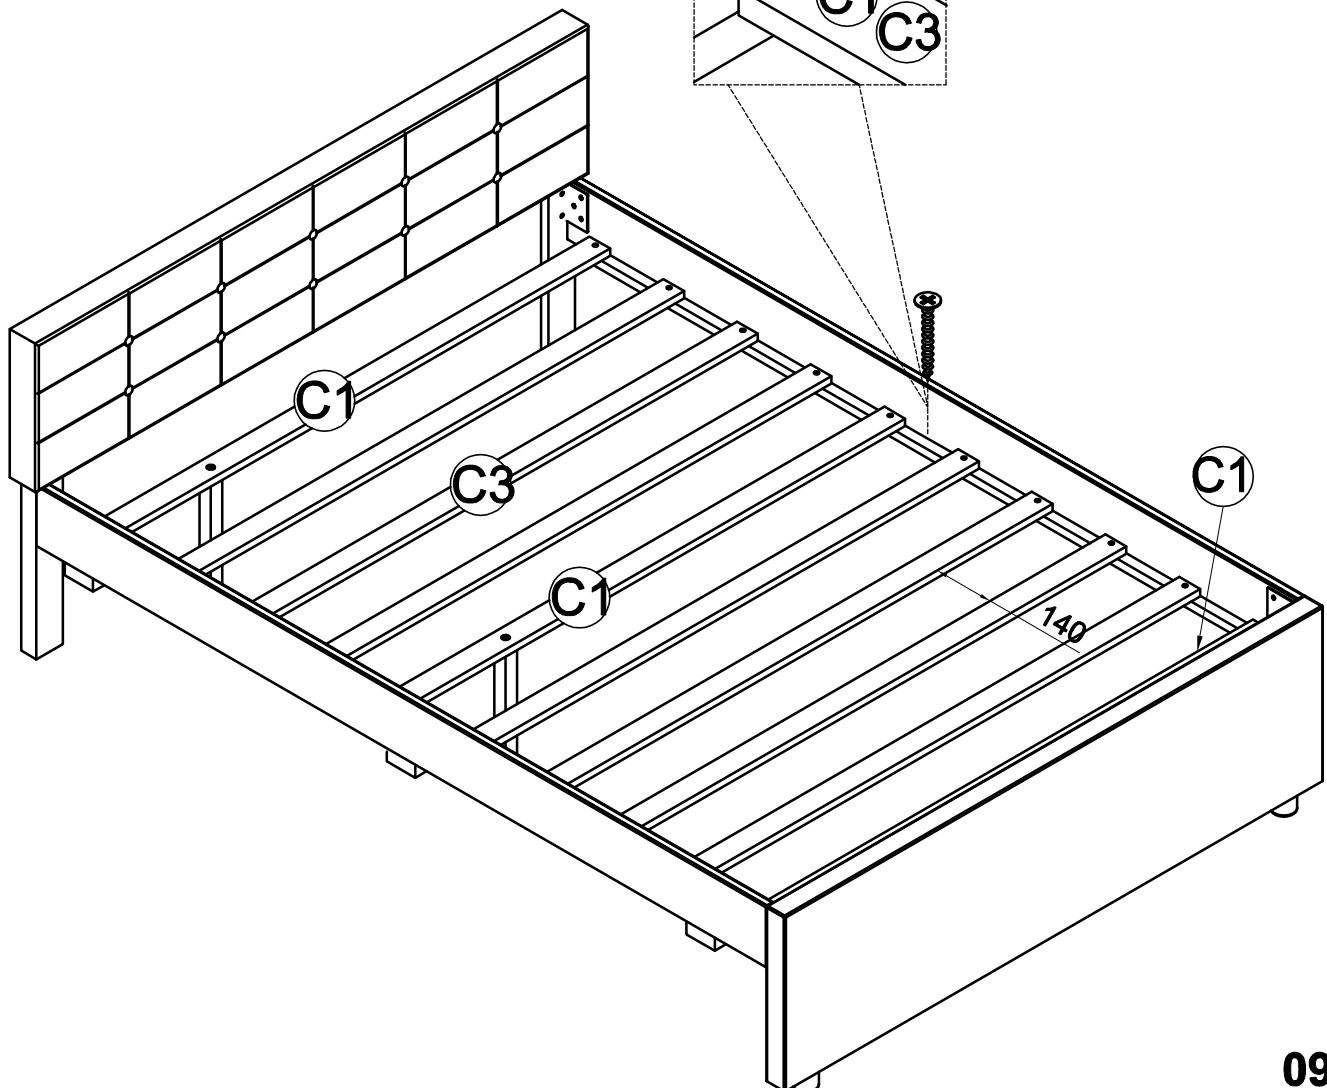
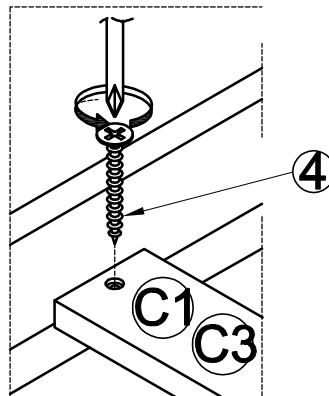
STEP 5: Following below illustration:

- Screw 3 slats (Completed on step 4) and 7 slats C3 by using hardward #4.
- Look at detail view for more detail



4




20pcs




STEP 6-1: Following below illustration. Assembly Drawers (x2). if you bought Combo Bed with Trundle please skip this step and move ahead to step 8-1

6	5
	
8x2pcs	4x2pcs

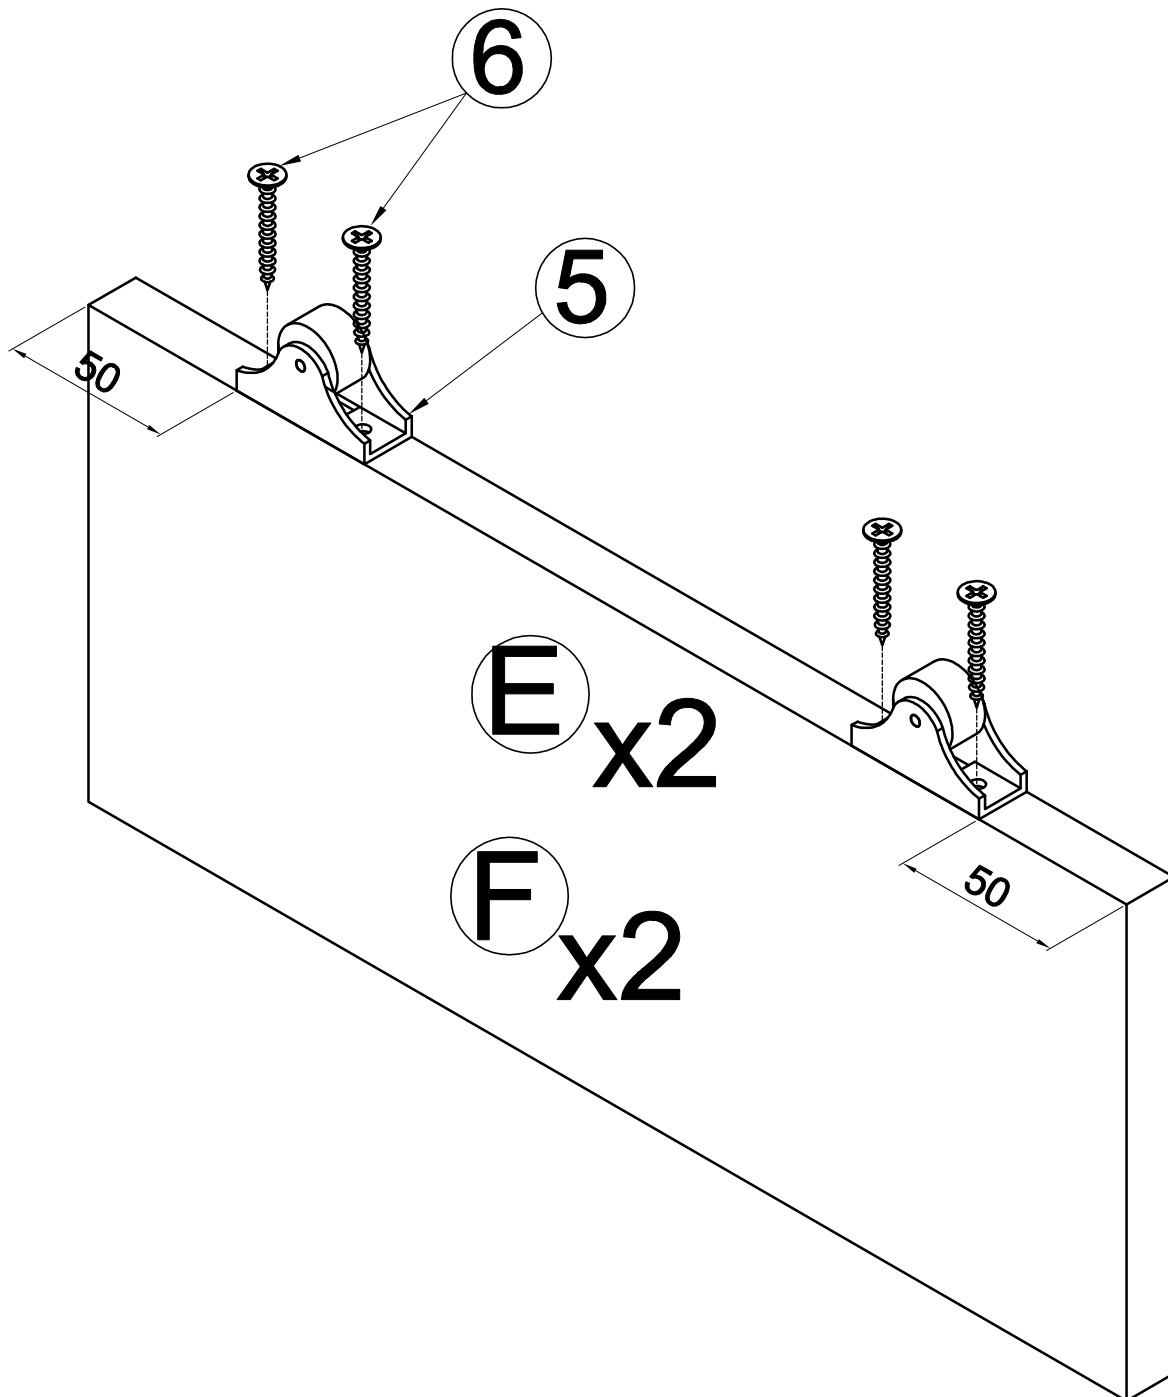


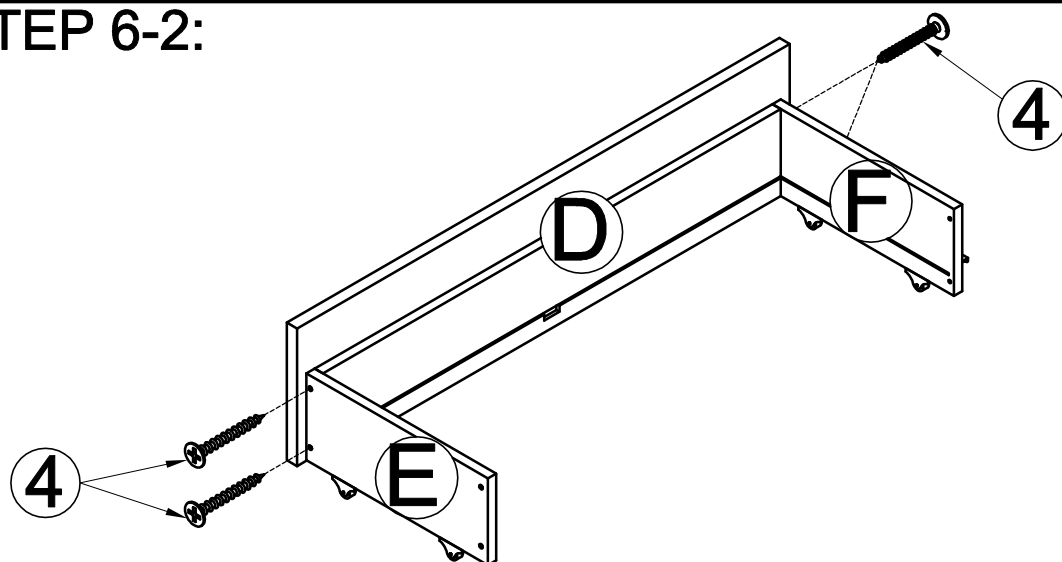STEP 6-2:




4
4x2pcs

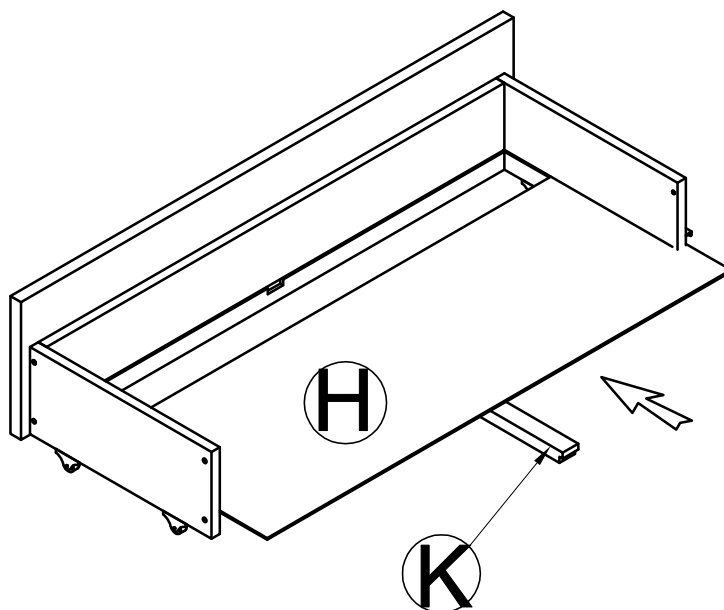STEP 6-3:



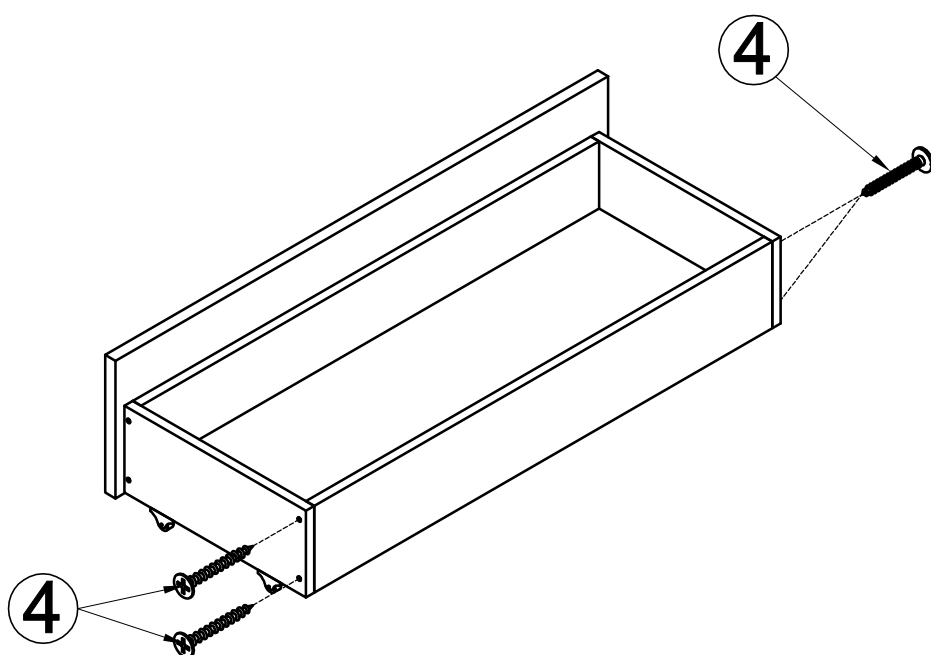
STEP 6-4:



4
4x2pcs



STEP 7: CONGRARULATION. YOU HAVE COMPLETED THE BED. just one more step to push the Under Drawer into it

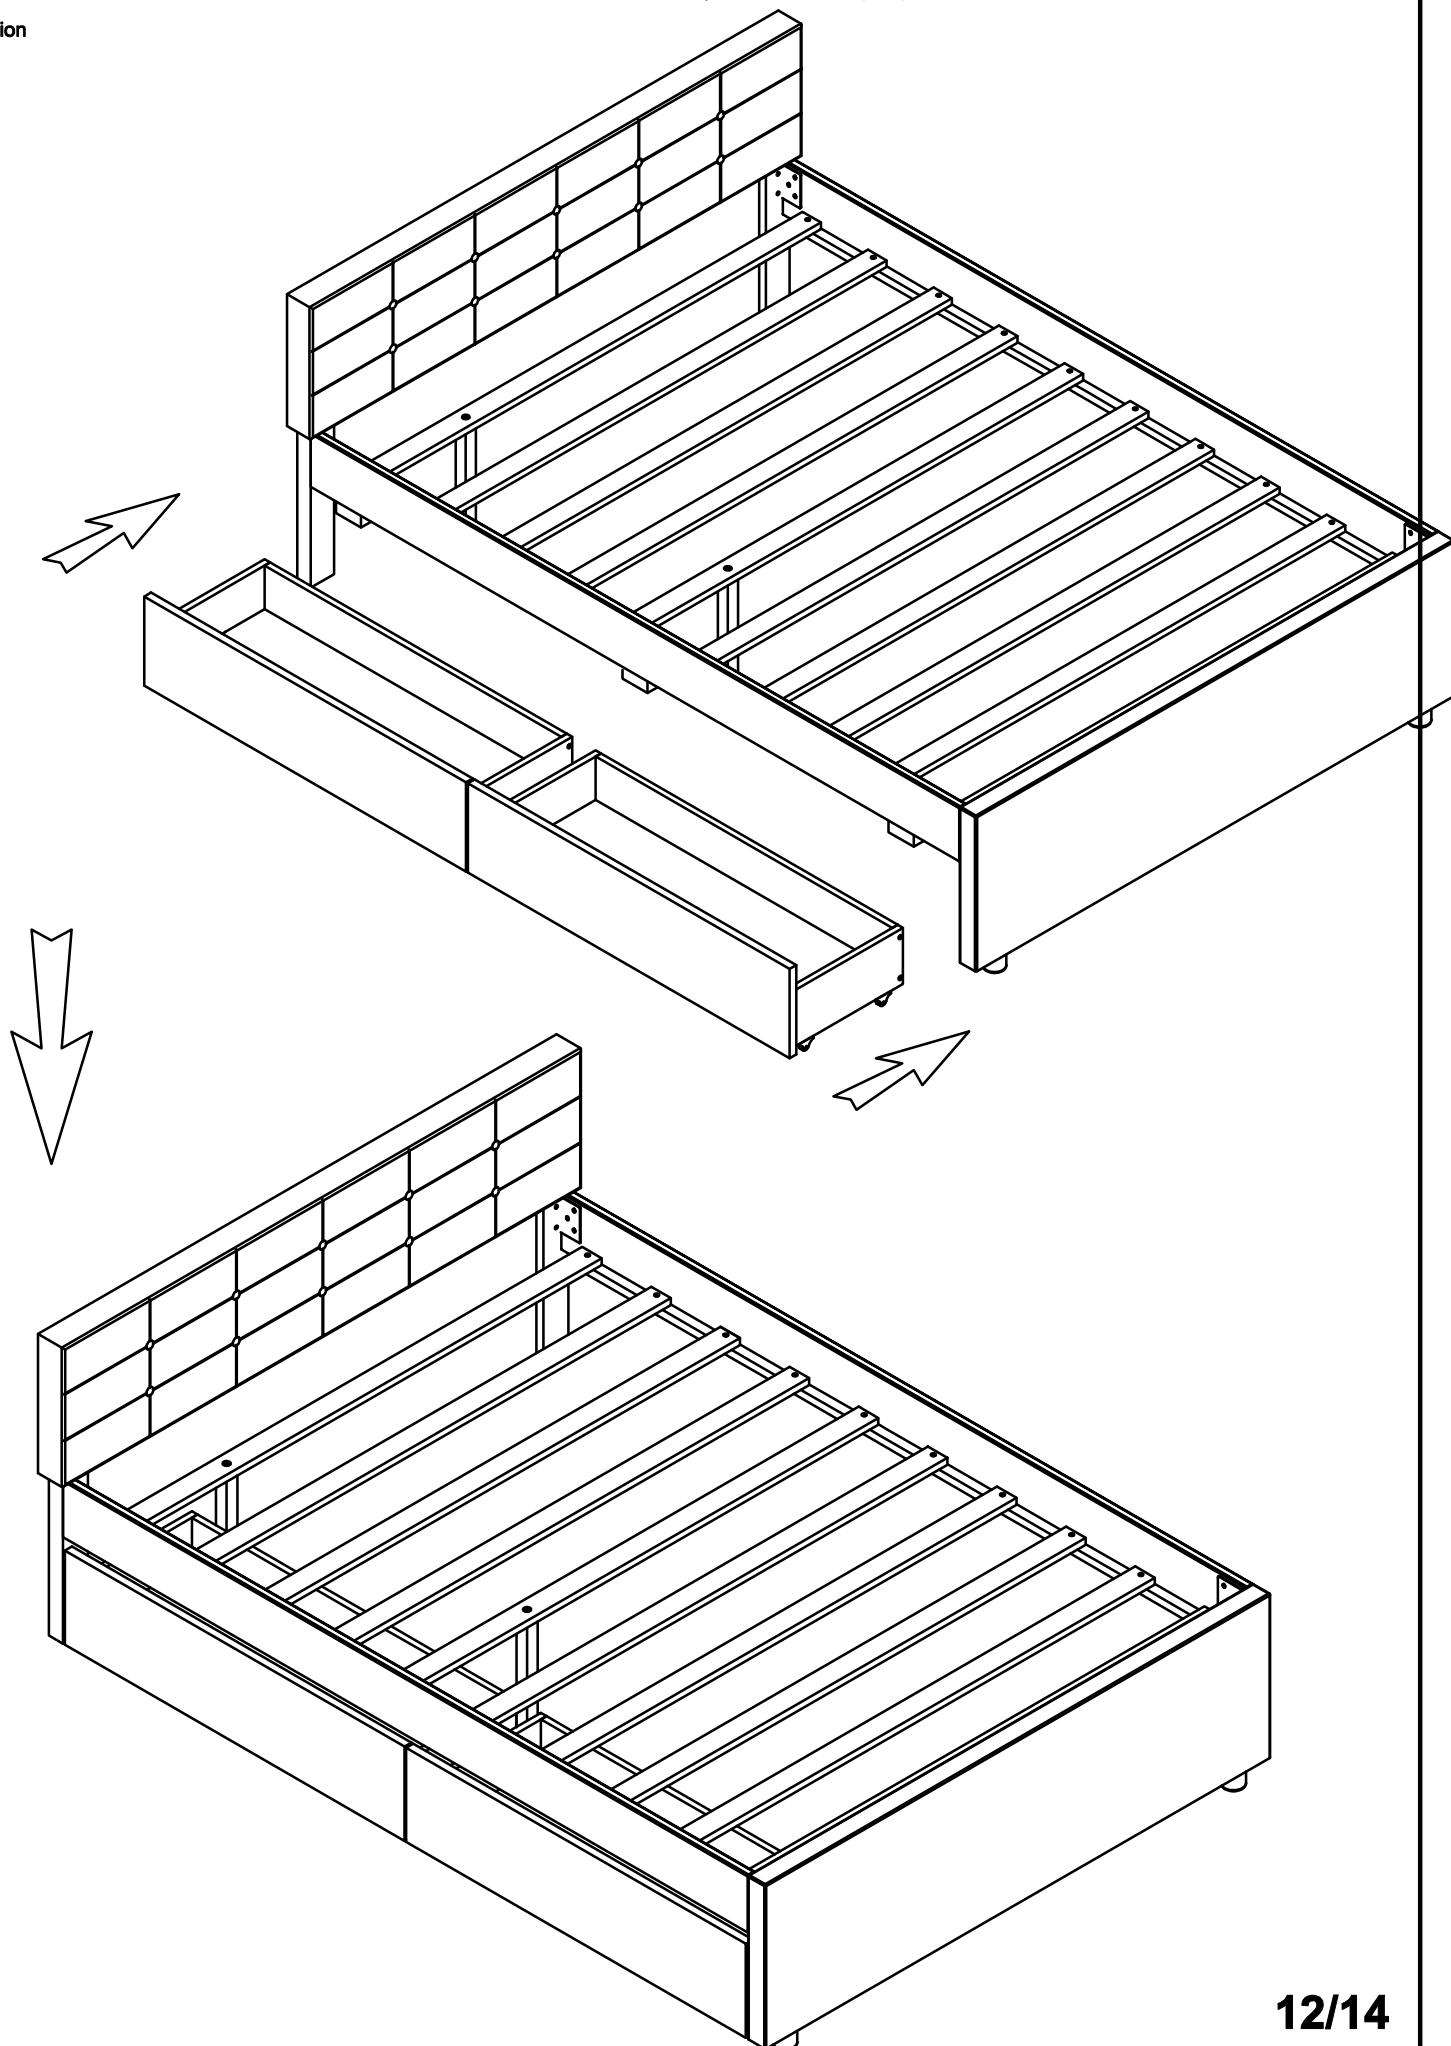
position



STEP 8-1: Following below illustration. Assembly Trundle. If you bought Combo Bed with 2 Drawers please ignore this step.

-Screw Wheels (#5) With Slats F(x3) using hardware #6.

6	5
	
12pcs	6pcs

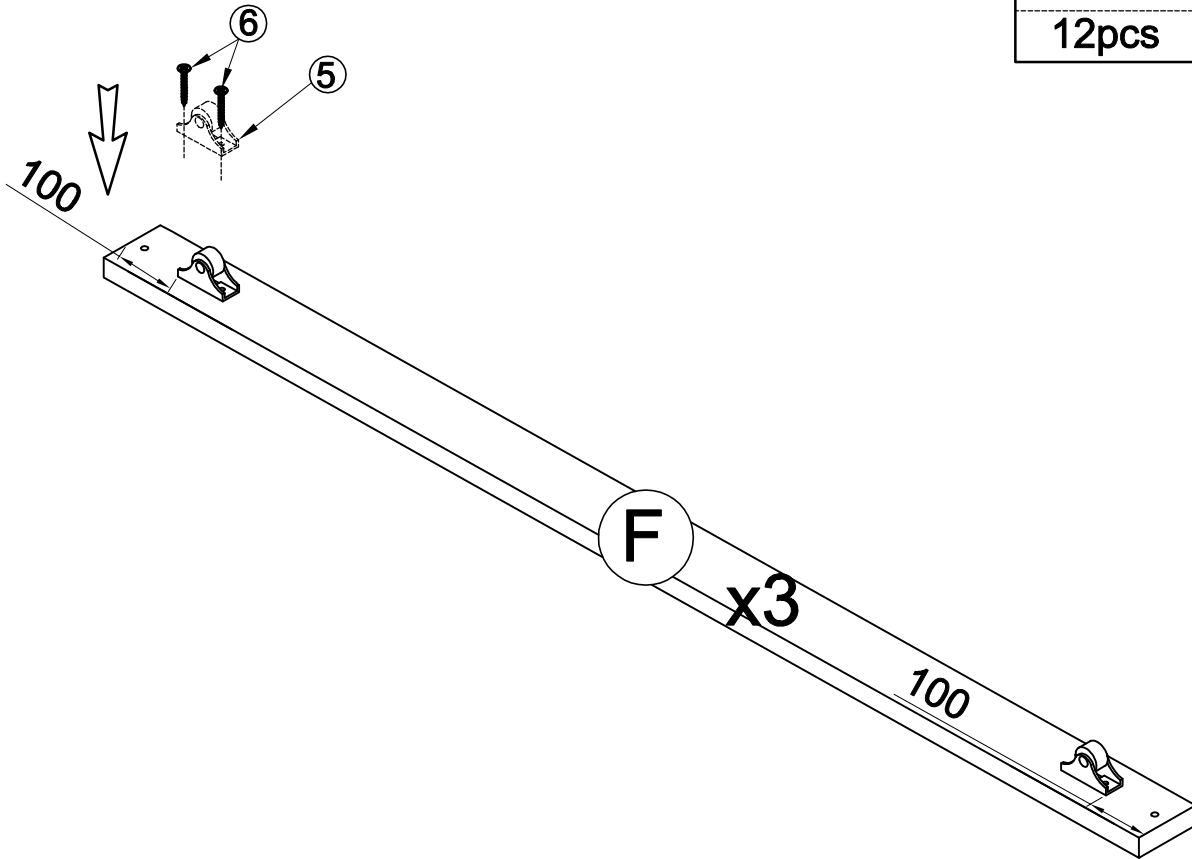



STEP 8-2: Following below illustration:

-Screw 10 slats F with Front Trundle(D) and Back Trundle(E) using hardware #4.

-Screw Steel Bracket (#7) with Front Trundle(D) and slats F using hardware #5

-Look at detail view for more detail

8	6	4
		
3pcs	9pcs	20pcs

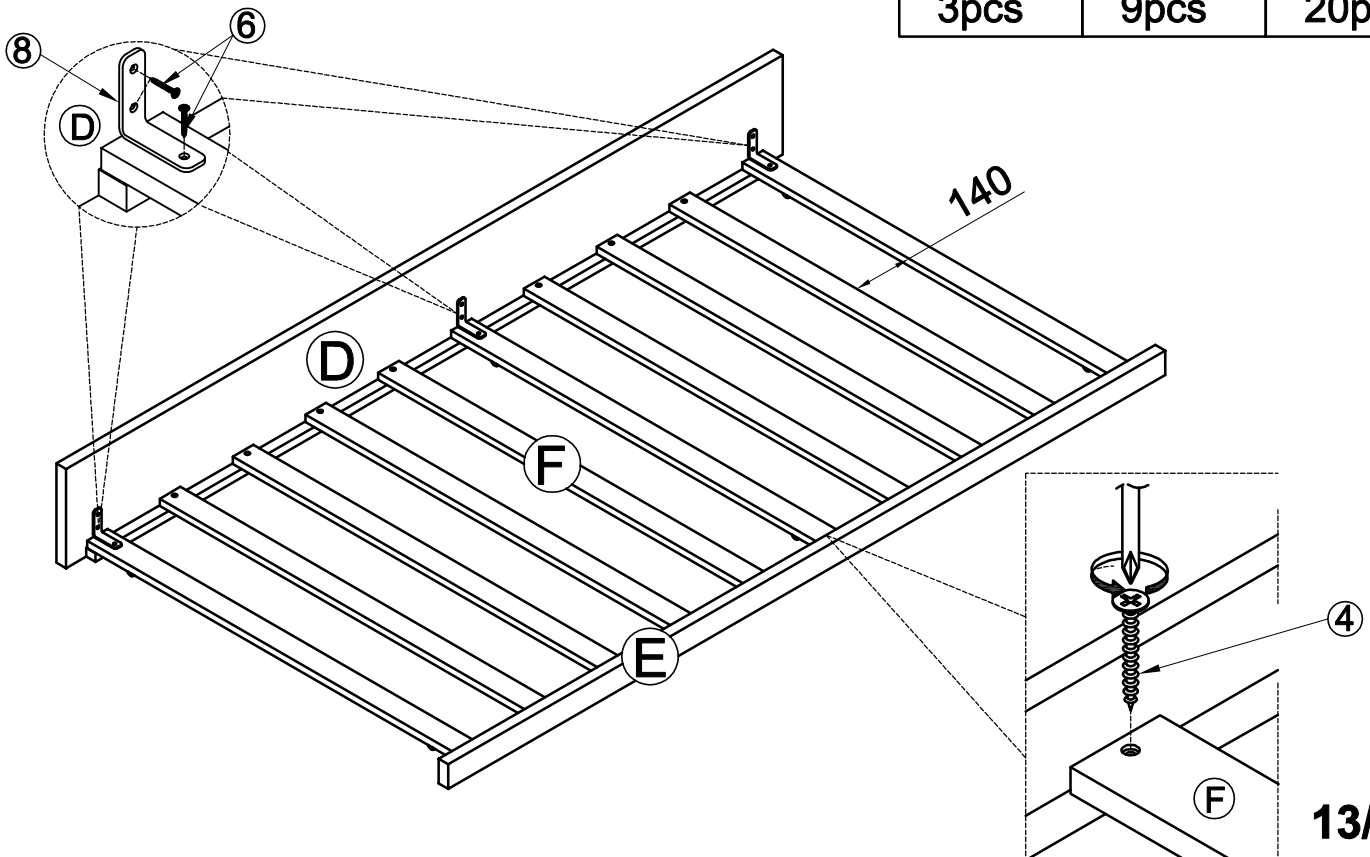

STEP 9: CONGRARULATION. YOU HAVE COMPLETED THE BED. just one more step to push the Under Drawer into it

position

