




1100mm/1300mm

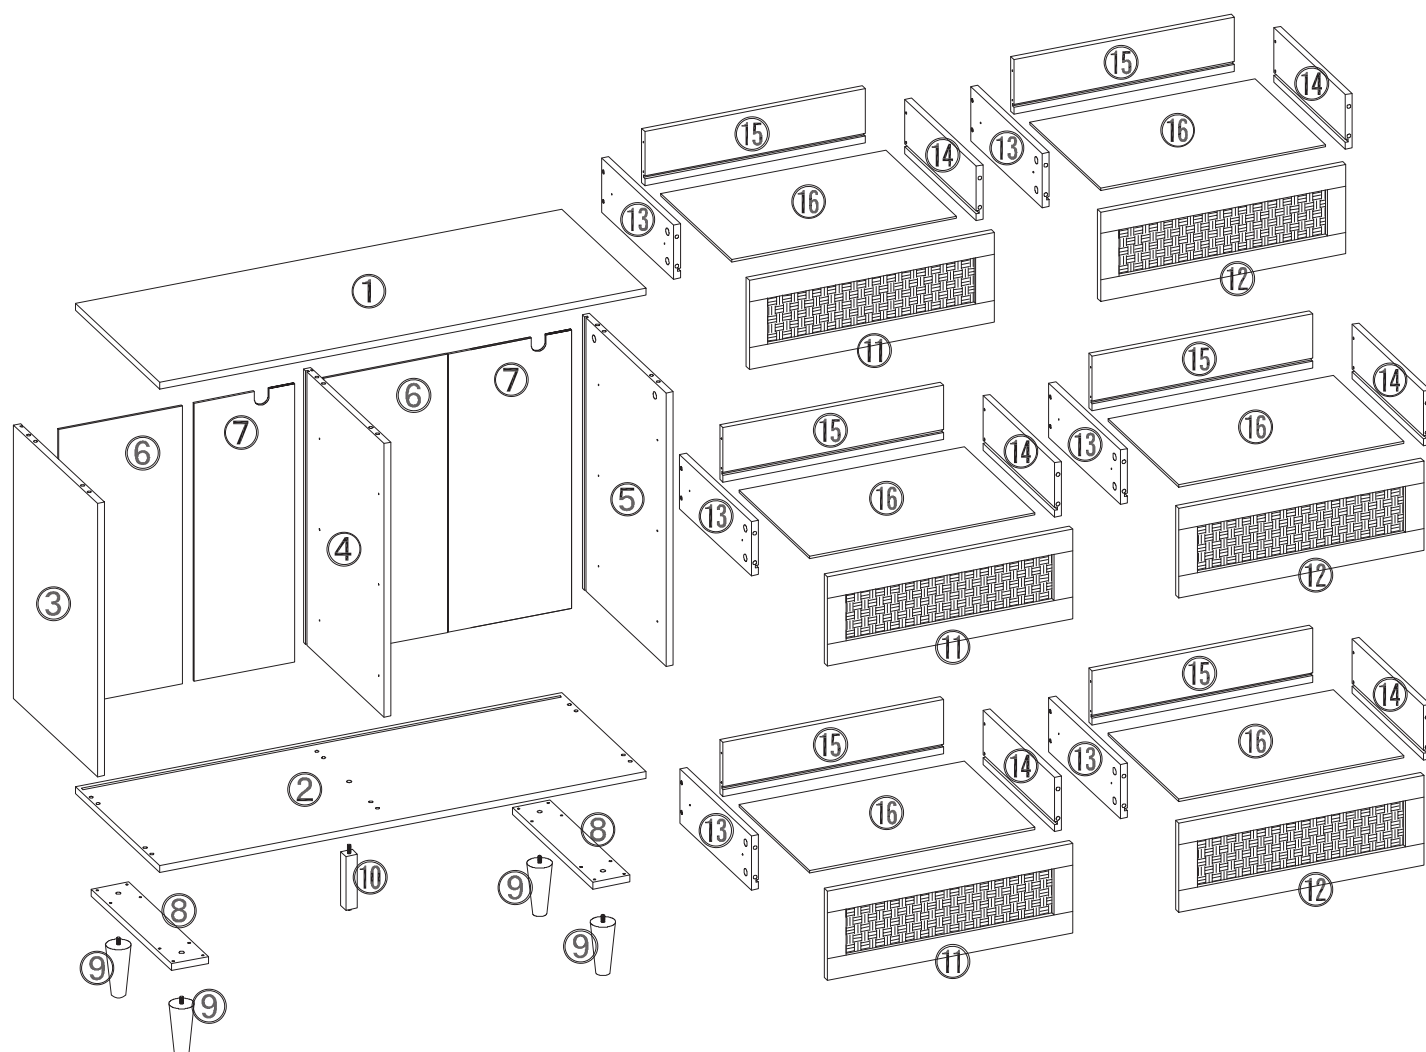



NOTE: Pull inner and outer drawer runners apart before fixing them to panels.

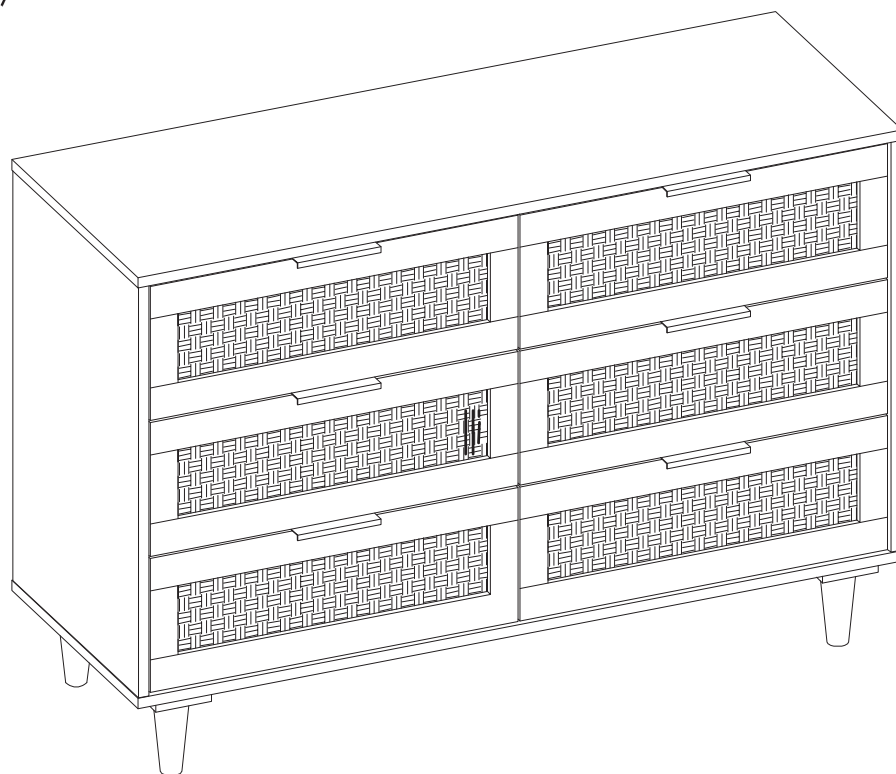


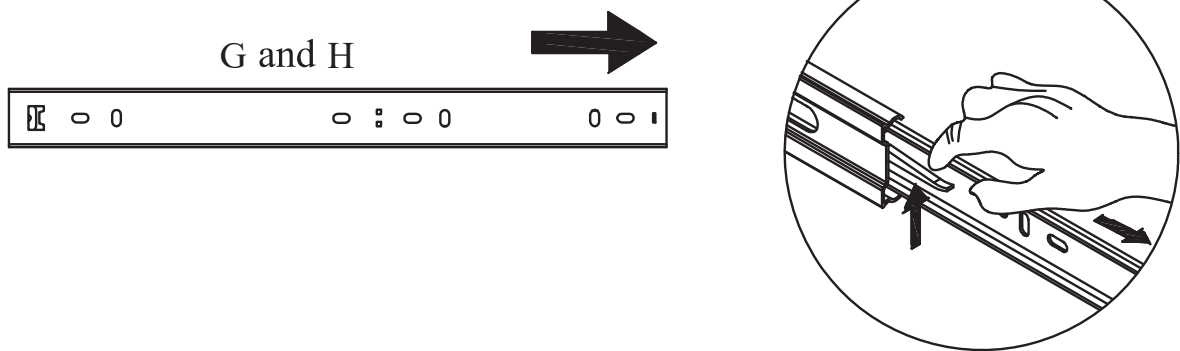








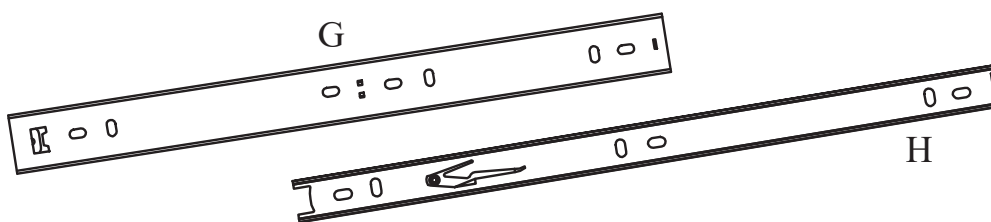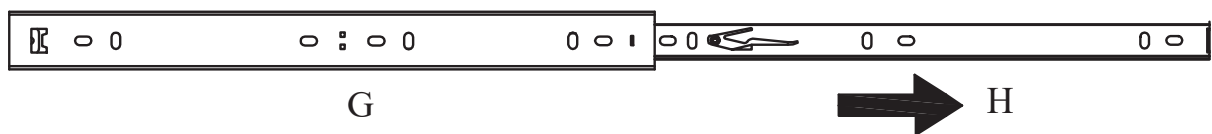






Slide drawer runners apart until the drawer lock can be seen, as shown.




Press and hold the drawer runner lock upwards then continue to slide drawer runner apart, as shown.




Your inner and outer drawer runners are ready to be fixed to panels.

A	B	C	D	E	F
				 M3.5*14mm	 M4*35mm
30	30	12	6	61	25
G	H	I	J	k	L
		 588mm	 M3.5*25mm		  6*30mm
12	12	2	16	6	1
M	N	O	S		
					
1	4	1	6		


Step1

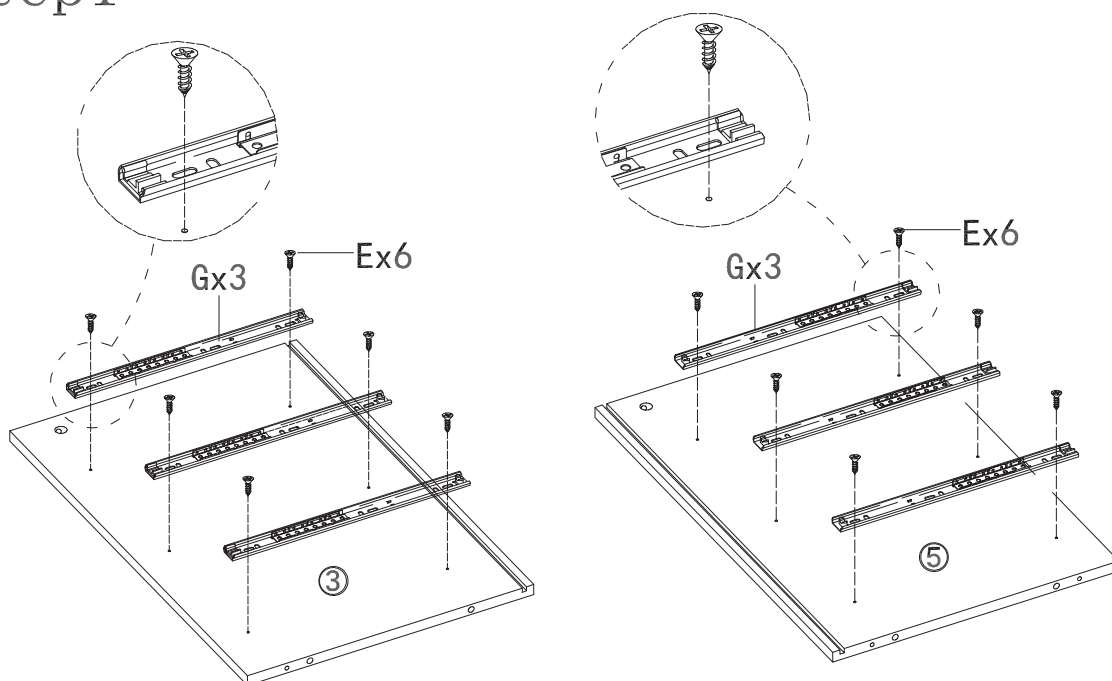


Step2

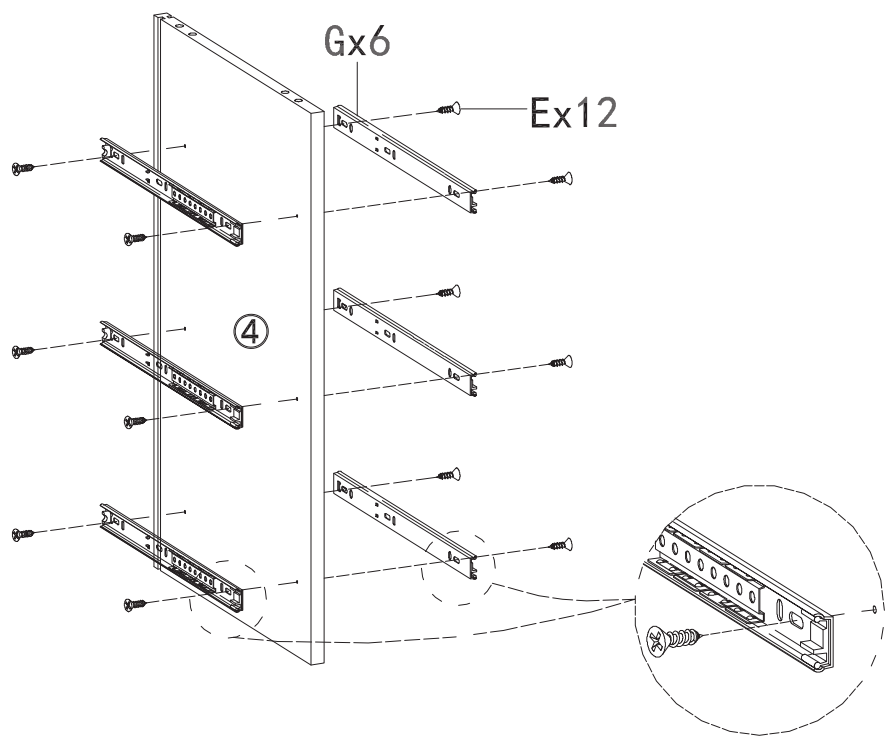


Step3

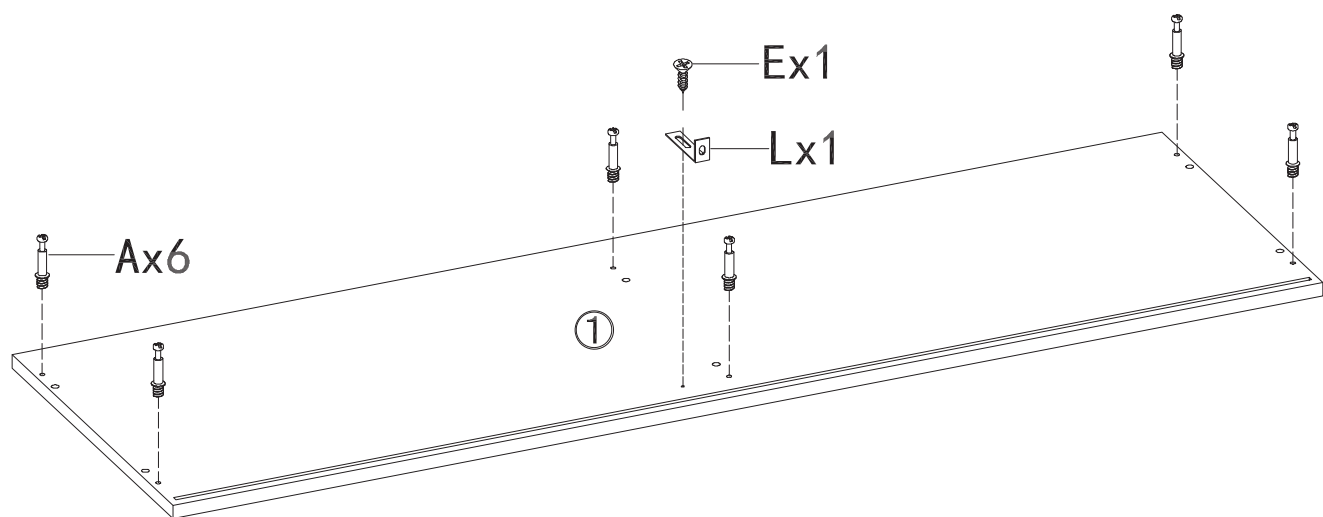


Step4

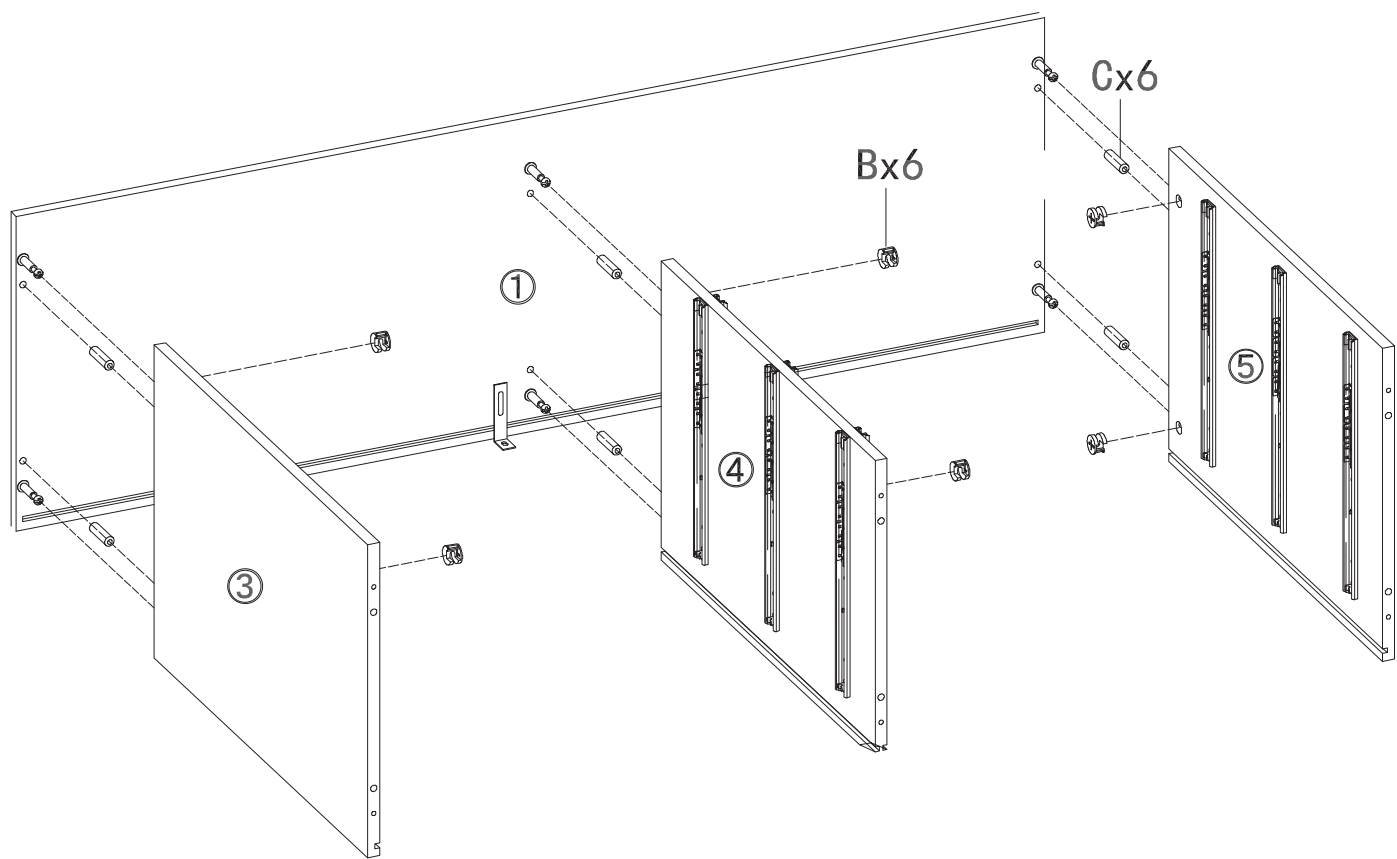


Step5

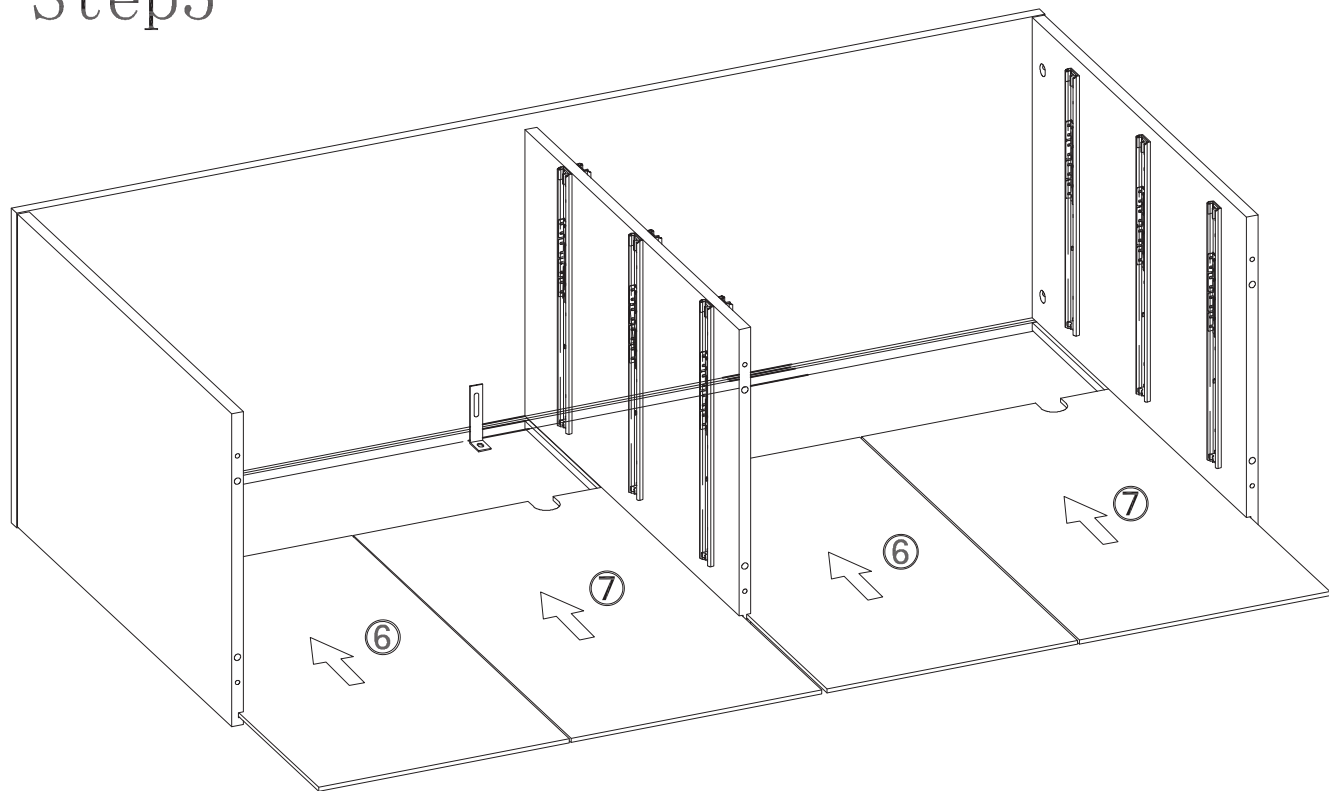


Step6

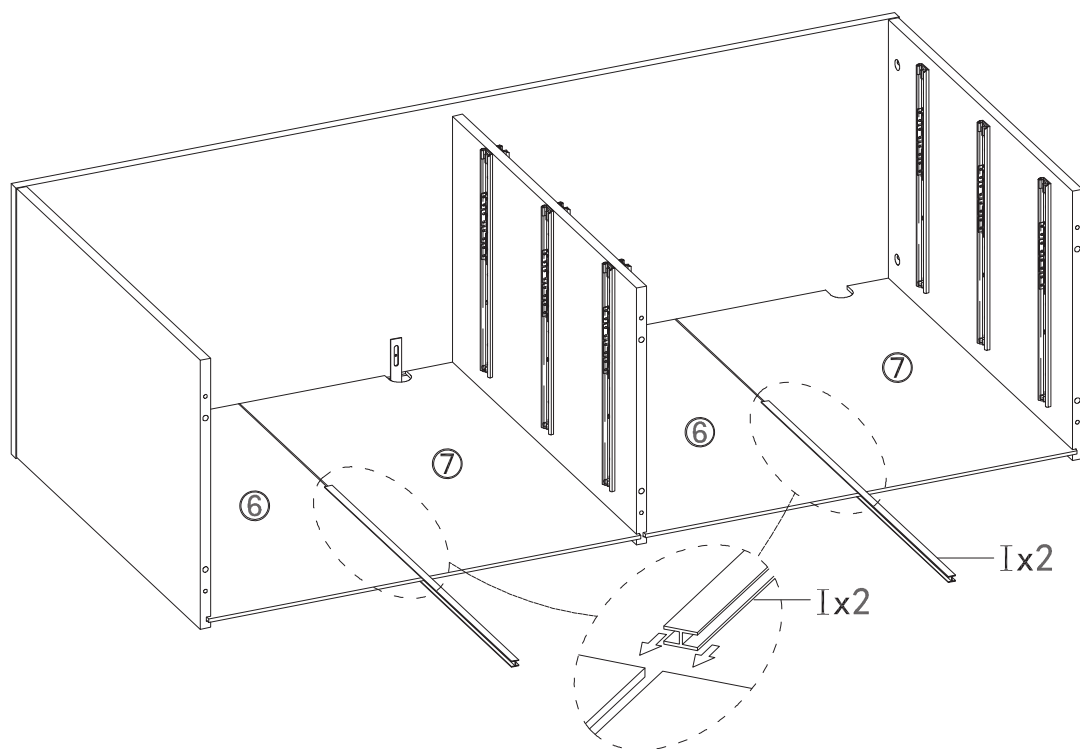


Step7

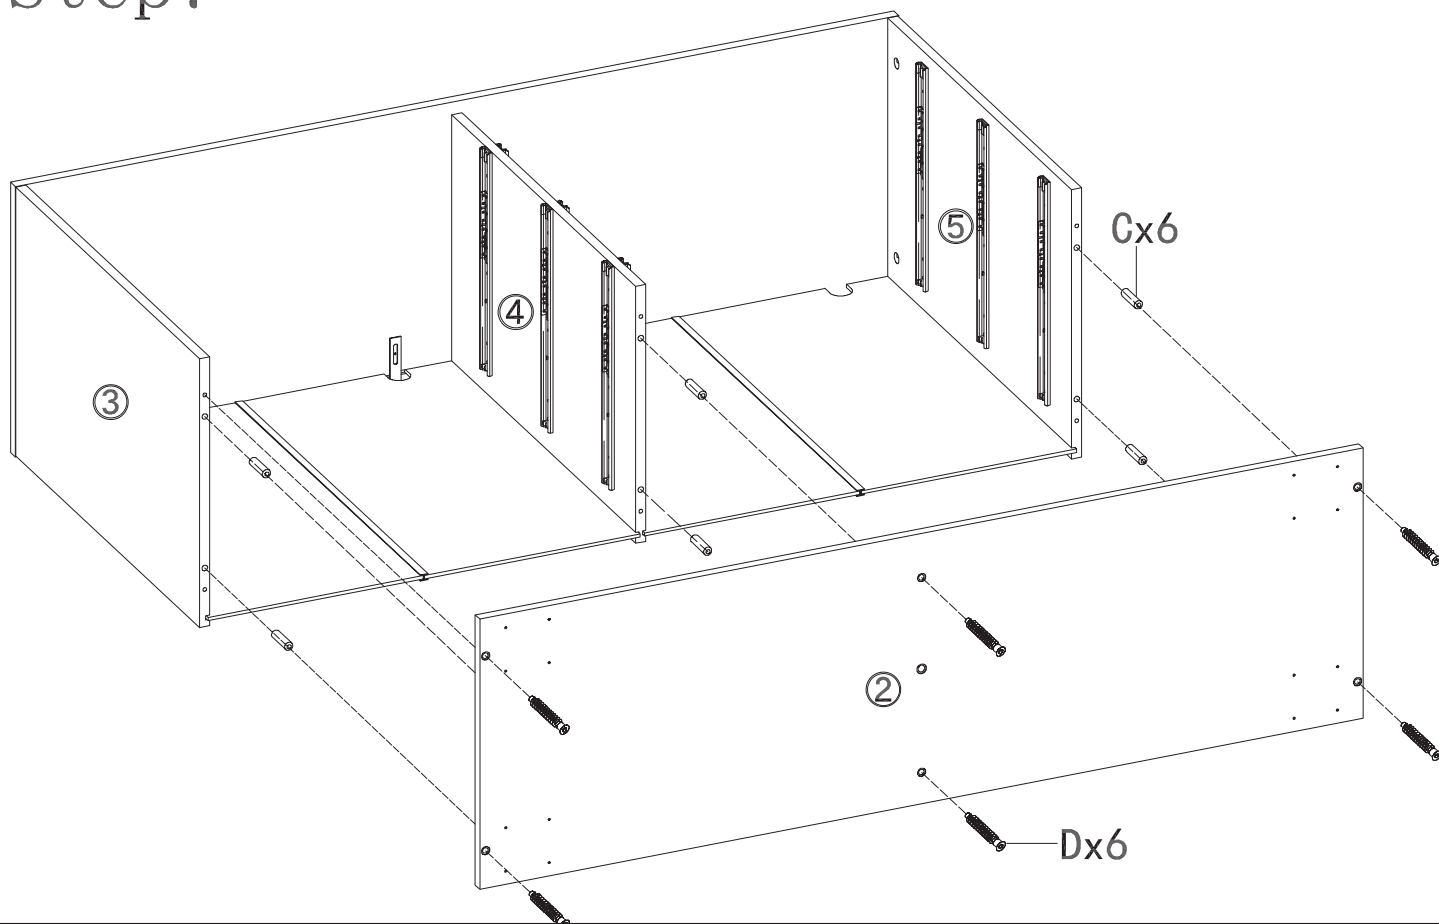



Step8

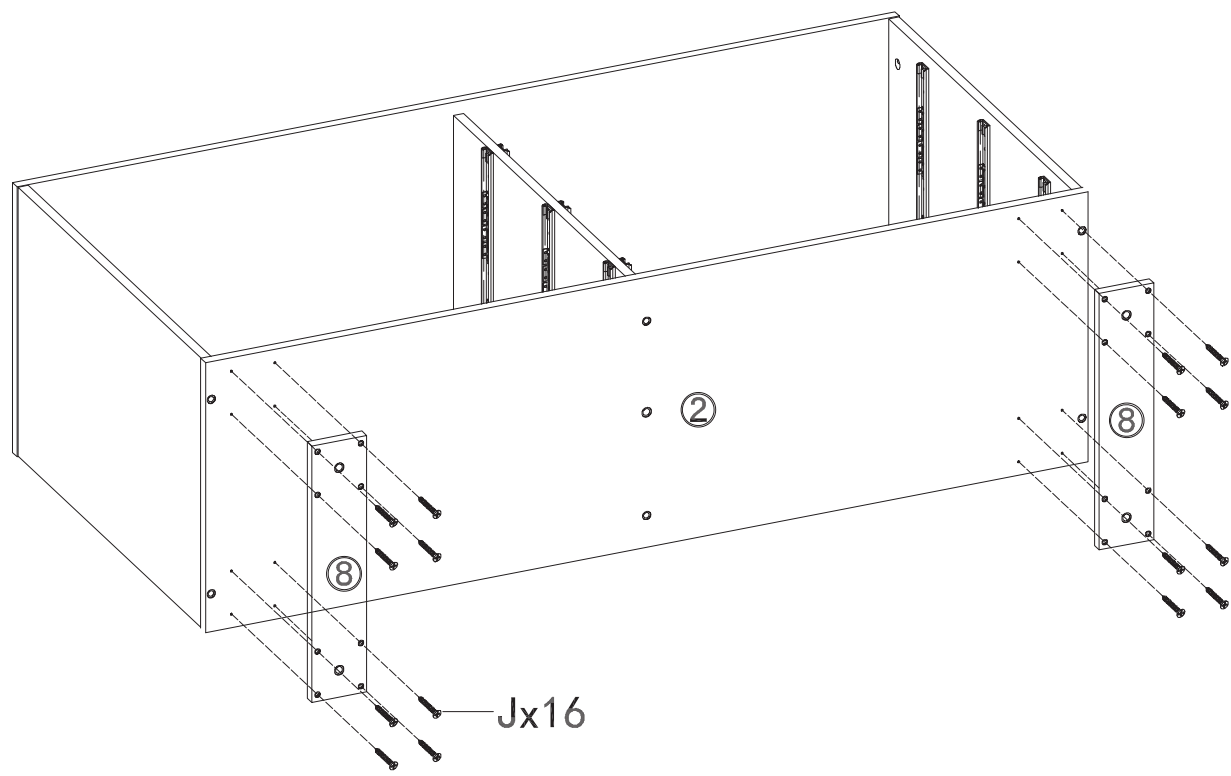





Step9

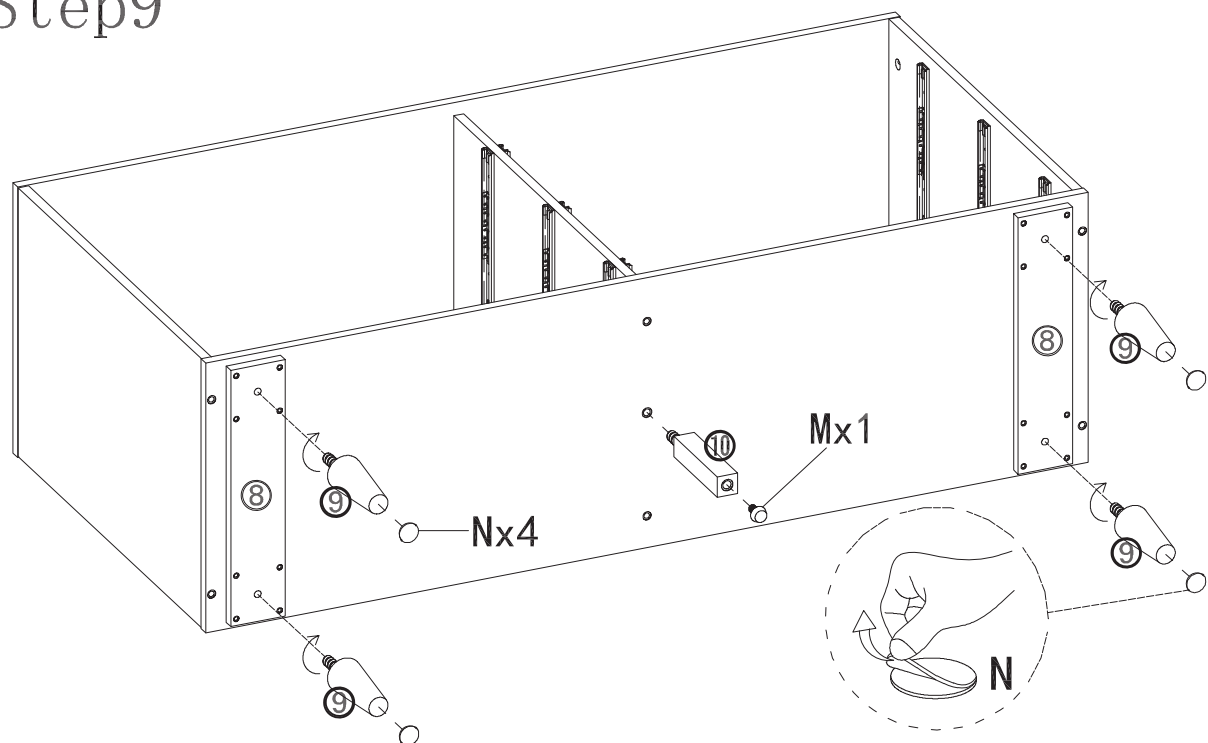


Step10

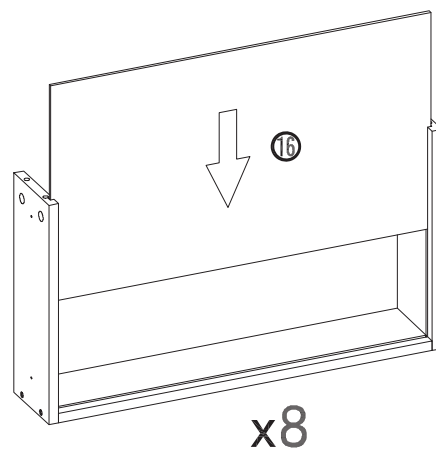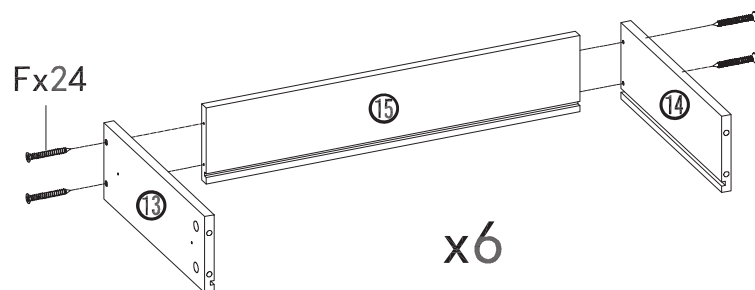


Step11

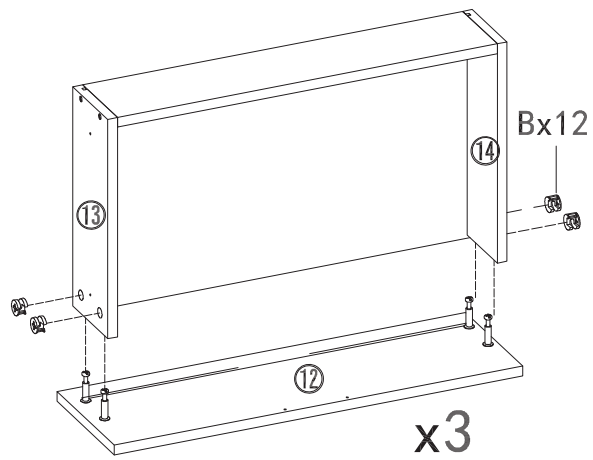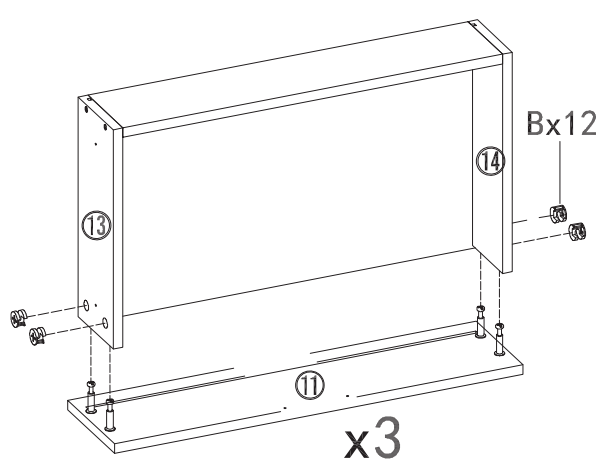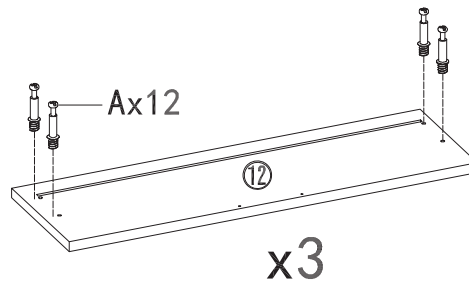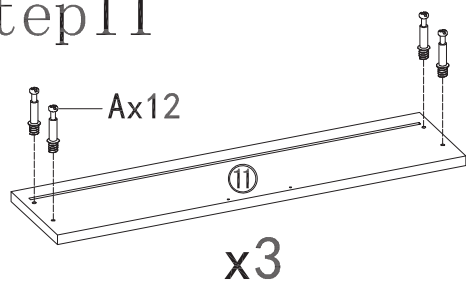


Step12

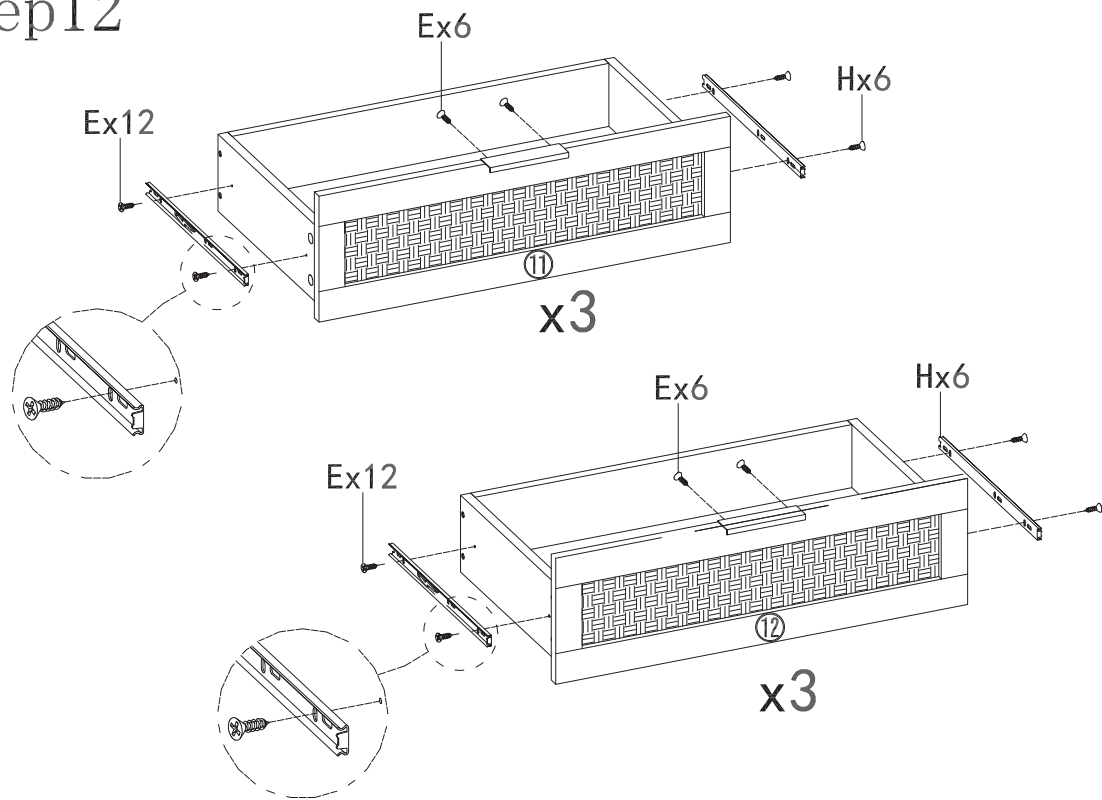

STEP13

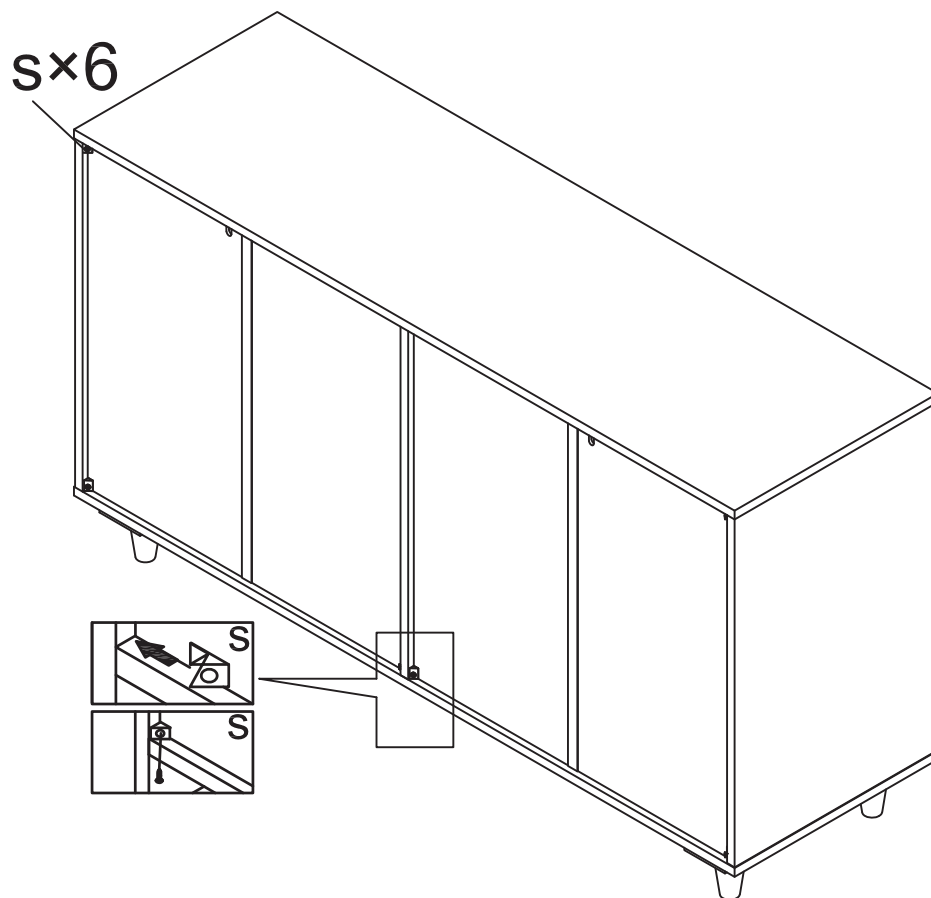

STEP14

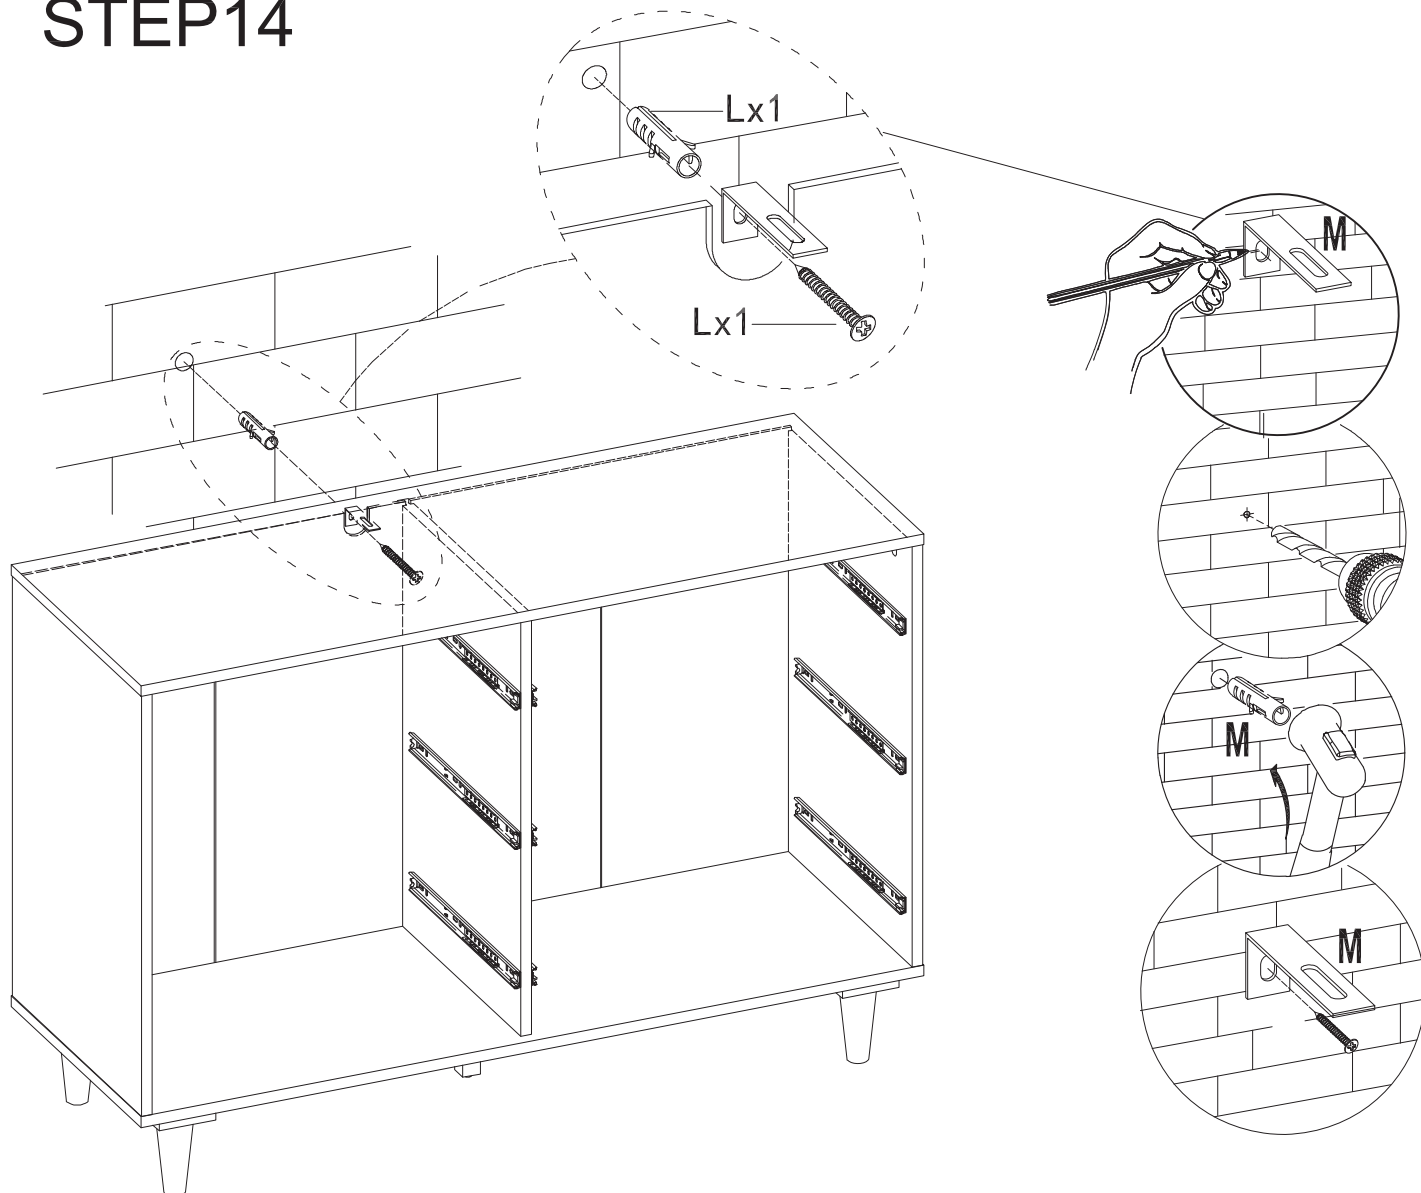

STEP15

