





We Make Your Beautiful Home

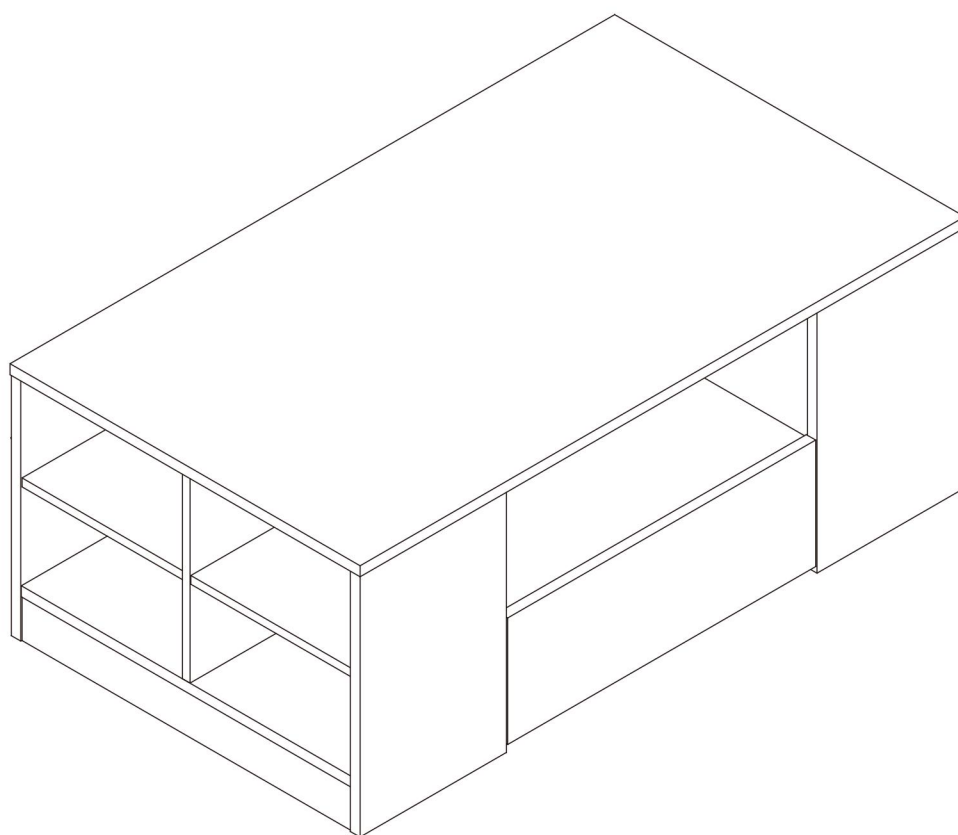

Coffee Table With 2 Drawers

Assembly Instructions - Please keep for future reference

24986/24987/24988/24989/24990

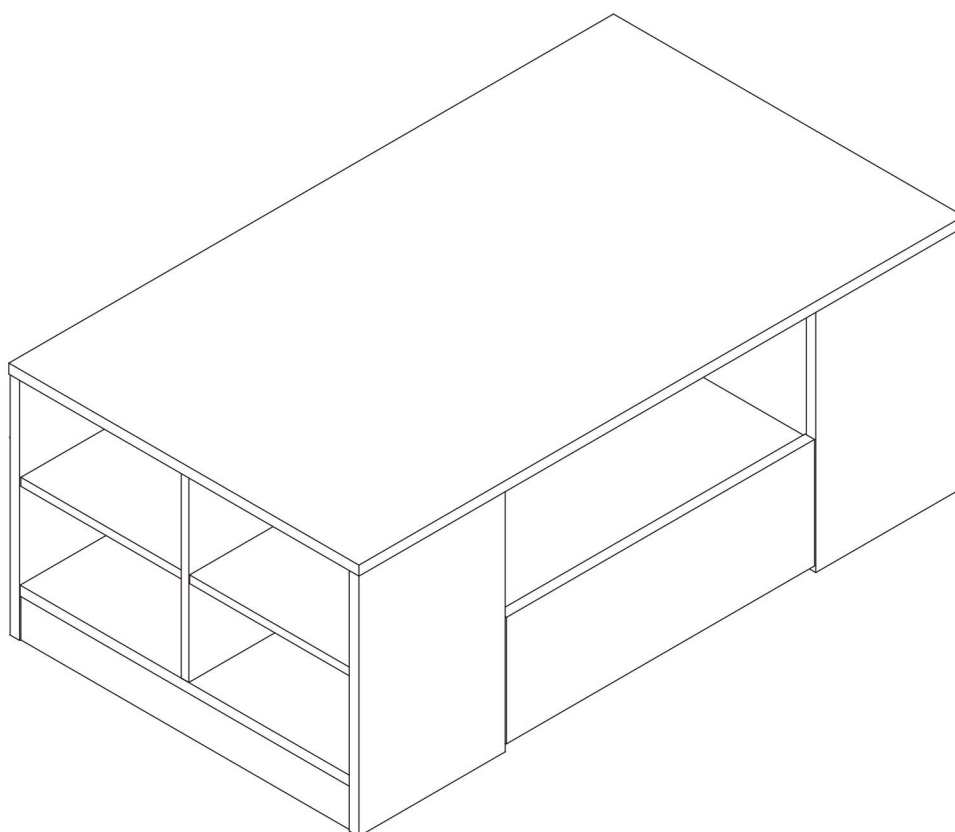

Dimensions Table

Width - 95cm
Depth - 55cm
Height - 37cm

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.
- As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.










Safety during use

- Do not stand on this dressing table. Do not use this as a step ladder.
- At least every 4 months, check all bolts, screws and knobs, to be sure they are tight.
- Use this product only for seating one person at a time.
- If parts are missing, broken or damaged or worn, stop use of this product until repairs are made & using factory authorized parts.
- Do not use this dressing table unless all bolts, screws and knobs are firmly secured.
- Failure to follow these warnings could result in serious injury.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

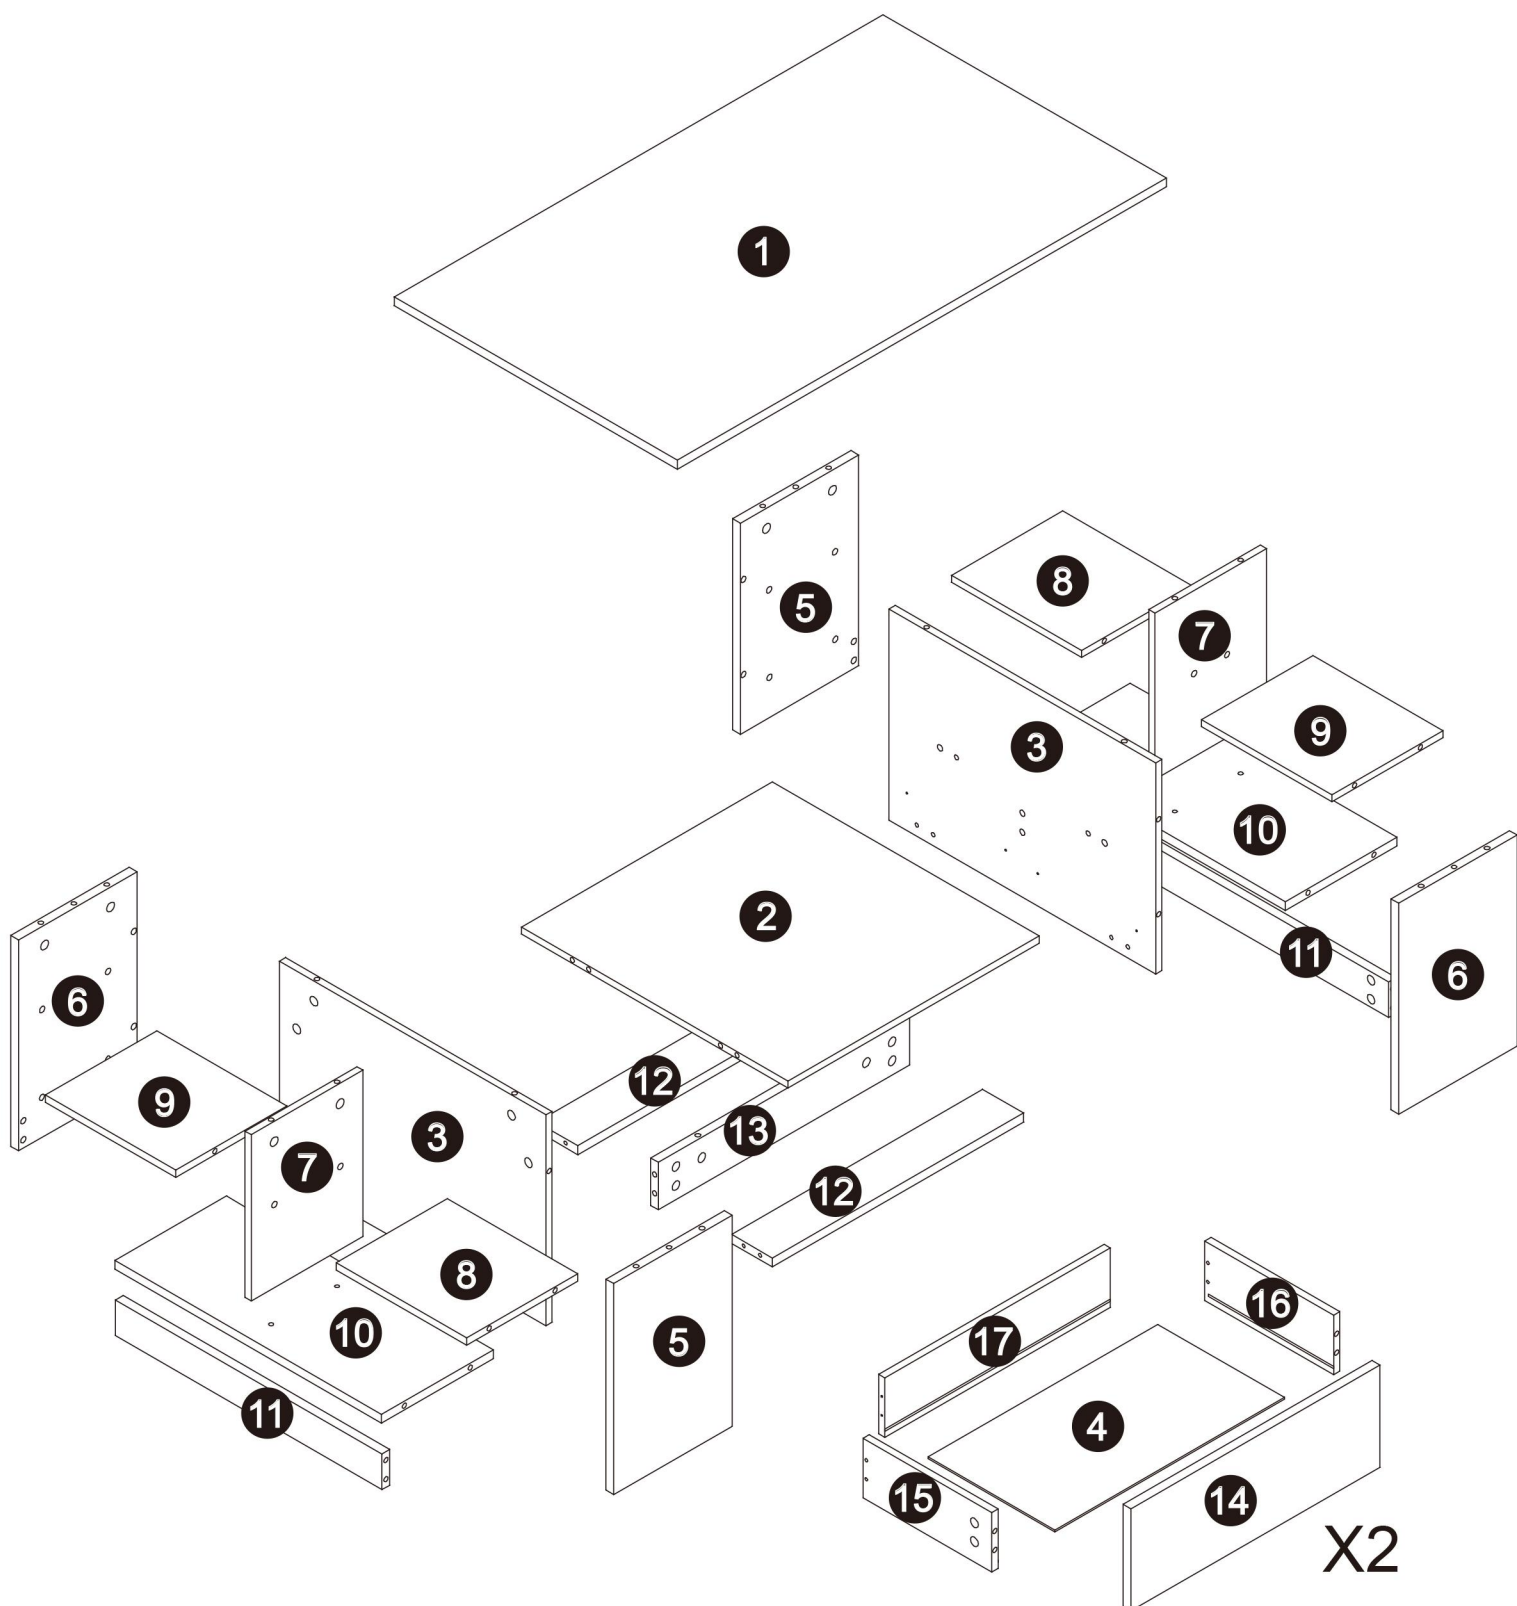


X2

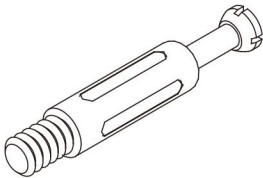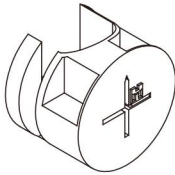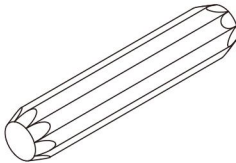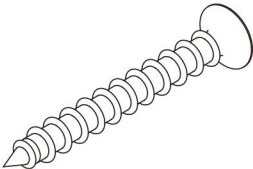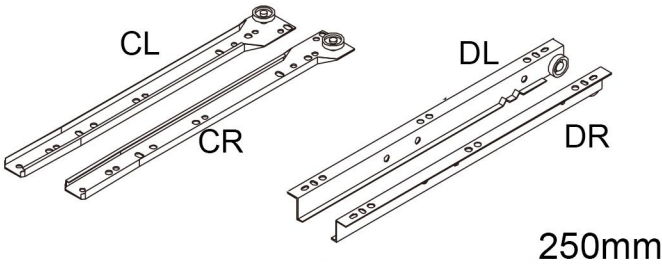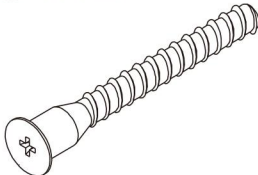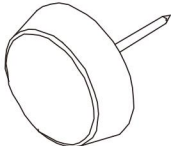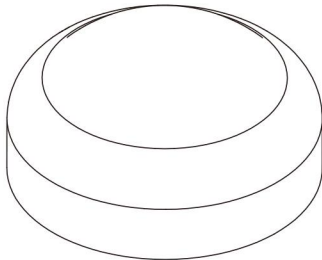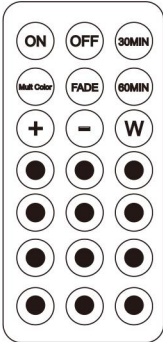A x74 	B x74 	C x8  Ø 8x40mm	D x16  Ø3.5x12mm
E x8  Ø3.5x35mm	F x2 SET  250mm		G x12  Ø7x50mm
H x8 	J x40 	K x1 	


Dear customer,

Thank you for purchasing this product. So that your appliance serves you well, please read all the instructions in this user's manual. If you have any questions, please contact our customer care center, Our contact details are below:


USING CAM LOCK AND QUICKFIT

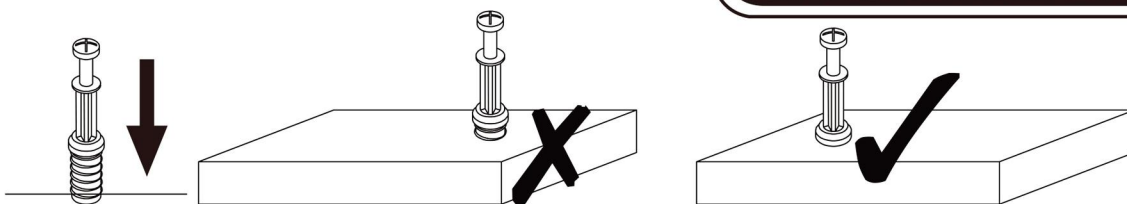


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

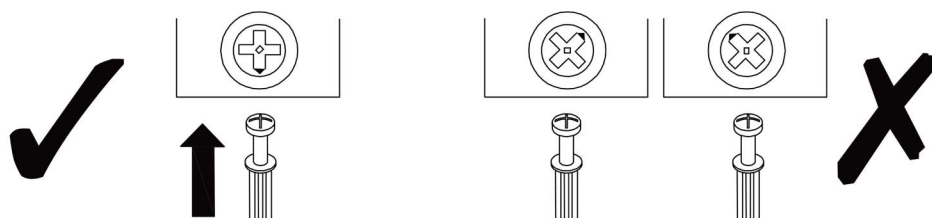

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

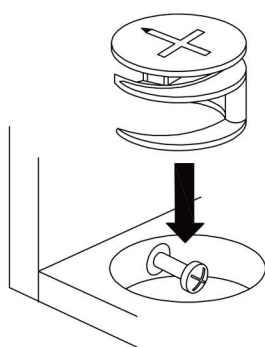

EN_Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

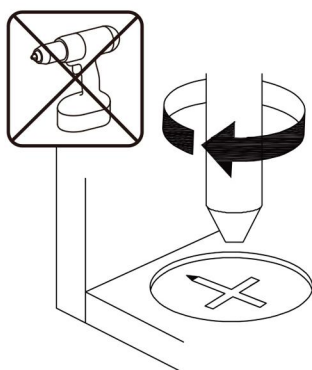

EN_Turn cam lock clockwise to tighten.


01

A x74 	C x8  Ø8x40mm	D x8  Ø3.5x12mm
F x2 CL  CR	K x1 	

1. Screw A into these boards.
2. Insert C into the holes.
3. Stick K on 01.
4. Screw D to install CR and CL on 03.



REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.


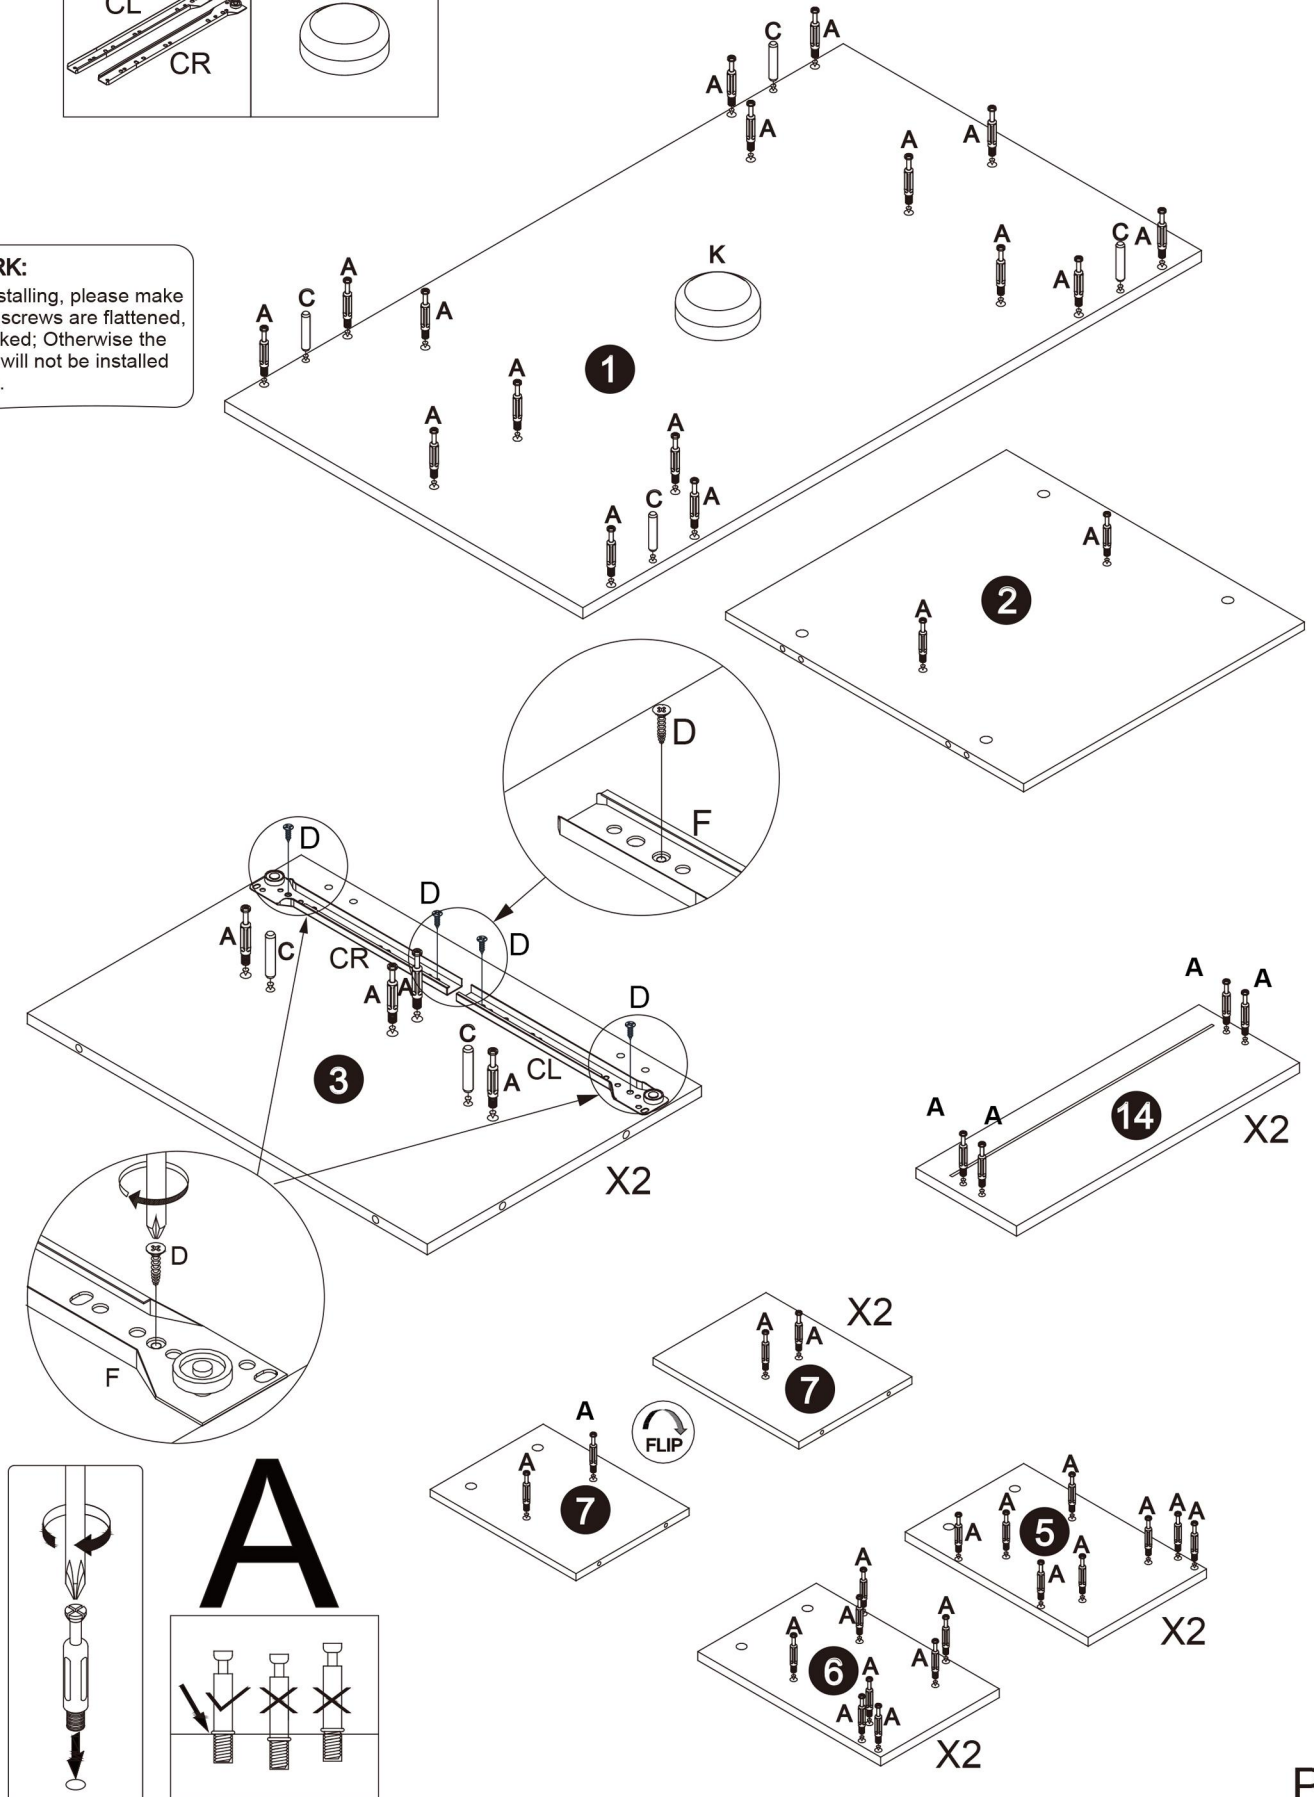


02

Insert CAM lock dowels on 02 into 13 and screw B to lock them.

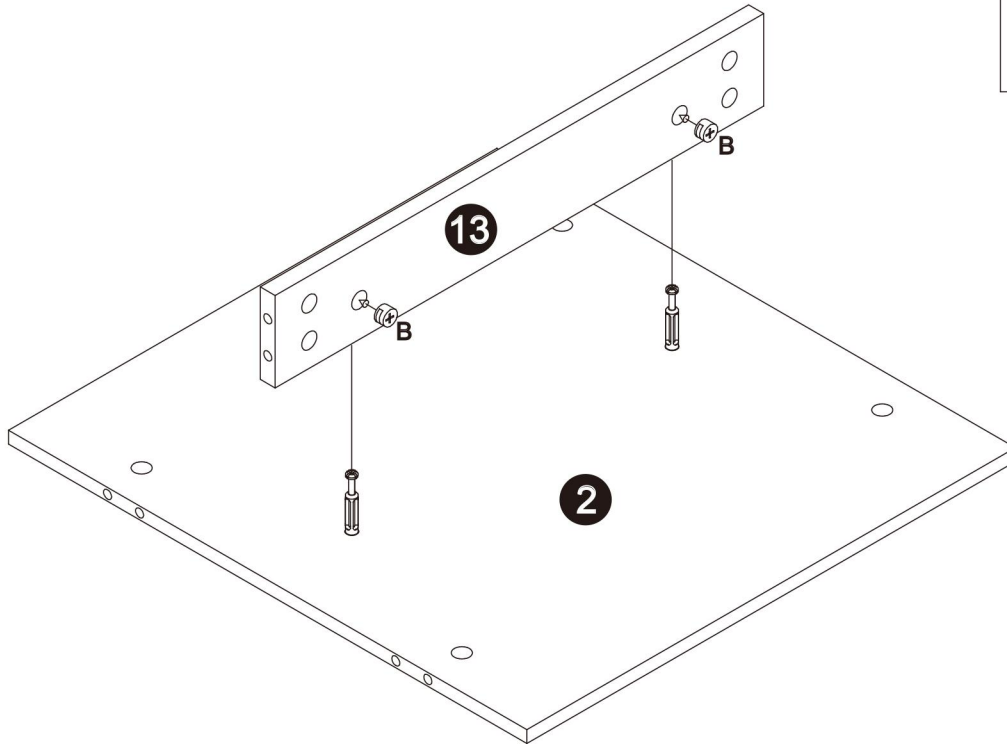
B x2**03**

Insert C and A on 03 into 02 and 13.
Screw B to lock them.

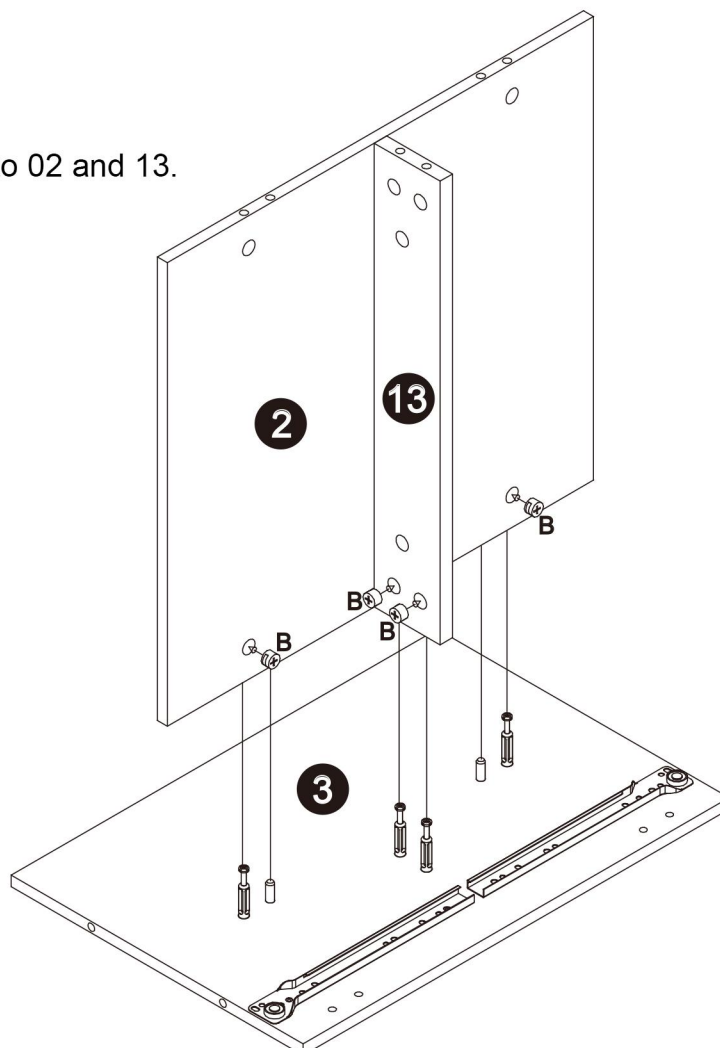
B x4

04

Put the other 03 on the top
and screw B to install it.

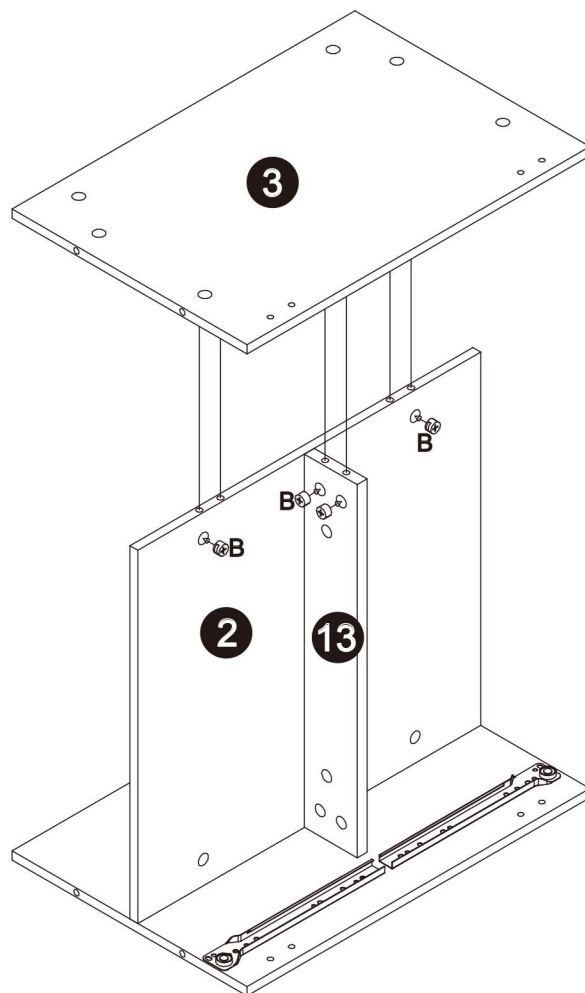


B x4




05

Screw G to install 12.

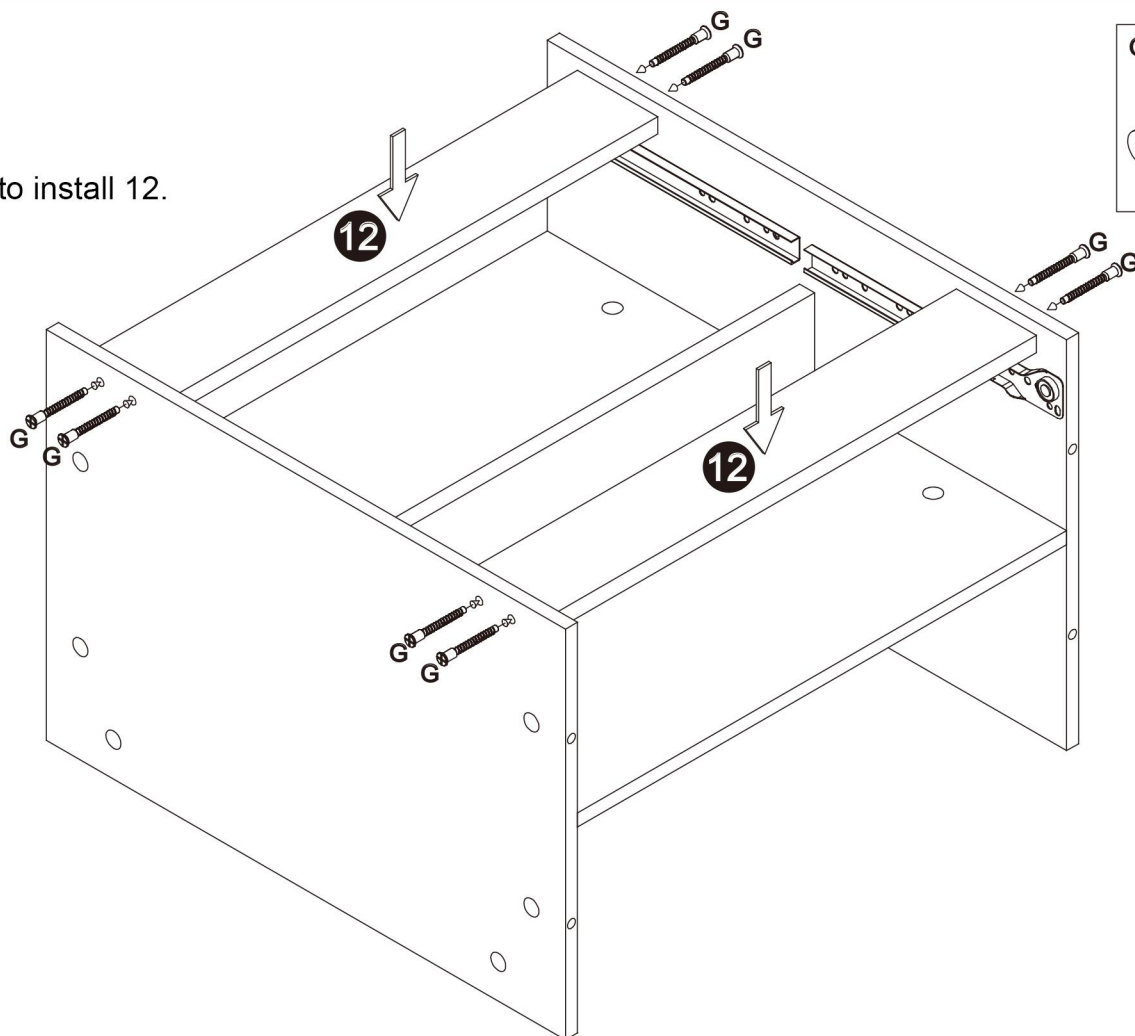



G x8

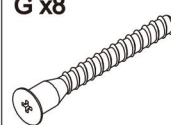



Ø7x50mm

06

Insert one of 06 into one of 03 and screw B to lock them.

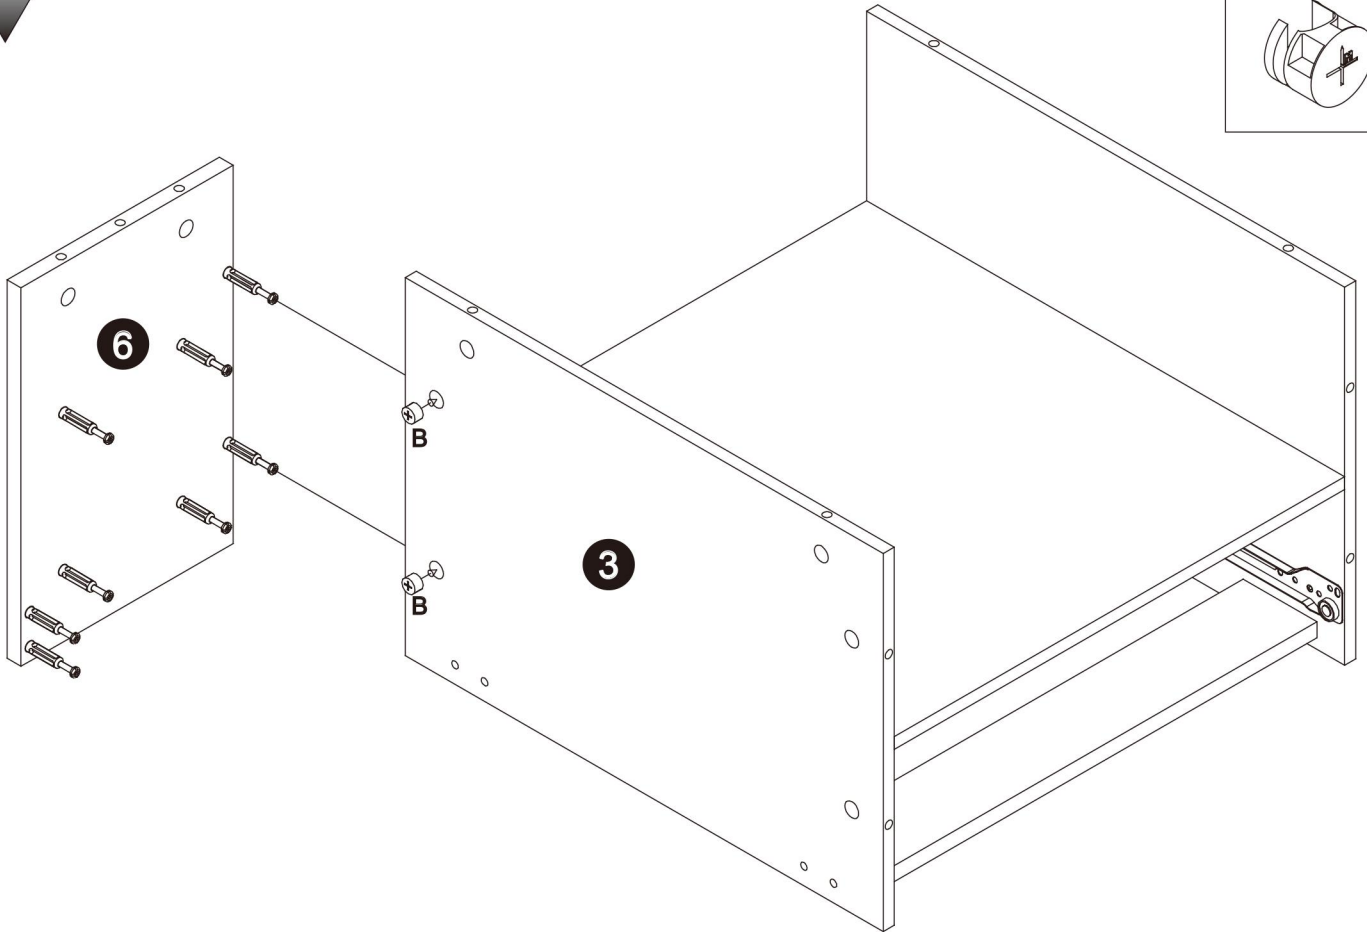
B x2**07**

Insert one of 05 into the other 03 and screw B to lock them.

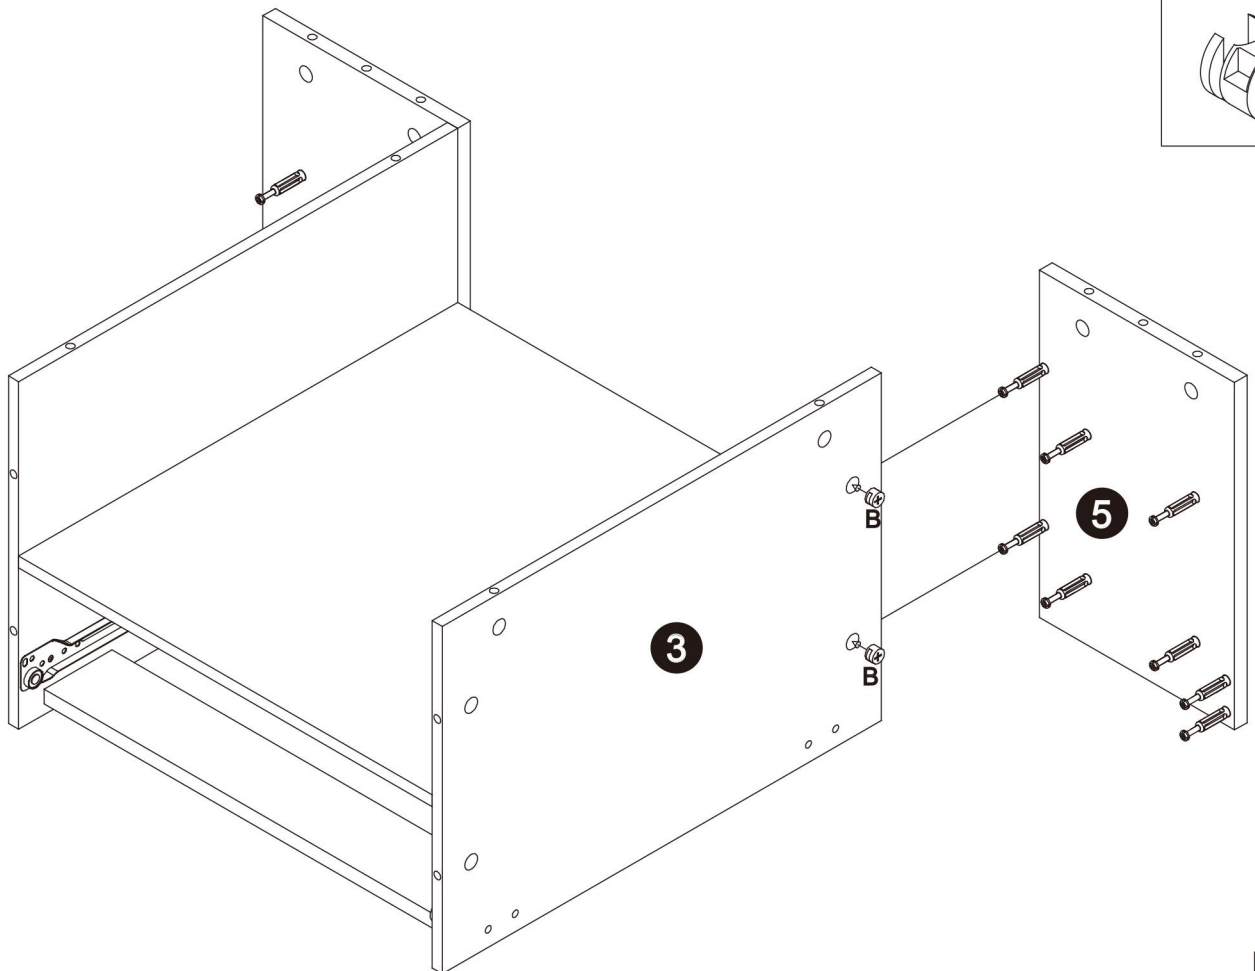
B x2

08

X2

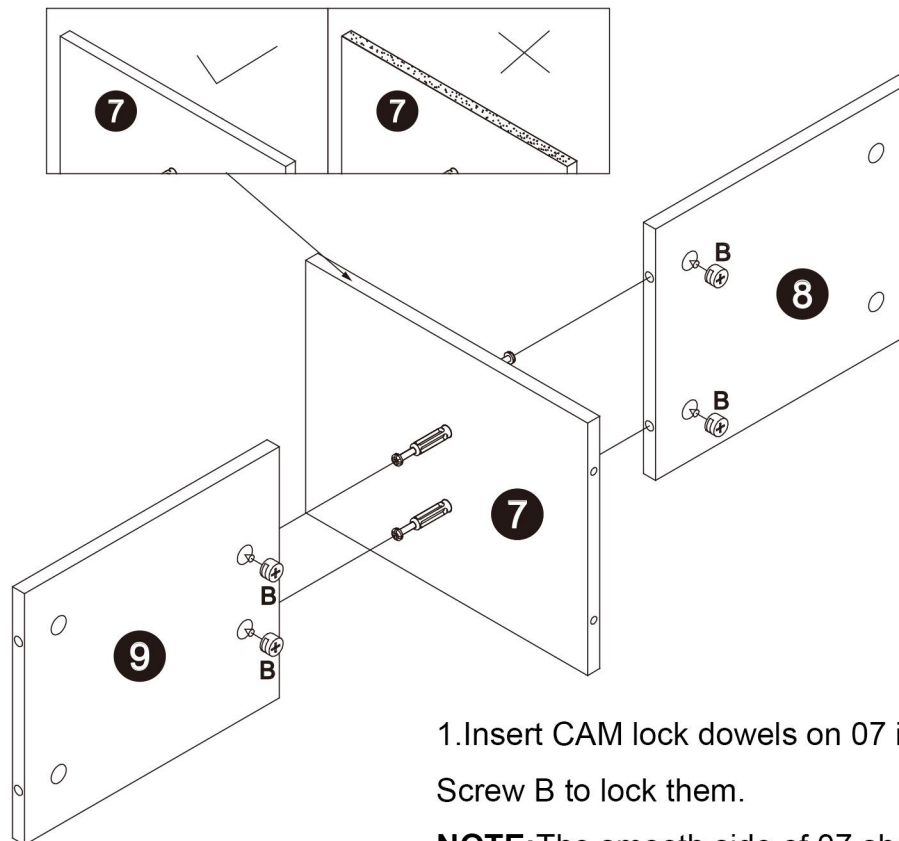

B x8



1.Insert CAM lock dowels on 07 into 08 and 09.


Screw B to lock them.

NOTE:The smooth side of 07 should face up.

2.Repeat the above steps.

09

X2

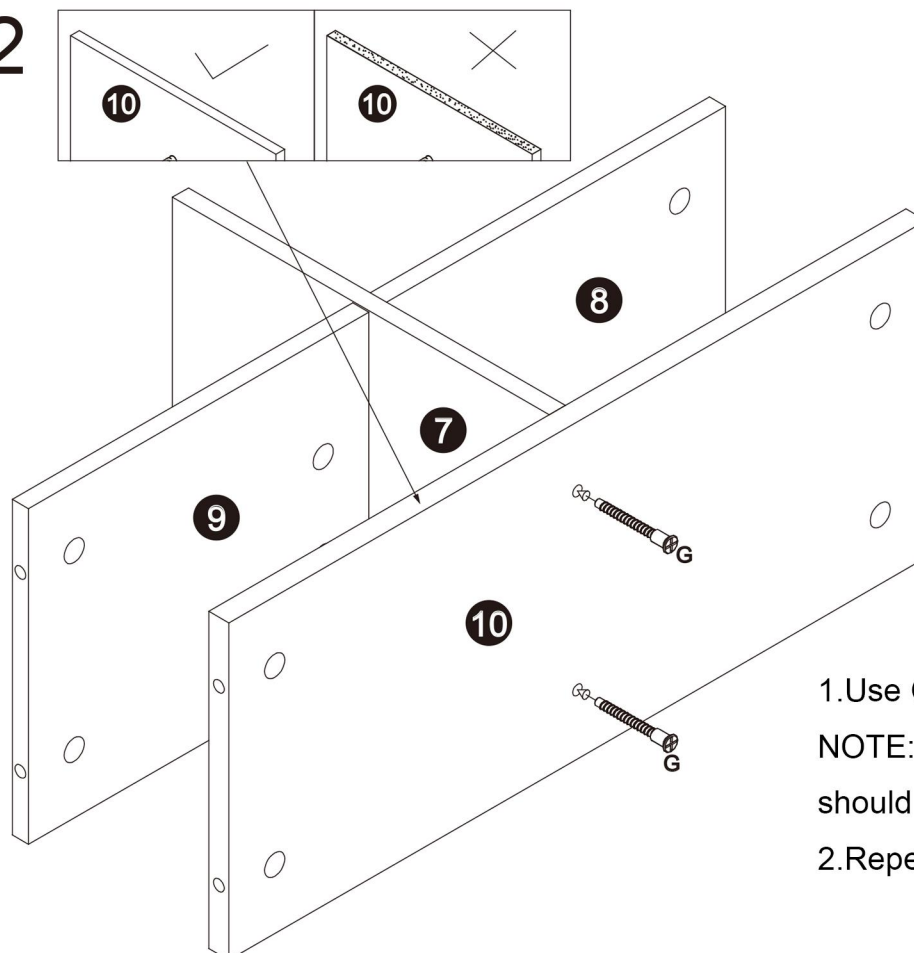

G x4




Ø7x50mm

1.Use G to install 10 .


NOTE: The smooth side of 10 should face up as 07.

2.Repeat the above steps.

10

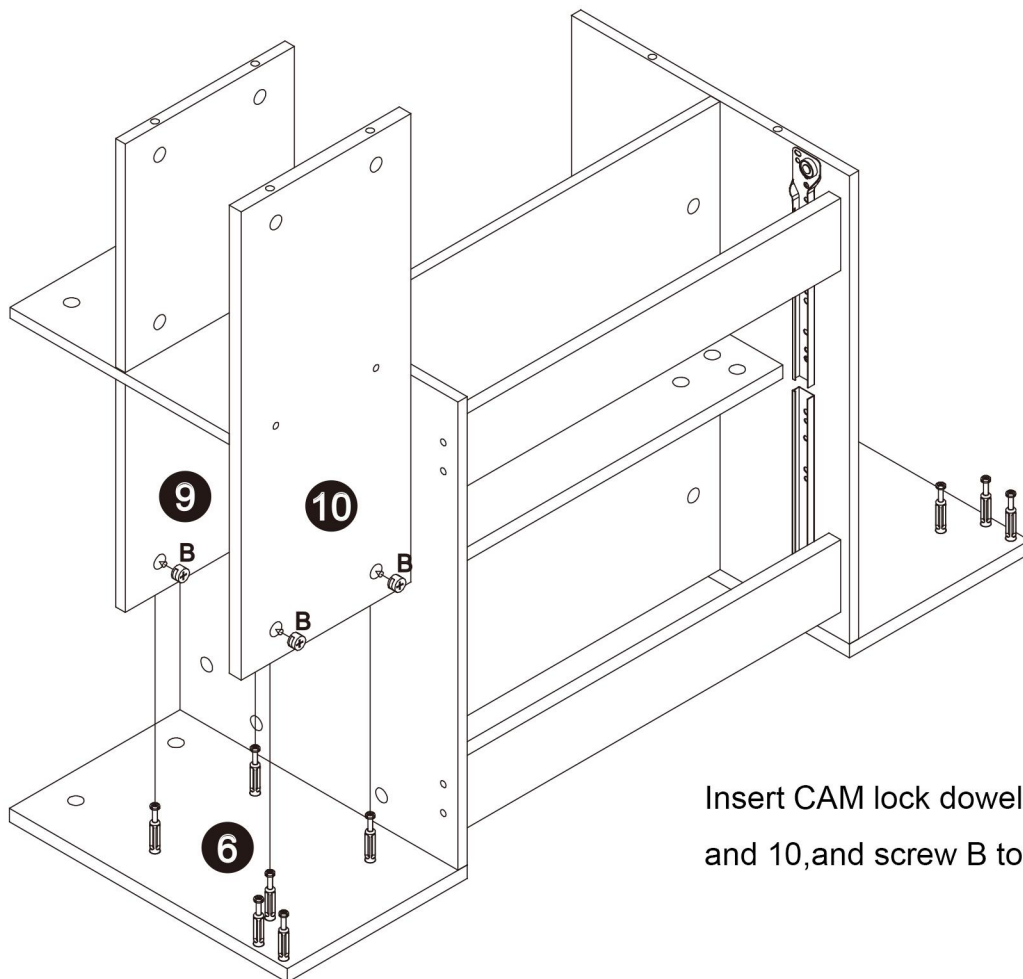


B x4




Insert CAM lock dowels on 06 into 09 and 10, and screw B to lock them.

11

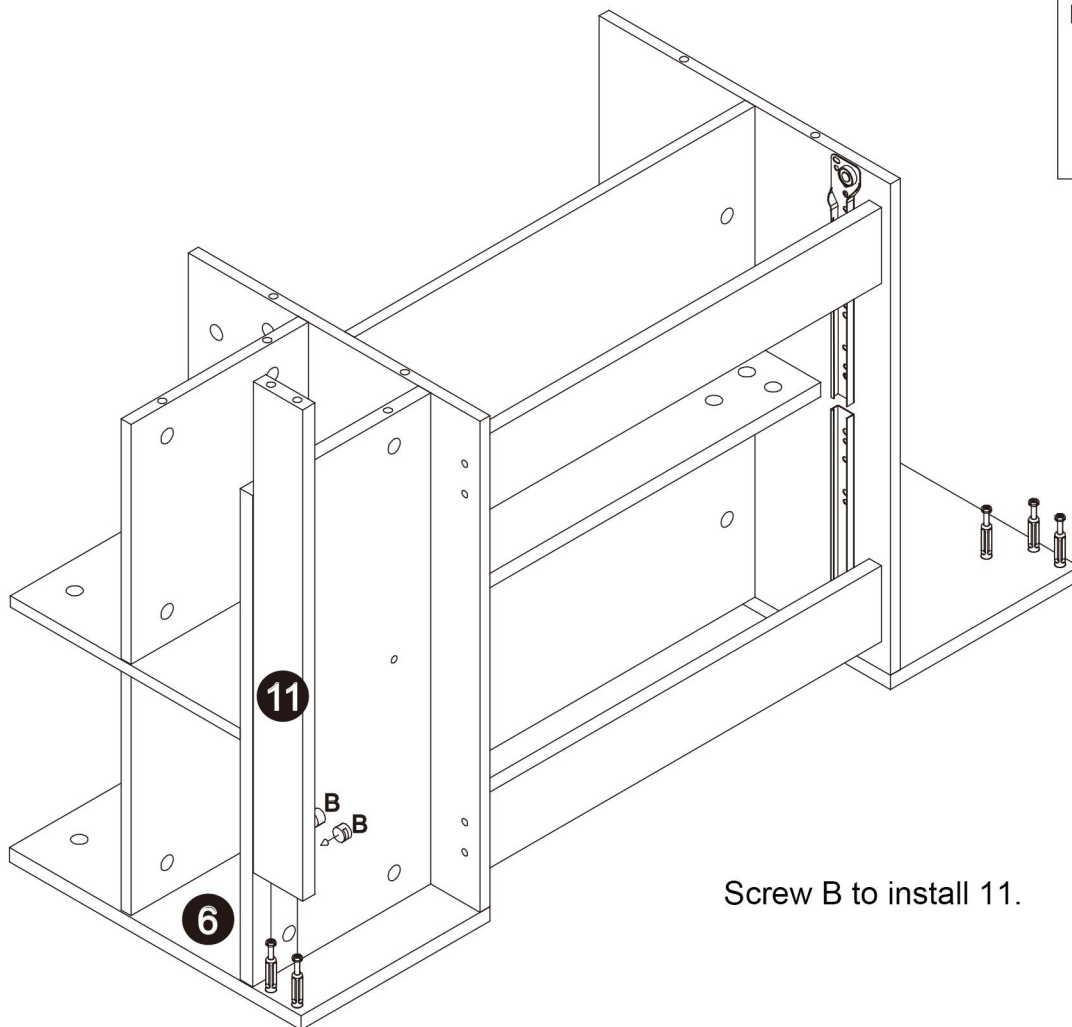



B x2



Screw B to install 11.

12



B x4

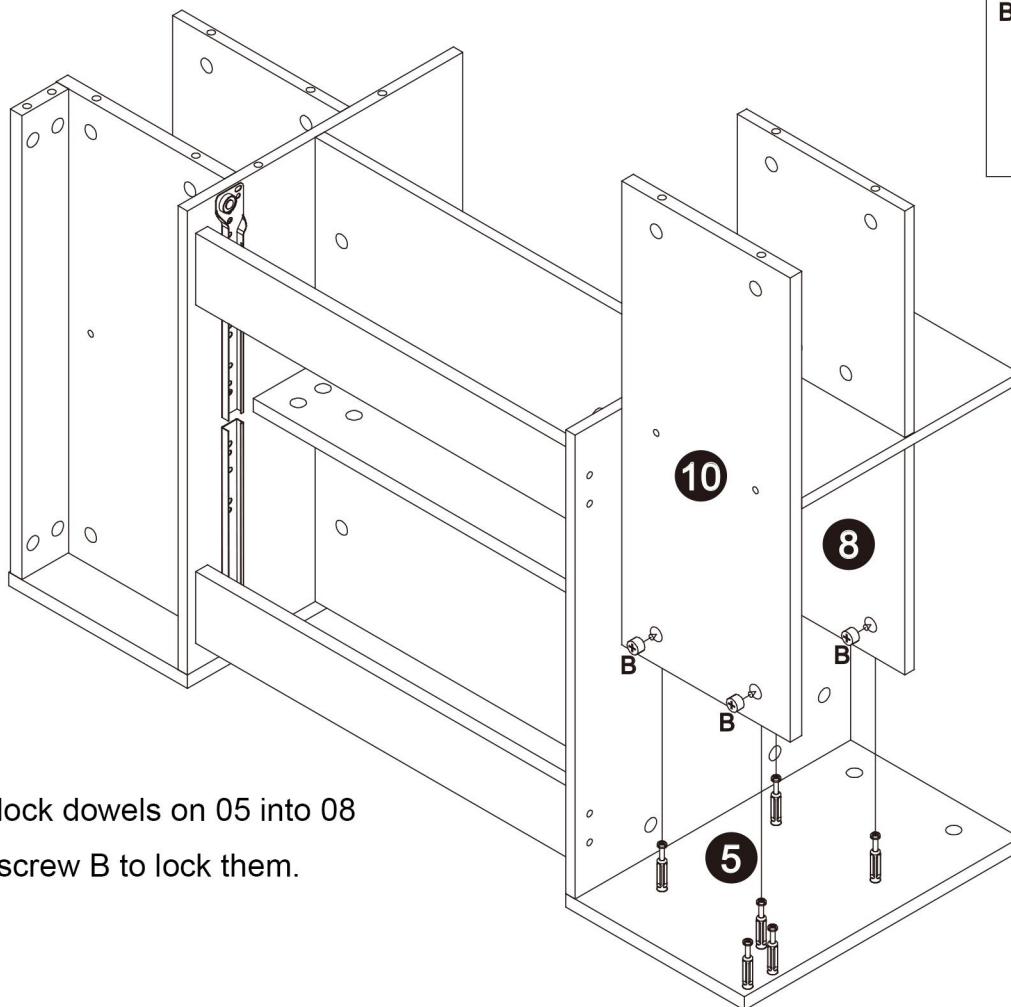

Insert CAM lock dowels on 05 into 08 and 10, and screw B to lock them.

13


B x2

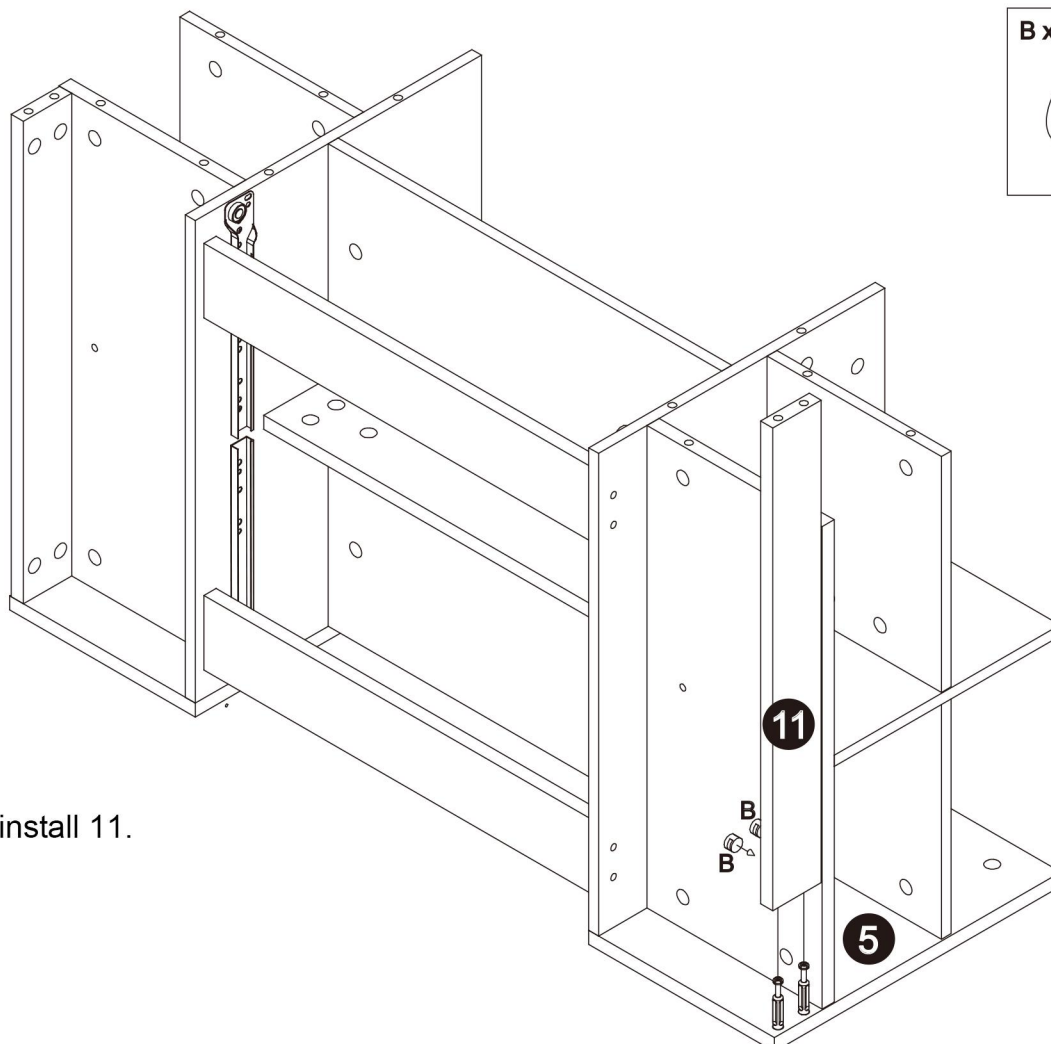

Screw B to install 11.


14

Insert 05 on the left and
06 on the right.
And screw B to lock them.

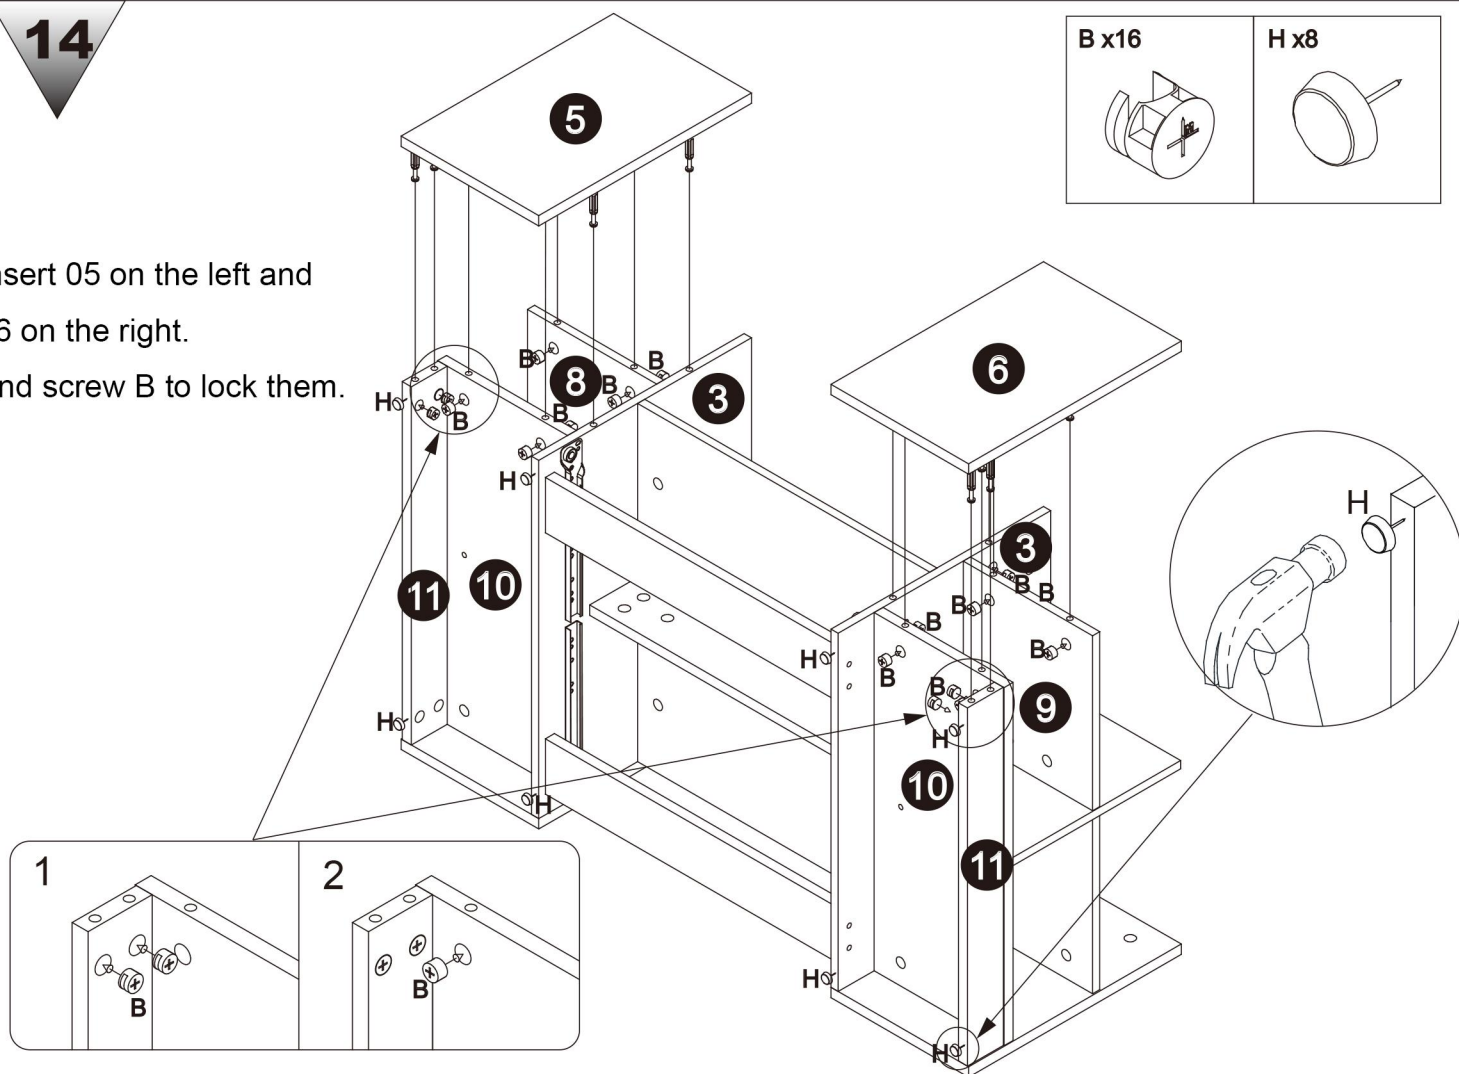



15

Put 01 on the top and insert
the CAM lock dowels.
Screw B to lock them.

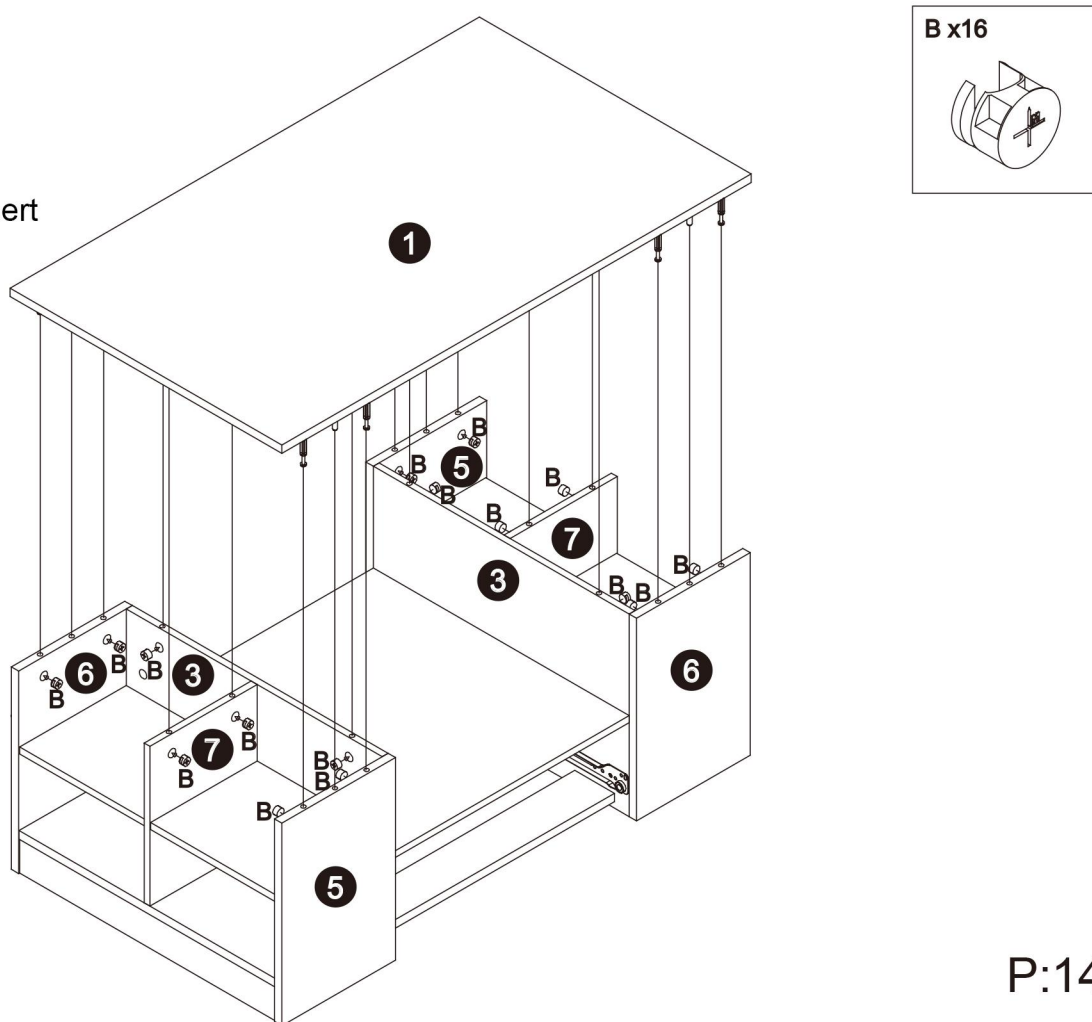

16**X2**


1. Insert CAM lock dowels on 14 into 15 and 16. Screw B to lock them.

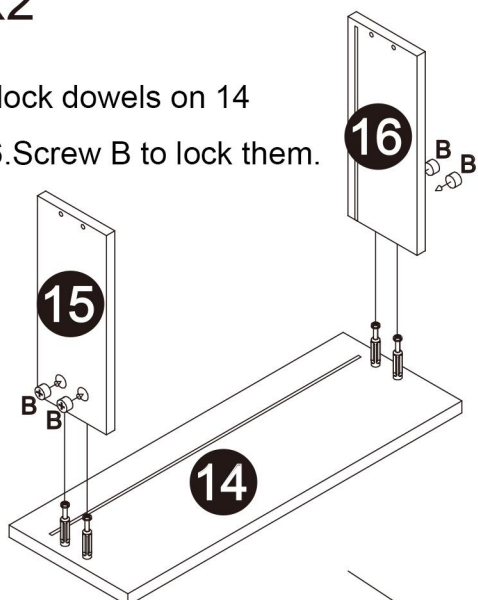**B x8****E x8**


Ø3.5x35mm

D x8


Ø3.5x12mm

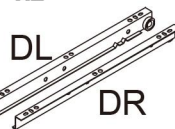F x2**DL****DR**


2 Insert 4 into the drawer.

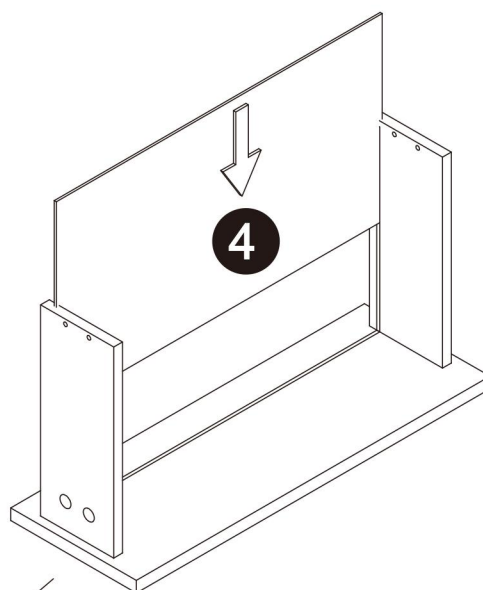

3. Scrw E to install 17.

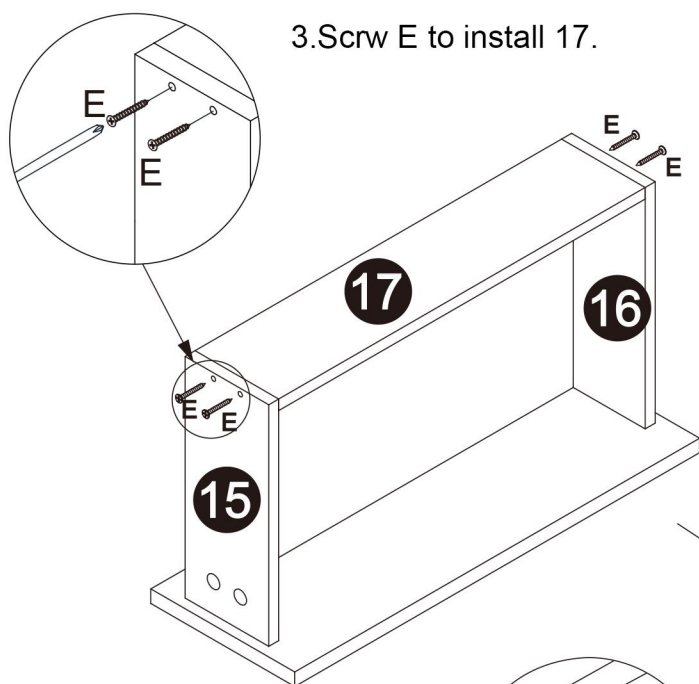




4. Screw D to install DR and DL.

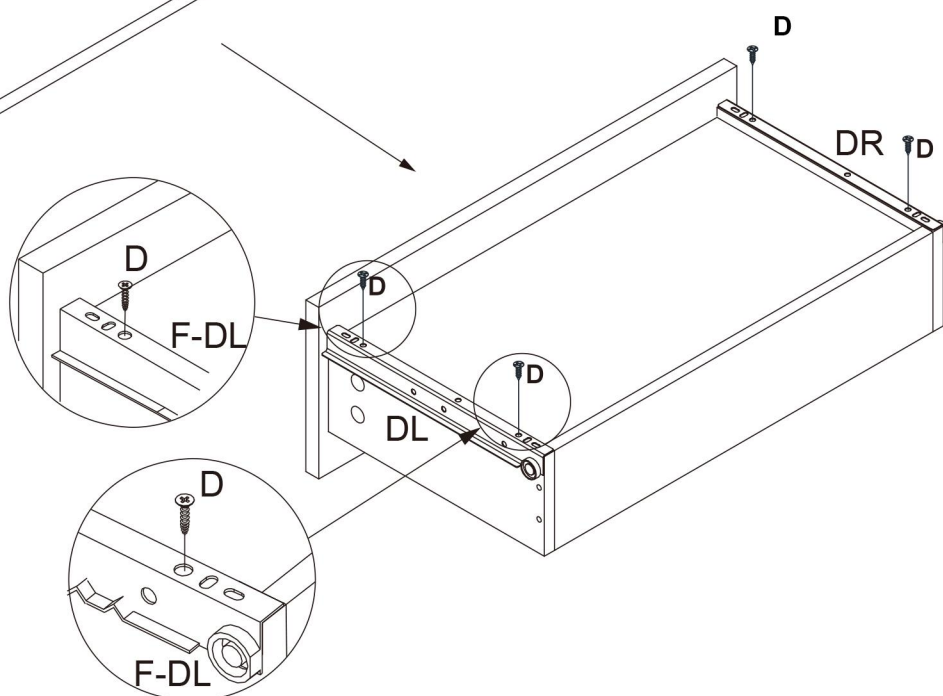

5. Repeat the above steps.

Put drawers into the coffee table.

J x40

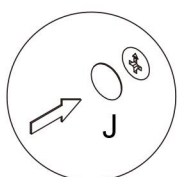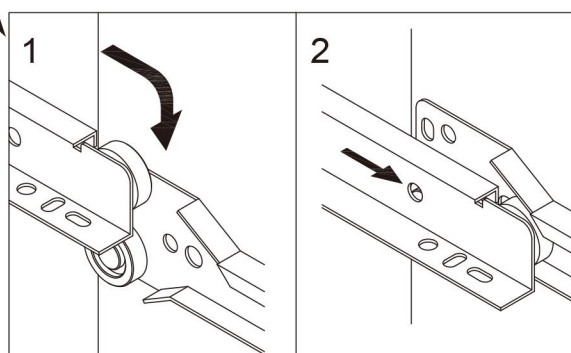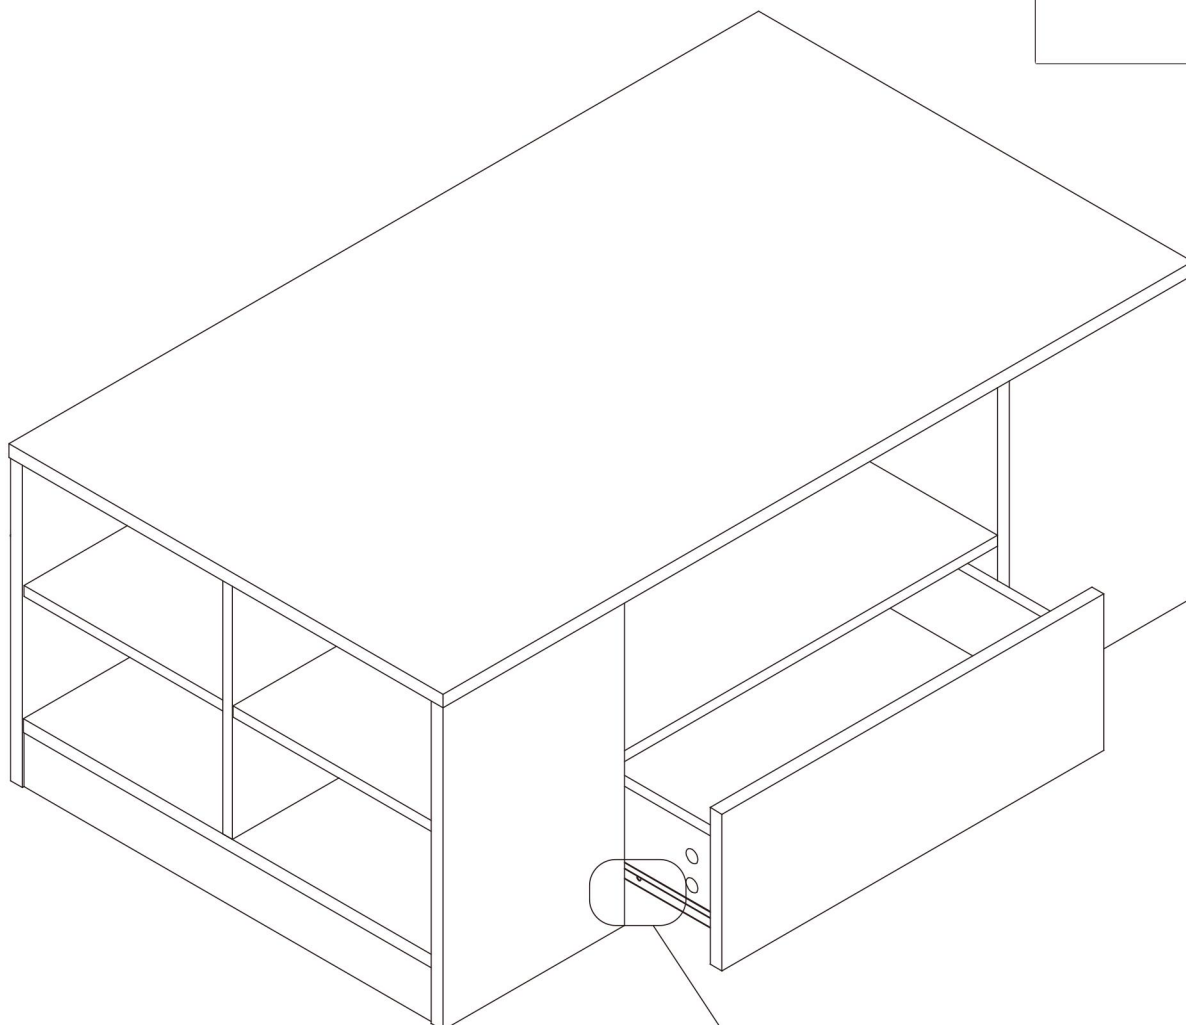

In order to make the product more beautiful, please paste hardware J on the exposed holes.